

furnishing better lives together ®

WWW.JOFRAN.COM

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION 2586-3WDBFF

Parts List			
ITEM	Code	Description	Qty
A	NOT A REPLACEMENT PART	Wedge unit	1 PC
B	2586WDP42	Legs	4 PCS
C	2586WDP01W	Plastic Washer	4 PCS
D	2586WDP01L	Floor Leveler	4 PCS

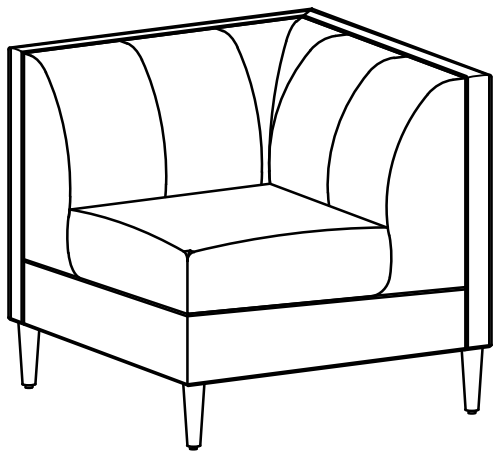


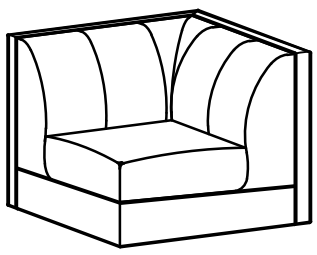

A. Wedge unit




B. Legs

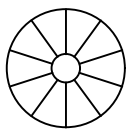

C. Plastic Washer

Assembly Steps:

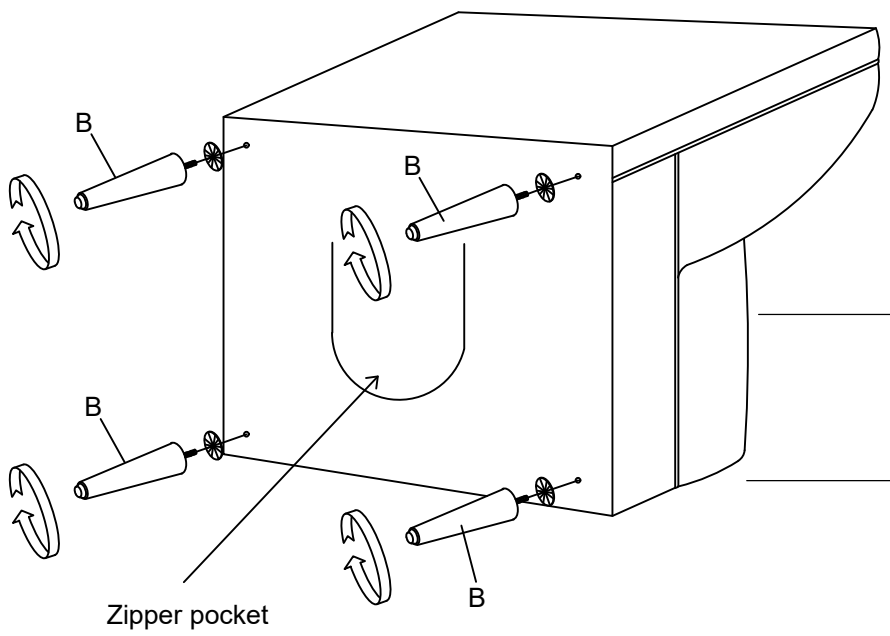

Step 1. Turn chairbody over on a clean flat surface.
Step 2. Remove legs from zippered pocket underneath chair.
Step 3. Place plastic washer (Item C) on the bolt on each leg.
Step 4. Screw in Legs (item B) until they are hand tight.
Step 6. Turn chair to its upright position.
***Please note: To level chair you may need to add or remove washers from the appropriate legs.

FABRIC CONTENT

***Fabric: 84% polyester +16%PU

***Cleaning Code: W

Avoid direct sunlight, water, oil, acid, sharp object etc. Use vacuum cleaner to clean. Clean only with water-based shampoo or foam upholstery cleaner. Do not over wet. Do not use solvents to spot clean. Pile fabrics may require brushing to restore appearance. Cushion covers should not be removed and laundered.

MADE IN VIETNAM