ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION: 2 DRAWER BEDSIDE

1

Reverse the bedside & place the leg as shown & align the leg to match the apron.

2

Insert the Bolt to fix the leg with the Bedside top and tighten the nut with the washer as shown in fig1

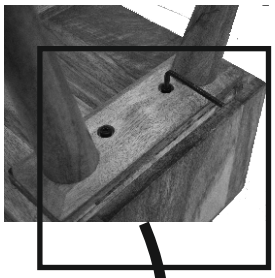

3

Fix the other leg in the similar way

4
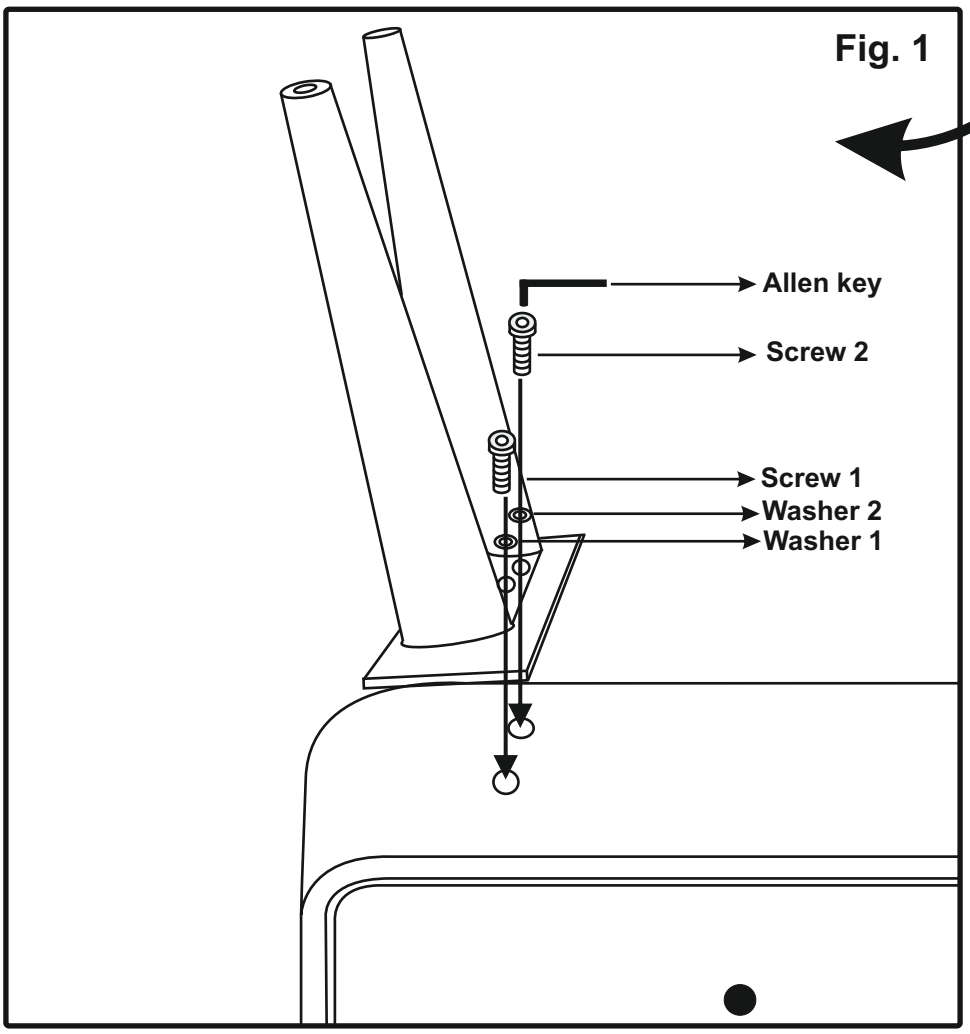
Reverse the bedside straight. Now your bedside is ready for use