Easy to Install

Step 1



Measure length and position bracket.

Step 2



Attach the bracket to the wall (Please install 2 screws here）.

Step 3



Connection rod according to the window length.

Step 4



Hanging the curtain on the rod.

Step 5



Put the rod on the brackets, Pull out the 7/8-inch tube and screw the ends.

Step 6

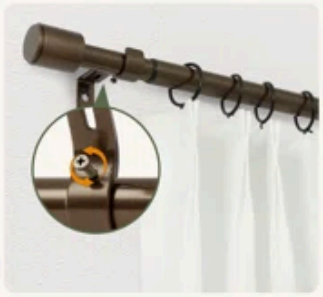

Tighten the screws to hold the rod