Polar Aurora

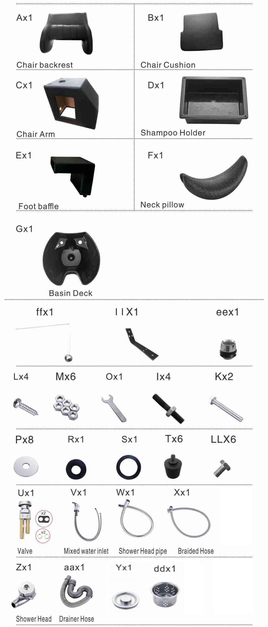

①

1. The back cushion (A) and seat cushion (B) are connected by the backrest iron (II), tighten the screw (LL), and then install the screw (L) first

②

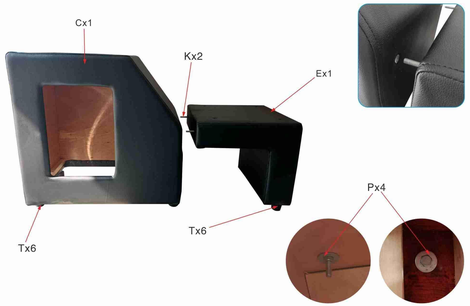

2. Connect the main body (C) and small body (E) with screws (K) and tighten the screws. Note that the spacers (P) are placed in the screws. Finally, the support feet (T) are screwed in.

③

3. Connect ① the assembled seat and ② assembled base with screws (I)

④

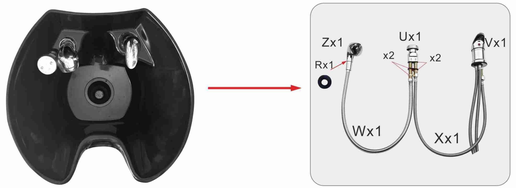

4-1. Screw down the two nuts of valve(these nuts are self-contained), then tight theValve(U)and Basin Deck(ee) with these two self-contained nuts

4-2. Inset Rubber washer(R)then connect the Shower Head Pipe(W)withShower Head(Z), put the Shower Head with pipe in to Basin Deck, And at the last,connect the end side of Shower Head pipeW)with Valve(U)as picture shows

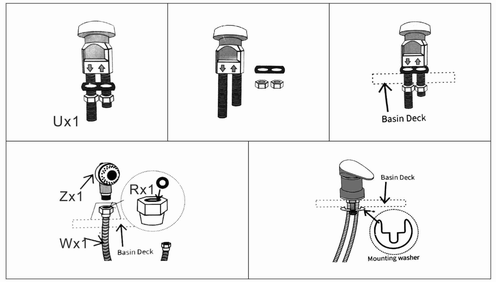

⑤

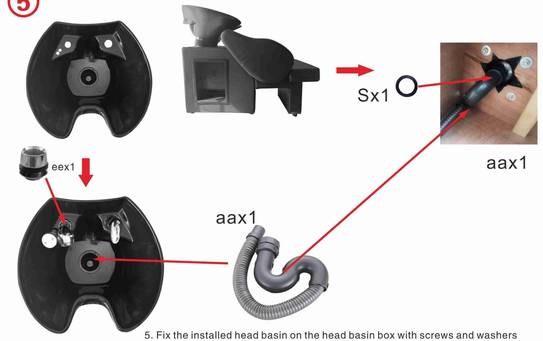

5. Fix the installed head basin on the head basin box with screws and washers as shown in the figure.Then connect the drain pipe (aa) to the drain.

⑥

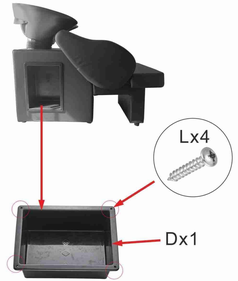

6. Install the ladder box on the main product that has been installed, as shown in the figure. Tighten with screws.

⑦

7. Insert the head pad (F) into the slot of the shampoo basin as shown in the figure,