MOUNTING INSTRUCTIONS

Contents:

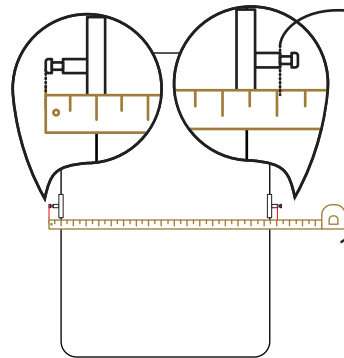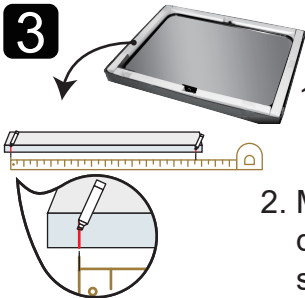| ①	②	③	④	⑤	⑥	⑦
MIRROR	BRACKET	SCREW	ANCHOR	SCREW	SCREW BITS	Hexagon Key Wrench
×1	×2	×2	×2	×4 (2 spare parts)	×1	×1

1
1. Open The Cover.
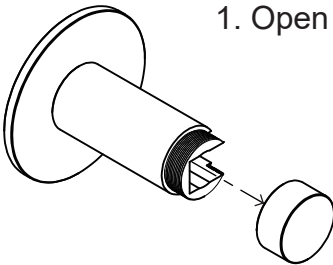
2
Pay attention to the key position.

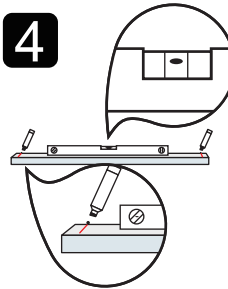1. Measure from one side end to the other convave part side(as photo)

3
1. Take out a section of Styrofoam from the box.

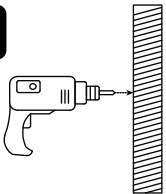2. Mark the corresponding distance（from the 2nd step） on Styrofoam.

4
1. Put the styrofoam on the wall, use a spirit level tool to ensure the level.

2. Mark the point on the wall according to the marked styrofoam (point mark from 3rd step)
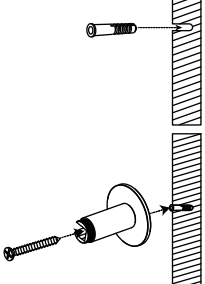
5
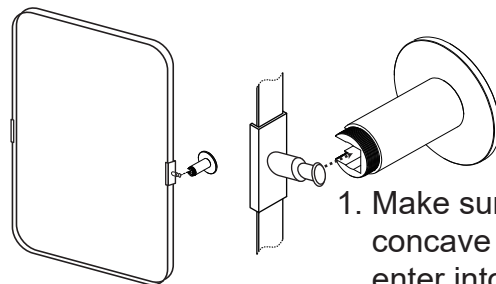1. Drill holes at points.

2. Put the anchor into the wall

3. Pass the screw through the hole in the base and install it into the anchor.

6
1. Make sure the brackets' concave part totally enter into the hole of the bracket.

2. Tighten the cover.

3. Tighten the small screw at the bottom.