
Assembly instructions


Corner Bookcase

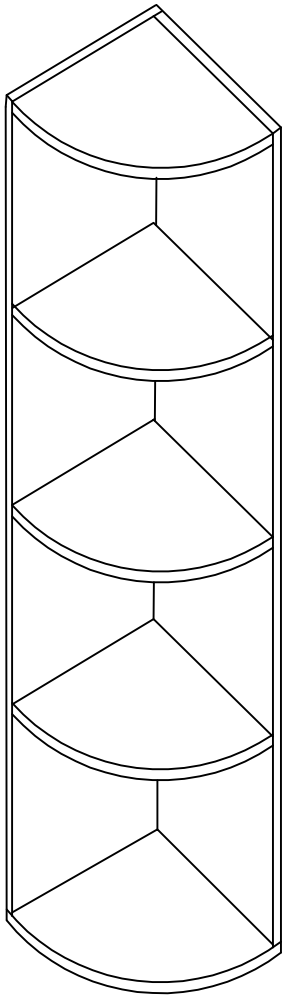


NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not to over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


Part List

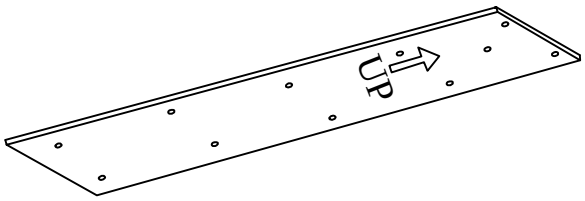

A1 Left side panel 1PC

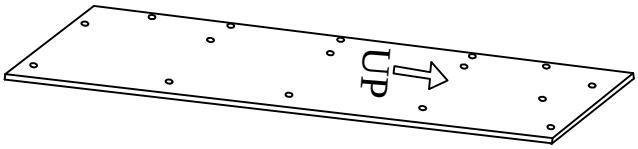

A2 Right side panel 1PC

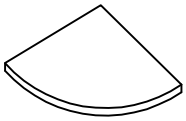


A3 Top and Bottom panel 2PCS




A4 Middle Shelf 3PCS


Hardware List



B1 Camlocks 12SETS



B2 Wood Dowel 13PCS



B3 Screw and Anchor 2SETS



Glue

Note:


- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

To use Dowels:


- Add glue (about ¼ full) in the hole(s) of each board to be joined.
- Insert the Dowel(s) and join boards.
- Wipe excess glue with a damp paper towel.

To use Cam Locks:


1. Insert Cam Pin until snug

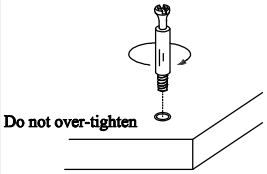


2. Set boards together



3. Insert Cam Lock

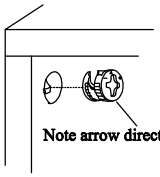


4. Turn Cam Lock clockwise (half a turn)

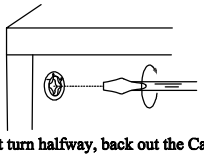


if it won't turn halfway, back out the Cam Pin ¼ turn and try Cam Lock again.

Step 1: Attach top and bottom panels (A3) , middle shelves (A4) to left side panel (A1) using camlock (B1) and wood dowel (B2).

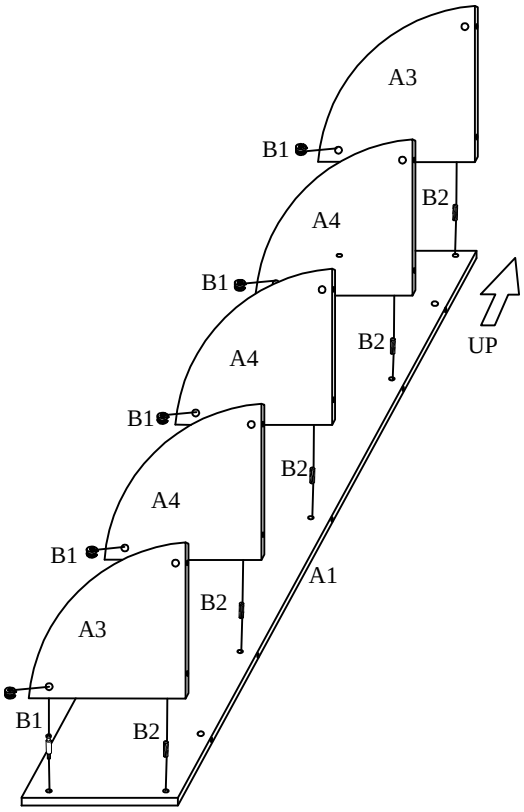

B1 5SETS
B2 5PCS

Step 2: Aseemble right side panel (A2) to left side panel (A1), top and bottom panels (A3) , middle shelves (A4) using camlock (B1) and wood dowel (B2).

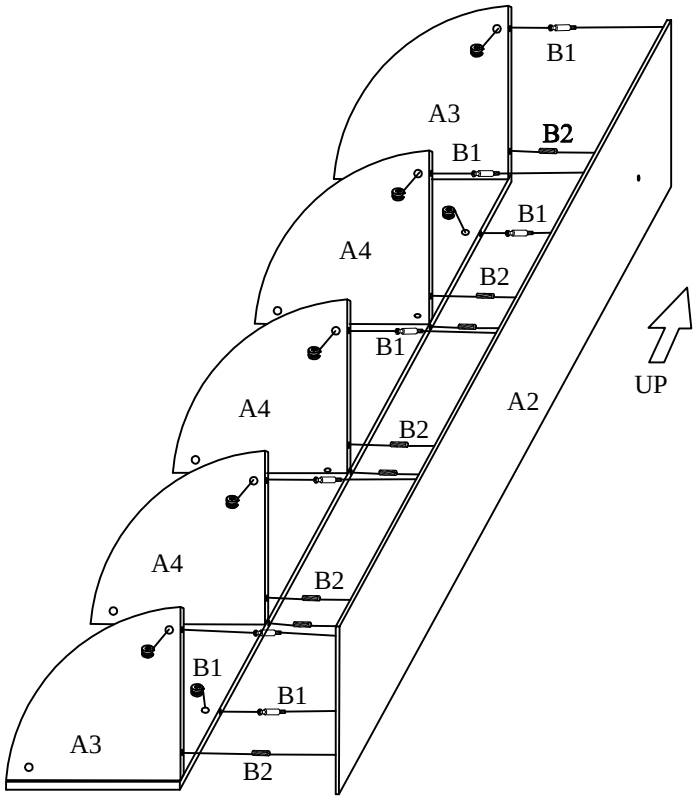

B1 7SETS
B2 8PCS

Step 3: For your safety , please attach the corner bookcase to the wall with screws and anchors (B3).

Note: Maximum load capacity of each middle shelf is: 15LBS

B3 2SETS

