# VS24,VS27

ASSEMBLY INSTUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Attach the wood block on the top corner,and put on the adjustable shelf

STEP 6: Fix door&drawer head onto the frame and adjust the cover-space

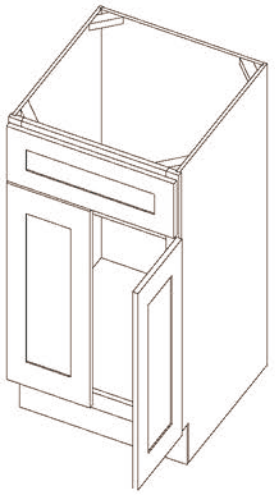

| PARTS LIST | | |
|---|---|---|
| NO. | Description | QTY |
| A | BACK PANEL | 1 |
| B | SIDE PANEL | 2 |
| C | TOP&BOTTOM PANEL | 1 |
| D | TOE KICK | 1 |
| E | FACE FRAME | 1 |
| F | CABINETS DOOR | 2 |
| G | DRAWER HEAD | 1 |

| NO. | Description | QTY | PICTURE |
|---|---|---|---|
| 8 | 1 1/4" SOFTCLOSE HINGE | 4 |   |
| 7 | 3/4" ROUND HEAD SCREW | 4 |   |
| 6 | BUMPER | 4 |   |
| 5 | 9/16"ROUND HEAD SCREW | 44 |   |
| 4 | CLEAT | 11 |   |
| 3 | 1"FLAT HEAD SCREW FOR CARCASS | 3 |   |
| 2 | Plastic bracket | 4 |   |
| 1 | 1" FLAT HEAD SCREW FOR WOOD BLOCK | 8 |   |

HARDWARE LIST

