ASSEMBLY INSTRUCTIONS

FOR #CVAER1136

Note: *Please read carefully and save these instructions, as you may need them at a later date.*

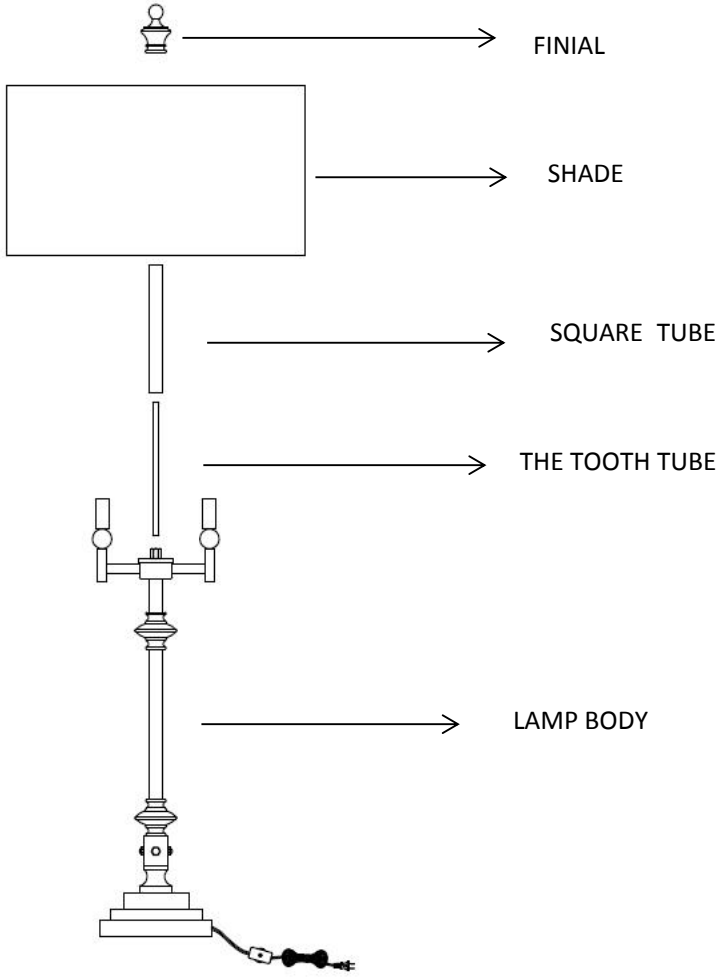

IMPORTANT SAFETY INSTRUCTIONS: This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

GENERAL: All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the lamp from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

1.INSERT THE TOOTH TUBE INTO THE LAMP HOLE,AND THEN SCREW TIGHTLY.

2.INSERT THE SQUARE TUBE INTO THE TOOTH TUBE.

3.PLCAE THE SHADE ONTO THE TOOTH TUBE.

4.SCREW THE SHADE BY THE FINAL.