MODEL :WOODEN POST / SPRUNG WOOD BED BASE
SIZE :SMALL DOUBLE / DOUBLE / QUEEN / KING SINGLE / KING BED

ASSEMBLY INSTRUCTION

Part List

WOODEN POST	HEAD BOARD	FOOT BOARD	SIDE RAIL	CROSS RAIL	CENTRE RAIL	SUPPORT LEG	SPRUNG WOOD
2 pcs / 2 pcs	1pcs	1 pcs	2 pcs	3 pcs	1 pcs	3 pcs	24pcs

Hardware

SINGLE CONNECTOR	DOUBLE CONNECTOR	M6X 45mm	M6 X 40mm	M6 X 20mm	M6 HEX NUT	SPANNER	ALLEN KEY M4
24pcs	12 pcs	3 pcs	11 pcs	16 pcs	14 pcs	1 pcs	1 pcs

Step 1

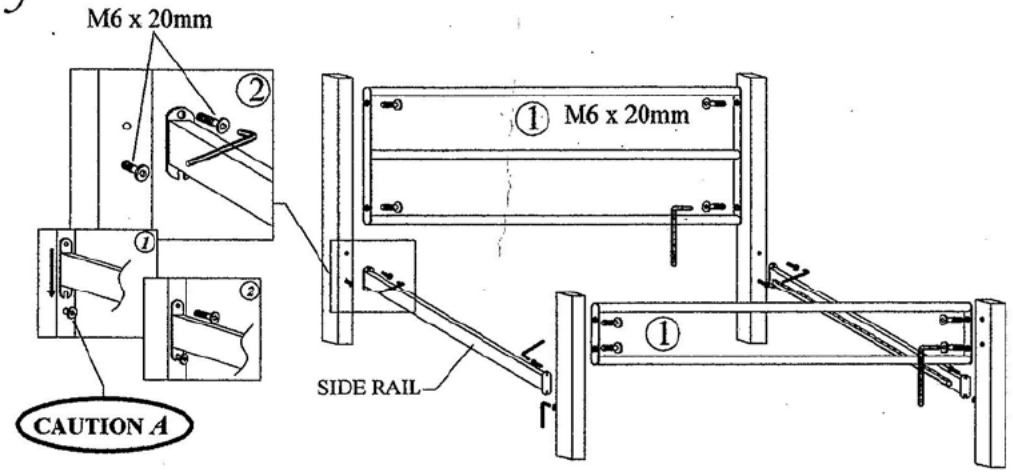

Step 2

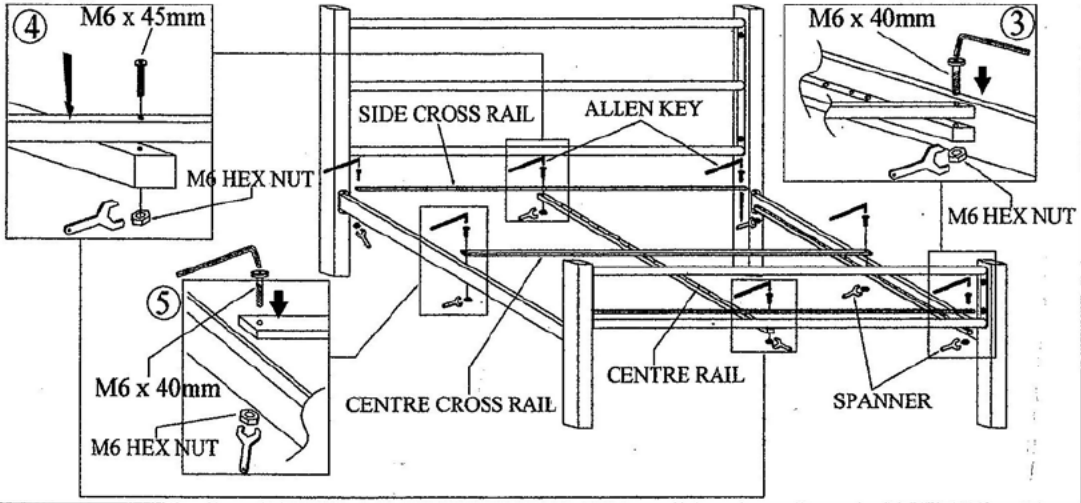

Step 3

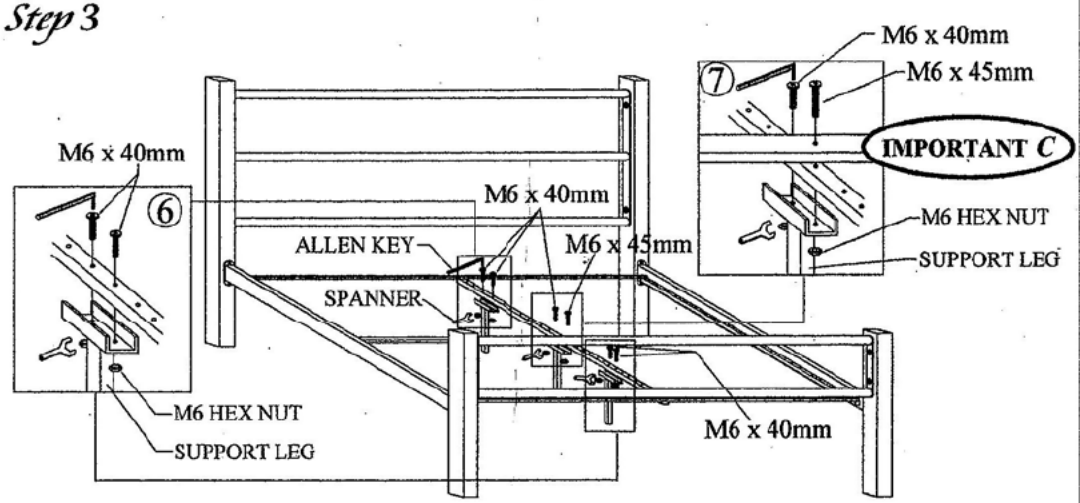

Step 4

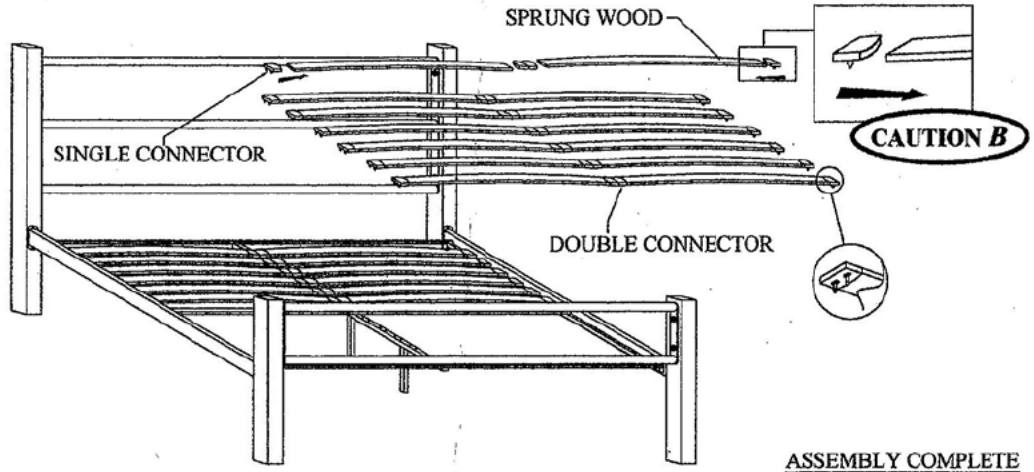

ASSEMBLY COMPLETE

A **CAUTION!**
Do not tight screw, left around 5mm before completely assembled.

B **CAUTION!**
Make sure sprung wood is fully push tightly into single connector, if not by slowly knock single connector until tight into sprung wood.

C ***IMPORTANT!***
*Make sure support leg is straight when screw is fully tighten, if not please do adjustment
*When move the bed make sure the bed is fully lifted, if not the support will not be straight

IMPORTANT!
* *Tighten all screw and complete product as shown*
* *"Ensure cross rails are located in the side rails before placing the mattress on the bed frame"*