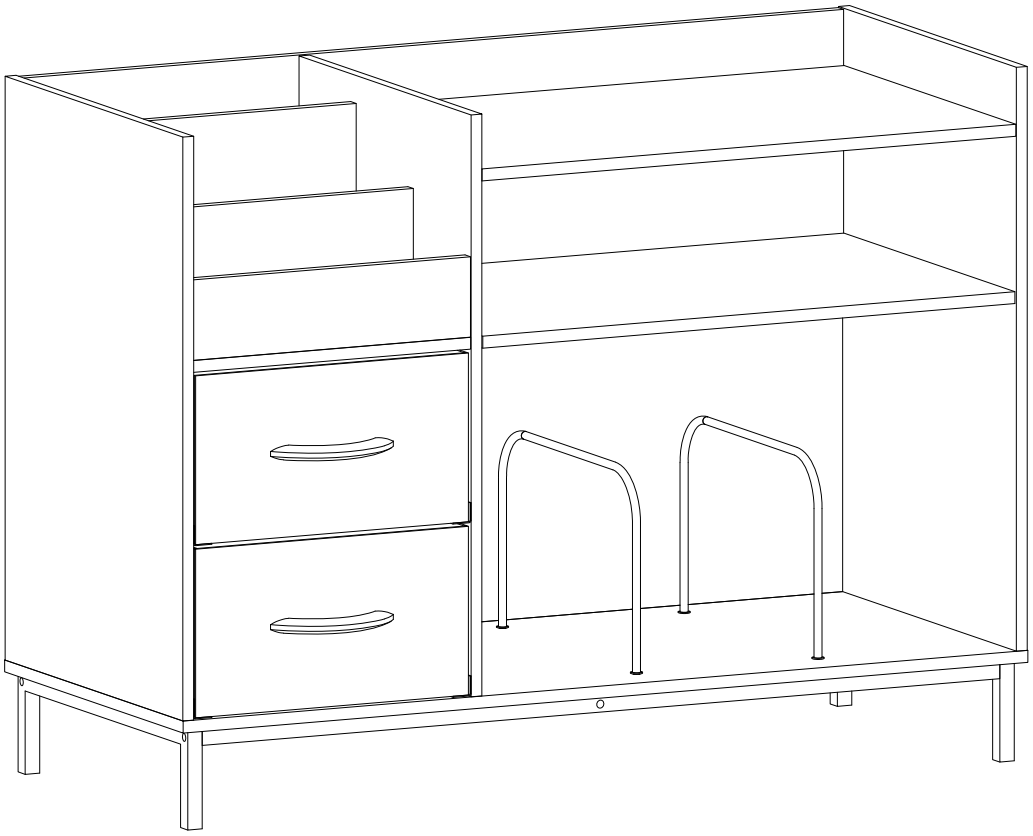
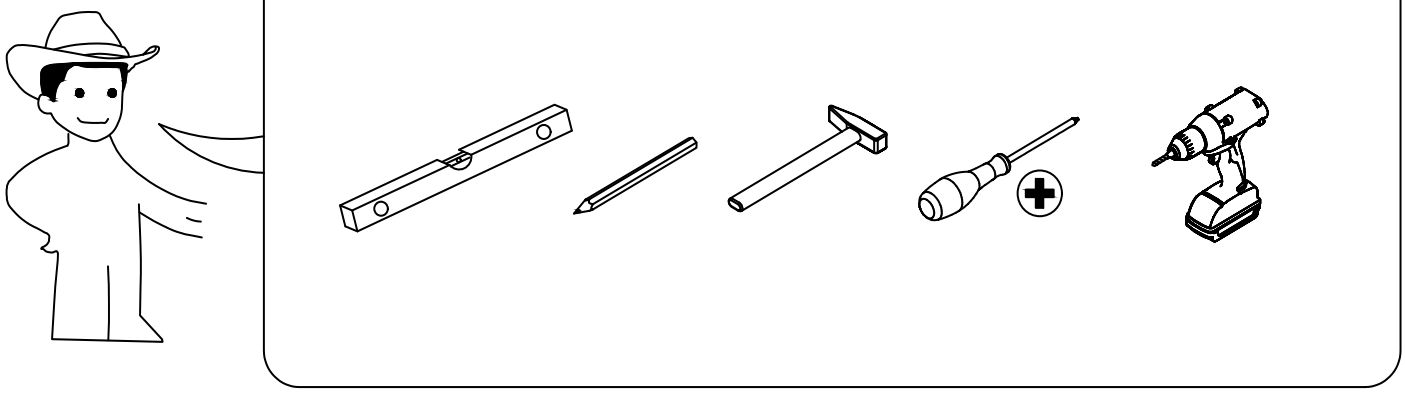
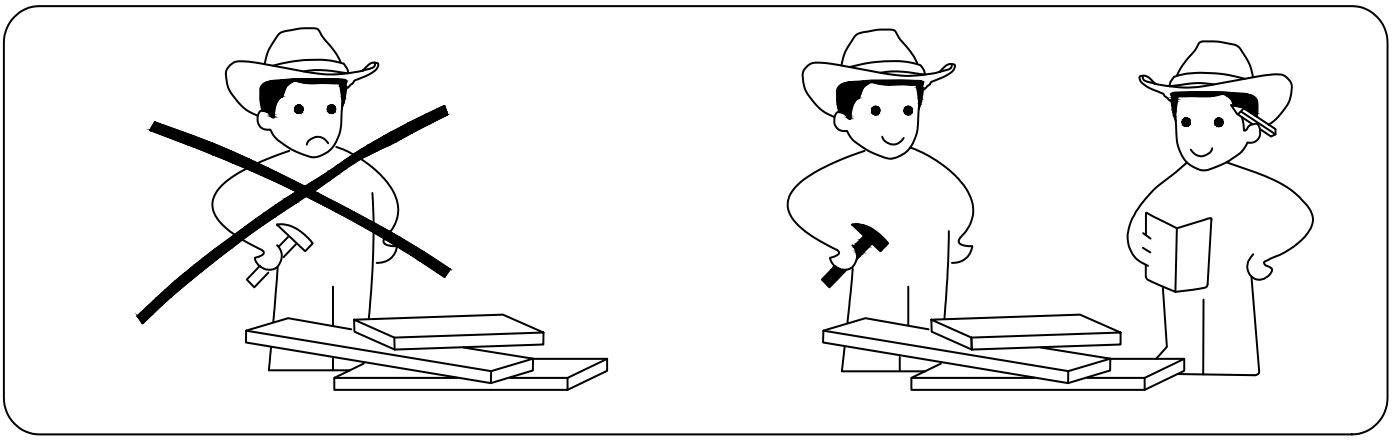
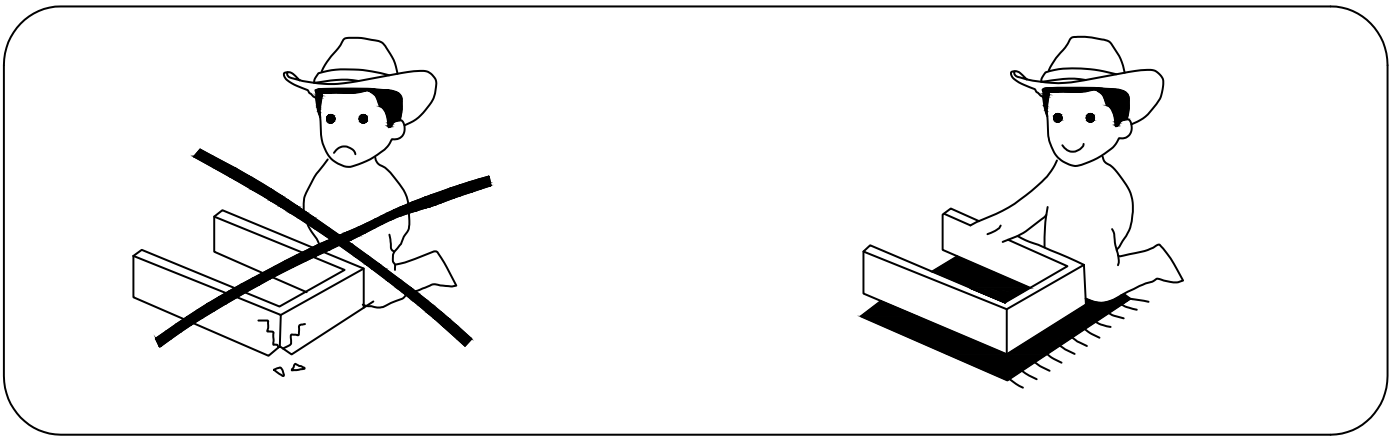
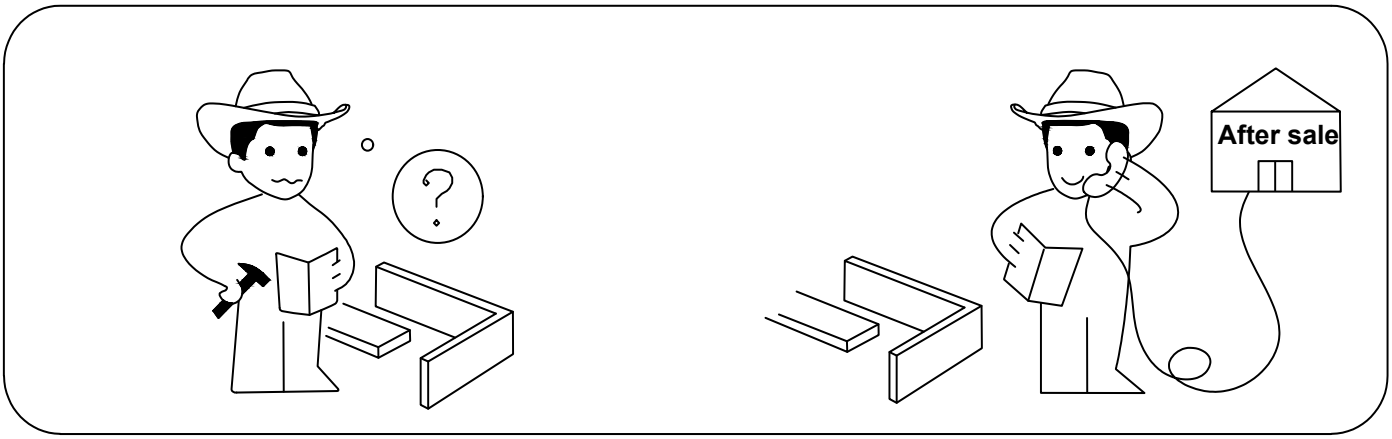
# Installation & Assembly

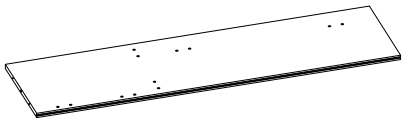
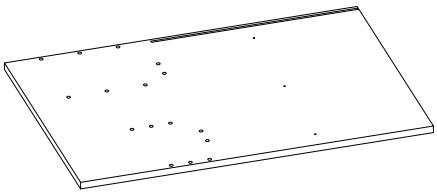
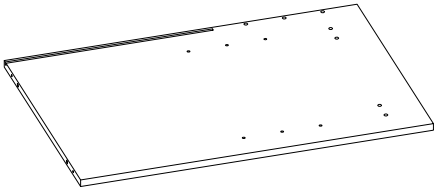
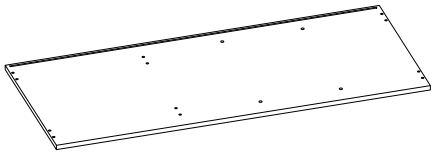
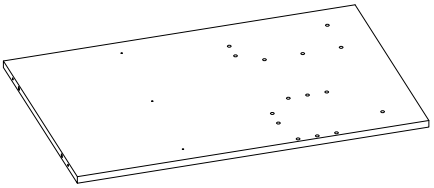
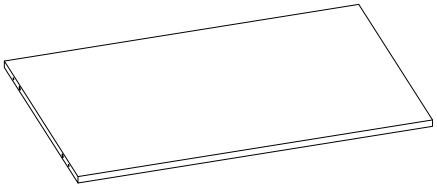
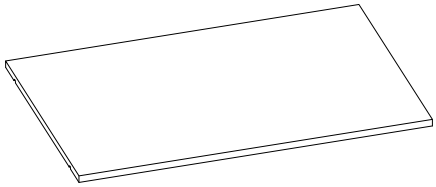
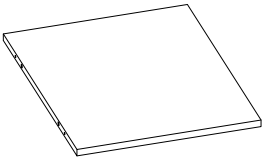

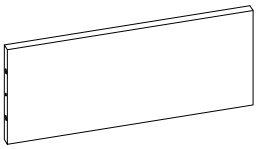
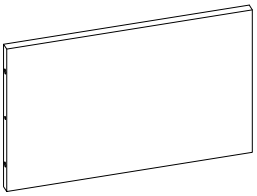
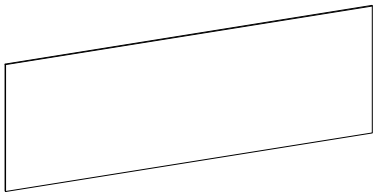
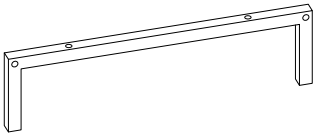



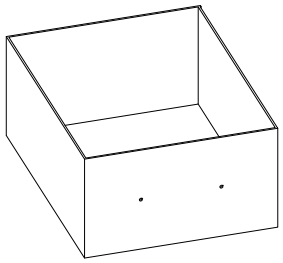
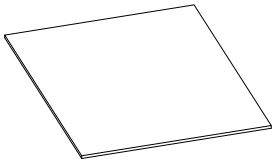


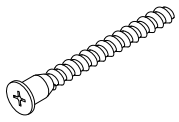

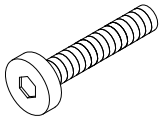











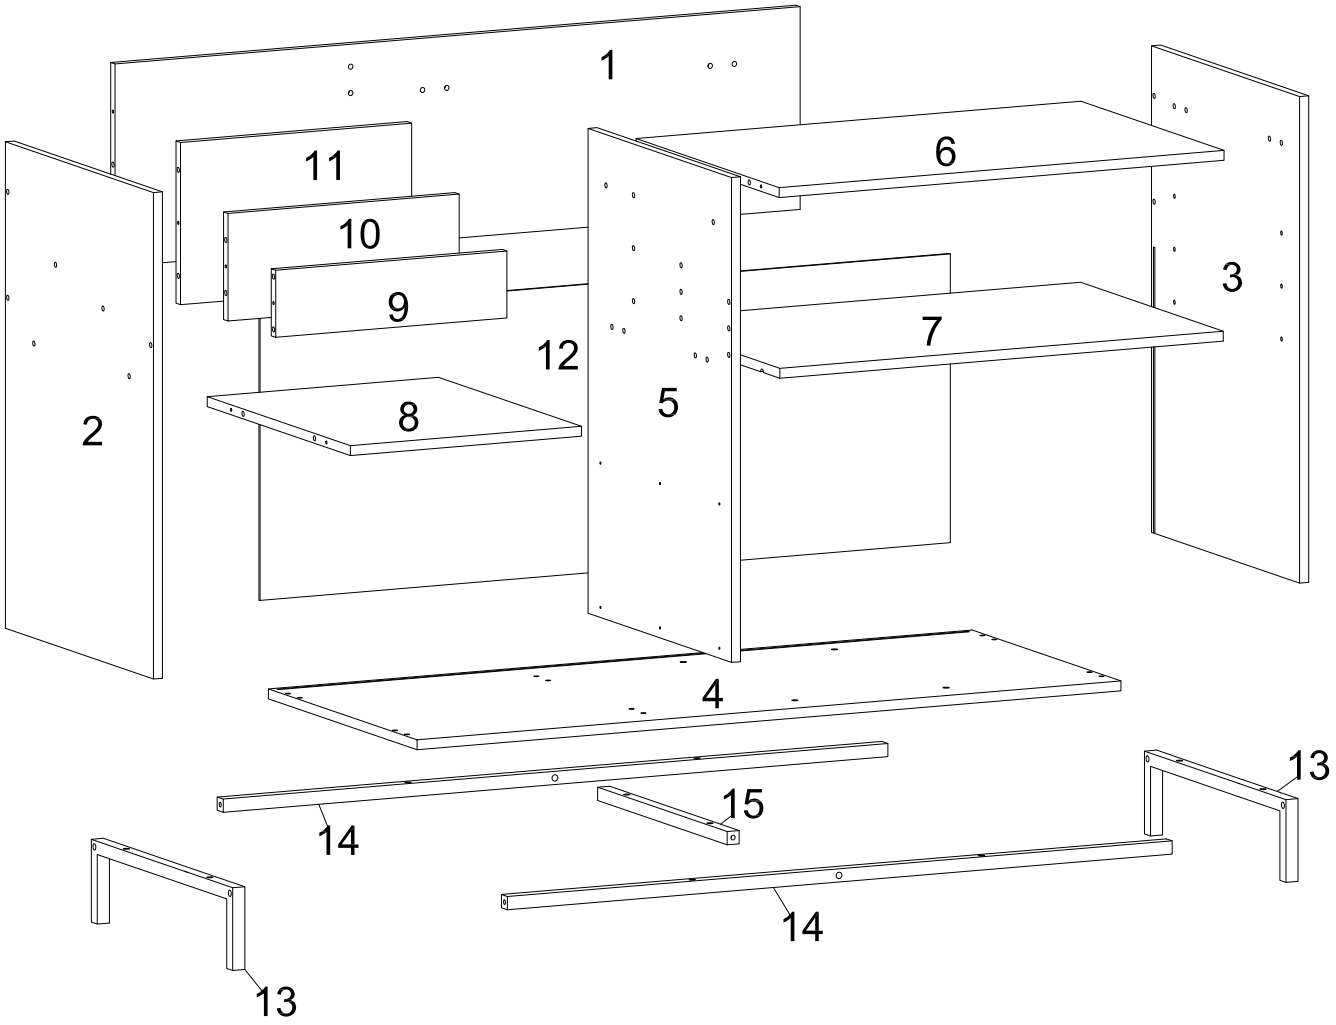


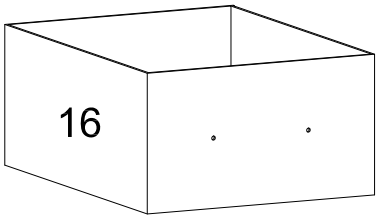

After sale

| | | |
|---|---|---|
| 1x1*pc  | 2x1*pc  | 3x1*pc  |
| 4x1*pc  | 5x1*pc  | 6x1*pc  |
| 7x1*pc  | 8x1*pc  | 9x1*pc  |
| 10x1*pc  | 11x1*pc  | 12x1*pc  |
| 13x2*pcs  | 14x2*pcs  | 15x1*pc  |


| | | |
|---|---|---|
| 16x2*pcs  | 17x2*pcs  | |

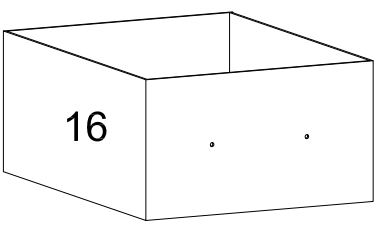
| | | | | | | |
|---|---|---|---|---|---|---|
| Ax30*pcs  | Bx34*pcs  | Cx16*pcs  | Dx2*pcs  | Ex4*pcs  | Fx6*pcs  | Gx4*pcs  |
| Hx8*pcs  | Kx4*pcs  | Lx30*pcs  | Mx1*pc  | Px1*pc  | Nx1*pc  | Ox1*pc  |
| Ix2*pcs  | Qx4*pcs  | Rx4*pcs  | | | | |

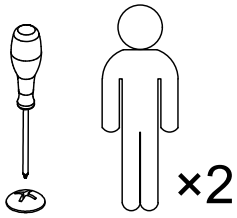

1
11
10
9
6
3
7
12
5
8
2
4
13
15
14
14
13


16


17

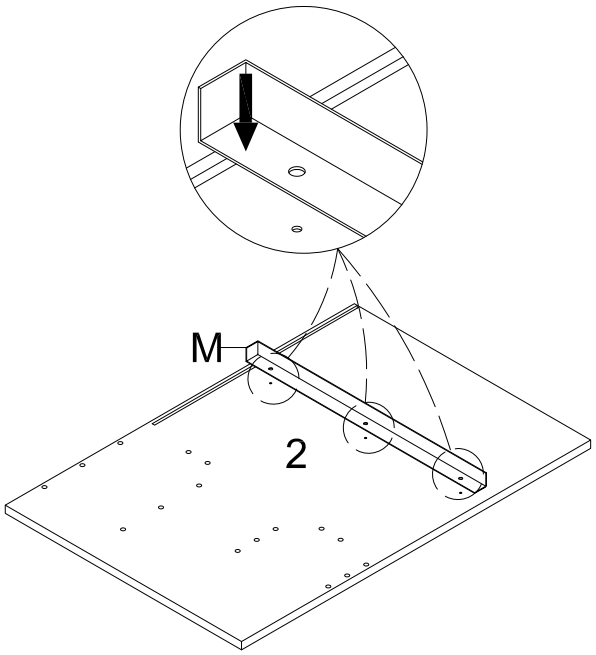

17

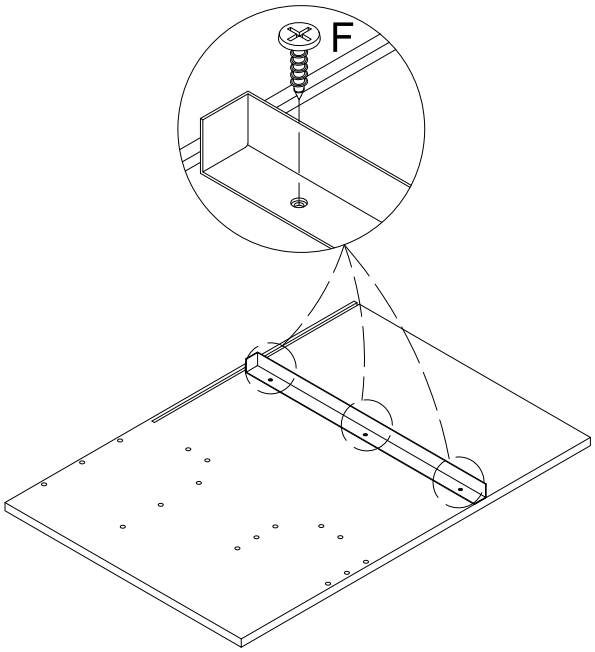

16


×2

1

Place accessory M on the side panel and secure them with three screws.



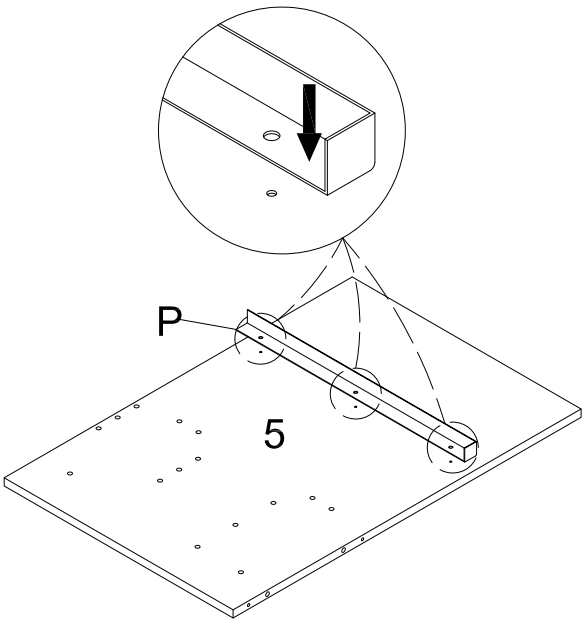



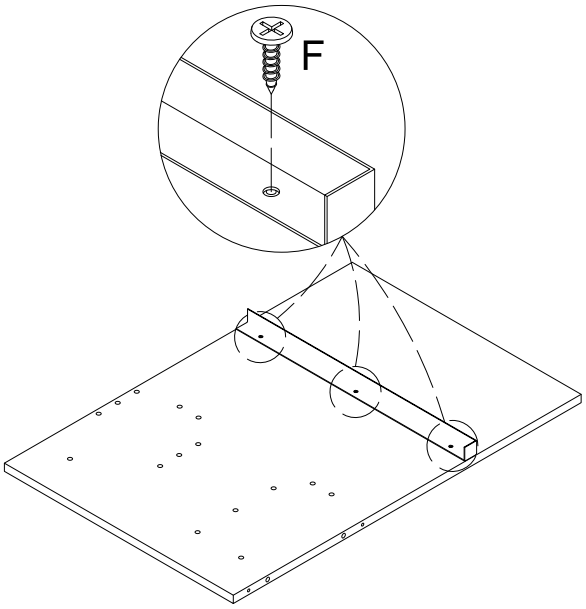

Fx3



2

Place accessory P on the side panel and secure them with three screws.



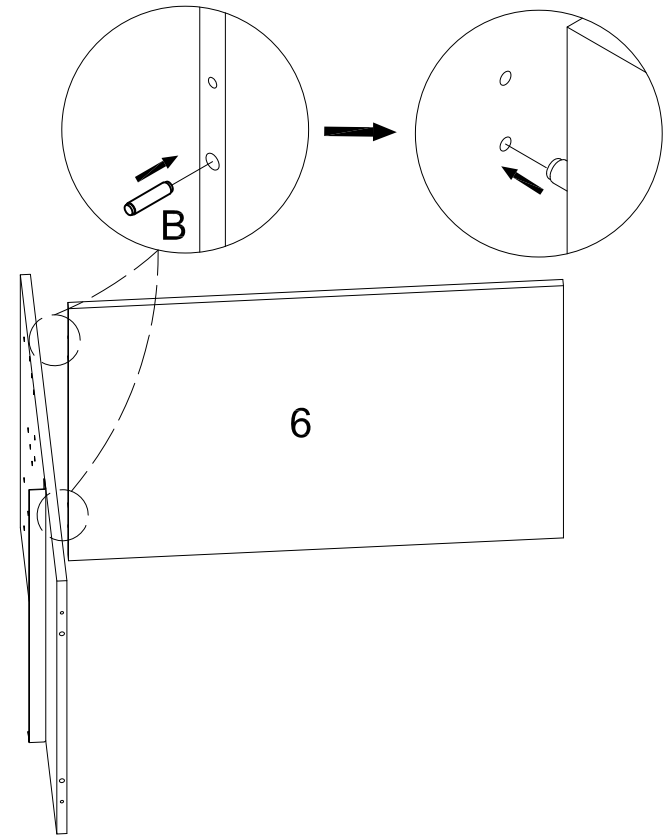



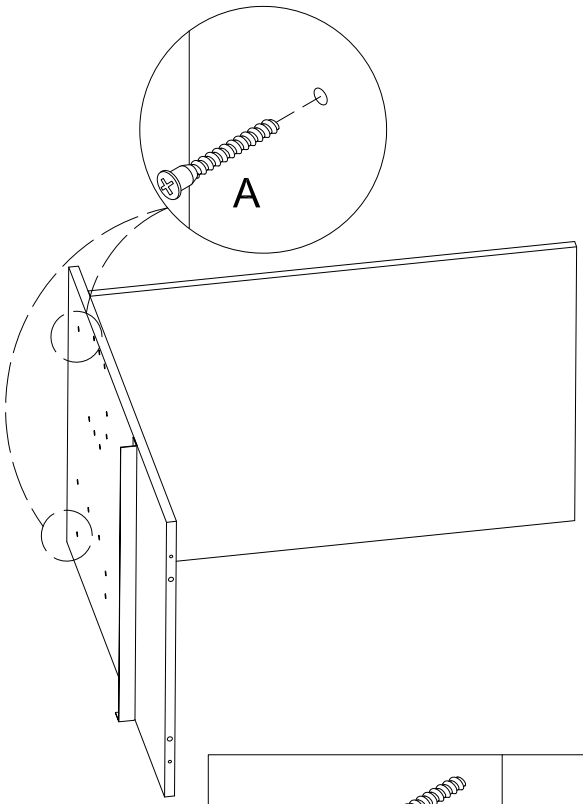

Fx3



3

Put these two panels together and secure them with two wooden tenons and two screws.

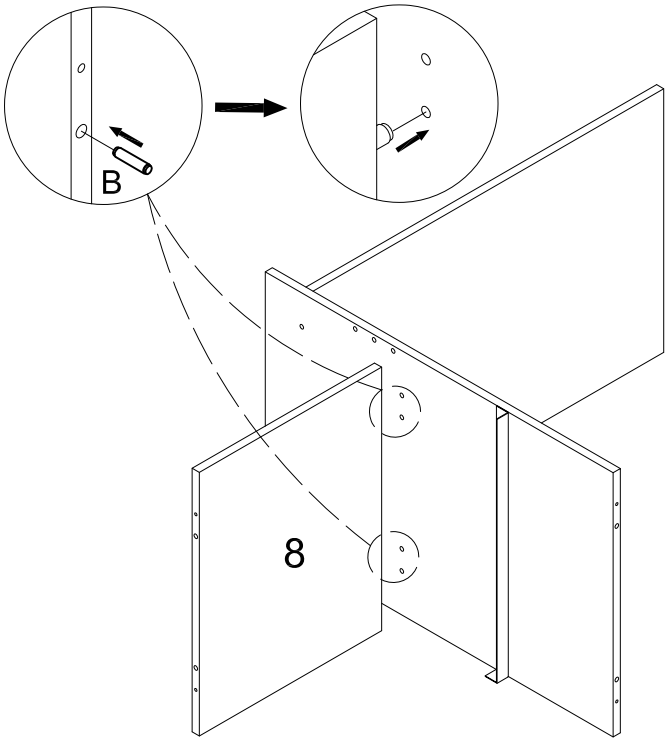


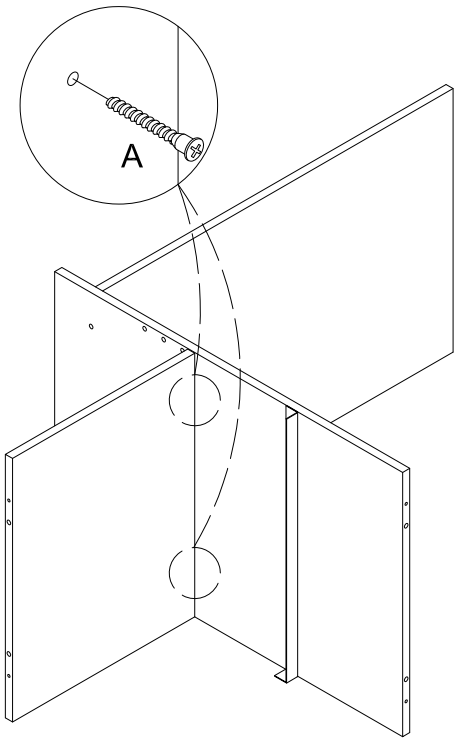




| Ax2 | Bx2 |
|---|---|

4

Put these panels together and secure them with two wooden tenons and two screws.

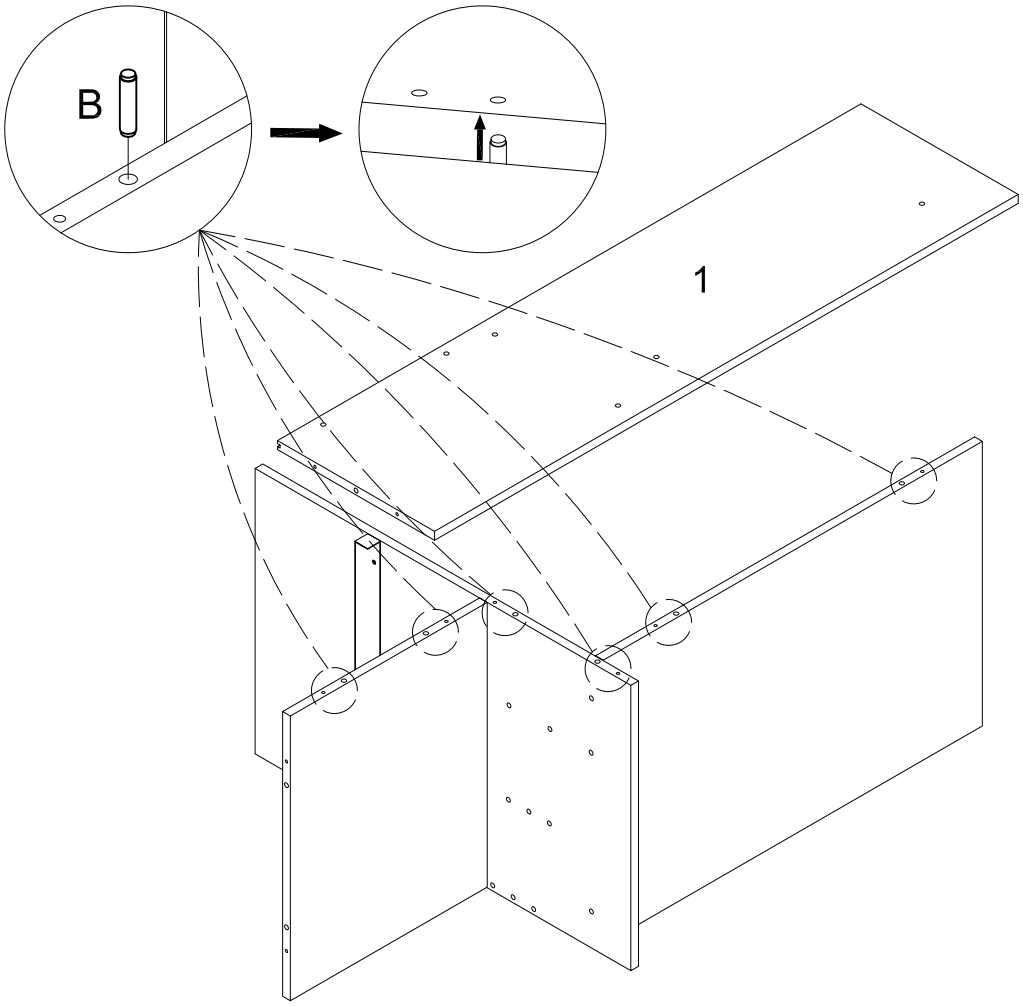


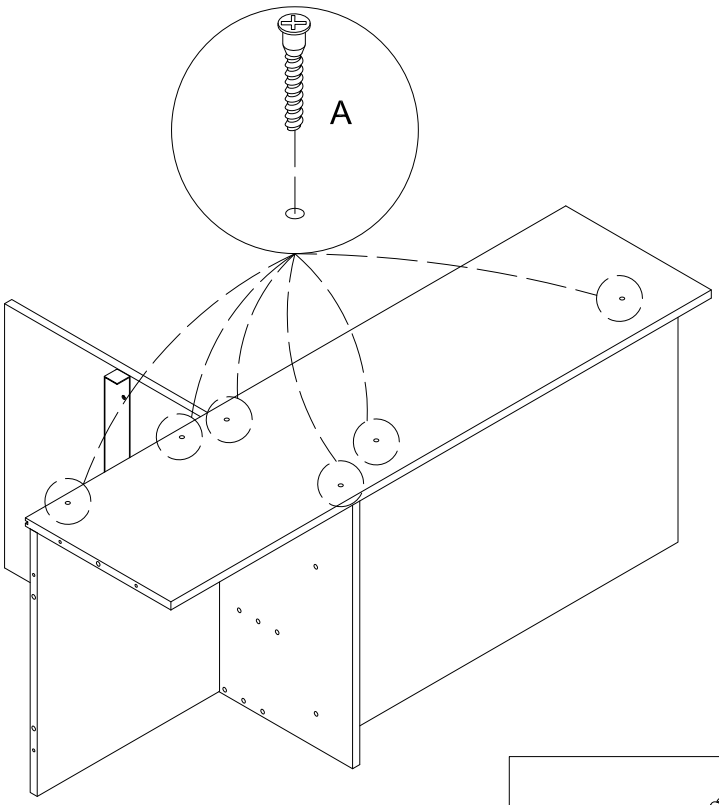






| Ax2 | Bx2 |
|---|---|

5

Put these panels together and secure them with six wooden tenons and six screws.

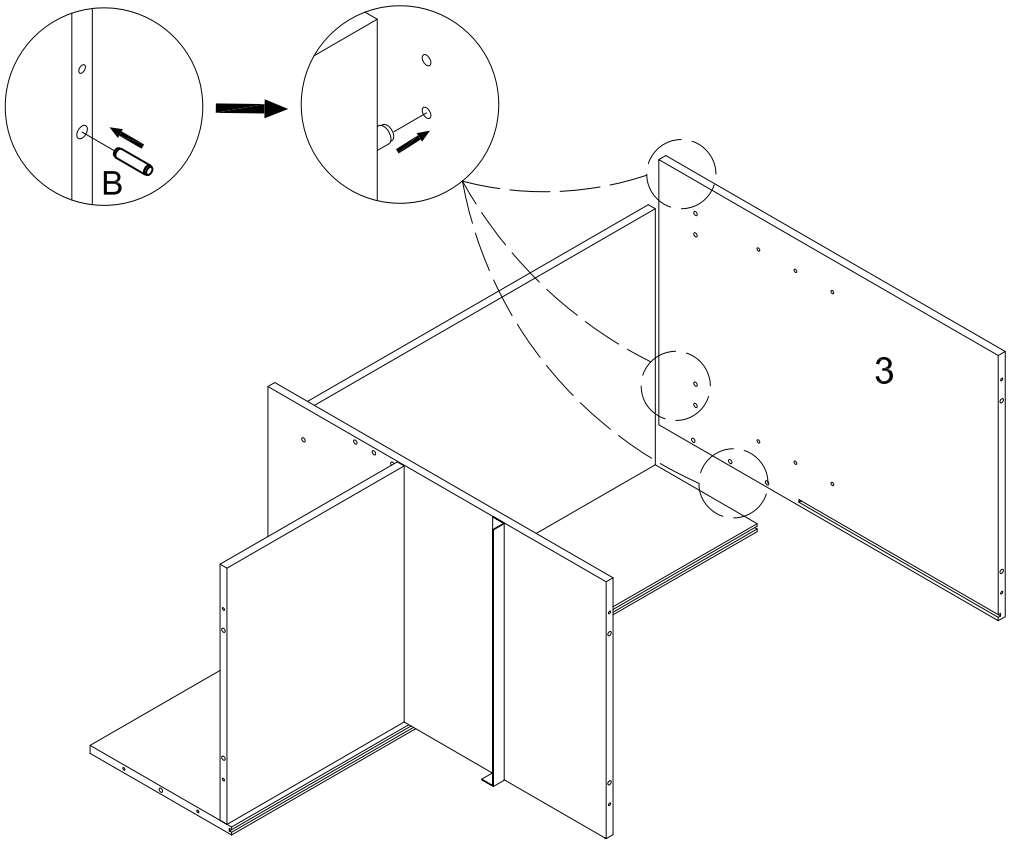


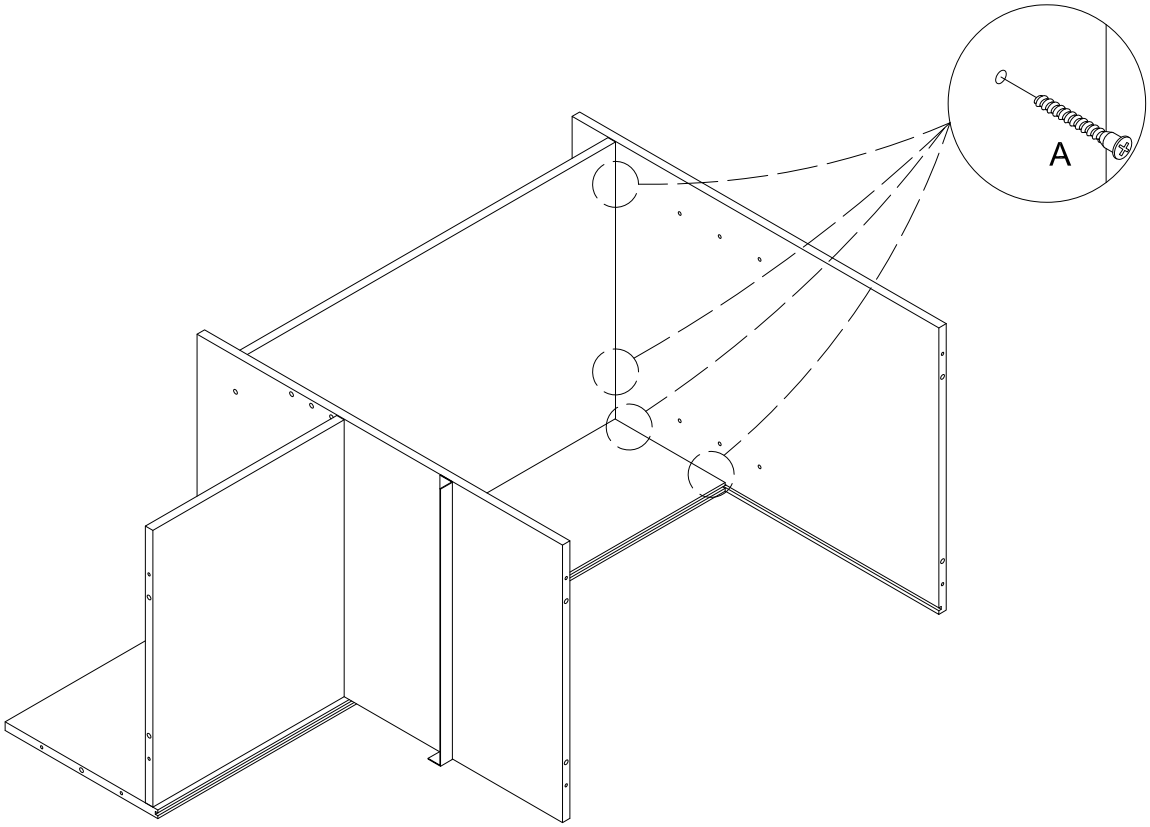






| | |
|---|---|
| Ax6  | Bx6  |

6

Put these panels together and secure them with three wooden tenons and four screws.

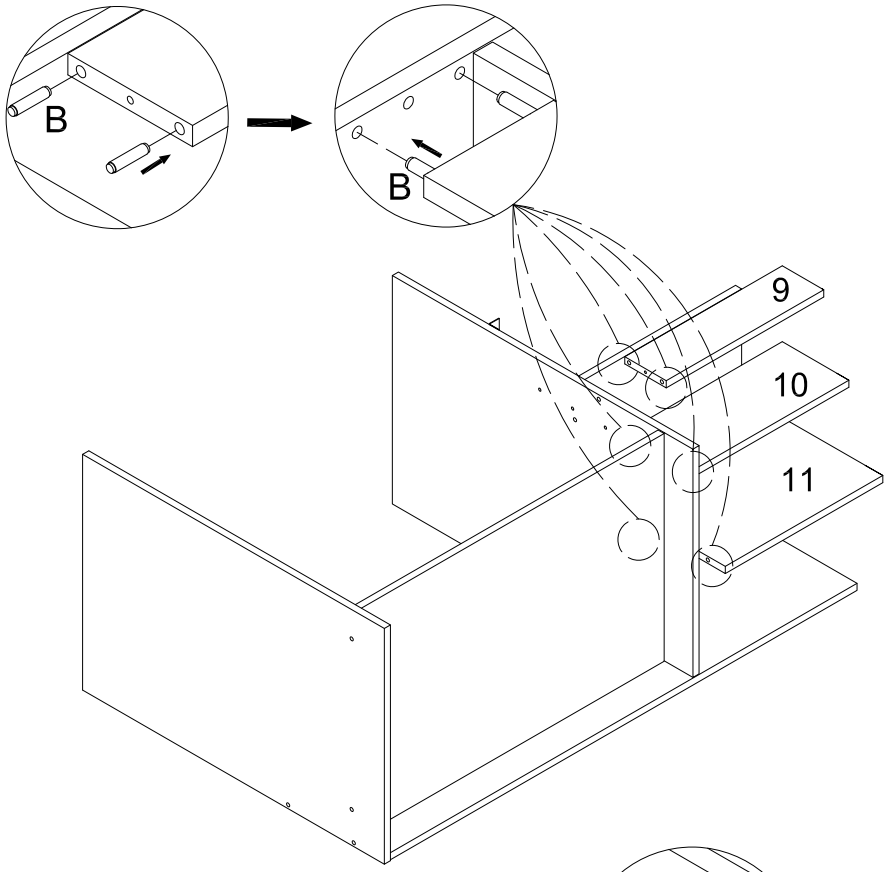


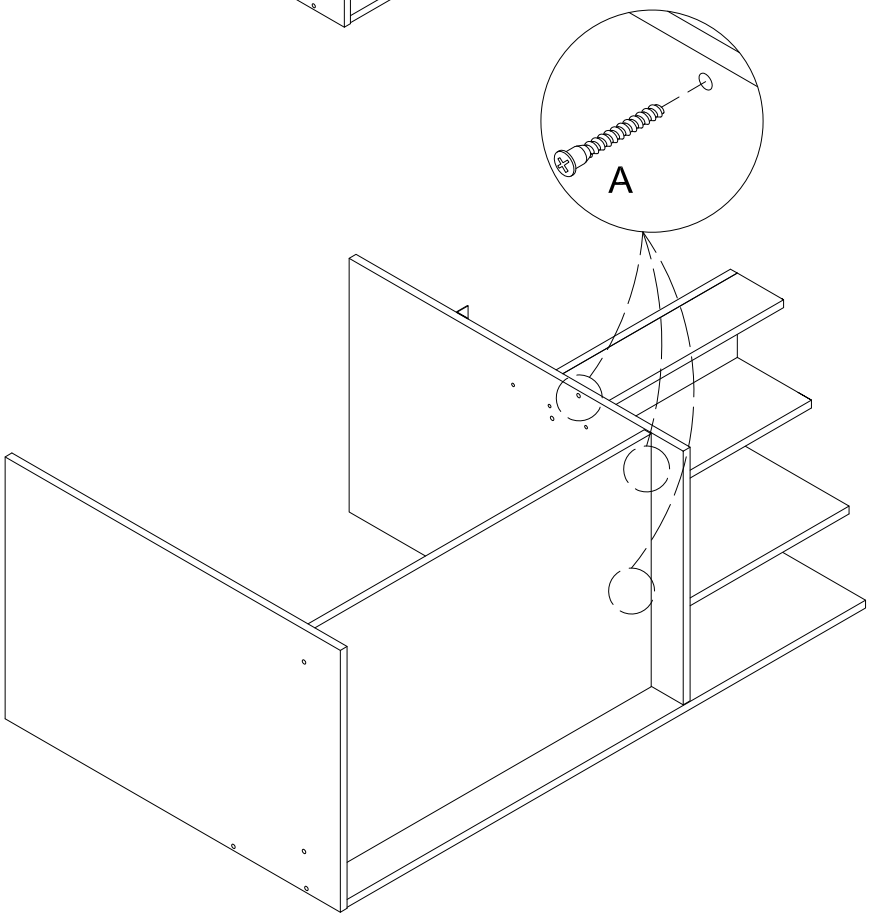






| | |
|---|---|
| Ax4  | Bx3  |

7

Put these panels together and secure them with six wooden tenons and three screws.

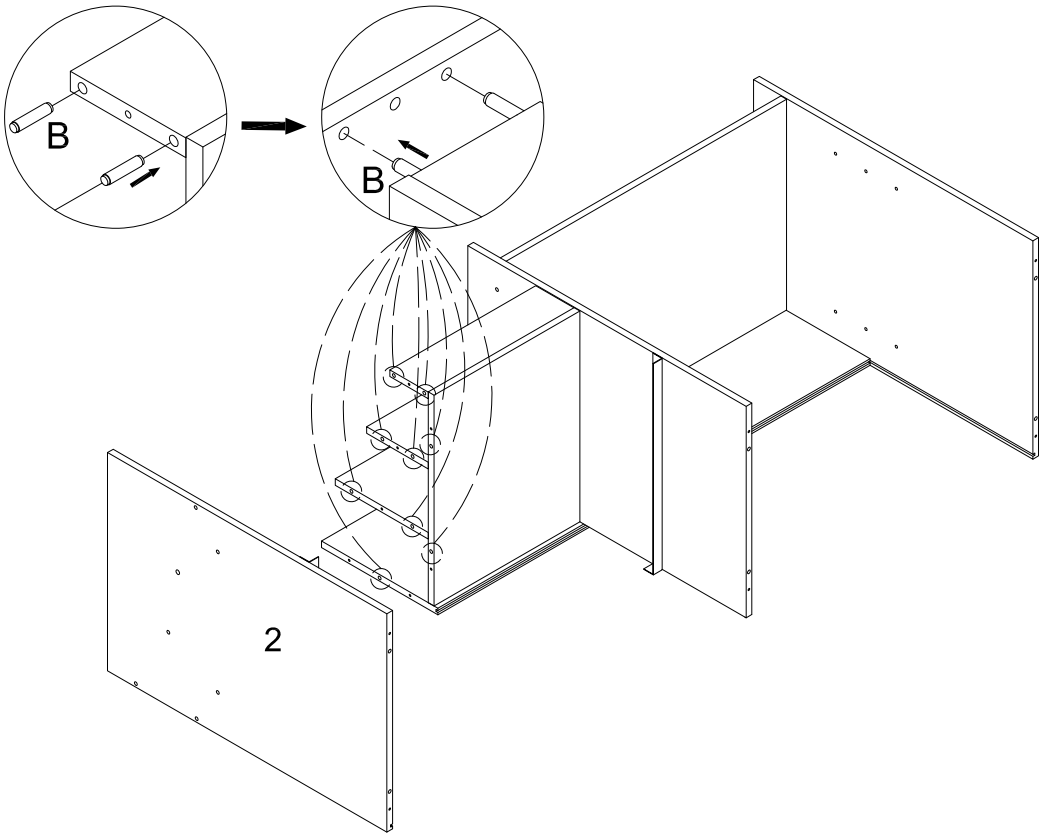


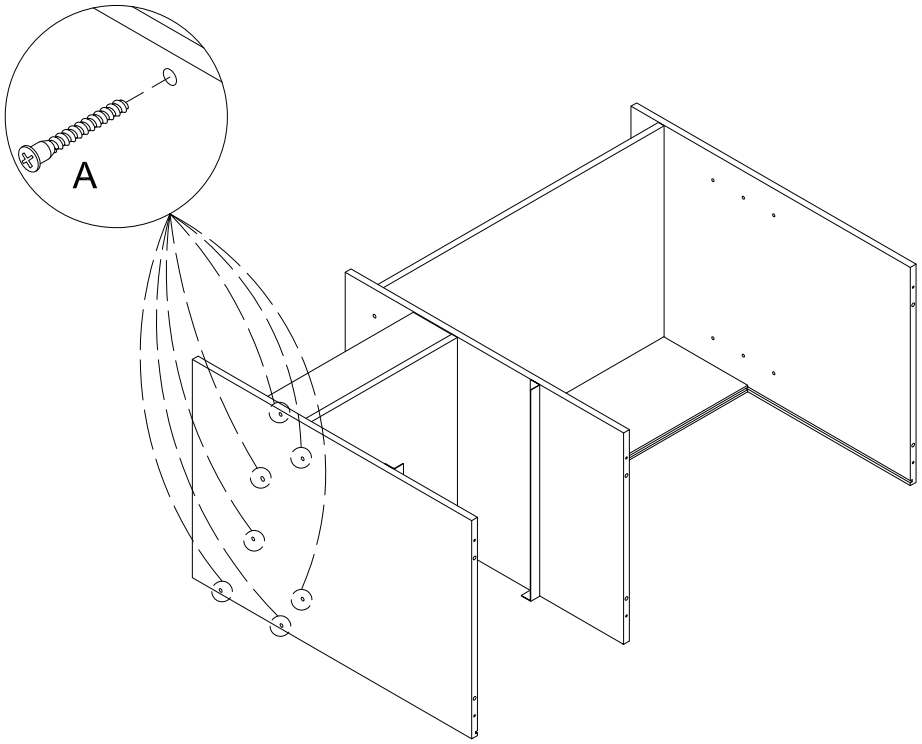






| | |
|---|---|
| Ax3  | Bx6  |

8

Put these panels together and secure them with nine wooden tenons and seven screws.

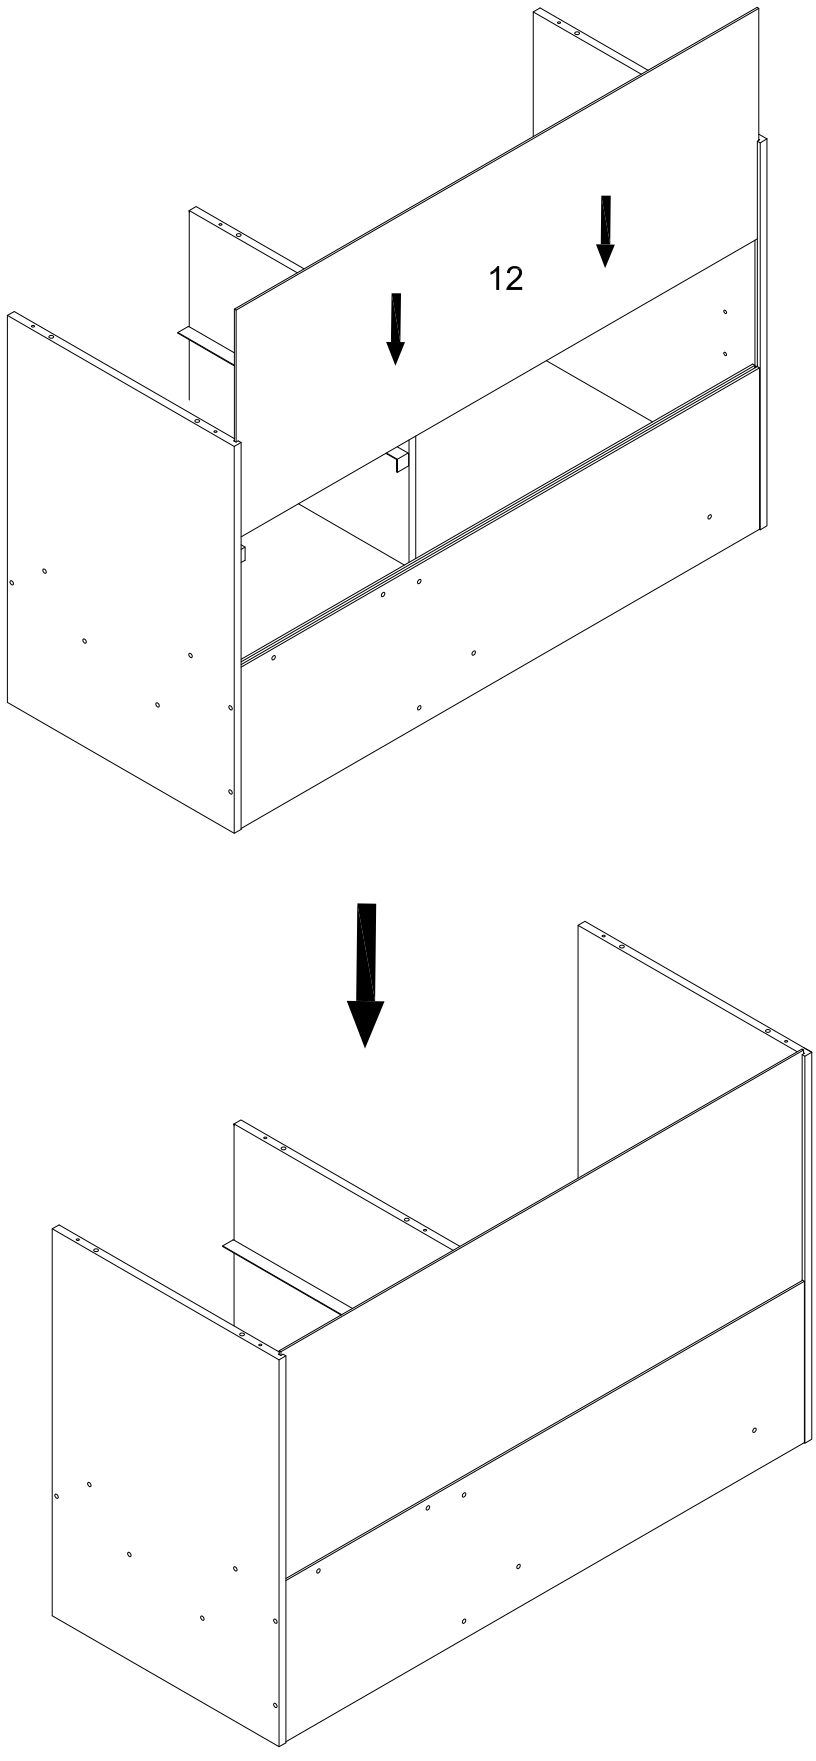



| | |
|---|---|
| Ax7  | Bx9  |

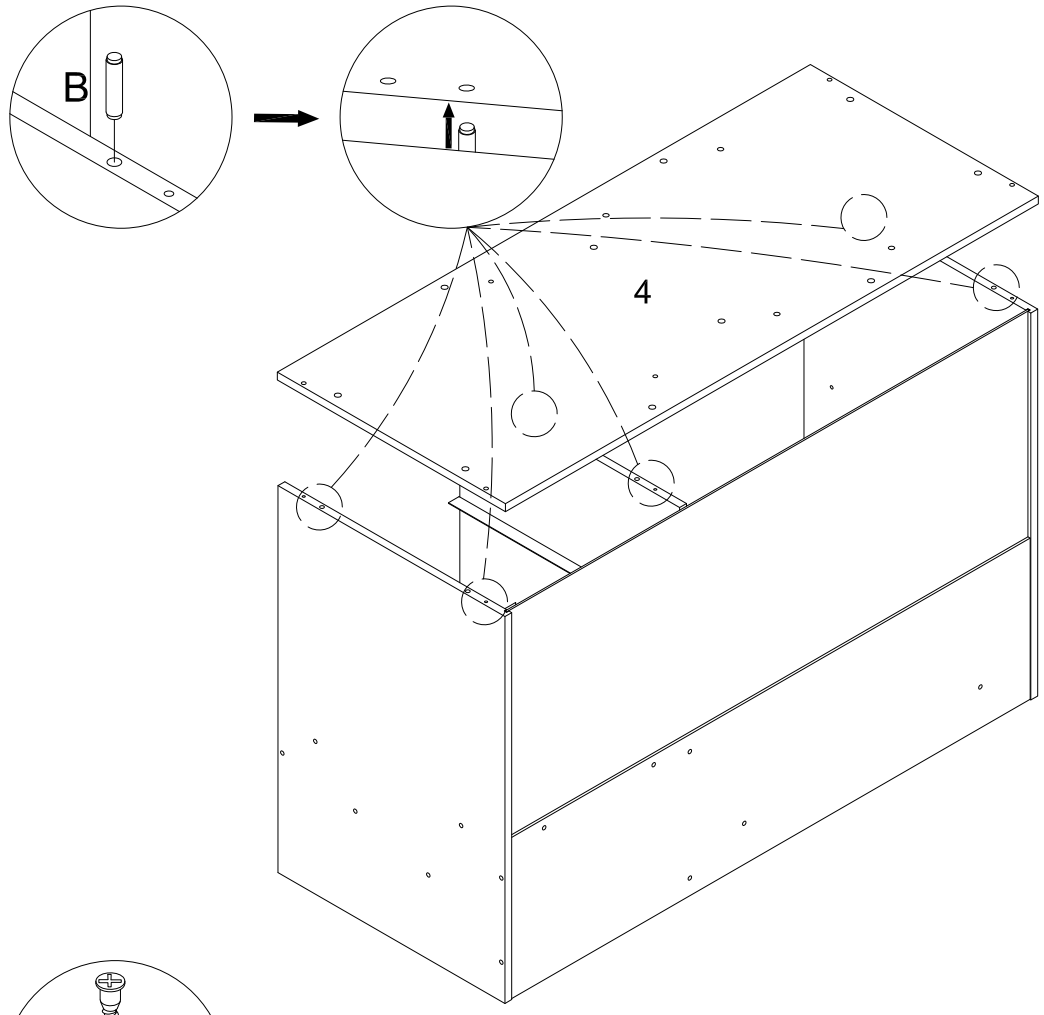
9

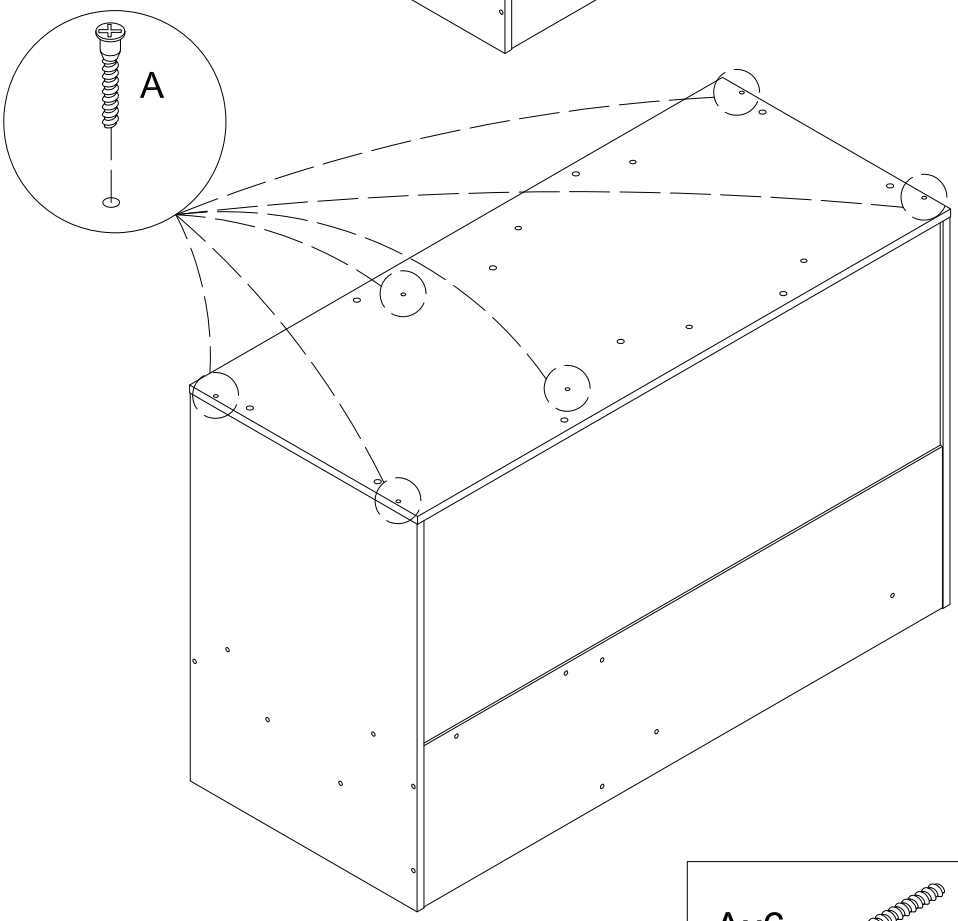
Insert the thin plate into the slot.





10

Put these panels together and secure them with six wooden tenons and six screws.



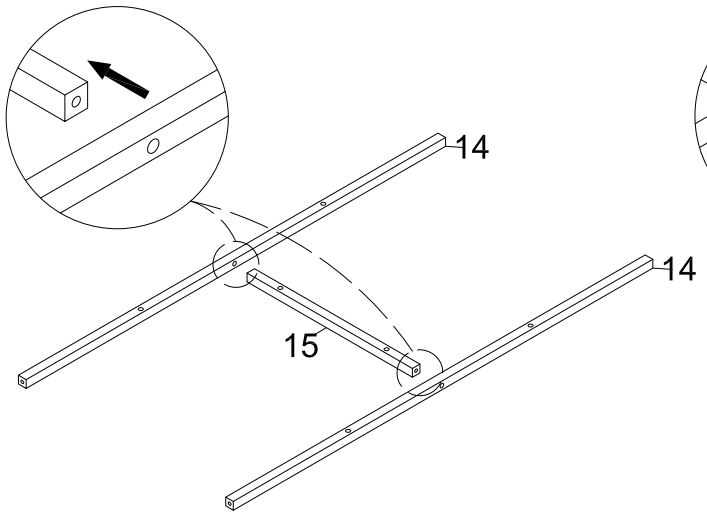



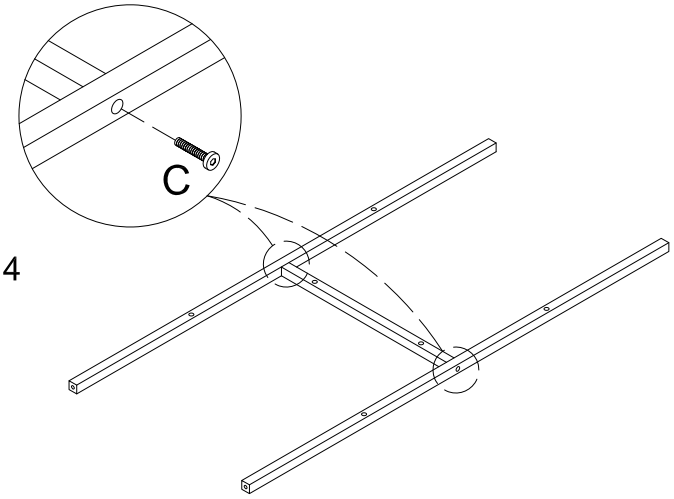

Ax6 

Bx6 

11

Put these iron pipes together and connect them with two screws.



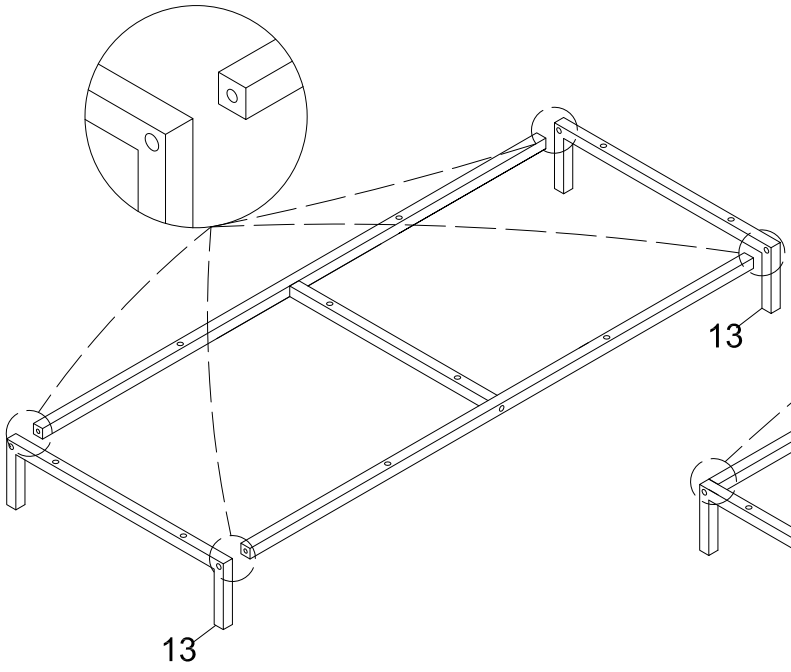



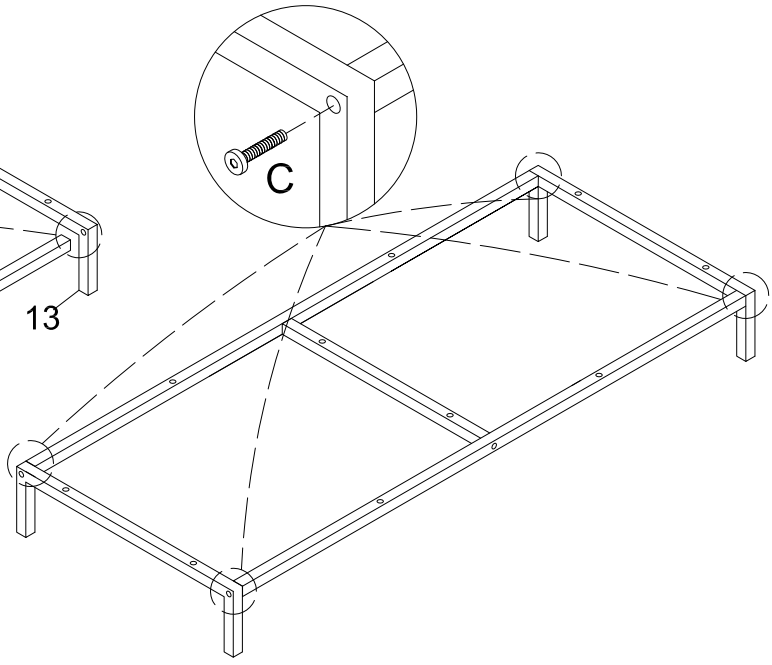

Cx2




12

Put these iron pipes together and connect them with four screws.



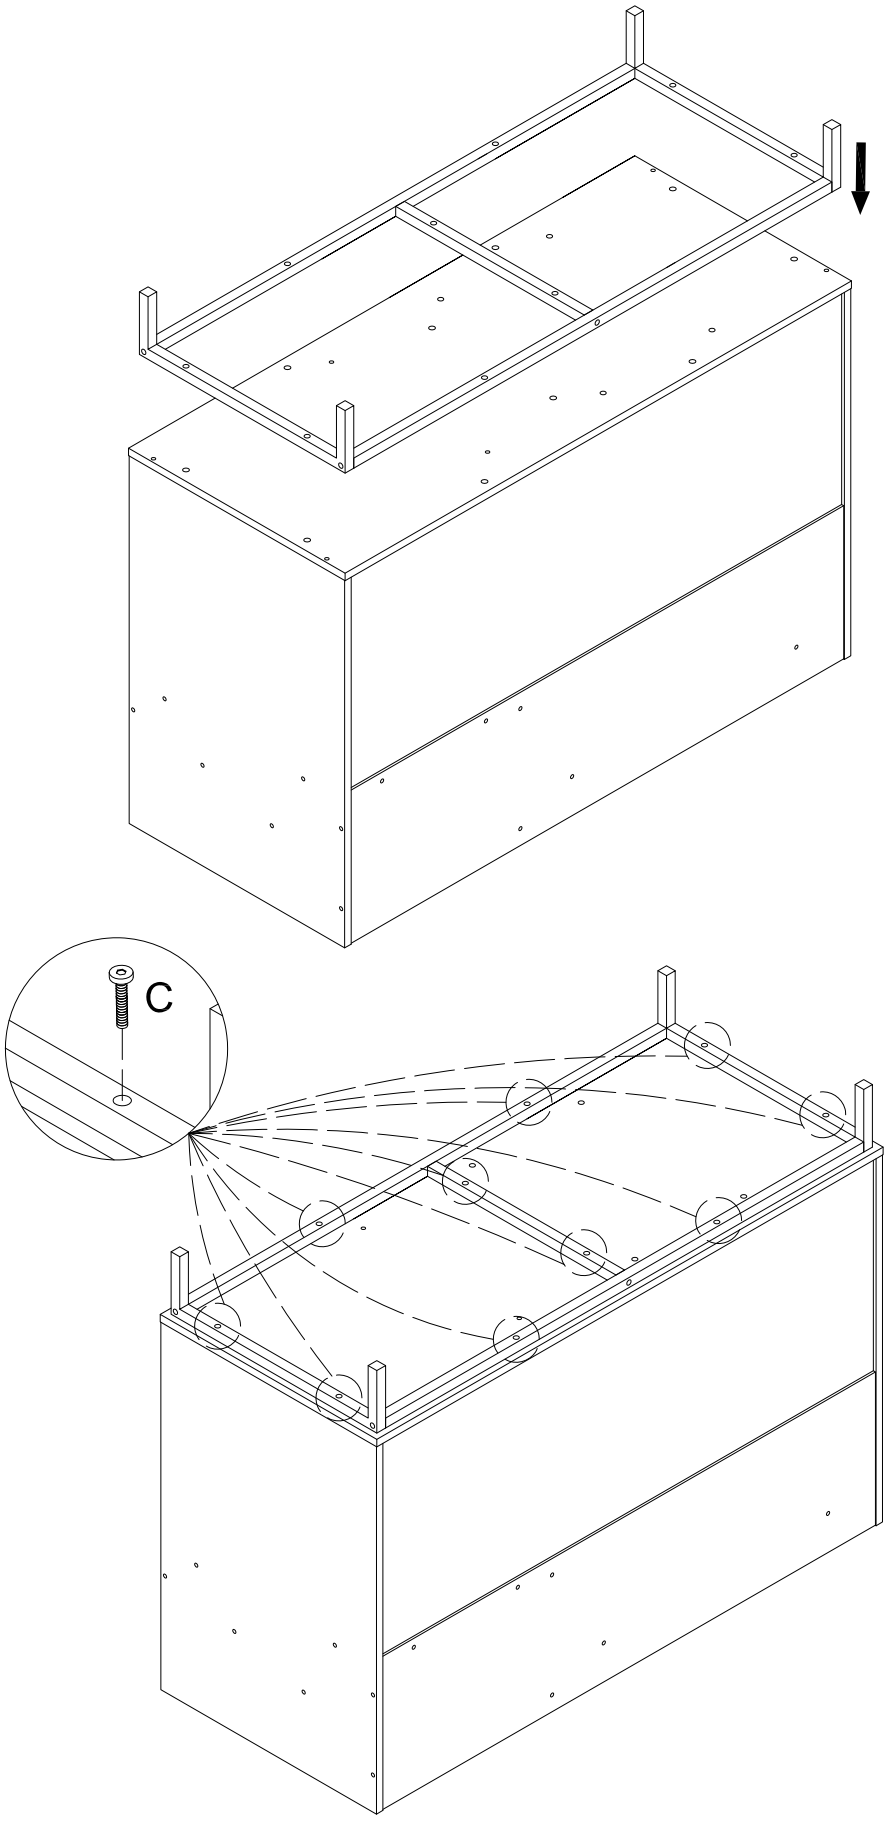




Cx4




13

Put these iron frames and wooden boards together and connect them with ten screws.

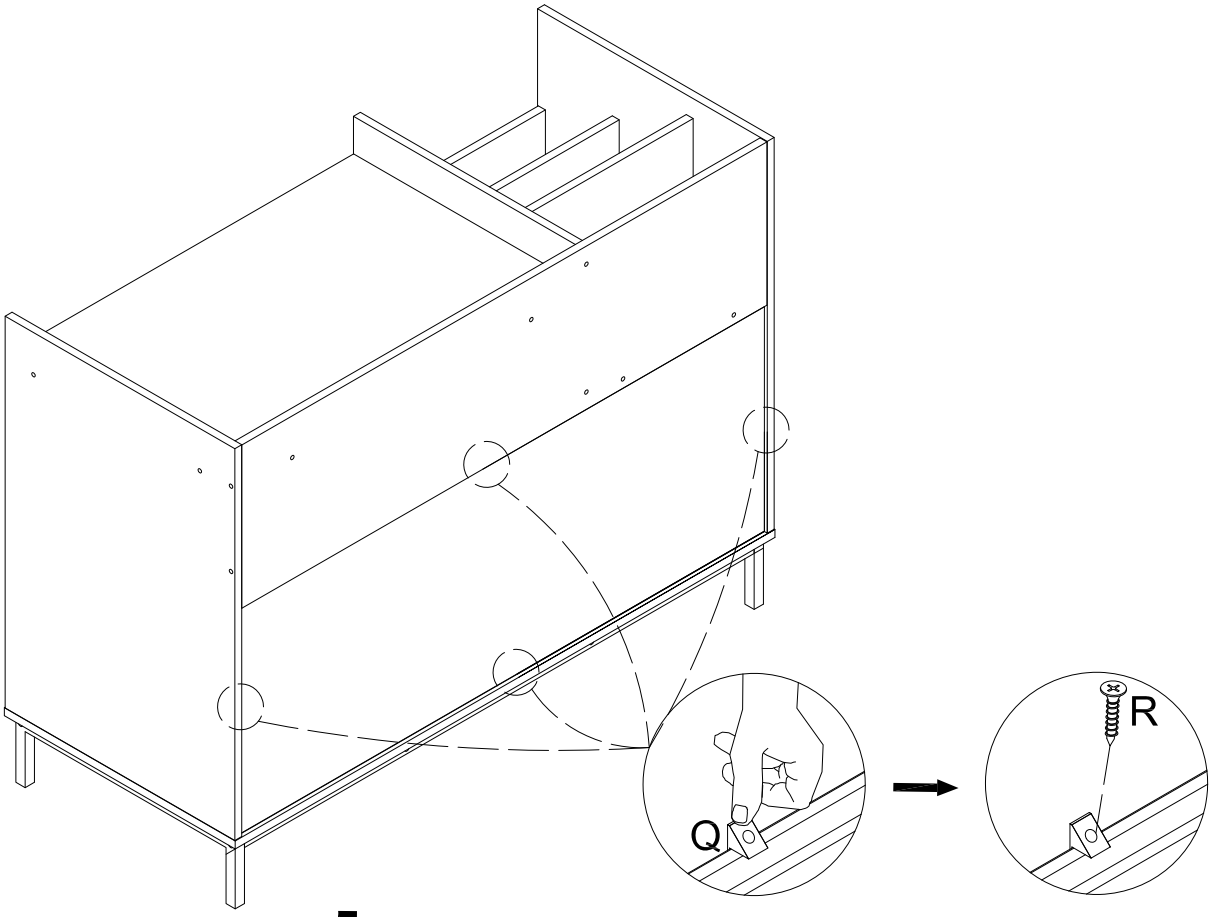


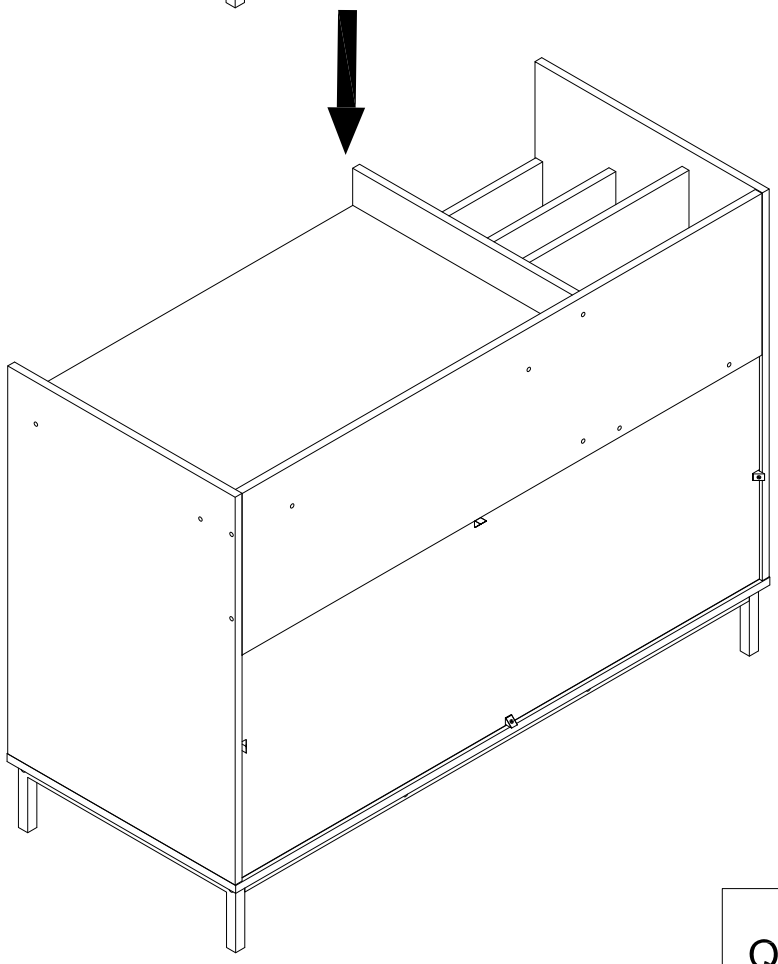

Cx10



14

Place the four backboards on the thin plate and secure them with four screws.

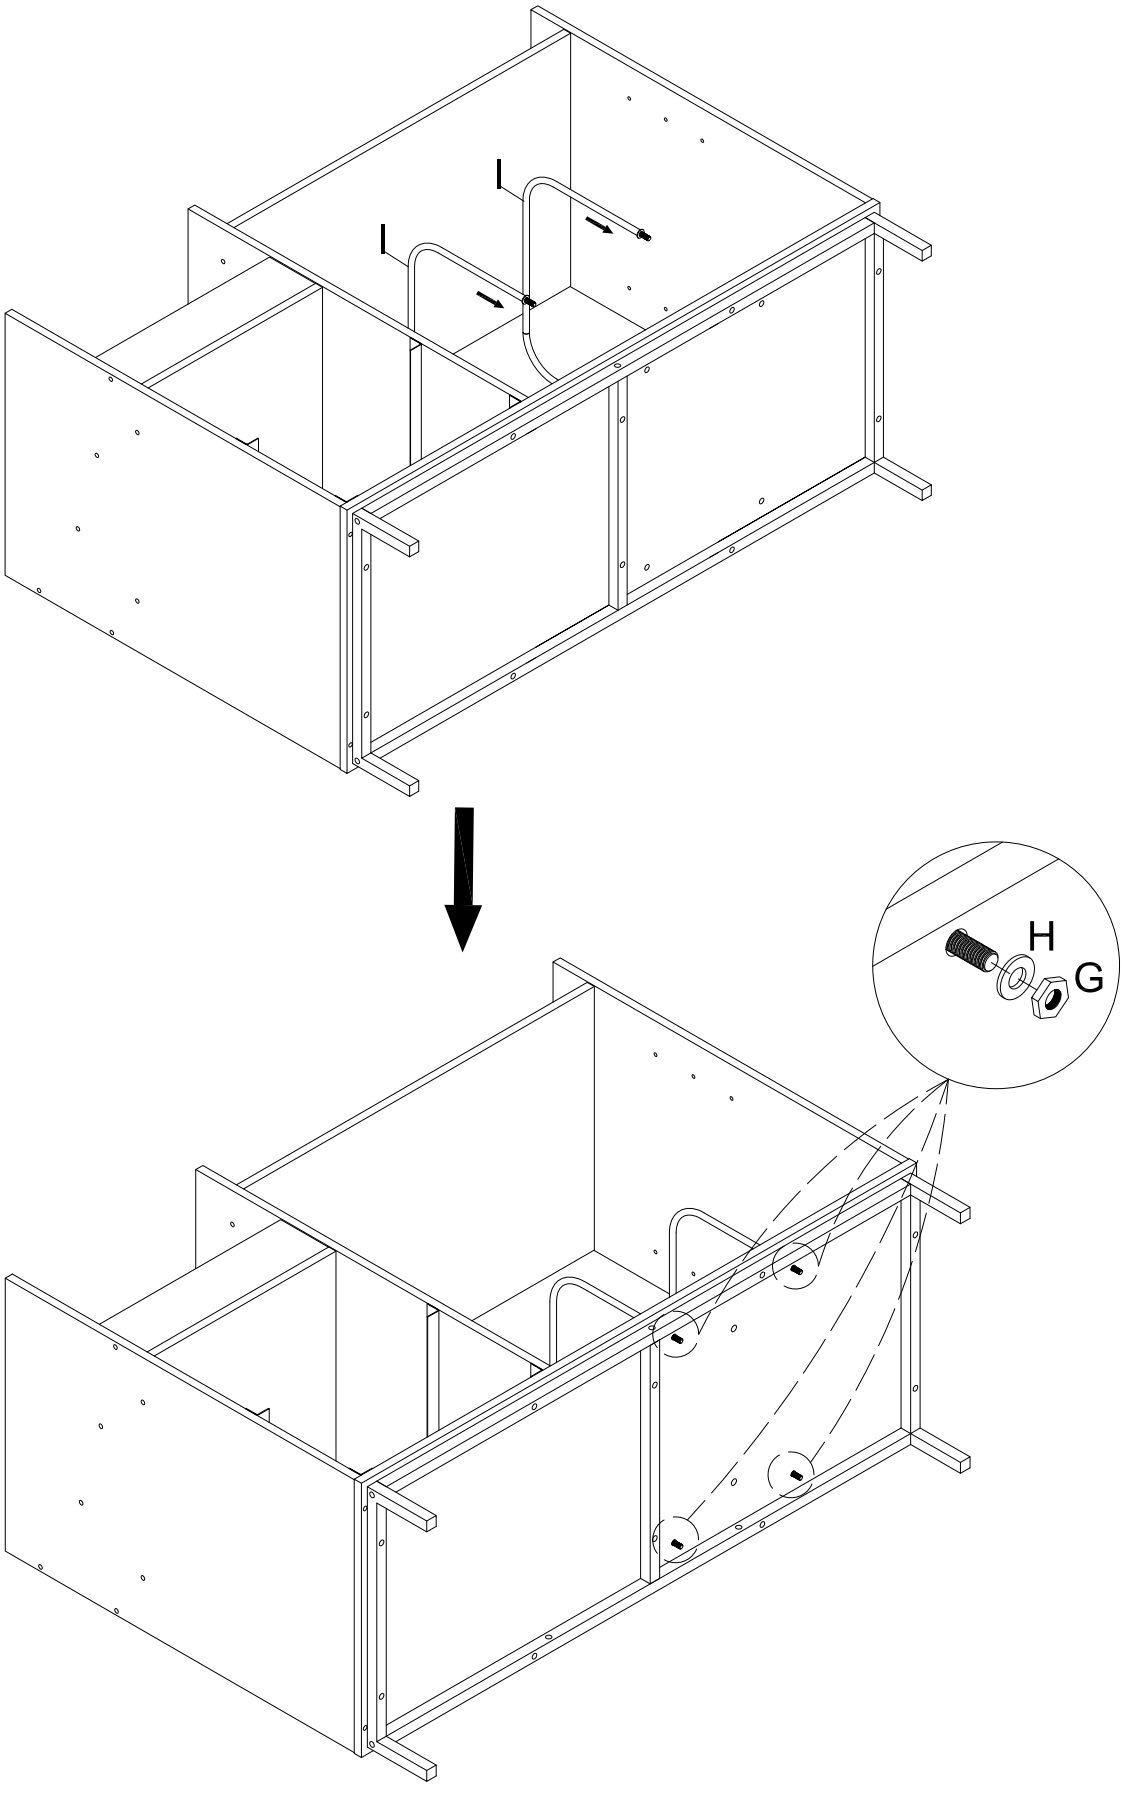


| | |
|---|---|
| Qx4 | Rx4 |

15

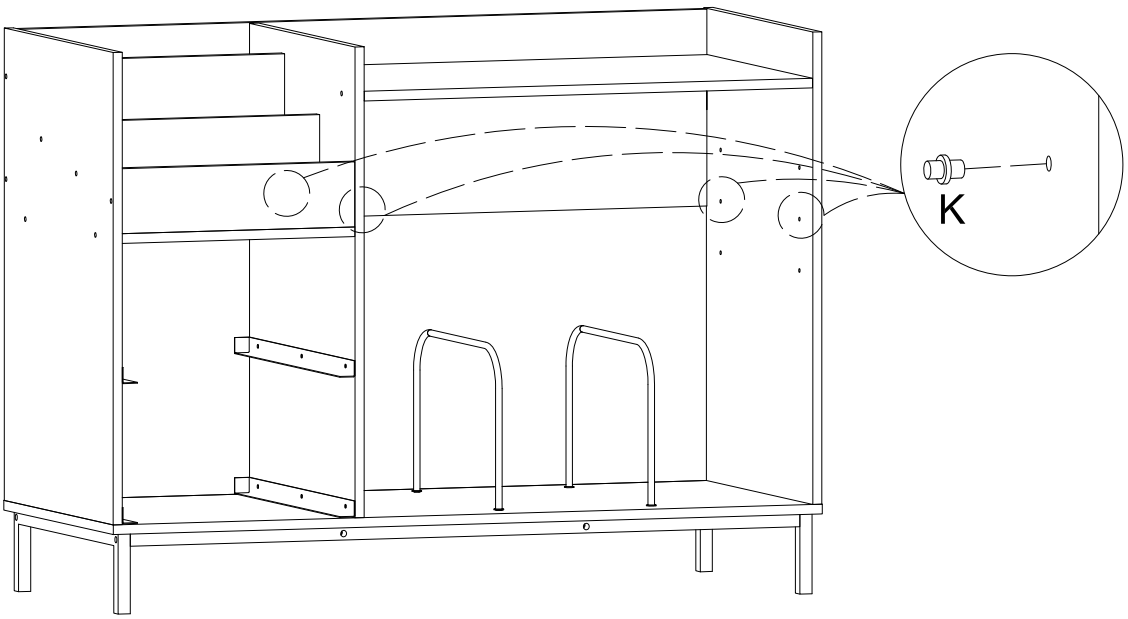
Insert two iron wires into the board and secure them with four nuts and padding .

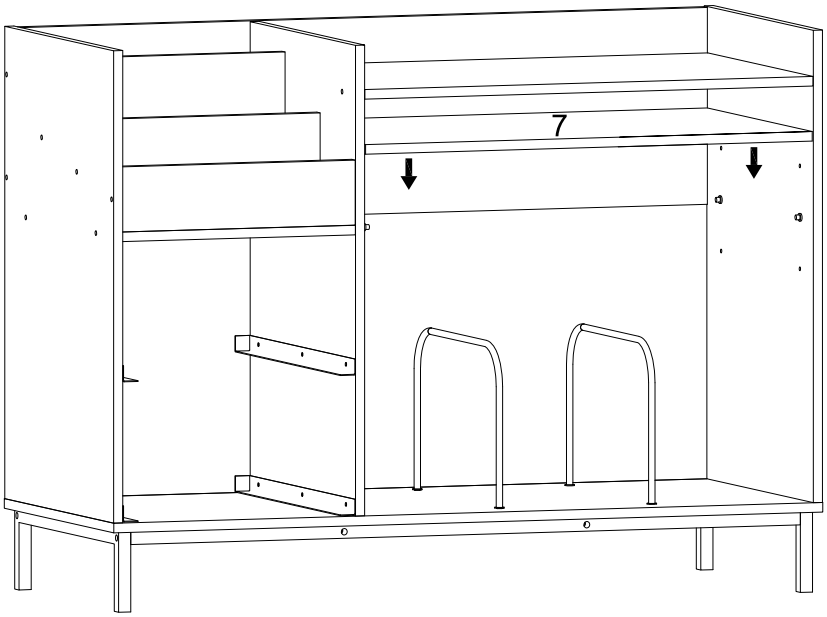



| | | |
|---|---|---|
| Ix2 | Hx4 | Gx4 |


16

Insert the laminated board holder into the board and place the laminated board on the laminated board holder.



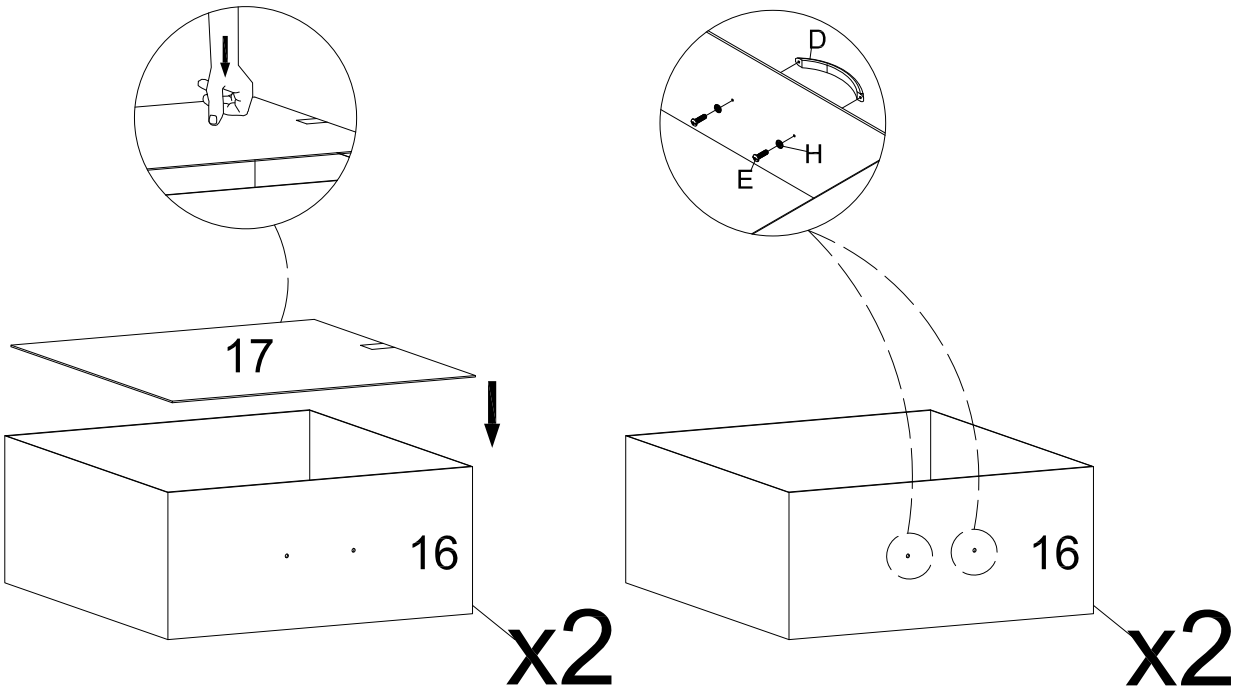




Kx4



## 17

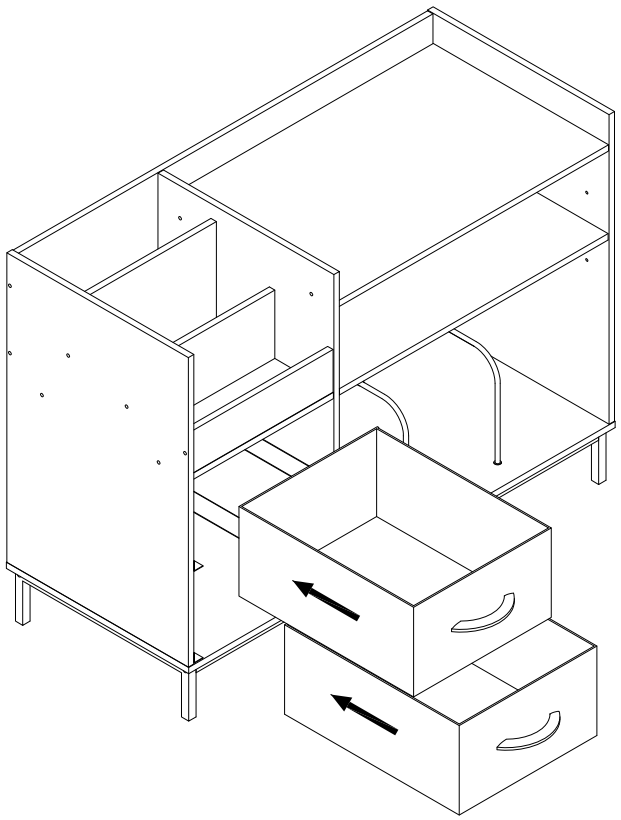
Pull two cloths together, place the padding inside and lock the handle with four nuts and padding.




| | | |
|---|---|---|
| Dx2 | Ex4 | Hx4 |

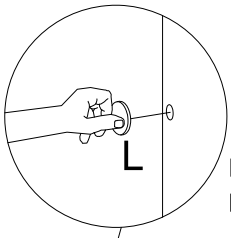
## 18

Put the fabric drawer into the drawer holder.

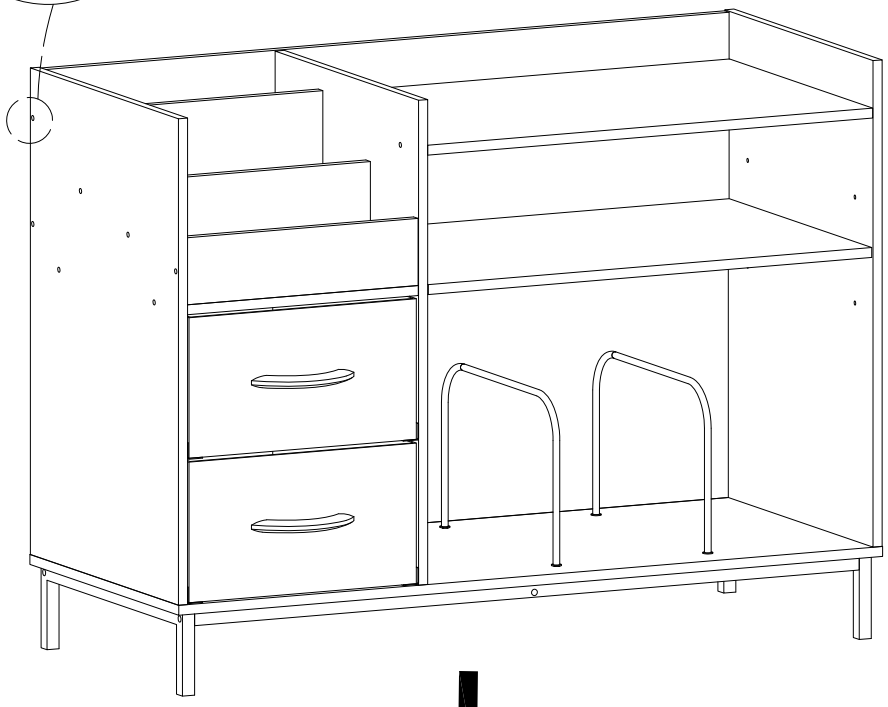


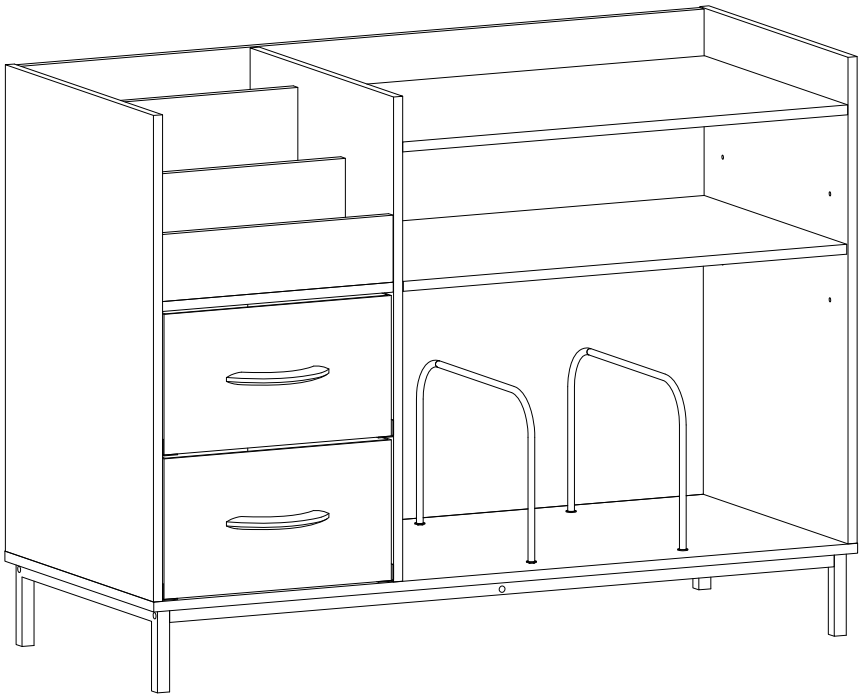
19

Attach visible holes with hole stickers.




Hole position is hidden by
pasting a hole sticker !





Lx30

