

installation instructions

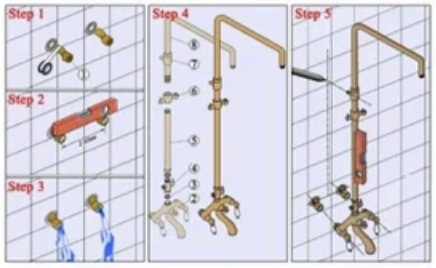

① Brass Adapter
② Faucet body
③ Washers
④ Diverter
⑤ Shower bar
⑥ Hand shower holder
⑦ Shower bar bracket
⑧ Shower bar

Step 1:Connect the brass adapter provided to water supply line.
Step 2:Adjust lever and distance to fit faucet body.
Step 3:Turn water valve on for a while to let the dust and impurities out.
Step 4:Assemble the shower set.
Step 5:Place pre-assembled shower in the wall to find proper position and then mark the mounting hole need to be drilled.

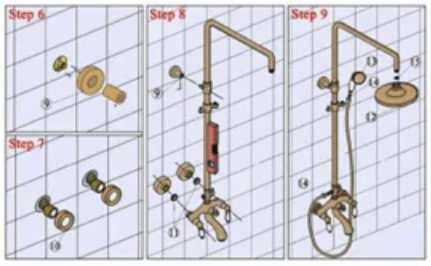

⑨ Mounting base
⑩ Decoration cover
⑪ Washers
⑫ Rain shower head
⑬ Handheld shower
⑭ Washers
⑮ Washers

Step 6:Drill a hole for the upper part shower bar bracket, screw it.
Step 7:Place the decoration cover to the brass adapters.
Step 8:Install the pre-assembled shower to the connections.
Step 9:Connect shower hose, handheld shower and rain shower head.