BRAND STORY & LIST OF NO-DRILL CURTAIN RODS

Size		18-28"	18-45"	18-60"	36-72"	36-88"
Fixed rod A		1	1	1	1	1
Fixed rod B		N/A	1	1	1	1
Fixed rod M		N/A	N/A	1	2	3
Adjustable rod C		1	1	1	1	1
Finial		2	2	2	2	2
Bracket		2	2	3	3	3
Double-sided tape		2	2	3	3	3
Screw/Anchor		2	2	3	3	3
Micro no-trace security nails		6	6	9	9	9

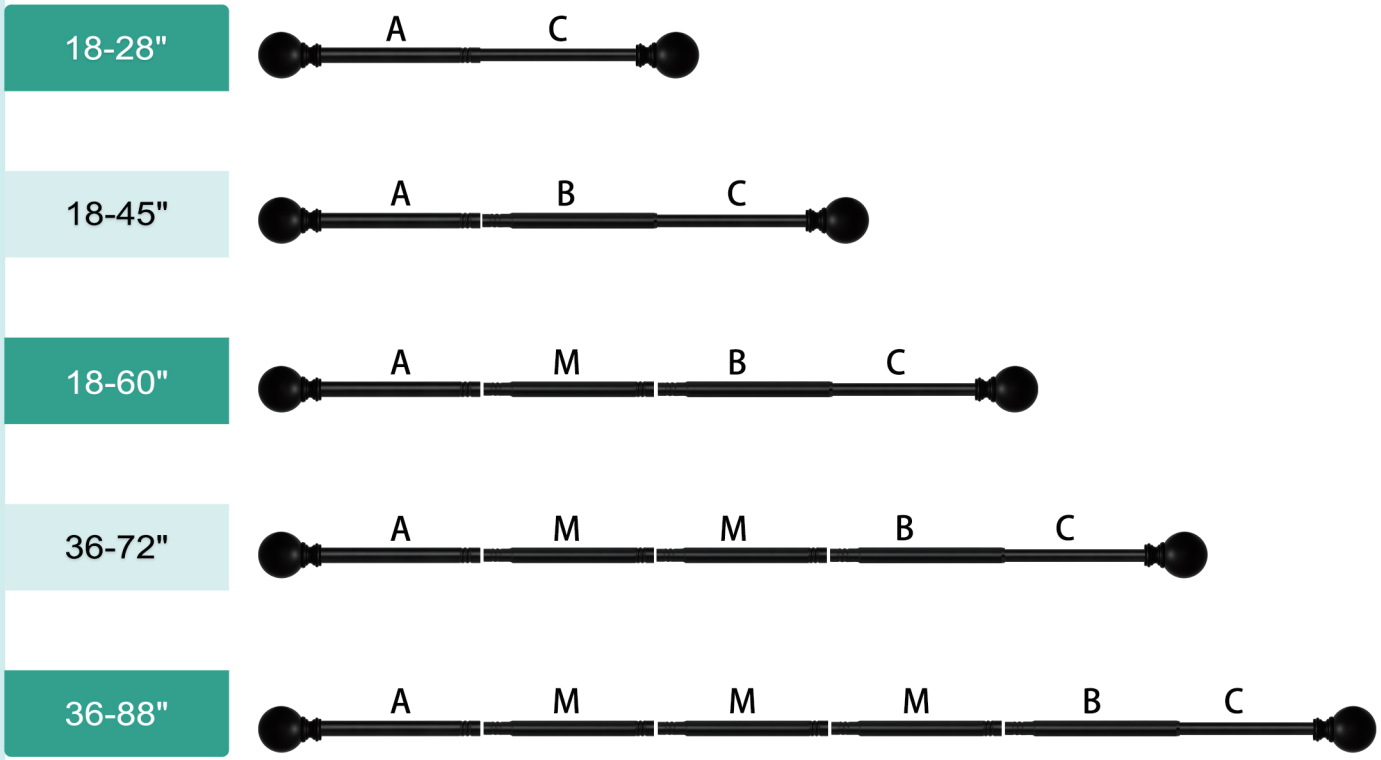

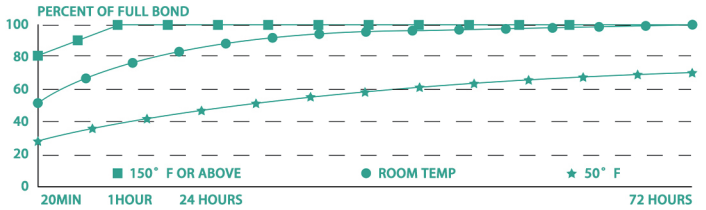

APPROXIMATE TIME TO ACHIEVE ULTIMATE BOND STRENGTH:
• 50% after 20 minutes • 90% after 24 hours • 100% after 72 hours
Bond strength may be achieved more quickly and, in some cases, enhanced by exposing the bond to elevated temperatures (e.g., 150° F / 66° C for 1 hour).
BOND STRENGTH BUILD-UP VS. TIME

* Picture for reference only.
Actual product style and color shall prevail upon purchase

CHOOSE THE RIGHT SIZE AND FROM A VARIETY OF INSTALLATION OPTIONS

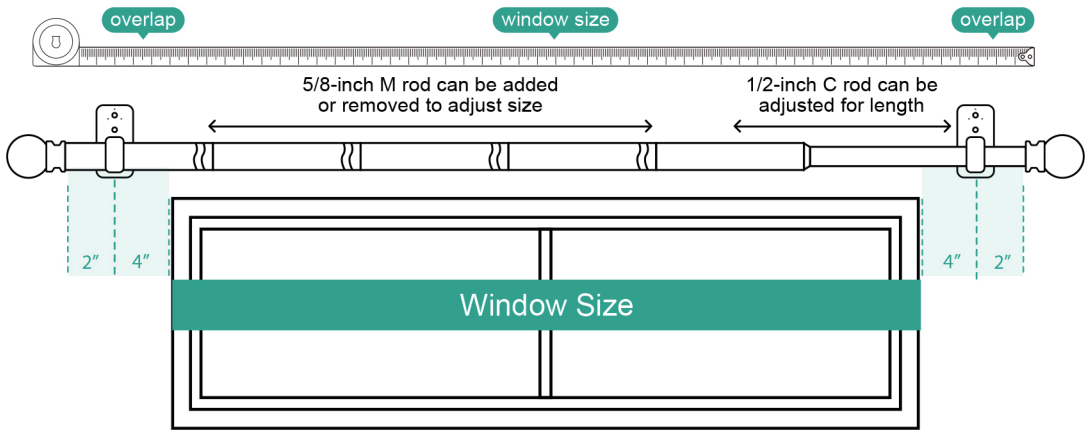

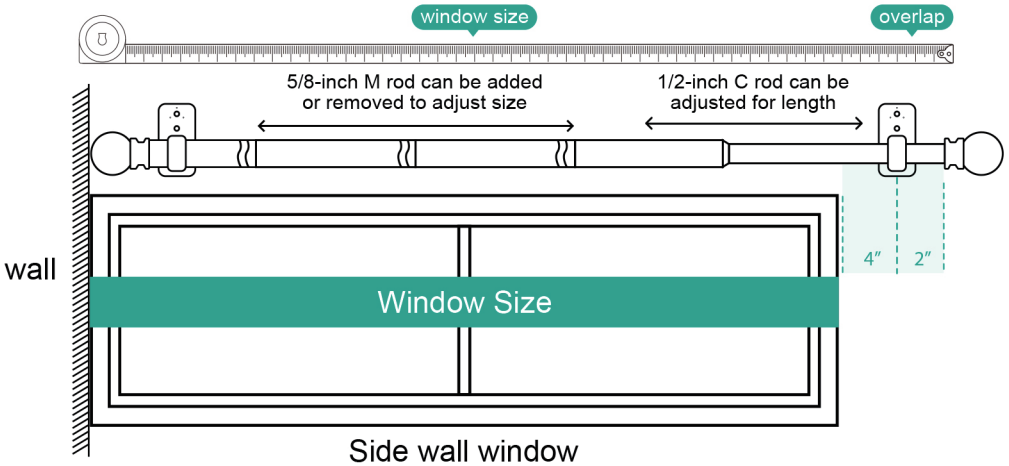

Side wall window

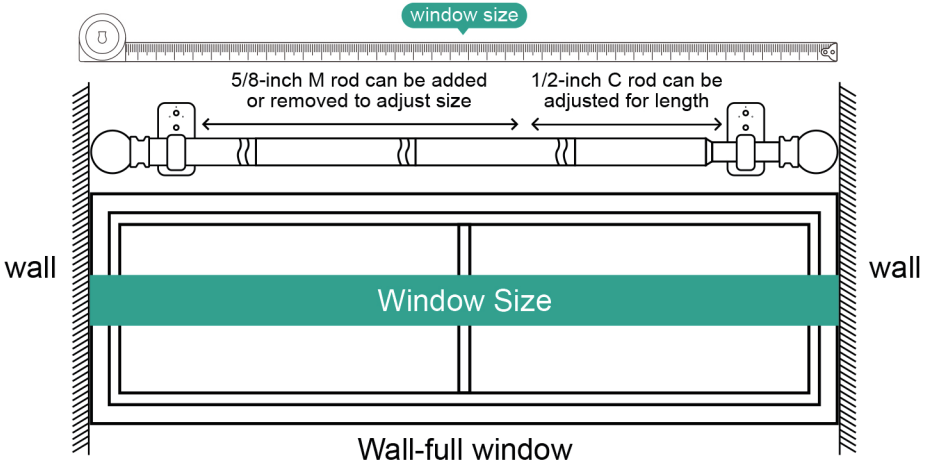

Wall-full window

Wall Screw Installation (for Rough or Delicate Surfaces):

30lbs





Adhesive Installation (for Smooth & Solid Surfaces):

20lbs



Adhesive only (press firmly for 30 sec)
or Adhesive+Nail (tap nail in for extra strength).



EASY TO INSTALL

1

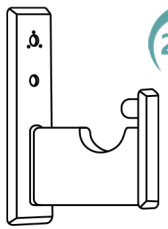

Determine where the bracket is to be installed and mark the hole positions

2

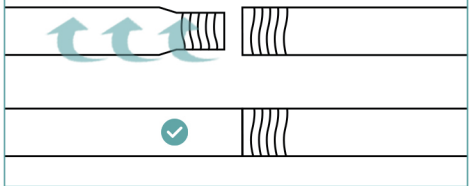

Rotating connection A rod, M rod, and B rod(18-28"not include B&M rod; 32-45" not include M rod)

3

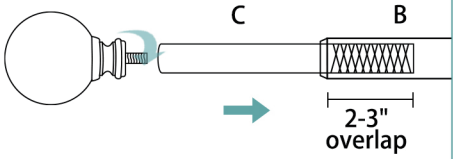

Finials into ends of A-rod and C-rod. Insert the C rod into the B rod, keeping a 2-3"overlap.

4

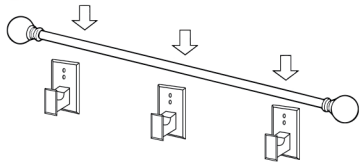

Place installed curtain rod on the bracket to complete installation.(Over 60" curtain rods require center bracket)