
domi
outdoor living

14' × 20' Metal Patio Gazebo

ASSEMBLY MANUAL

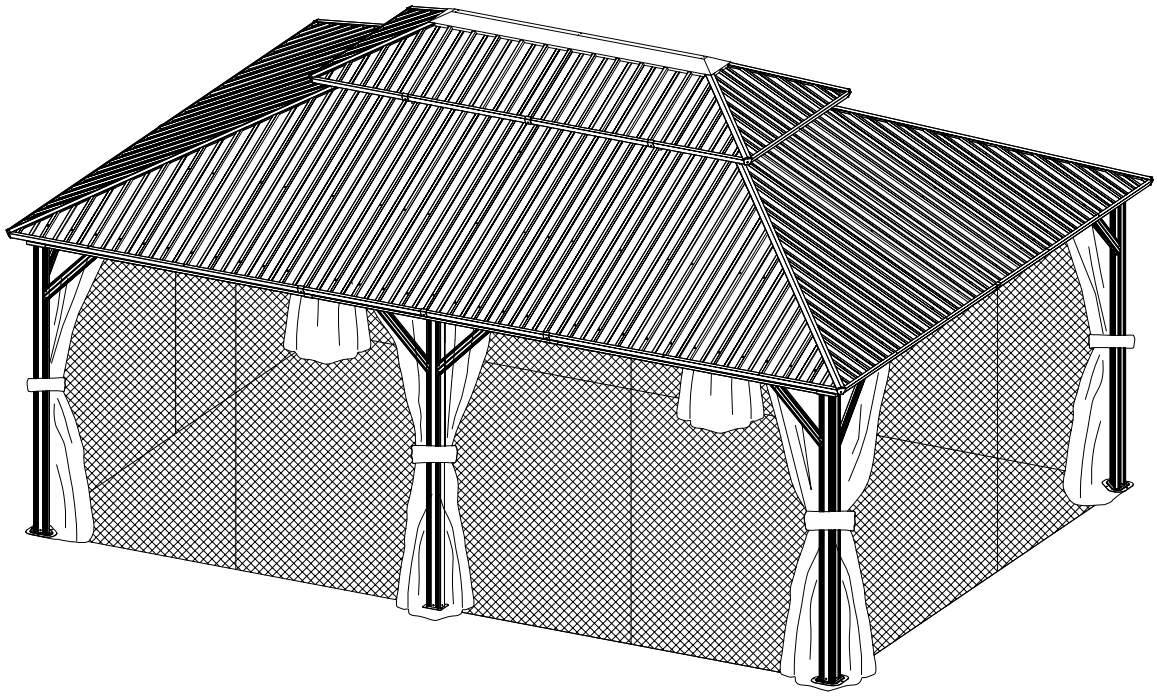

MODEL#: LGMF1808

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2024– 2026 domi LLC. I All Rights Reserved.

Pre-assembly



1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.

Warning & Attention

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;


-It would be much easier to assemble the product with three or more people;


-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

⚠Use bolts to secure the frame to the ground to against the strong wind.

IMPORTANT: A gaze may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.


1

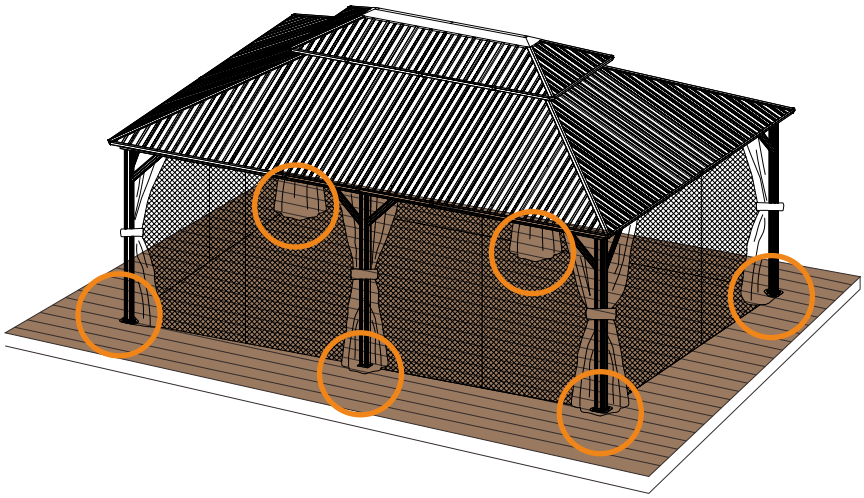





×20


If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the gazebo.

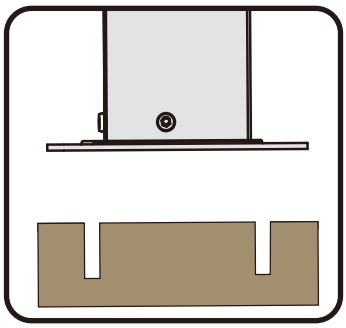

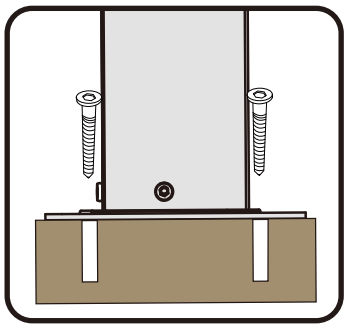

2

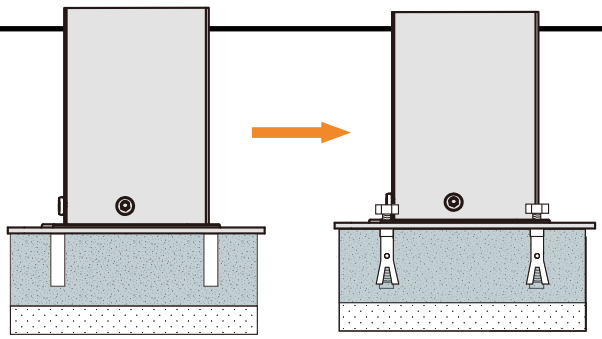


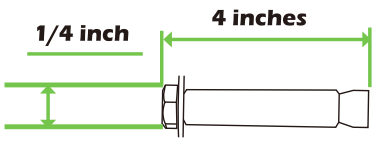


×20

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo

3





Or you can make a concrete footing for gazebo, **15×15×15 inches** is recommended,use expansion bolts to mount the gazebo like (2) shows.




IMPORTANT:
Anchor is not recommended

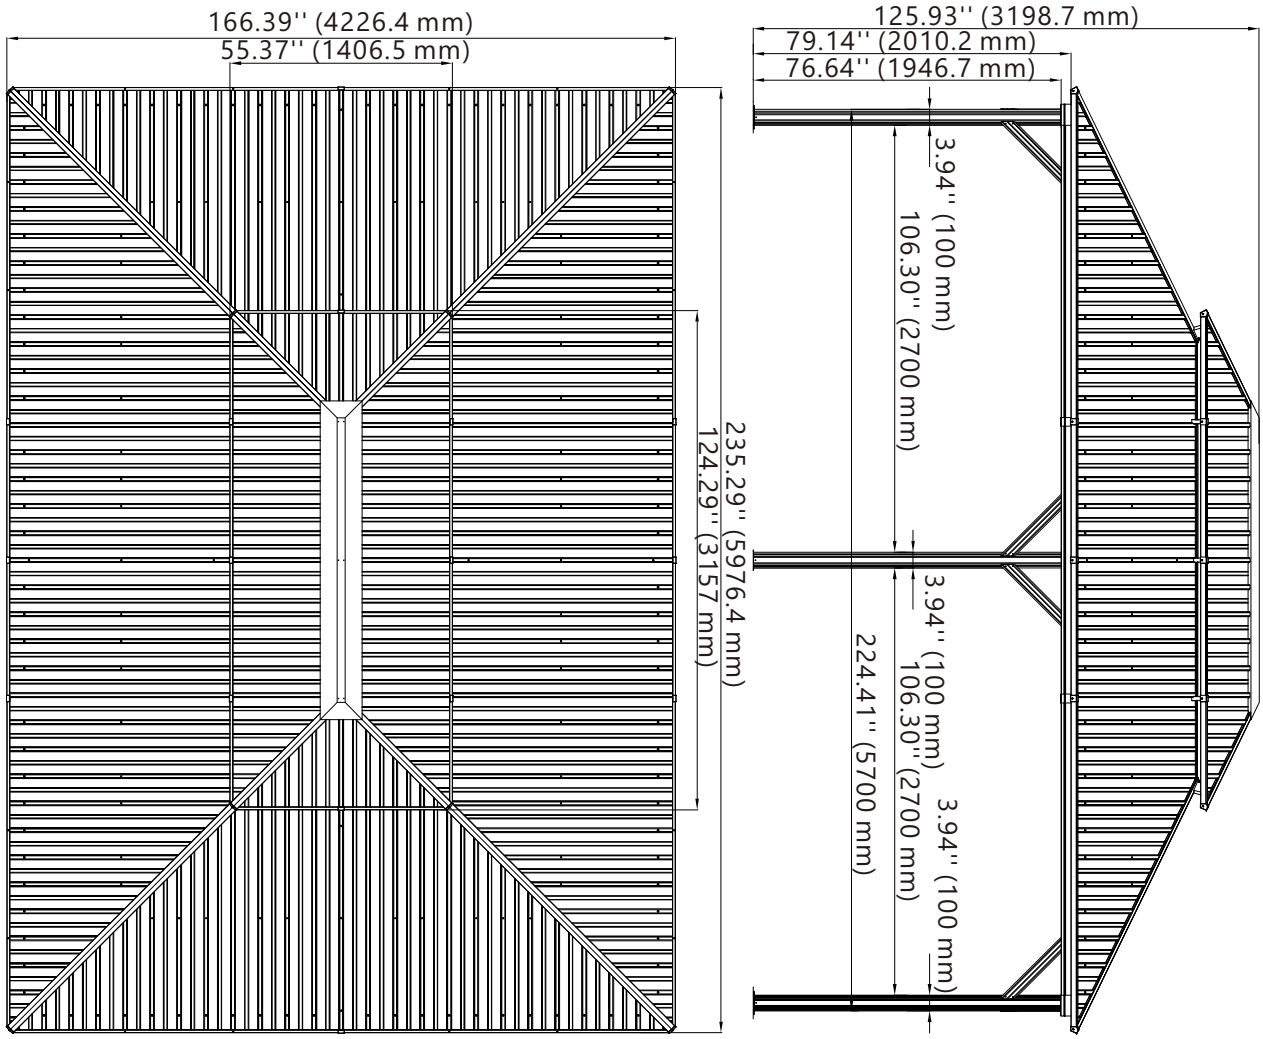


166.39'' (4226.4 mm)
55.37'' (1406.5 mm)
235.29'' (5976.4 mm)
124.29'' (3157 mm)
125.93'' (3198.7 mm)
79.14'' (2010.2 mm)
76.64'' (1946.7 mm)
3.94'' (100 mm)
106.30'' (2700 mm)
3.94'' (100 mm)
106.30'' (2700 mm)
224.41'' (5700 mm)
3.94'' (100 mm)

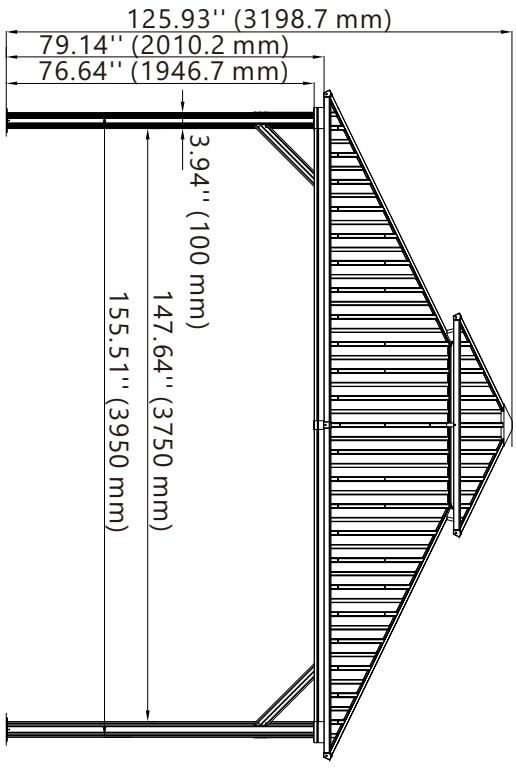
125.93'' (3198.7 mm)
79.14'' (2010.2 mm)
76.64'' (1946.7 mm)
3.94'' (100 mm)
147.64'' (3750 mm)
155.51'' (3950 mm)

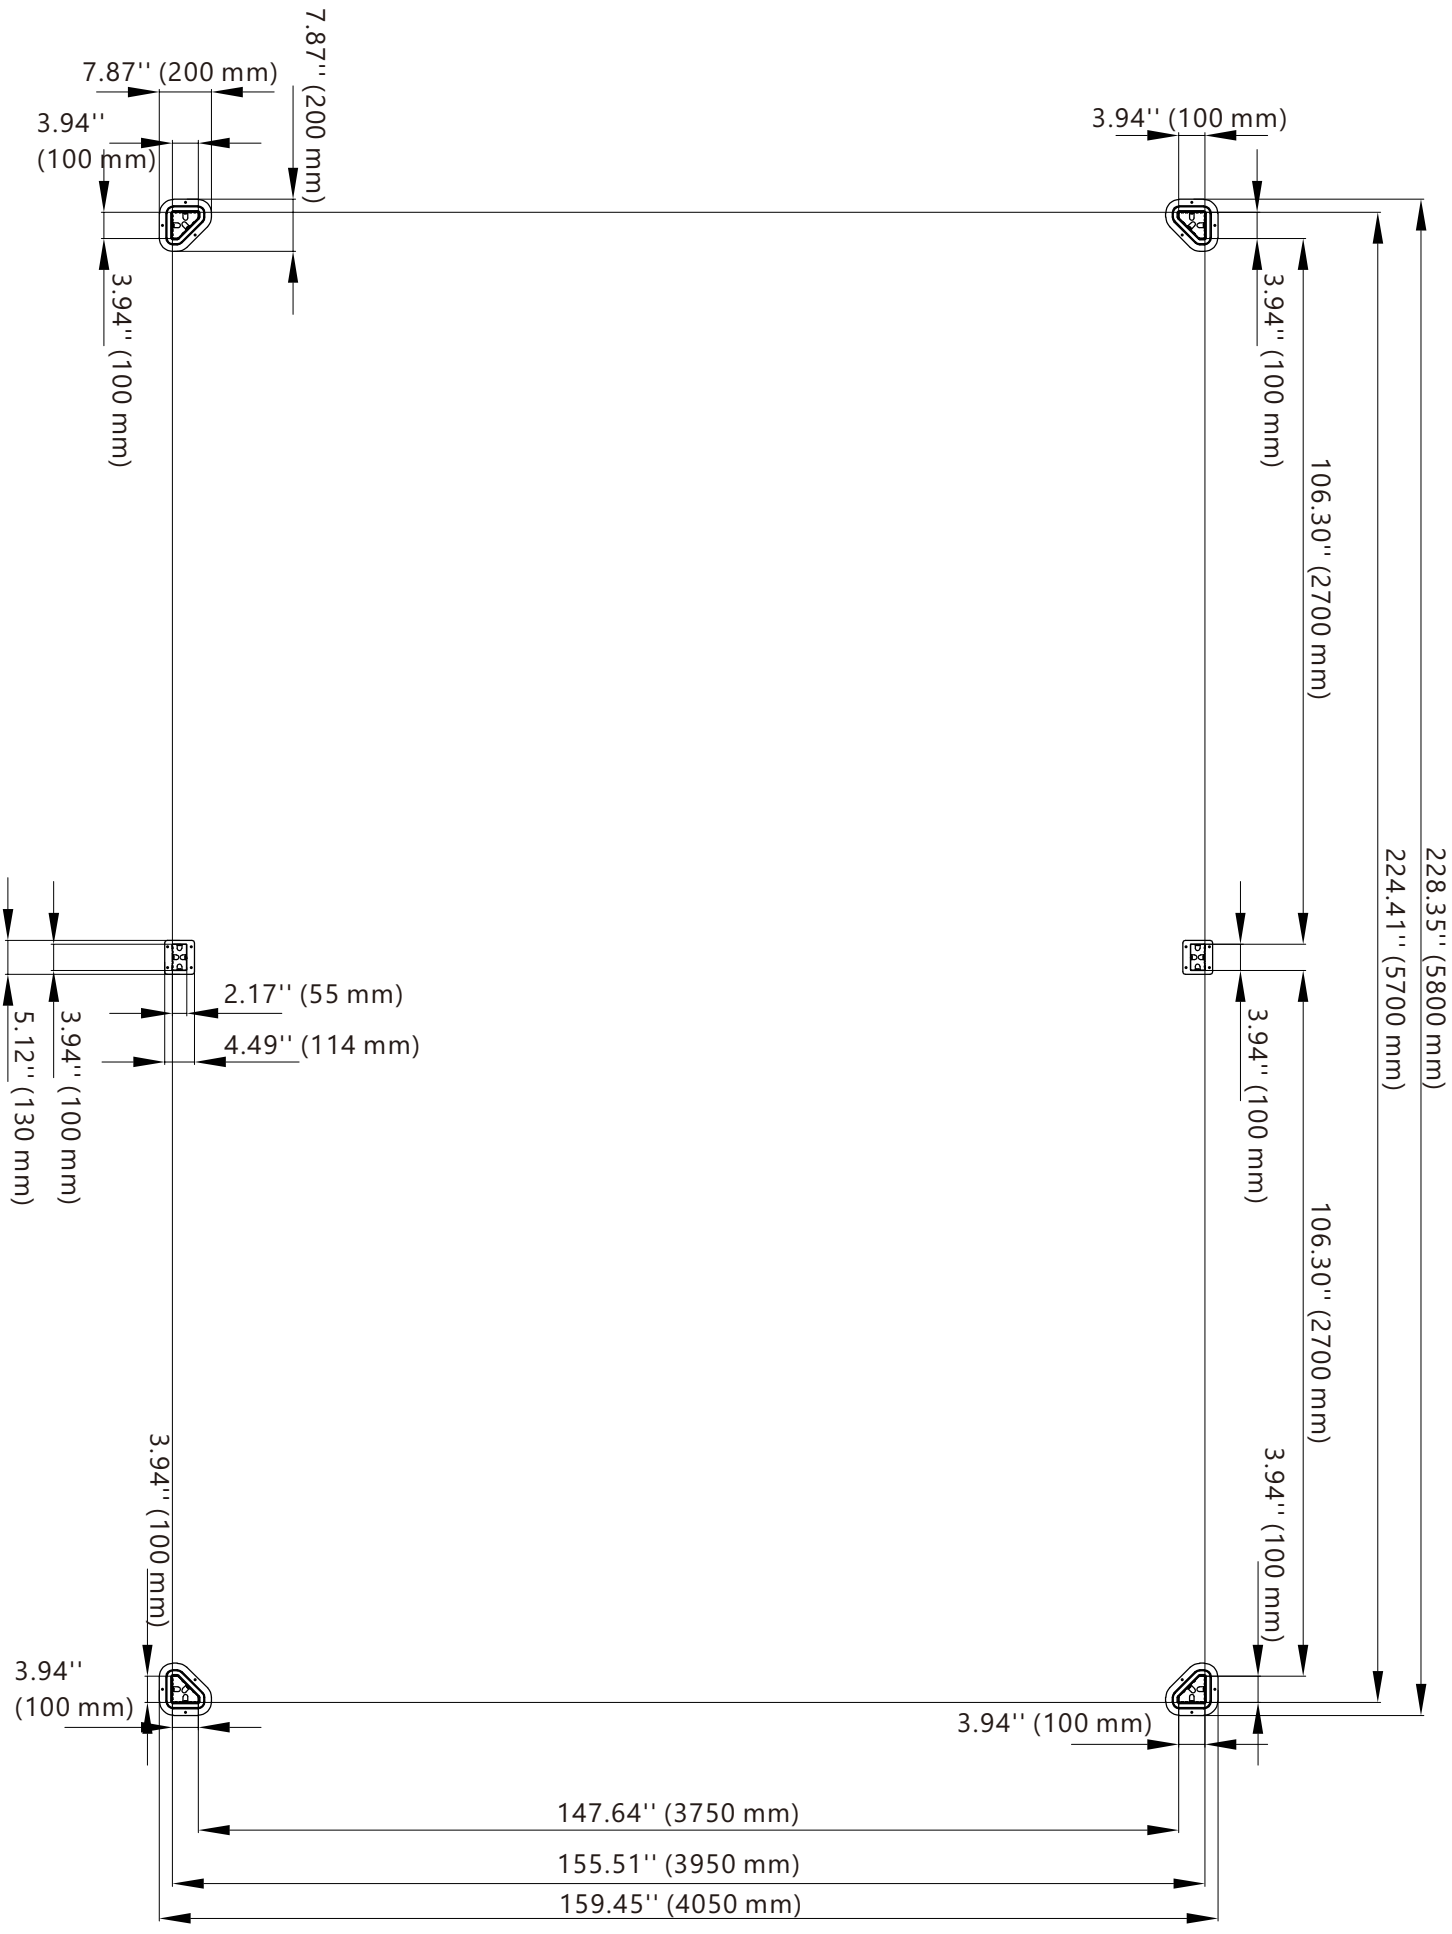
7.87'' (200 mm)
7.87'' (200 mm)
3.94''
(100 mm)
3.94'' (100 mm)
3.94'' (100 mm)
3.94'' (100 mm)
106.30'' (2700 mm)
228.35'' (5800 mm)
224.41'' (5700 mm)
2.17'' (55 mm)
4.49'' (114 mm)
5.12'' (130 mm)
3.94'' (100 mm)
3.94'' (100 mm)
106.30'' (2700 mm)
3.94'' (100 mm)
3.94'' (100 mm)
3.94''
(100 mm)
3.94'' (100 mm)
147.64'' (3750 mm)
155.51'' (3950 mm)
159.45'' (4050 mm)



A 4x Post



A1 2x Post




C 2x Beam



C1 2x Beam



D 2x Beam



D1 2x Beam




D2 2x Beam



E 4x Corner Roof Tube




E1 4x Corner Roof Tube Connector




E2 8x Middle Roof Tube




E3 3x Solidifying Bar




E4 2x Solidifying Bar




E5 2x Union Bar




F 4x Solidifying Bar




G 4x Solidifying Bar




G1 2x Solidifying Bar




G2 2x Solidifying Bar




H 2x Finishing Bar




H1 2x Finishing Bar



H2 2x Finishing Bar




H3 4x Finishing Bar



H4 4x Finishing Bar




J 2x Finishing Bar




Finishing Bar

J1 2x




Finishing Bar


J2 2x



J3 4x Finishing Bar




K 2x Finishing Bar




K1 2x Finishing Bar




K2 2x Finishing Bar



K3 2x Finishing Bar




L1 2x Roof Panel

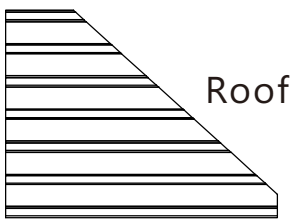


Roof Panel

L2 2x

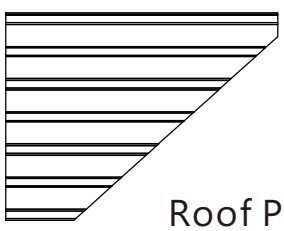


L3 2x Roof Panel




L4 2x Roof Panel




M1 2x Roof Panel

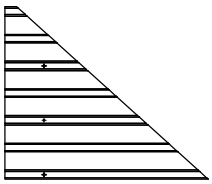


M2 2x Roof Panel

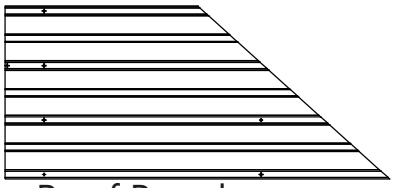


M3 2x Roof Panel

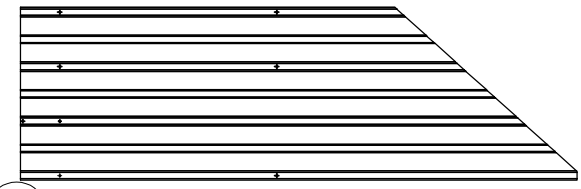


M4 2x Roof Panel

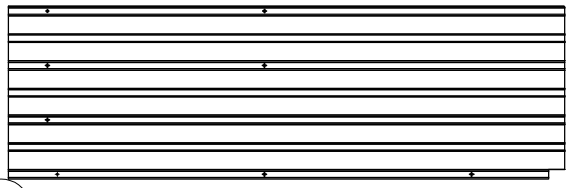


M5 2x Roof Panel

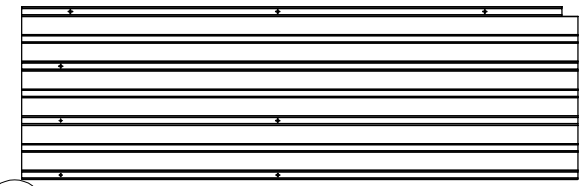


M6 2x Roof Panel

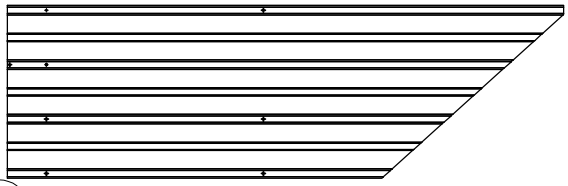

M7 2x Roof Panel

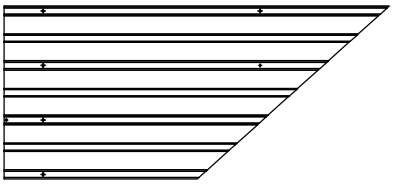


M8 2x Roof Panel

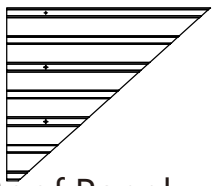

M9 2x Roof Panel




M10 2x Roof Panel

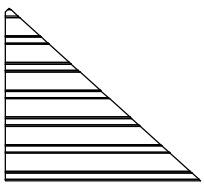


N1 2x Roof Panel




N2 2x Roof Panel

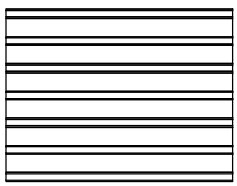


N3 4x Roof Panel

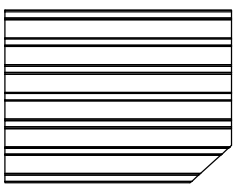


N4 2x Roof Panel

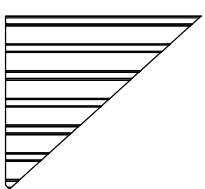


N5 2x Roof Panel

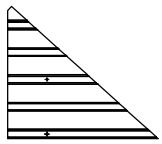


P1 2x Roof Panel

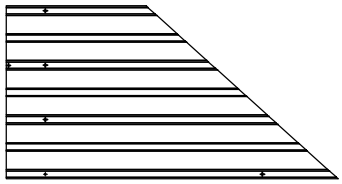


P2 2x Roof Panel

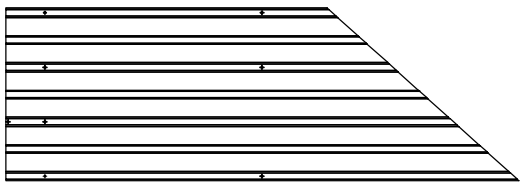


P3 2x Roof Panel

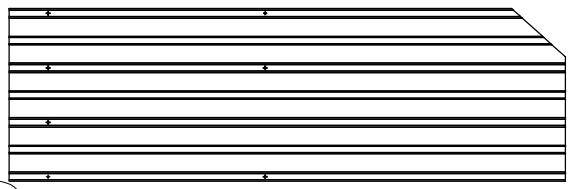


P4 2x Roof Panel

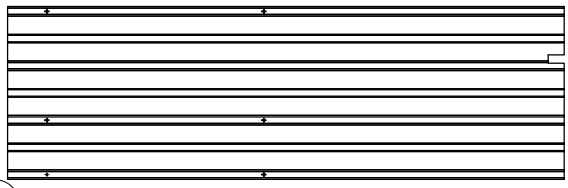


P5 2x Roof Panel

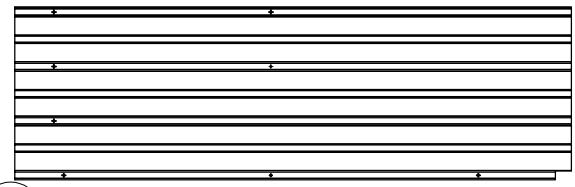


P6 2x Roof Panel

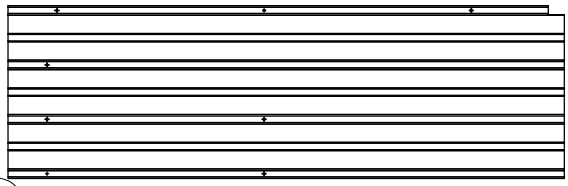


P7 2x Roof Panel

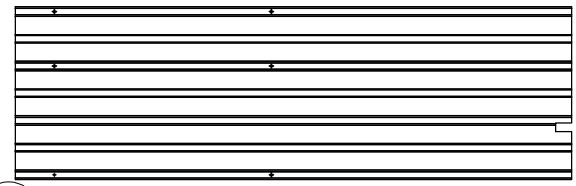


P8 2x Roof Panel

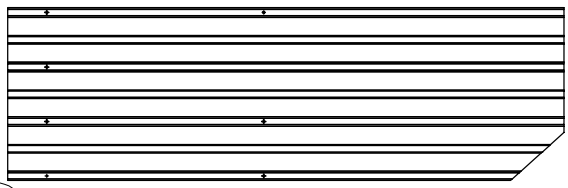


P9 2x Roof Panel

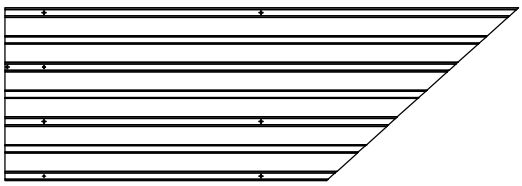


P10 2x Roof Panel

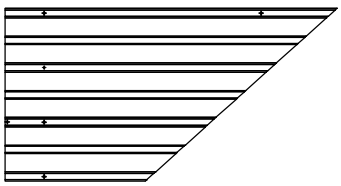


P11 2x Roof Panel

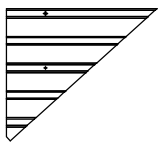


P12 2x Roof Panel



Q 2x Plastic Bar



Q1 4x Plastic Bar




Q2 2x Plastic Bar




T 4x Track




T1 4x Track



T2 2x Track




T3 2x Track




B 4x Base




B1 8x Bracket



B3 2x Base

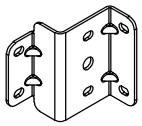


B4 4x Base

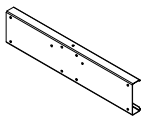


C2 6x Union Bar

Corner Solidifying Bar

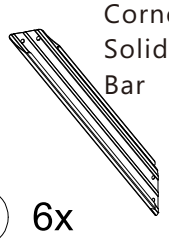


R 6x

Corner Solidifying Bar

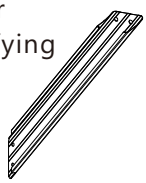


R1 6x

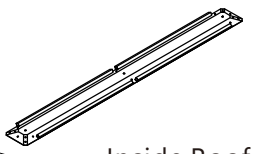


S 1x Inside Roof Cover




S1 1x Inside Roof Cover



S8 3x J-Hook




U 4x Bracket




U1 6x Bracket



U2 4x Bracket




U3 8x Bracket




U4 2x Bracket




V 160x Plastic Hook



W 168x Plastic Spacer



X 6x Joint Cover




X1 4x Corner Cover




X2 14x Finishing End




X3 12x Finishing End



Y 4x Curtains

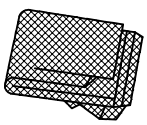


Y1 4x Mosquito Netting




Y2 2x Mosquito Netting



Y3 2x Curtains

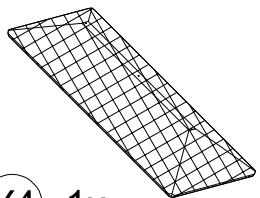


Y4 1x Small Mesh



Plastic Clips

Z 92x



Plastic Clips

Z1 4x



Plastic Clips

Z2 4x




Plastic Clips

Z3 2x



Plastic Clips

Z4 2x

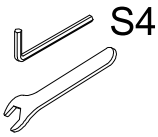

S4

1 1x




ST6.3x18

2 36x



ST5x16

3 32x



M6x35

4 32x



M6

5 172x




M6x10

7 16x



M6x16

8 340x




M6x25

9 11x




M6x28

10 104x




M6x45

11 4x




M6x50

12 52x

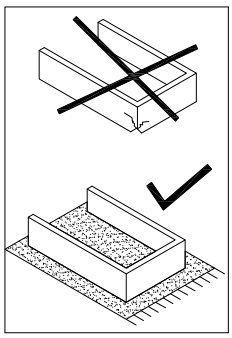



A 4x



B 4x



B1 8x



S4

1 1x




M6x16


8 28x

1

POST ASSEMBLY:

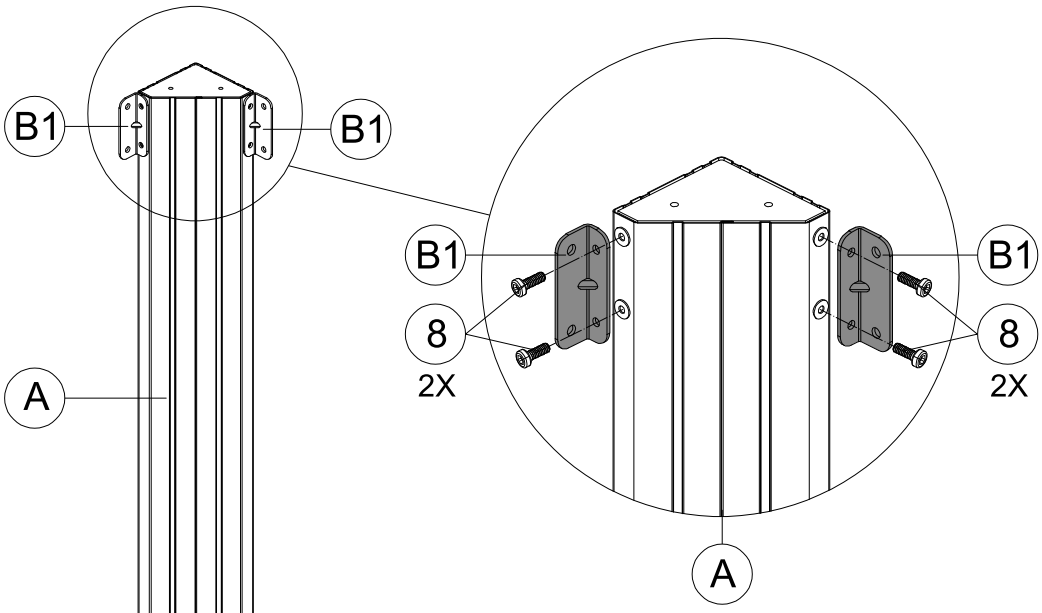

(1) Attach 2 Part #B1 to Part #A with 4 Bolts #8.

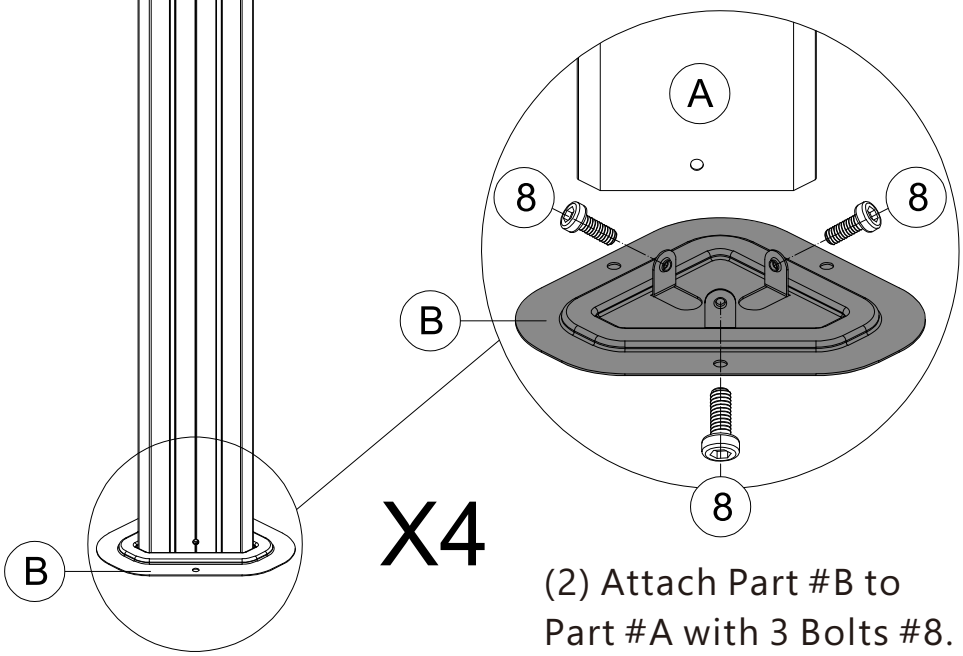


(2) Attach Part #B to Part #A with 3 Bolts #8.


(3) Repeat the above procedures to assemble the other 3 Part #A.



A1 2x

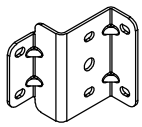

B4 4x



B3 2x




S4


1 1x



M6x16


8 16x

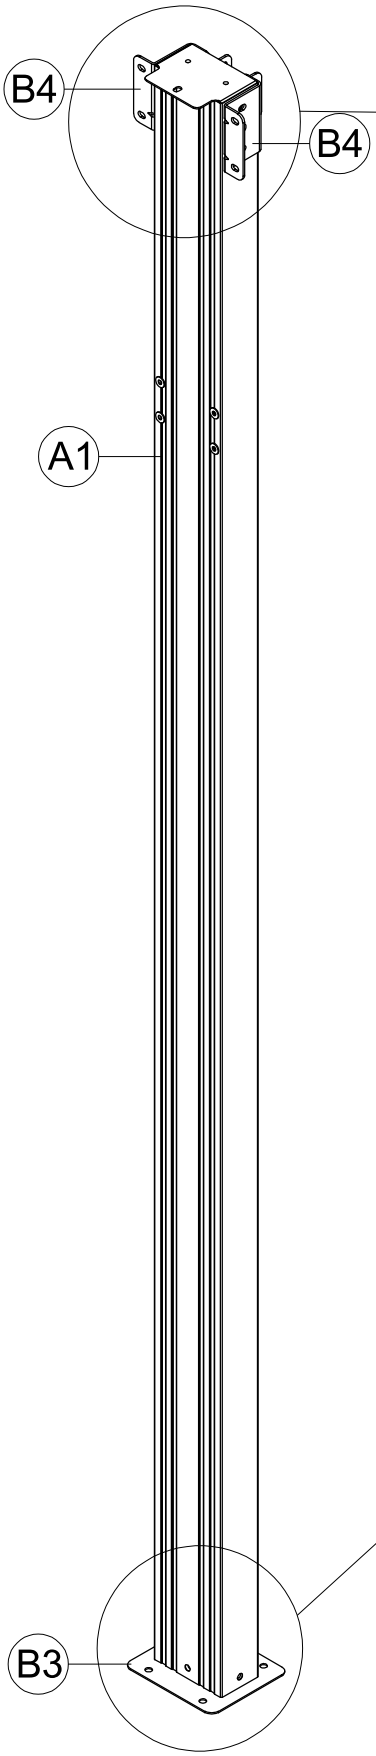

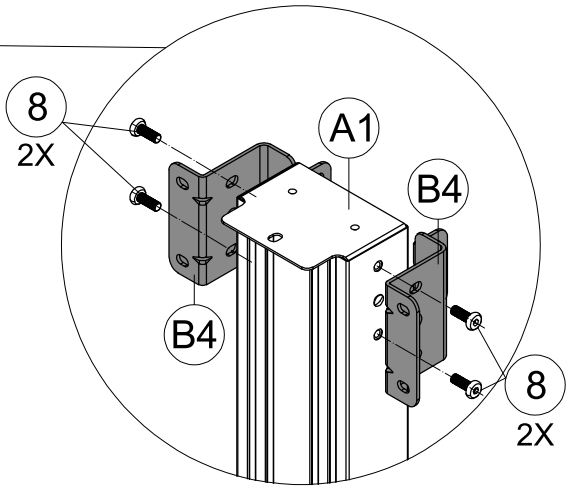


(1) Attach 2 Part #B4 to Part #A1 with 4 Bolts #8.

(2) Attach Part #B3 to Part #A1 with 4 Bolts #8.

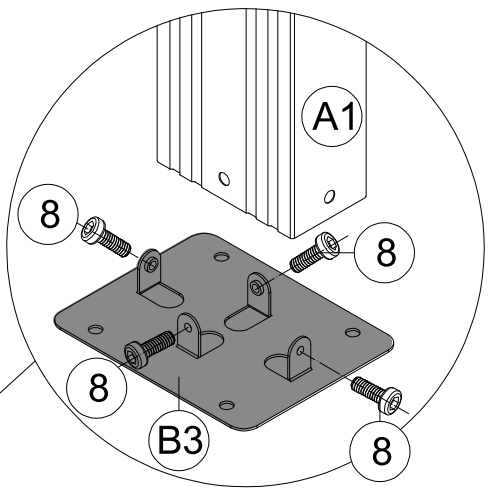


X2


(3) Repeat the above procedures to assemble the other Part #A1.

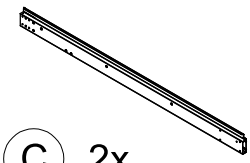

C 2x

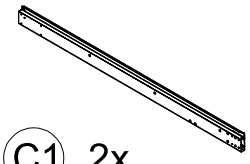

C1 2x



C2 2x



X 2x



1 1x





M6x16

8 20x

3


BEAM ASSEMBLY:

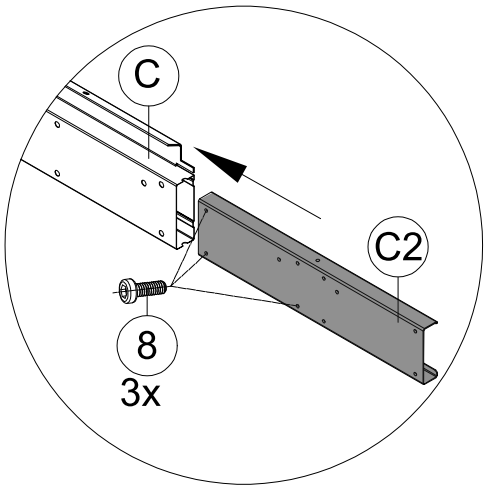


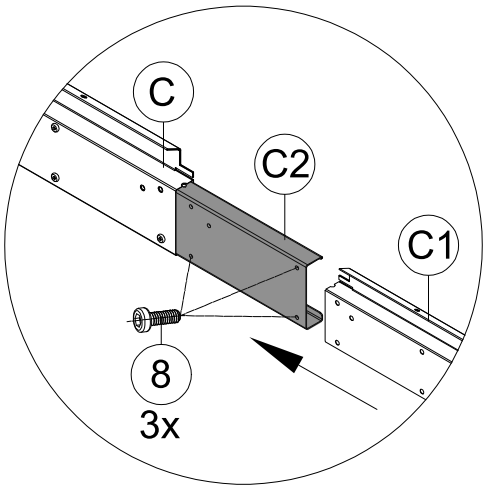

(1) Insert Part #C2 into Part #C and secure with 3 Bolts #8.


(2) Insert the other side of Part #C2 into Part #C1 and secure with 3 Bolts #8.

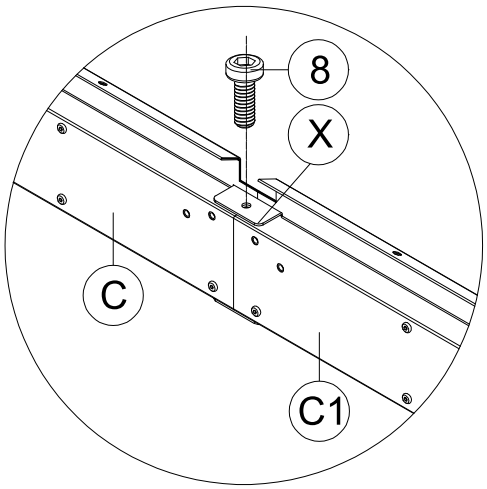

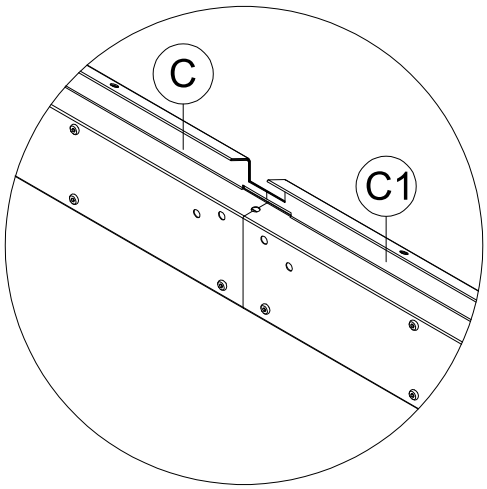

(4) Insert Part #X into the beam and secure with 1 Bolt #8.


(3) Connect Part #C and Part #C1 through Part #C2.

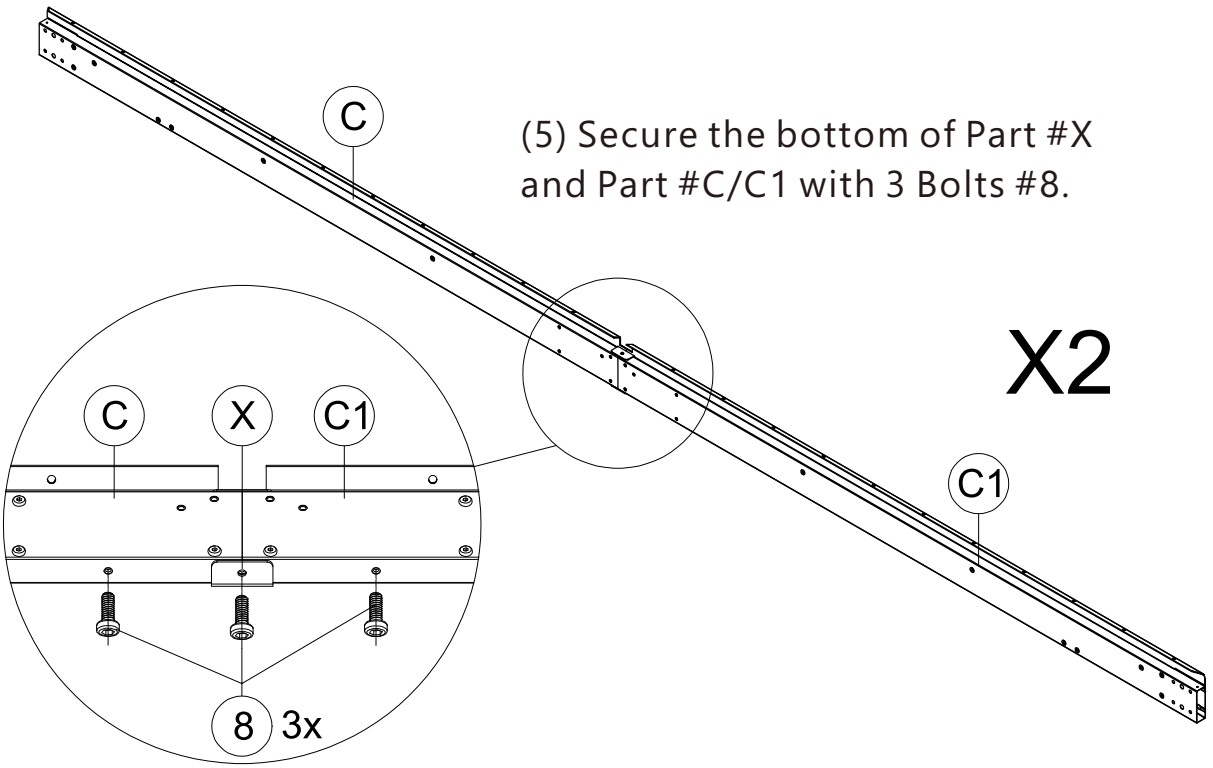


(5) Secure the bottom of Part #X and Part #C/C1 with 3 Bolts #8.

X2


(6) Repeat the above the procedures to assemble the other beam.




C2 4x

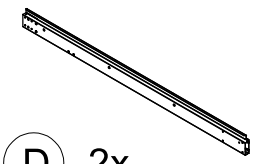

D 2x

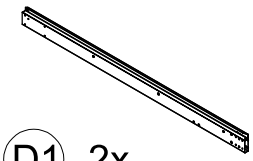

D1 2x

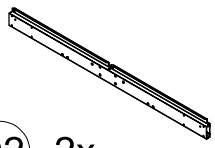

D2 2x



X 4x



S4

1 1x




M6x16


8 40x

4


BEAM ASSEMBLY:

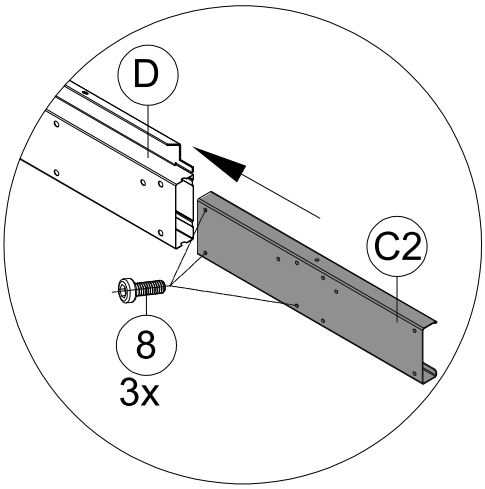


(1) Insert Part #C2 into Part #D and secure with 3 Bolts #8.

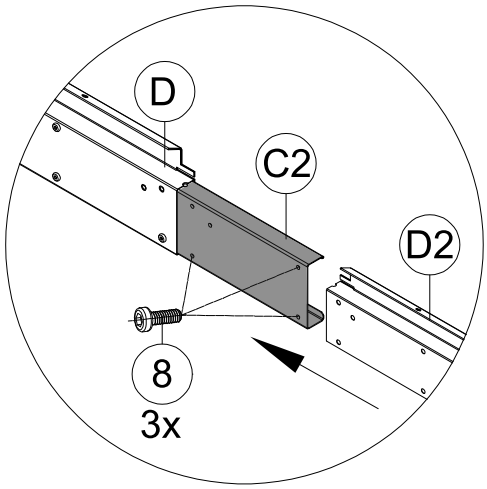


(2) Insert the other side of Part #C2 into Part #D2 and secure with 3 Bolts #8.

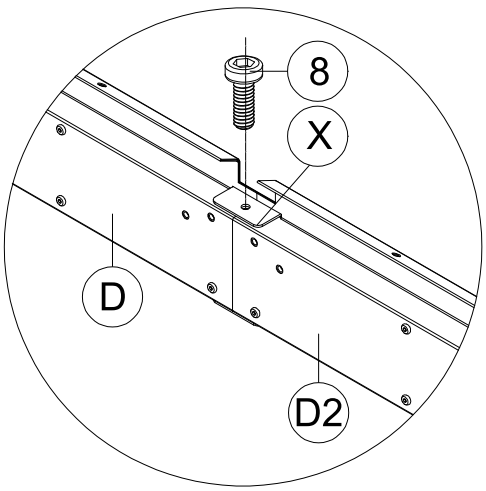

(4) Insert Part #X into the beam and secure with 1 Bolt #8.

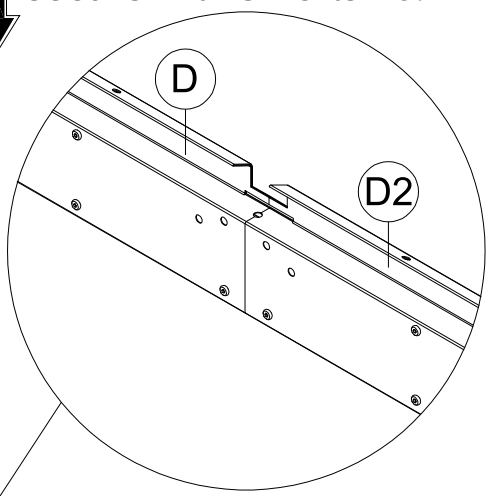


(3) Connect Part #D and Part #D2 through Part #C2.

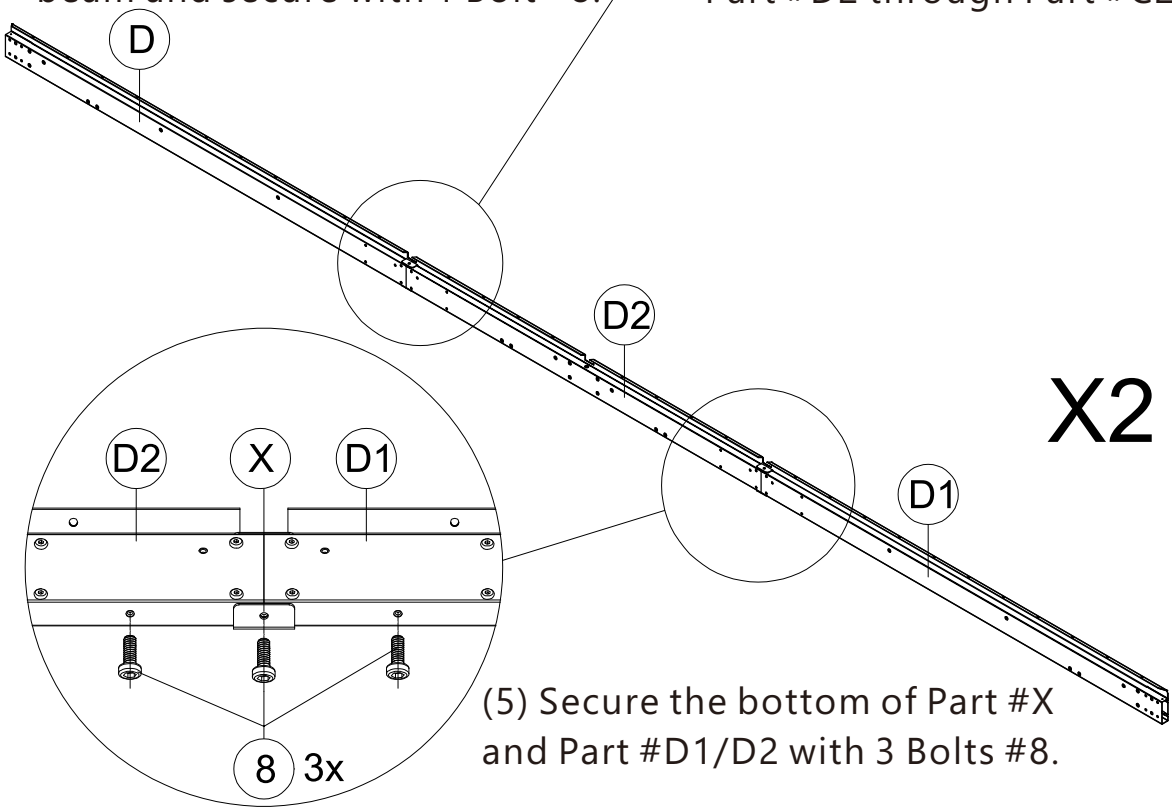


X2

(5) Secure the bottom of Part #X and Part #D1/D2 with 3 Bolts #8.

(6) Repeat the above the procedures to assemble the another beam.

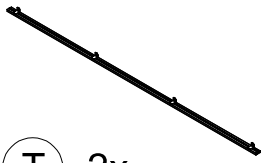

T 2x

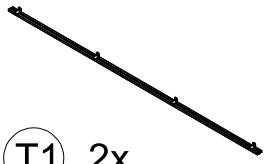


T1 2x



V 64x

TRACK ASSEMBLY:

(1) Slide the plastic hooks to the double-slot track #T & T1 (each slot should slide 8 plastic hooks).

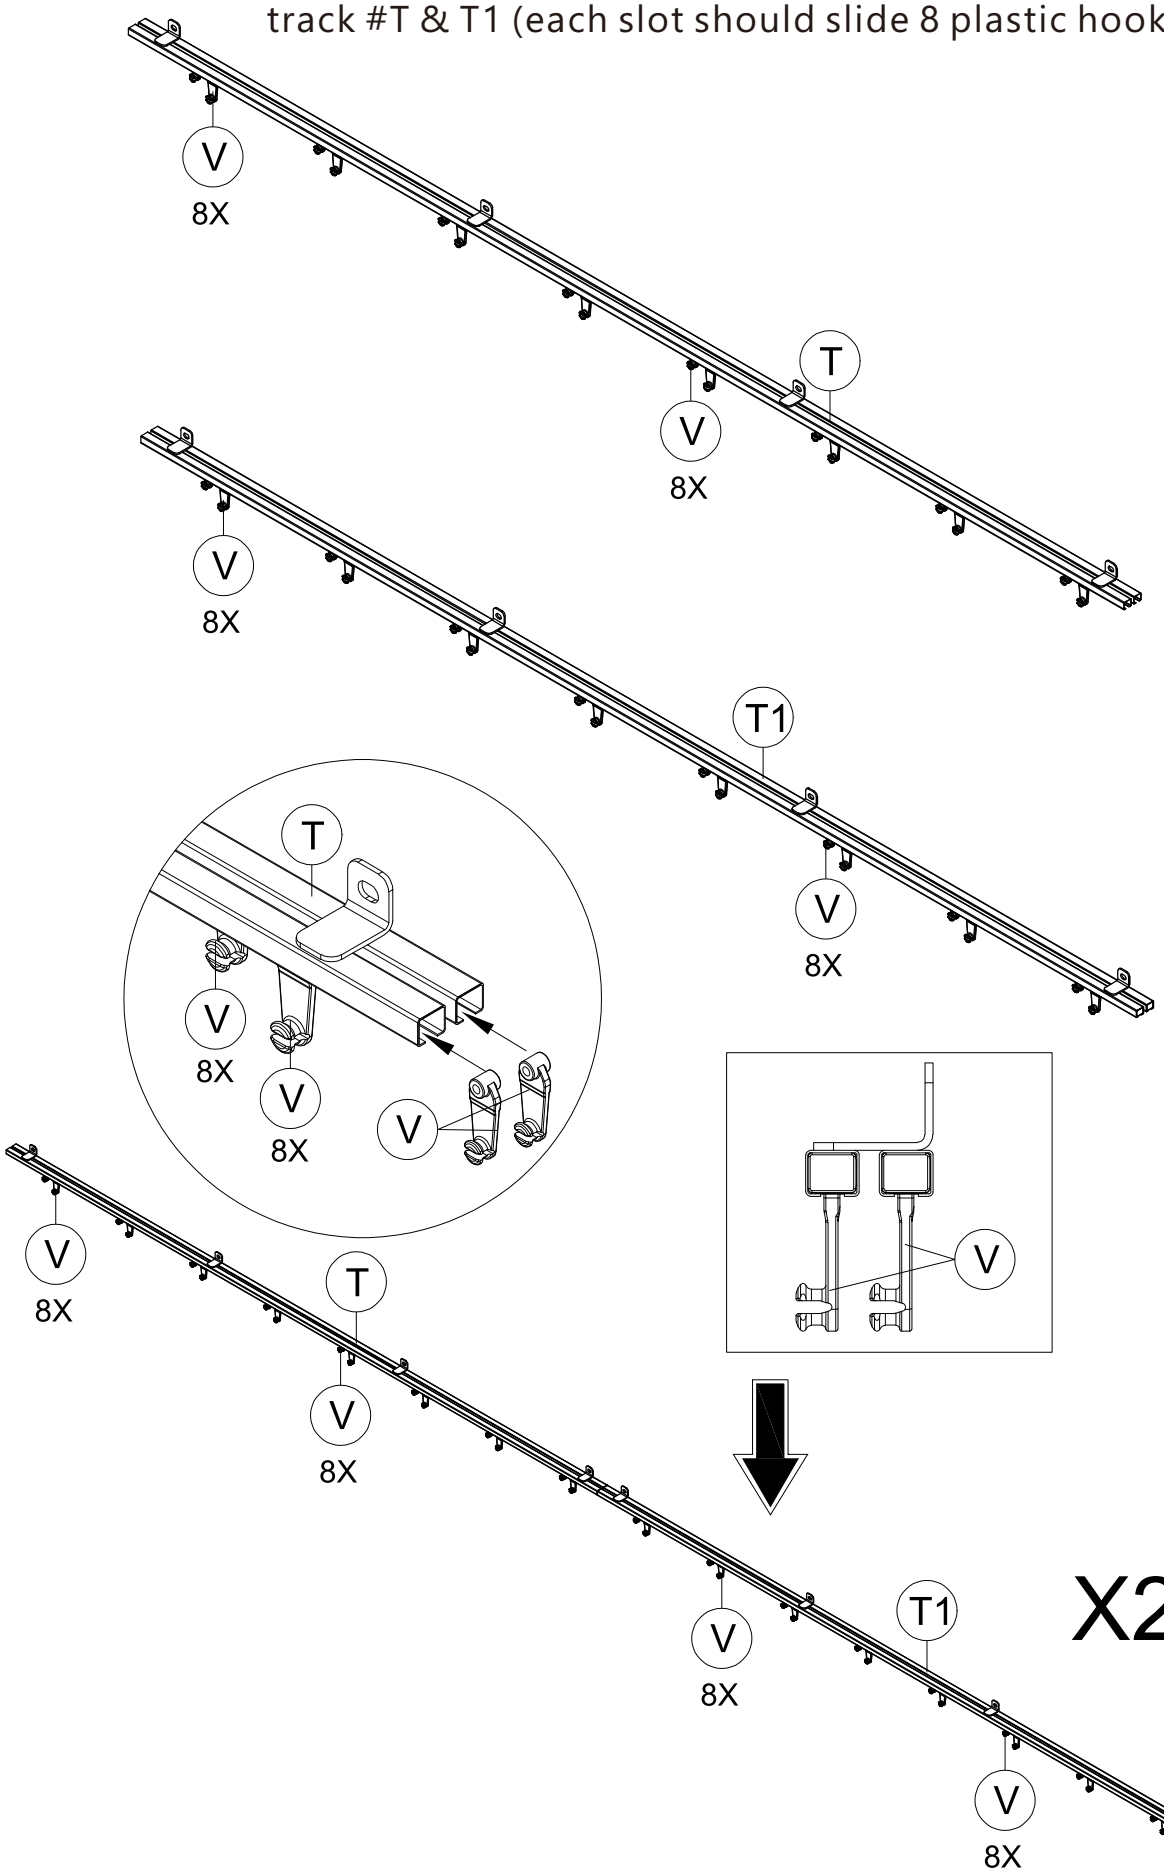

X2

(2) Repeat the above procedures for the other track #T & T1.


T 2x

T2 2x


V 48x

TRACK ASSEMBLY:

(1) Slide the plastic hooks to the double-slot track #T & T2
(#T should slide 7 plastic hooks and #T2 should slide 5 hooks.)

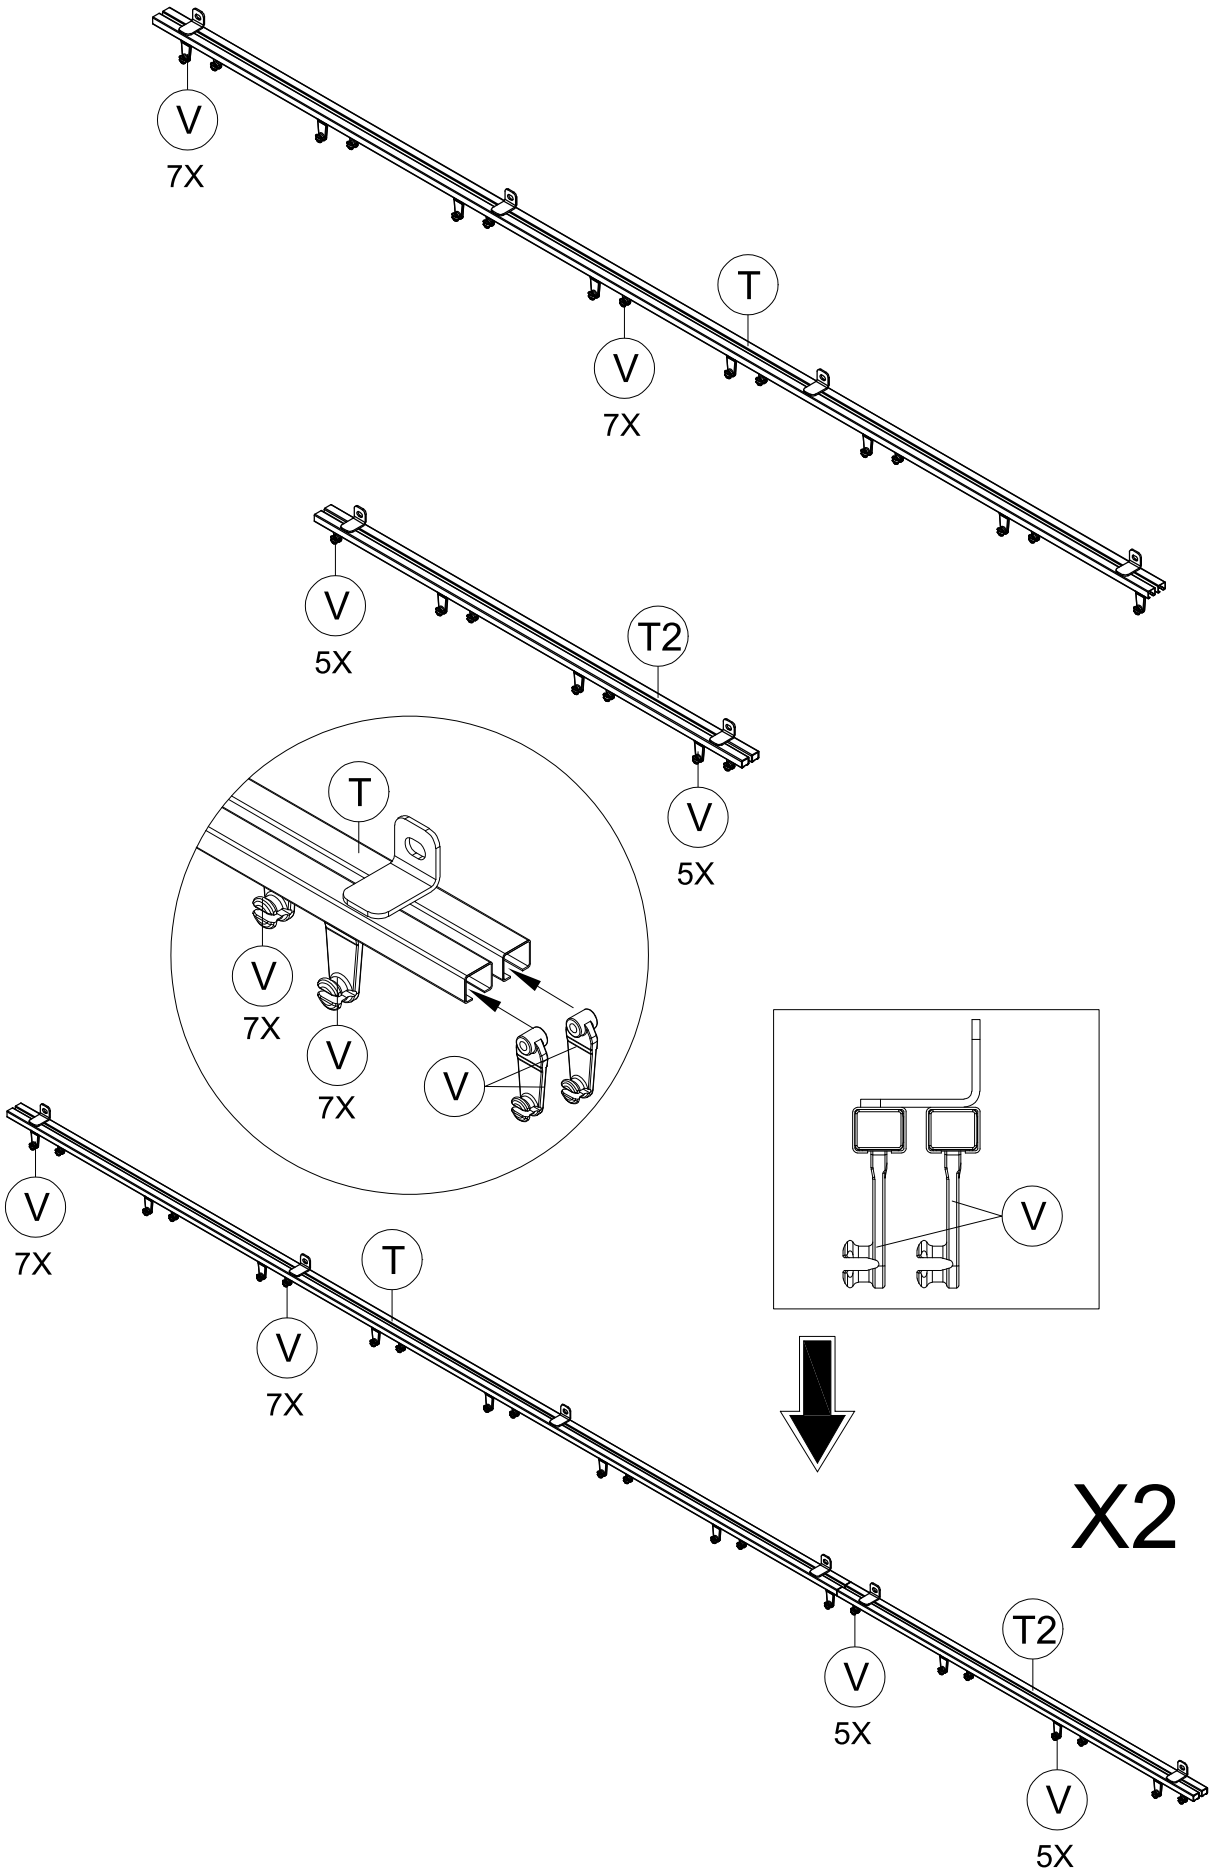

(2) Repeat the above procedures for the other track #T & T2.

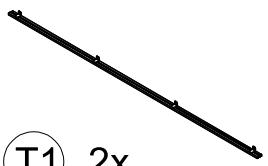

T1 2x




T3 2x





V 48x


TRACK ASSEMBLY:

(1) Slide the plastic hooks to the double-slot track #T1 & T3
(#T1 should slide 7 plastic hooks and #T3 should slide 5 hooks.)

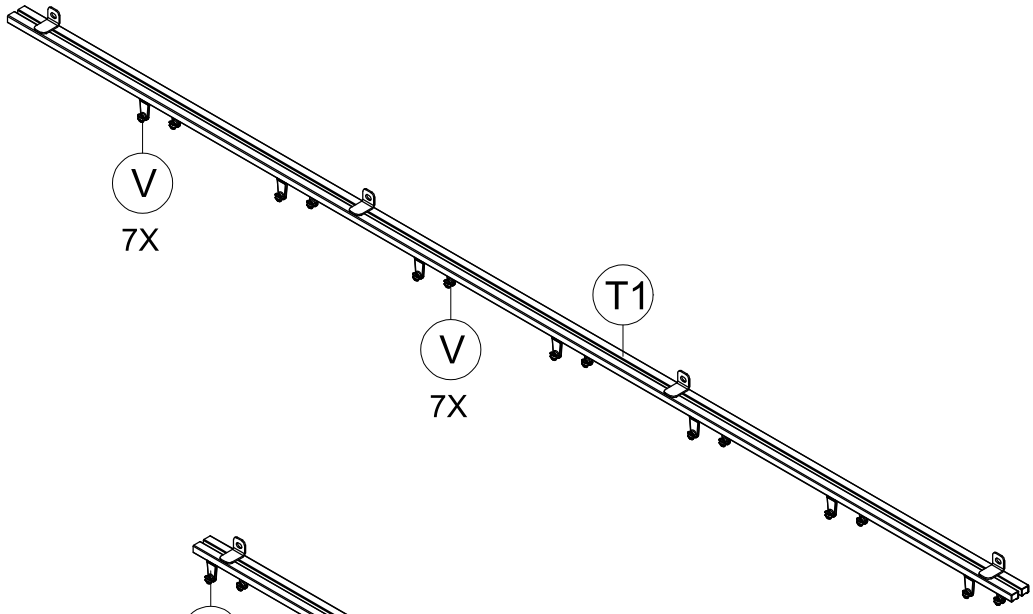

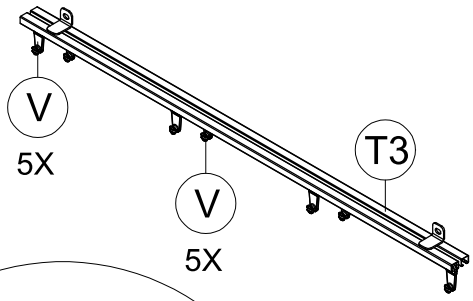

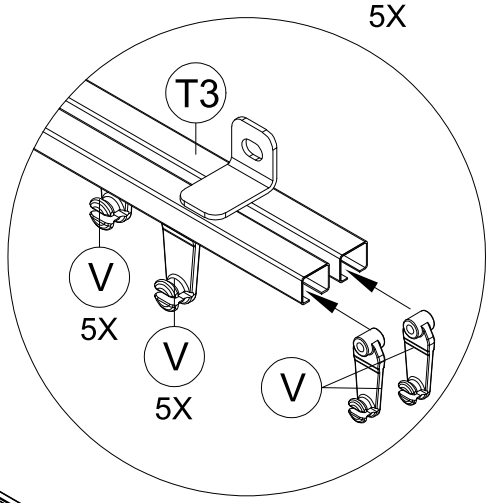

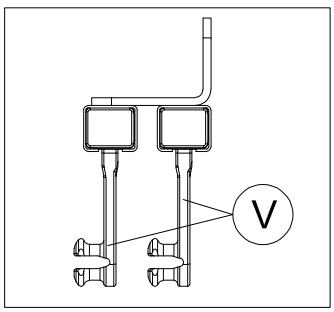

X2

(2) Repeat the above procedures for the other track #T1 & T3.


S4

1 1x

M6x16

8 16x

(1) Use 8 Bolts #8 to fix the track #T/T1 to the beam #C/C1.

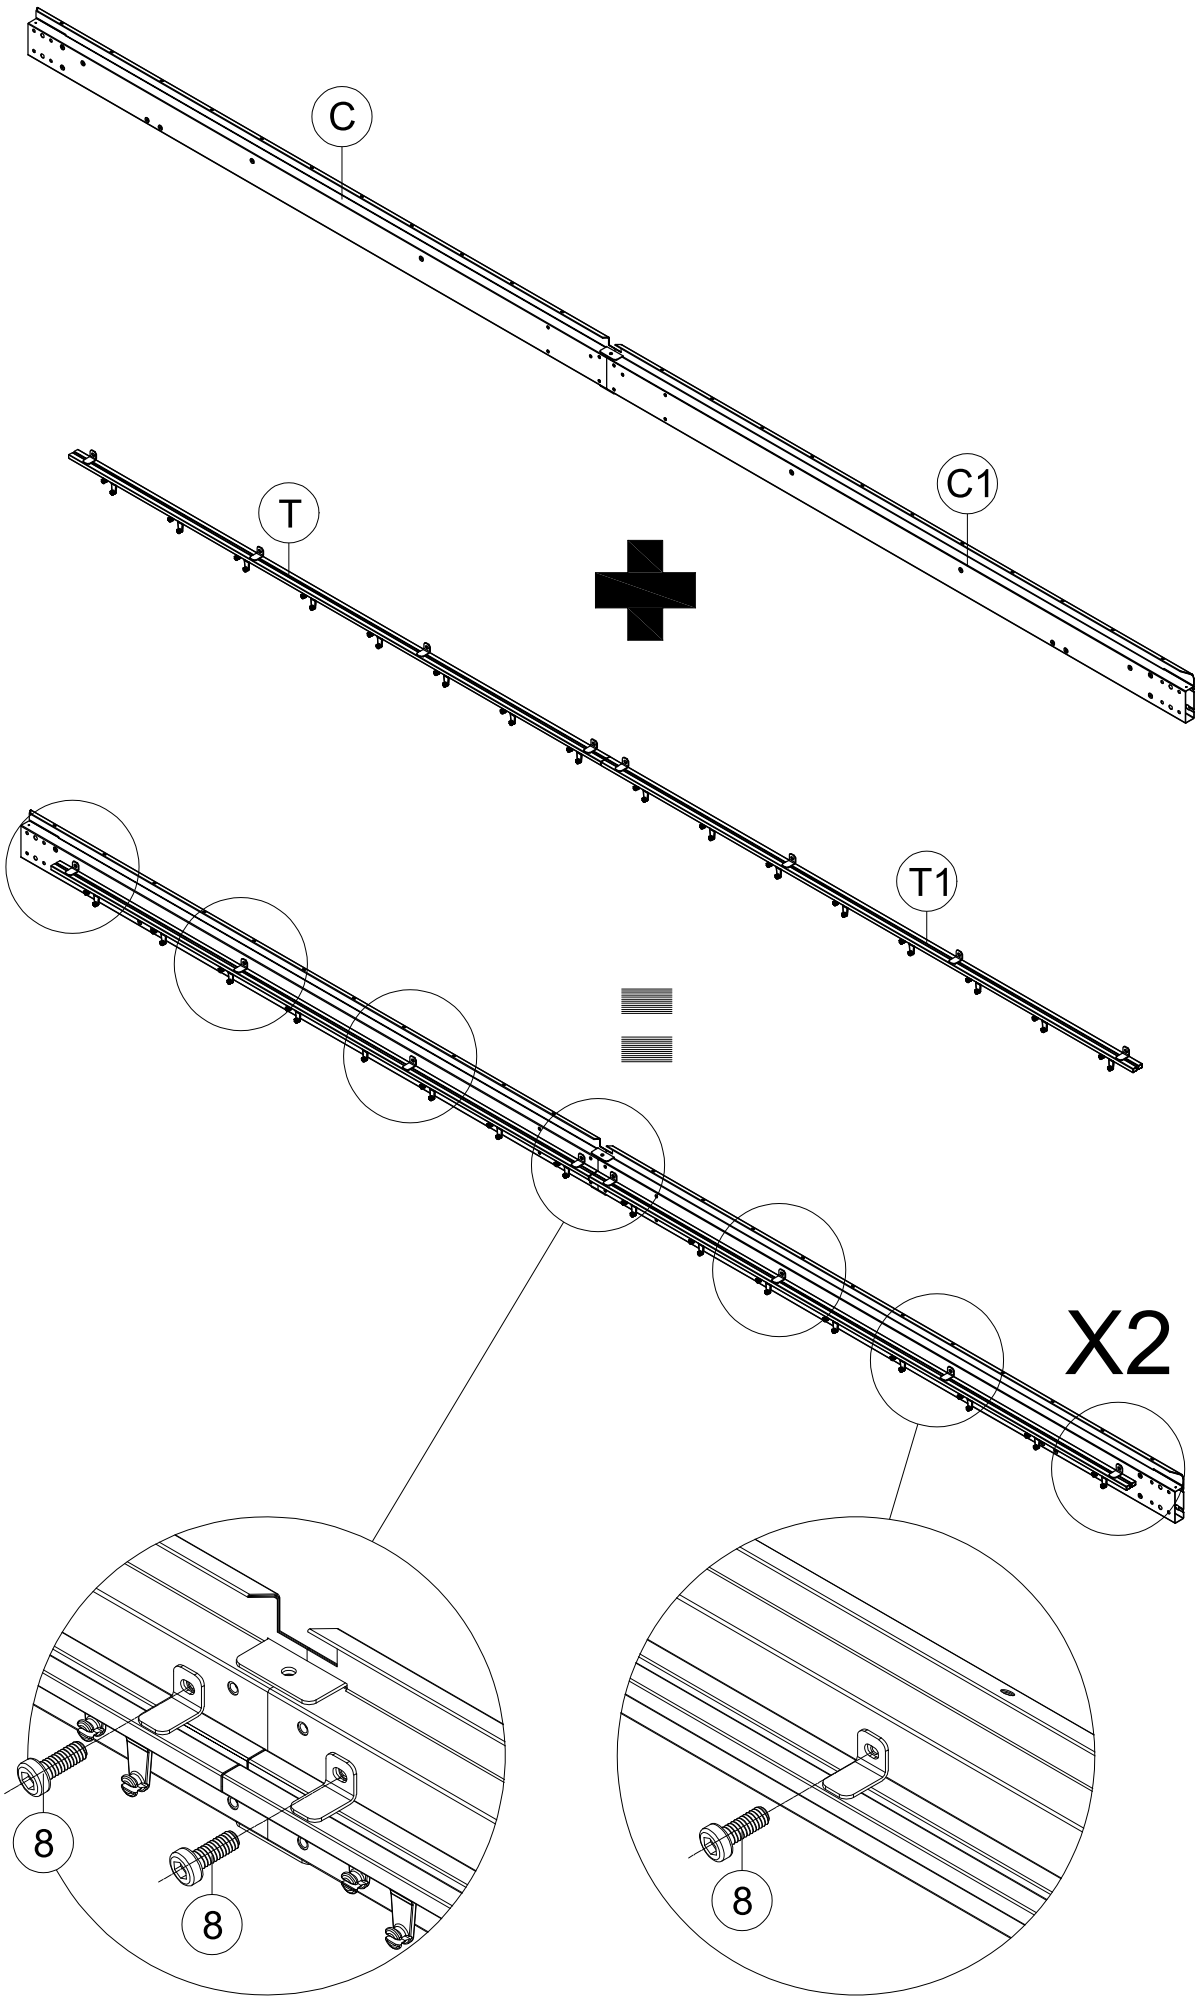

(2) Repeat the above procedures for the other beam.


S4

1 1x


M6x16


8 24x

(1) Use 12 Bolts #8 to fix the track #T/T2 & #T3 /T1 to the beam #D/D1 /D2.

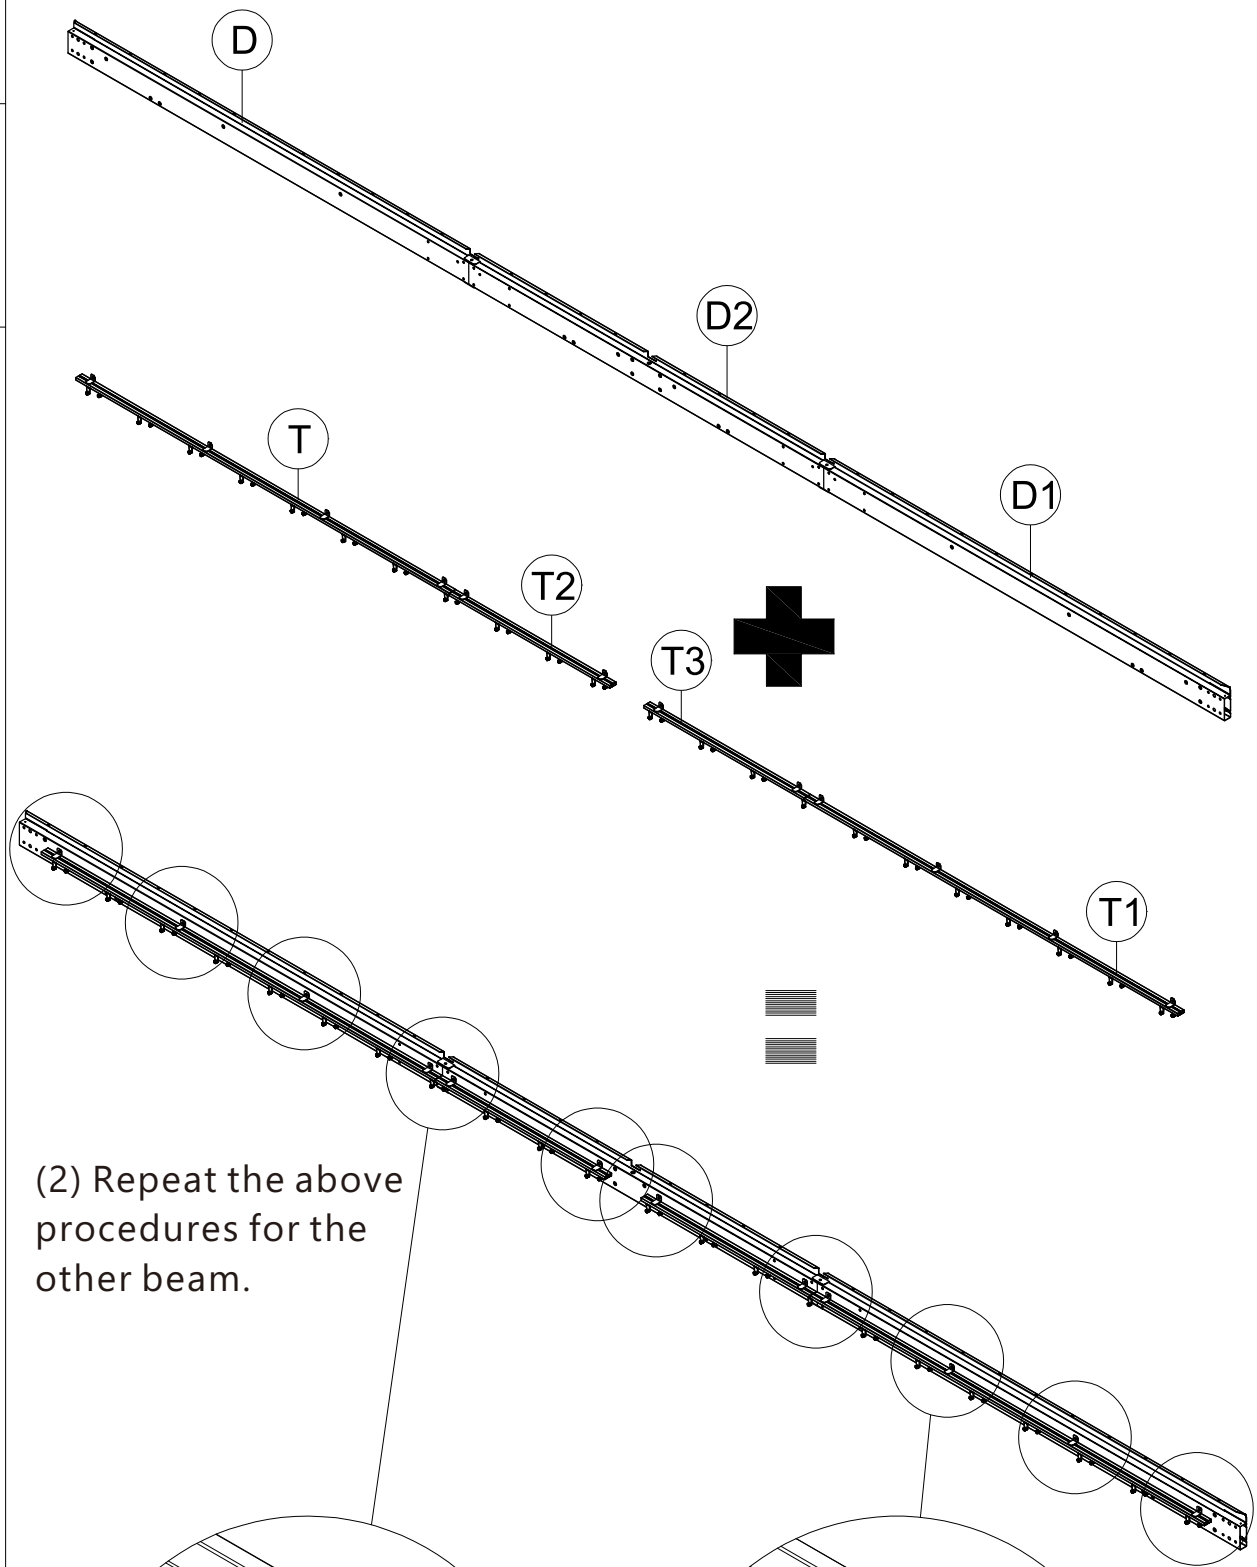


(2) Repeat the above procedures for the other beam.

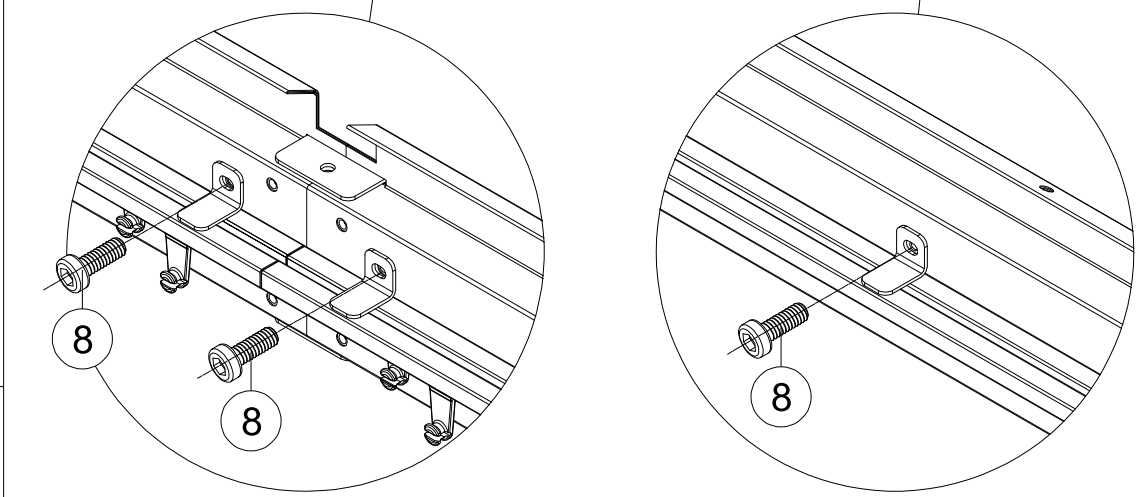




S4


1 1x



M6x35

4 32x

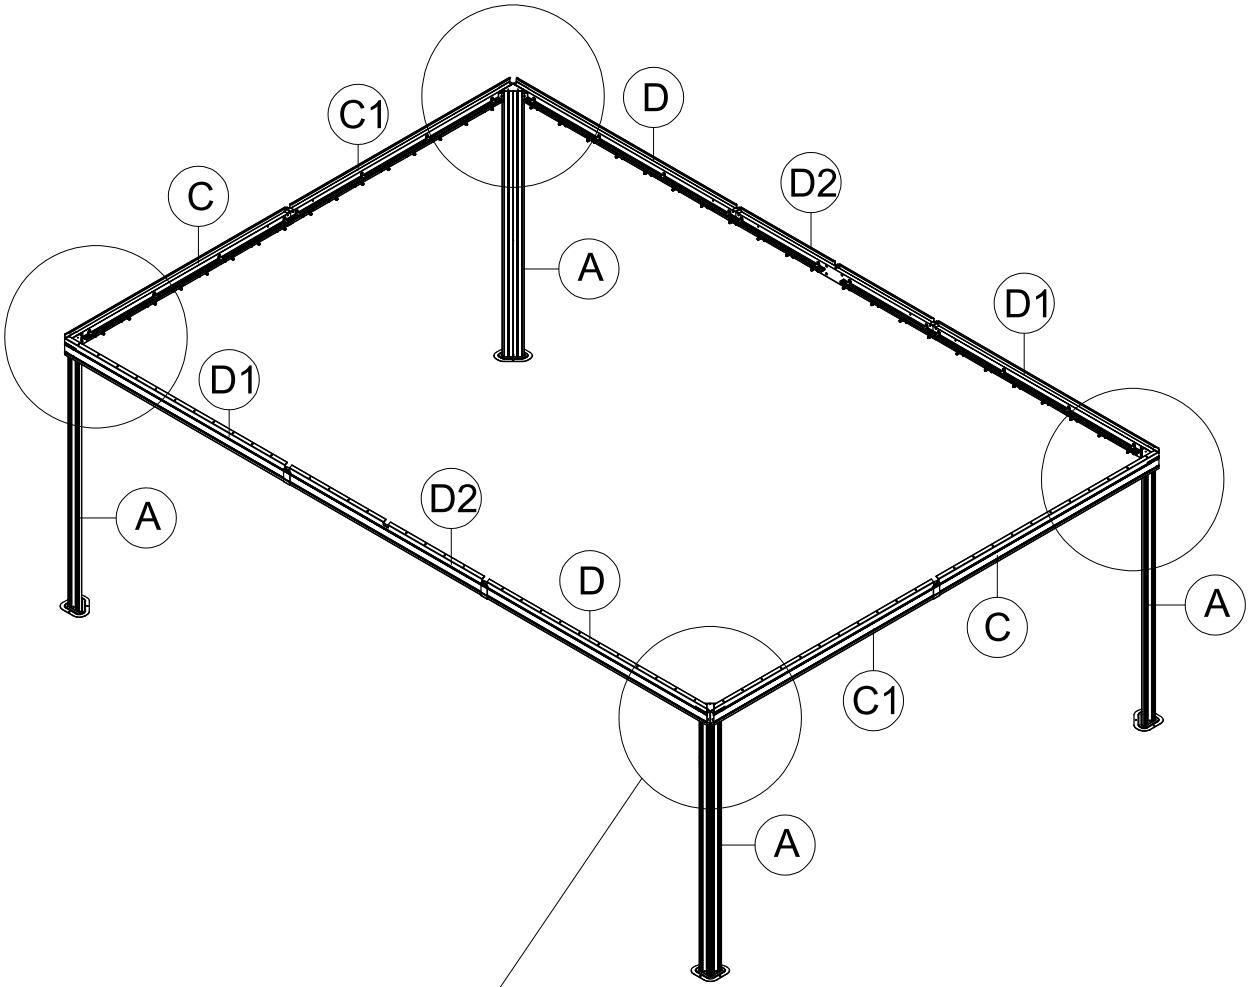

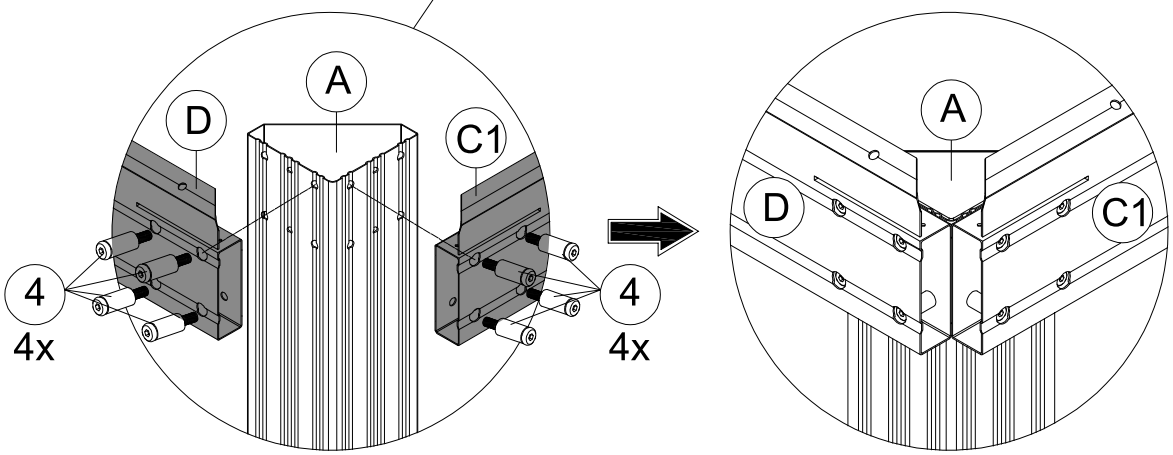

(1) Connect Part #C1 and #D to Part #A with 8 Bolts #4.
(From Outside)
(2) Repeat the above procedures to assemble the other 3 corners.

⚠ **Please don't tighten all bolts.**


S4

1 1x


M6x16

8 16x

(1) Connect Part #C1 and #D to Part #A with 4 Bolts #8. (From Inside)

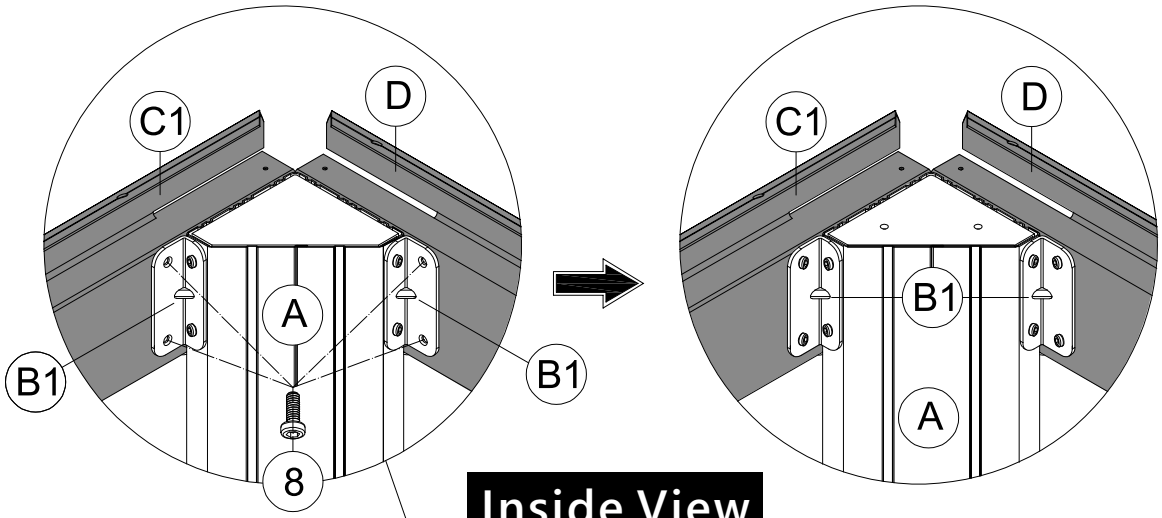

Inside View

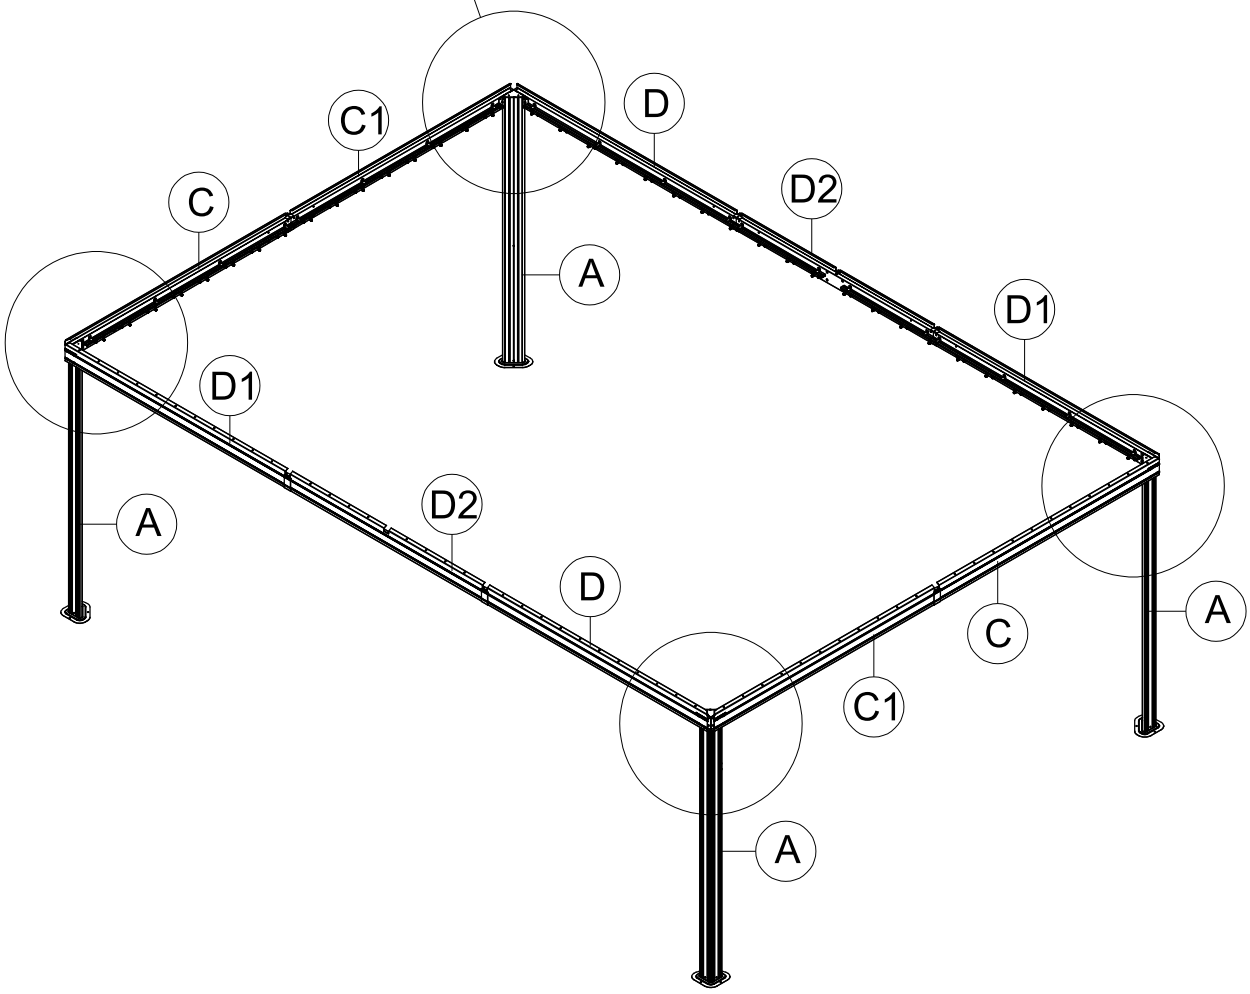

Repeat the above procedures to assemble the other 3 corners.

⚠ Please don't tighten all bolts.


S4


1 1x

M6x16

8 10x


(1) Connect Part #A1 to the middle of Part #D2 with 5 Bolts #8.

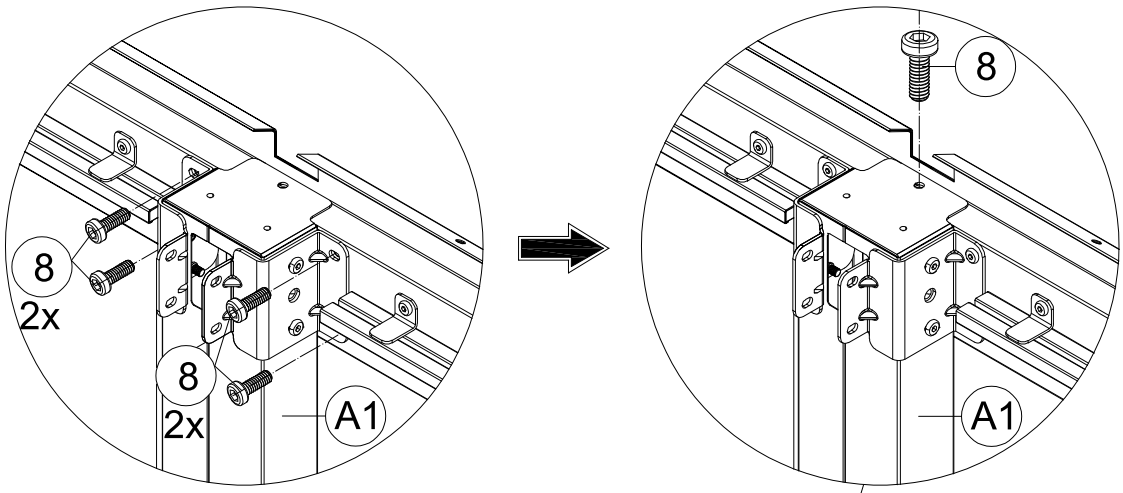

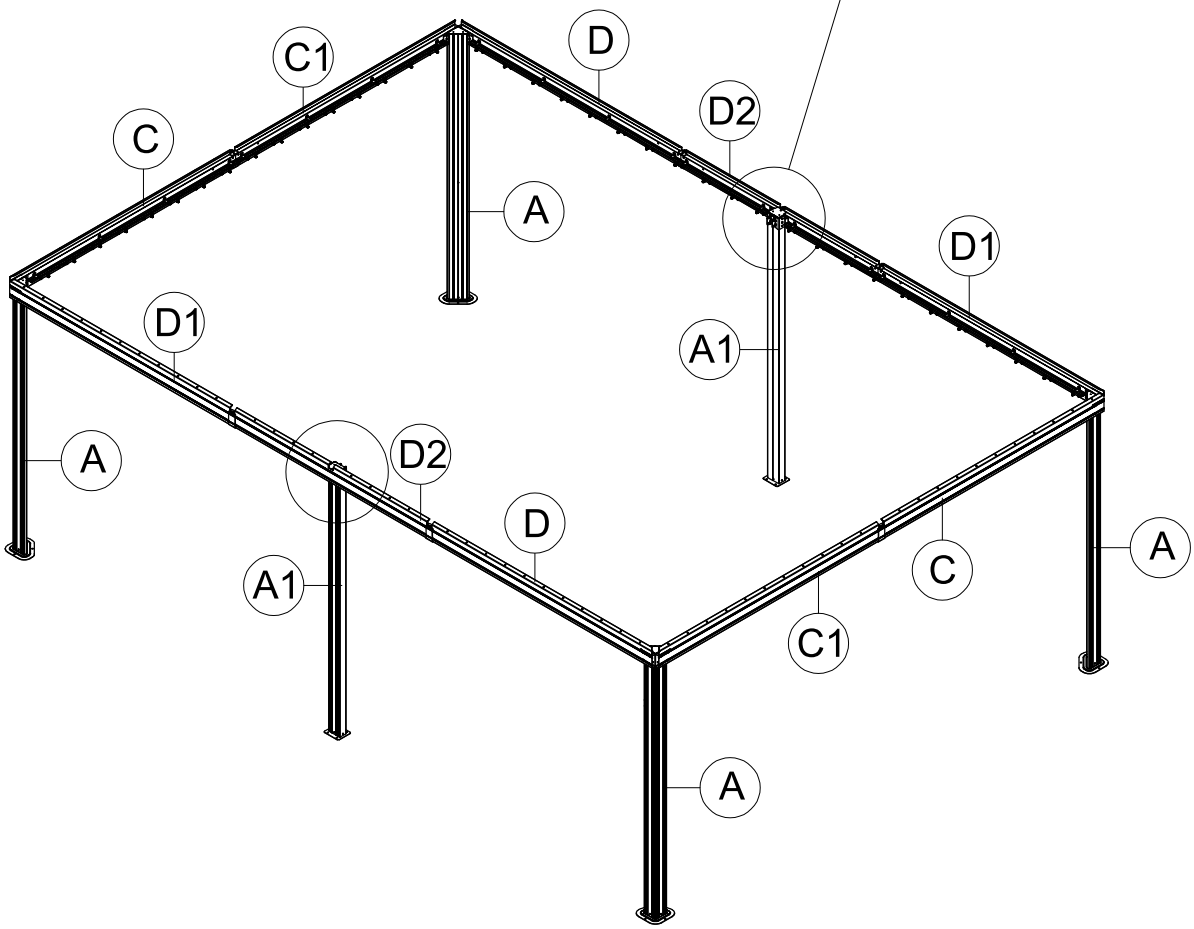


Repeat the above procedures to assemble the opposite side.

⚠ Please don't tighten all bolts.

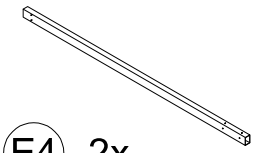

E4 2x



E5 2x



S4


1 1x



M6x16


8 16x

BEAM ASSEMBLY:

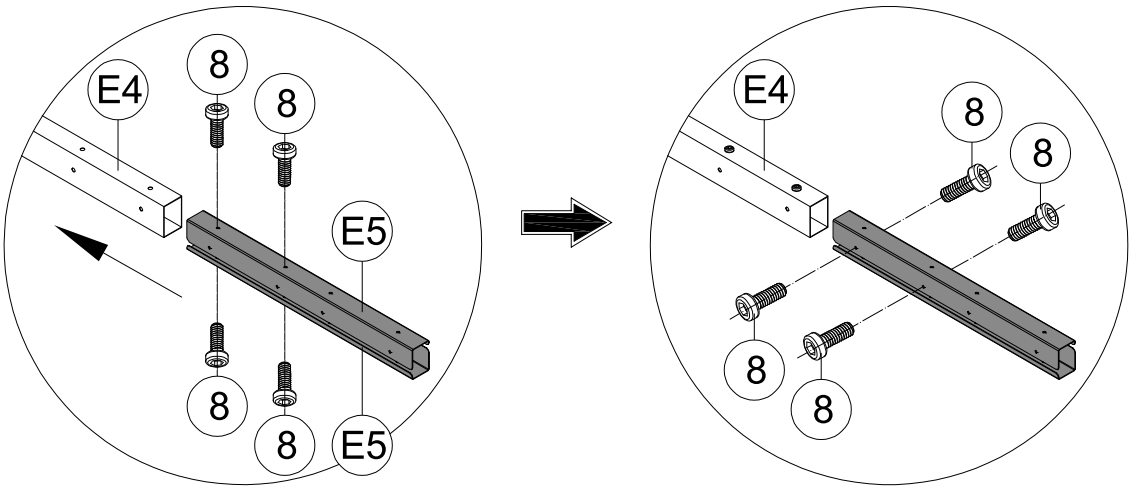


(1) Fit the two #E5 profile sections together to form one complete #E5 assembly.

(2) Insert Part #E5 into Part #E4 and secure with 8 Bolts #8.

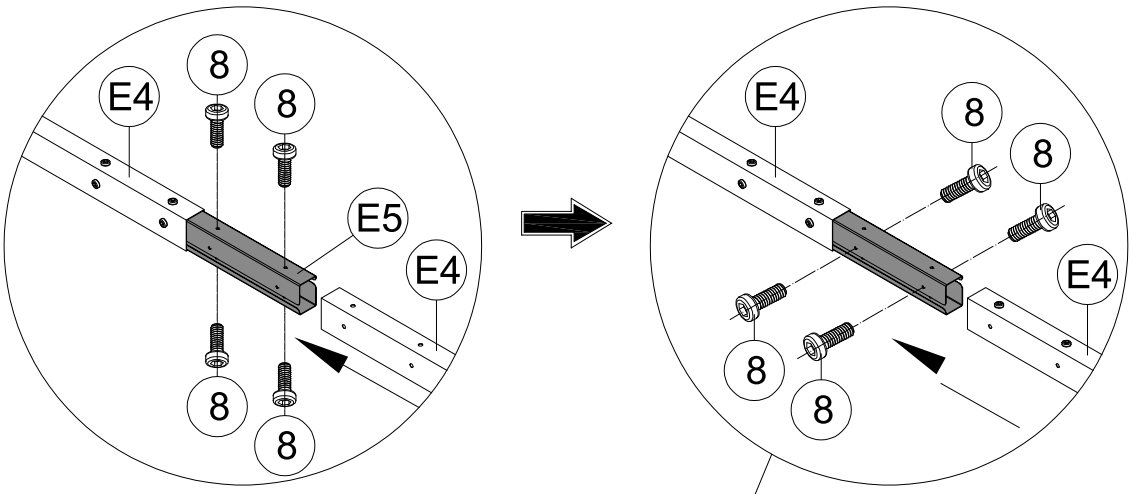

(3) Insert the other side of Part #E5 into the other Part #E4 and connect 2 Parts #E4 through Part #E5 with 8 Bolts #8.

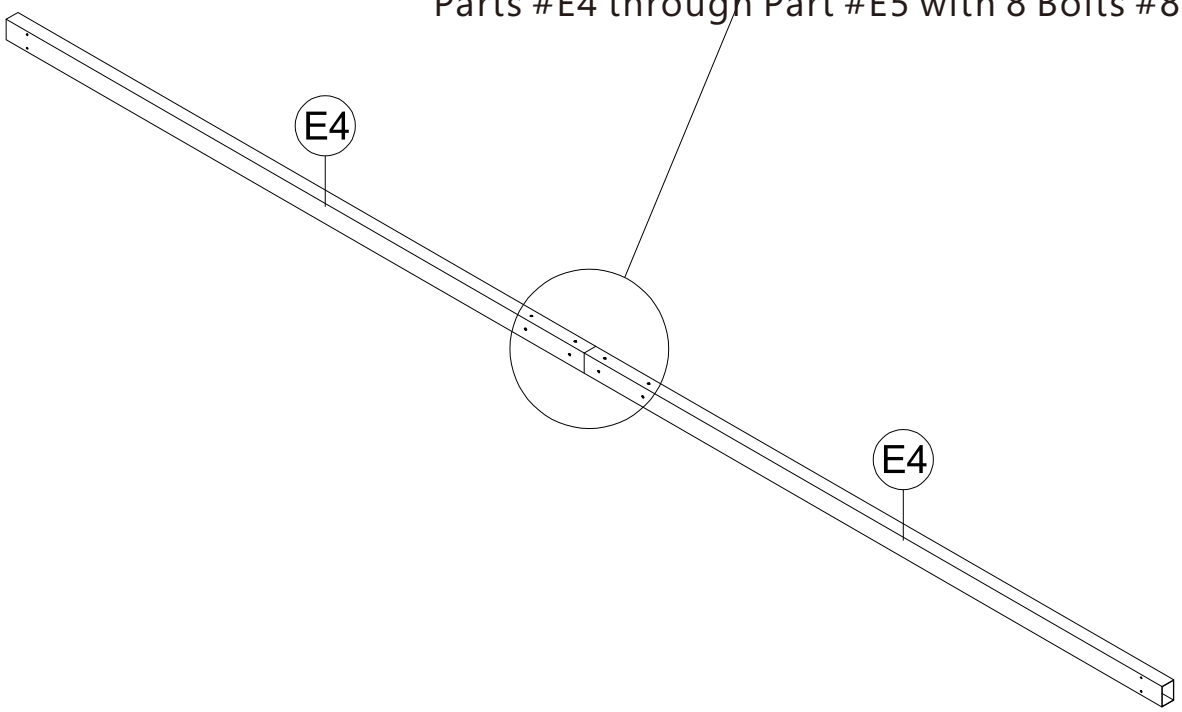


S4


1 1x

M6x16

8 8x


(1) Connect Part #E4 to Part #A1 with 4 Bolts #8.

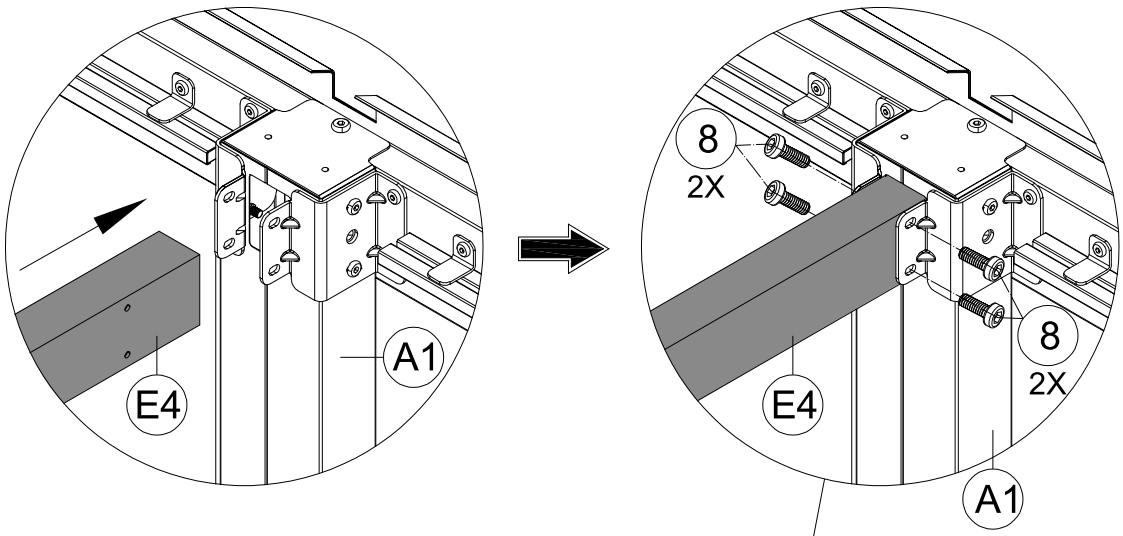

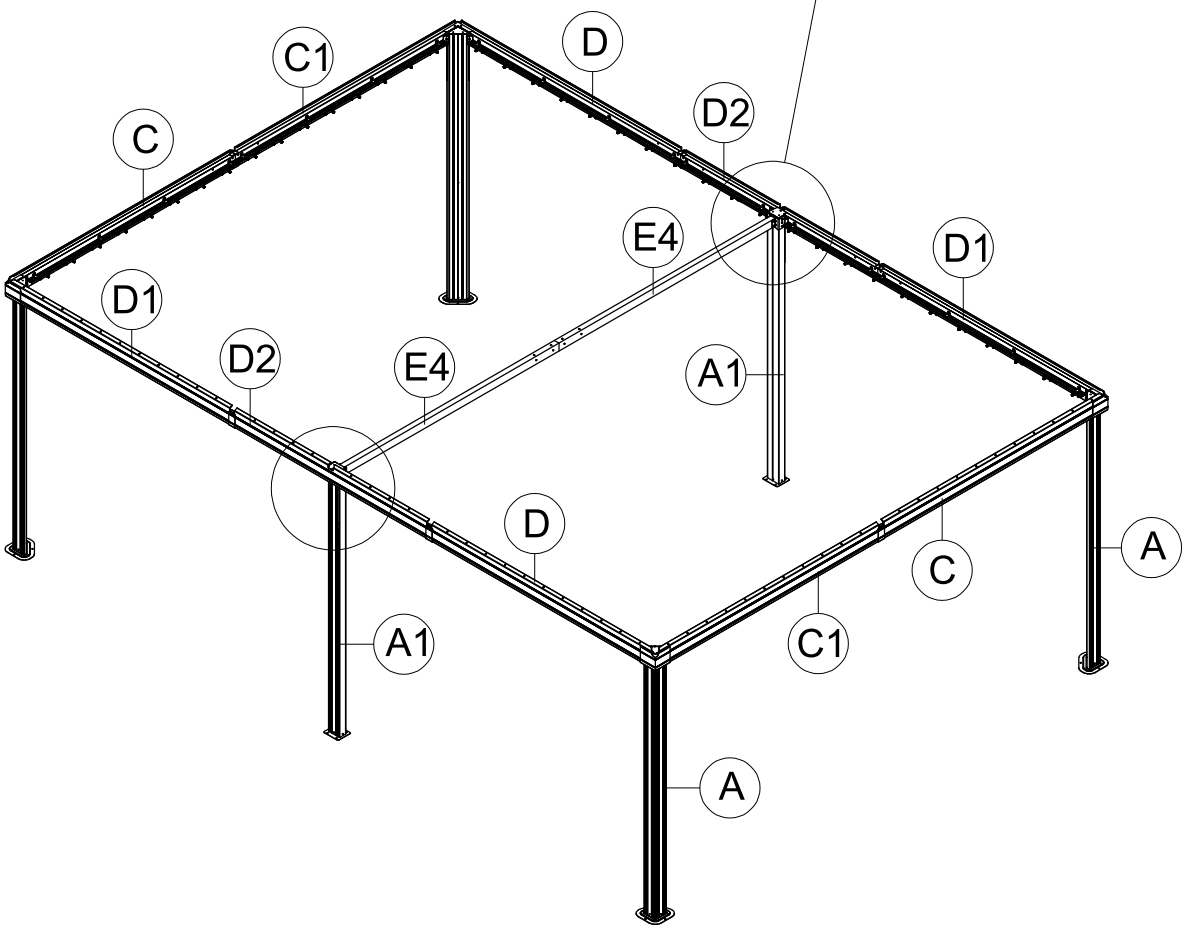


Repeat the above procedures to assemble the opposite side.

⚠ Please don't tighten all bolts.

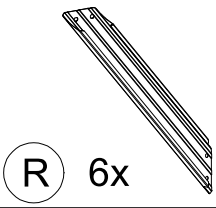

R 6x

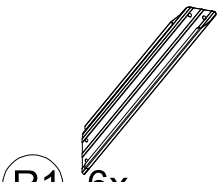

R1 6x




S4


1 1x




M6x16

8 48x

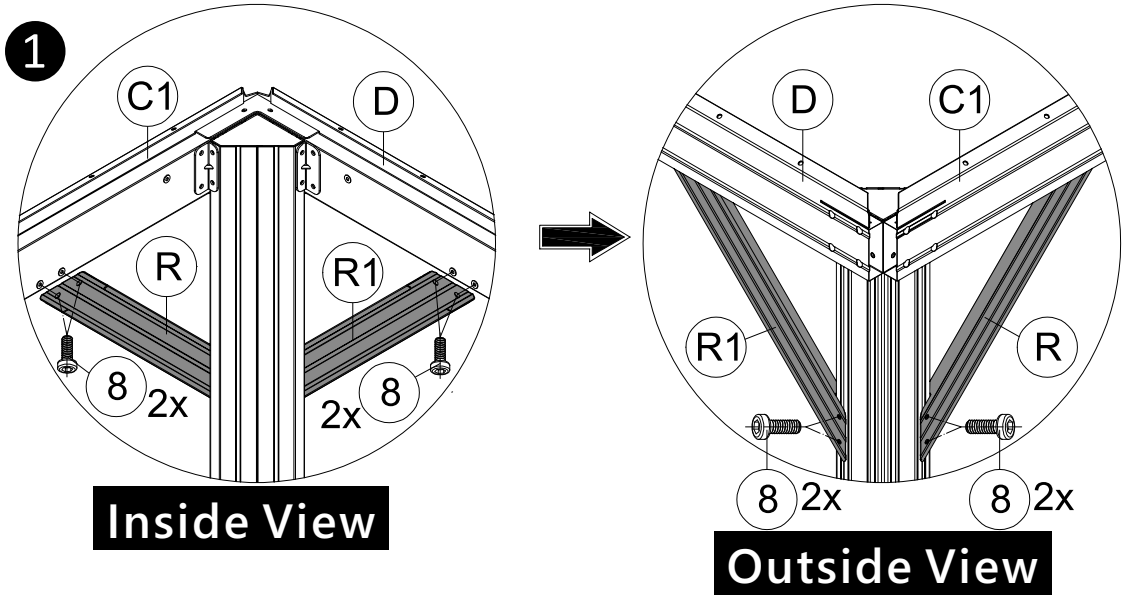

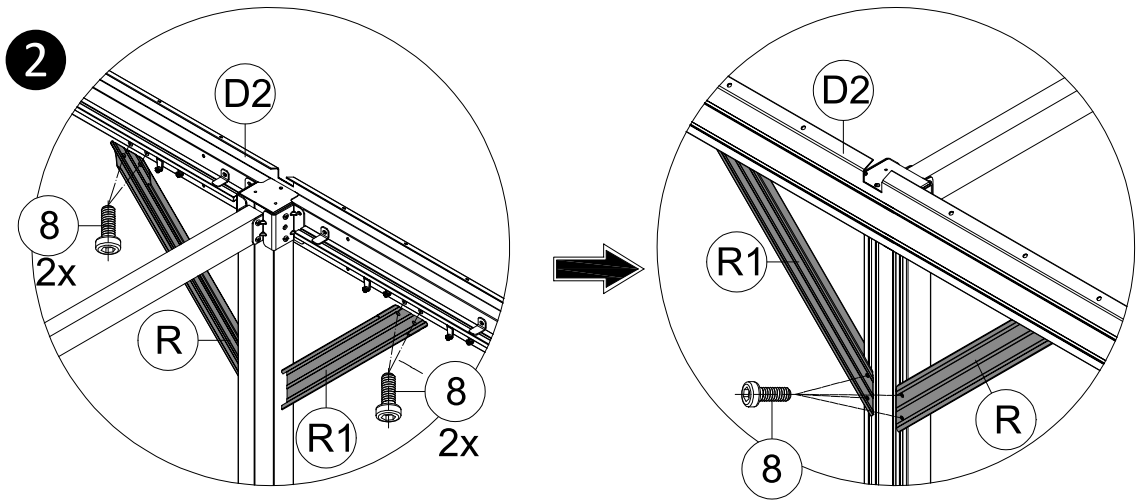


① (1) Affix Part #R and Part #R1 to the frame #C1 & #D with 8 Bolts #8.
(2) Repeat the above procedures to assemble the other 3 corners.

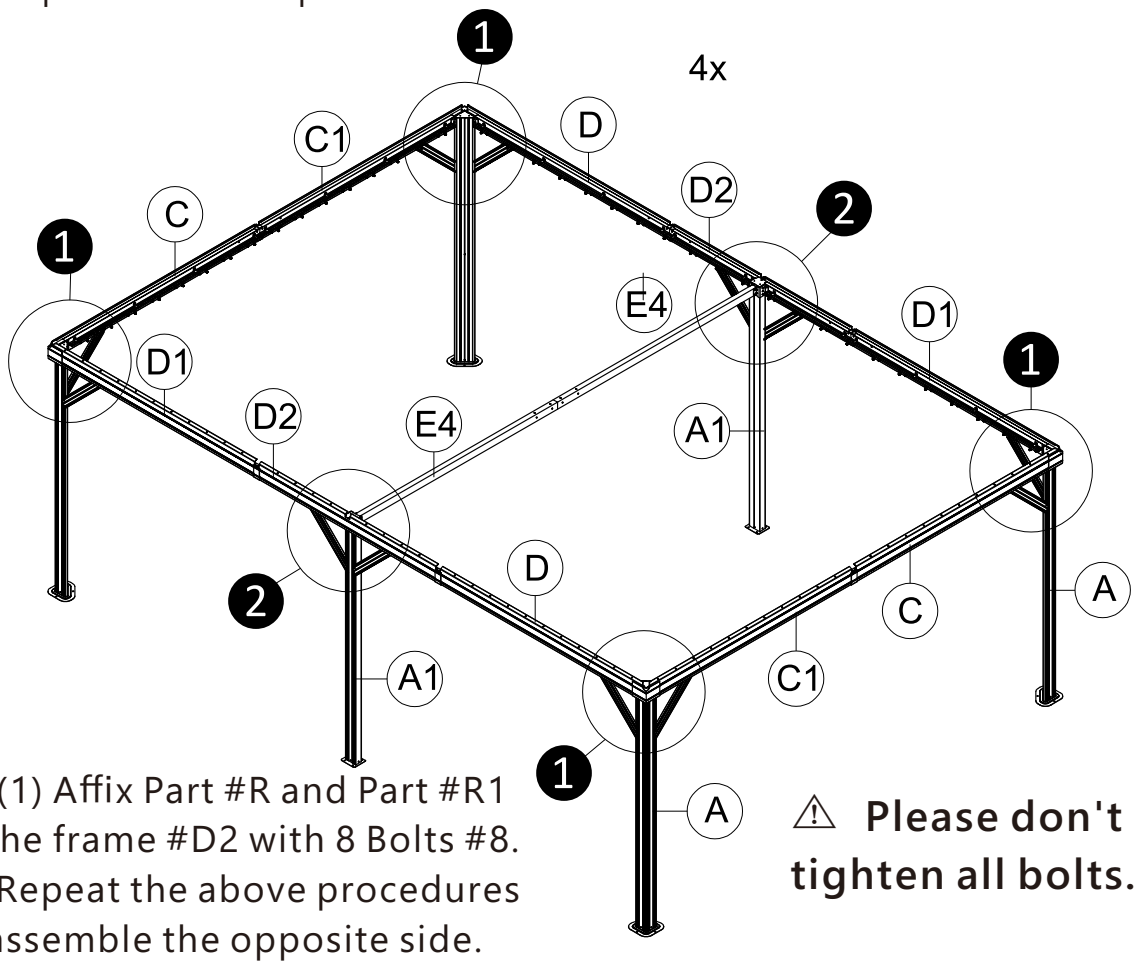

② (1) Affix Part #R and Part #R1 to the frame #D2 with 8 Bolts #8.
(2) Repeat the above procedures to assemble the opposite side.

⚠ **Please don't tighten all bolts.**




X1 4x



ST5x16


3 16x

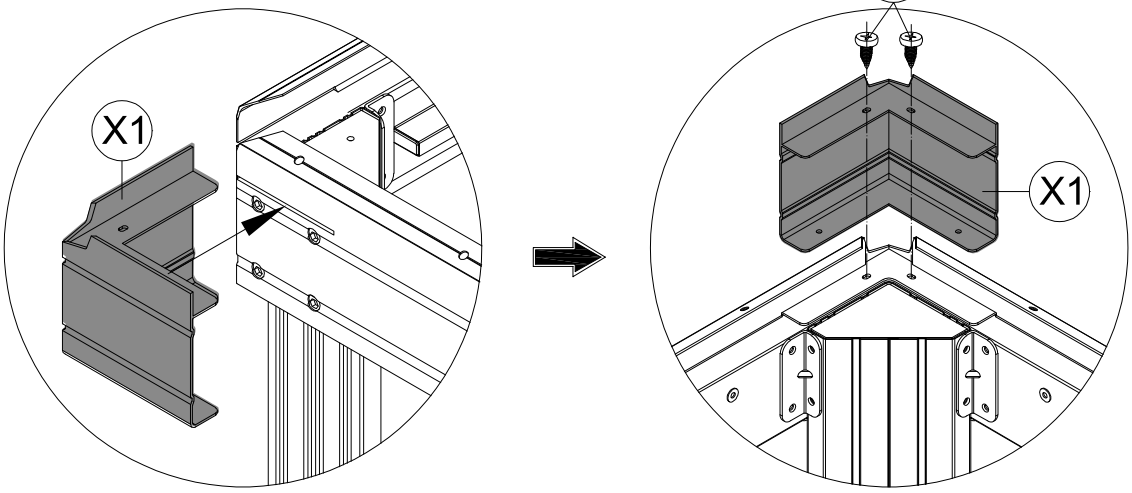


(1) Cover the corner with Part #X1.

(2) Secure with 2 Self–tapping Screws #3. (from top to bottom)


(3) Secure with 2 Self-tapping Screws #3. (from bottom to top)

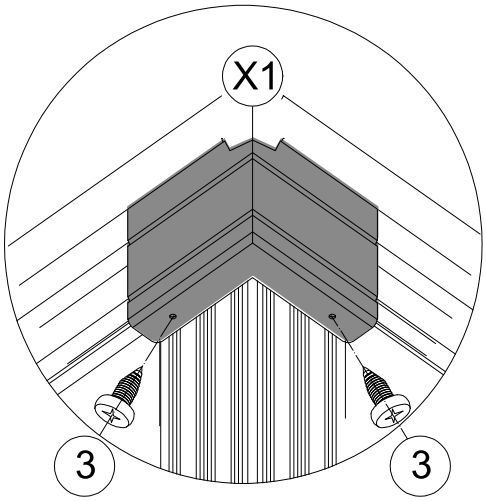

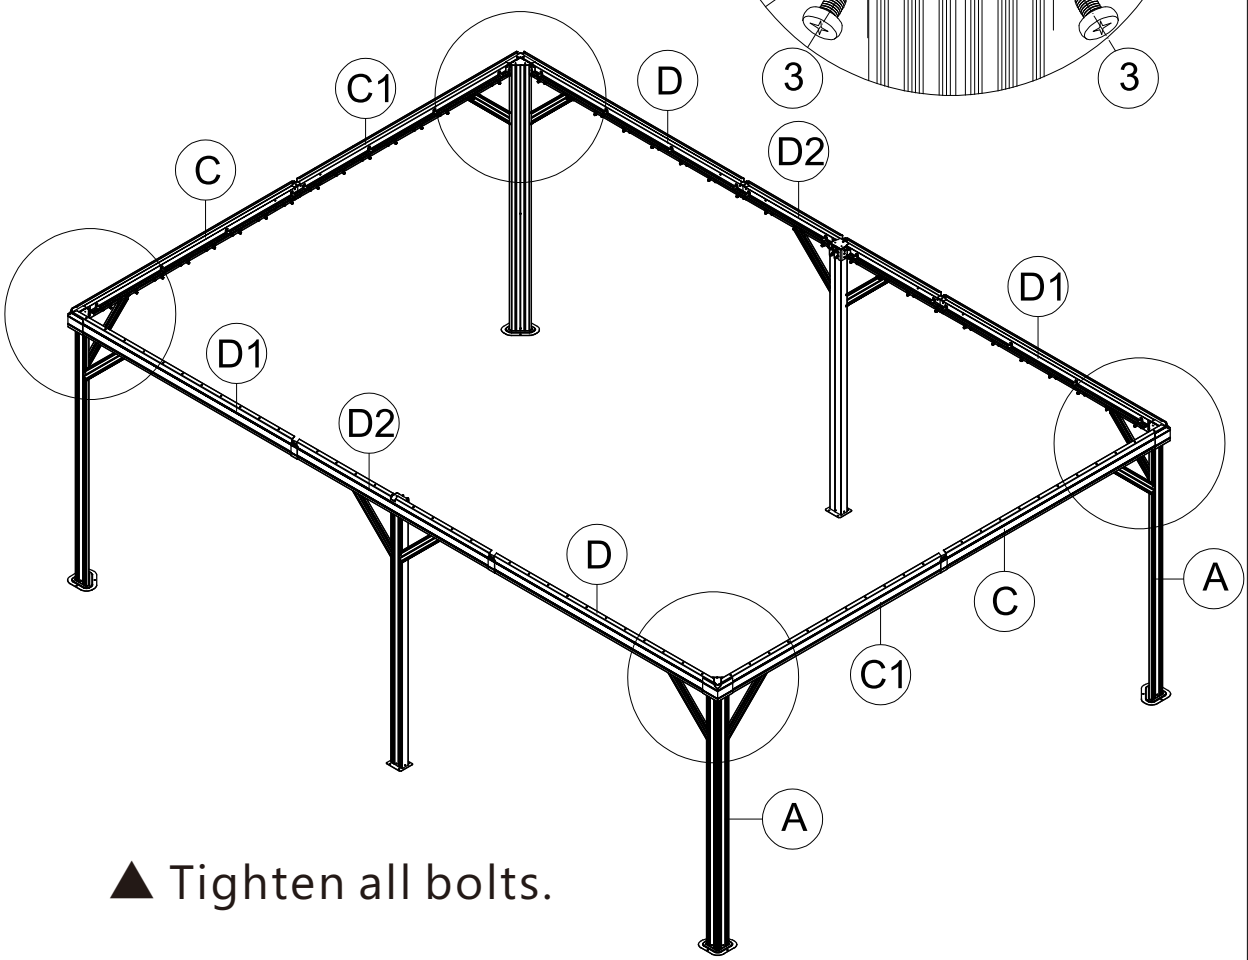

▲ Tighten all bolts.


Repeat the above procedures to assemble the other 3 corners.

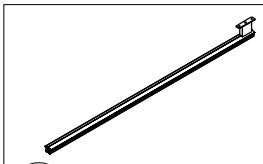

E 4x



E1 4x



U 4x



S4


1 1x




M6x16

8 12x


Assemble the 4 Corner Roof Bars:

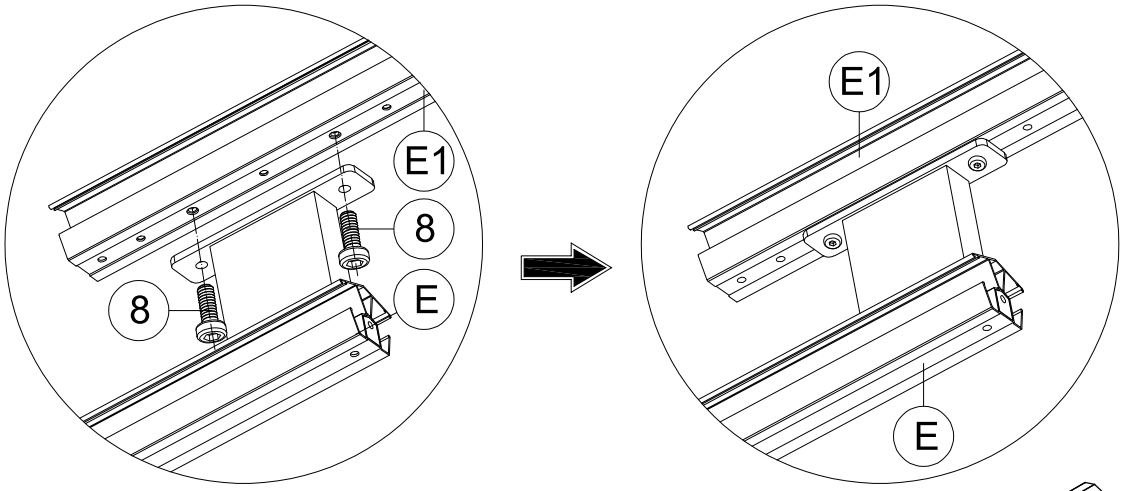

(1) Connect Part #E1 to Part #E with 2 Bolts #8 .

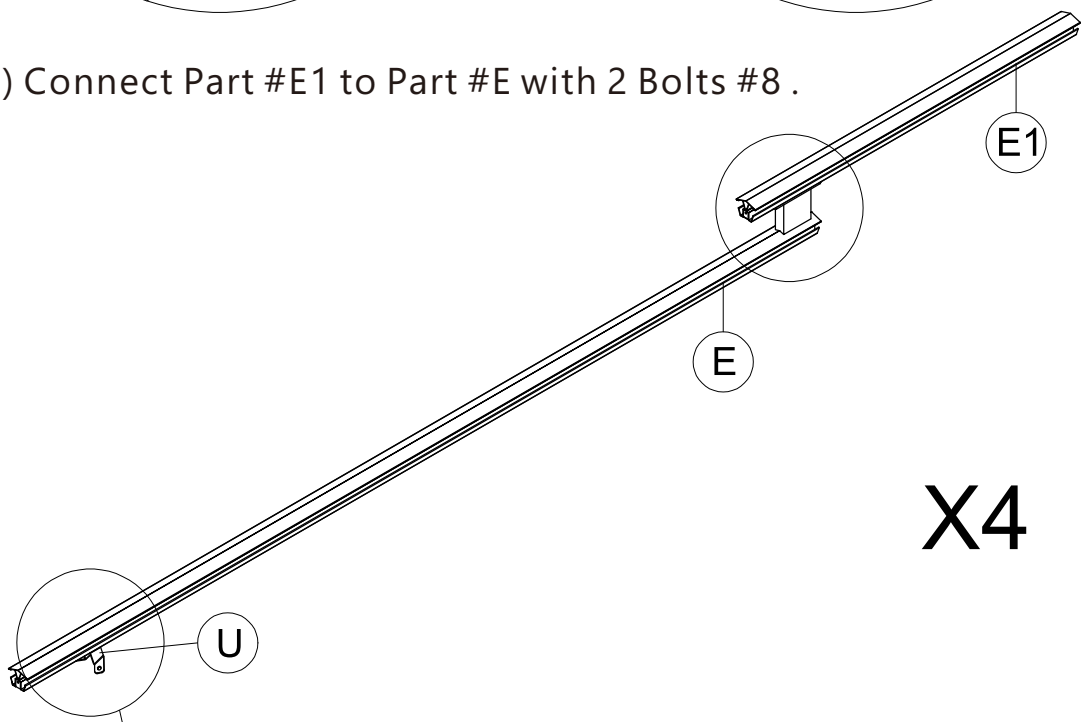


X4

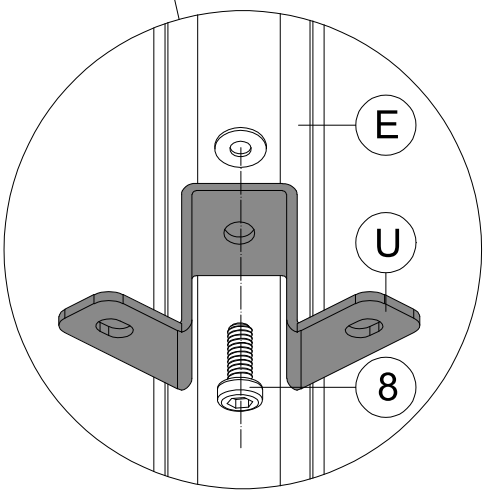

(2) Attach Part #U to Part #E with 1 Bolt #8 .

(3) Repeat the above procedures to assemble the other 3 corner roof bars.

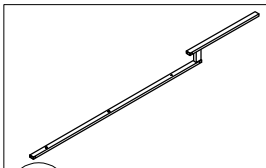

E2 6x



U1 6x




S4


1 1x




M6x10


7 6x

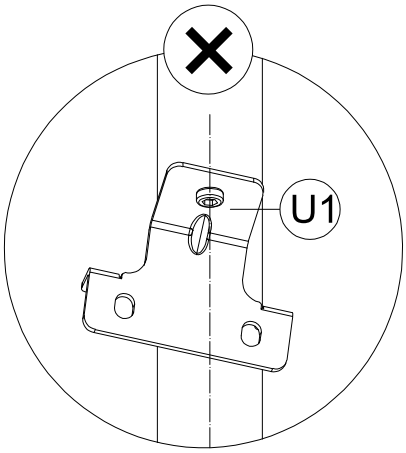


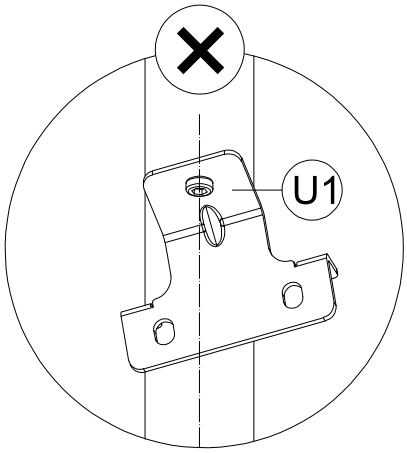

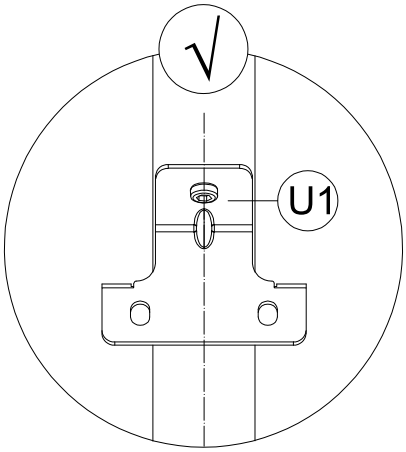


X6

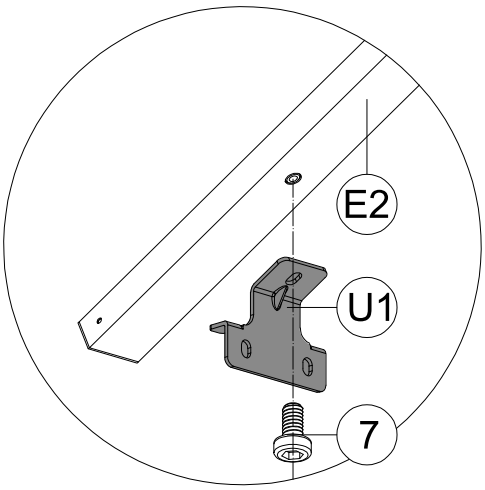

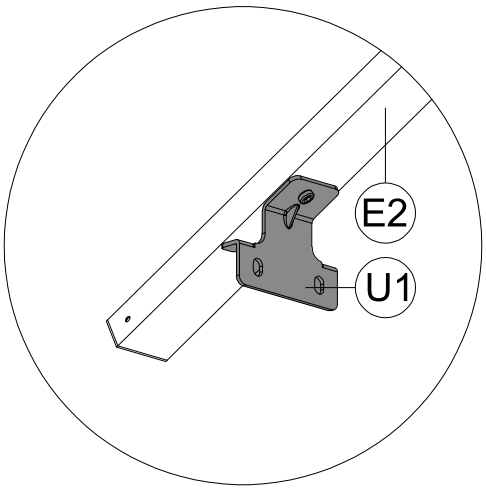


(1) Attach Part #U1 to Part #E2 with 1 Bolt #7 .

(2) Repeat the above procedures to assemble the other 5 roof bars.

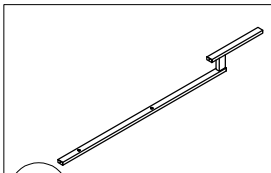

E2 2x



U4 2x




S4


1 1x




M6x10


7 2x

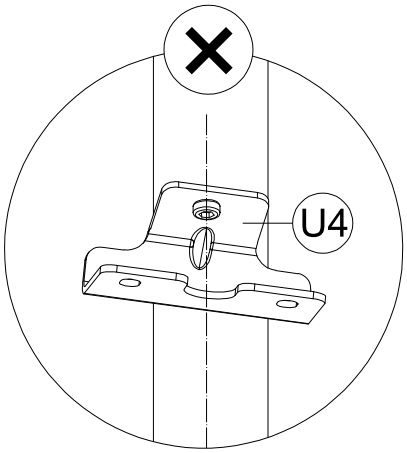

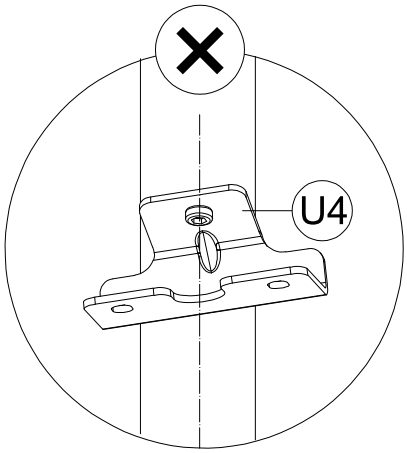

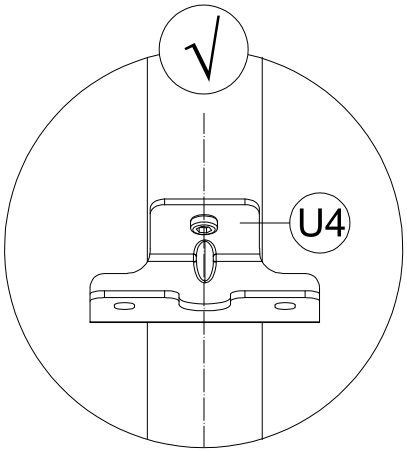


X2

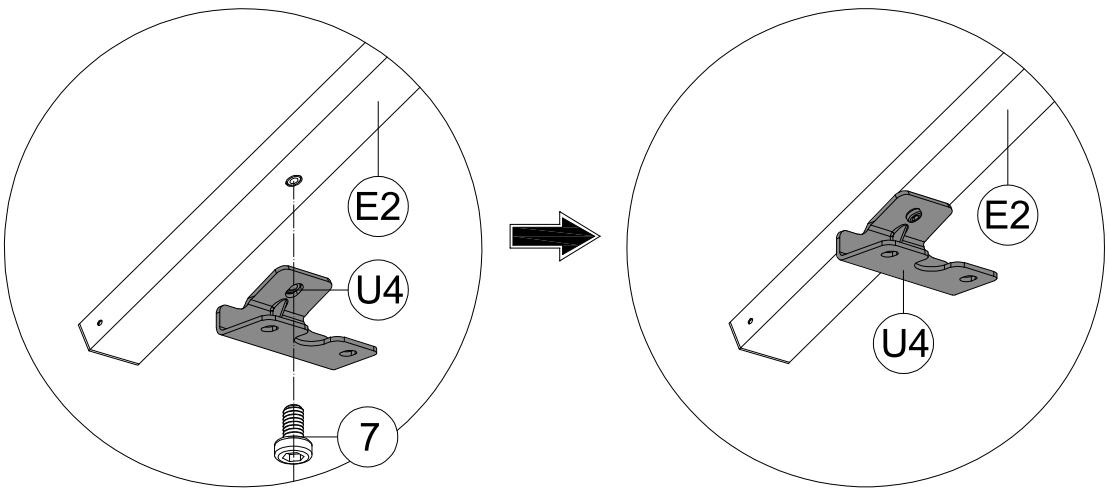

(1) Attach Part #U4 to Part #E2 with 1 Bolt #7 .

(2) Repeat the above procedures to assemble the other roof bar.

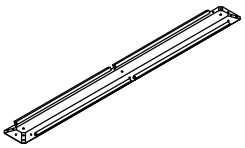

S 1x

S4

1 1x


M6x16

8 12x


Please have a freestanding ladder ready at the center of the gazebo.

ATTENTION: You can also finish this step on the ground and then lift 4 corner roof bar stand inside roof cover to the top together. (Need 2 people and 2 ladders)

(1) Place 4 Part #E2 on the frame #D/D1/D2. Secure with 8 Bolts #8.

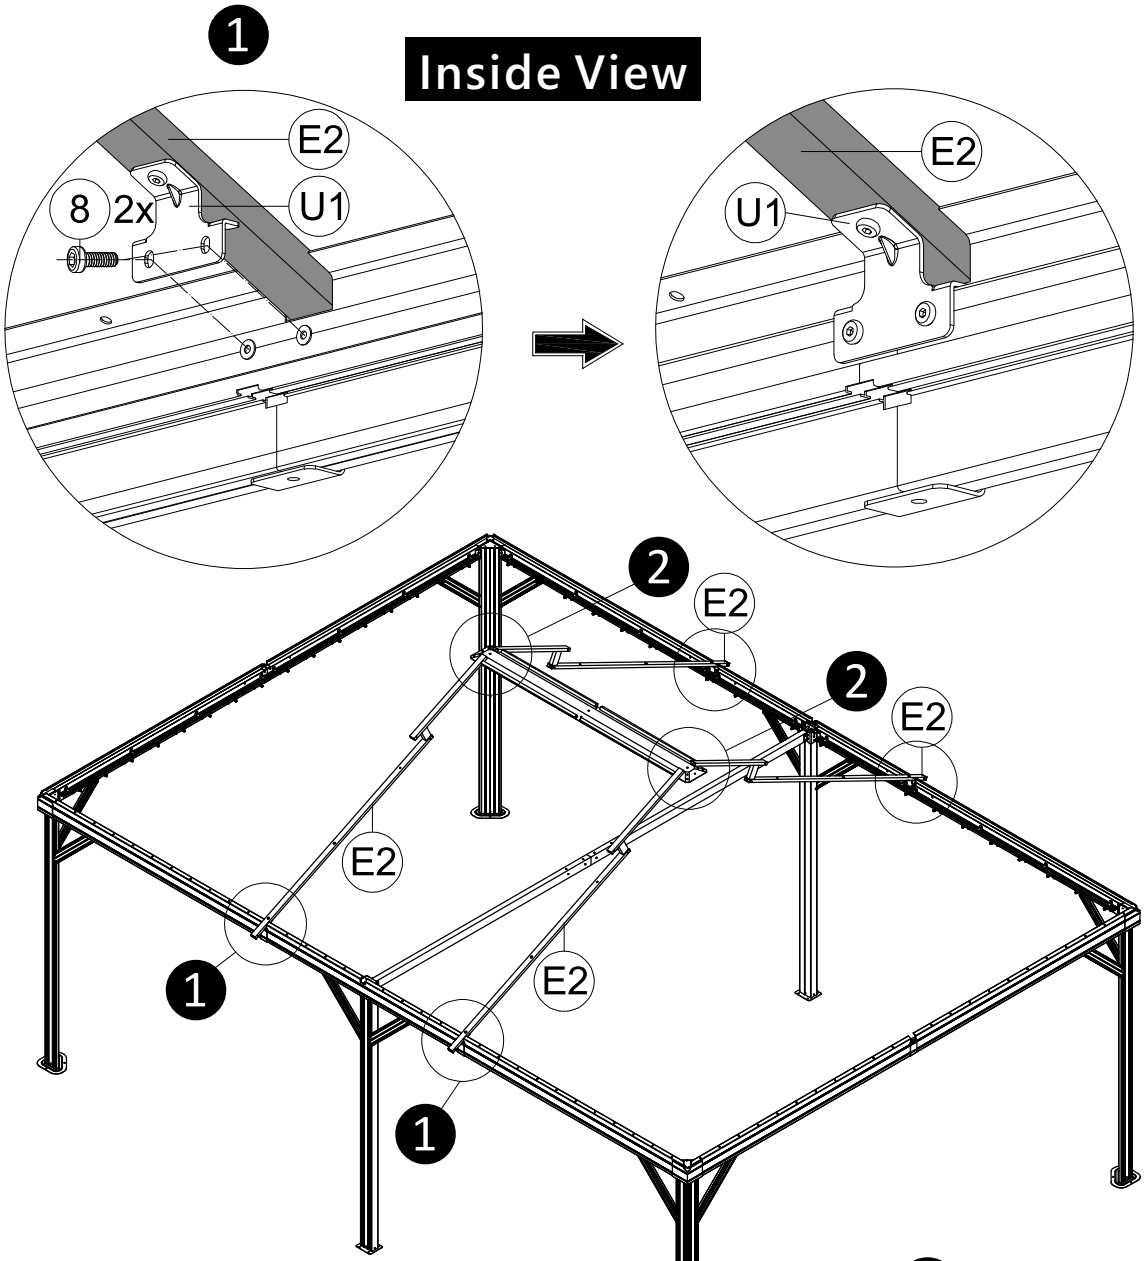

(2) Place 4 Part #E2 on the inside roof cover #S; Secure with 4 Bolts #8. (from bottom to top)

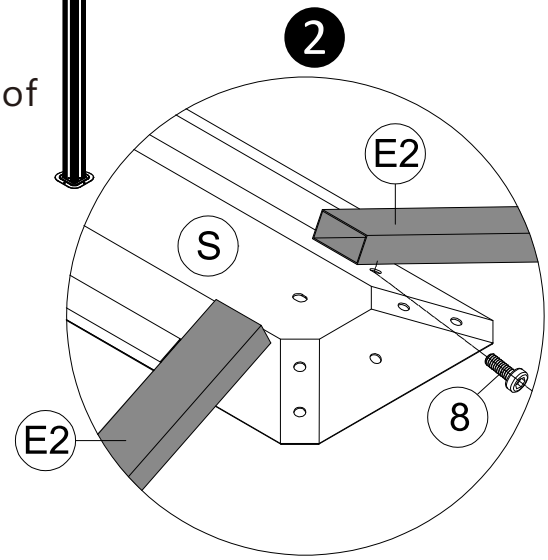


S4

1 1x

M6x16

8 6x

(1) Place 2 Part #E2 on the inside roof cover #S. Secure with 2 Bolts #8. (from bottom to top)
(2) Place 2 Part #E2 on 2 part #A1; Secure with 4 Bolts #8.

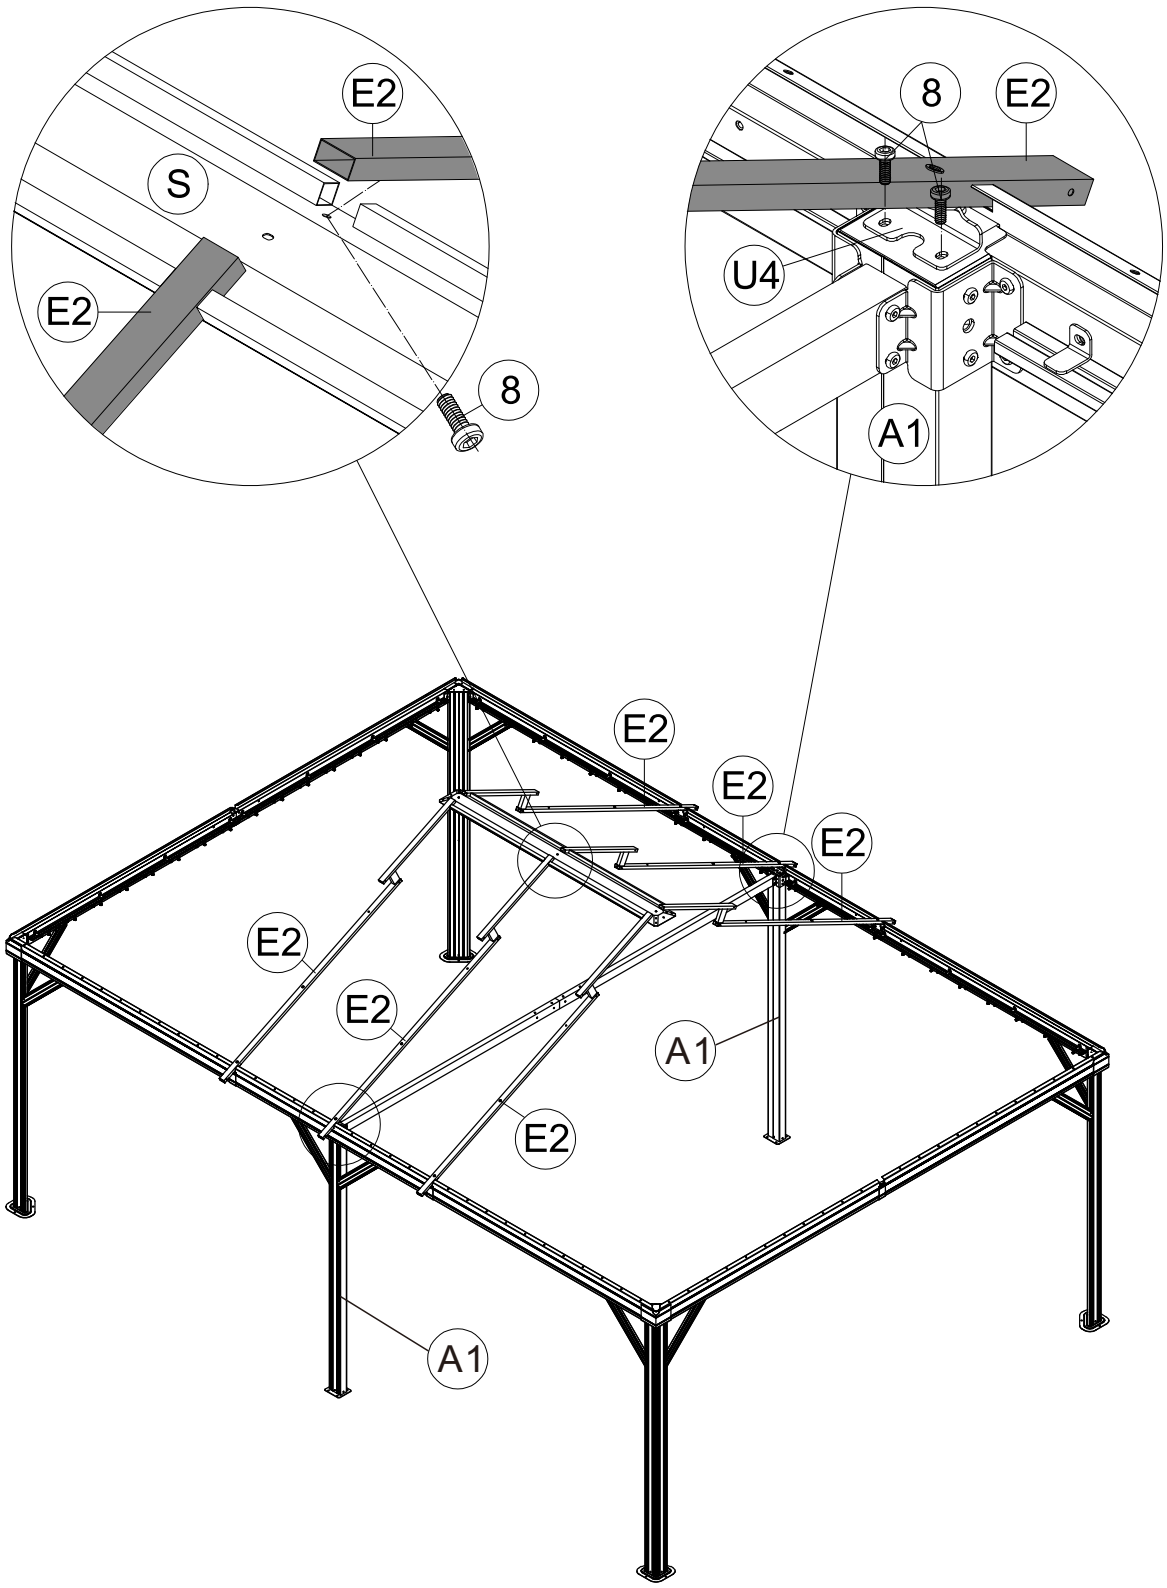


S4


1 1x


M6x16

8 6x

(1) Place 2 Part #E2 on the inside roof cover #S. Secure with 2 Bolts #8. (from bottom to top)

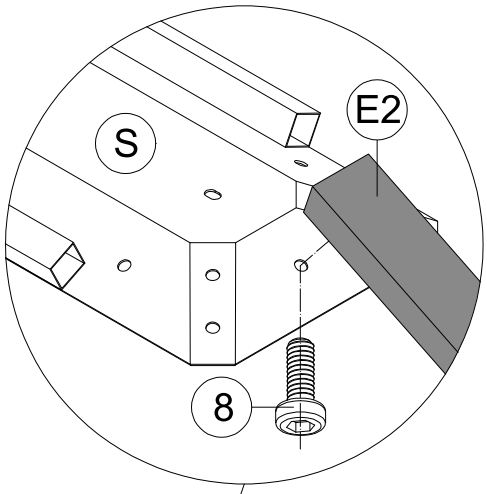

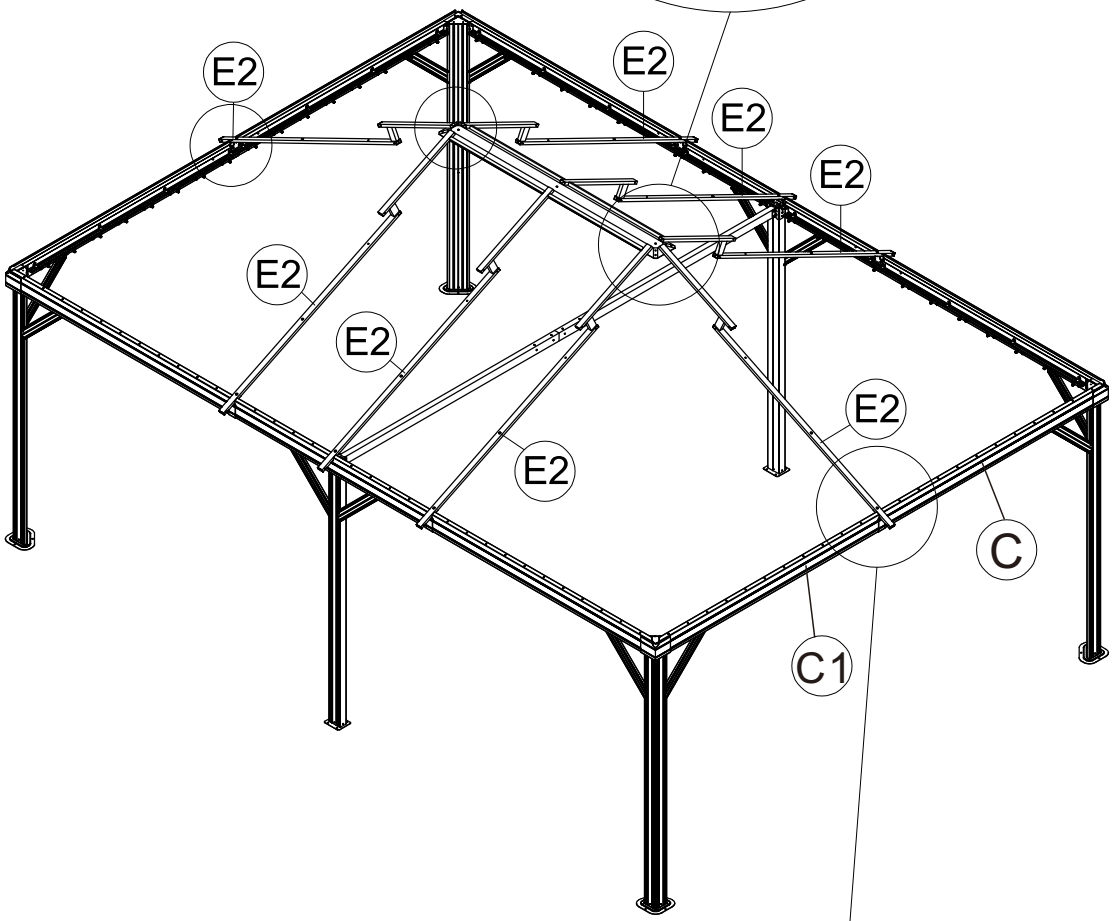

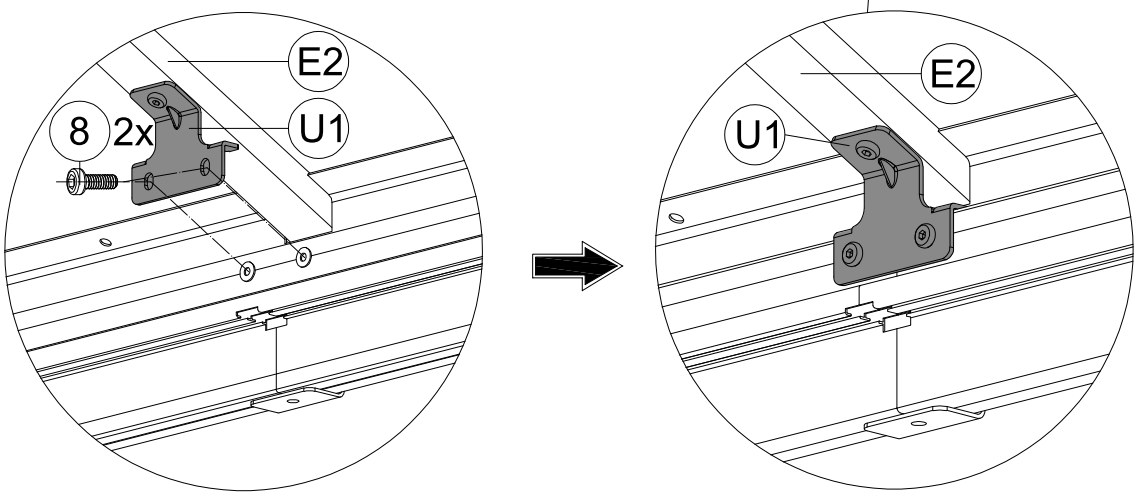

(2) Place 2 Part #E2 on the frame #C/C1; Secure with 4 Bolts #8.

S4


1 1x

M6x16


8 16x


(1) Place 4 Part #E on 4 part #A; Secure with 8 Bolts #8.

(2) Place 4 Part #E on the inside roof cover #S. Secure with 8 Bolts #8. (from bottom to top)

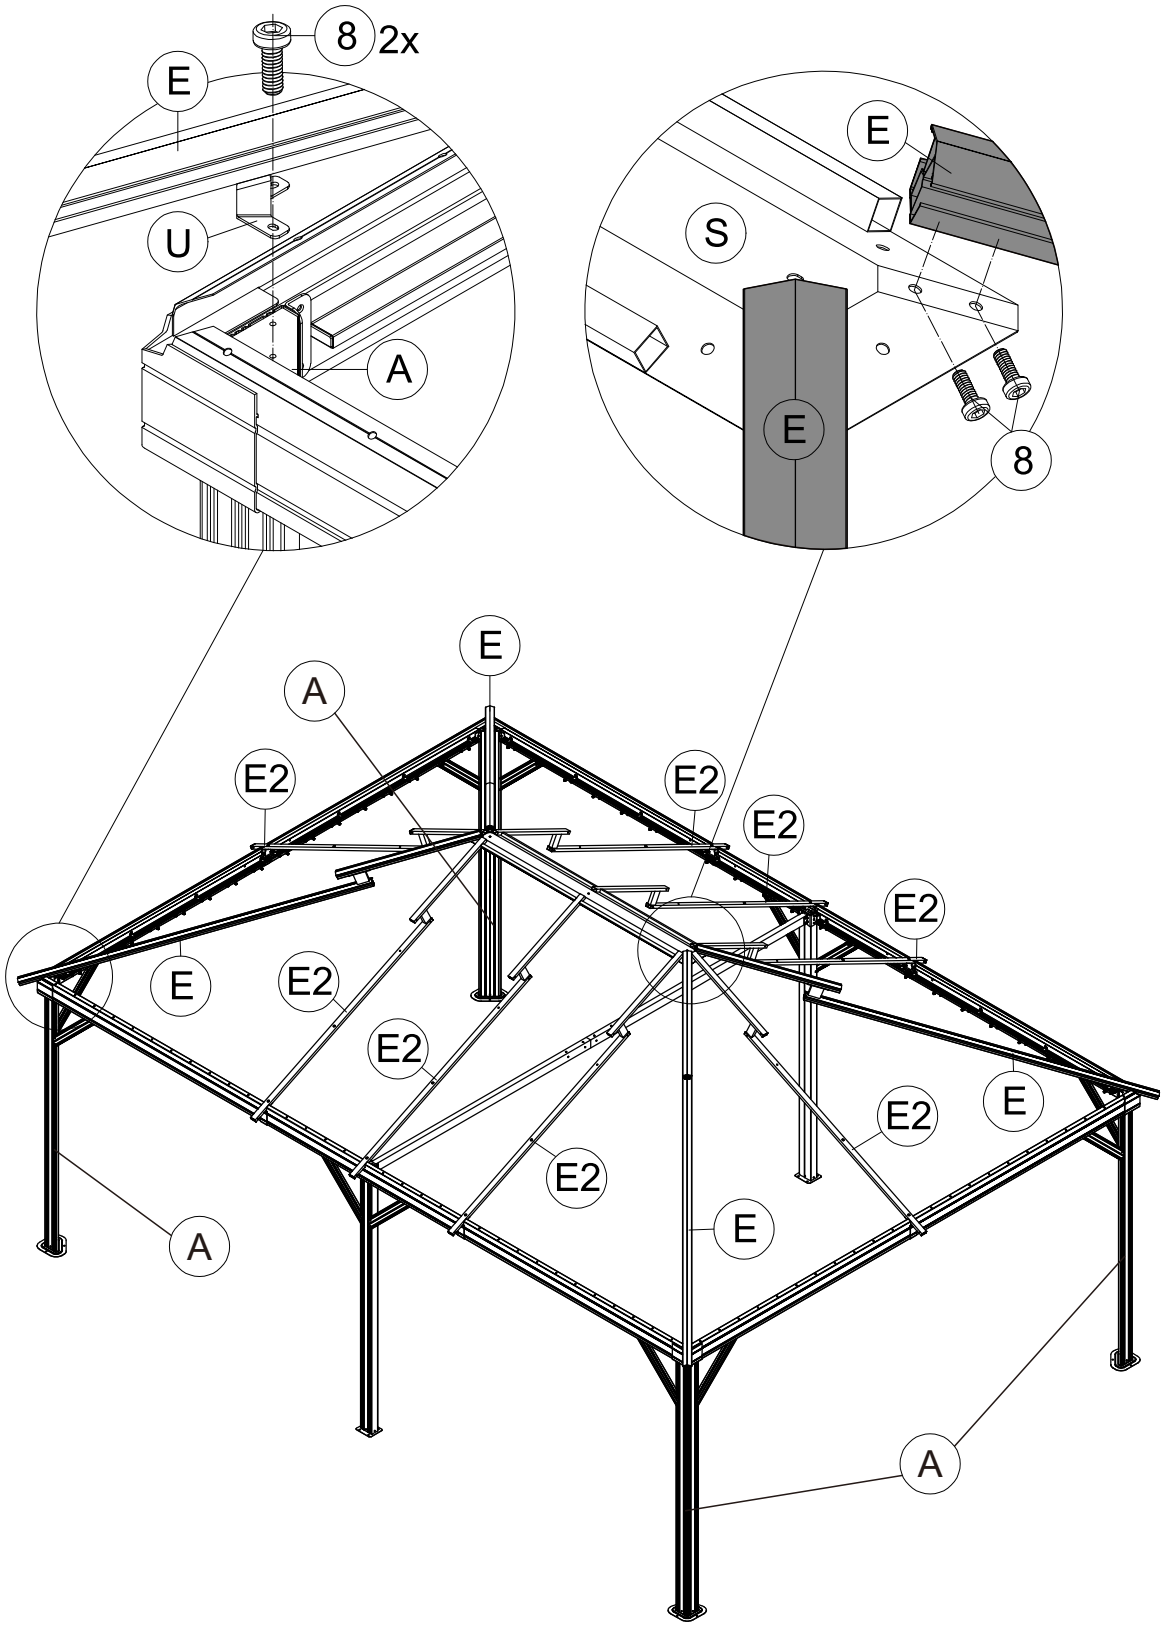


Solidifying Bar Assembly:

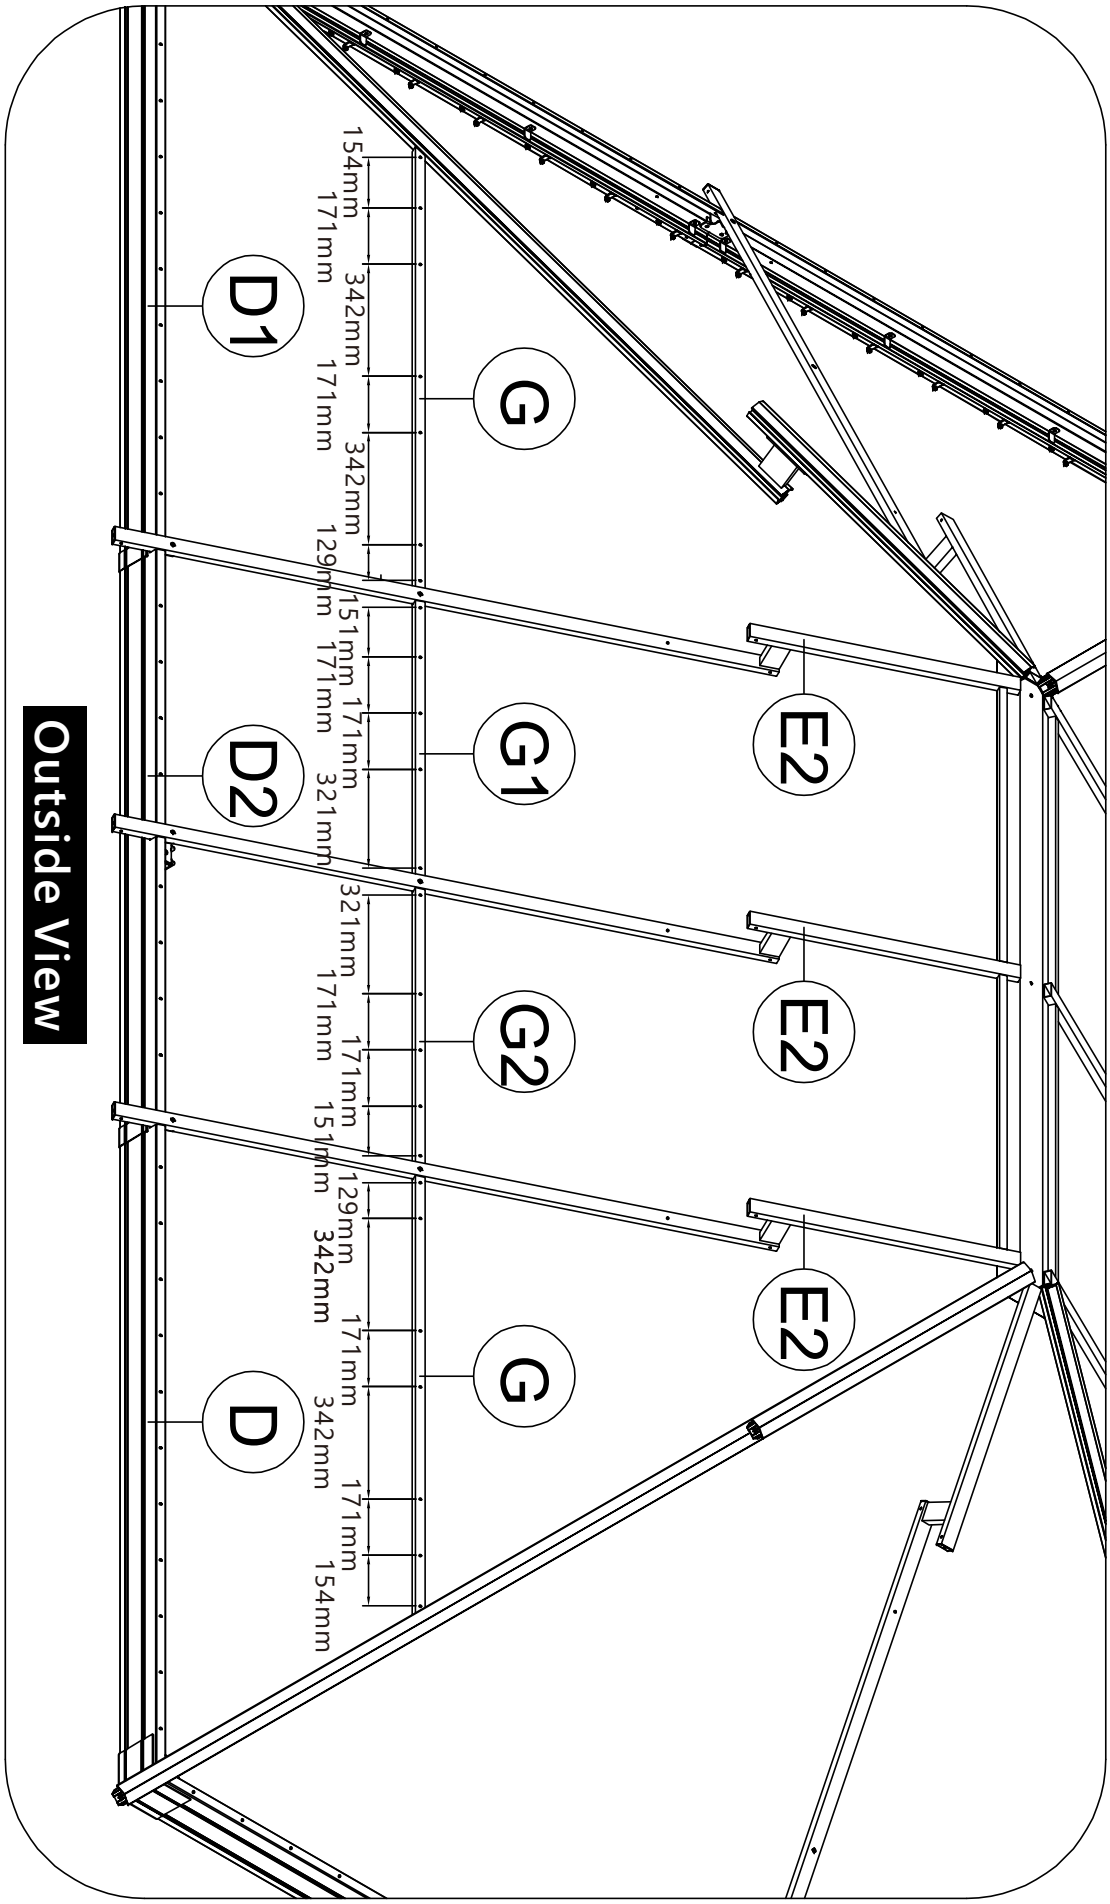


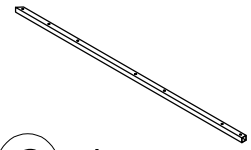


G 4x

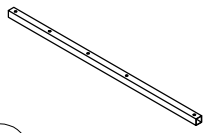

G1 2x

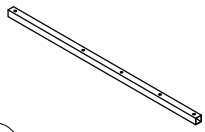

G2 2x



U3 6x



S4

1 1x




M6x10

7 6x




M6x16


8 12x

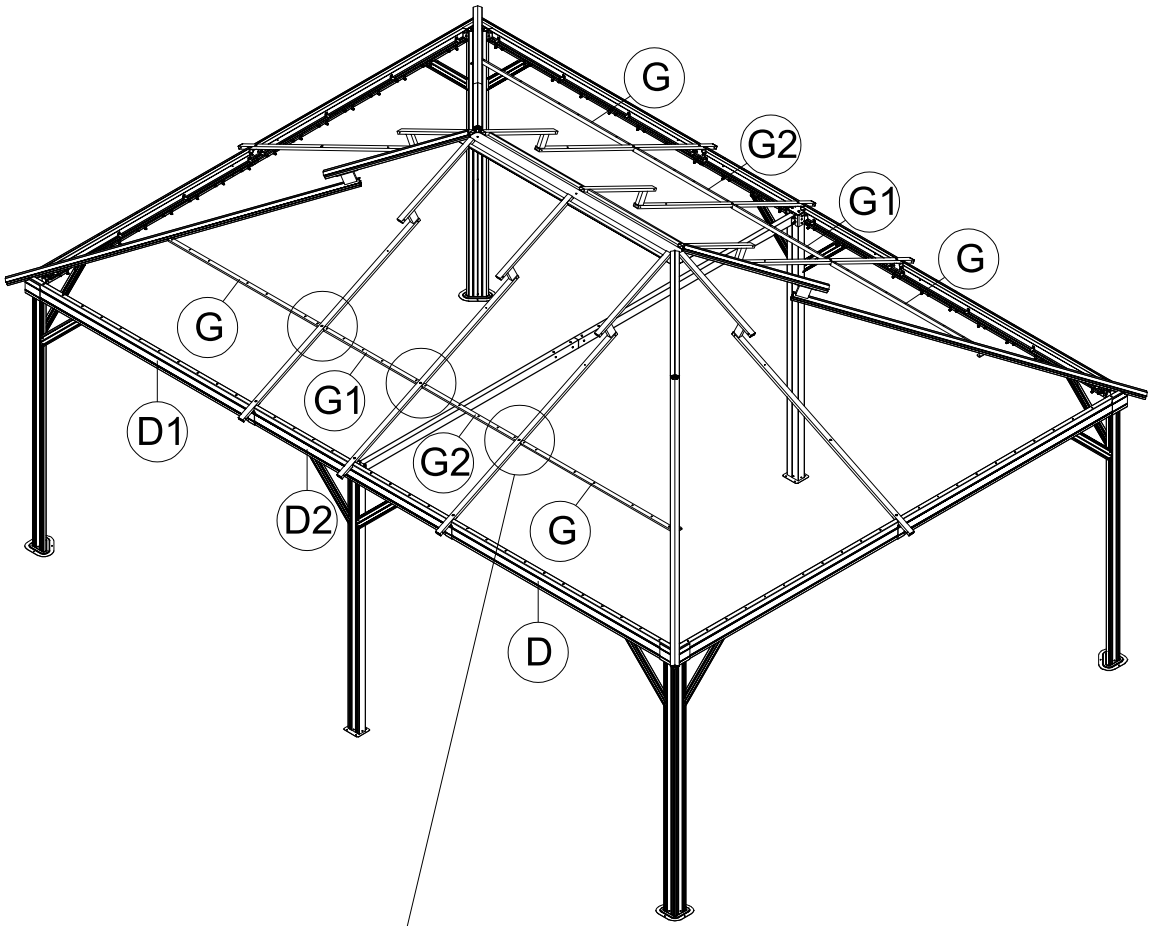


(1) Insert #U3 into both Part #G2 and Part #G to connect them with 2 bolts #8.
(2) Attach Part #G2 and Part #G to Part #E2 with 1 bolt #7.

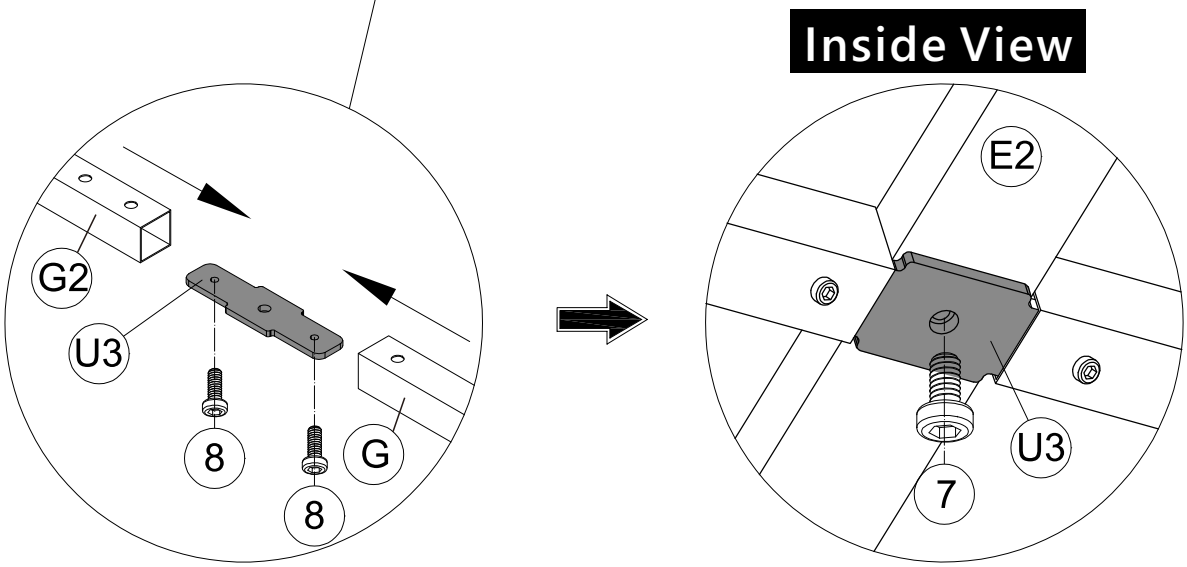


(3)Repeat the above procedure to assemble Part #G1 and #G2, then Part #G and #G1. Repeat for the opposite side.

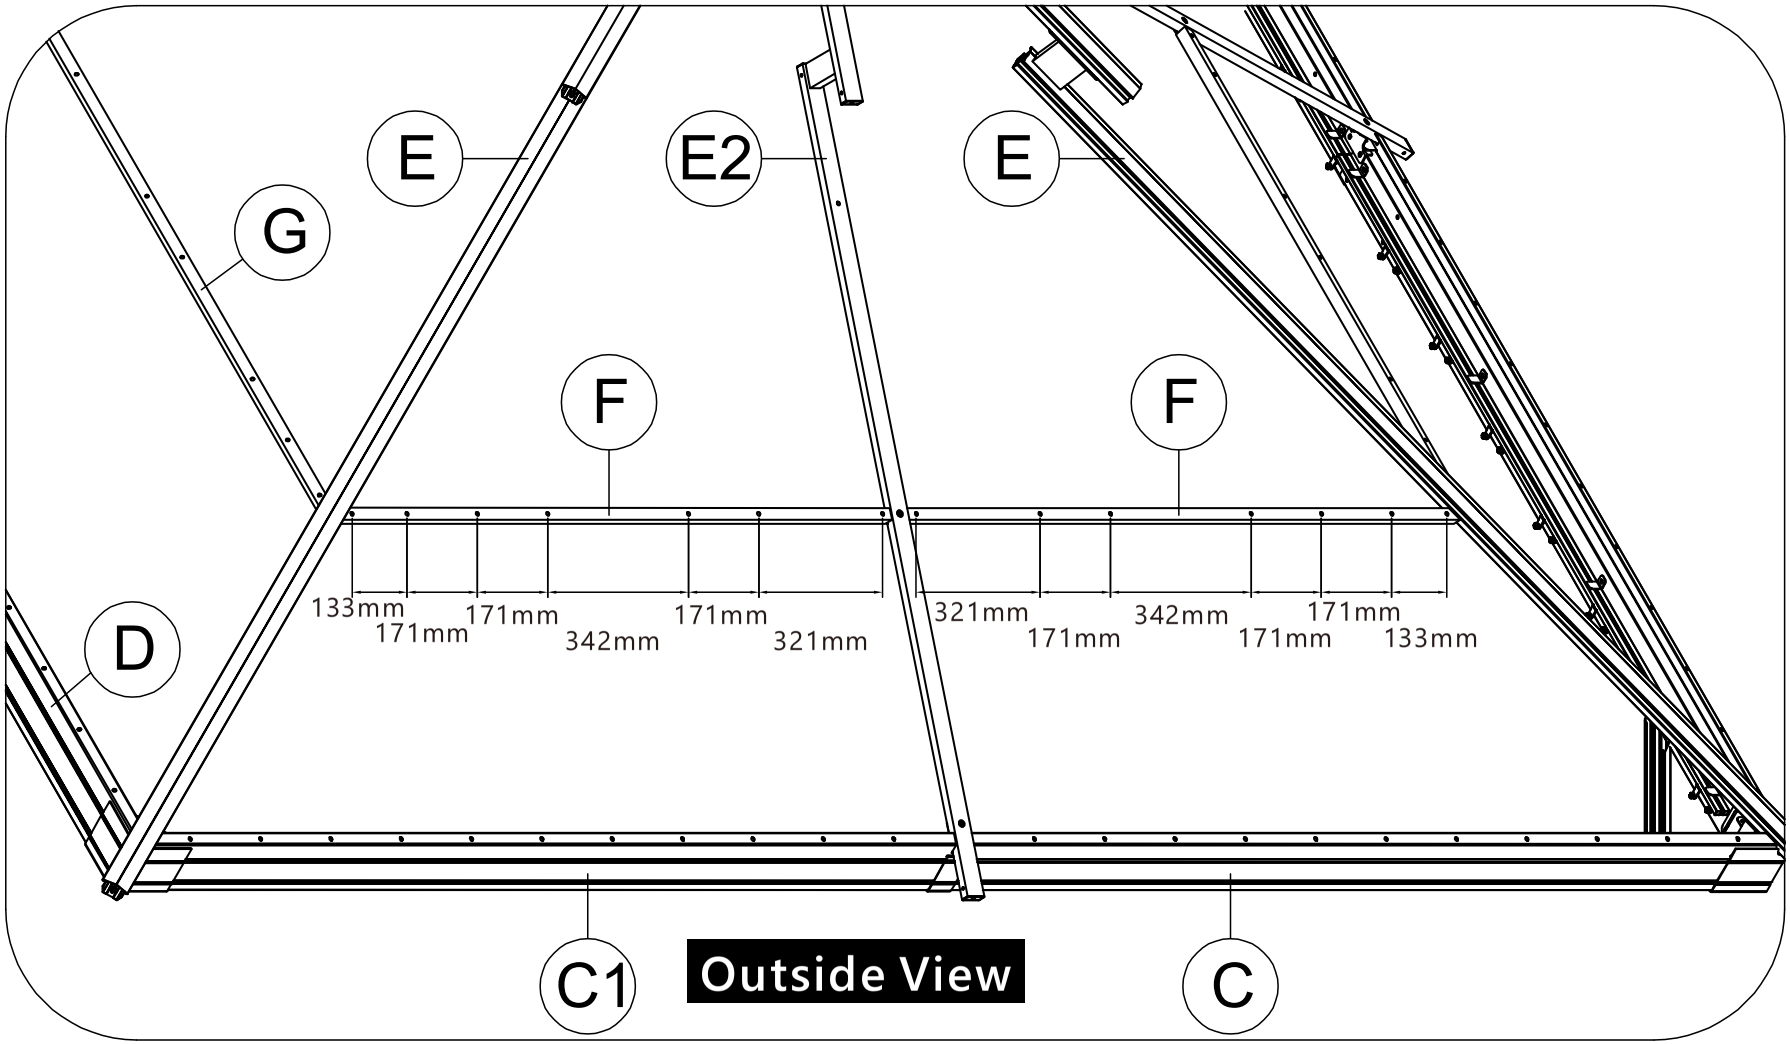
E
E2
E
G
F
F
D
133mm
171mm
171mm
342mm
171mm
321mm
321mm
171mm
342mm
171mm
171mm
133mm
C1
Outside View
C

25-1

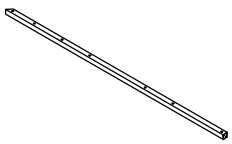

F 4x



U3 2x



S4

1 1x




M6x10

7 2x




M6x16

8 4x

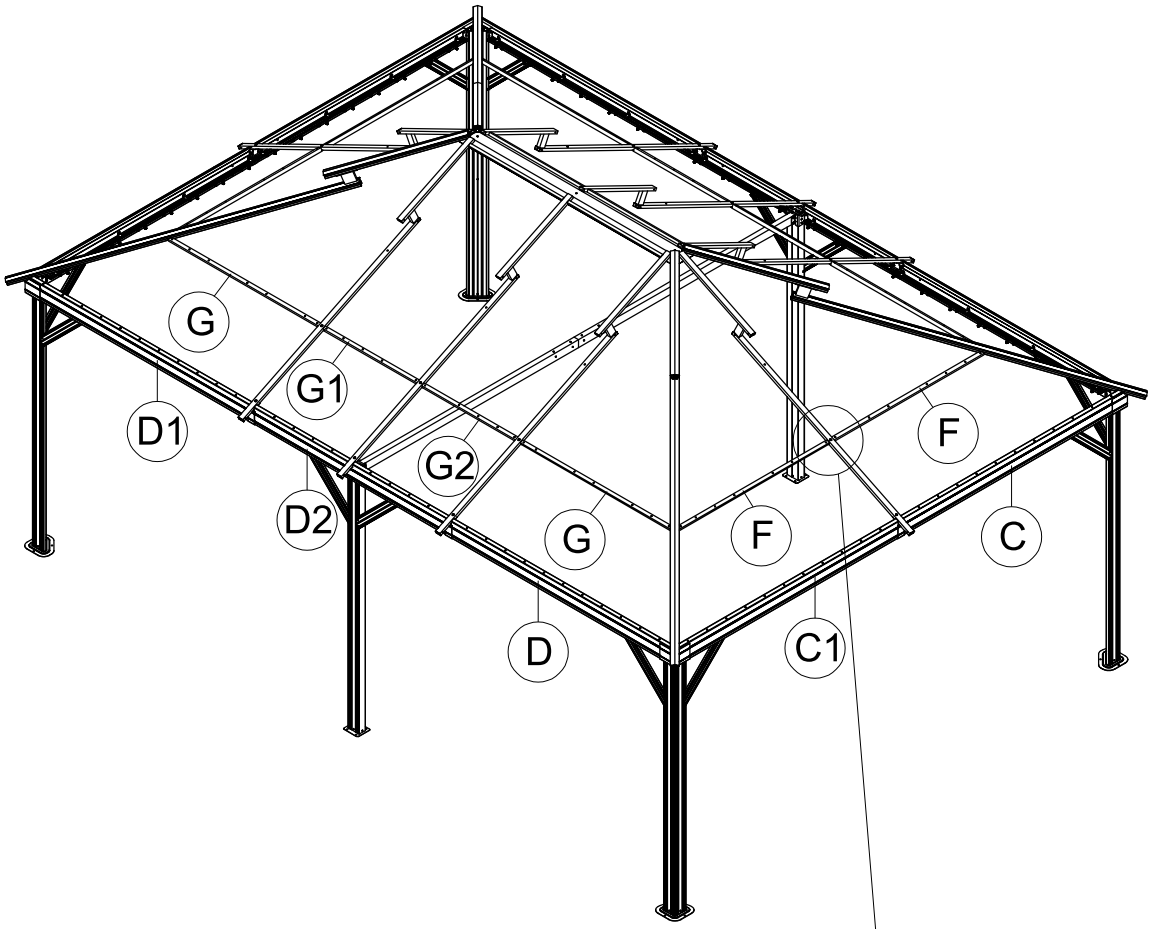

(1) Insert #U3 into 2 Part #F to connect them with 2 bolts #8.
(2) Attach Part #F to Part #E2 with 1 bolt #7.
(3)Repeat the above procedures to assemble the opposite side.

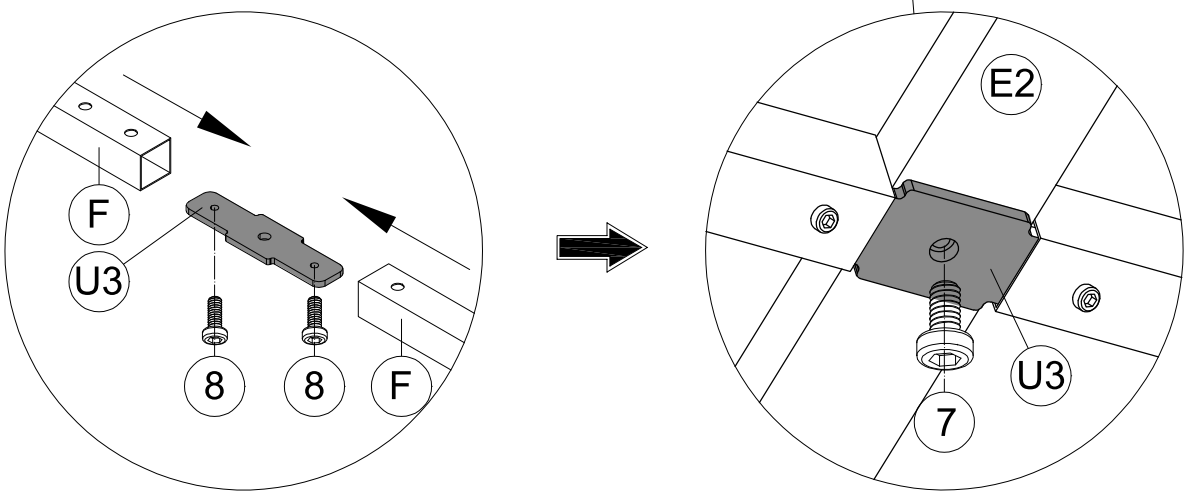

Inside View



U2 4x




S4


1 1x




M6x16


8 12x

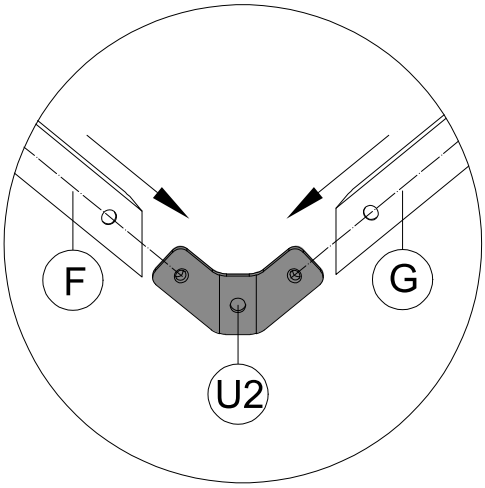

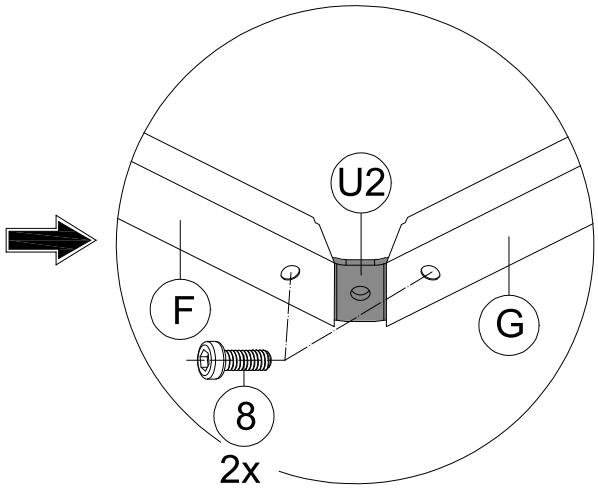


Inside View

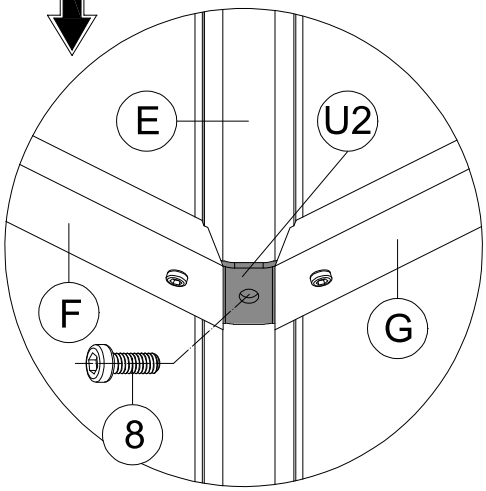


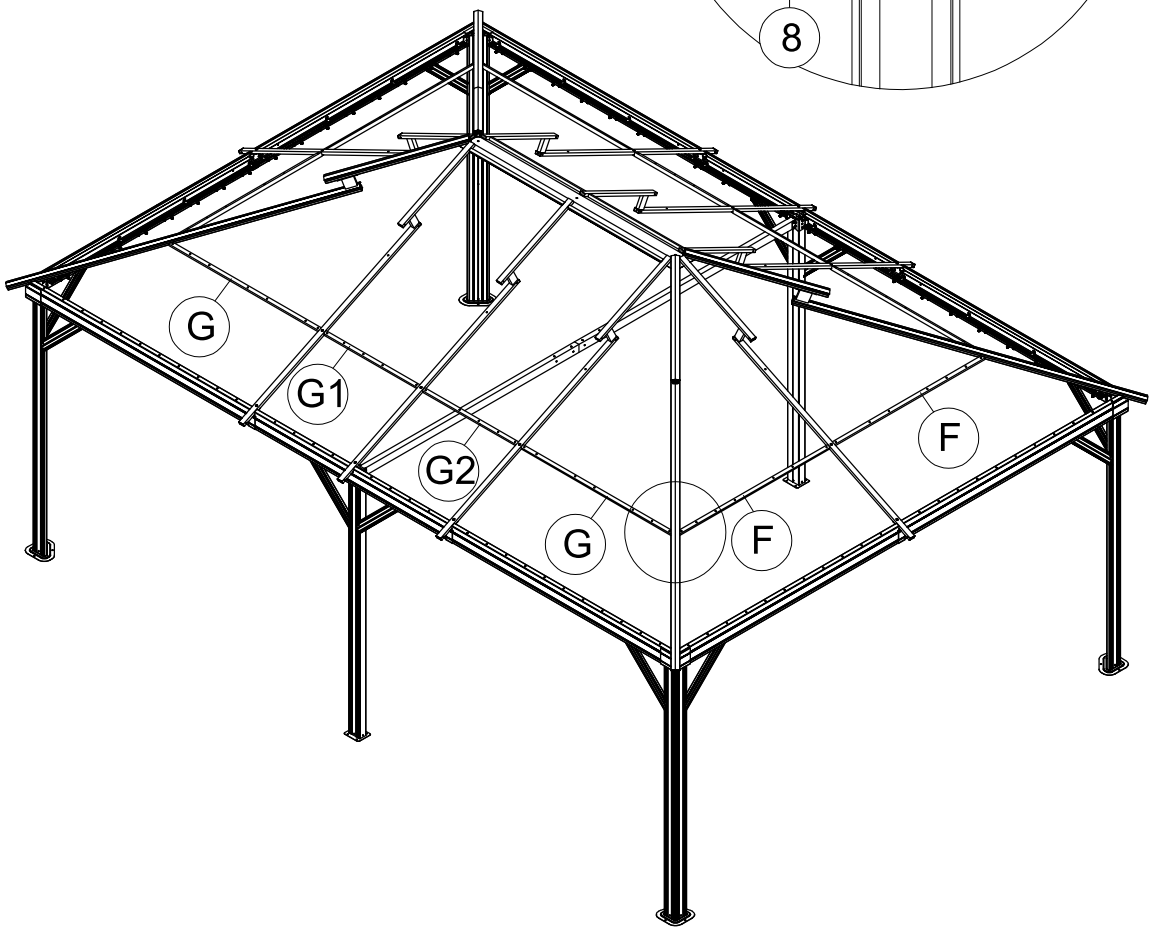

(1) Insert Part #U2 into Part #F and Part #G.
(2) Secure with 2 Bolts #8.
(3) Secure them to Part #E with 1 Bolt #8.
(4) Repeat the above procedures to assemble the other 3 sides.

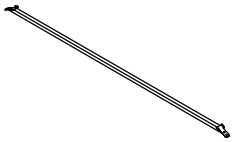

E3 3x



S8 3x



S4


1 1x



M6x16


8 6x


Hang 1 hook #S8 on #E3 rod. Repeat 3 times.

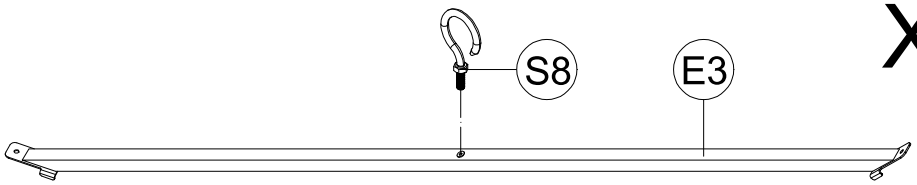


X3


Use 2 bolts #8 to secure
#E2 and #E3. Repeat 3 times.

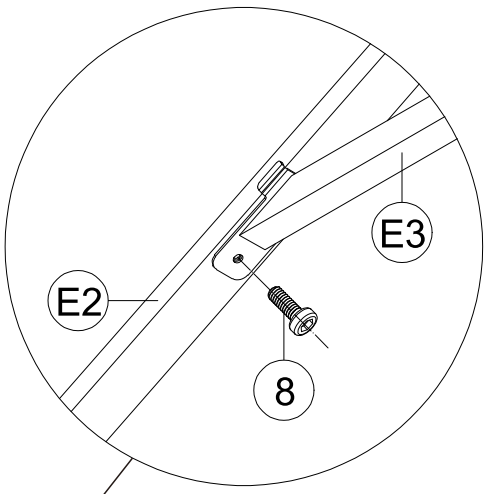

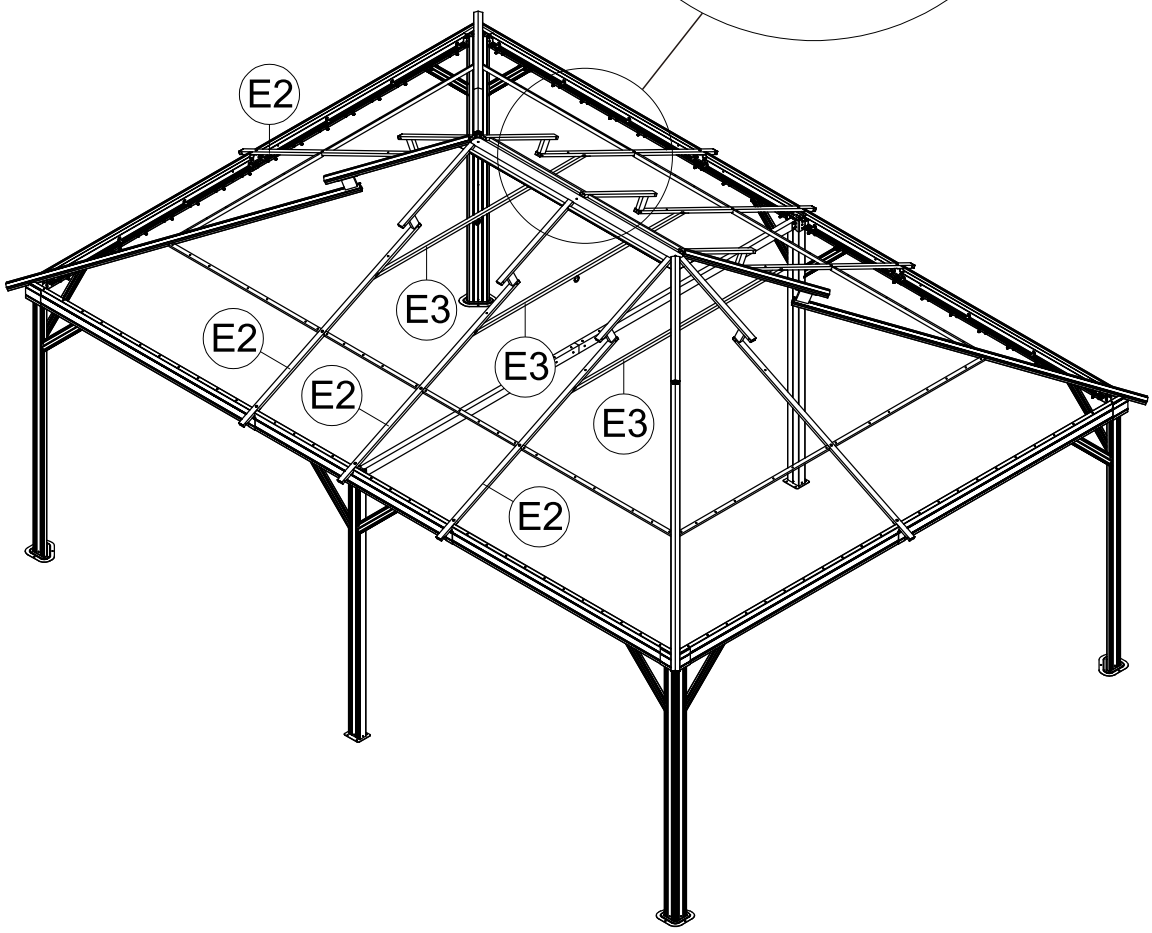


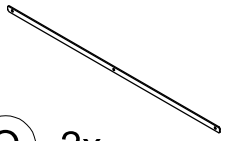


Q 2x

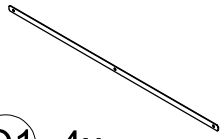


Q1 4x

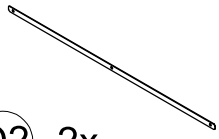


Q2 2x

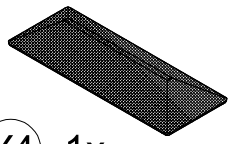


Y4 1x

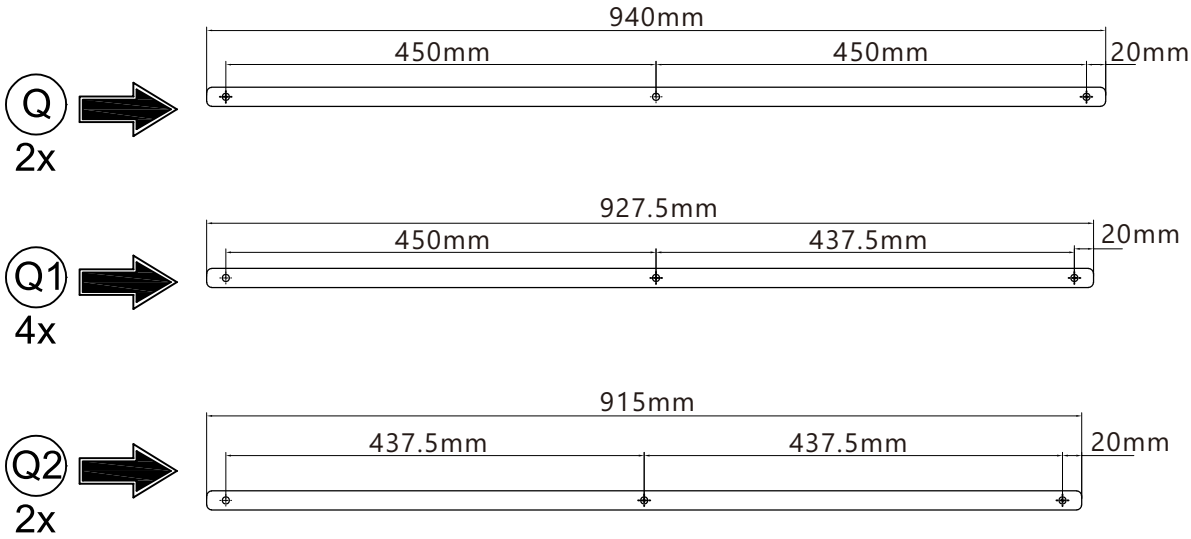


Insert the Plastic Bar into the Small Mesh.

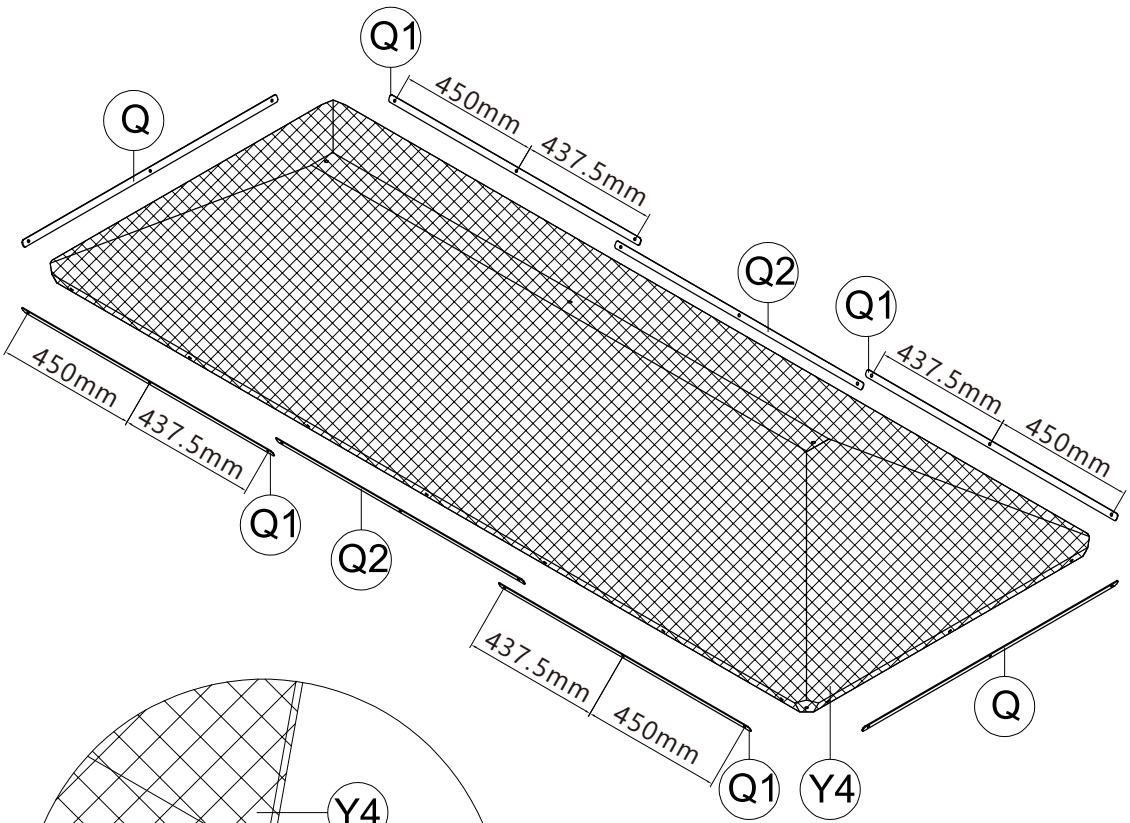

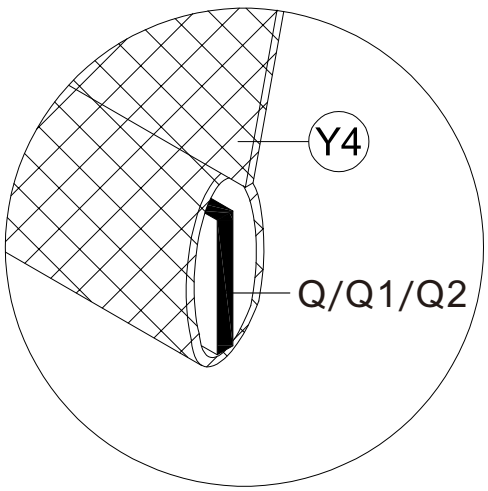





1 1x




M6x25

9 3x

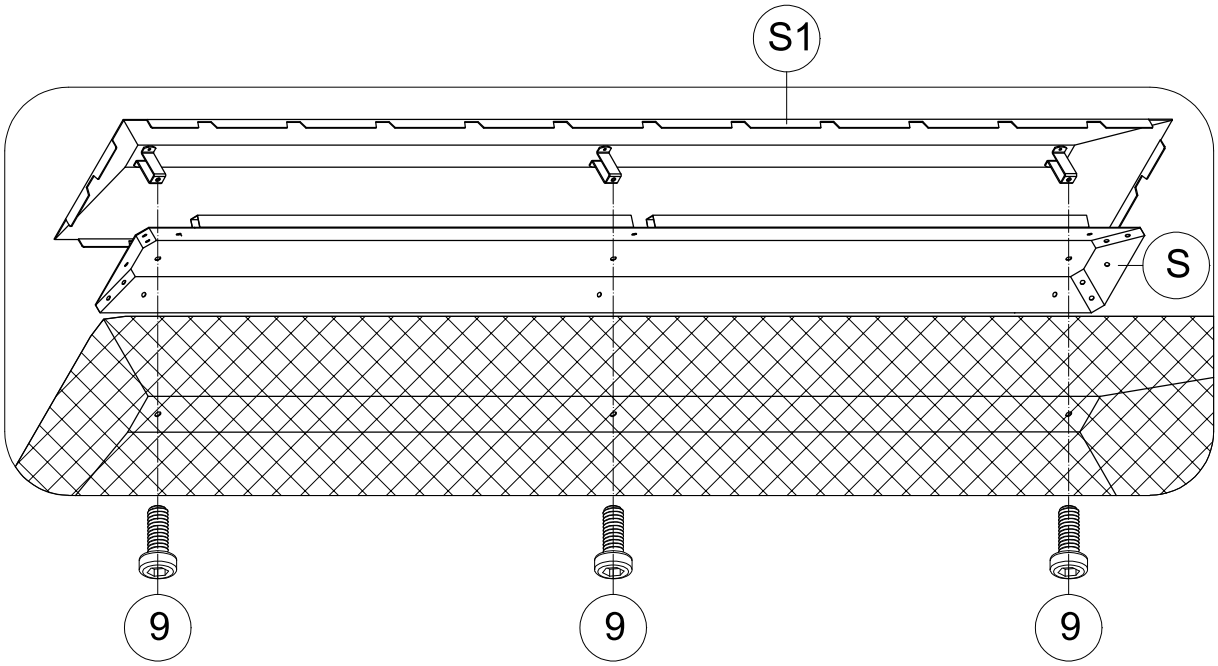

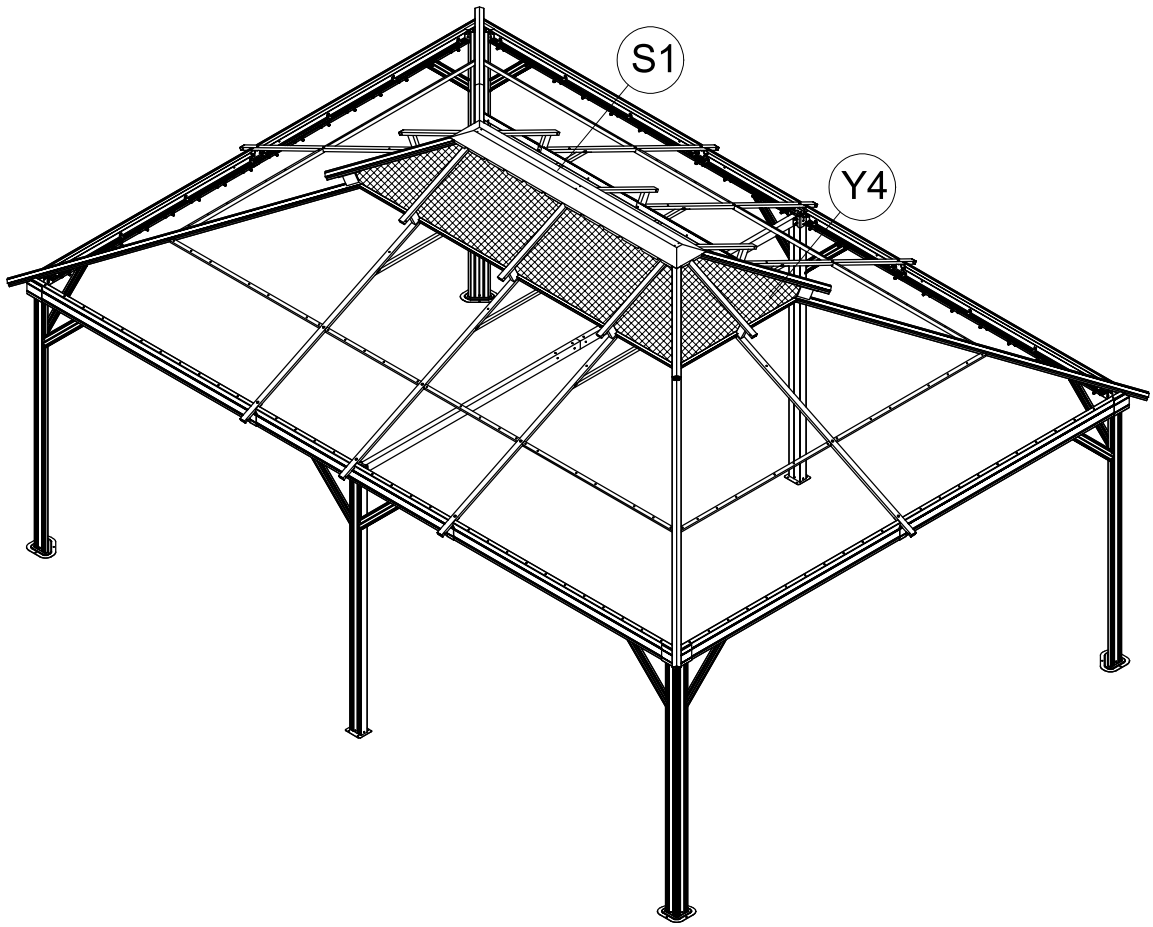


Place the Outside Roof Cover on the Inside Roof Cover, align the holes and use 3 Bolts #9 to secure the Small Mesh #Y4 to the Inside Roof Cover (From Bottom to Top).

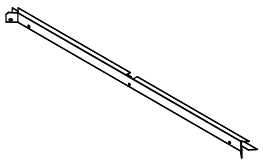

J 2x

S4

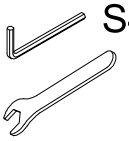

1 1x



ST6.3x18

2 2x



M6


5 4x




M6x16


8 4x

Use screw #2 to assemble the plastic bar #Q (in the small mesh #Y4) and finishing bar #J to the middle roof tube #E2.

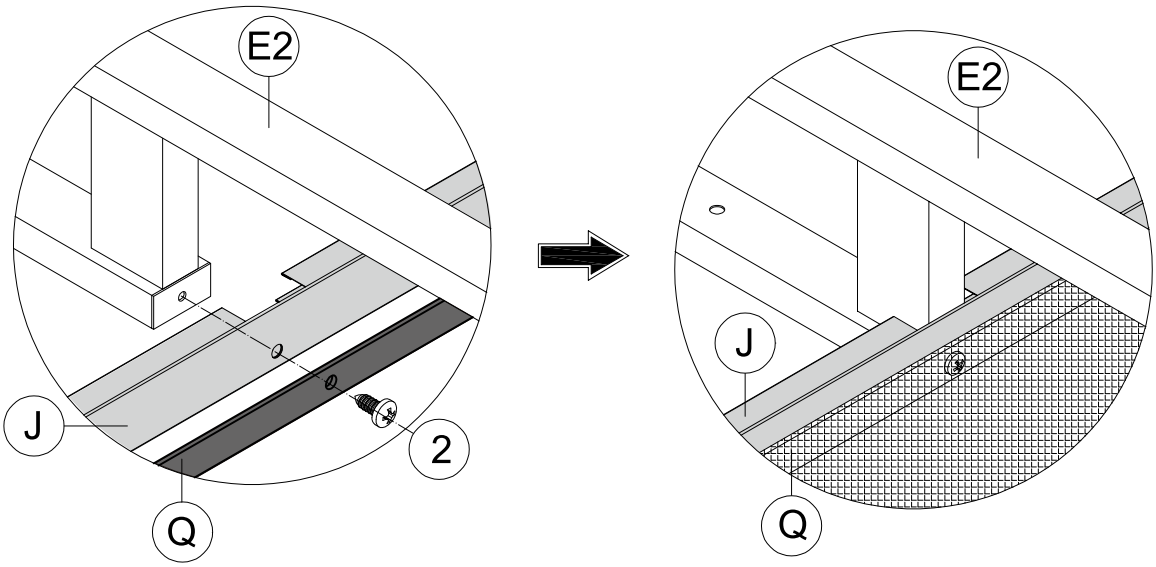

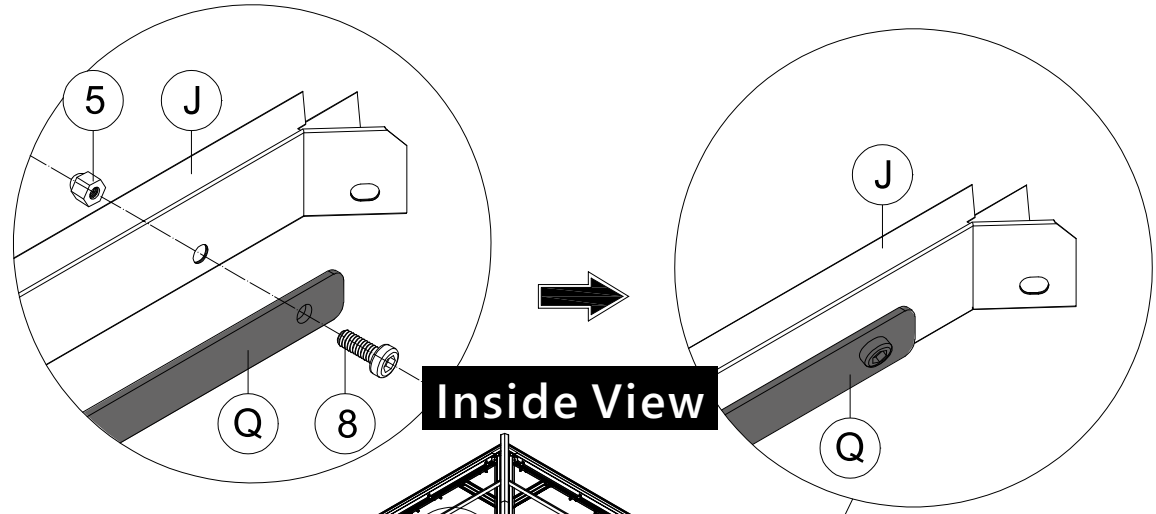


Inside View

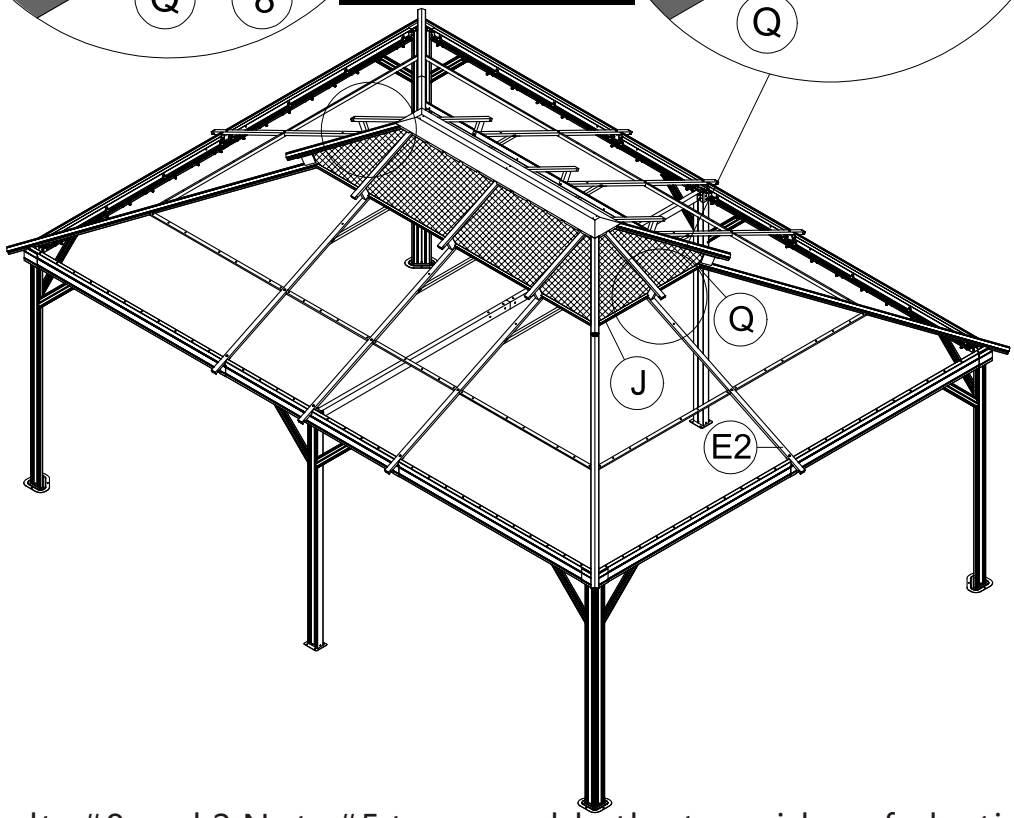


Use 2 Bolts #8 and 2 Nuts #5 to assemble the two sides of plastic bar #Q and finishing bar #J.

Repeat the above procedures to assemble the opposite side.

Please do not pull plastic bar out when installing it with #J on the middle roof tube #E2.

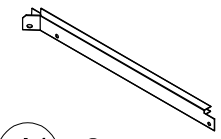


J1 2x

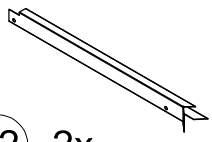

J2 2x



J3 4x

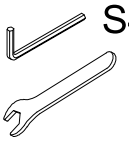

S4

1 1x



ST6.3x18

2 6x




M6


5 8x





M6x16

8 8x

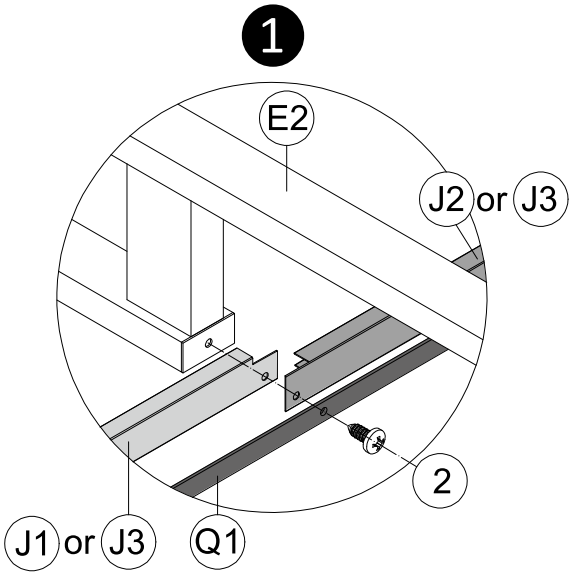


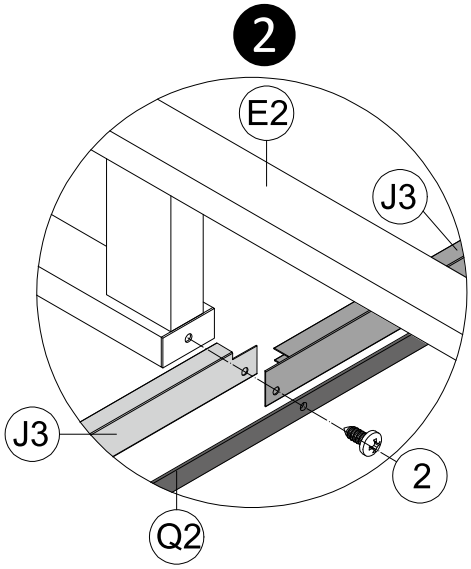

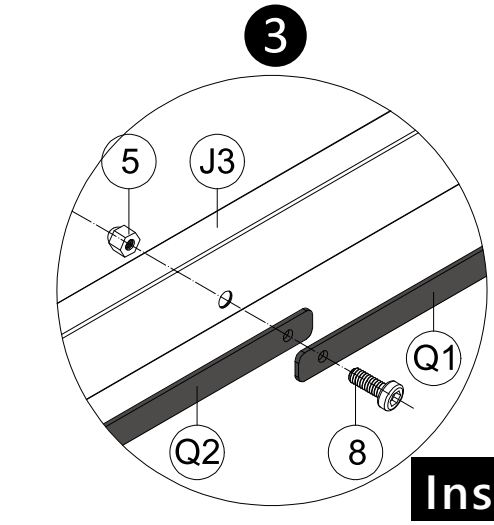

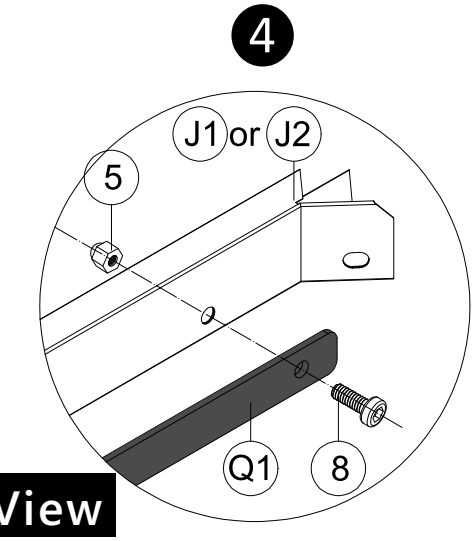

Inside View

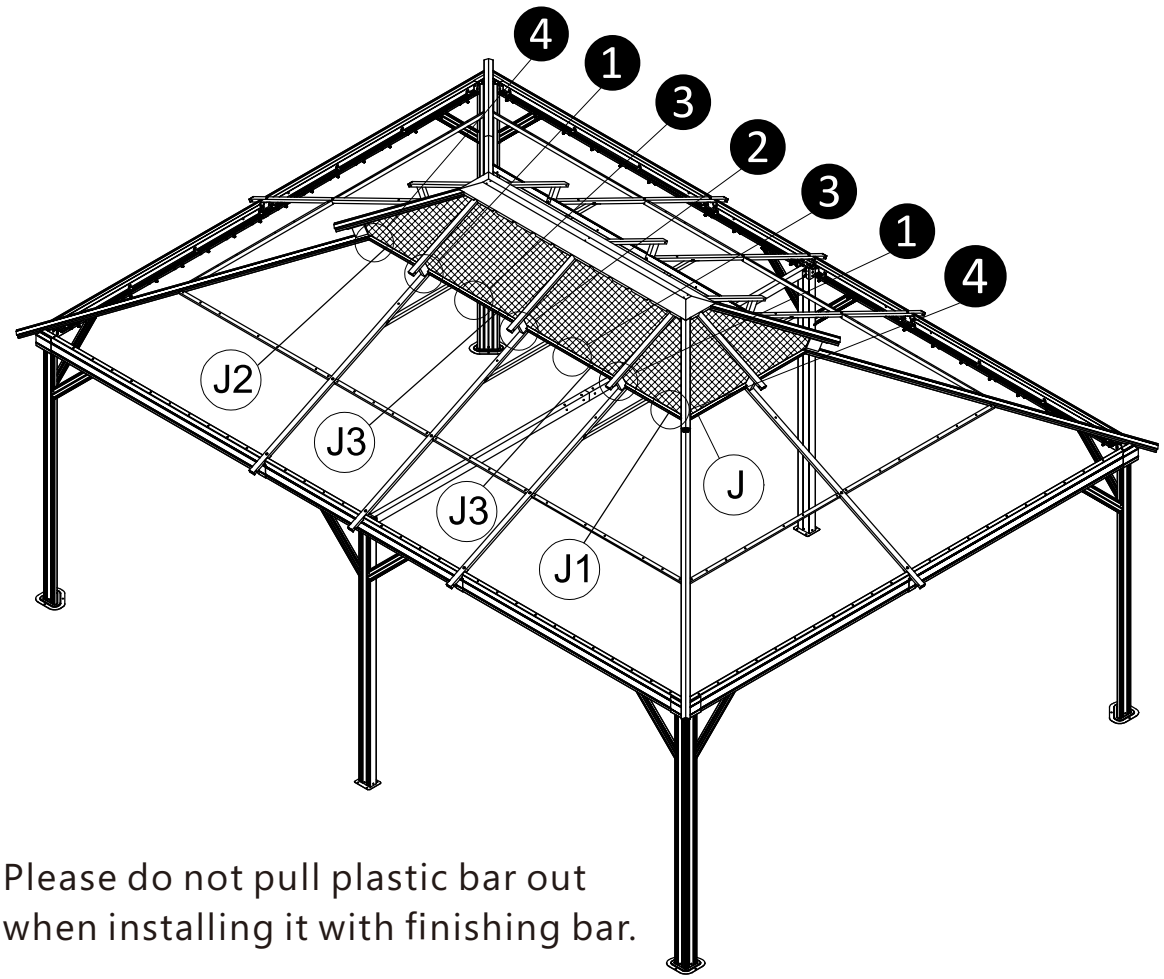

Please do not pull plastic bar out when installing it with finishing bar.




X3 4x




ST6.3x18


2 4x

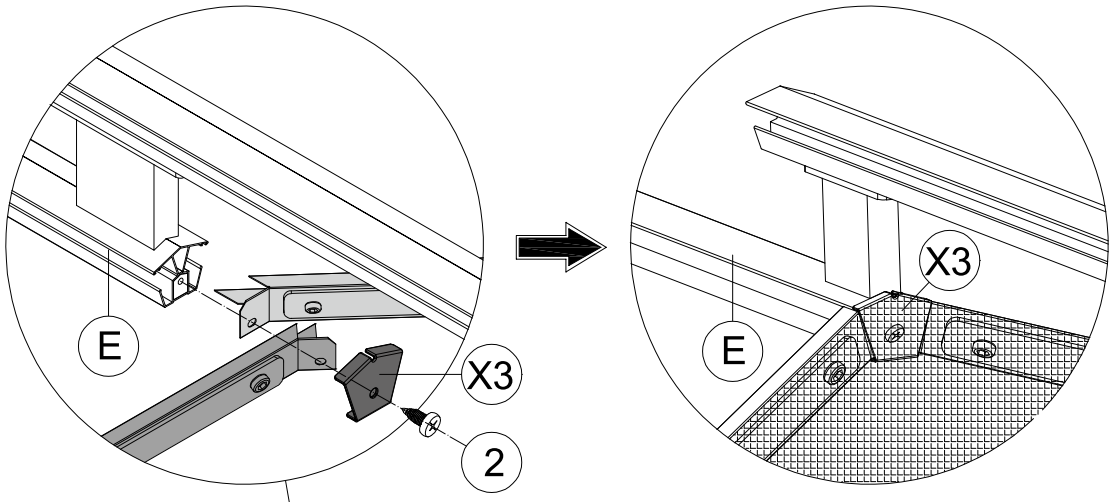


Inside View

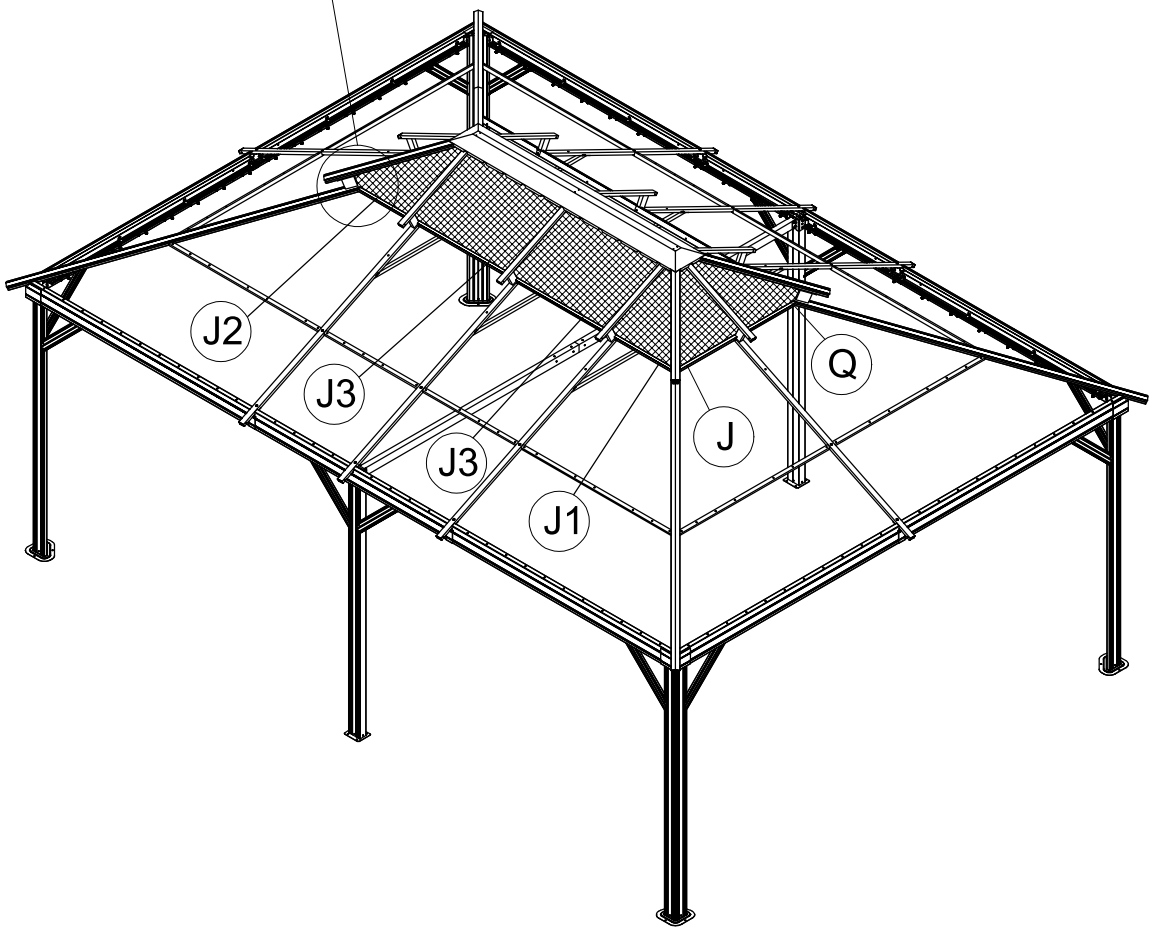


Use 4 Screws #2 to secure the small mesh, finishing end #X3 and finishing bar to the corner roof tube #E.




L1 2x

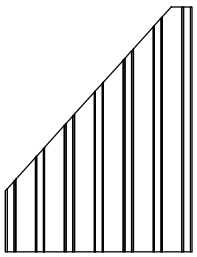


L2 2x



L3 2x

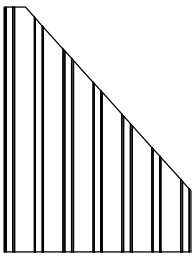

L4 2x



Z 8x




Z1 4x




Z2 4x

33

Cover Part #Z, #Z1 and #Z2 to Roof Panels.

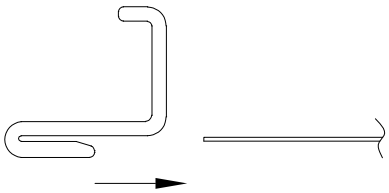



Section View

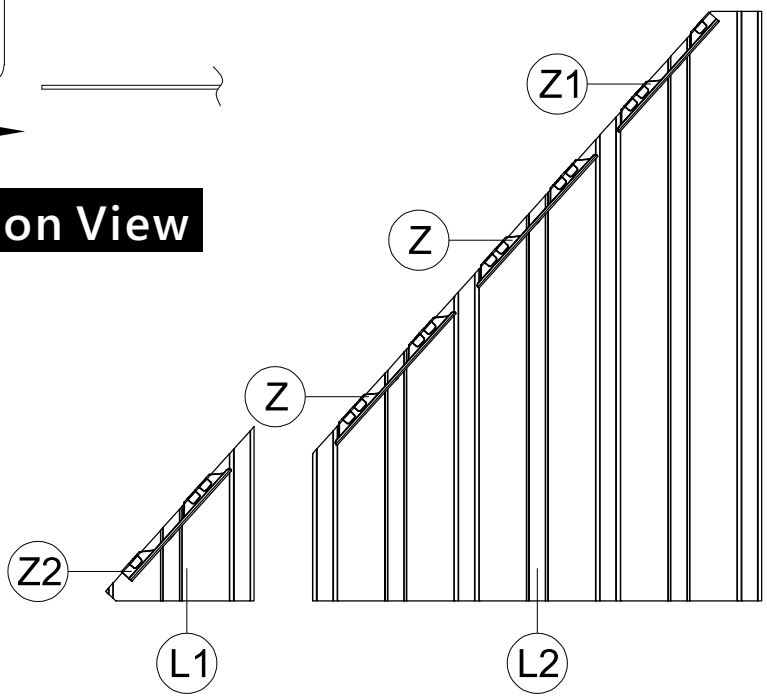


X2


Attach #Z, #Z1 and #Z2 by lightly tapping with a screwdriver.

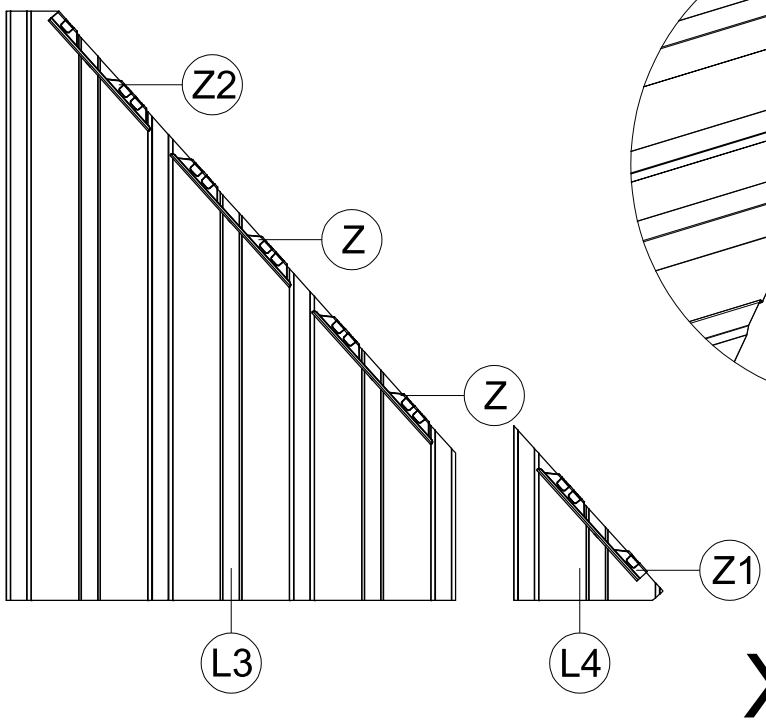


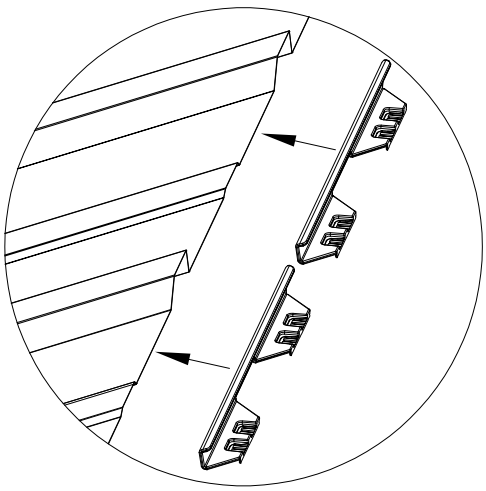


X2

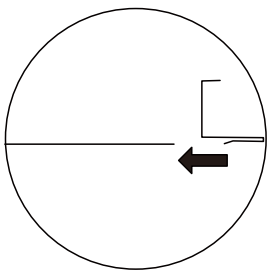

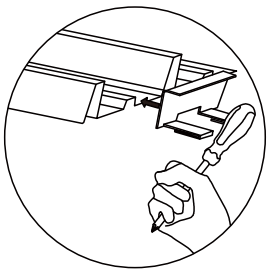


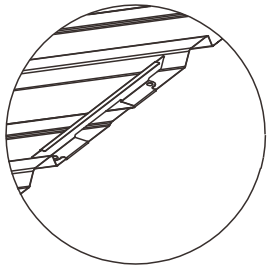


Please install Plastic Clips in strict accordance with the instructions.




N1 2x

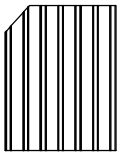


N2 2x

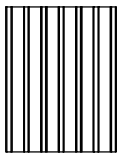


N3 4x



N4 2x

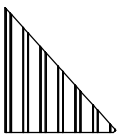

N5 2x



Z 12x




Z3 2x




Z4 2x

Cover Part #Z, #Z3 and #Z4 to Roof Panels.

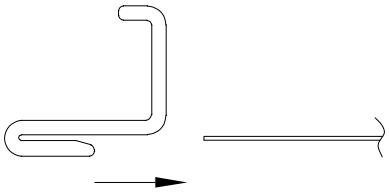



Section View

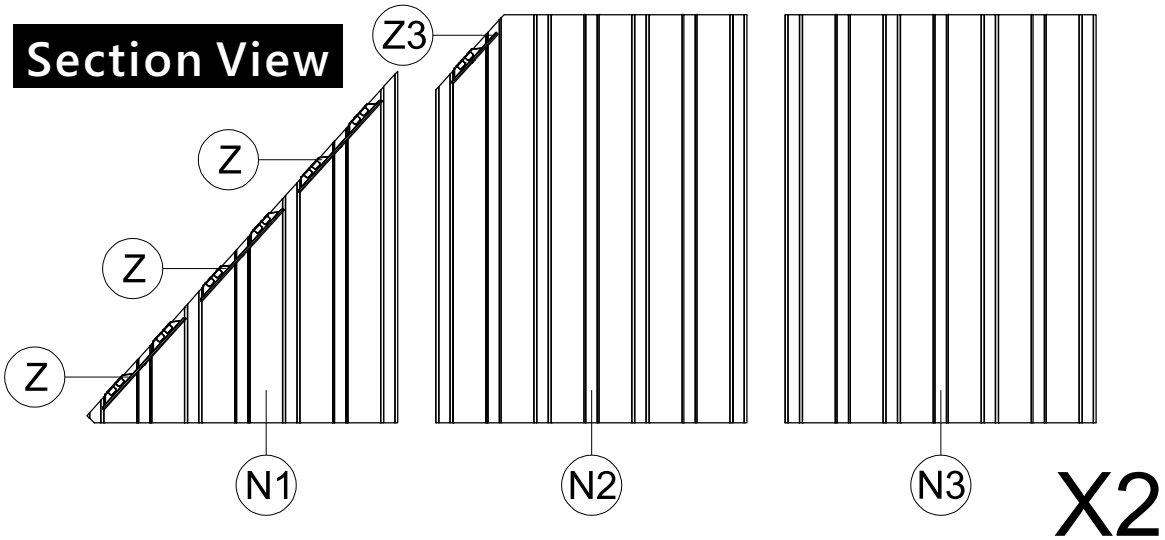


X2

Attach #Z, #Z3 and #Z4 by
lightly tapping with a screwdriver.

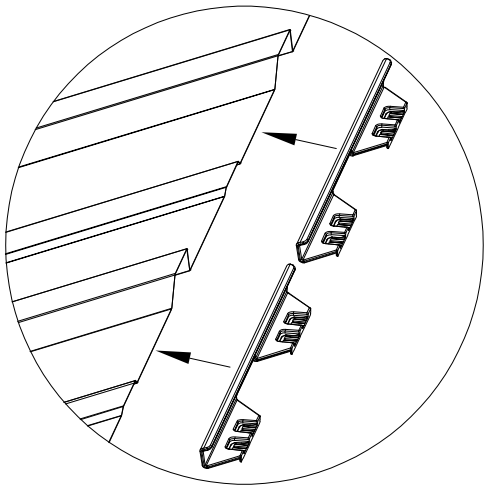

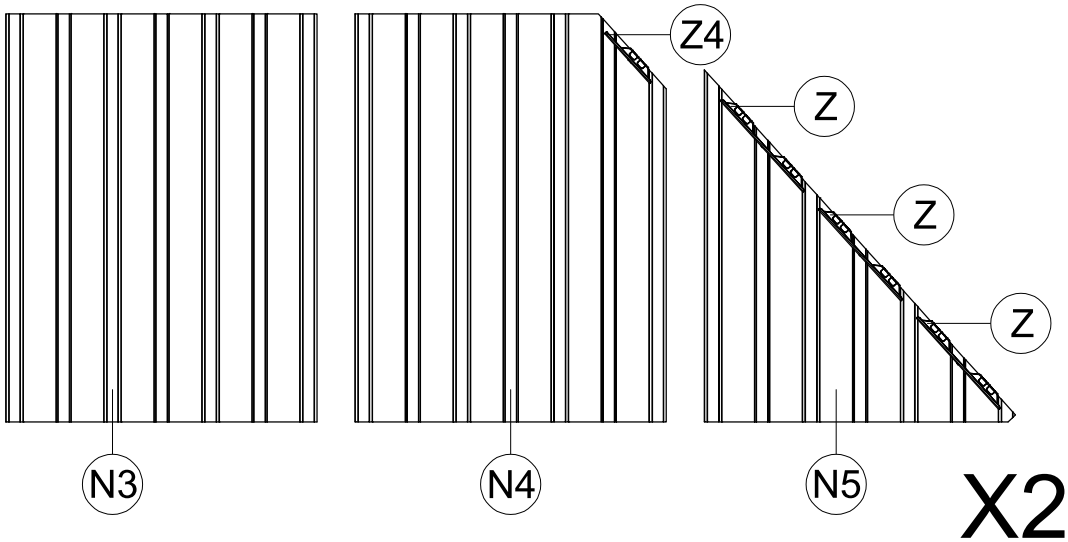


X2

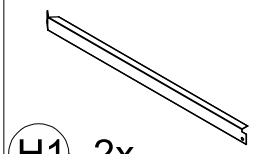


H1 2x




H2 2x

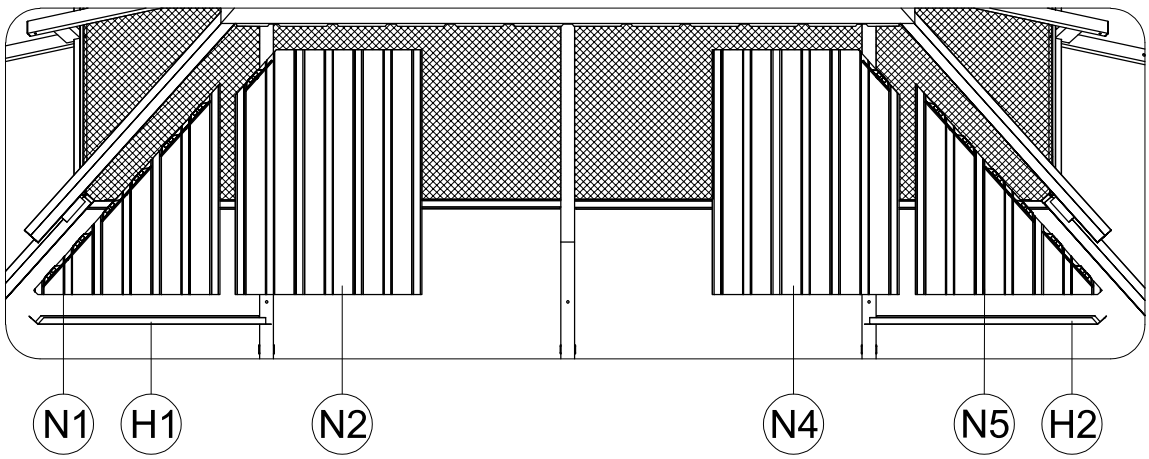


(1)Insert Part #N1 and Part #N2 into the frame; attach Part #H1 to Part #E2, securing with Screw #2.
(2)Insert Part #N5 and Part #N4 into the frame; attach Part #H2 to Part #E2, securing with Screw #2.
(3)Repeat the above procedures to assemble the opposite side.

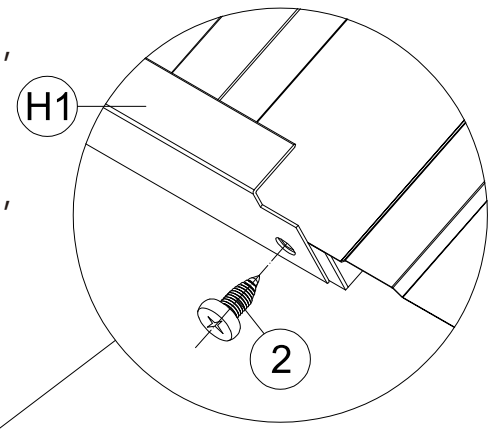


Please don't tighten all Screws.

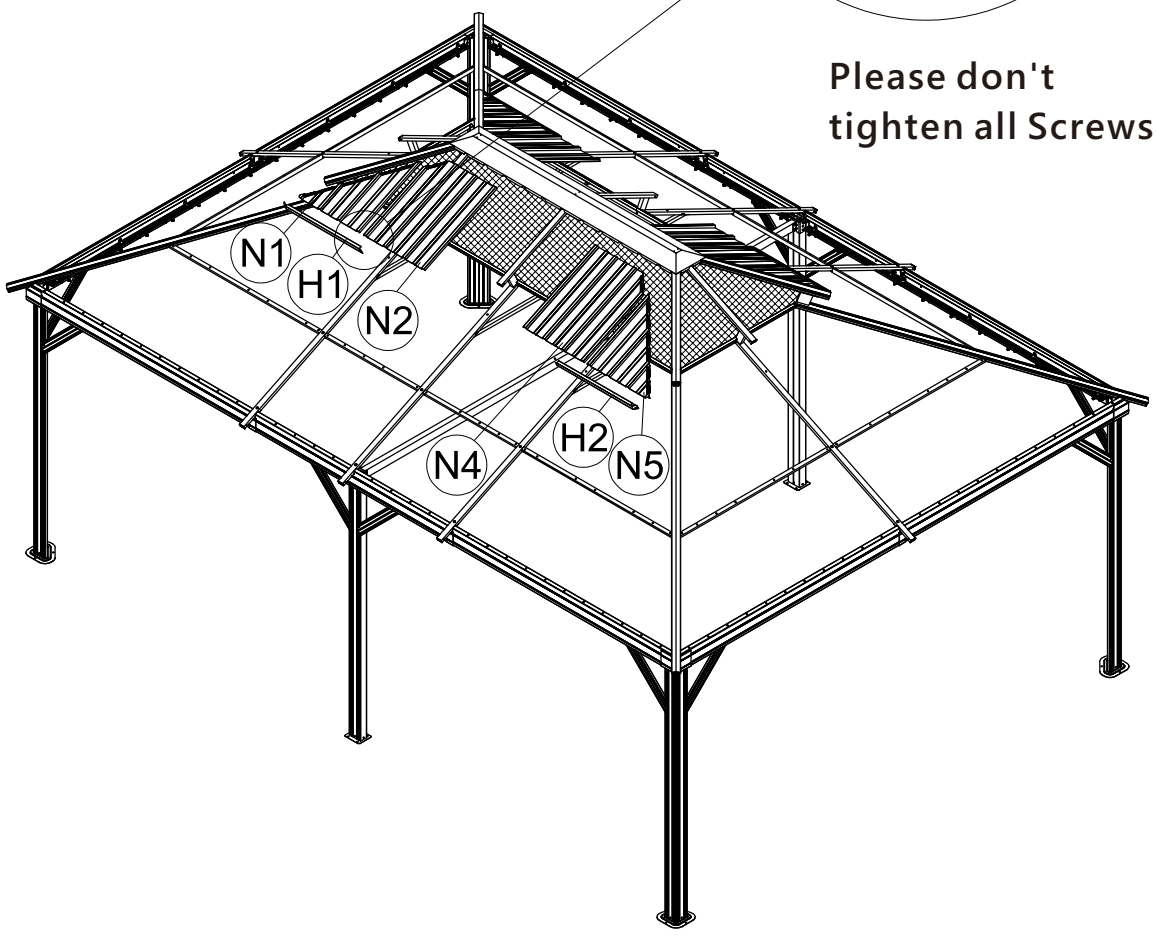

ATTENTION: The bigger roof panel need to cover the smaller one.

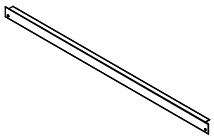

H3 2x

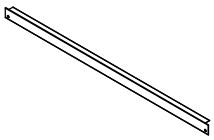

H4 2x




X2 6x




ST6.3x18


2 6x

Insert 2 Part #N3 into the frame; attach Part #H1, #H2, #H3, #H4 and Finishing End #X2 to Part #E2, securing with Screw #2.

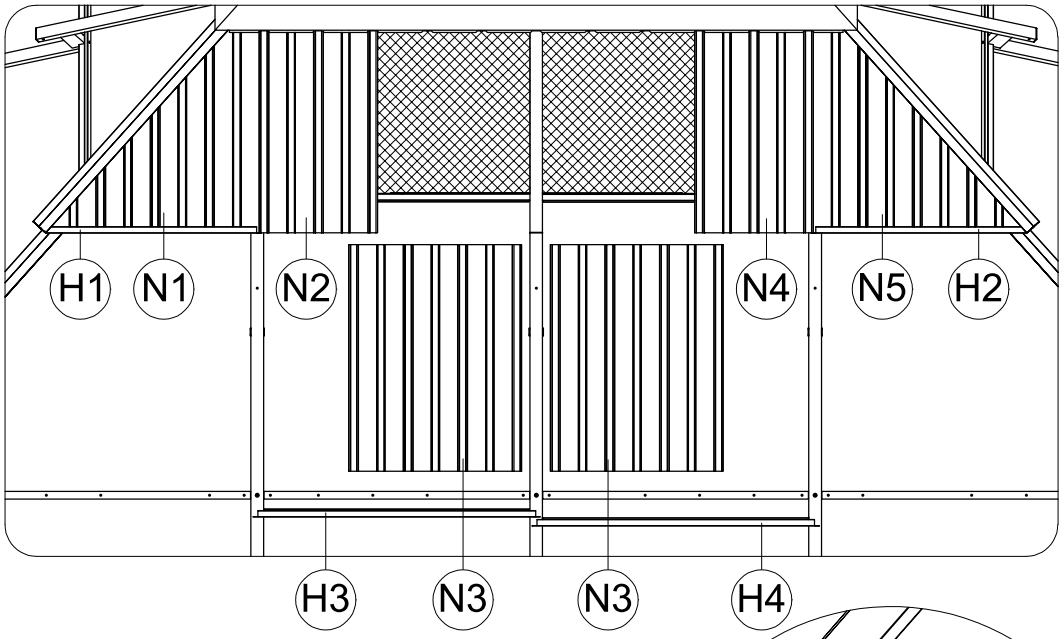


When installing Part #H1, #H2, #H3 and #H4, you should unscrew the Screw #2 that have not been tightened.

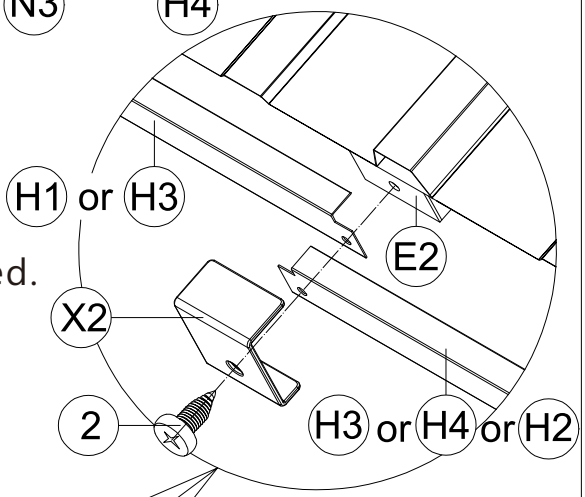

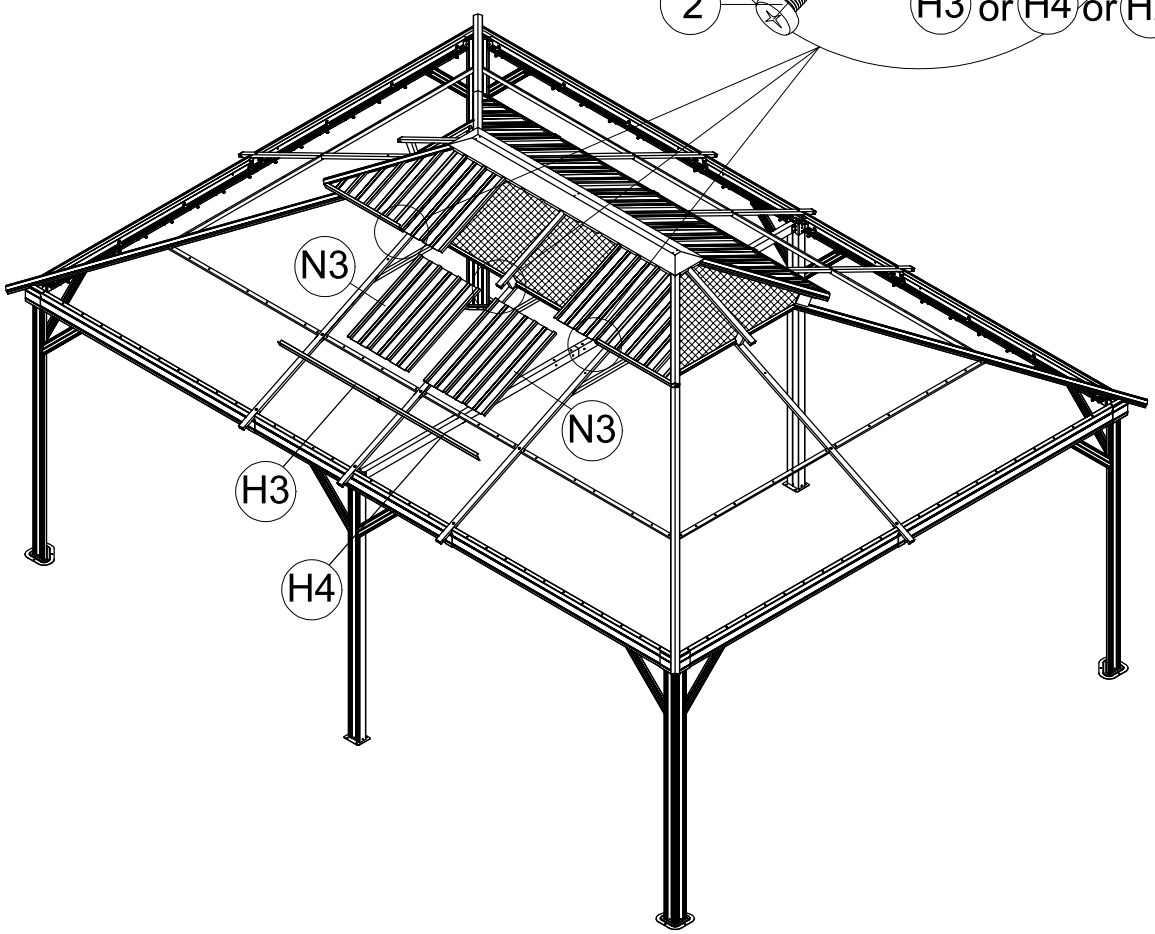

Repeat the above procedures to assemble the opposite side.

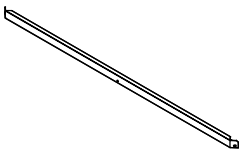


H 2x





ST6.3x18

2 2x

ATTENTION: The bigger roof panel need to cover the smaller one.

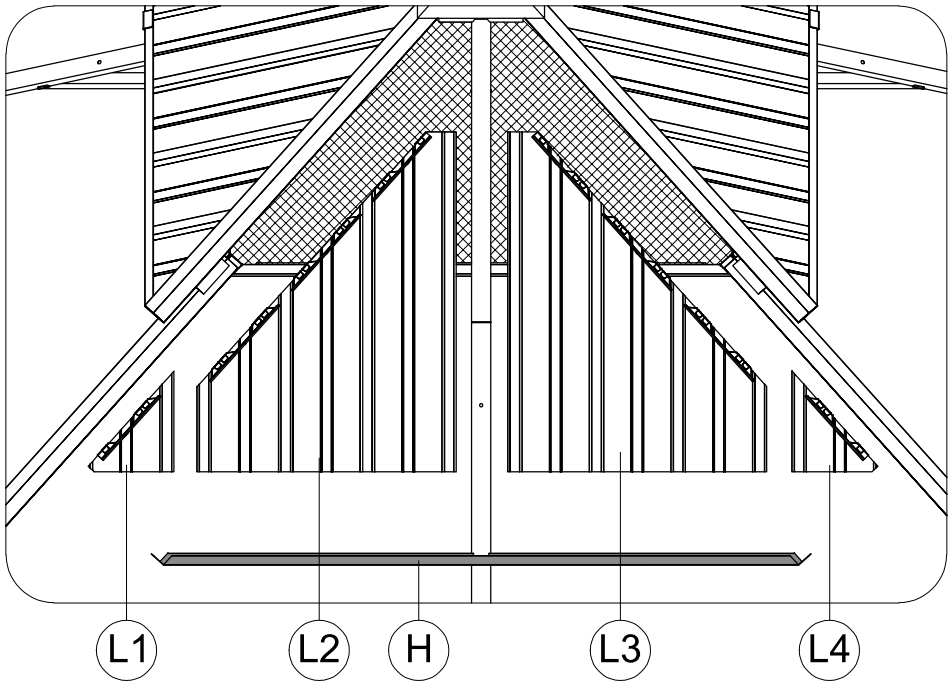

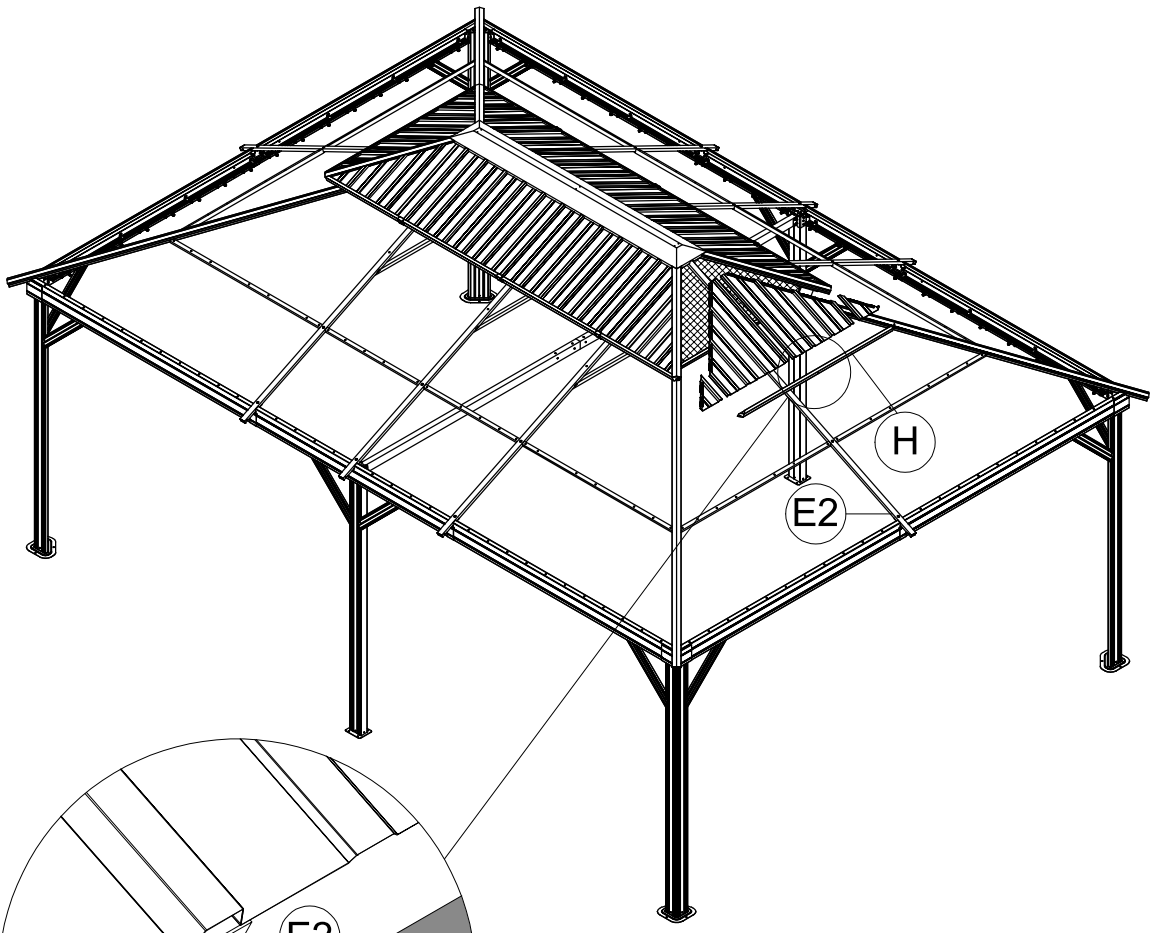

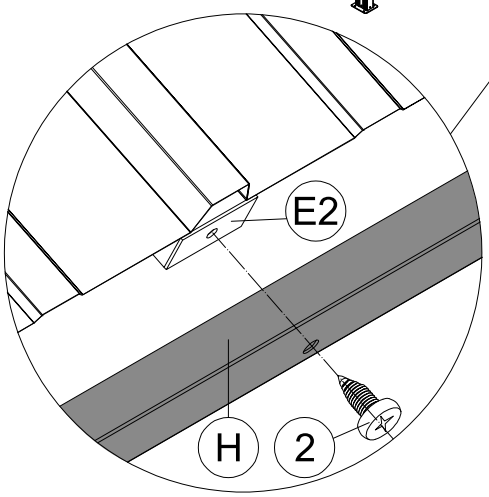

(1) Insert Part #L1, #L2, #L3 and #L4 into the frame.
(2) Attach Part #H to Part #E2, securing with Screw #2.
(3) Repeat the above procedures to assemble the opposite side.




X3 4x




ST6.3x18

2 4x

(1) Place Part #H and Part #H2 on Part #E1;
put on Part #X3 and secure with Self-tapping Screw #2.

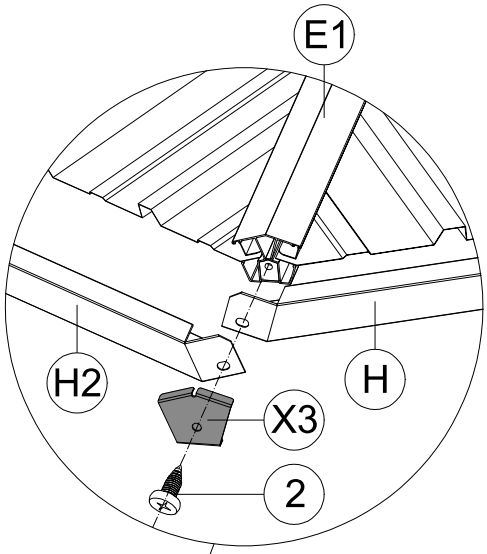

Outside View

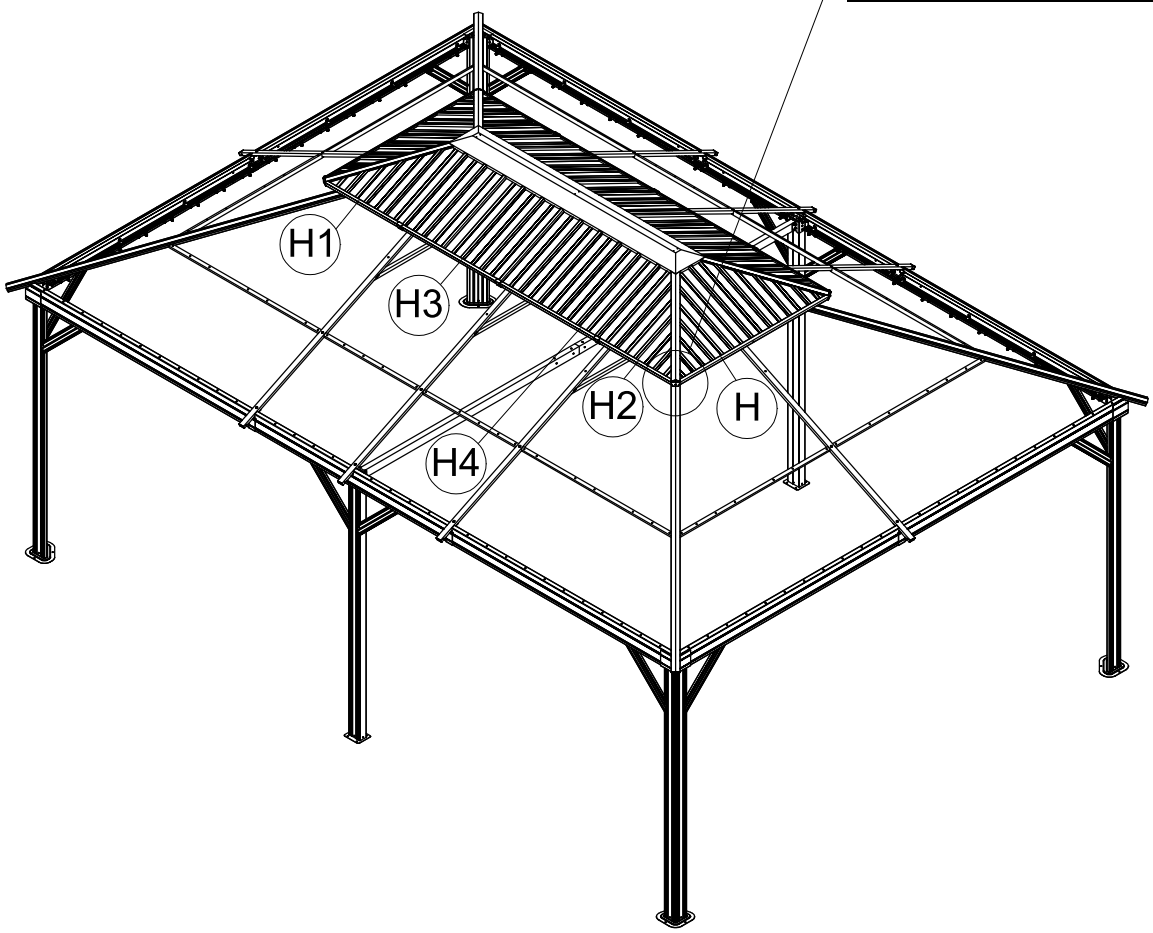

(2) Repeat the above procedures to assemble the other 3 corners.

M1 2x




M2 2x




M3 2x




M4 2x




M5 2x




M6 2x




Z 18x




39

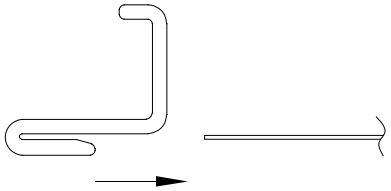


Section View

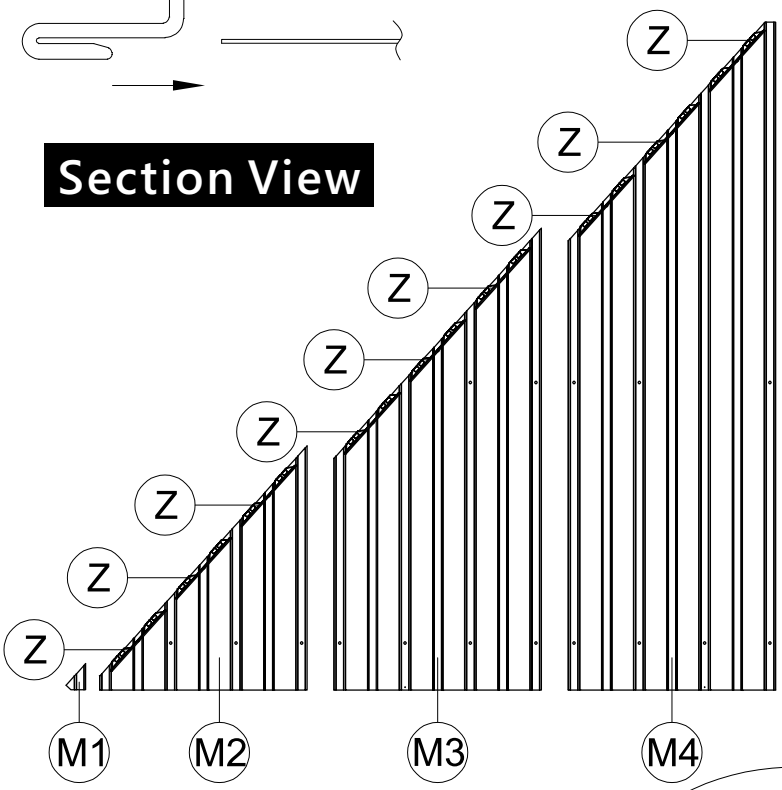

X2

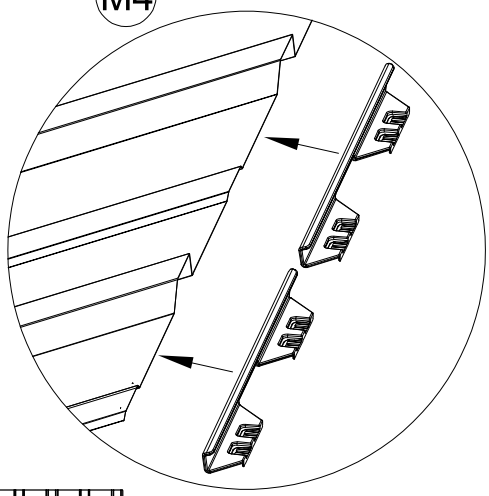


Cover Part #Z to Roof Panels.

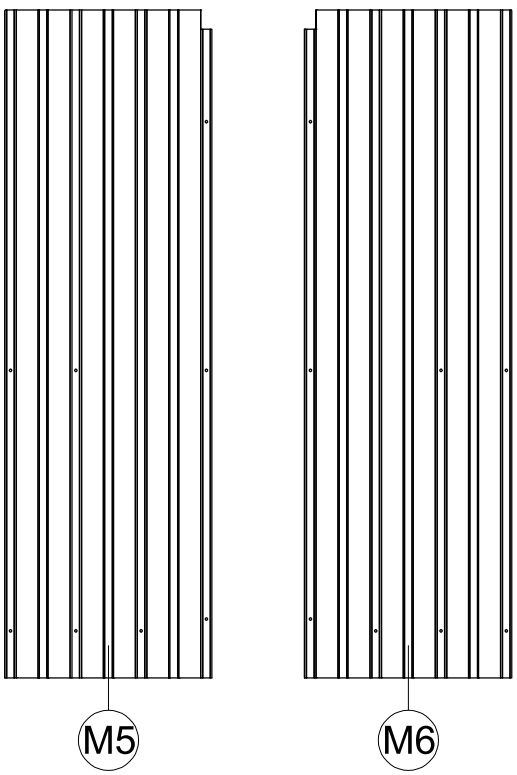

X2

M7 2x



M8 2x




M9 2x




M10 2x



Z 18x




Cover Part #Z to Roof Panels.

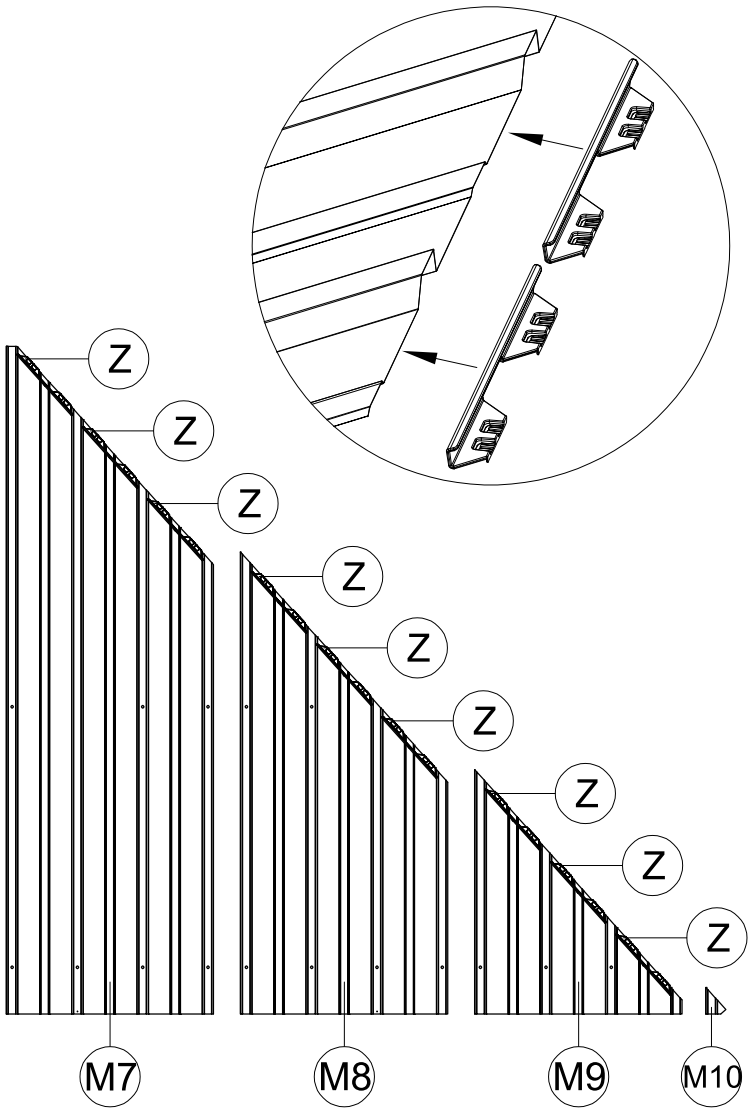


X2




P1 2x




P2 2x




P3 2x




P4 2x




P5 2x



P6 2x




Z 18x

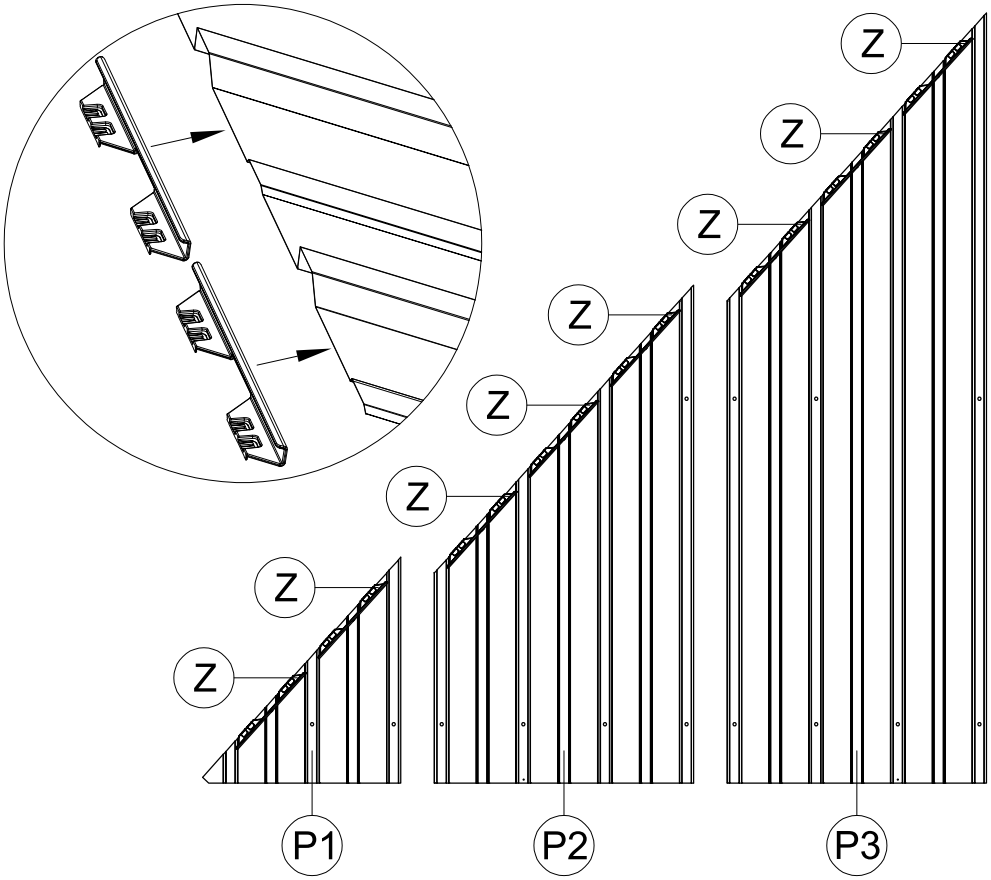


X2

Cover Part #Z to Roof Panels.

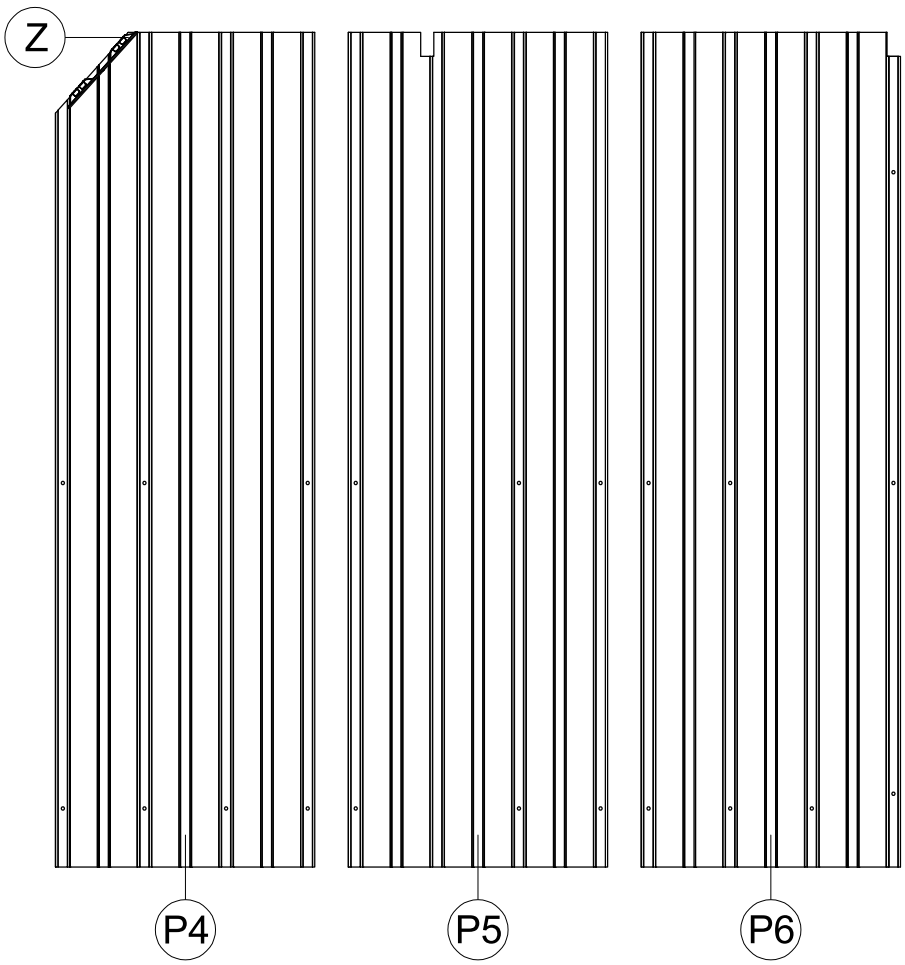


X2


P7 2x




P8 2x




P9 2x



P10 2x




P11 2x




P12 2x




Z 18x



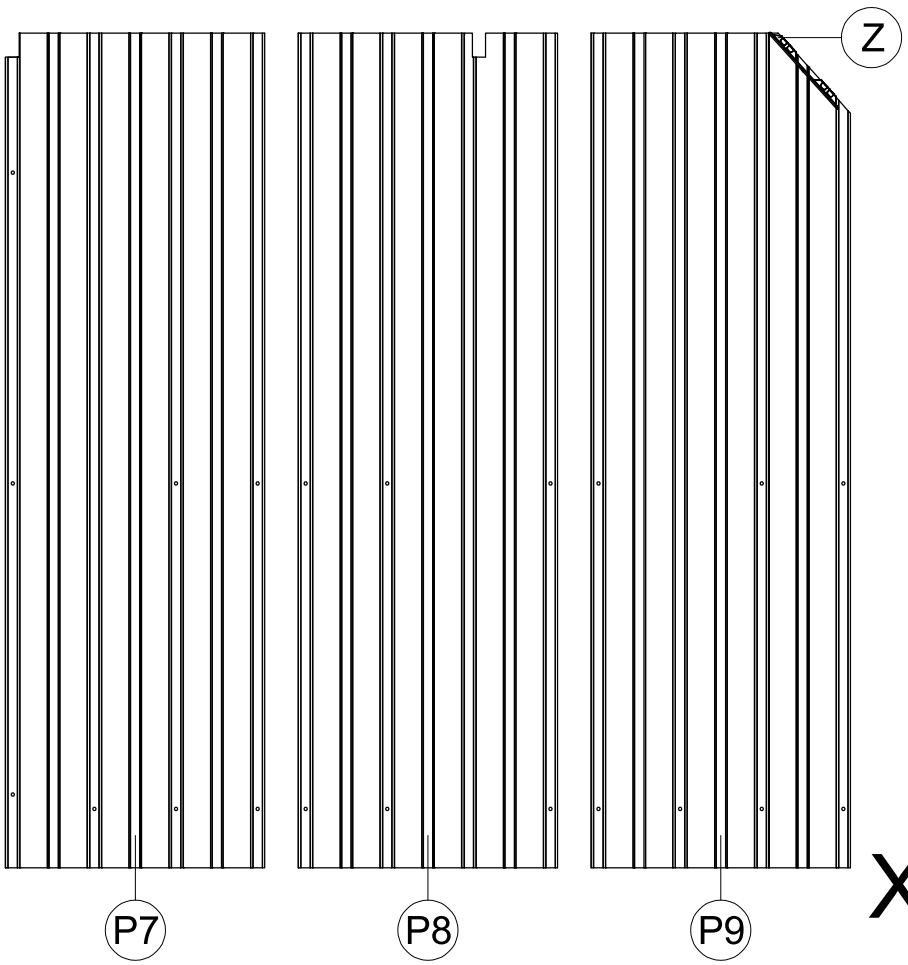


X2

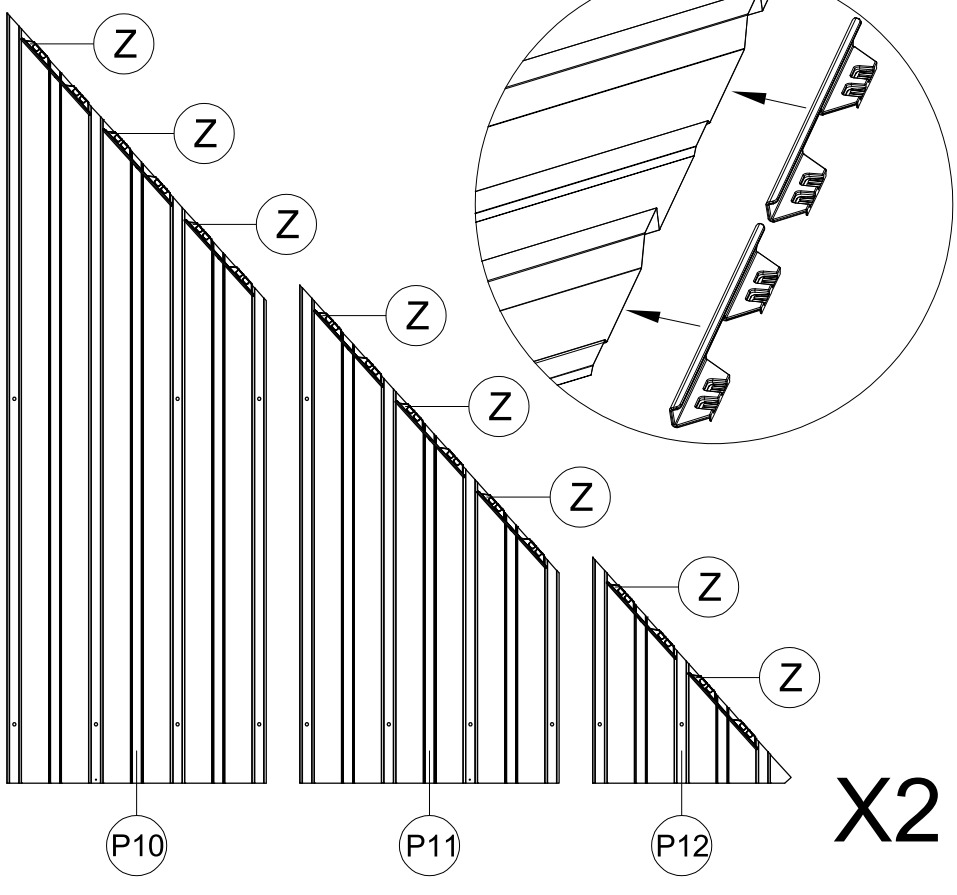



X2


Cover Part #Z to Roof Panels.

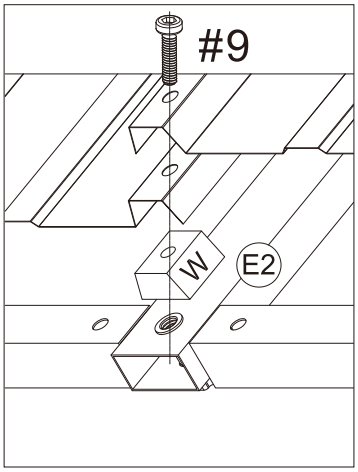



⚠ Part #W should be inserted between roof panels and solidifying bar or beams, then secure with bolts and nuts.

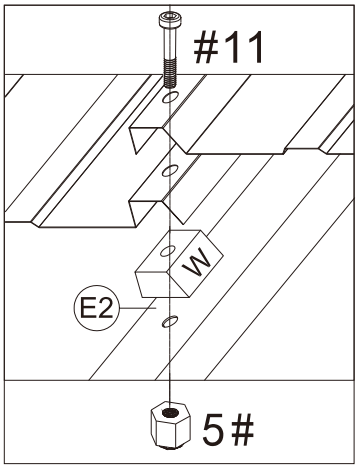

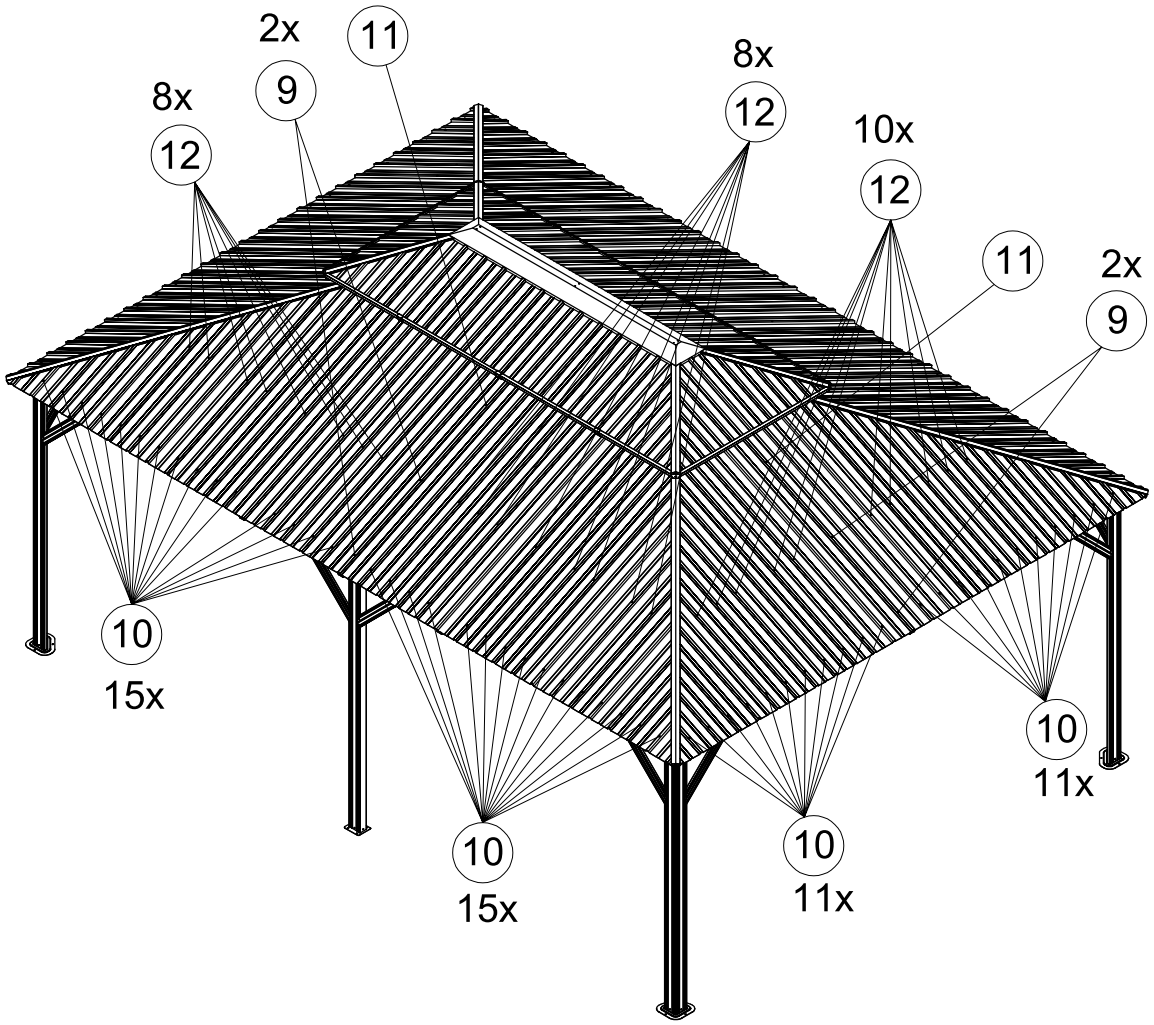


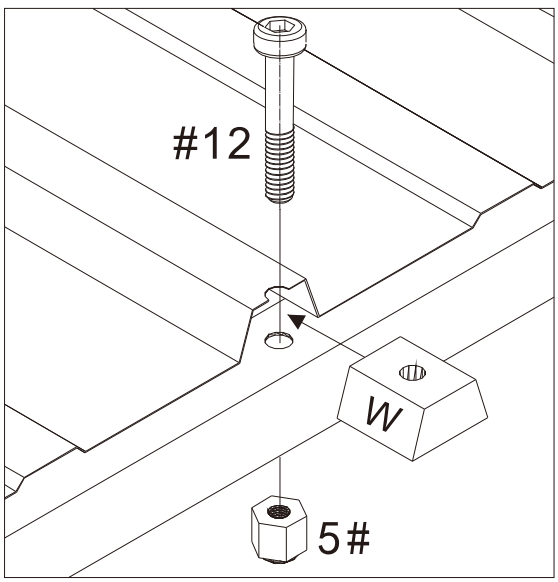

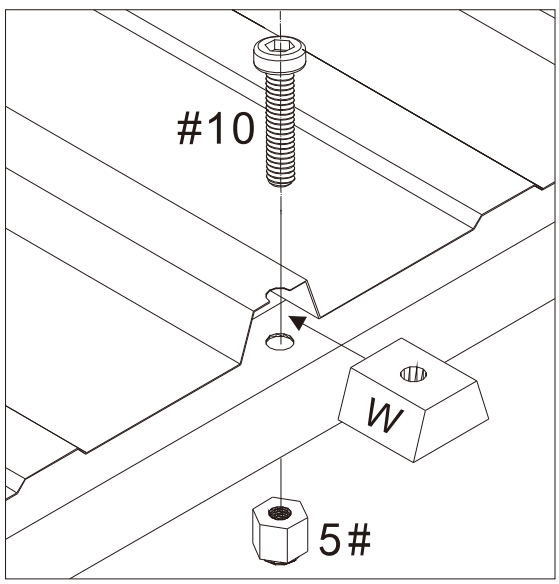



W 36x

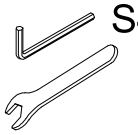

1 1x




M6

5 36x



M6x28

10 28x




M6x50

12 8x


ATTENTION: The bigger roof panel need to cover the smaller one.

(1) Insert Part #P1, Part #P2, Part #P3, Part #P10, Part #P11 and Part #P12 into the frame.

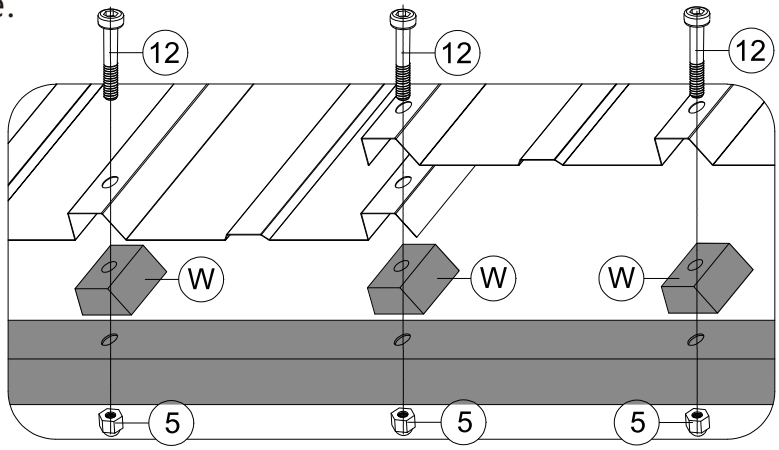


(2) Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5.


Solidifying Bar

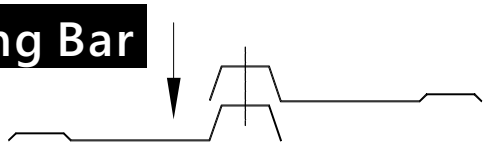


(3) Place 14 Part #W between roof panels and beams. Then secure with 14 Bolts #10 and 14 Nuts #5.

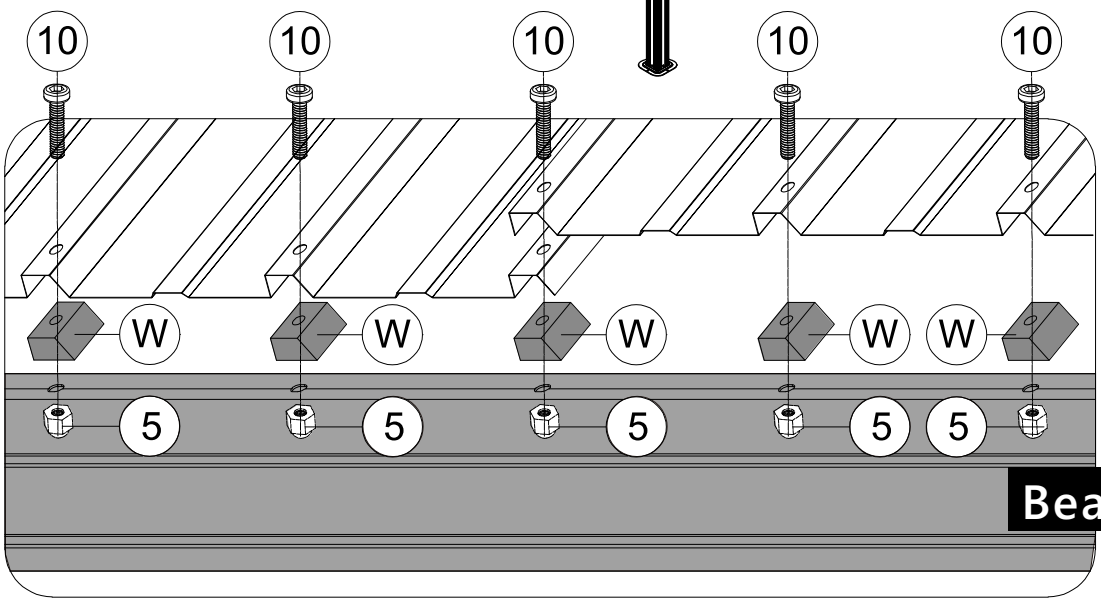

(4) Repeat the above procedures to assemble the opposite side.



W 36x

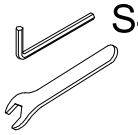

1 1x




M6

5 36x



M6x28

10 20x




M6x50


12 16x

ATTENTION: The bigger roof panel need to cover the smaller one.


(1) Insert Part #P4, Part #P5, Part #P8 and Part #P9 into the frame.

(2) Place 8 Part #W between roof panels and solidifying bars. Then secure with 8 Bolts #12 and 8 Nuts #5.

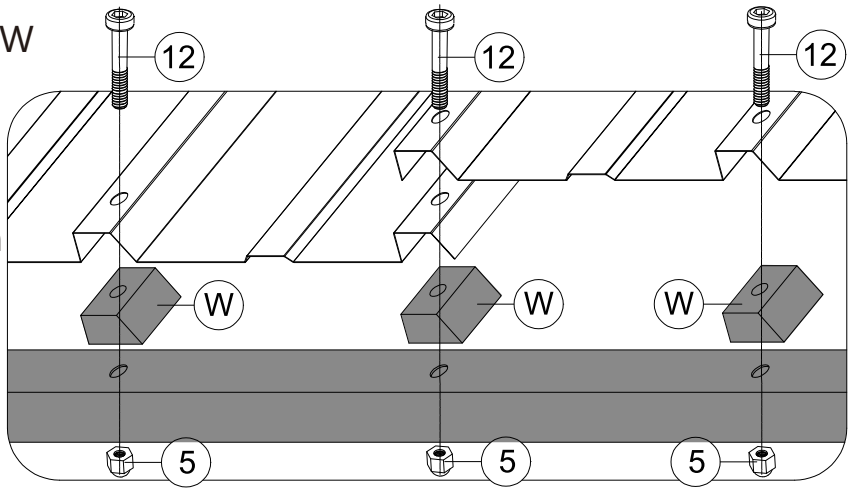


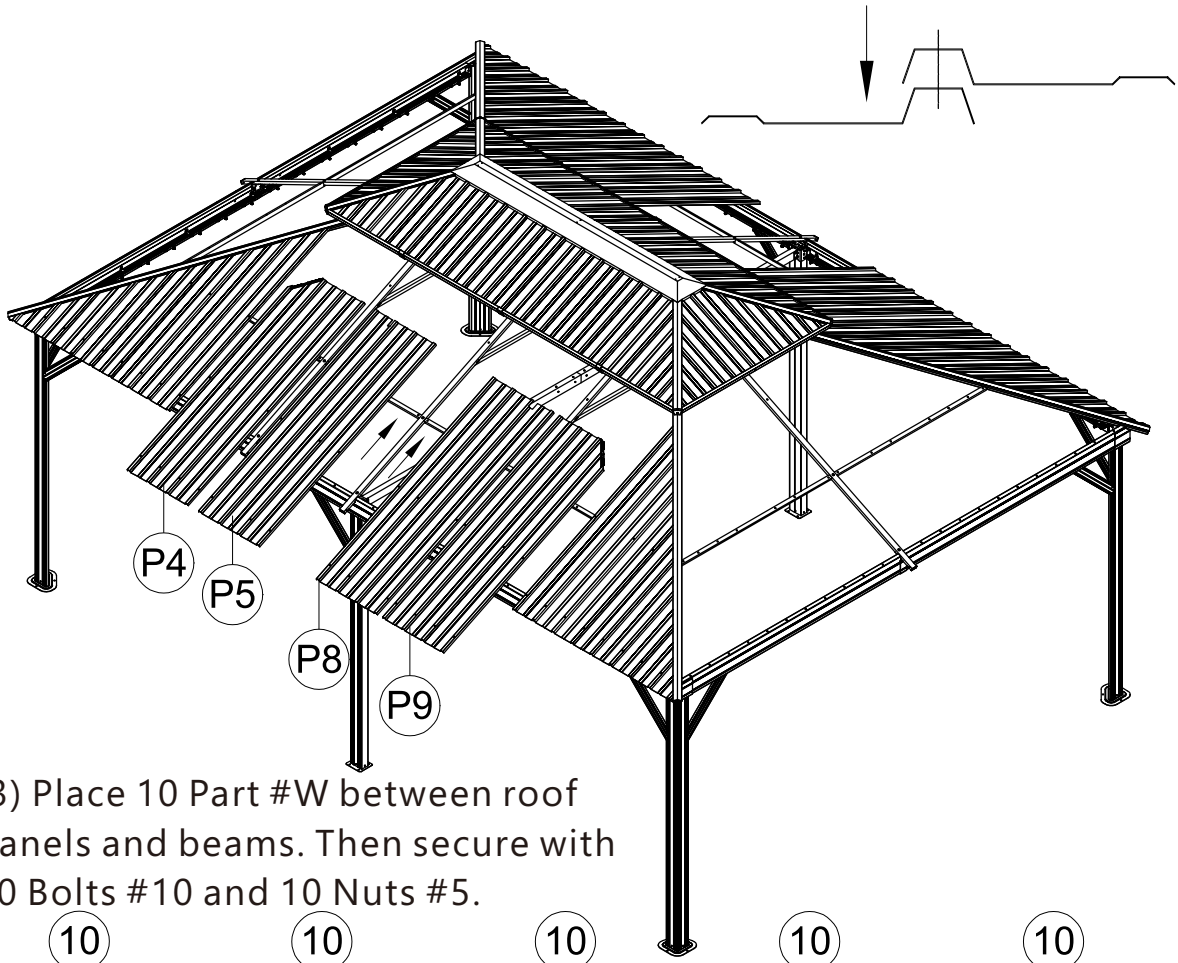


(3) Place 10 Part #W between roof panels and beams. Then secure with 10 Bolts #10 and 10 Nuts #5.

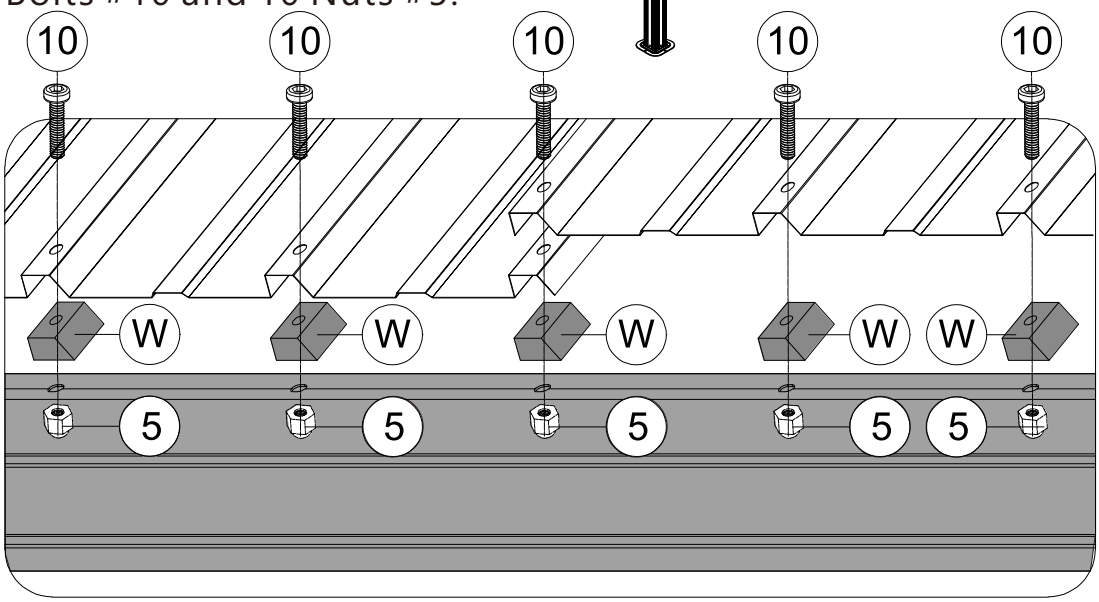

(4) Repeat the above procedures to assemble the opposite side.



W 24x

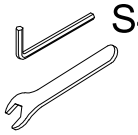


S4

1 1x



M6

5 20x




M6x25

9 4x



M6x28

10 12x




M6x50


12 8x

ATTENTION: The bigger roof panel need to cover the smaller one.


(1)Insert Part #P6 and Part #P7 into the frame.

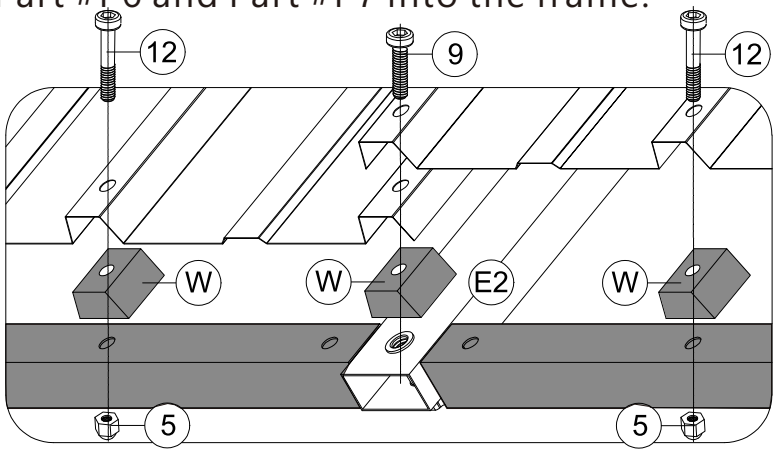


(2)Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5; Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9.

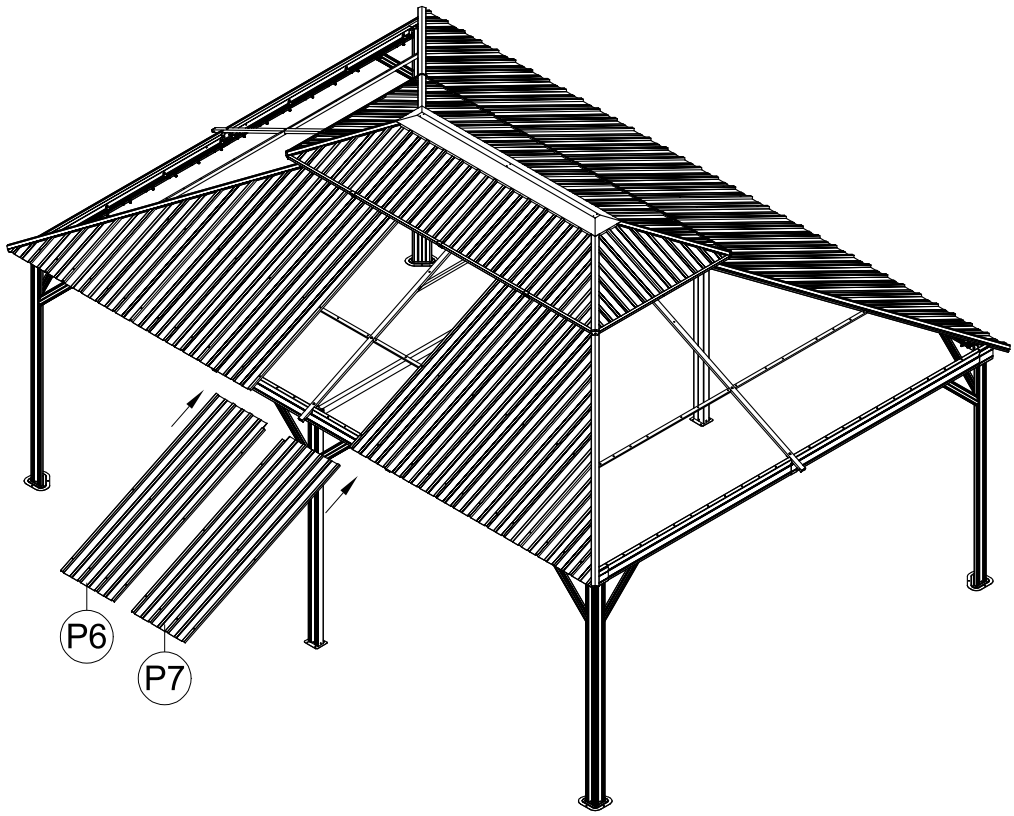


(3)Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5; Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9.

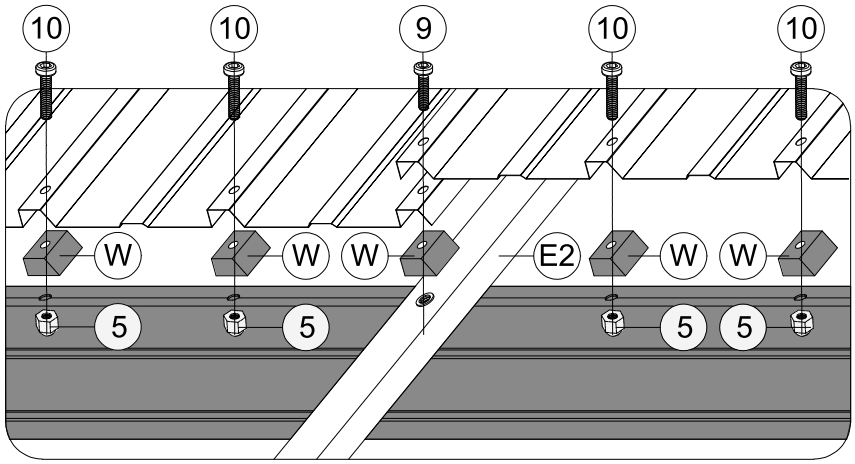

(4)Repeat the above procedures to assemble the opposite side.



W 24x

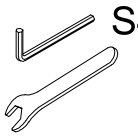

1 1x




M6

5 24x



M6x28

10 20x





M6x50

12 4x


ATTENTION: The bigger roof panel need to cover the smaller one.

(1)Insert Part #M1, Part #M2, Part #M3, Part #M8, Part #M9 and Part #M10 into the frame.

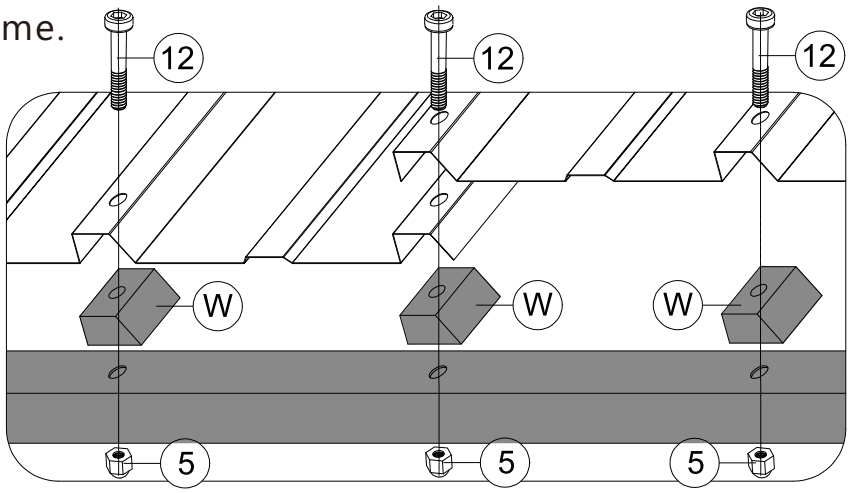

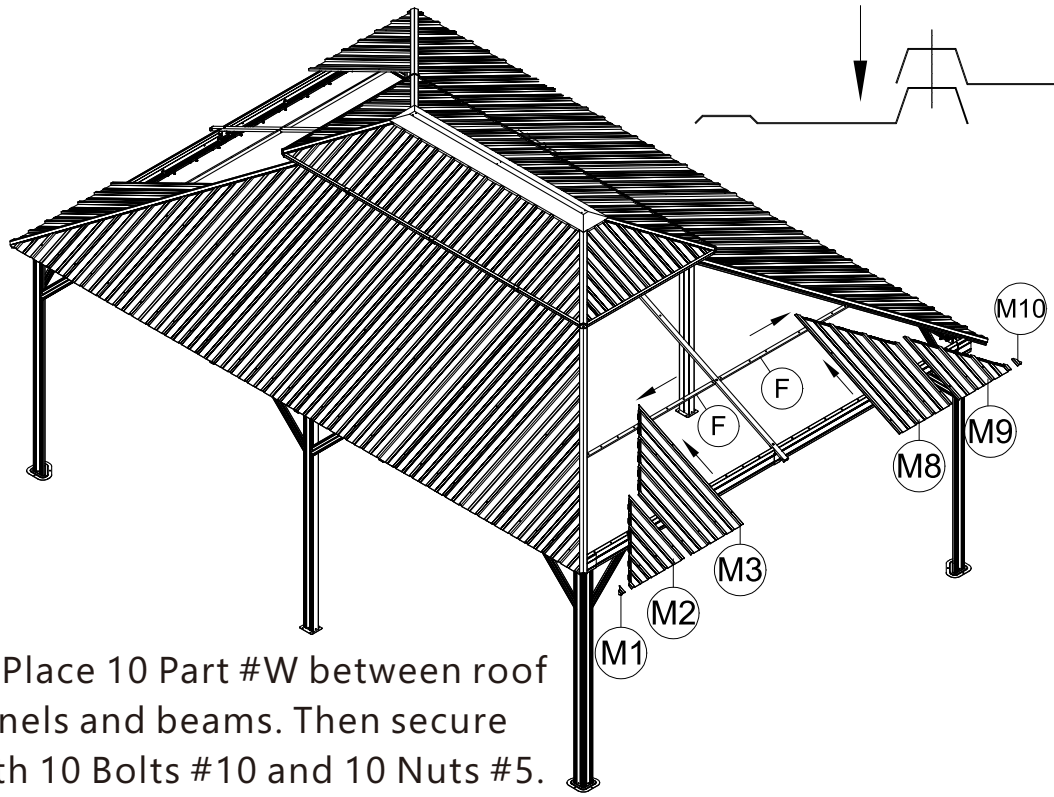


(2)Place 10 Part #W between roof panels and beams. Then secure with 10 Bolts #10 and 10 Nuts #5.

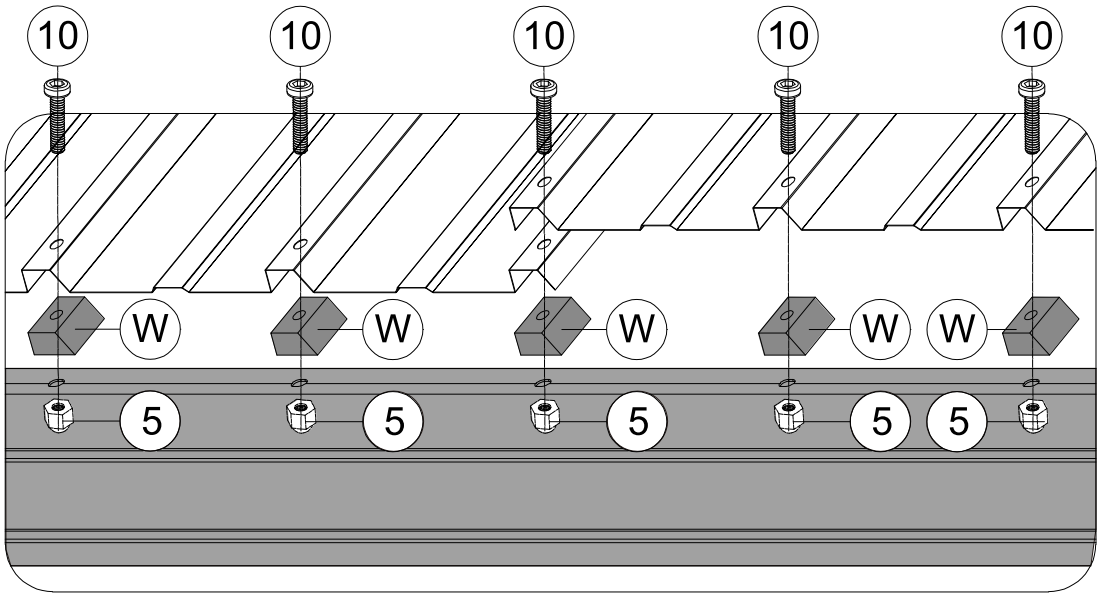


(3) Place 2 Part #W between roof panels and solidifying bars. Then secure with 2 Bolts #12 and 2 Nuts #5.

(4) Repeat the above procedures to assemble the opposite side.



W 44x

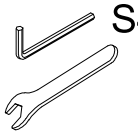


S4

1 1x



M6

5 40x




M6x25

9 4x



M6x28

10 24x




M6x50


12 16x

ATTENTION: The bigger roof panel need to cover the smaller one.


(1) Insert Part #M4, Part #M5, Part #M6 and Part #M7 into the frame.

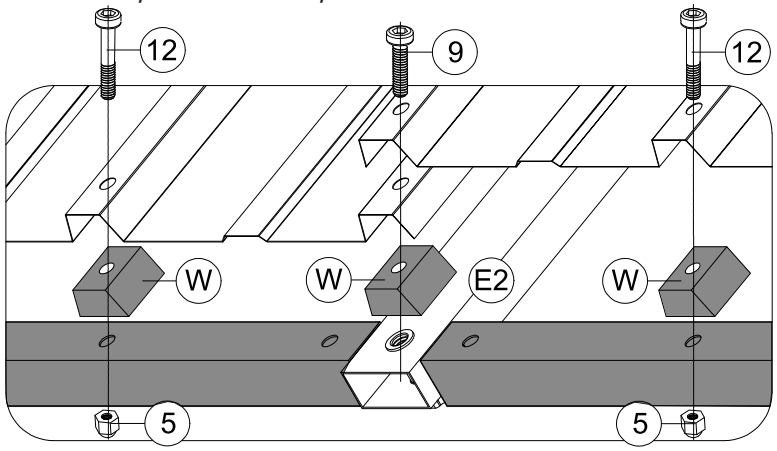


(2) Place 8 Part #W between roof panels and solidifying bars. Then secure with 8 Bolts #12 and 8 Nuts #5. Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9.

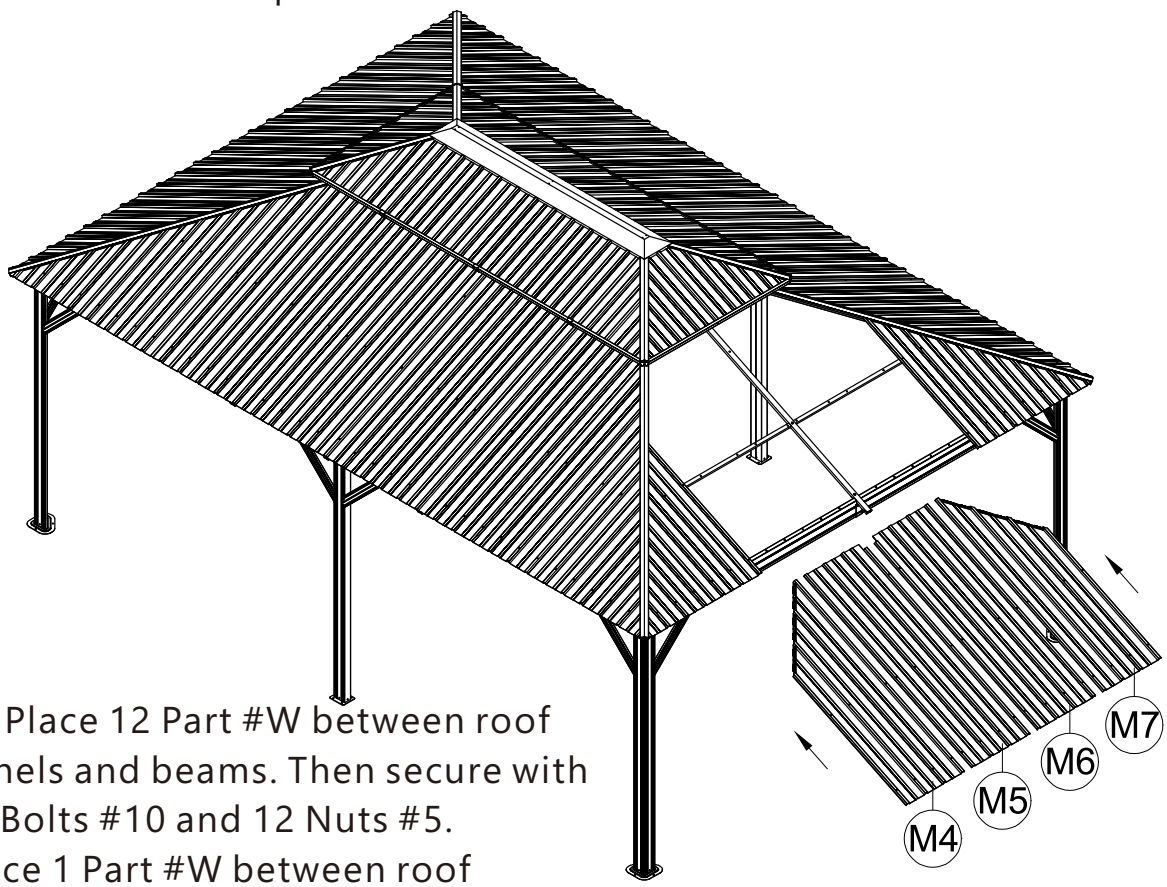


(3) Place 12 Part #W between roof panels and beams. Then secure with 12 Bolts #10 and 12 Nuts #5. Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9.

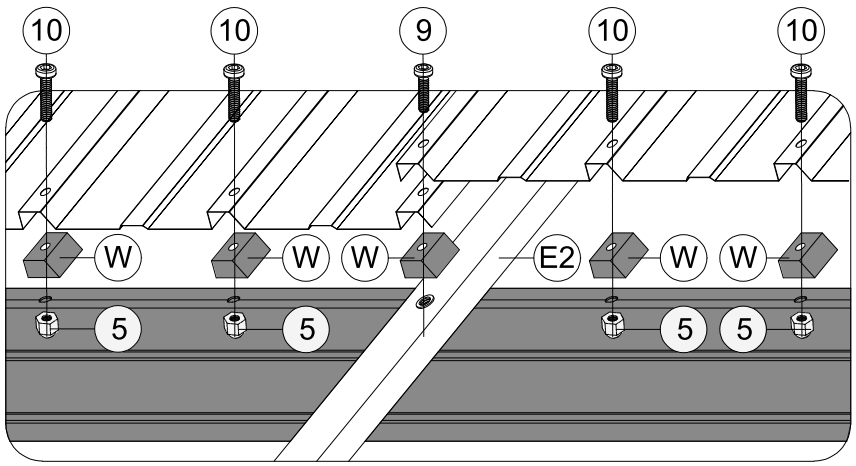

(4) Repeat the above procedures to assemble the opposite side.



W 4x

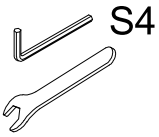


1 1x



M6


5 4x




M6x45

11 4x


Place Part #W between roof panels and Part #E2.
Then secure with Bolt #11 and Nut #5.

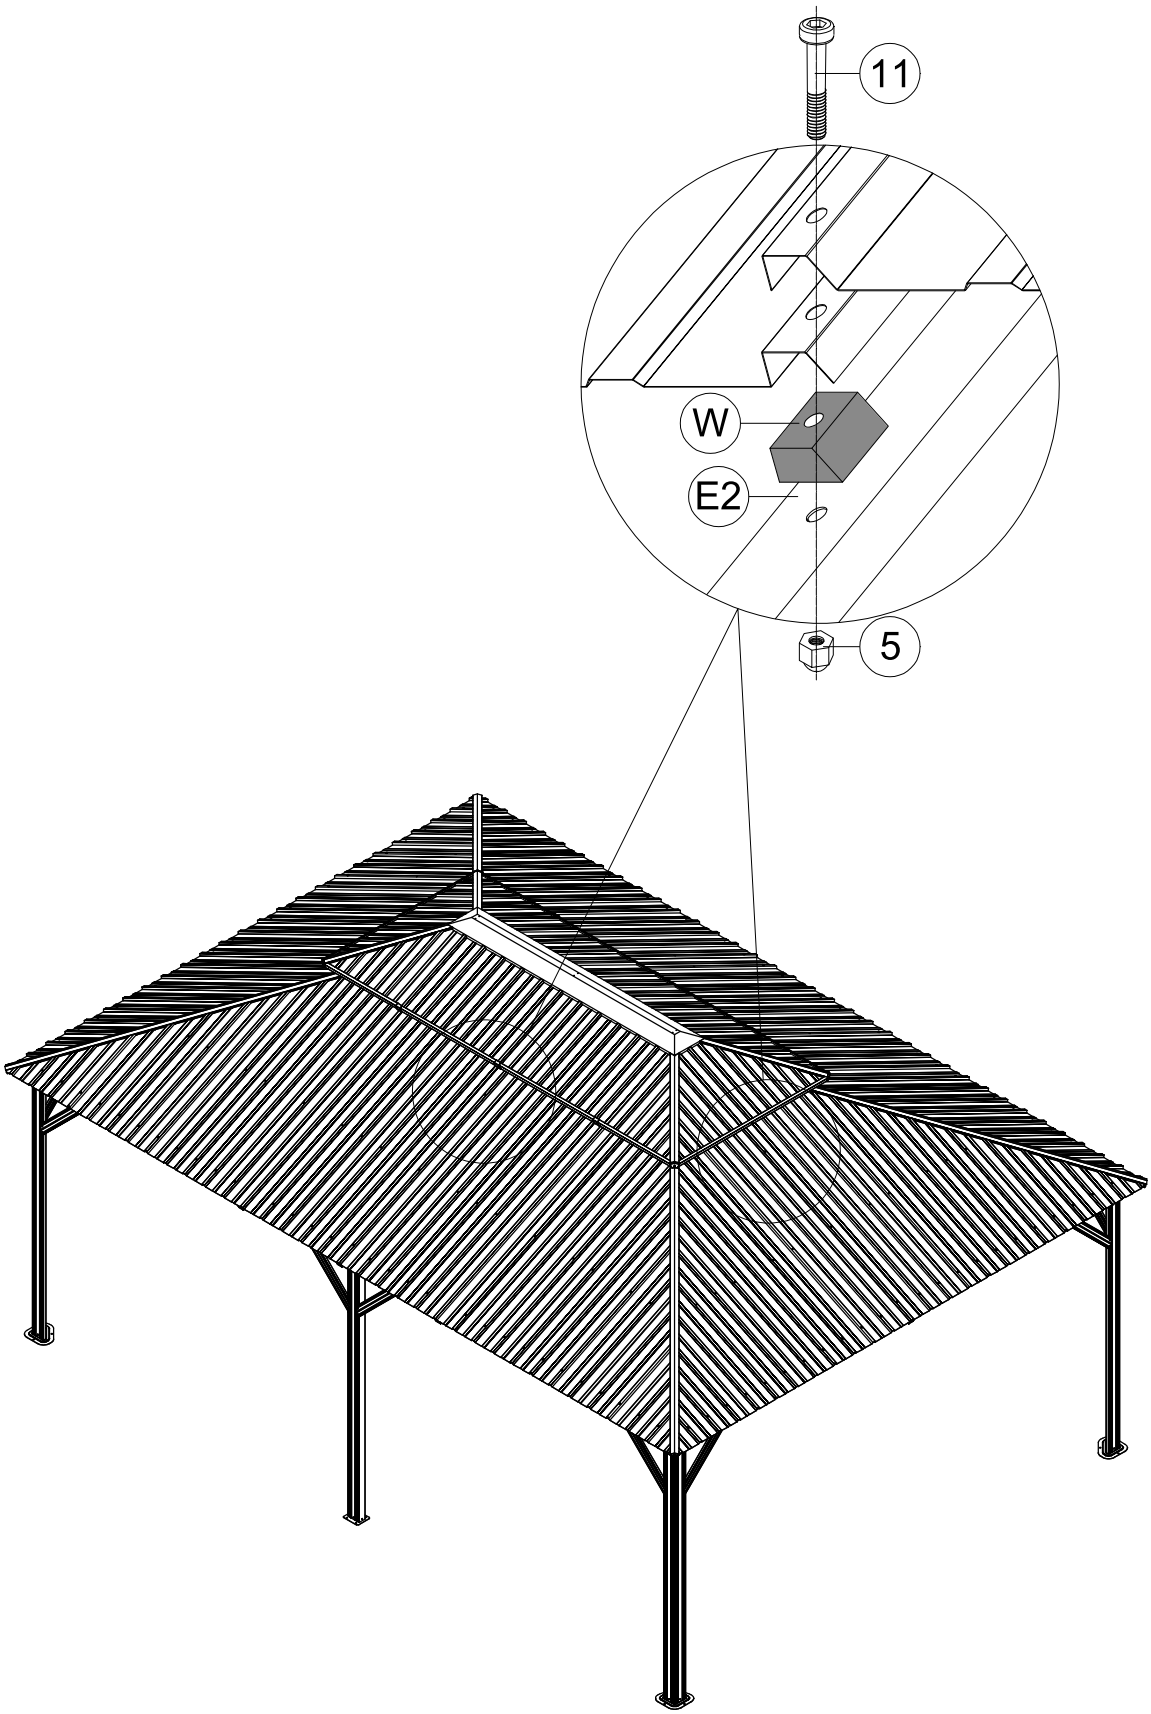


Repeat the above procedures to assemble the other 3 sides.

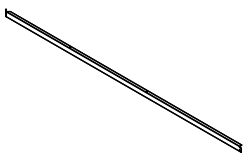


K2 2x

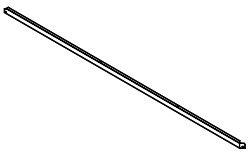

K3 2x

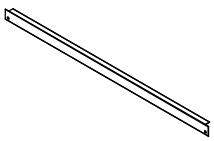

H3 2x

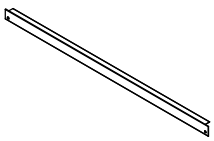

H4 2x




X2 6x




ST6.3x18


2 6x

(1) Place Part #K2 / #H3 and Part #H4 / #K3 on Part #E2; Put on Part #X2 and secure with Screw #2.

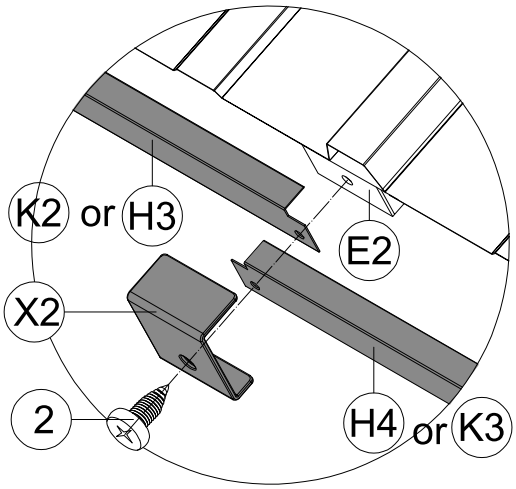


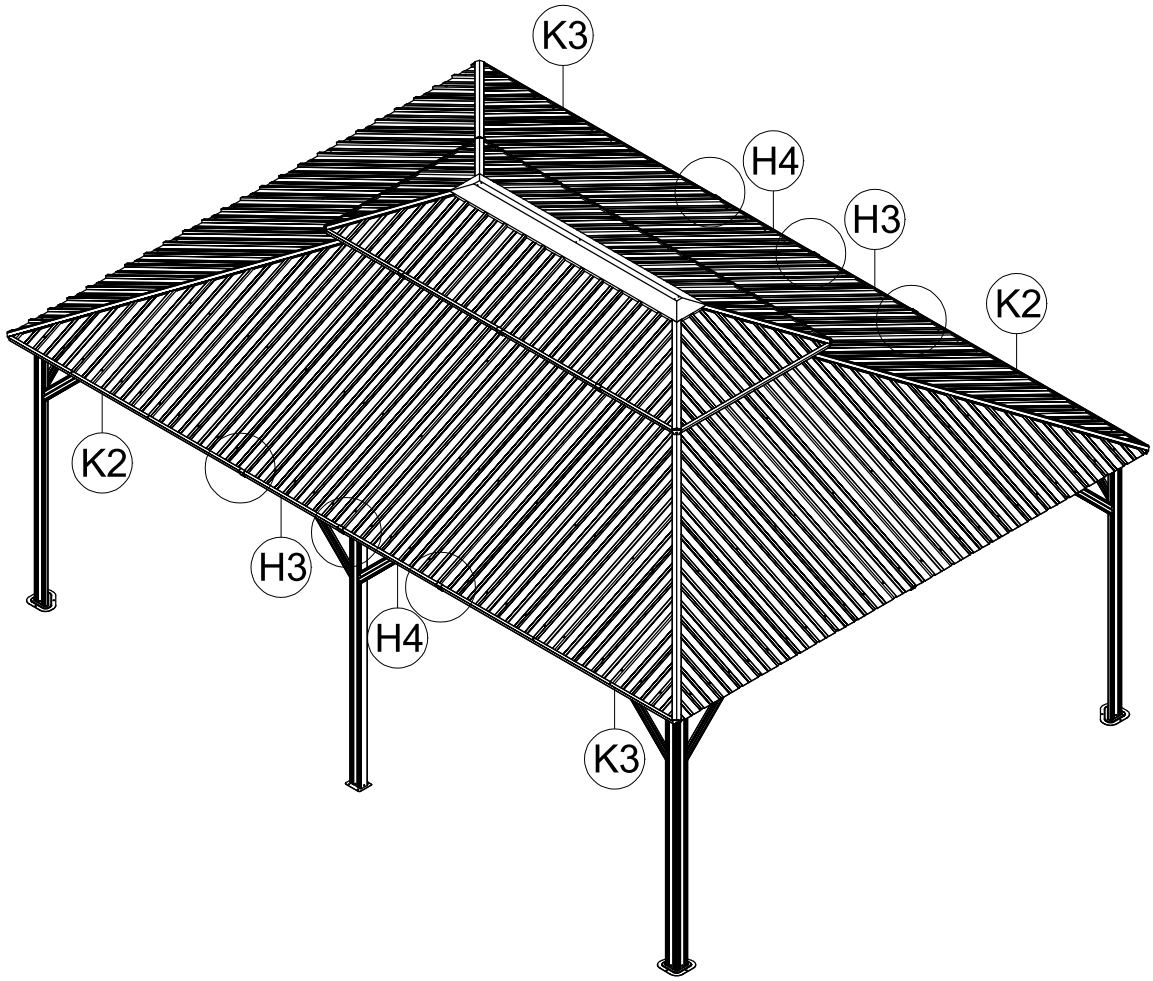

(2) Repeat the above procedures to assemble the opposite side.

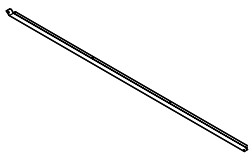

K 2x

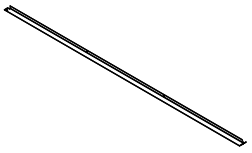

K1 2x




X2 2x




ST6.3x18

2 2x

(1) Attach Part #K and Part #K1 to the frame;
Put on Part #X2 and secure with Screw #2.

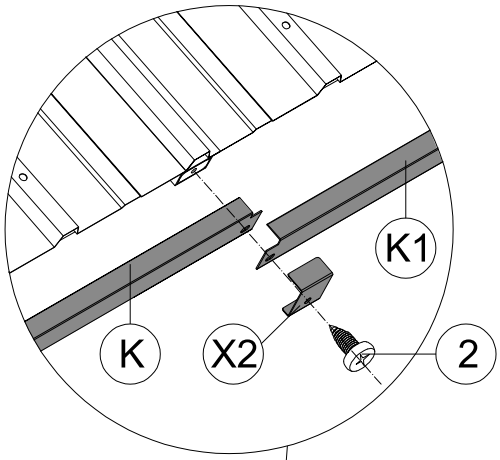

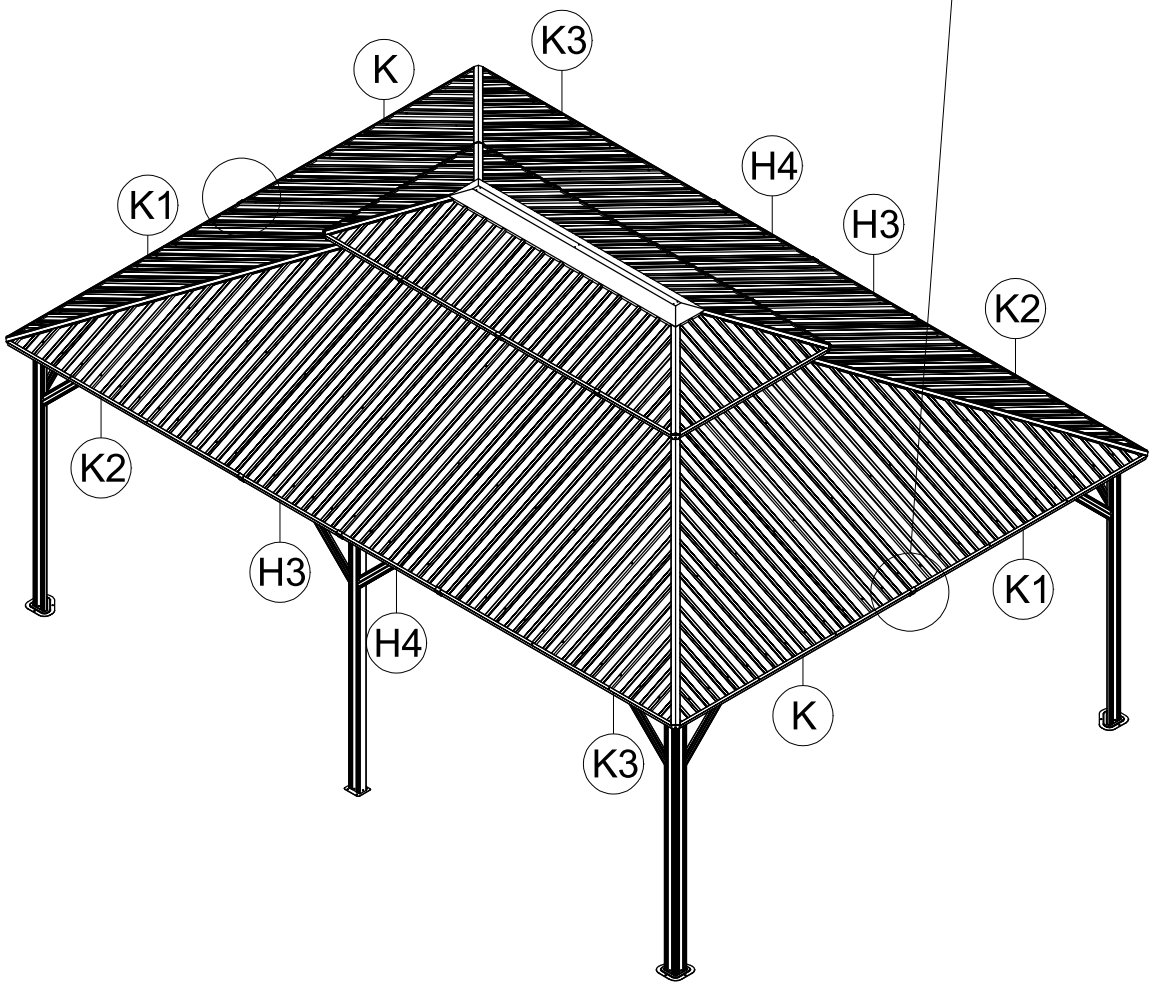

(2) Repeat the above procedures to assemble the opposite side.





X3 4x



ST6.3x18

2 4x

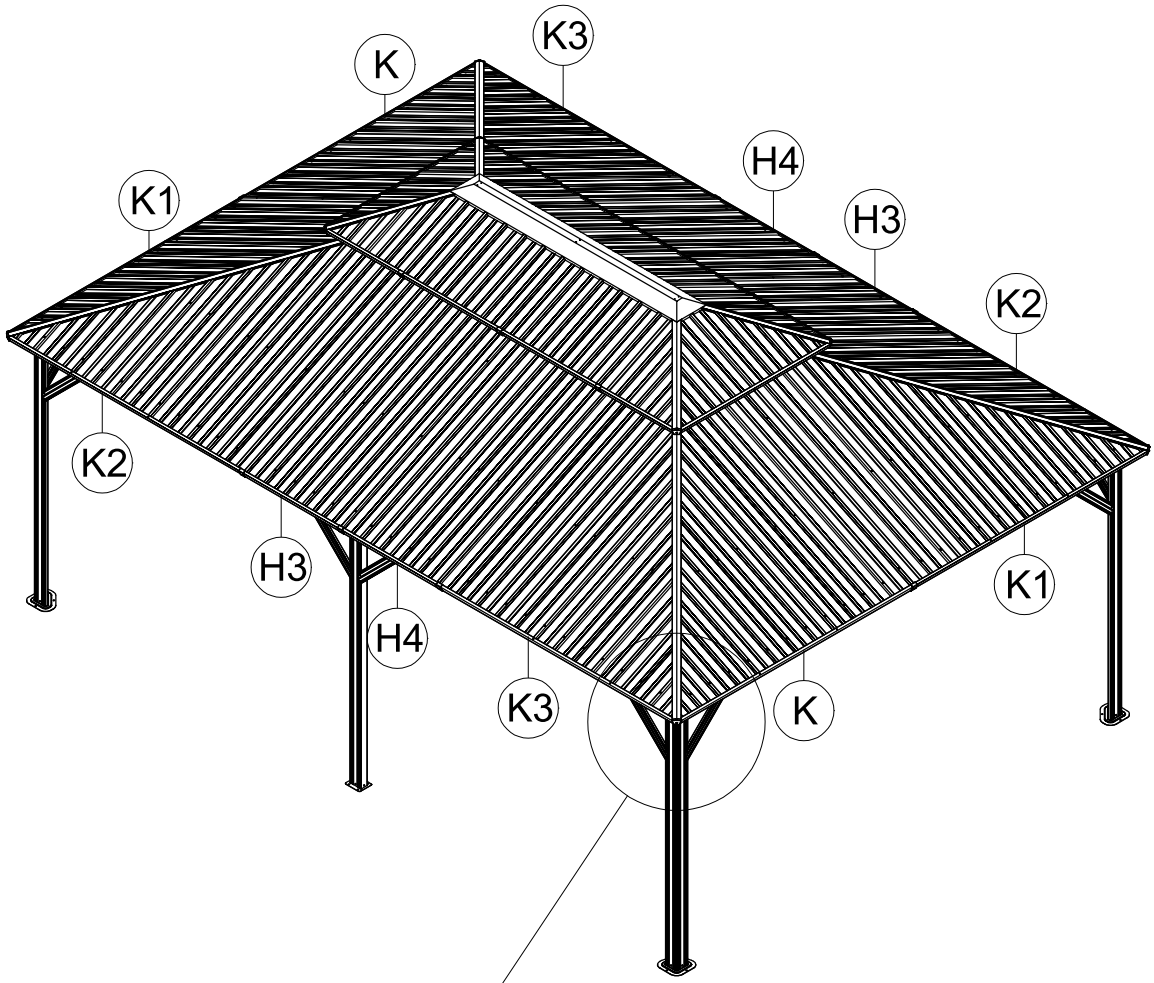

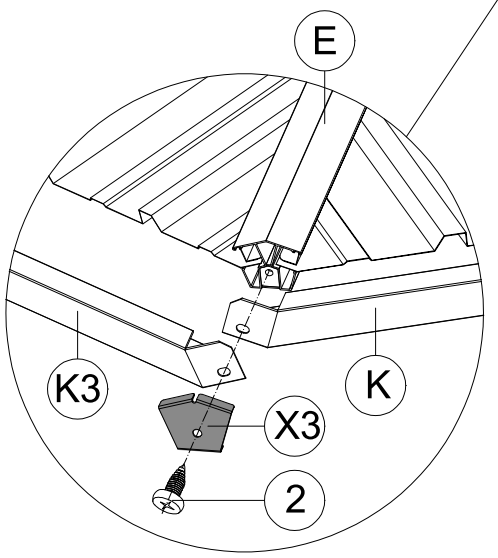


(1) Place Part #K3 and Part #K on Part #E; Put on Part #X3 and secure with Self-tapping Screw #2.

(2) Repeat the above procedures to assemble the other 3 corners.




ST5x16


3 16x

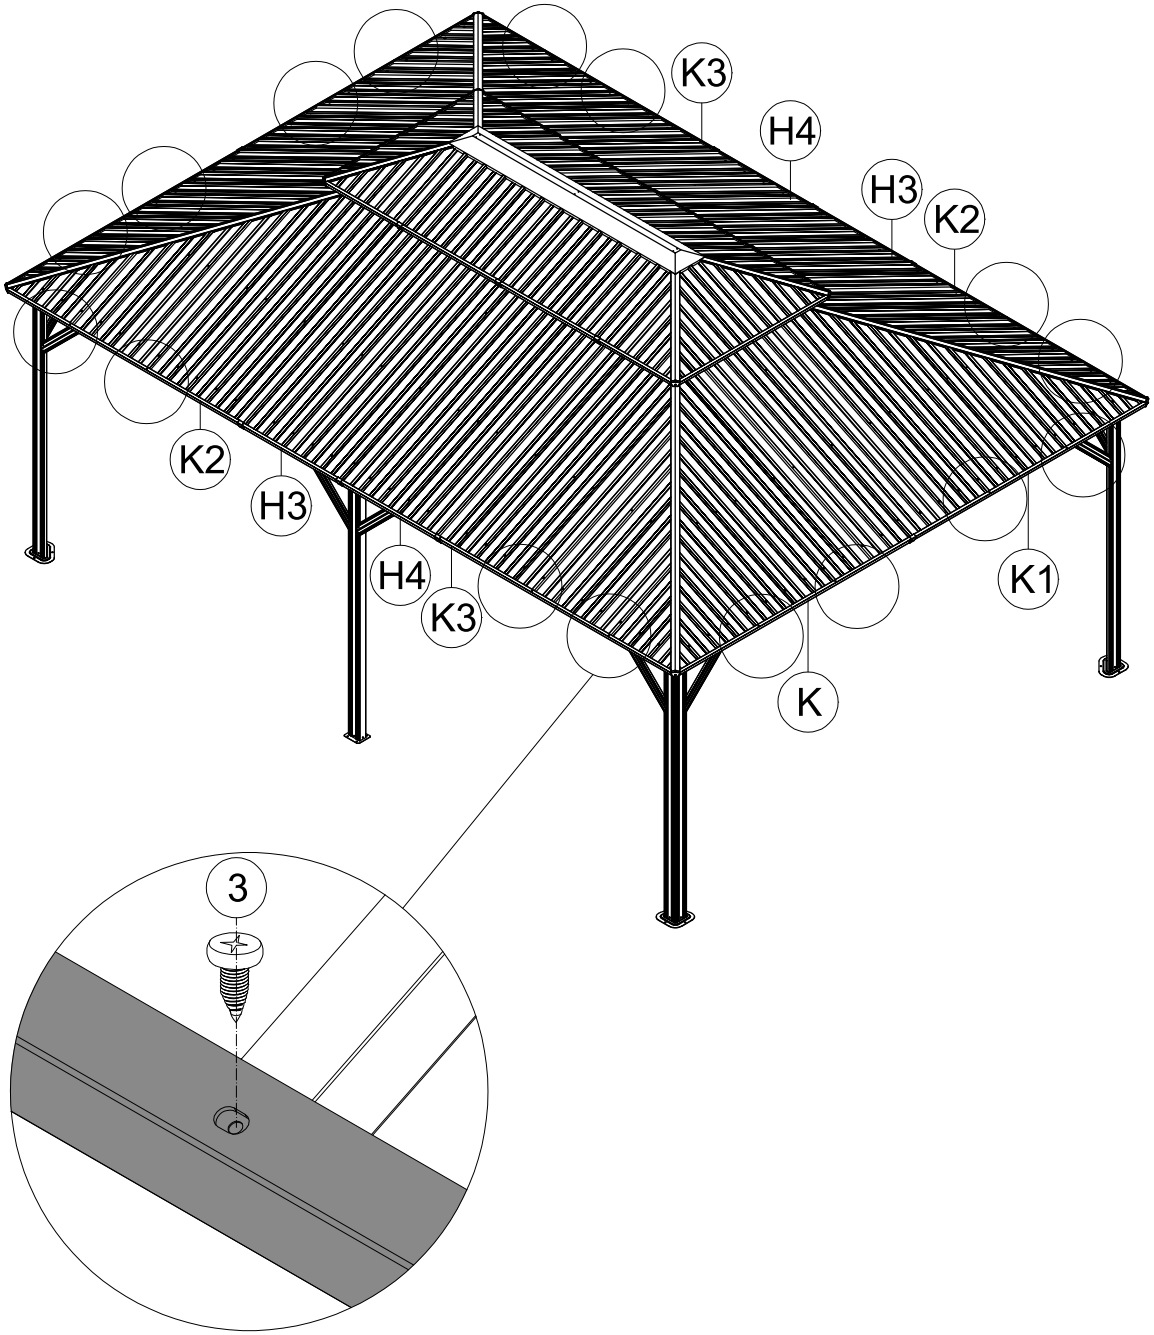

Attach roof panels to finishing bars with 16 Screws #3.

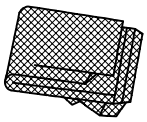



Y1 4x





Y2 2x


Hang up Mosquito Sidewalls to **Inside Track**

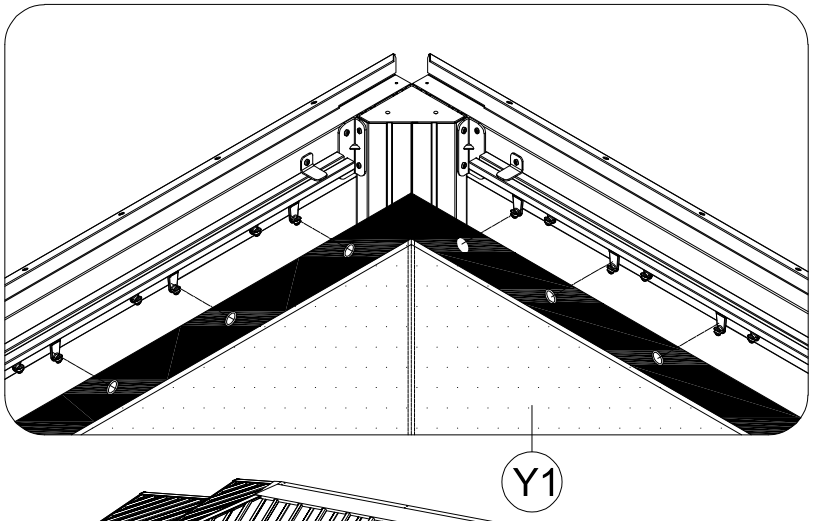


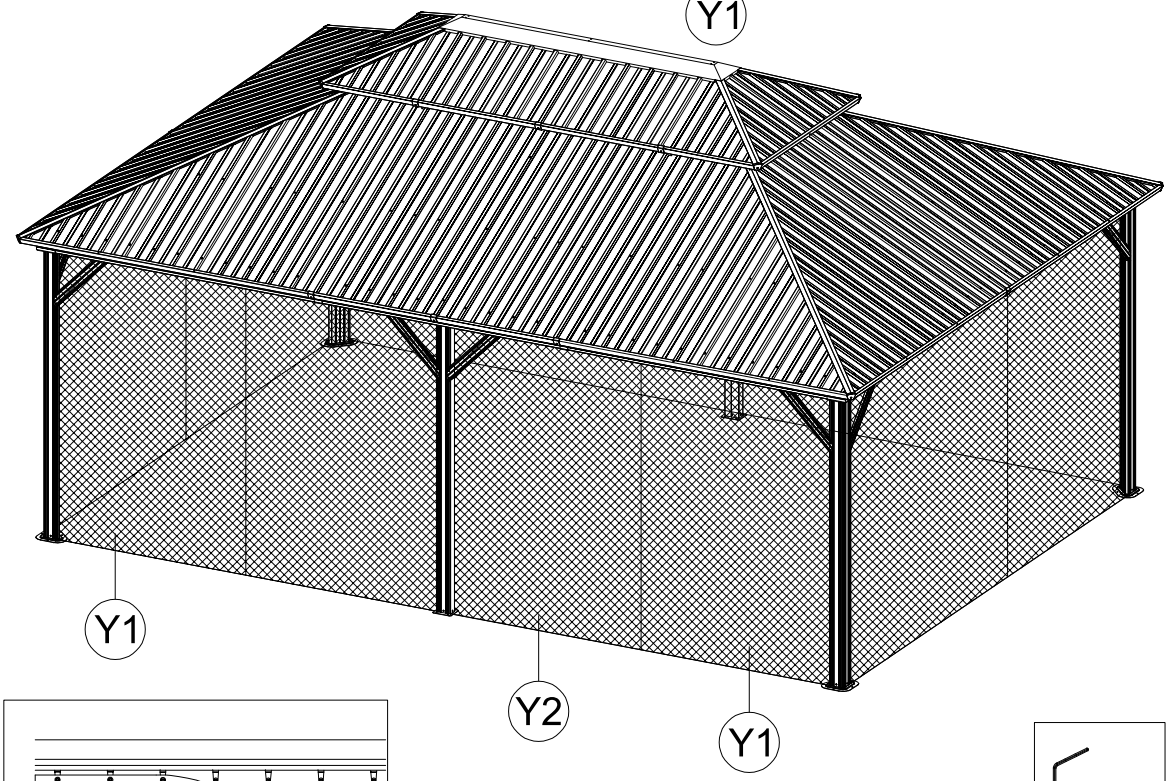

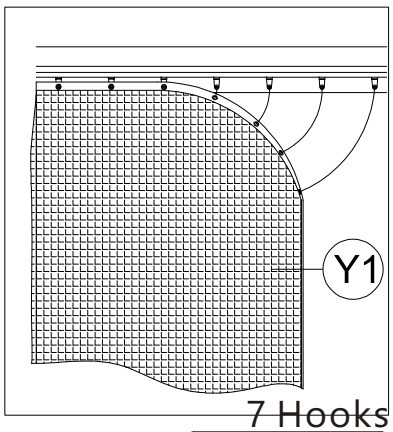

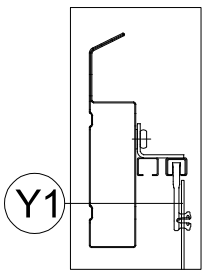

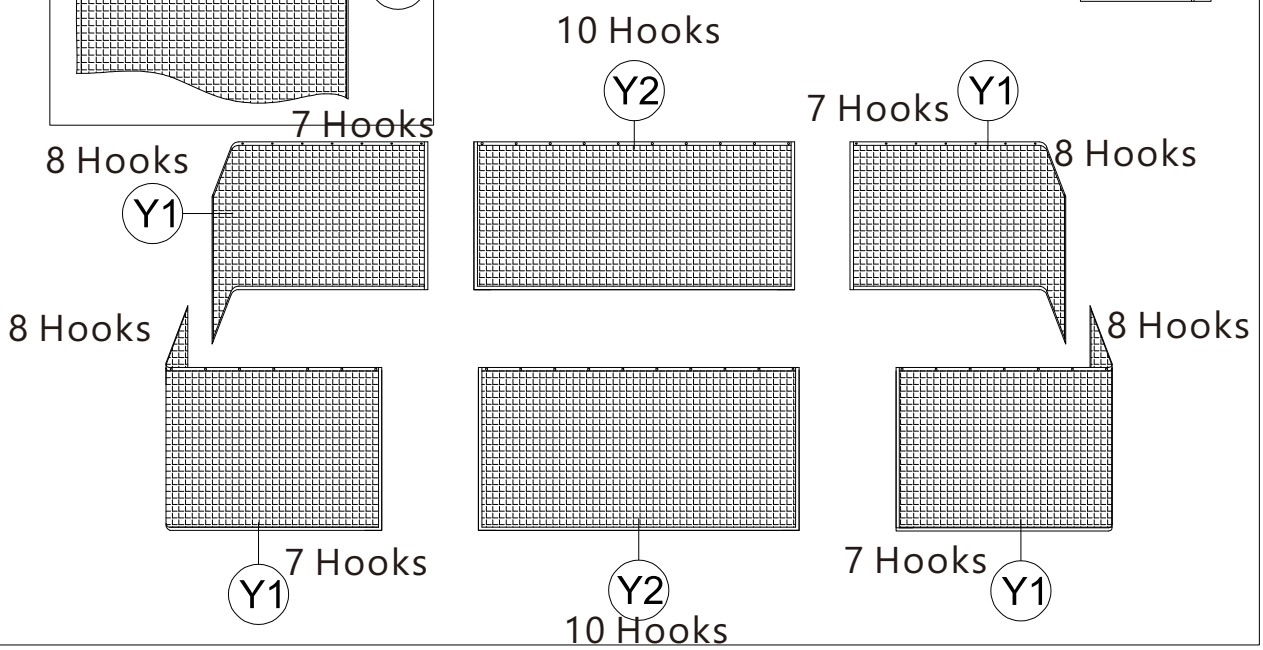




Y 4x





Y3 2x


Hang up Solid Sidewalls to Outside Track

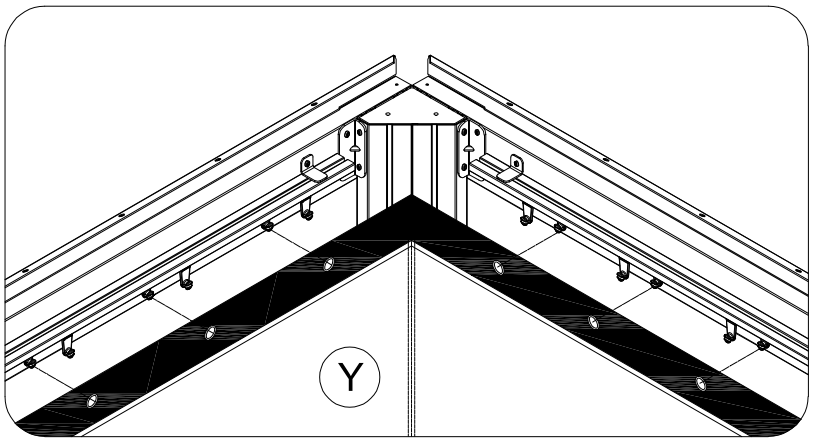



Please open and secure your gazebo curtains with straps when wind speeds exceed 30 mph.

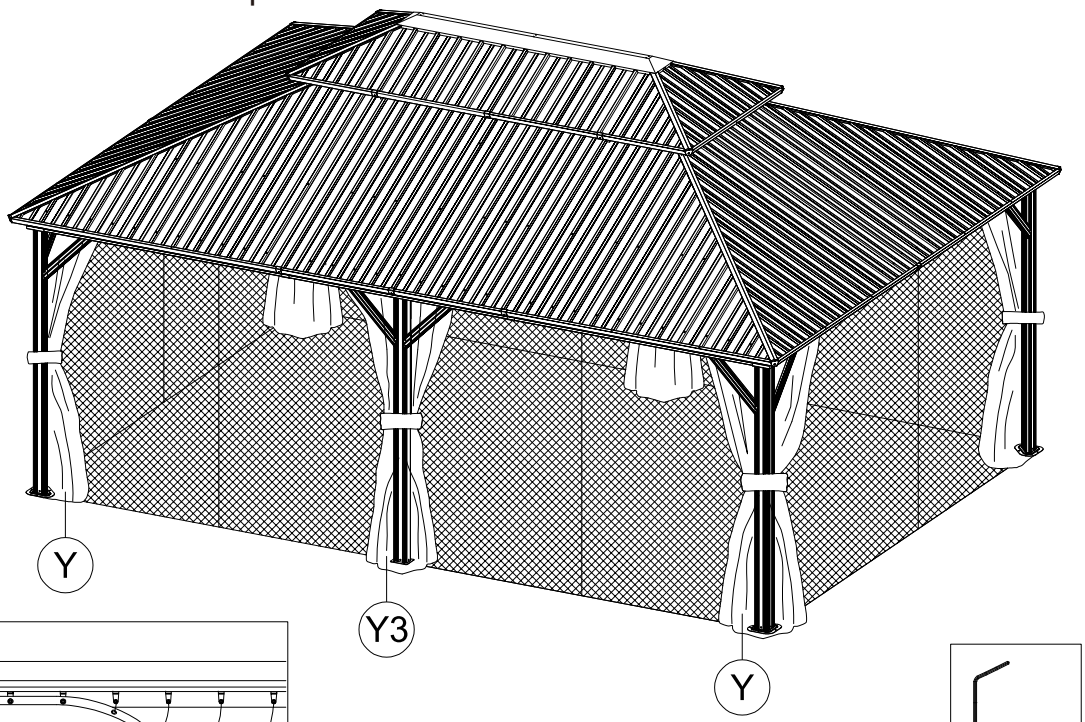

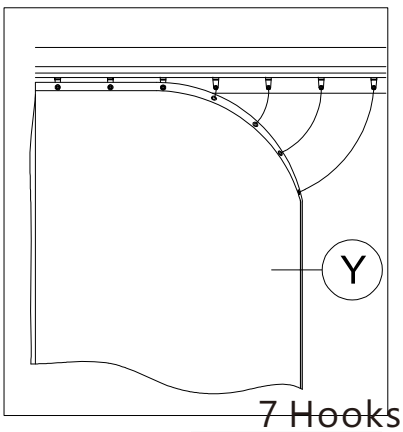

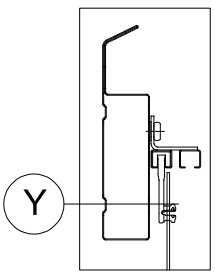

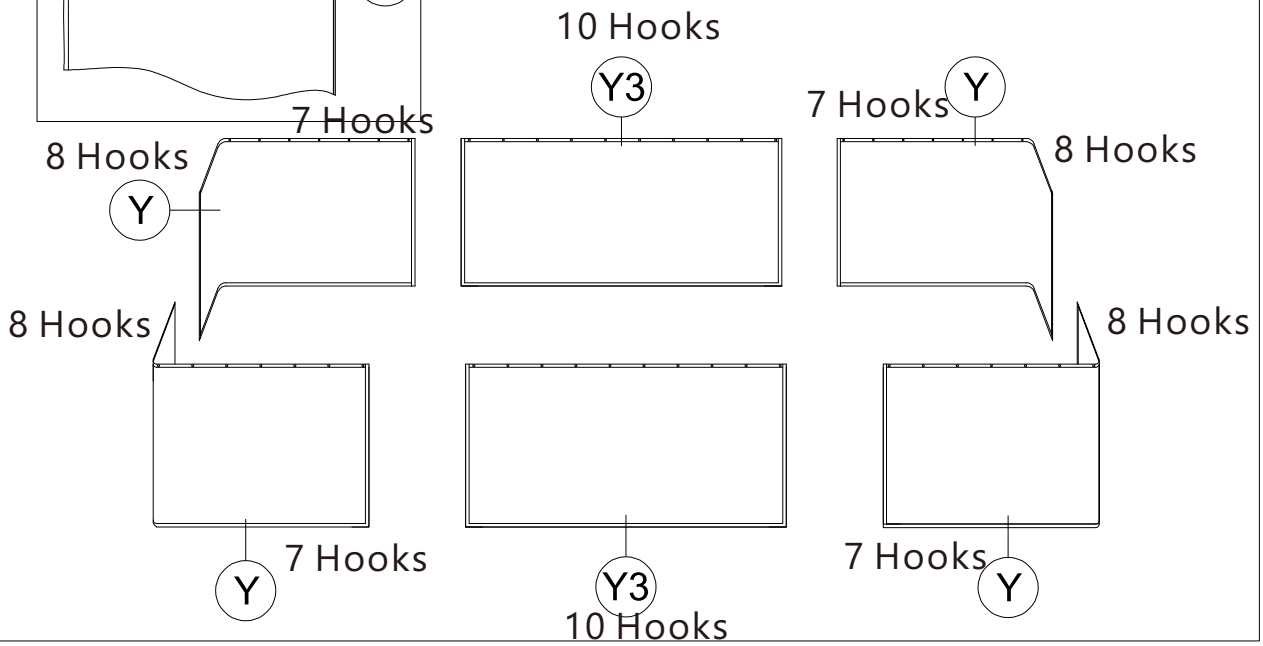

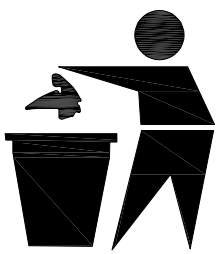

domi
outdoor living

Thanks for your purchase.

At domi outdoor living, we believe in our products. That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:

After-sales contact email:
service@domioutdoorliving.com

Business cooperation contact email:
marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.
If you have damaged parts or product, please send us photos for an immediate response.

© Copyright 2024–2026 domi LLC. All Rights Reserved.