




Installation Instructions

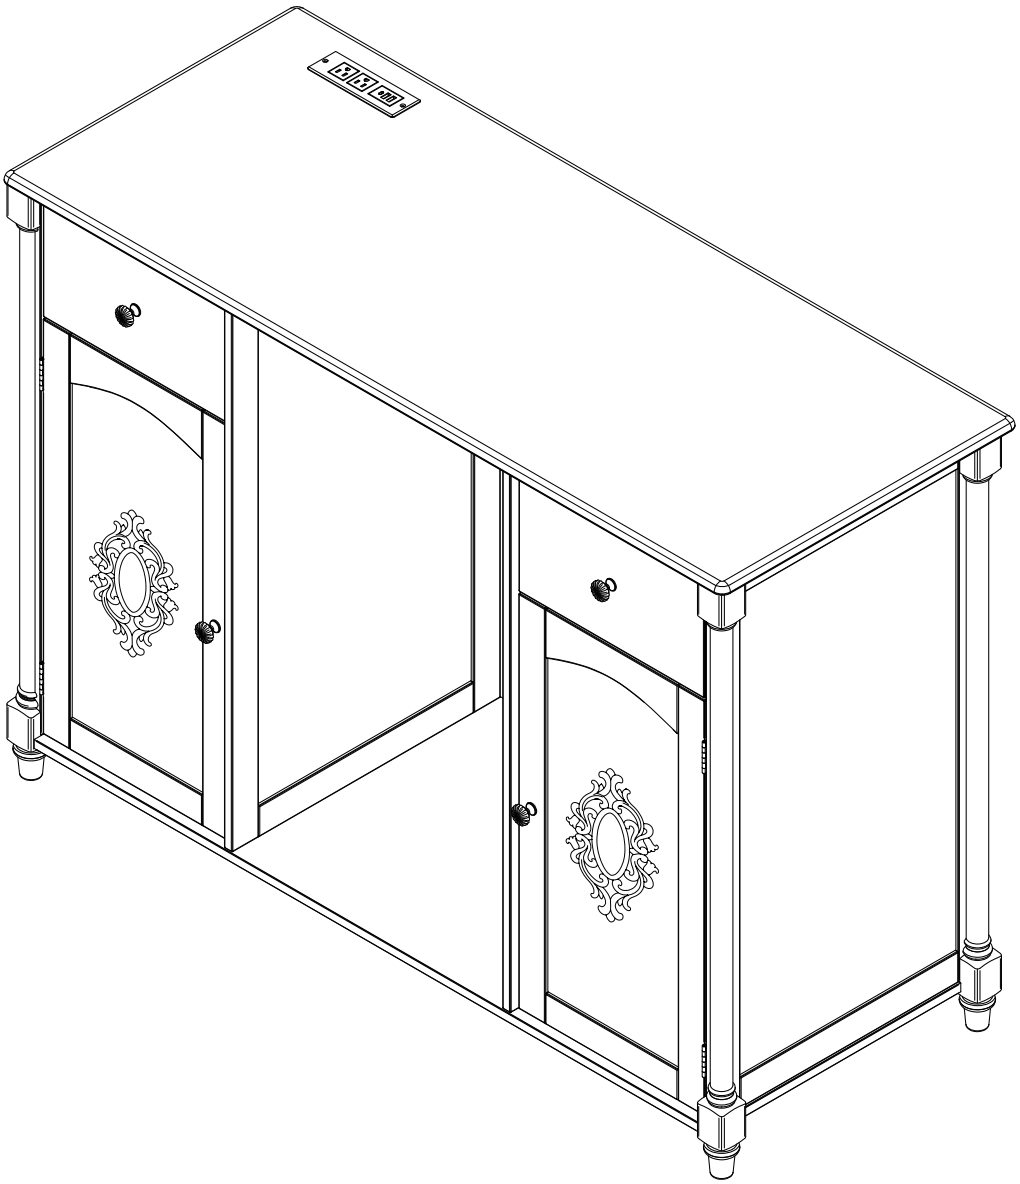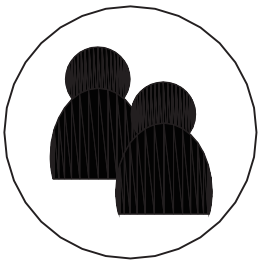

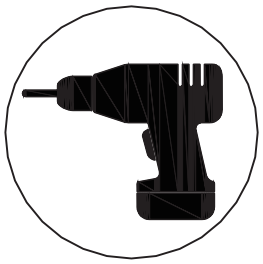


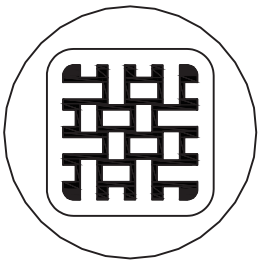

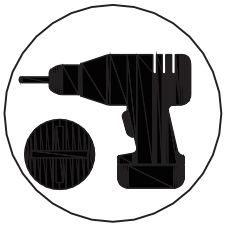


Some steps are easier with two people, so grab a friend to lend a hand.

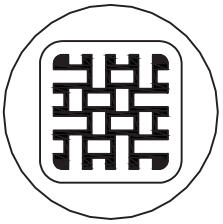

Use a power drill or a Phillips screwdriver to put it all together




Lay a soft cloth on the floor first to avoid scratching the floor or furniture.

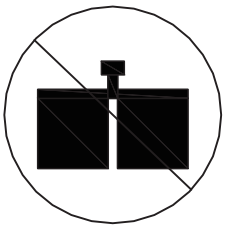


When you see the warning icon, go easy on those bolts. Overtightening can crack the wood or damage the frame.


Part identification

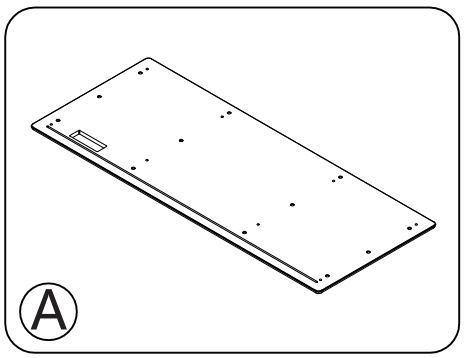


Panel
Qty:1

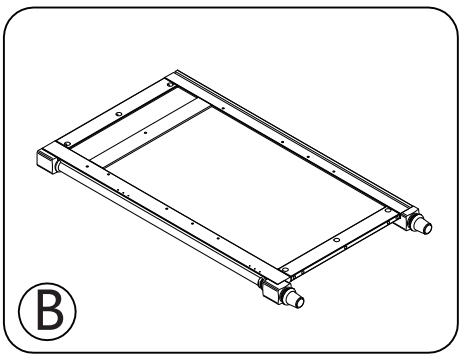


The left leg of the cabinet body
Qty:1

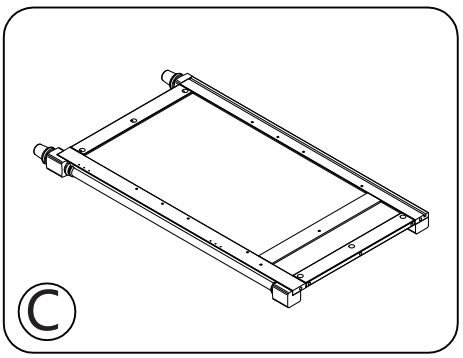


The right leg of the cabinet body
Qty:1

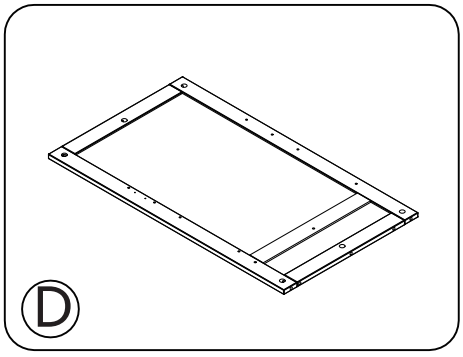


The vertical panel in the middle of the left side of the cabinet body
Qty:1

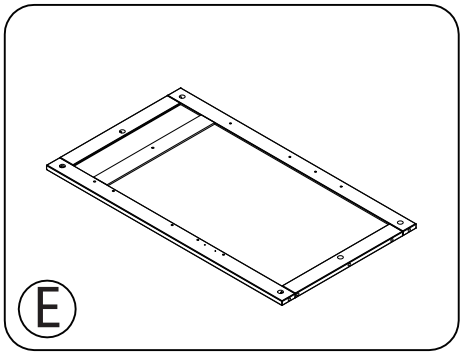


The vertical panel in the middle on the right side of the cabinet body
Qty:1

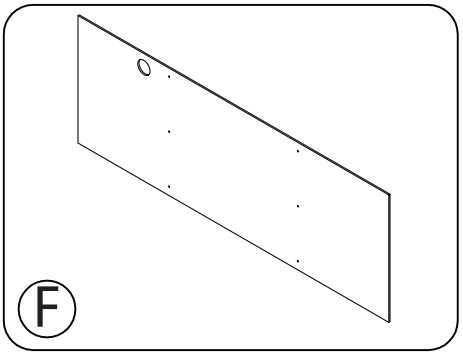


upper backplate
Qty:1

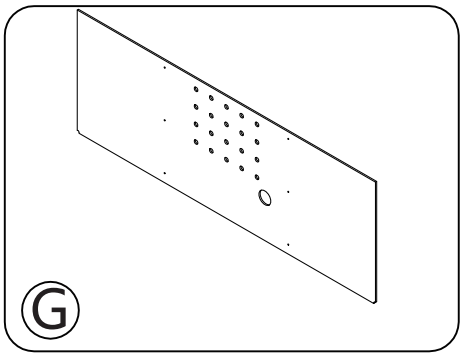


lower backplate
Qty:1

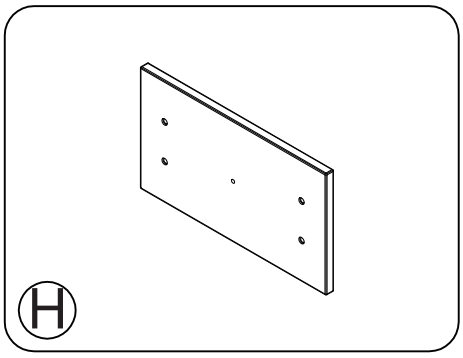


drawer panel
Qty:2

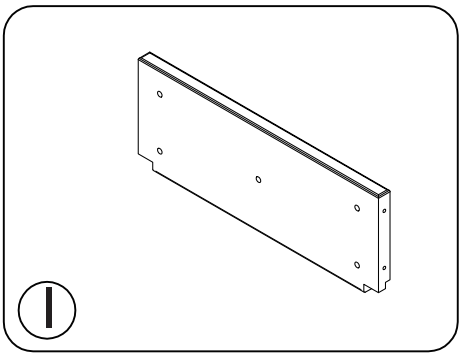


drawer fronts
Qty:2

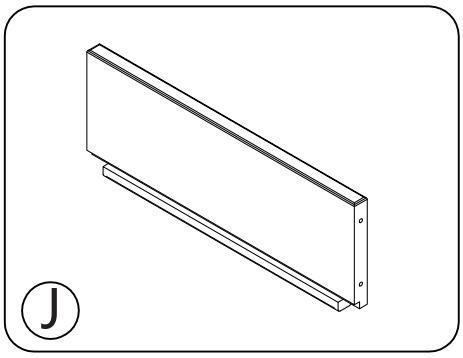


drawer back panel
Qty:2

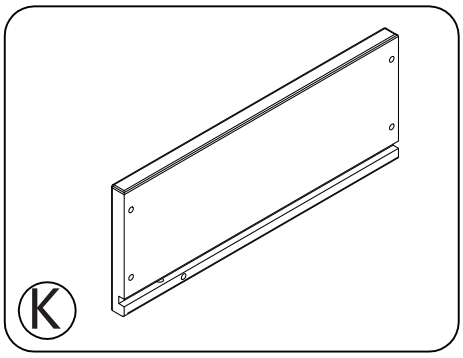


Drawer left side panel
Qty:2

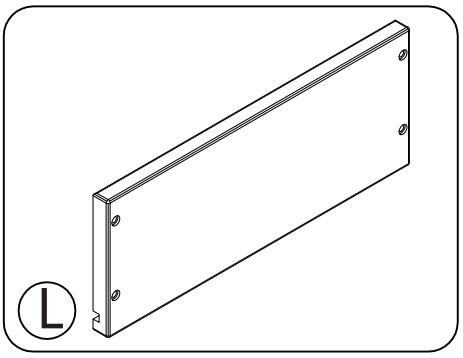


Drawer right side panel
Qty:2

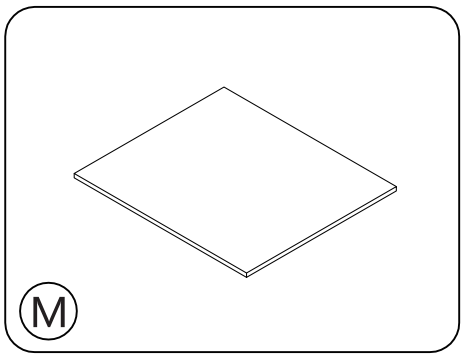


drawer bottom floor
Qty:2

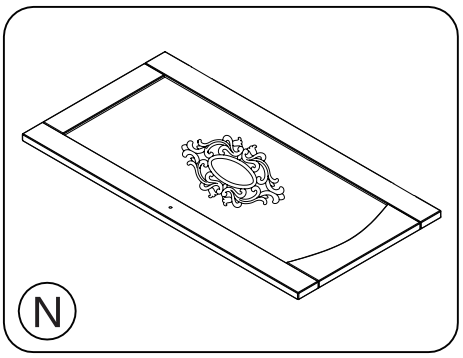


Left door panel
Qty:1

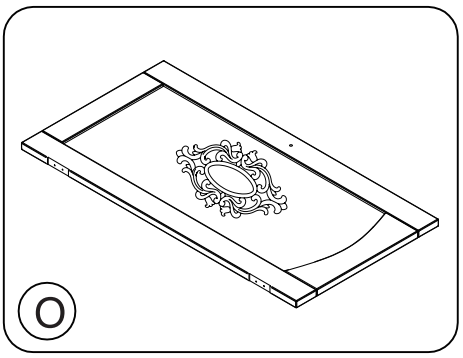


Right door panel
Qty:1

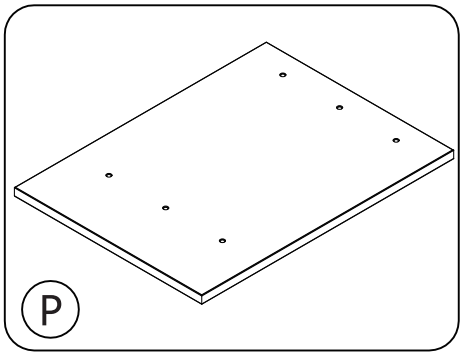


Mobile laminated panel 1
Qty:1

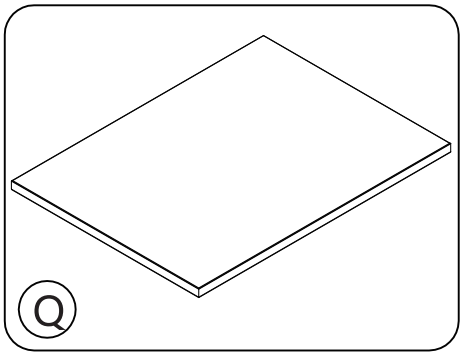

Mobile laminated panel 2
Qty:2

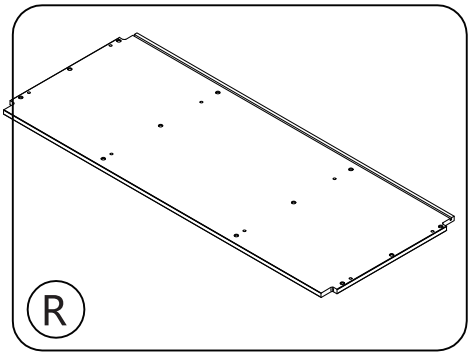


bottom plate
Qty:1

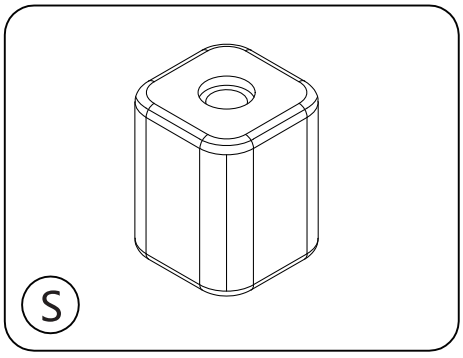


support feet
Qty:2


Hardware identification

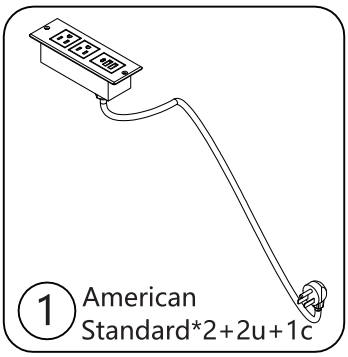


socket
Qty:1

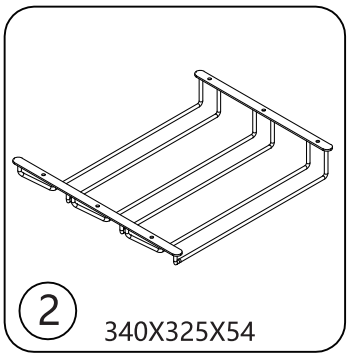


iron frame
Qty:1

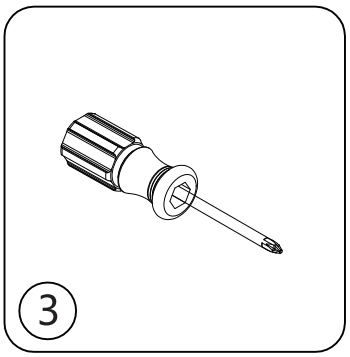


Phillips screwdriver
Qty:1

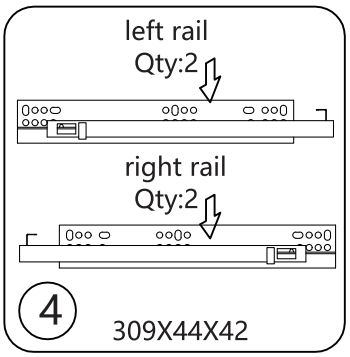


rail
Qty:2

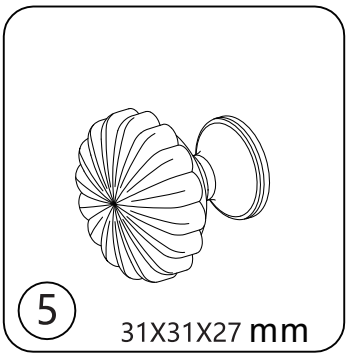


Metal handle
Qty:4

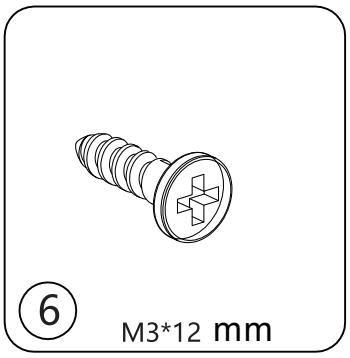


Cross conical tapping screws
Qty:58

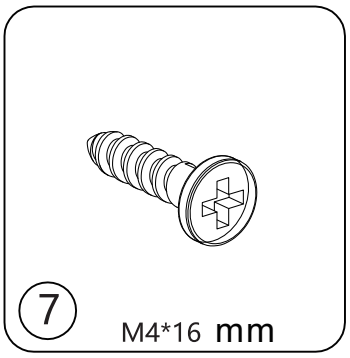


Cross conical tapping screws
Qty:12

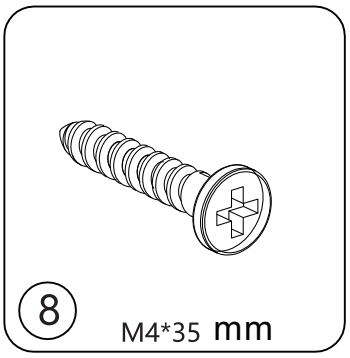


Cross conical tapping screws
Qty:16

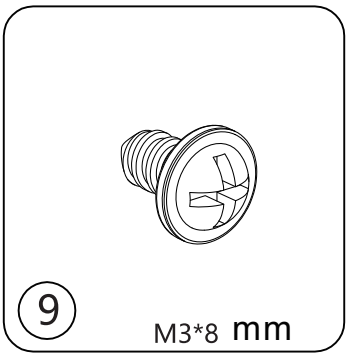


Cross umbrella head
tapping screw
Qty:24

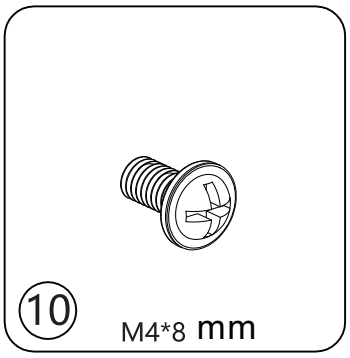


Cross umbrella head screw
Qty:8

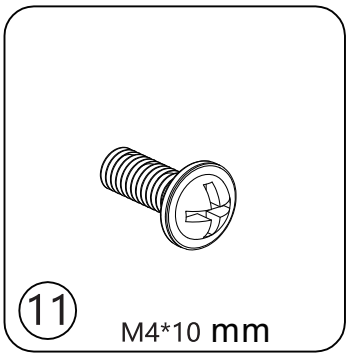


Cross umbrella head screw
Qty:6

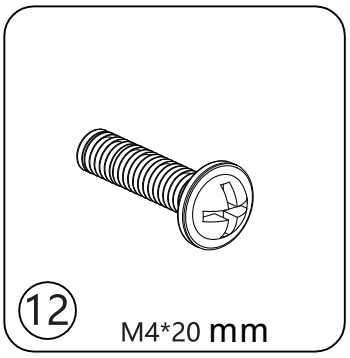


Cross umbrella head screw
Qty:2

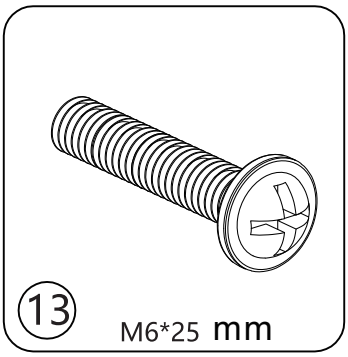


Cross umbrella head screw
Qty:8

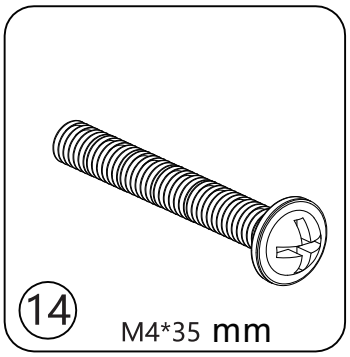

Cross umbrella head screw
Qty:2

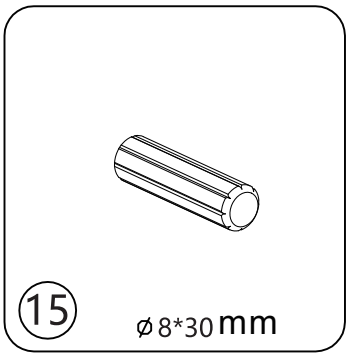


positioning pin
Qty:16

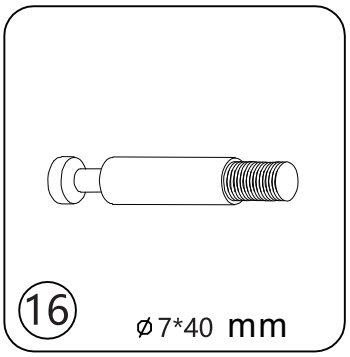


Three-in-one
connecting rod
Qty:24

Hardware identification

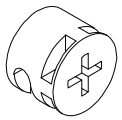


17 ø15*13 mm

Three-in-one installation hat
Qty:24

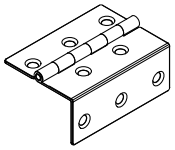


18 50X20X1 mm

door hinge
Qty:4

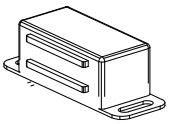


19 46X17X14 mm

Door suction hardware
Qty:2




20 45X12X1 mm

Door suction hardware gasket
Qty:2

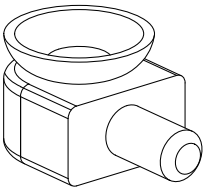


21 23*14*12 mm

shelf support
Qty:12

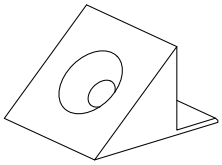


22 15X14X9 mm

backplate buckle
Qty:16

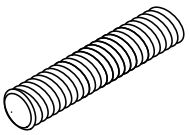


23 M8*25 mm

Full-tooth screw
Qty:2




24 M8*25 mm

Adjustable foot
Qty:2

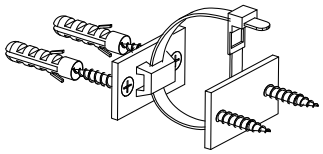


25

Hardware to prevent tipping
Qty:2

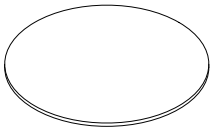

26 ø21*1mm

foot pad
Qty:4

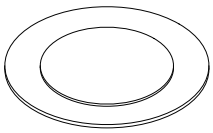


27 ø12*1mm


washer
Qty: 2

Installation instructions


Step 1

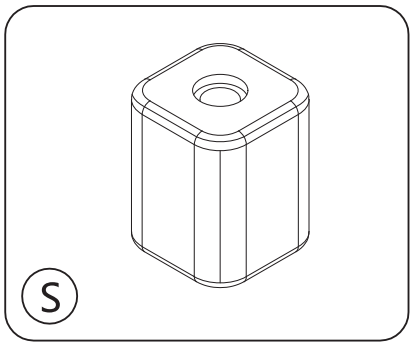


support feet
Qty:2

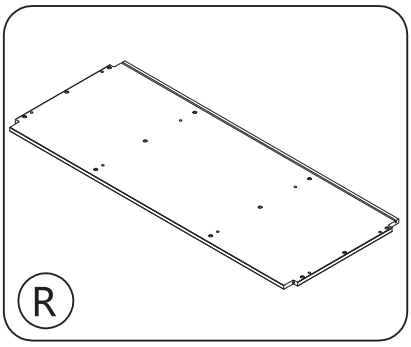

bottom plate
Qty:1

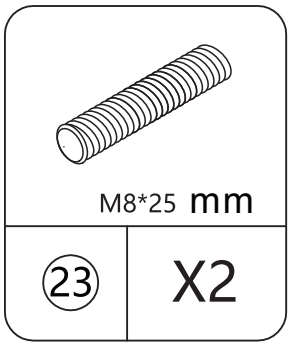


Full-tooth screw

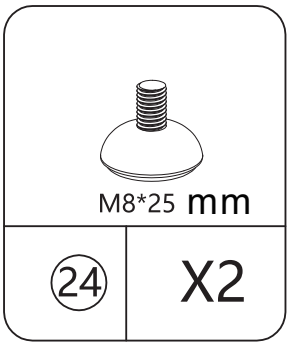


Adjustable foot

1. Screw the full-thread screws into the support feet, then thread the adjustable feet onto them
2. Attach the support feet under the bottom board. Watch the direction. orientation

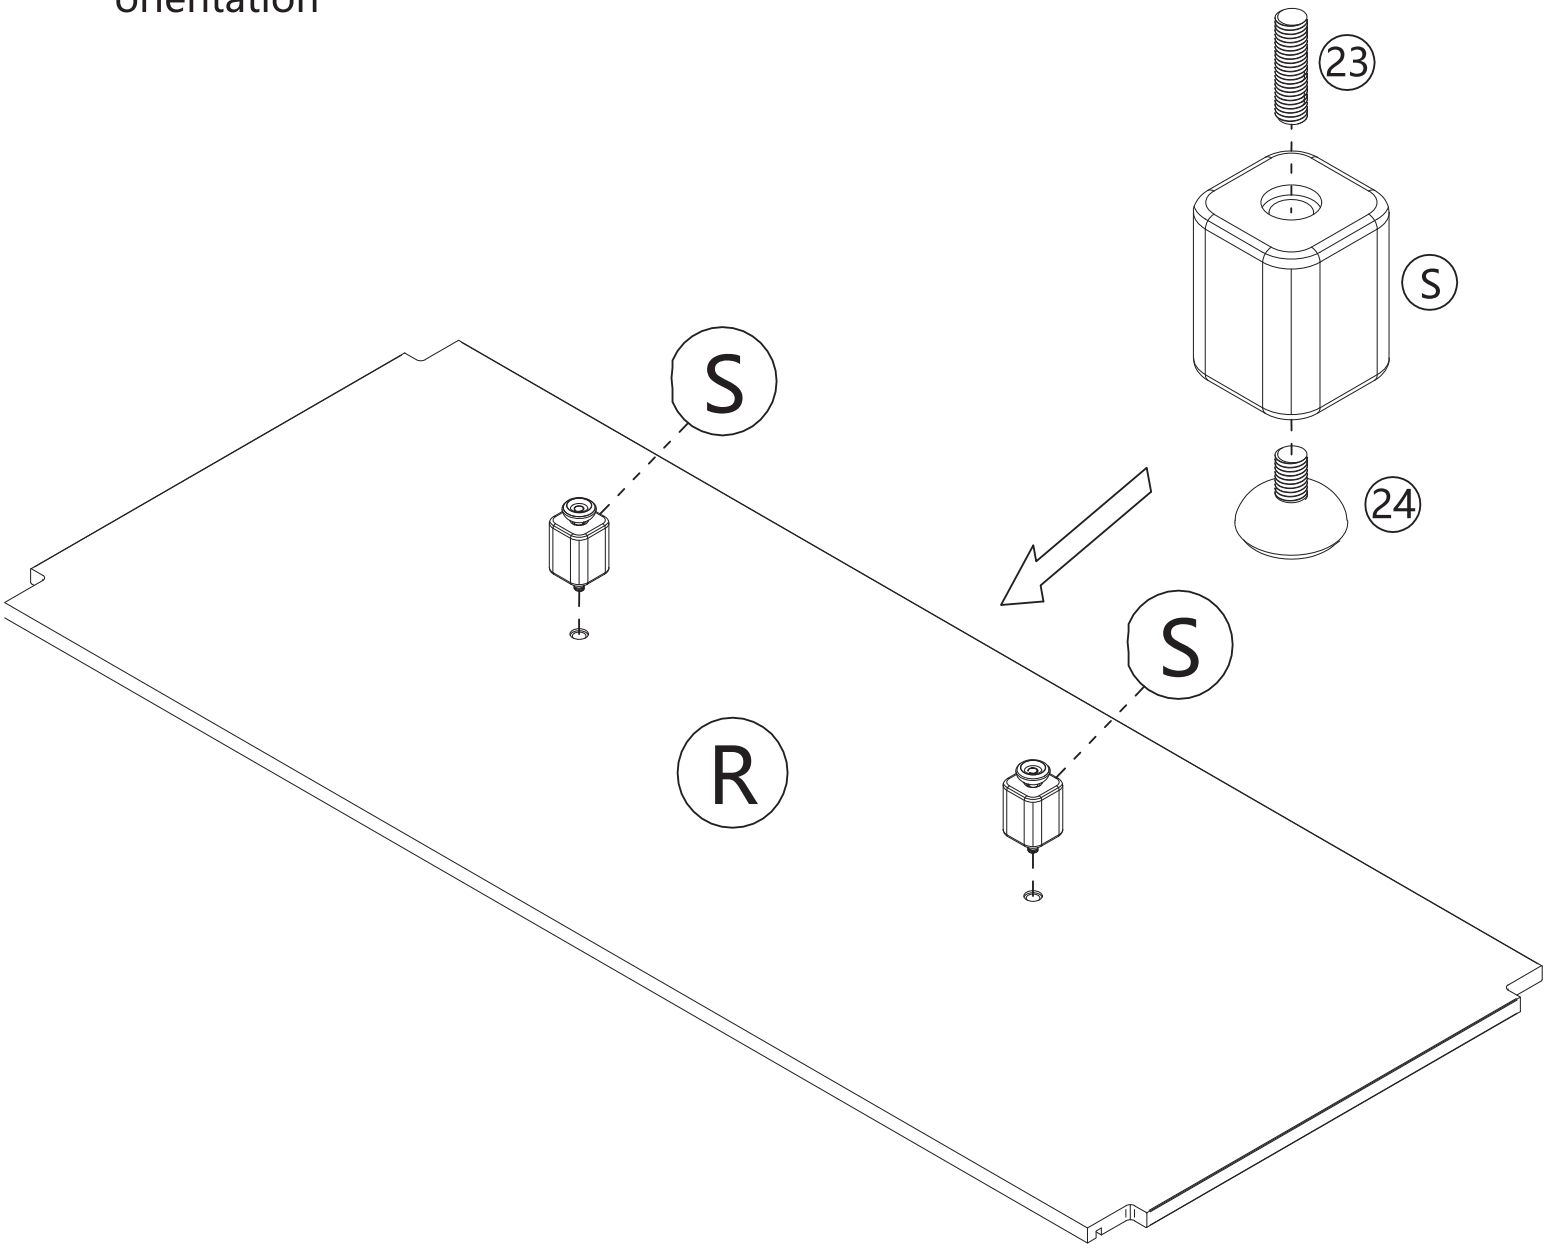


Installation instructions


Step 2

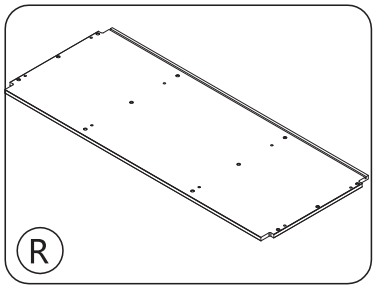


bottom plate
Qty:1

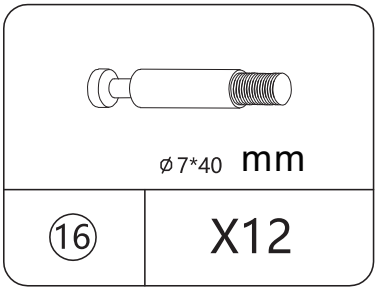

Three-in-one
connecting rod

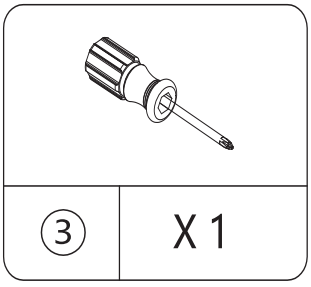


Phillips screwdriver

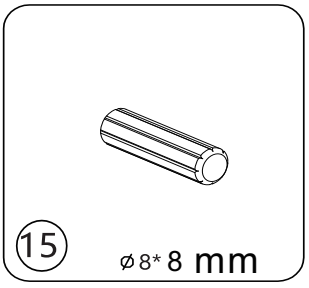


positioning pin
Qty:16

1. Pop the three-in-one connectors into the bottom board using a drill or screwdriver

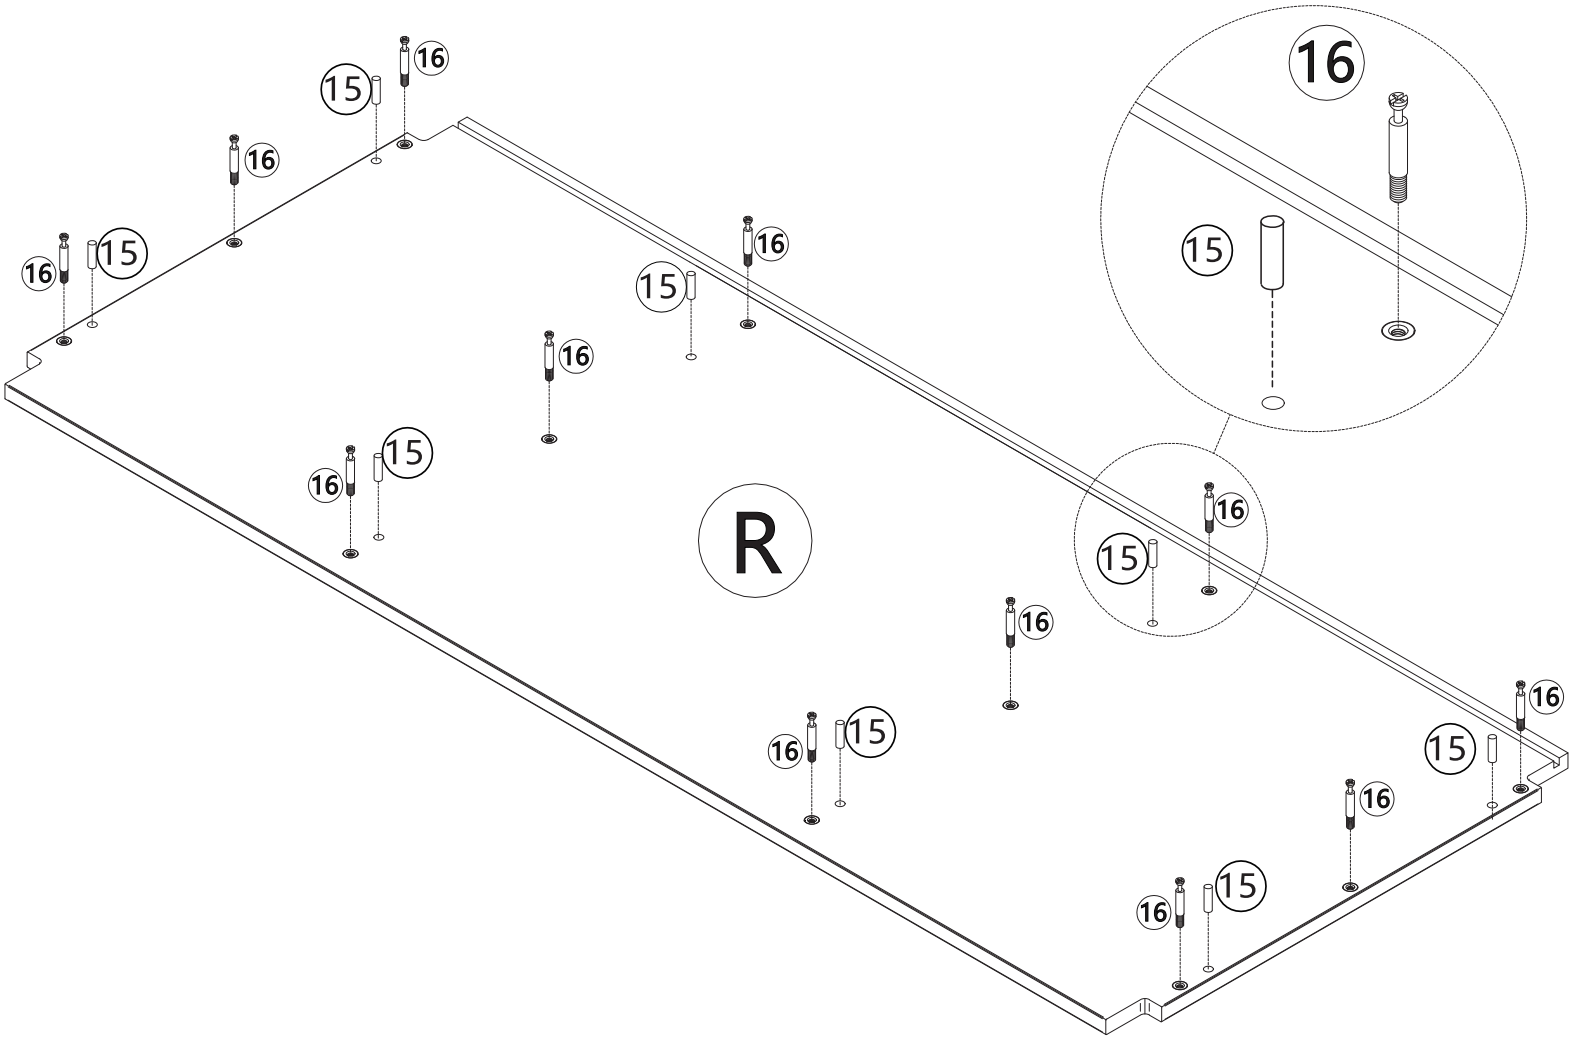


Installation instructions


Step 3

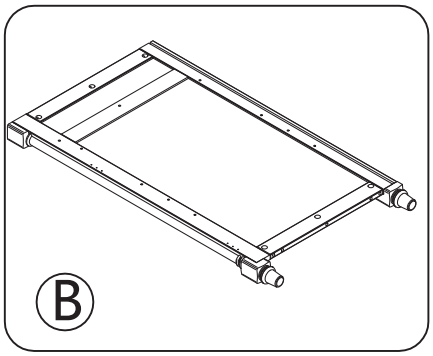

The left leg of the cabinet body
Qty:1

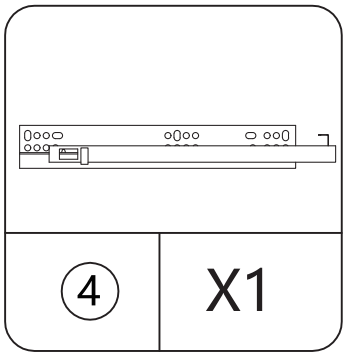


left rail

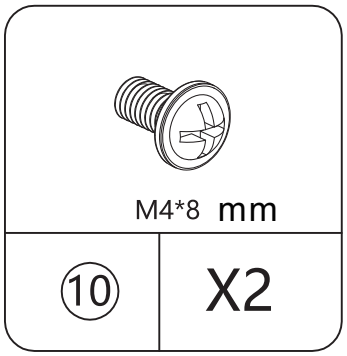


Cross umbrella head screw

1. Attach the #10 cross umbrella head screws and the #4 left slide rail to the left side panel. Double-check where the screws go.

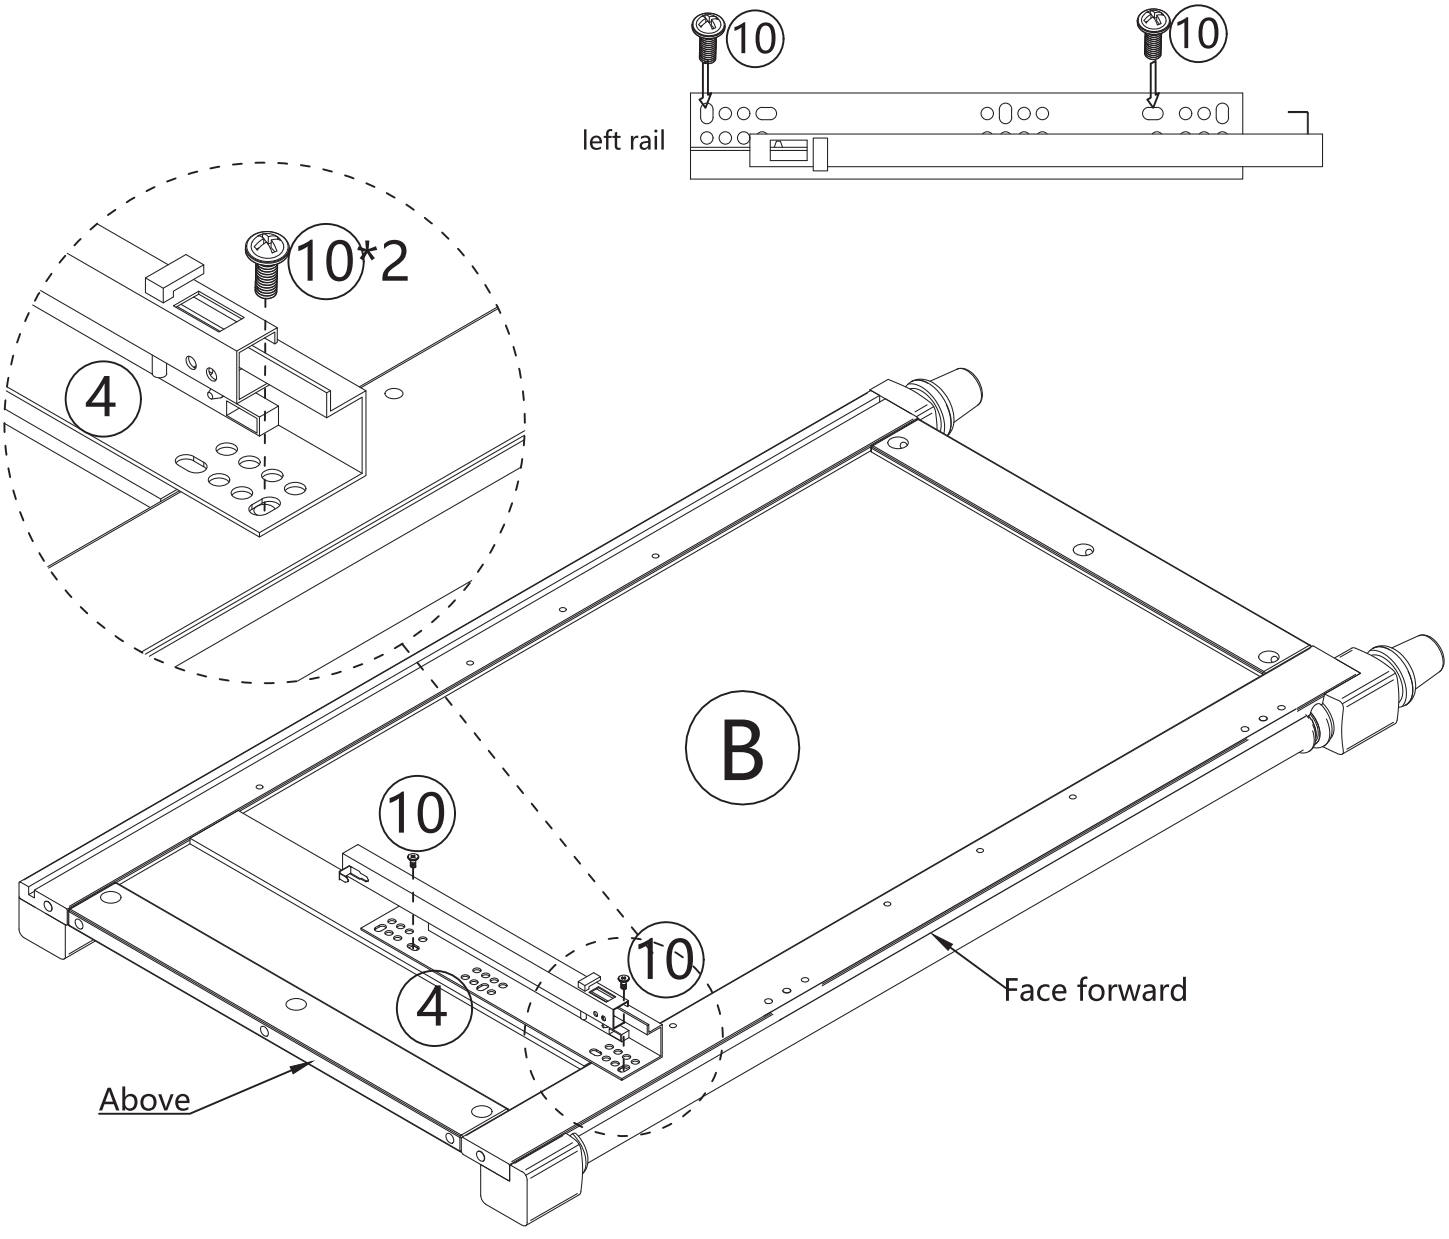


Installation instructions


Step 4

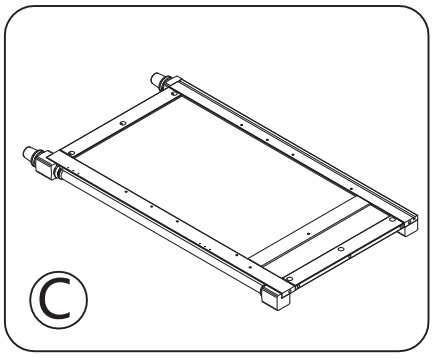

The right leg of the cabinet body
Qty:1

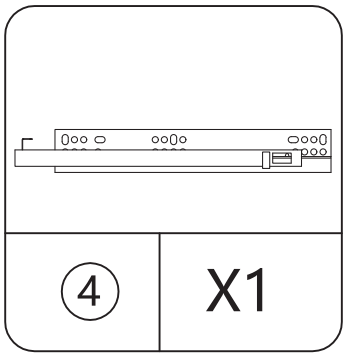



right rail

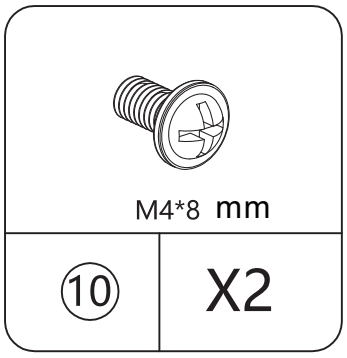

Cross umbrella head screw


1. Attach the #10 cross umbrella head screws and the #4 right slide rail to the front of the right side panel.

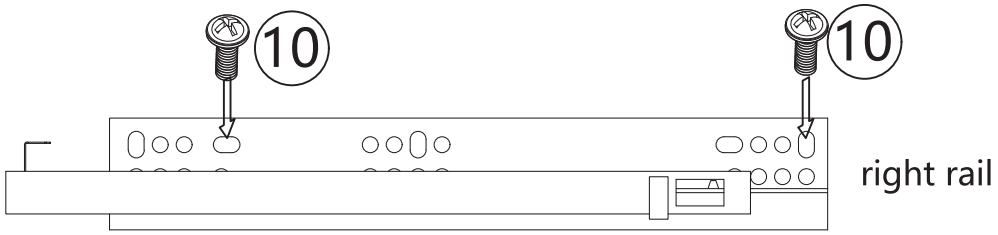

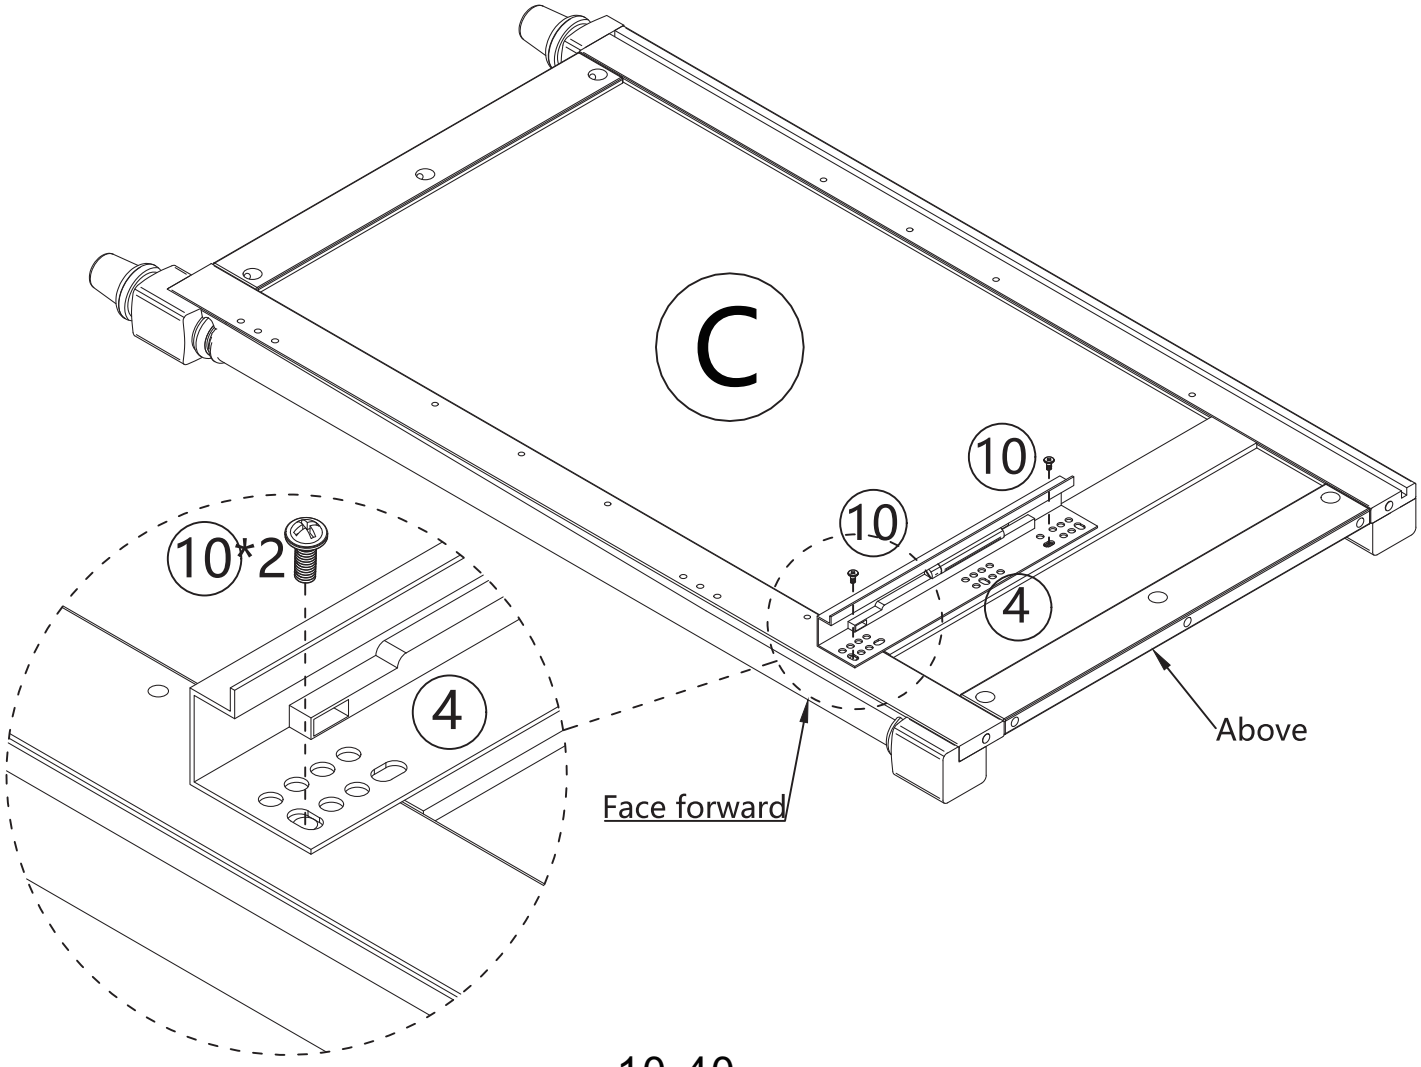


Installation instructions

Step 5

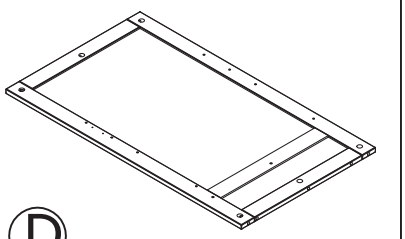


The vertical panel in the middle of the left side of the cabinet body
Qty:1

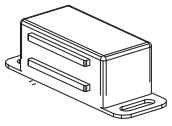

46X17X14

19	X1

Door suction hardware

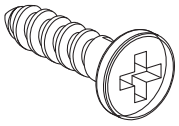


M3*12 mm

6	X2


Cross conical tapping screws

1. Screw in the #6 cross conical self-tapping screws and attach the #19 door catch on the front. Watch where it goes.

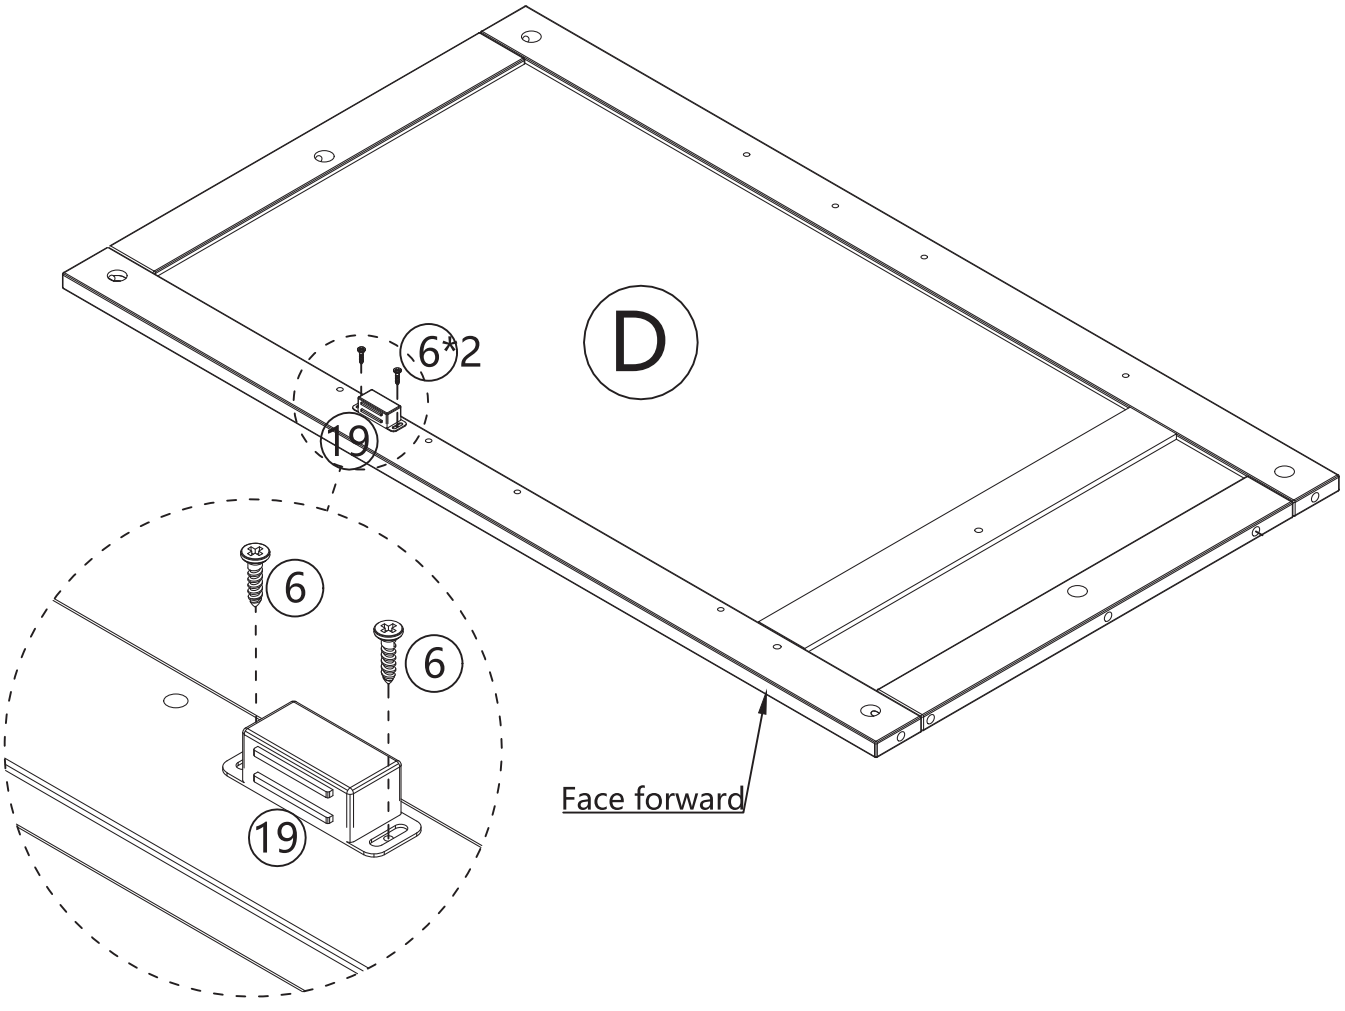


Installation instructions


Step 6

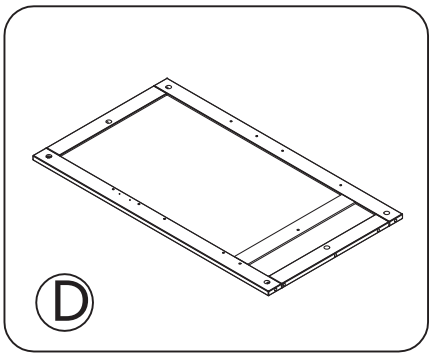

The vertical panel in the middle of the left side of the cabinet body
Qty:1

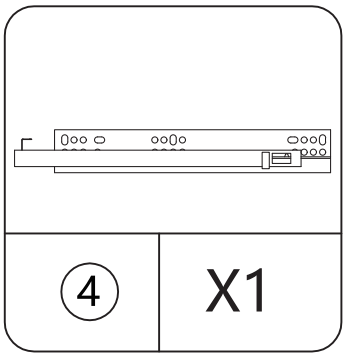


right rail

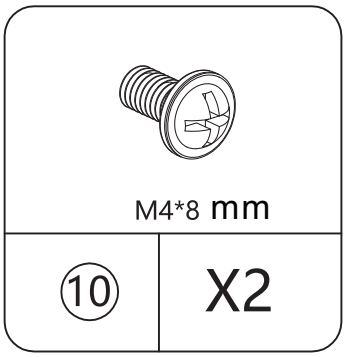


Cross umbrella head screw

1. Attach the #10 cross umbrella head screws and the #4 right slide rail to the left middle vertical panel. Make sure the screws


screws.

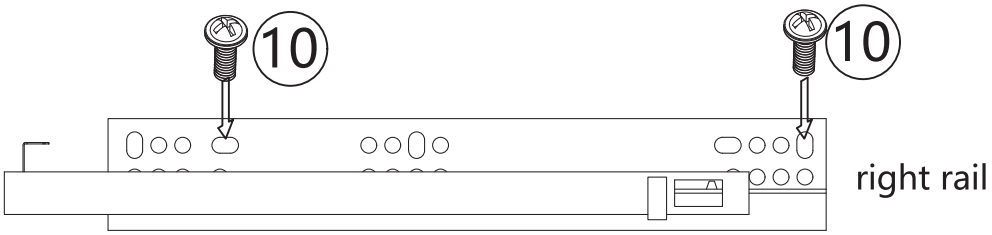

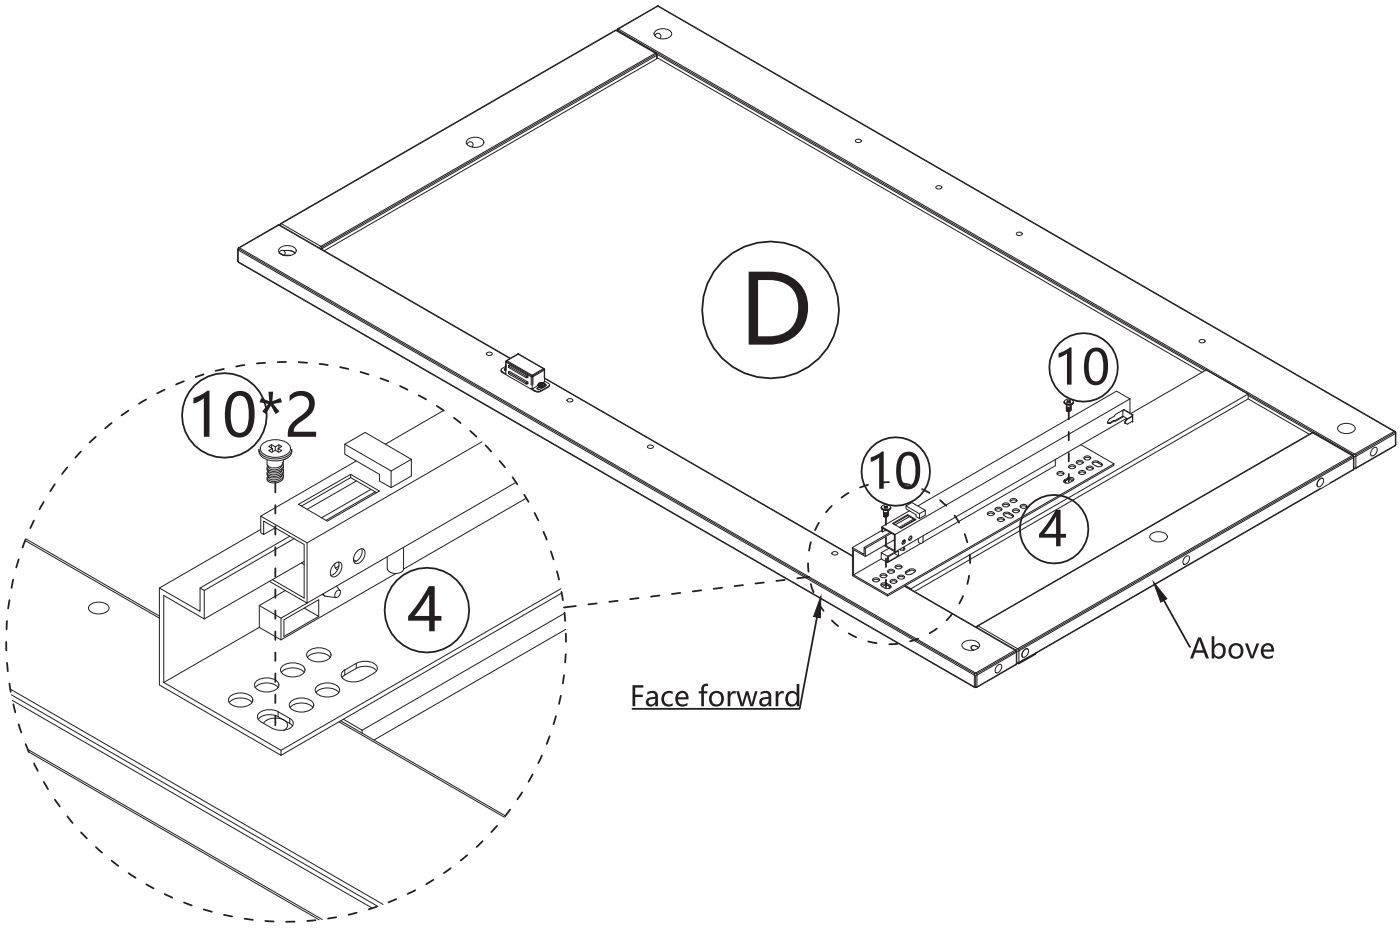


Installation instructions


Step 7

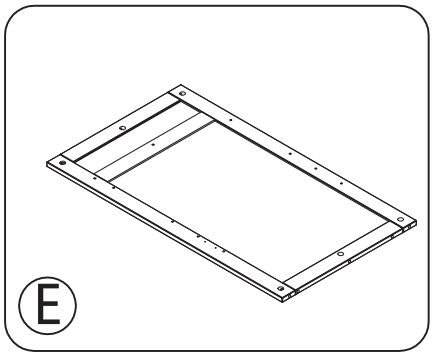

The vertical panel in the middle on the right side of the cabinet body
Qty:1

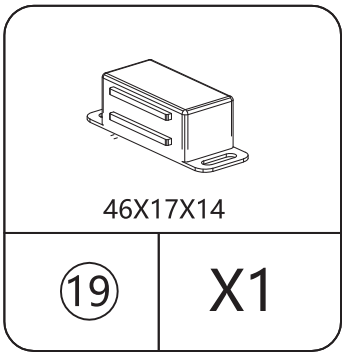


Door suction hardware

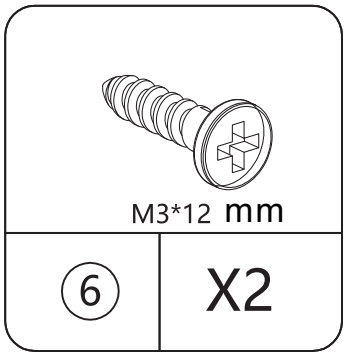


Cross conical tapping screws

1. Screw in the #6 cross conical self-tapping screws and attach the #19 door catch on the front of the right middle vertical panel · watch the placement.

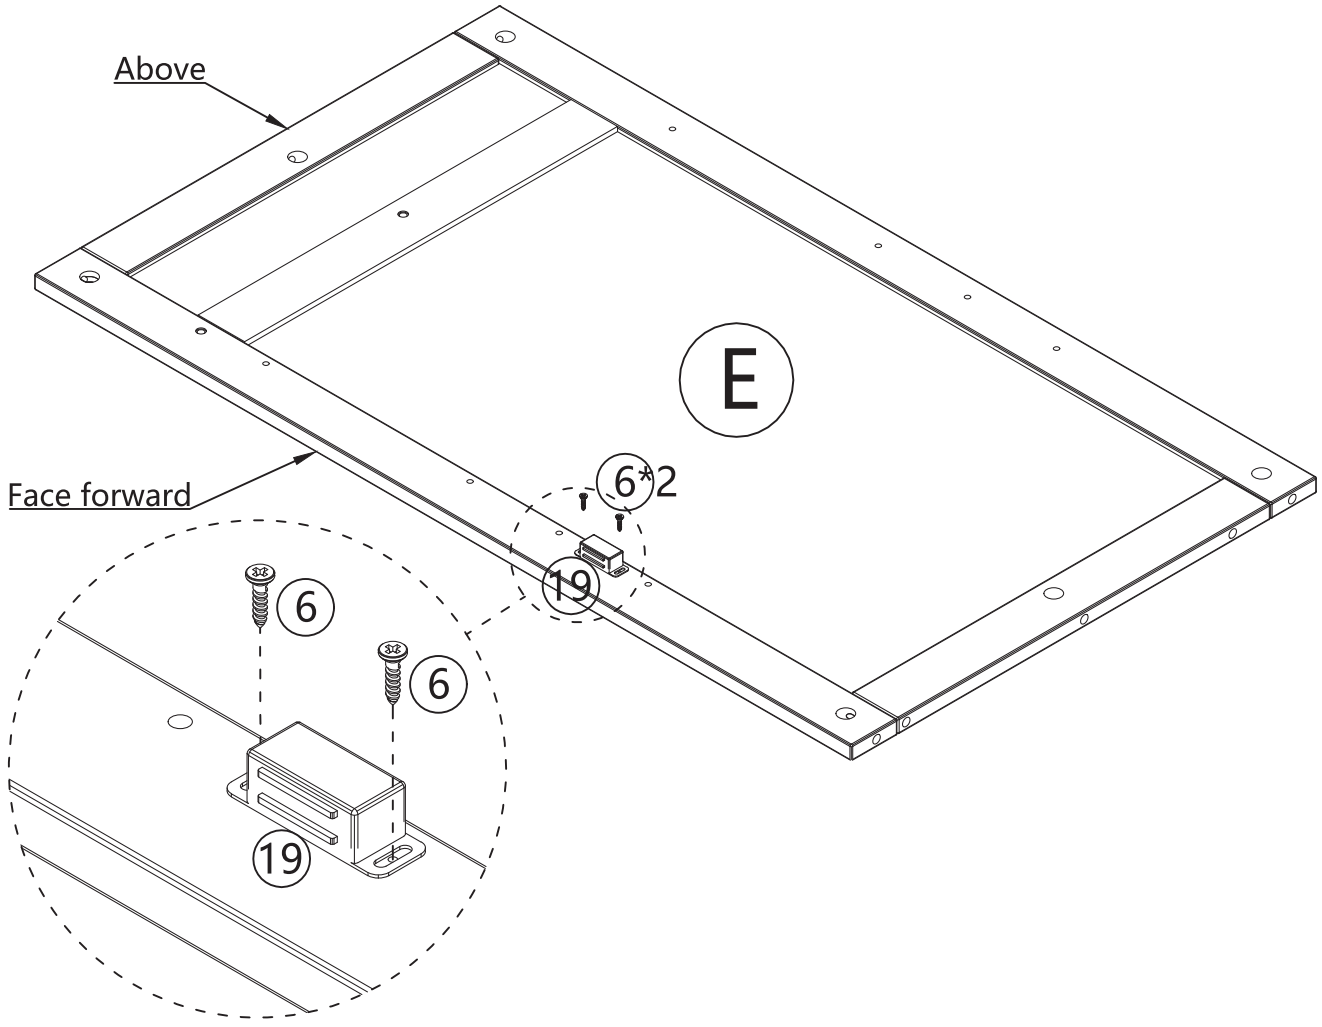


Installation instructions


Step 8

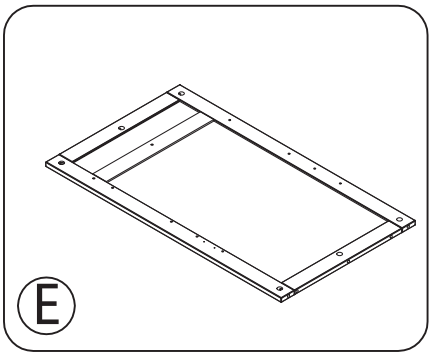

The vertical panel in the middle on the right side of the cabinet body
Qty:1

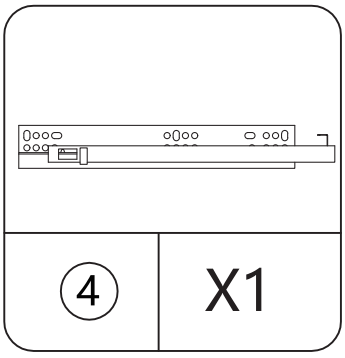


left rail

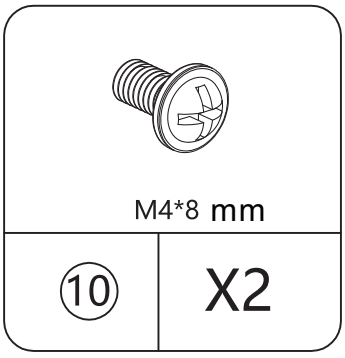


Cross umbrella head screw

1. Attach the #10 cross umbrella head screws and the #4 left slide rail to the right middle vertical panel. Check the screw positions before tightening.

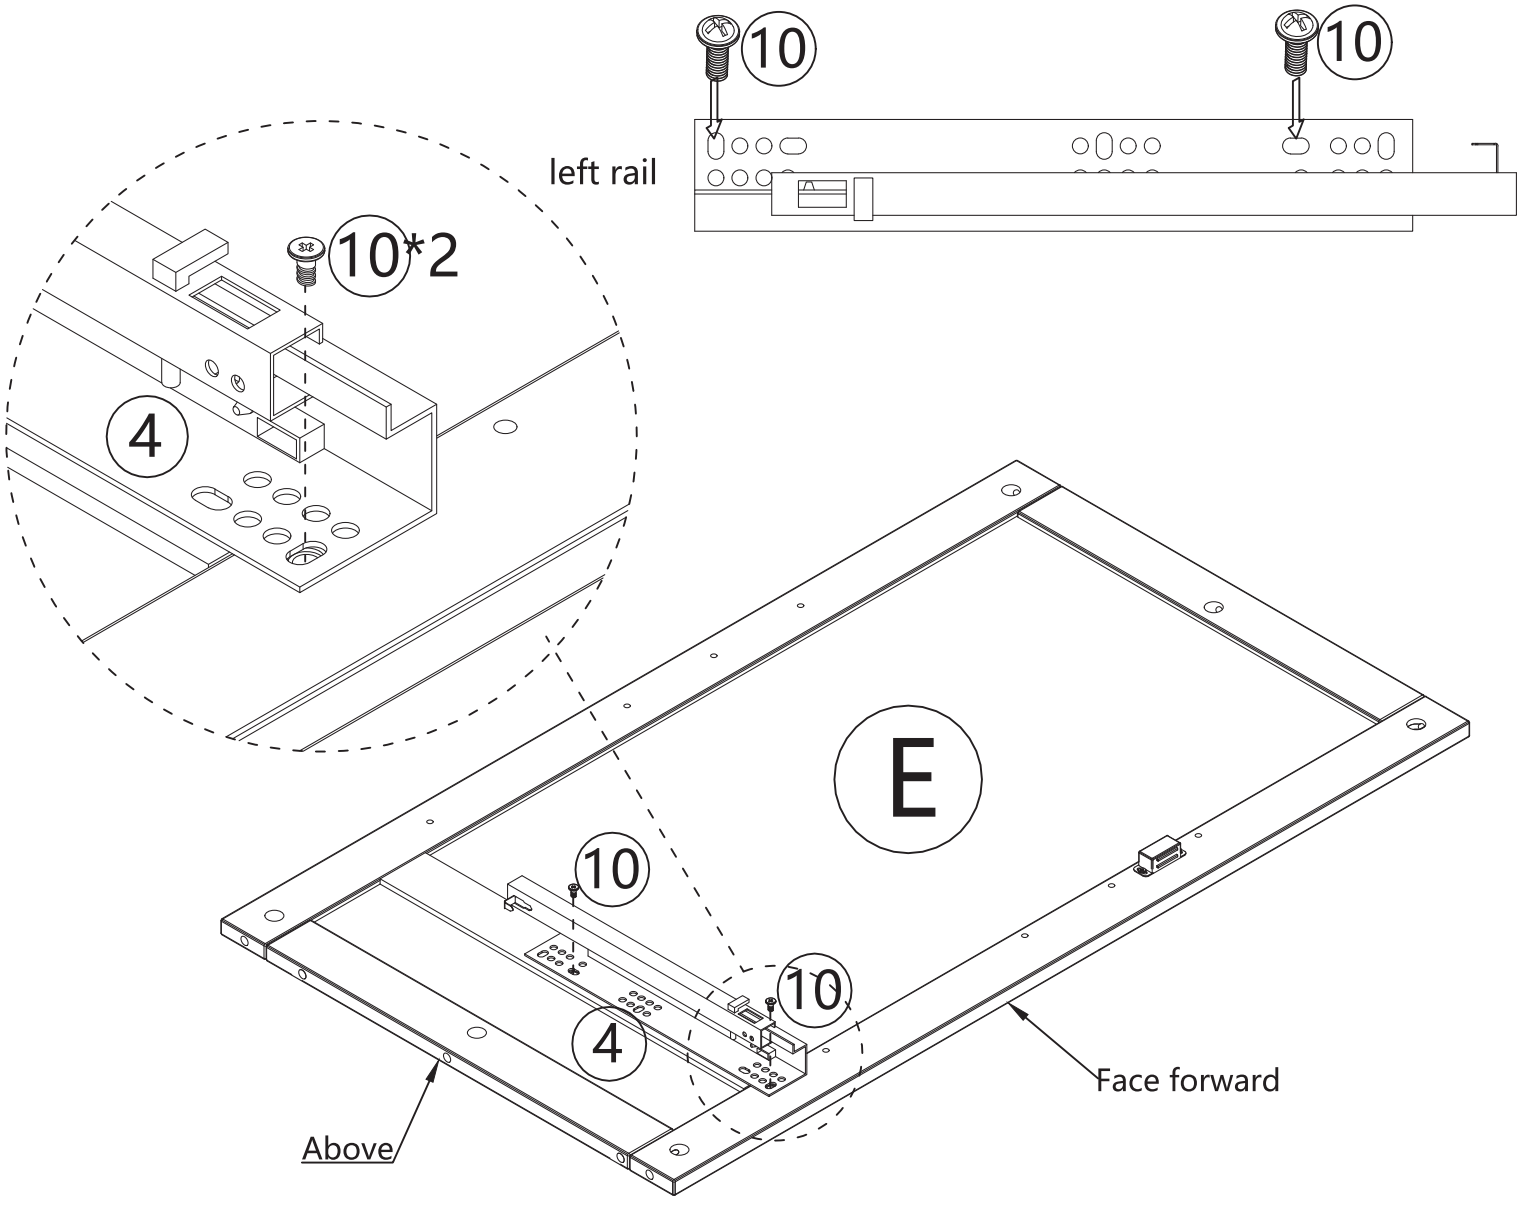


Installation instructions


Step 9

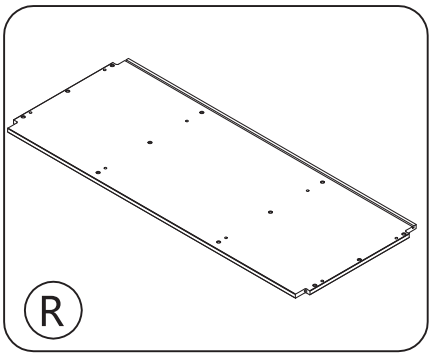

bottom plate
Qty:1

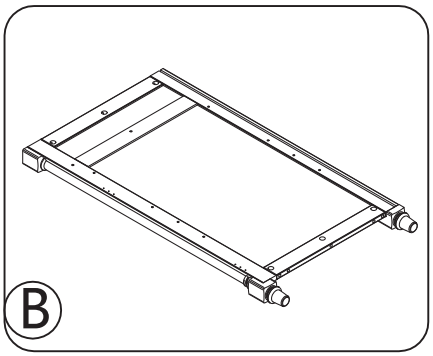


The left leg of the cabinet body
Qty:1

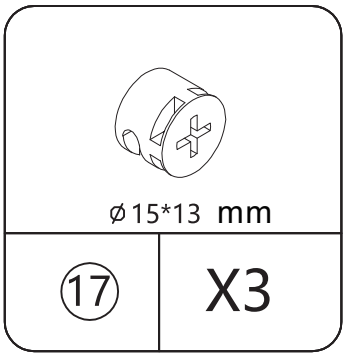


Three-in-one
installation hat

1. Slide the bottom board into the slots under the left side panel
· watch the direction. Then pop the three-in-one caps in
and lock them tight with a drill or screwdriver.

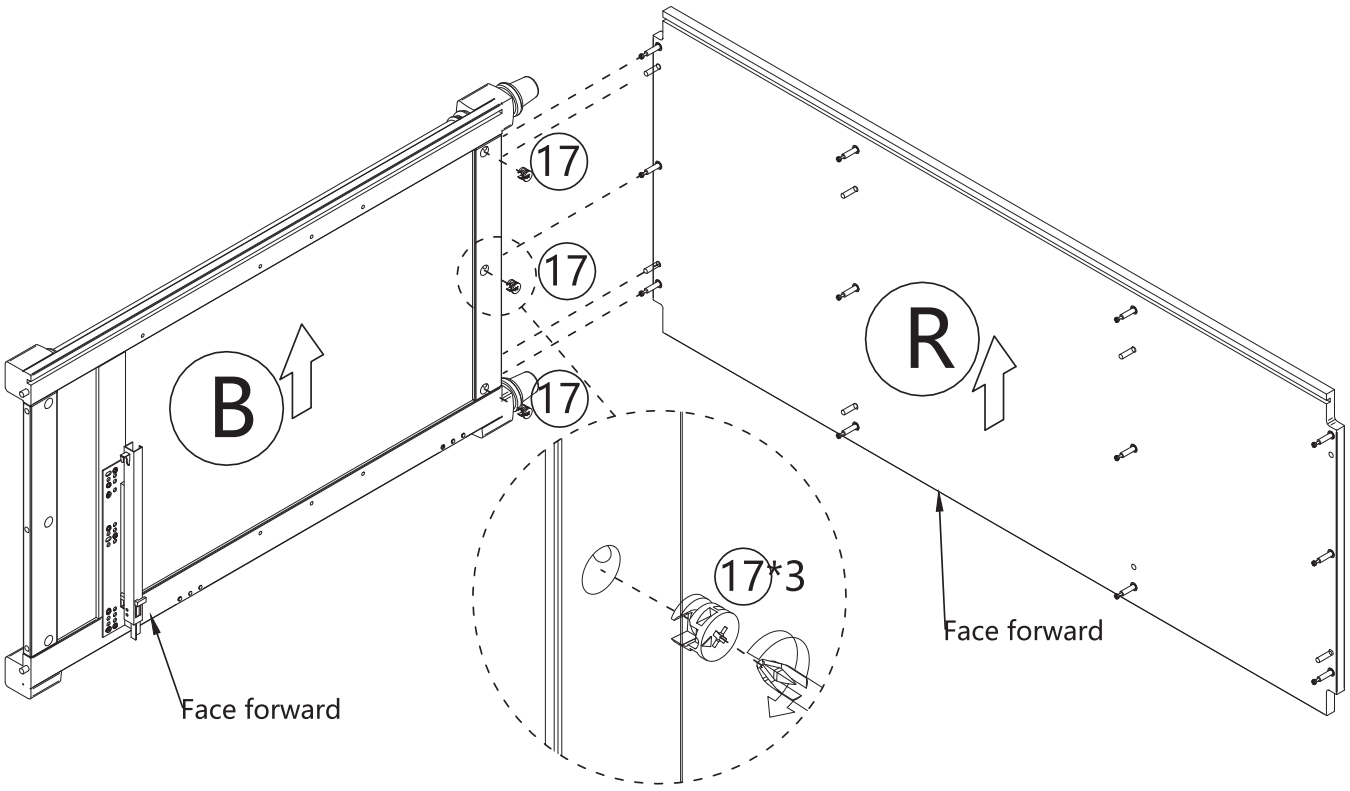


Installation instructions


Step 10

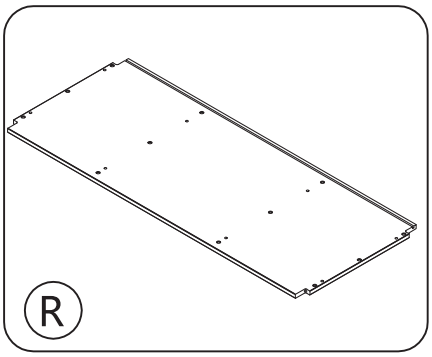

bottom plate
Qty:1

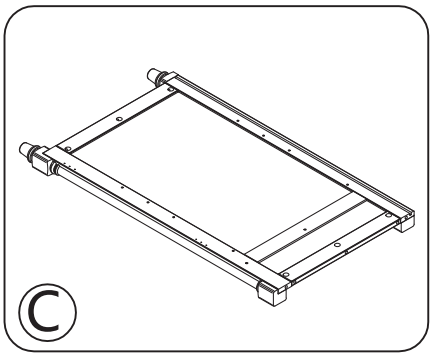


The right leg of the cabinet body
Qty:1

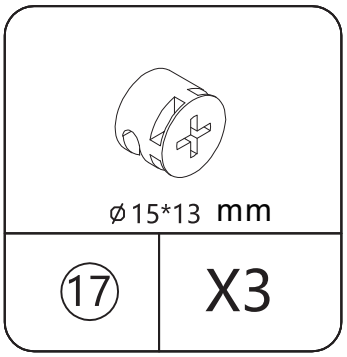


Three-in-one
installation hat

1. Slide the bottom board into the slots under the right side panel
· same deal, watch the direction. Lock the three-in-one caps
with a drill or screwdriver.

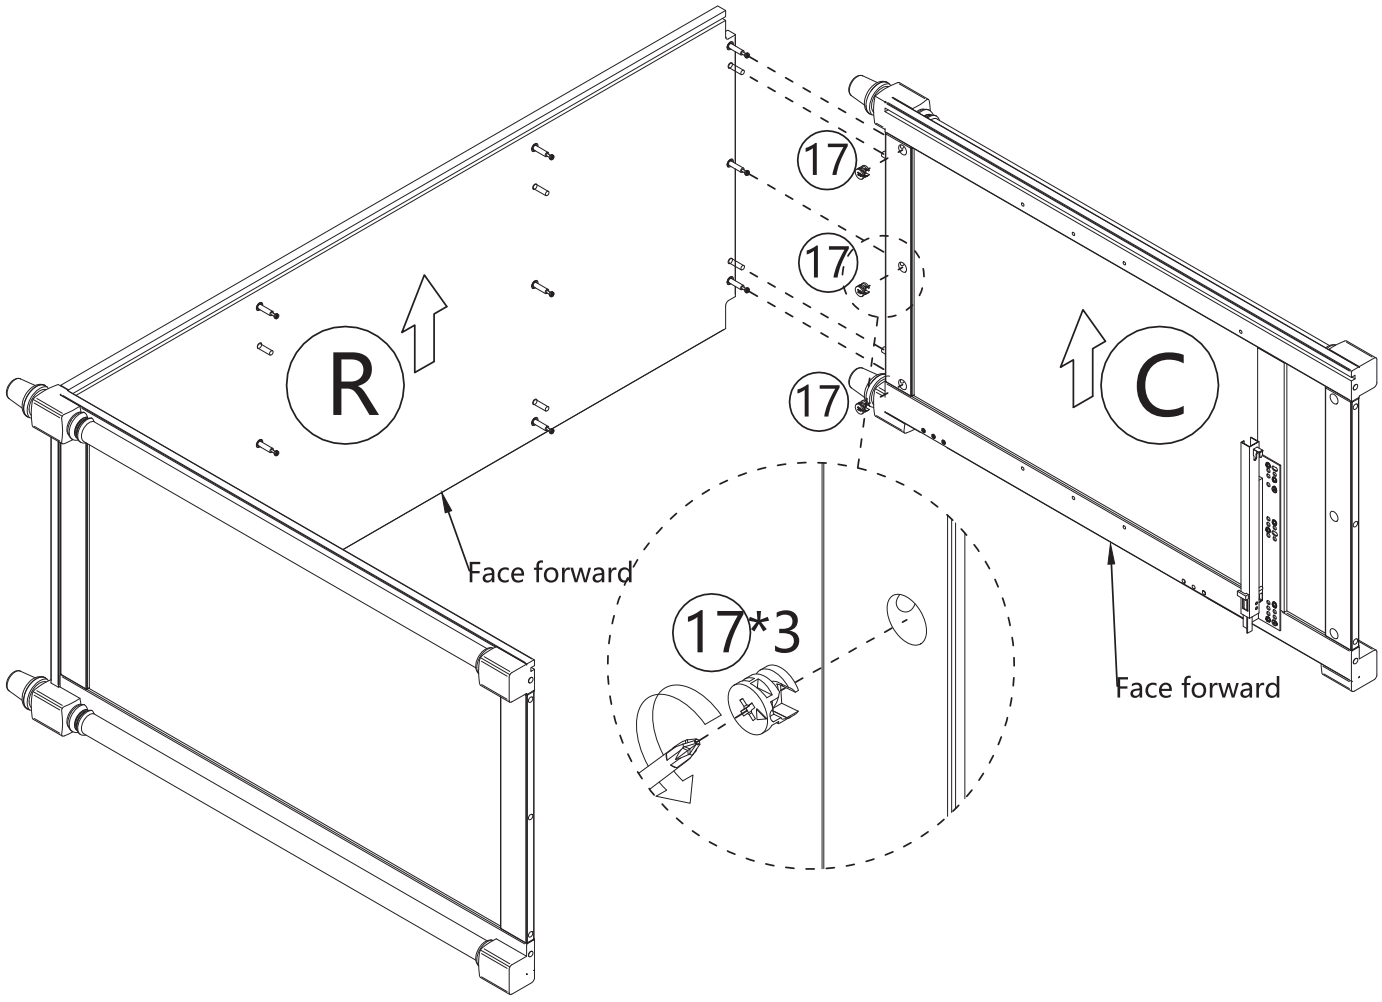


1. Now stand the cabinet upright!

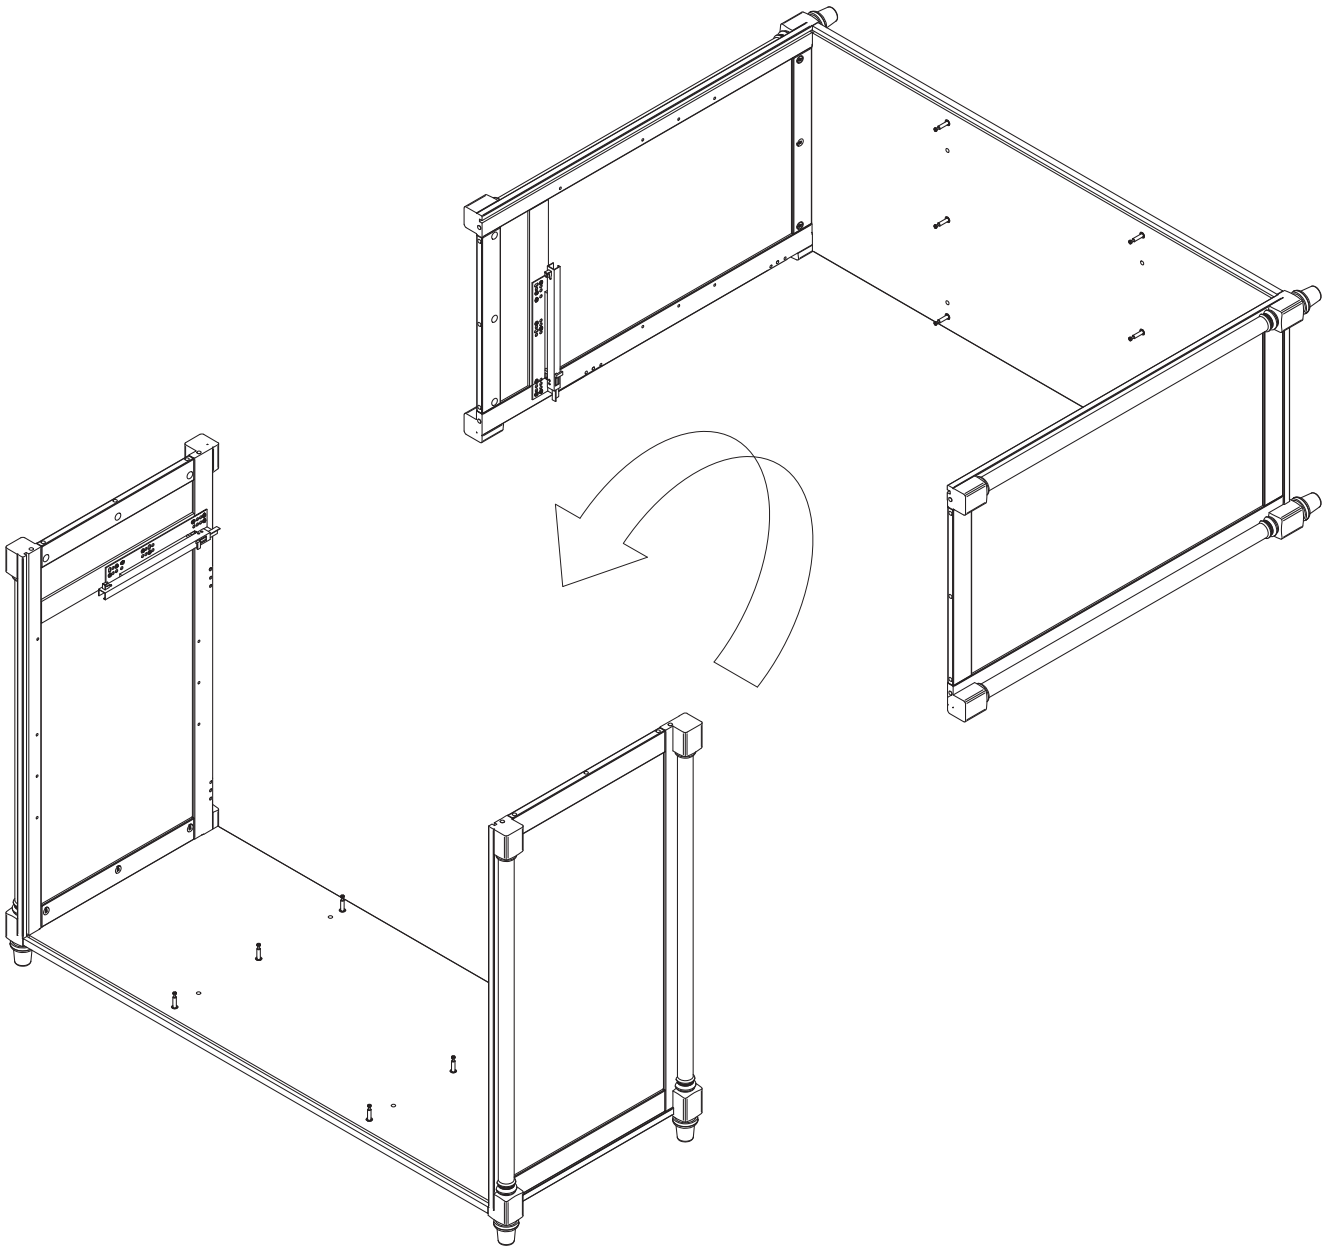


Installation instructions


Step 12

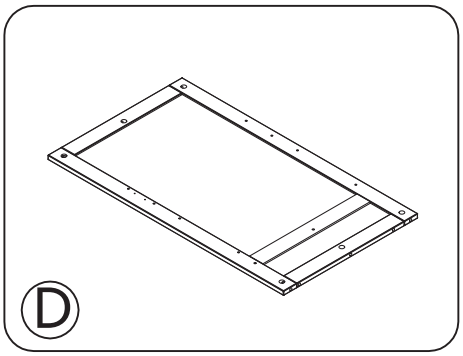

The vertical panel in the middle of the left side of the cabinet body
Qty:1

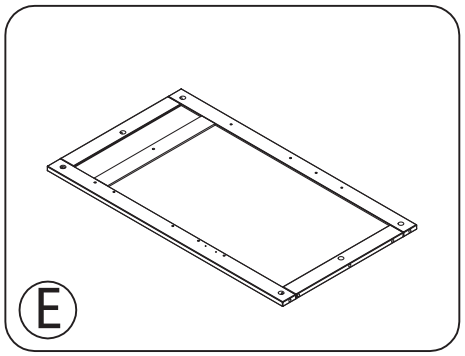


The vertical panel in the middle on the right side of the cabinet body
Qty:1

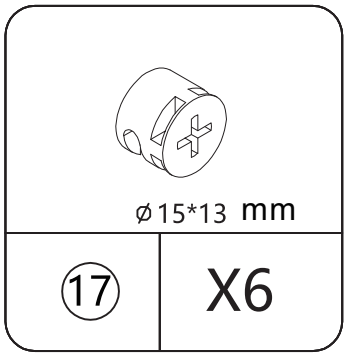


Three-in-one installation hat

1. Slide the left and right middle vertical panels into the slots in the middle of the bottom board · watch the up/down and front/back directions. Lock everything with the three-in-one caps using a drill or screwdriver.

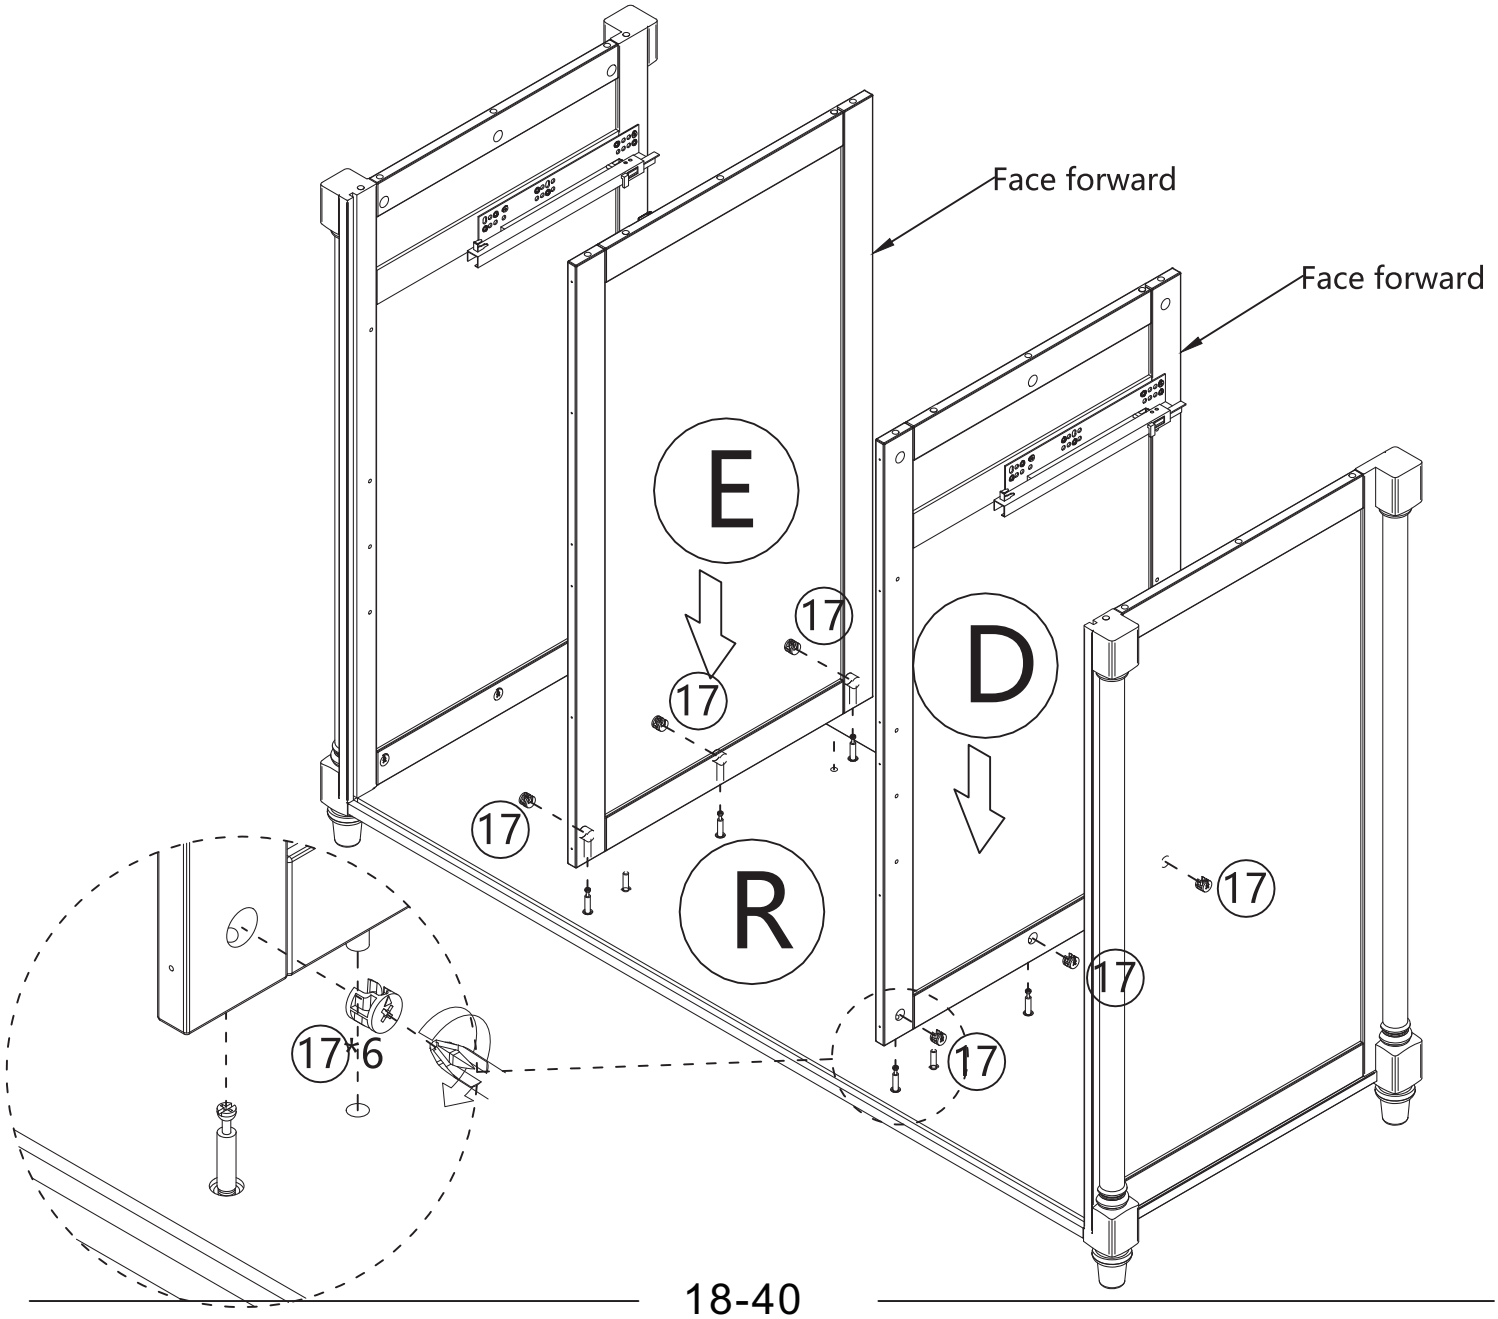


Installation instructions

Step 13

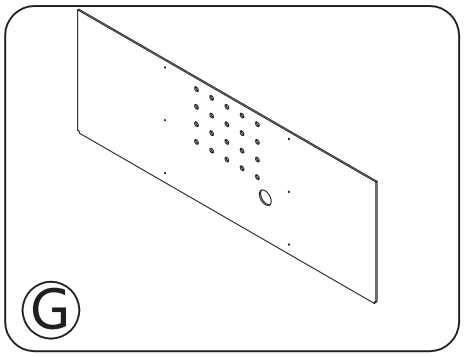


lower backplate
Qty:1

1. Slide the lower back panel into the back of the cabinet and line it up with the side panels and bottom board.

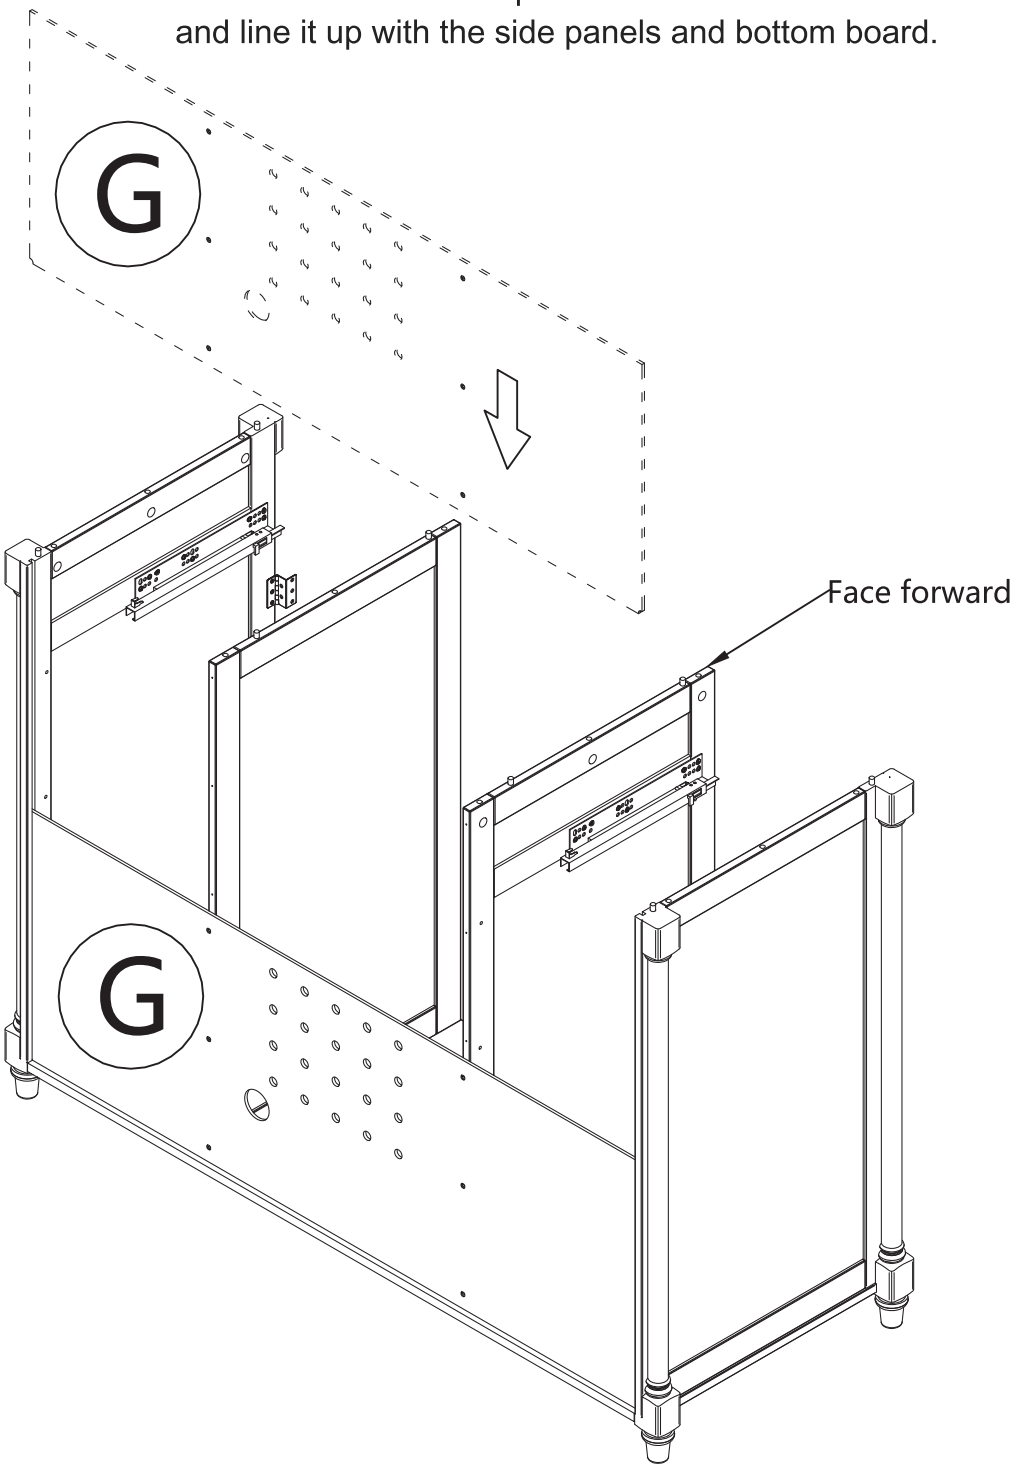


Installation instructions

Step 14

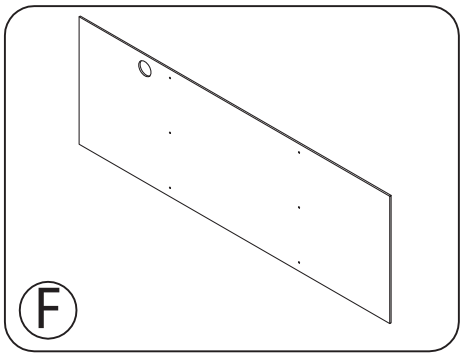


upper backplate
Qty:1

1. Slide the upper back panel into the back of the cabinet above the lower one.

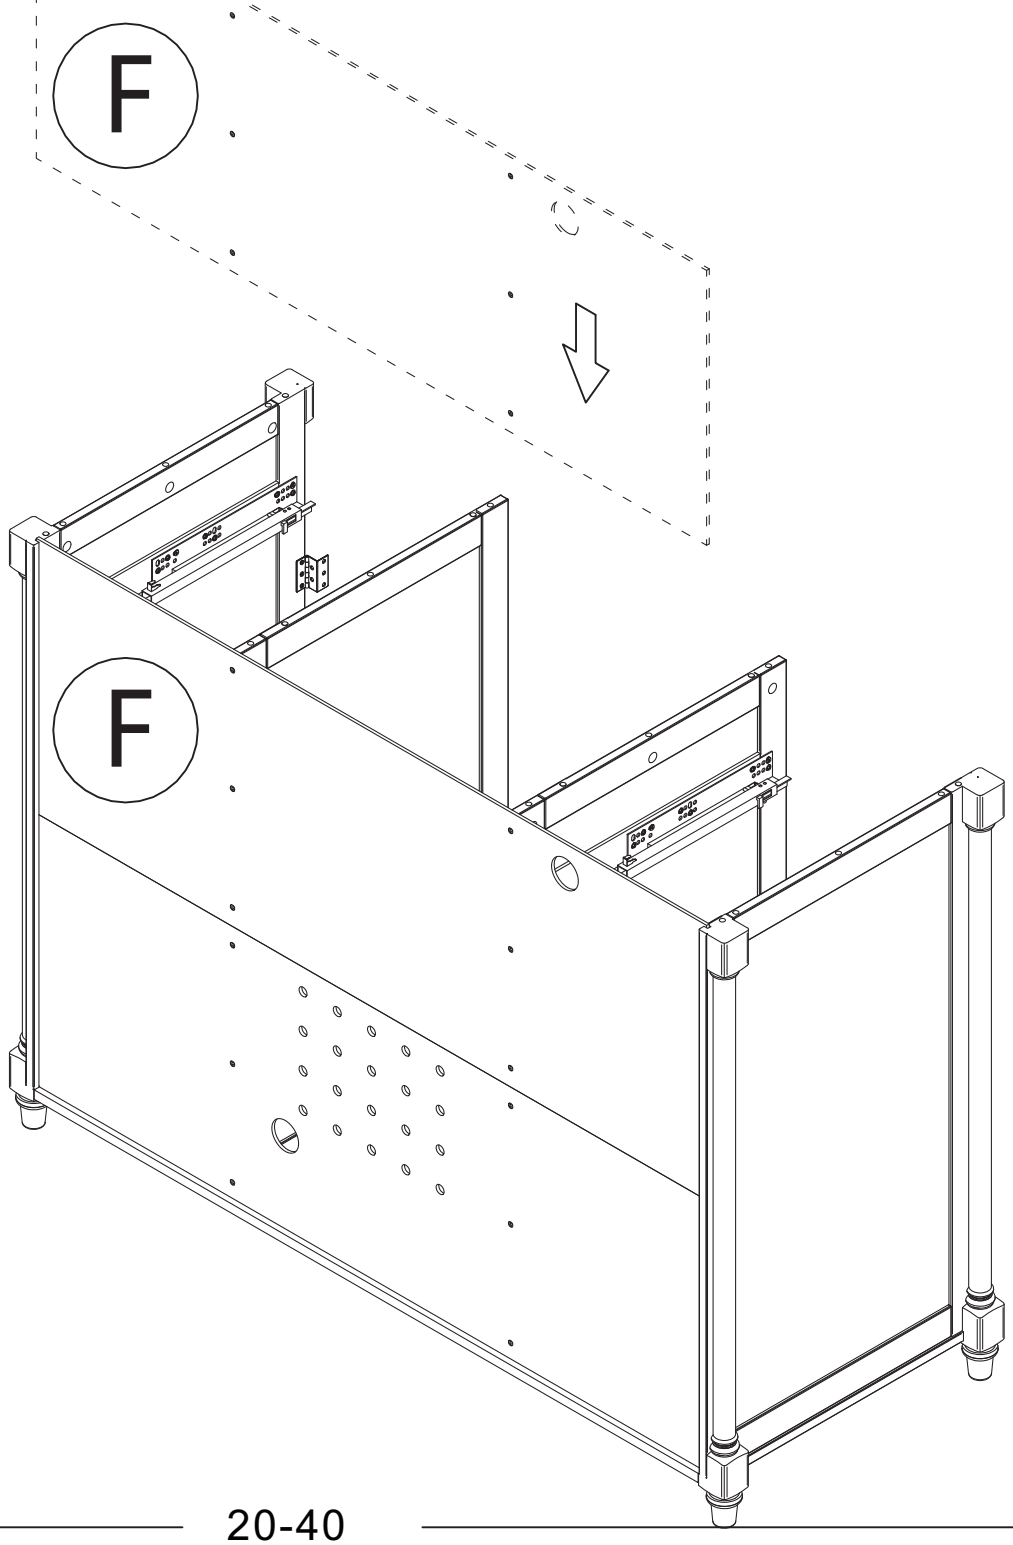


Installation instructions


Step 15

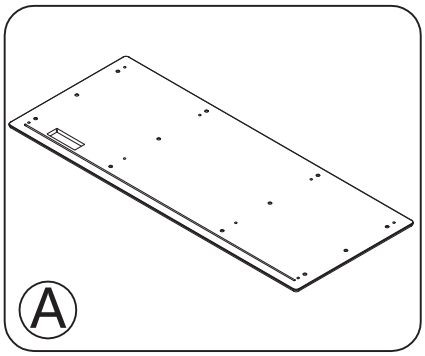


Panel
Qty:1

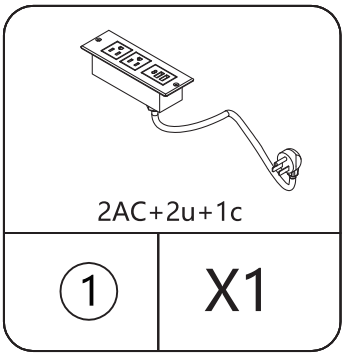


socket

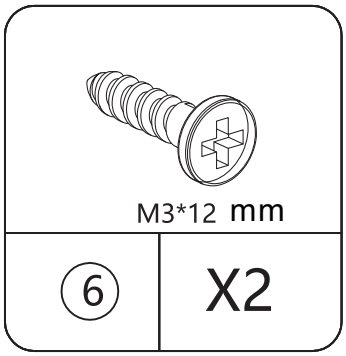

Cross conical tapping screws

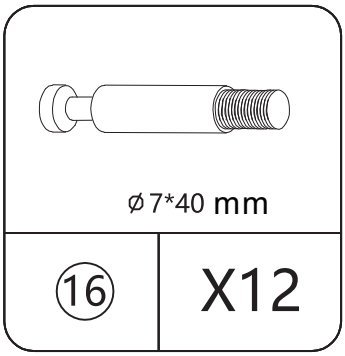


Three-in-one
connecting rod

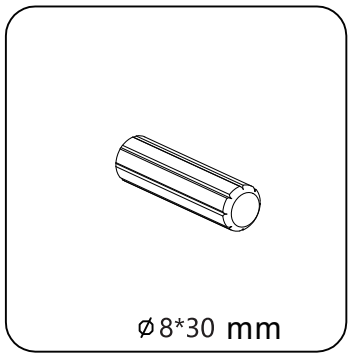


positioning pin
Qty:16

1. Attach the socket (part #1) on the cabinet top panel and secure with the #6 cross conical screws.
2. Flip it over and install the #16 three-in-one connecting rods on the bottom side.

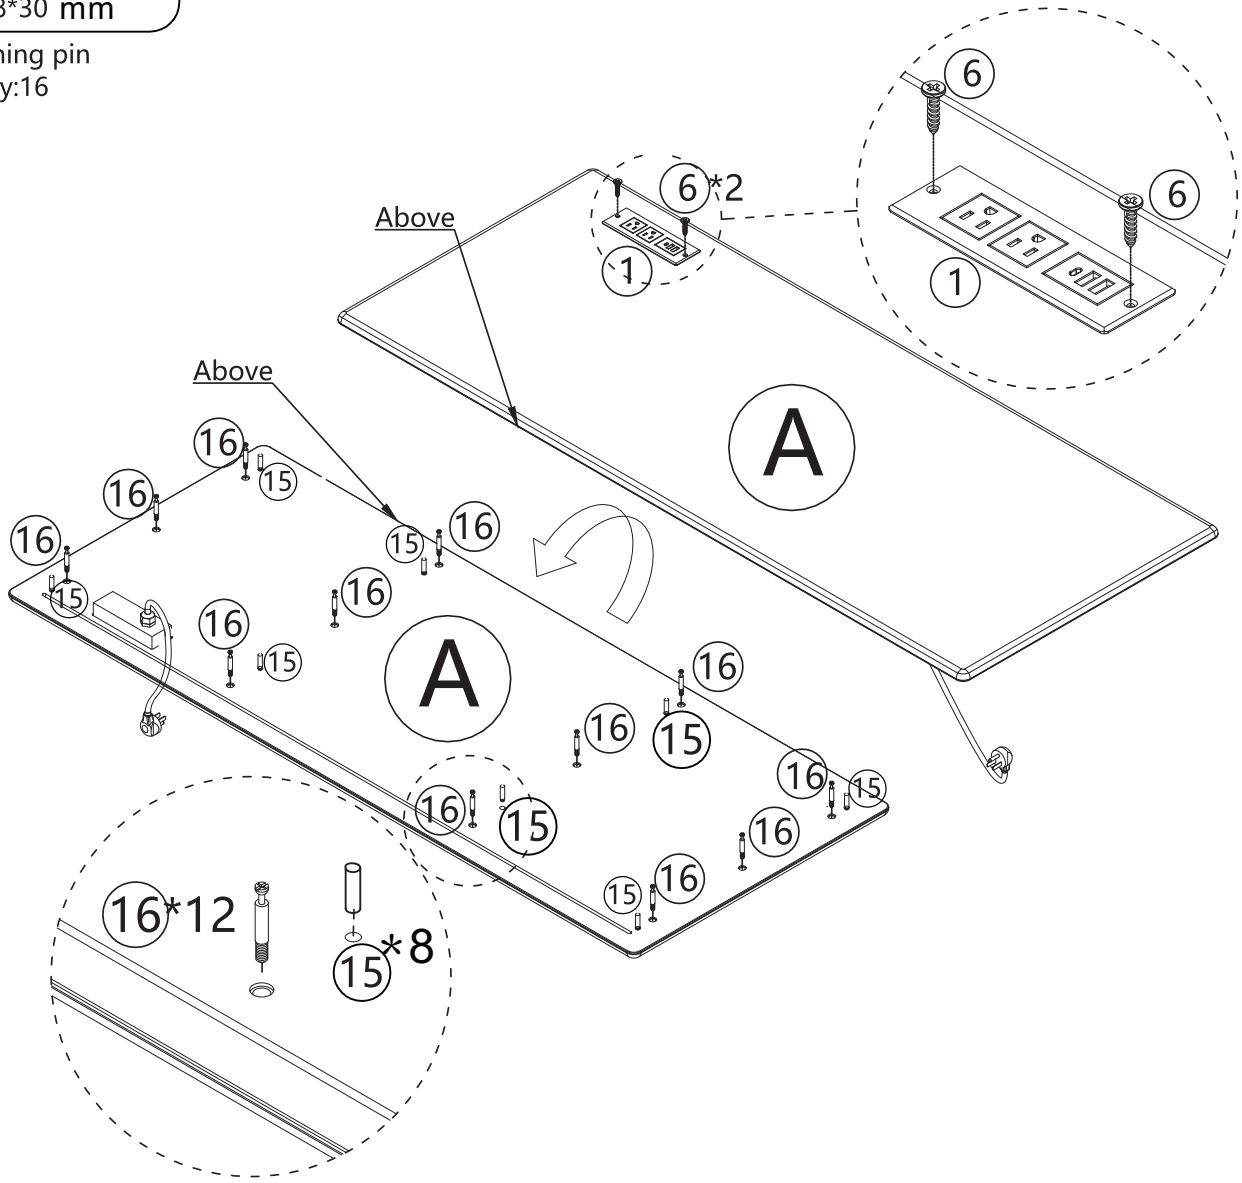


Installation instructions

Step 16

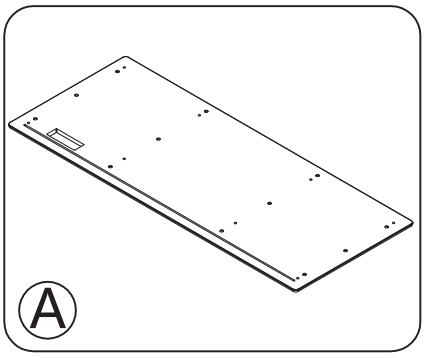


Panel
Qty:1

1. Line up the cabinet top panel with the top of the cabinet, fit it against the left and right legs and the center vertical panel · make sure the pin holes line up.

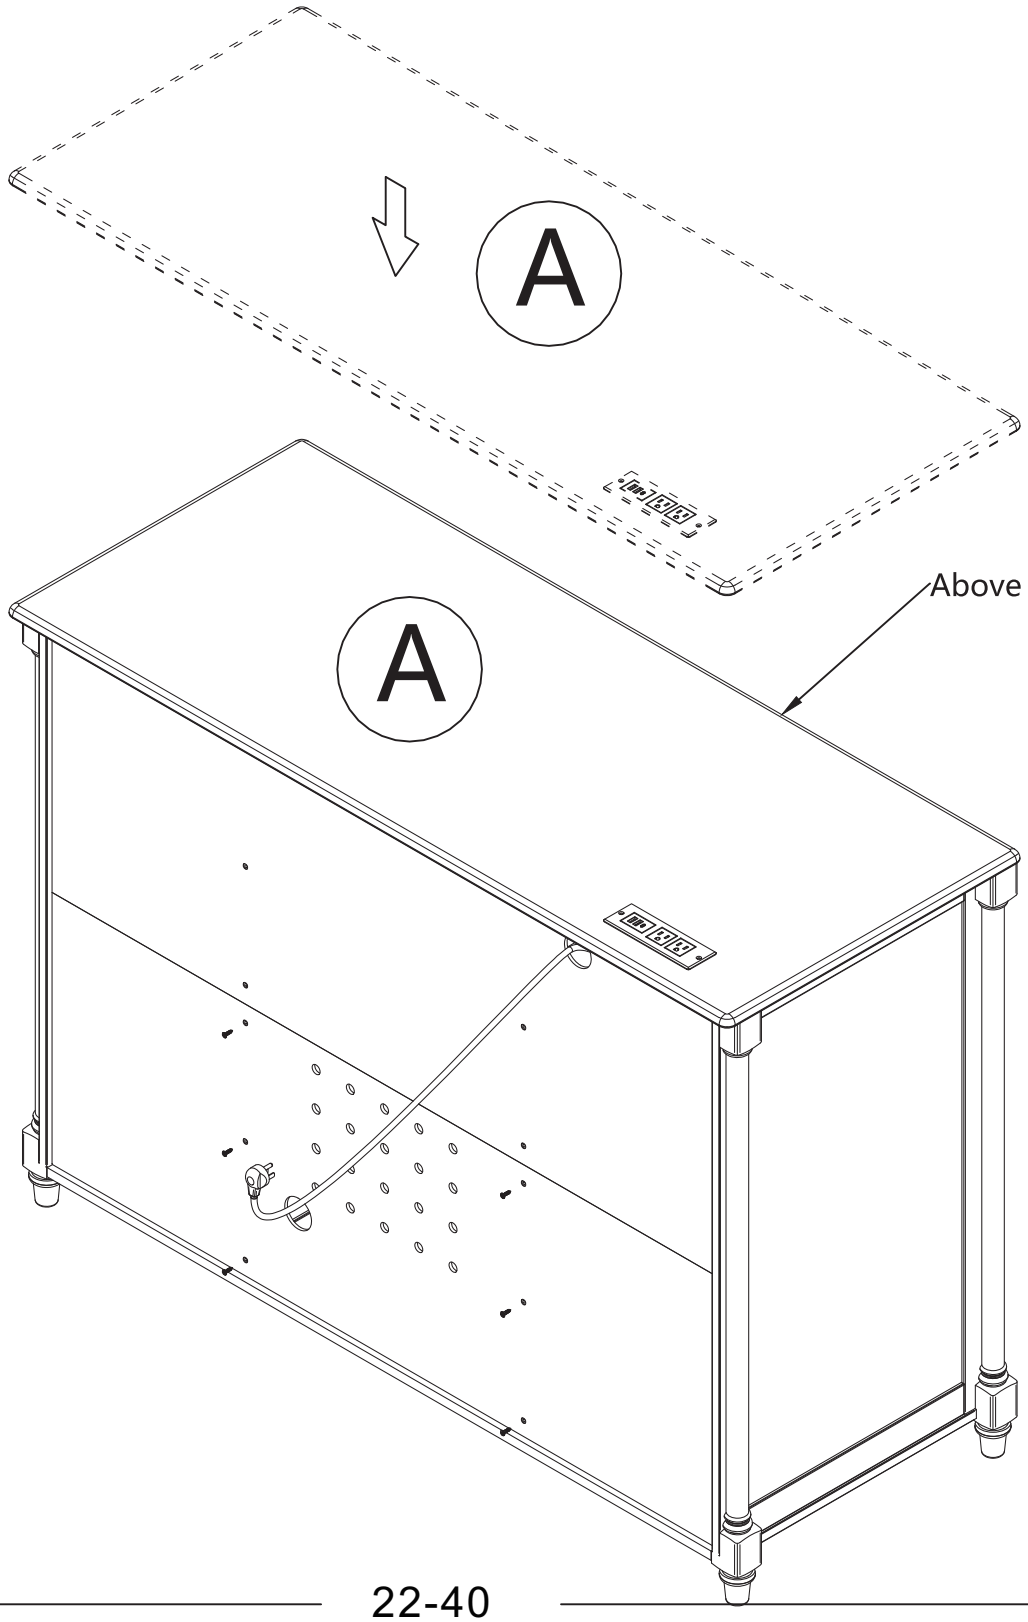

Installation instructions

Step 17

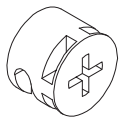


ø 15*13 mm

⑰	X12


Three-in-one
installation hat

1. Once the top panel is aligned, use the three-in-one caps on the left side, right side, and middle vertical panel to lock the cabinet top panel in place.

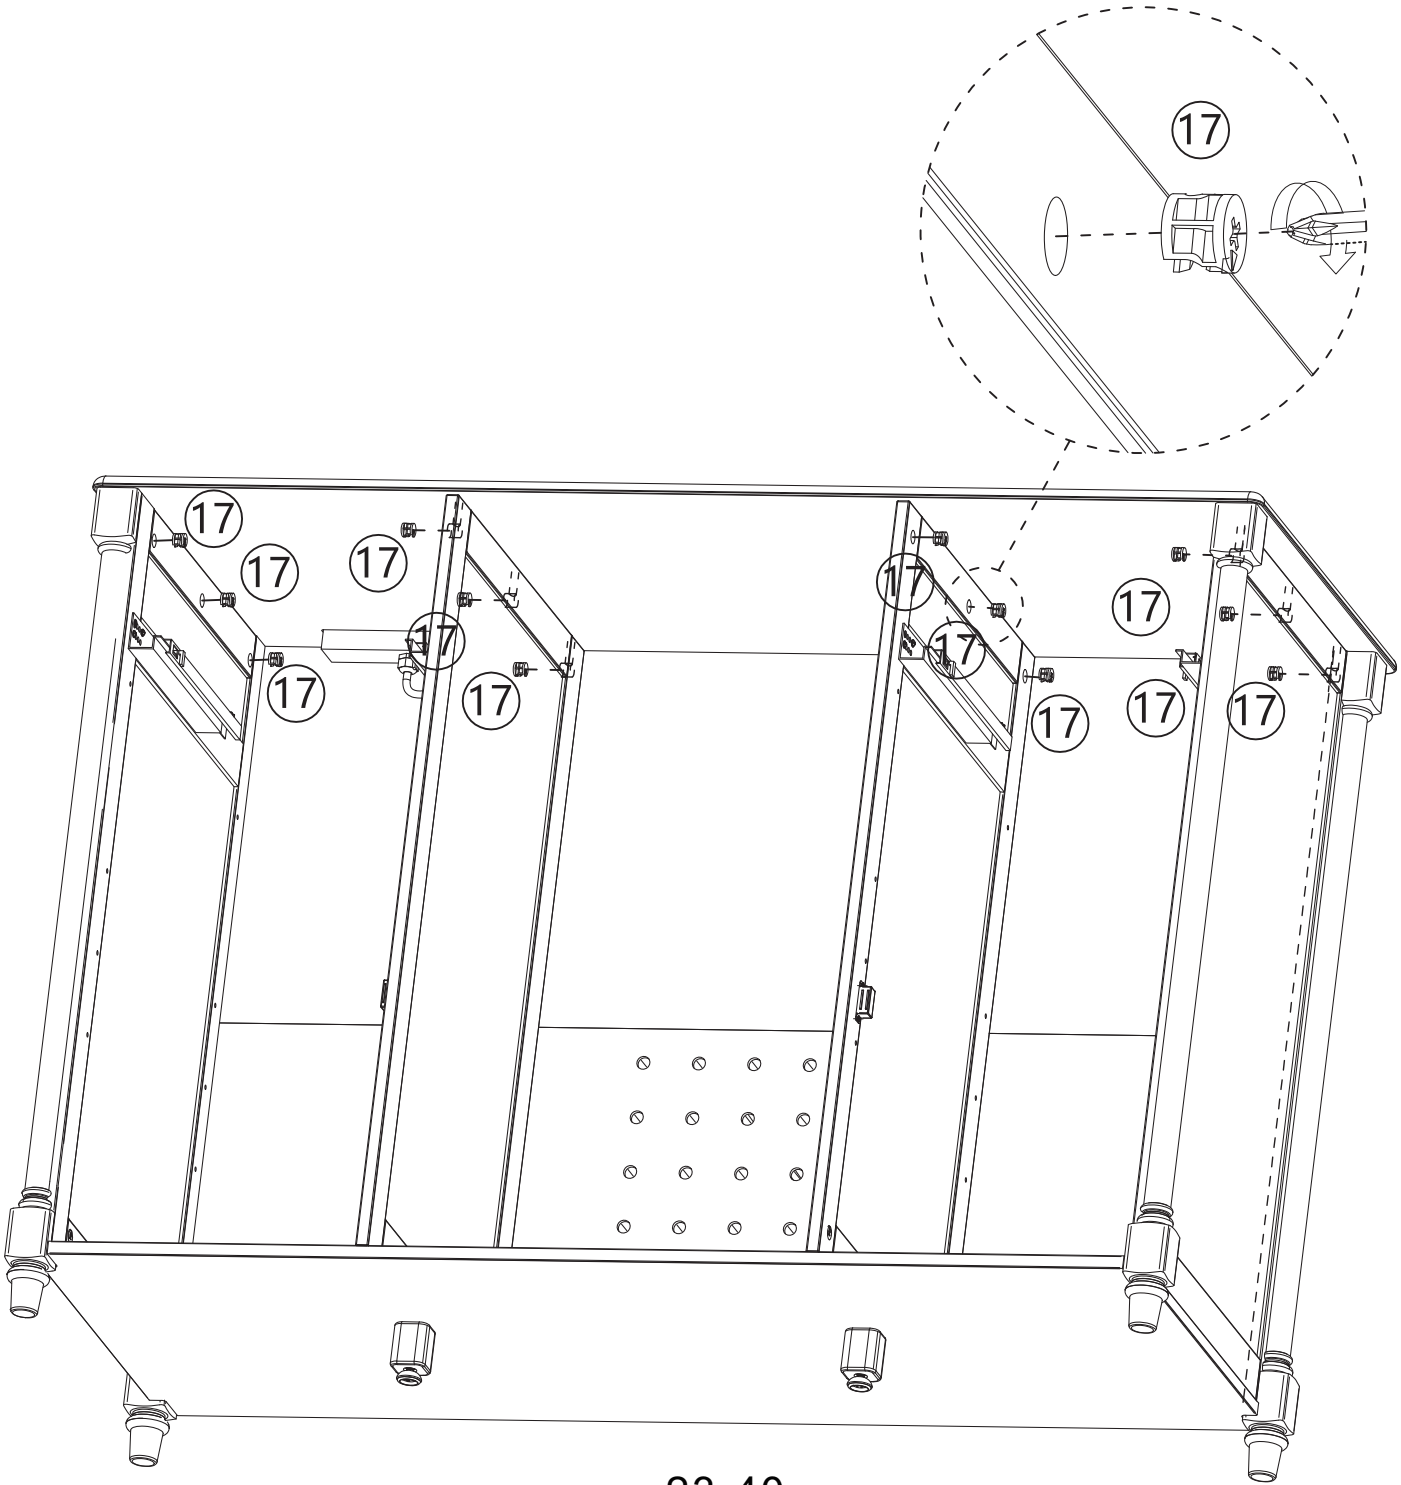


Installation instructions


Step 18

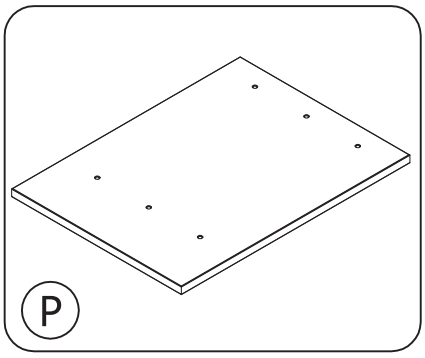

Mobile laminated panel 1
Qty:1

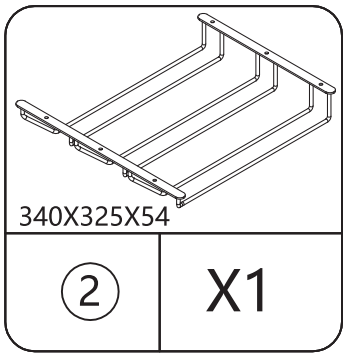


iron frame

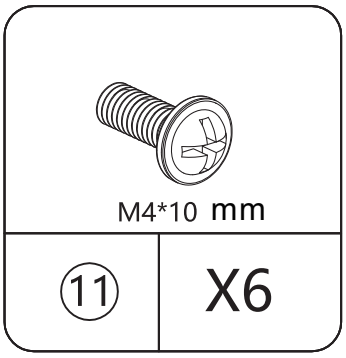


Cross umbrella head screw

1. Use the #11 cross umbrella head screws to install the wine rack (part #2) onto the iron frame.

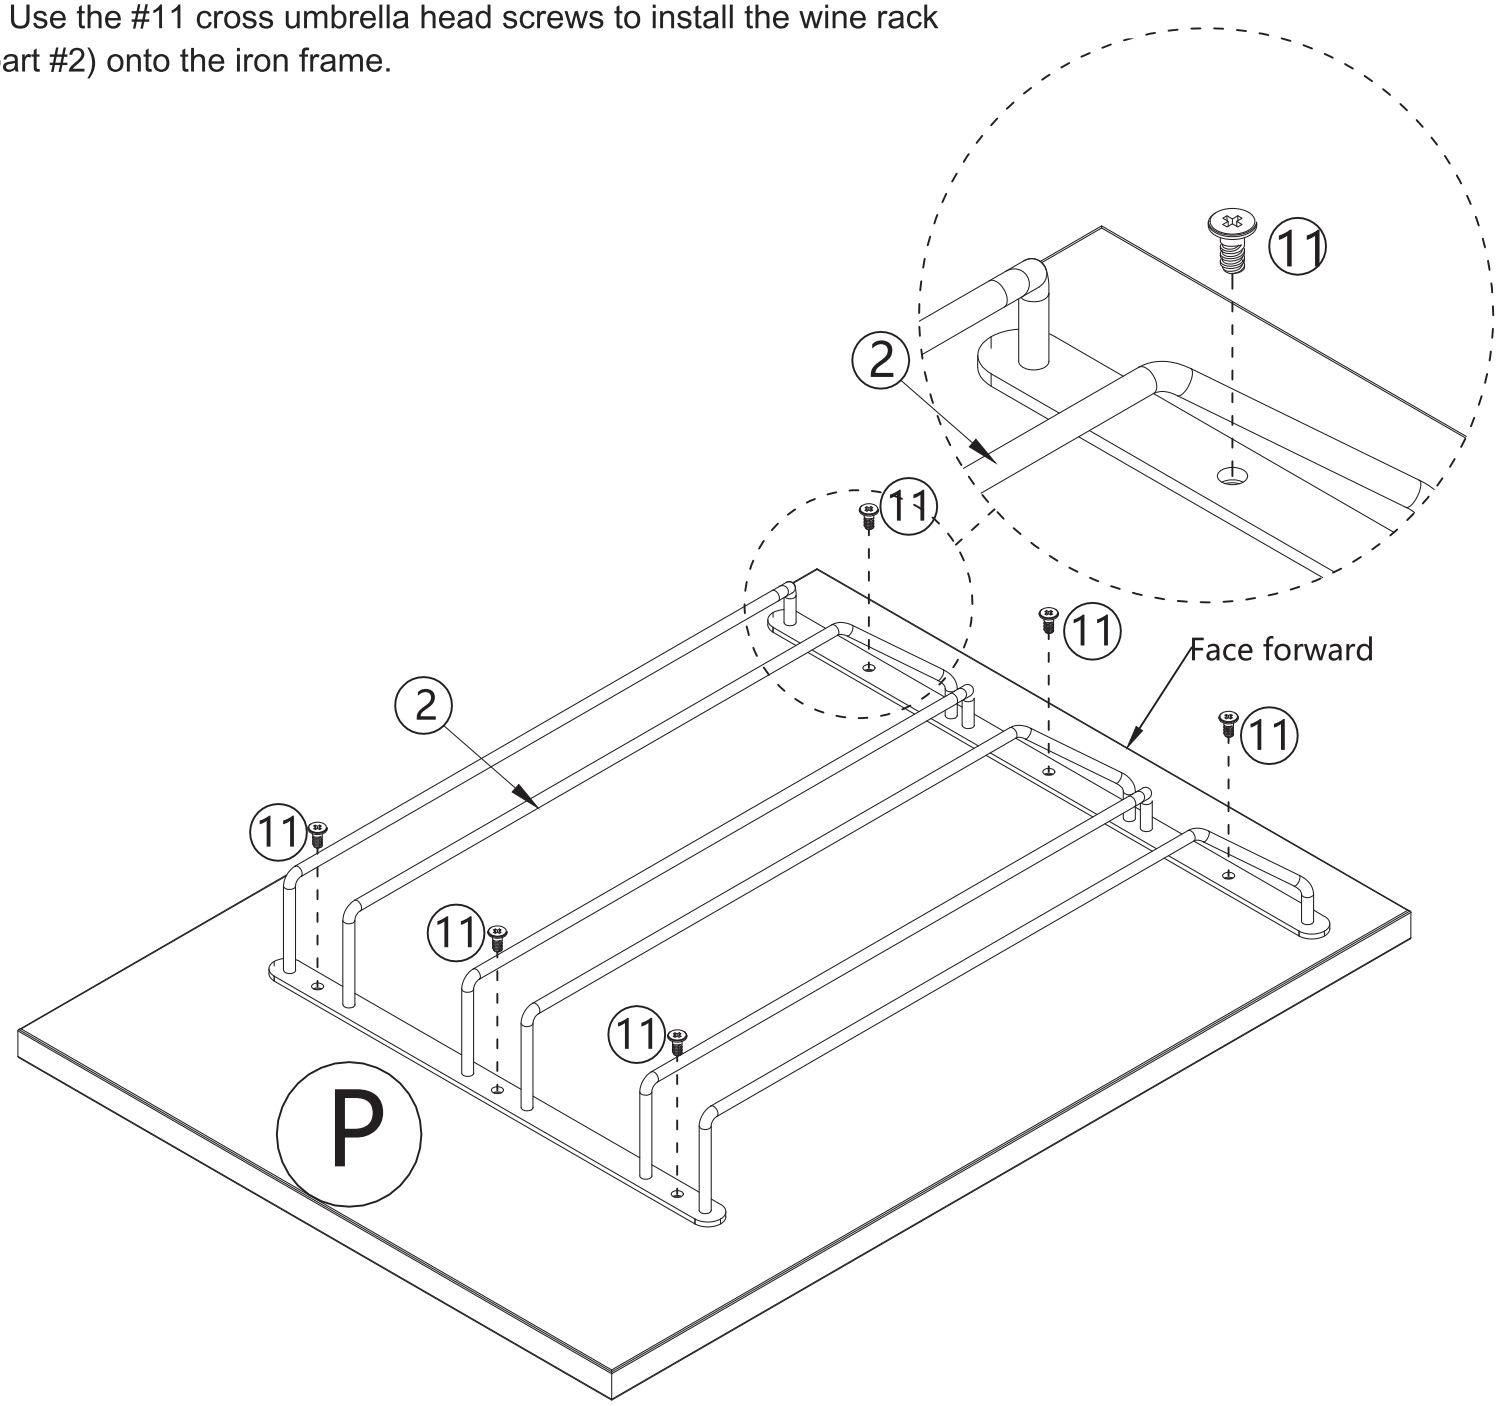


Installation instructions

Step 19

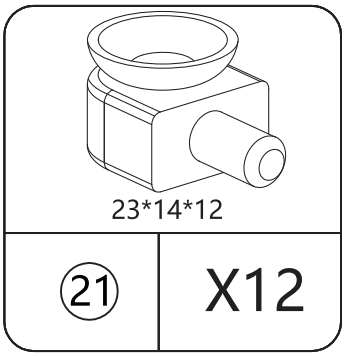


shelf support

1. Install the shelf bracket hardware in the left and right spaces of the cabinet. You can adjust the position however you like.

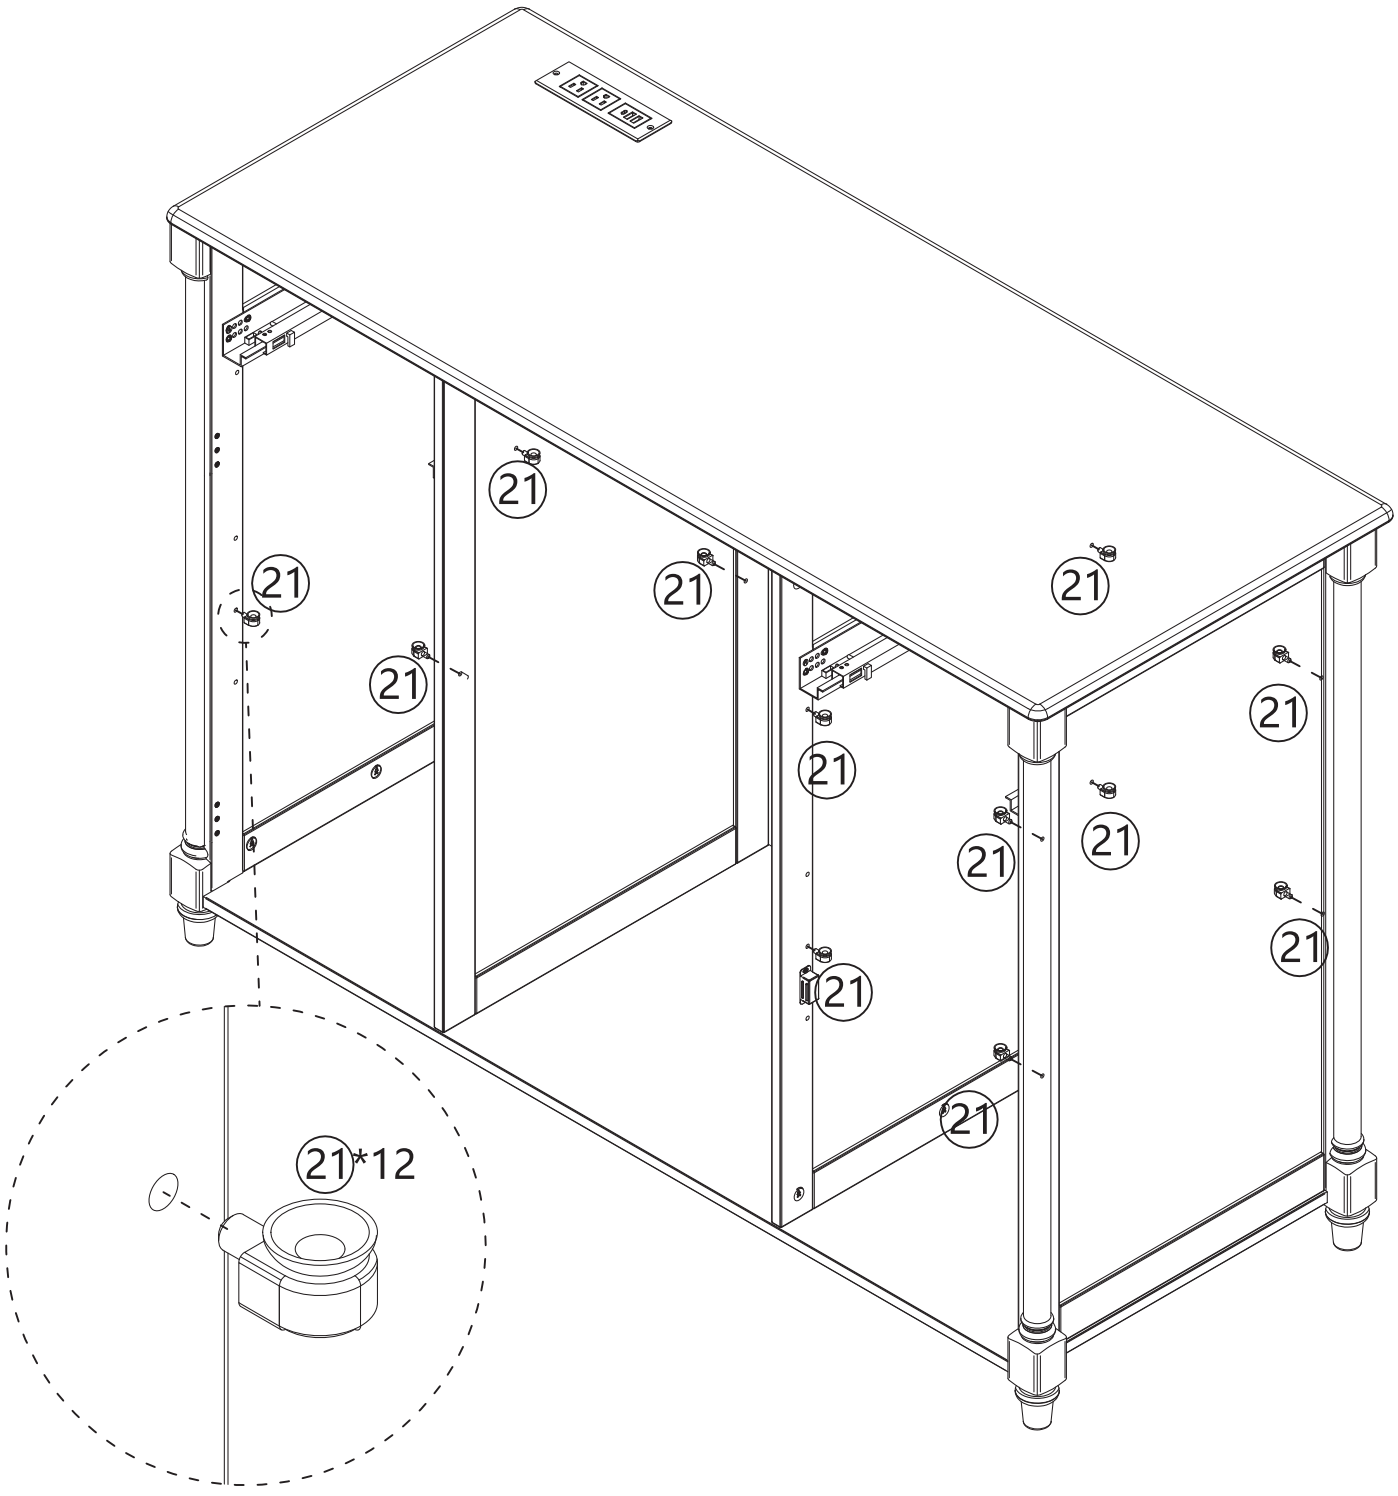


Installation instructions

Step 20

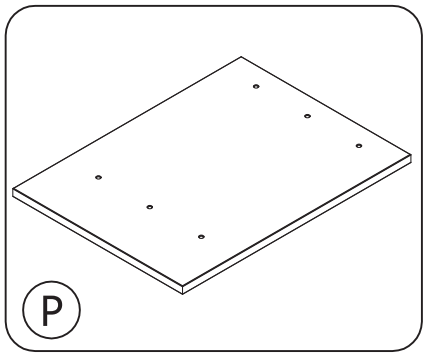


Mobile laminated panel 1
Qty:1

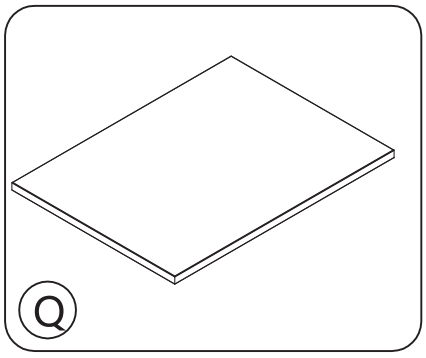


Mobile laminated panel 2
Qty:2

1. Now install the movable shelves. The shelf with the wine rack can go higher up. Place the other two wherever works for you.

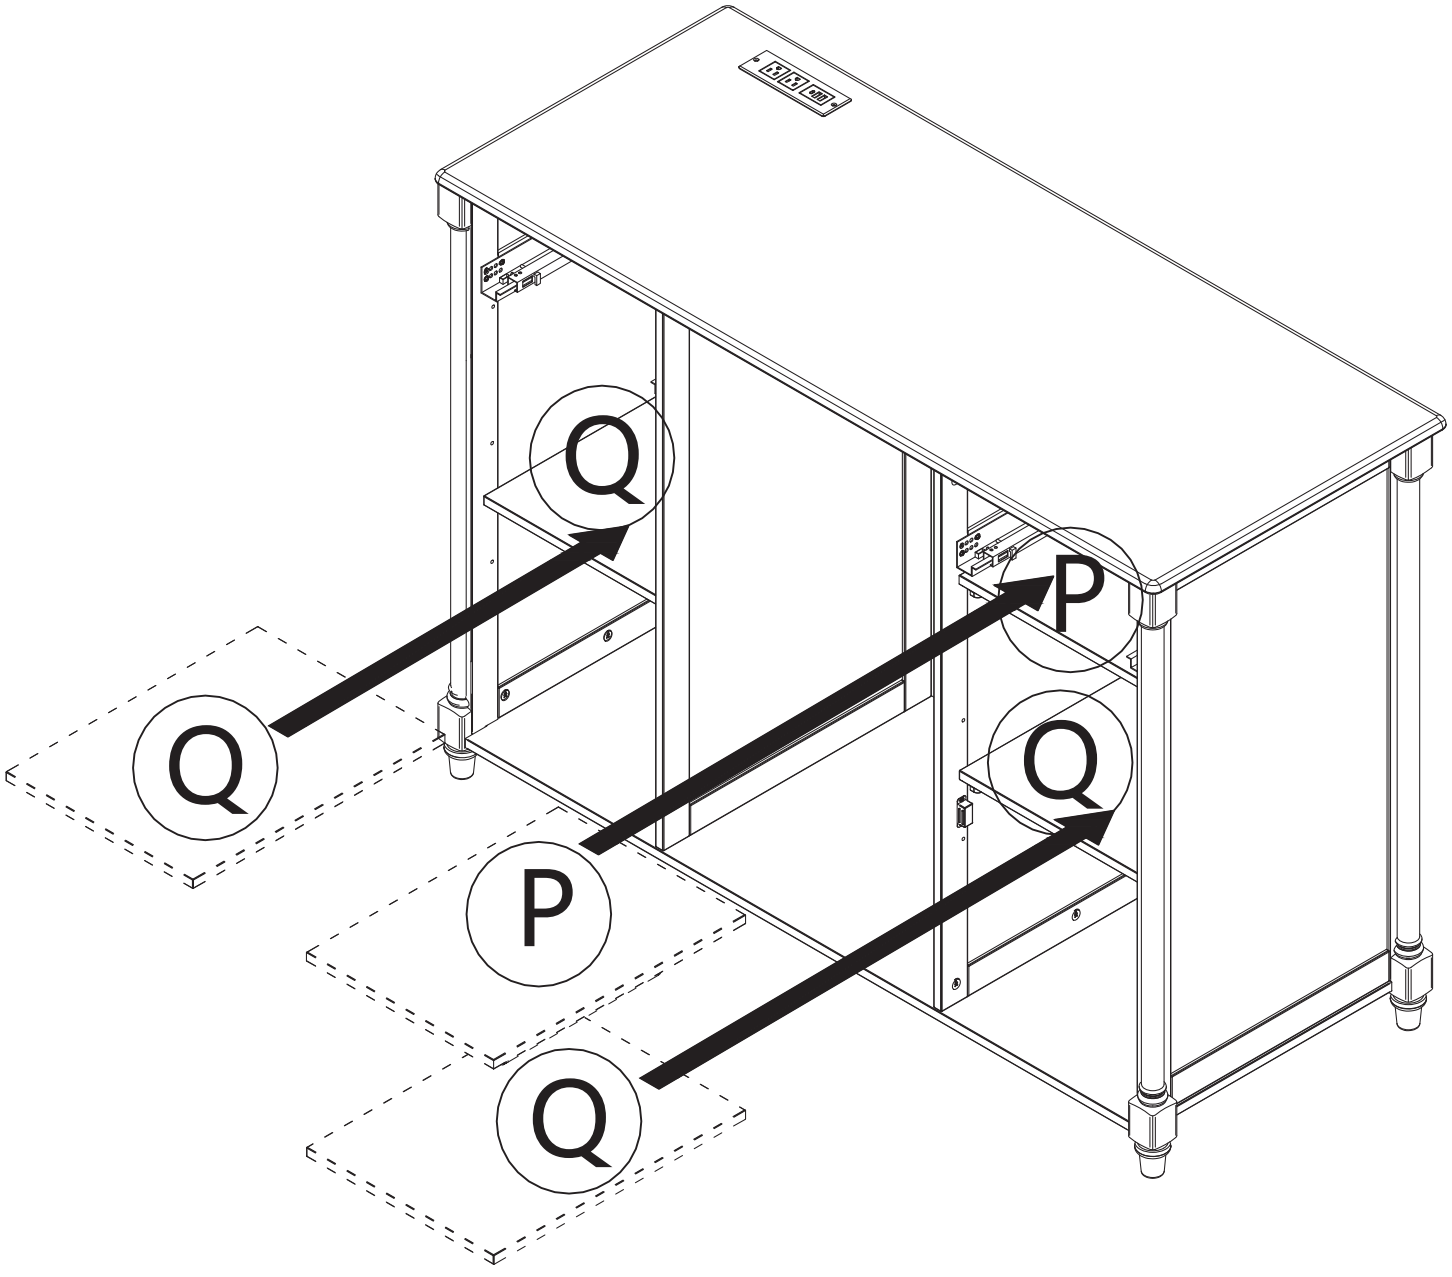


Installation instructions


Step 21 Put in the drawers

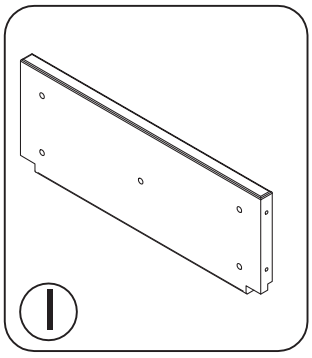


drawer fronts
Qty:2

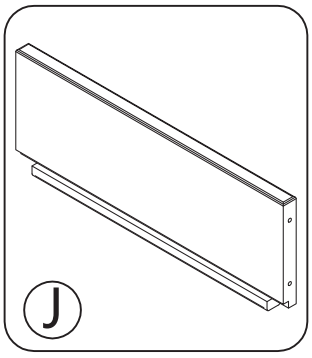


drawer back panel
Qty:2

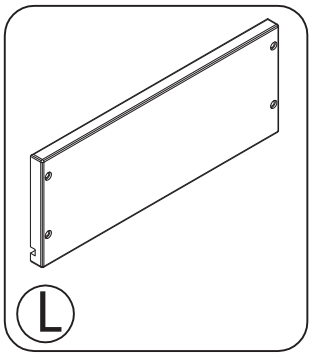

Drawer right side panel
Qty:2

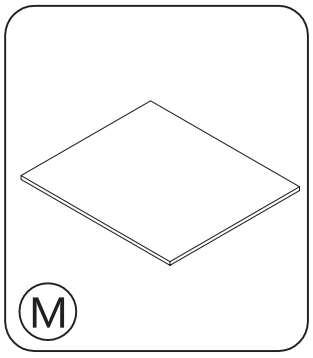

drawer bottom floor
Qty:2

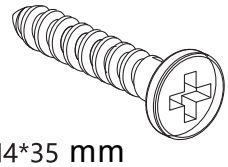


M4*35 mm


8	X8

Cross conical tapping screws

1. Lay out drawer front (L), back (I), and side (J) as shown.
Use the #8 cross conical screws through part L
to attach parts I and J together.
2. Slide the drawer bottom (M) into part L.

Tip:Install drawer panel L with
the holed bottom end next to panel I.

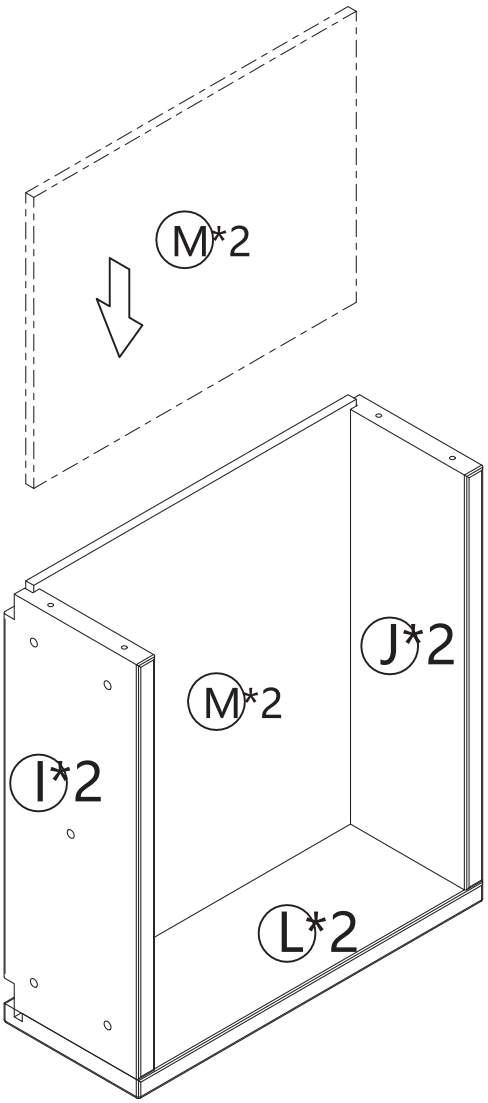


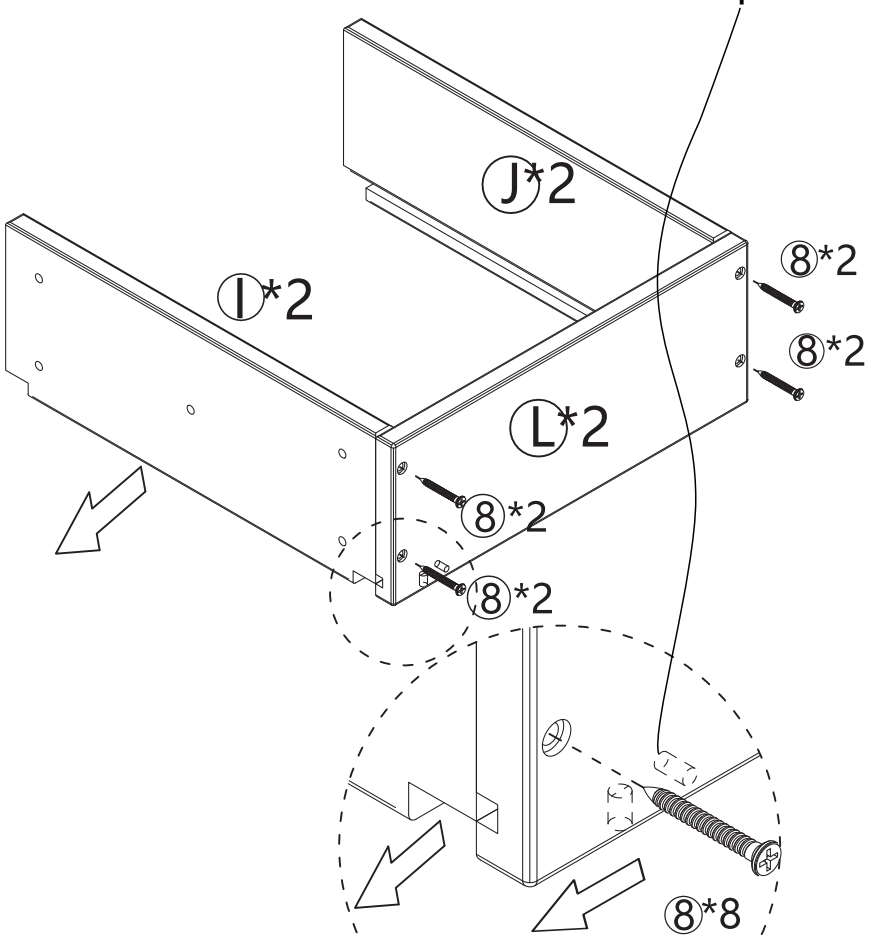


The hole side goes to the front

Installation instructions

Step 22

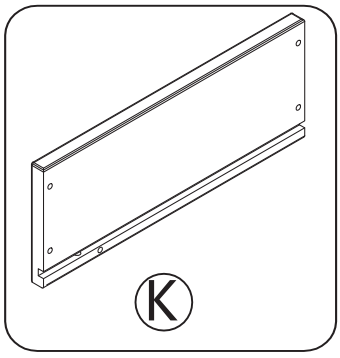

Drawer left side panel
Qty:2

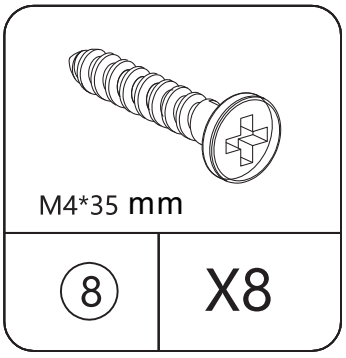


Cross conical tapping screws


1. Use the #8 cross conical self-tapping screws through part K to attach the end faces of parts I and J.

Note: Build two drawers.

Tip:Install drawer panel K with the holed bottom end next to panel I.

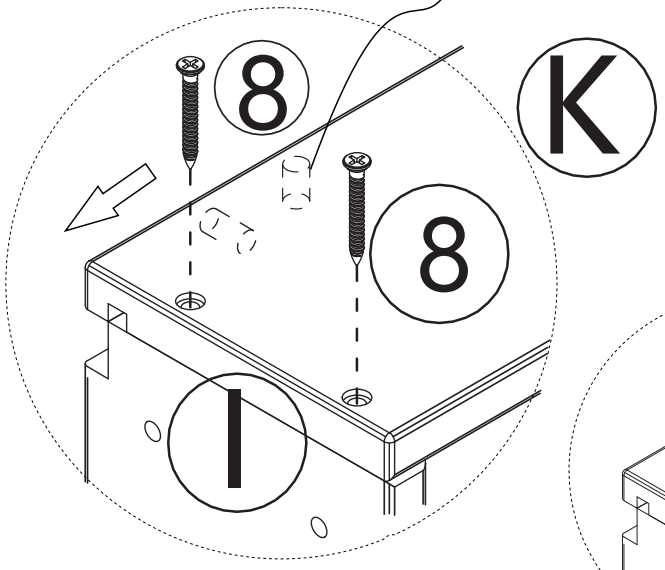


The hole side goes to the front

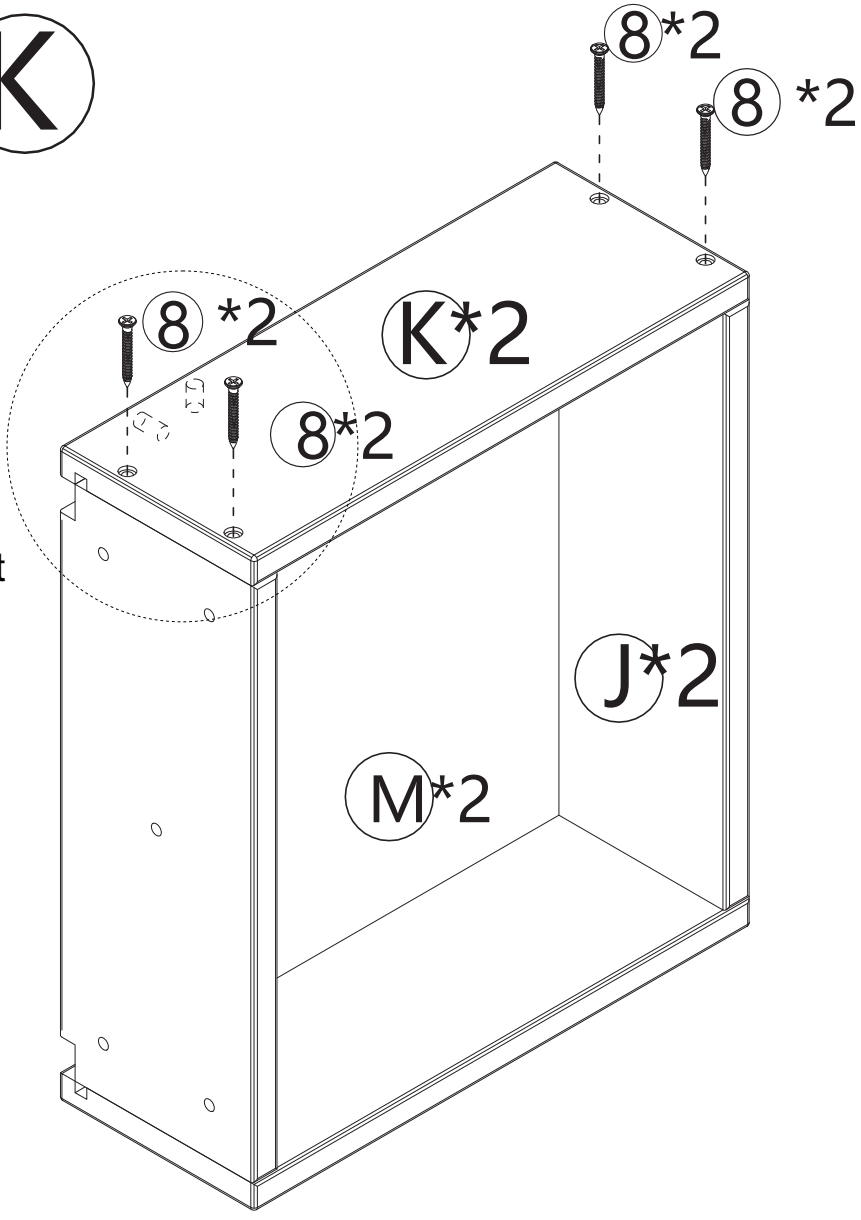


Installation instructions


Step 23

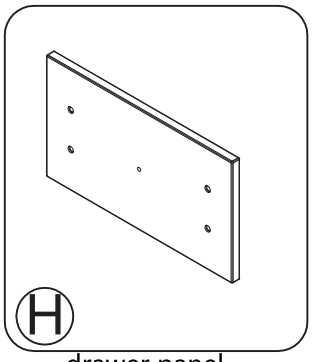


drawer panel
Qty:2

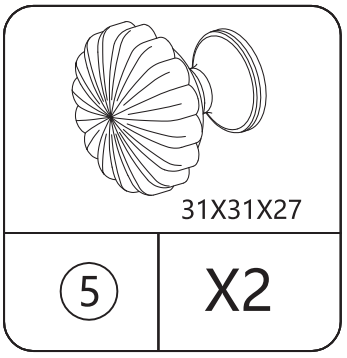


Metal handle

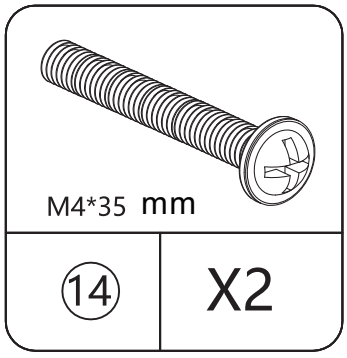

Cross umbrella head screw

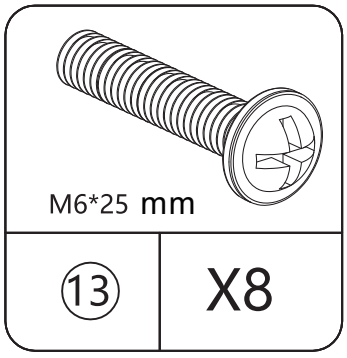


Cross umbrella head screw

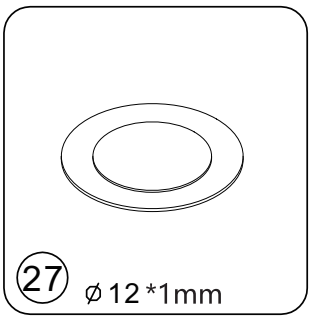


washer
Qty: 2

1. Line up the front of part I with the pre-drilled side of part H.
2. Use the #13 cross pan head screws to join them.
3. Mount handle (part 5) using #14 screws and #27 washers.

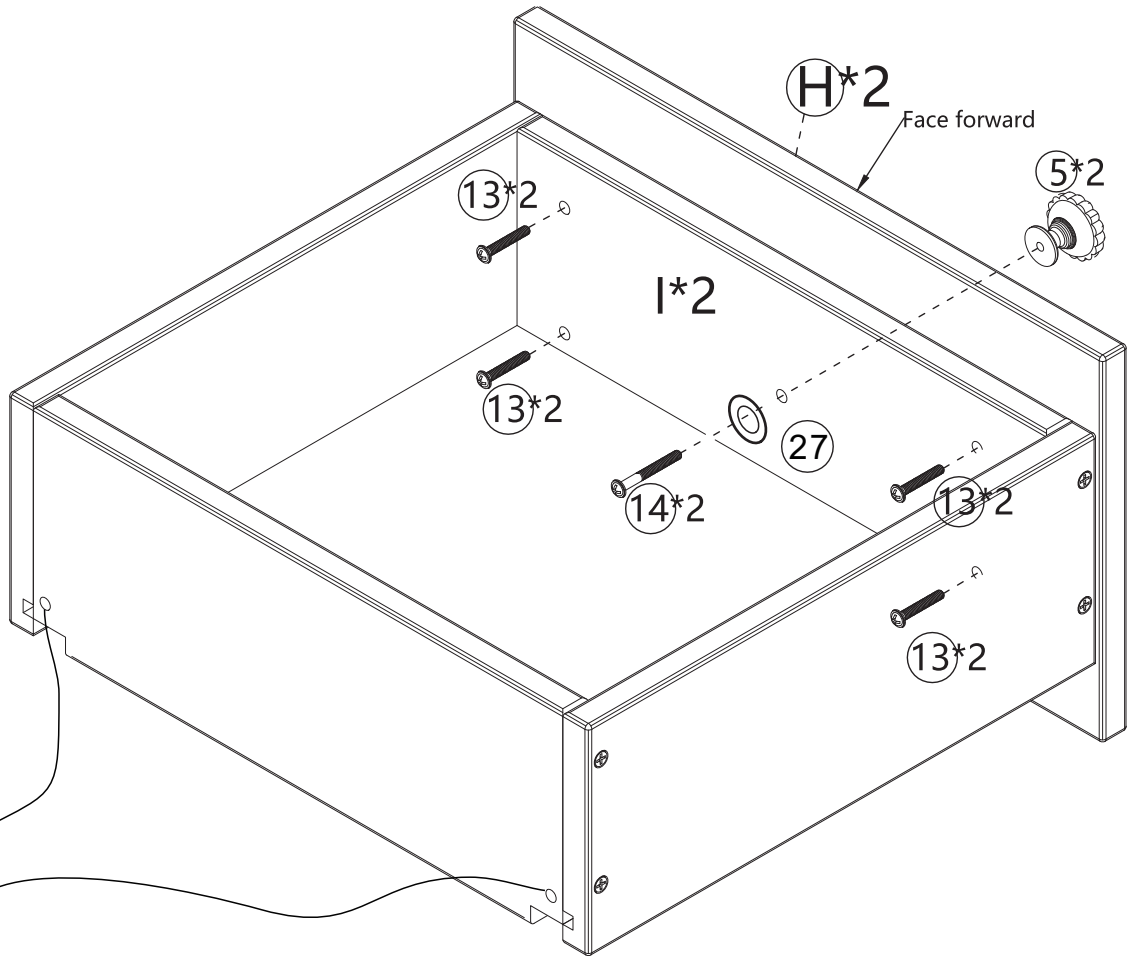


Once you fit the drawer in, check its back. You should see two round holes if it's installed right. If not, pull the drawer out, grab the correct parts and fit it again.

1. Slide the assembled drawer into the cabinet opening.

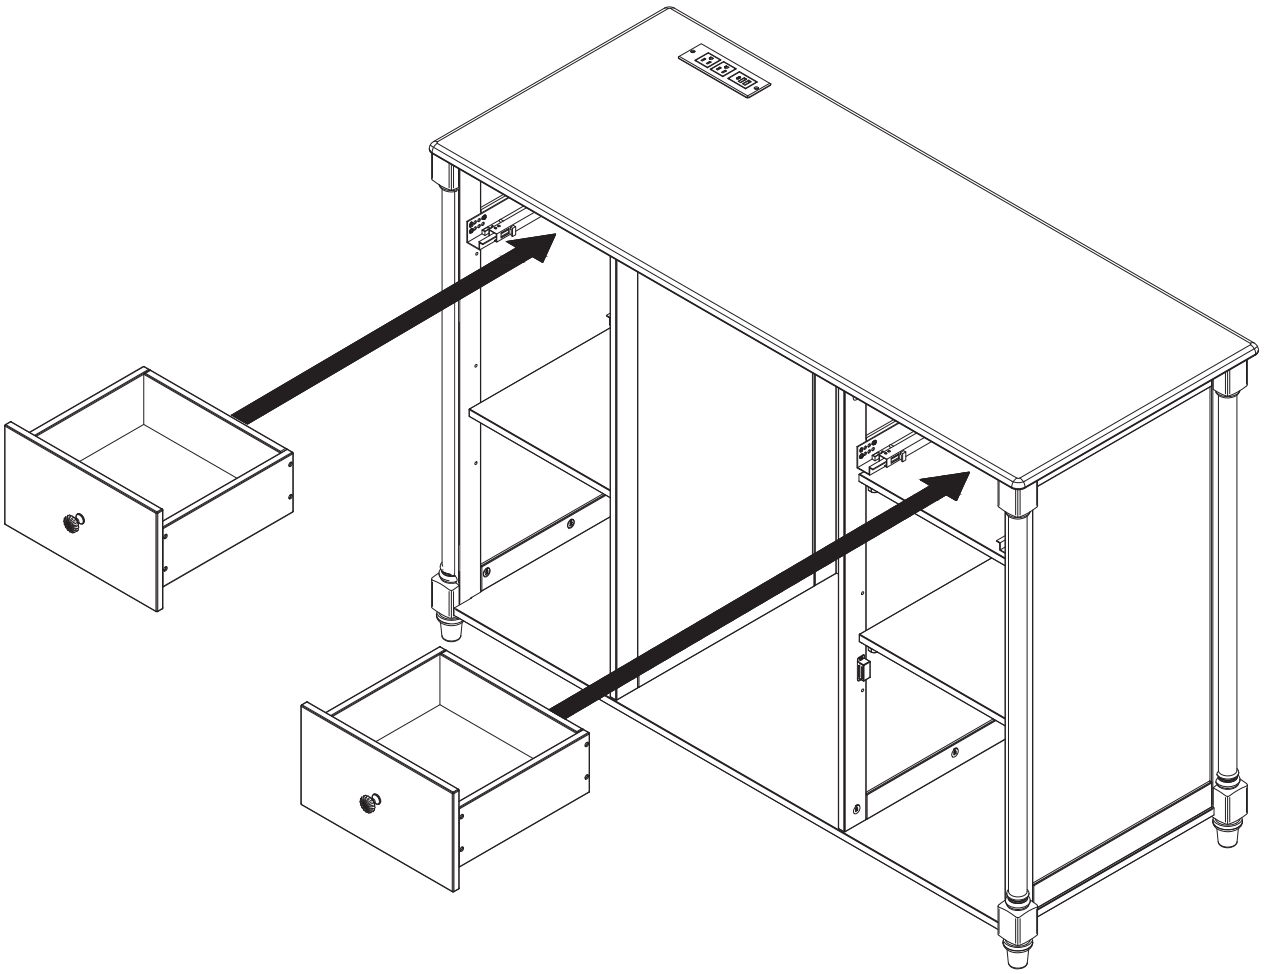


Drawer Installation Perspective View


1. Line up the bottom holes of the drawer back panel with the tabs at the end of

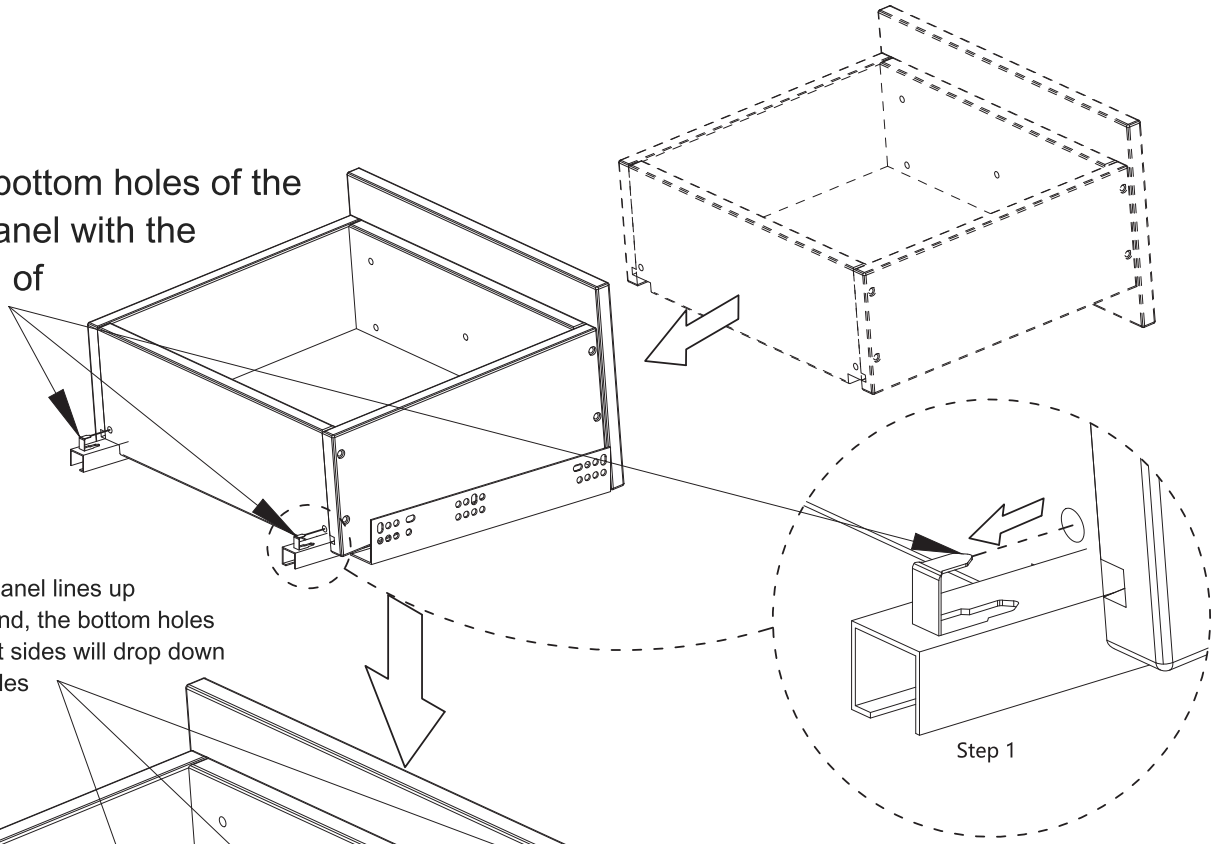


2. Once the back panel lines up with the slide rail end, the bottom holes on the left and right sides will drop down to align with the holes

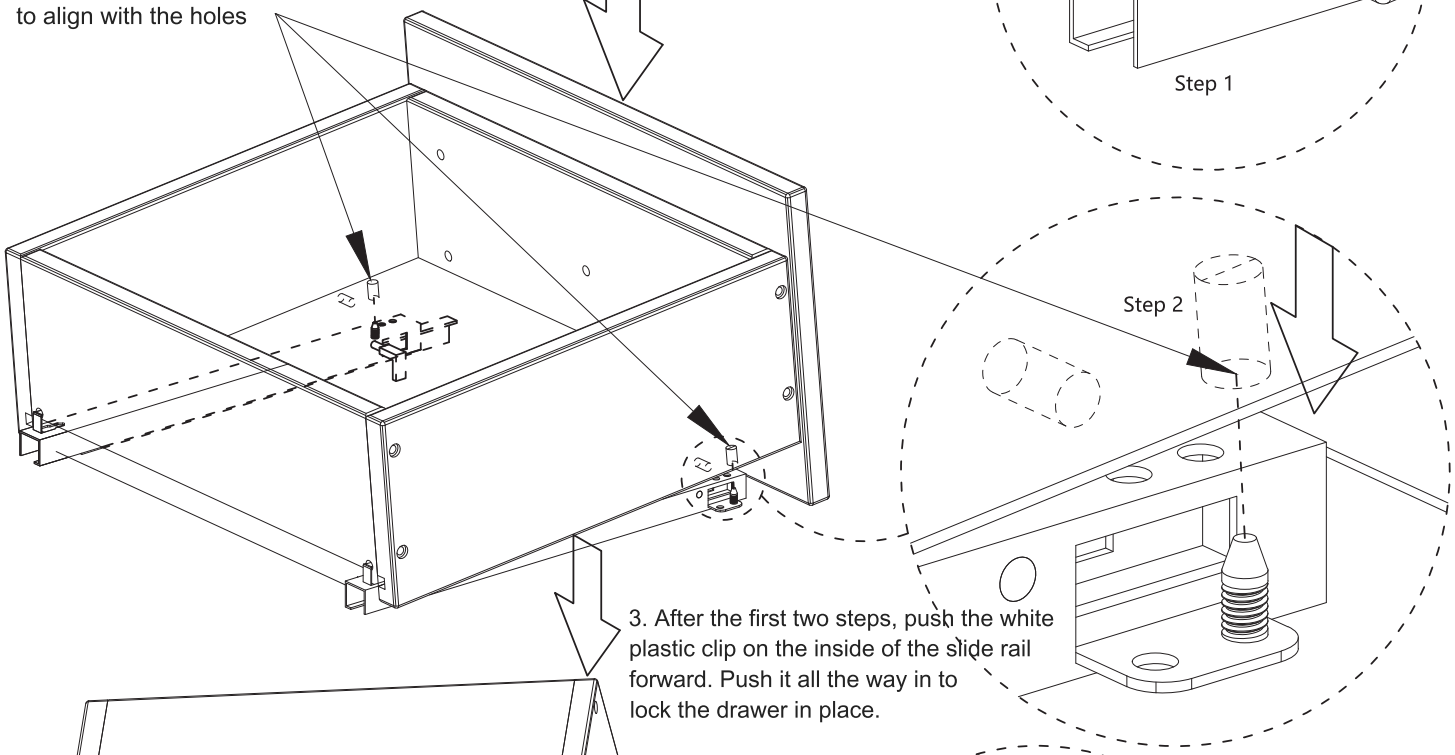



3. After the first two steps, push the white plastic clip on the inside of the slide rail forward. Push it all the way in to lock the drawer in place.

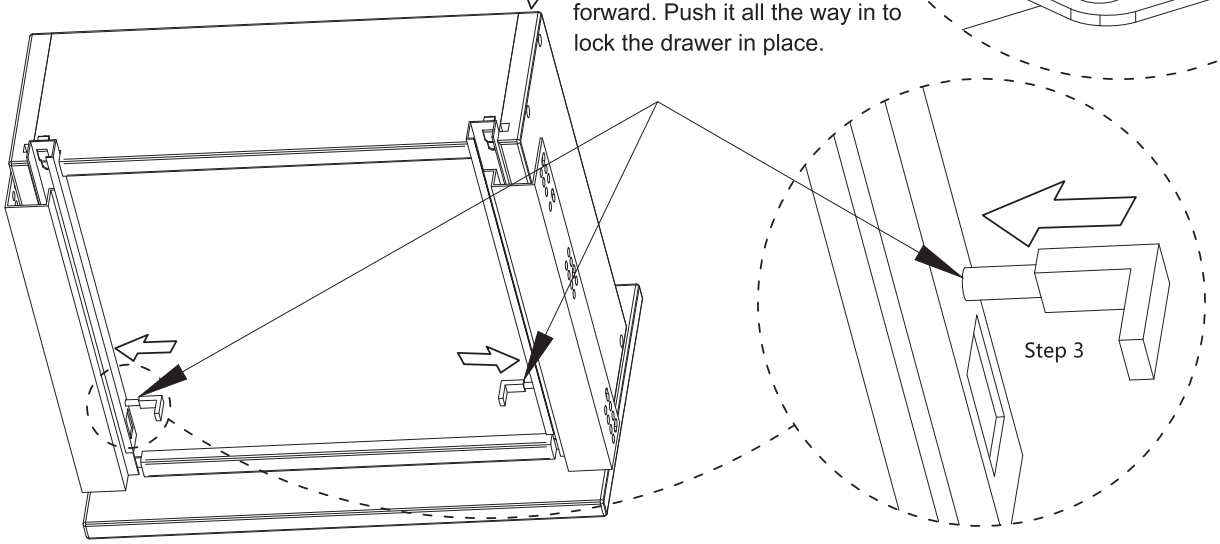


1. Check the gaps around the installed drawer.

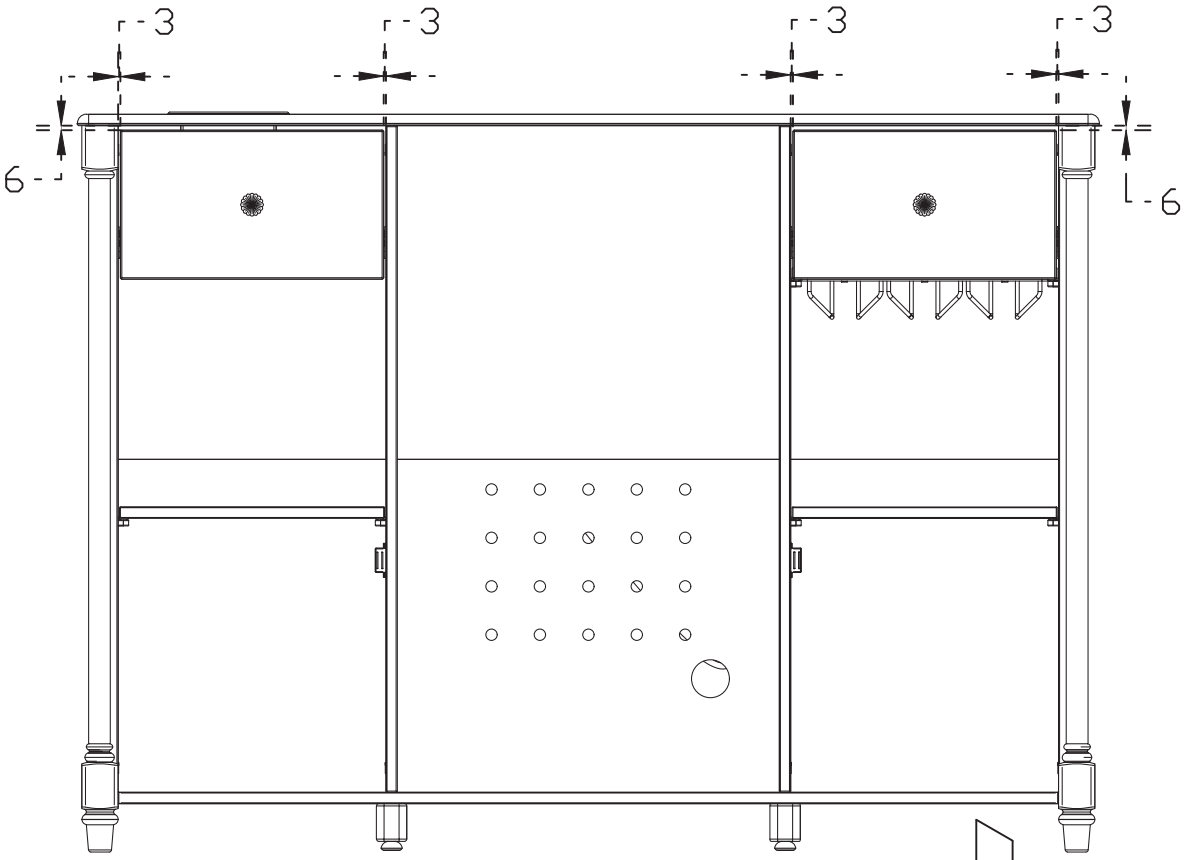

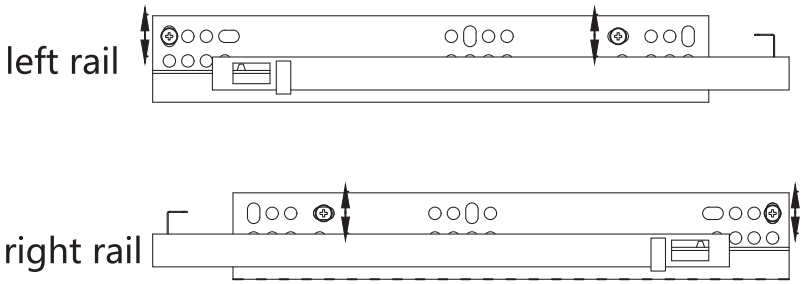


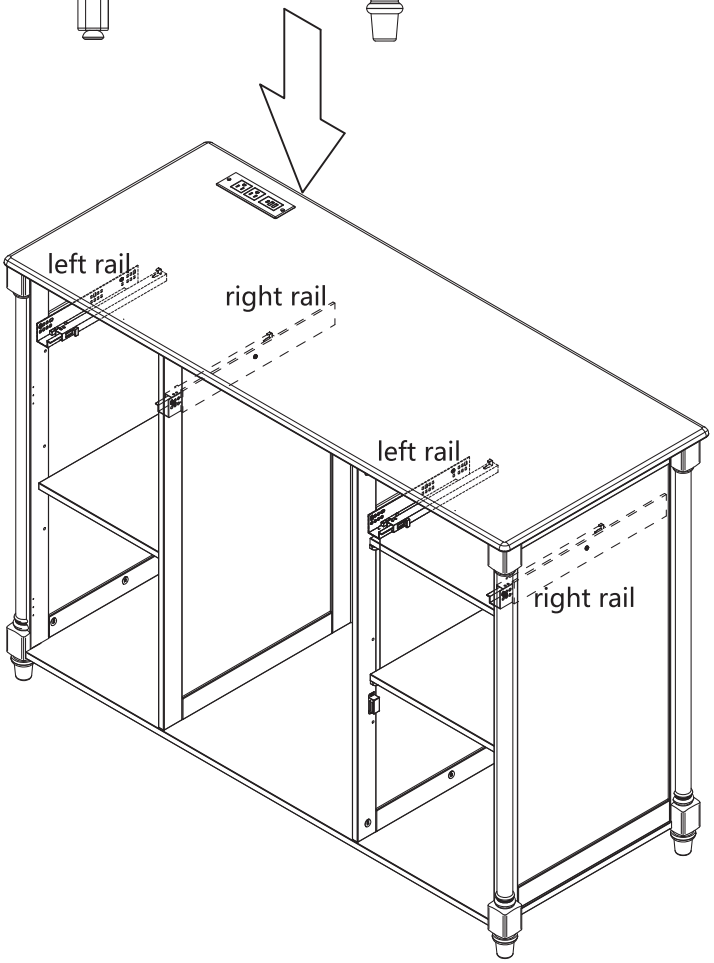

2. If the gap between the drawer and the top is too big or too small, take the drawer out and adjust the screws on the rail · if the gap's too small, move the rail down; if it's too big, move it up and fix it.

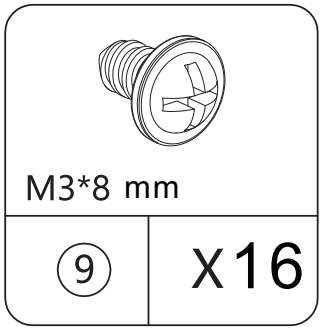


Cross umbrella head tapping screw

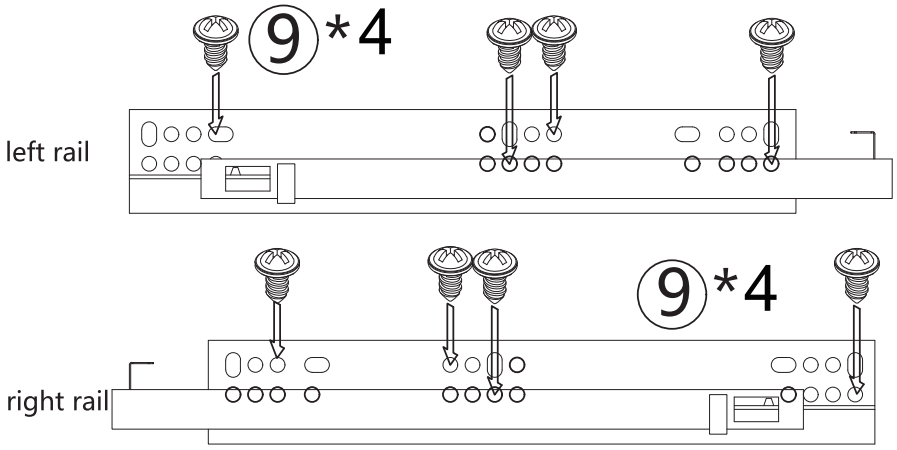


Tip: Skip this step if the drawer is already stable.

1. Once you've adjusted all the gaps on the cabinet drawers, take the drawers out, secure the slides with size 9 screws, then put the drawers back on just like you did in Step 28.

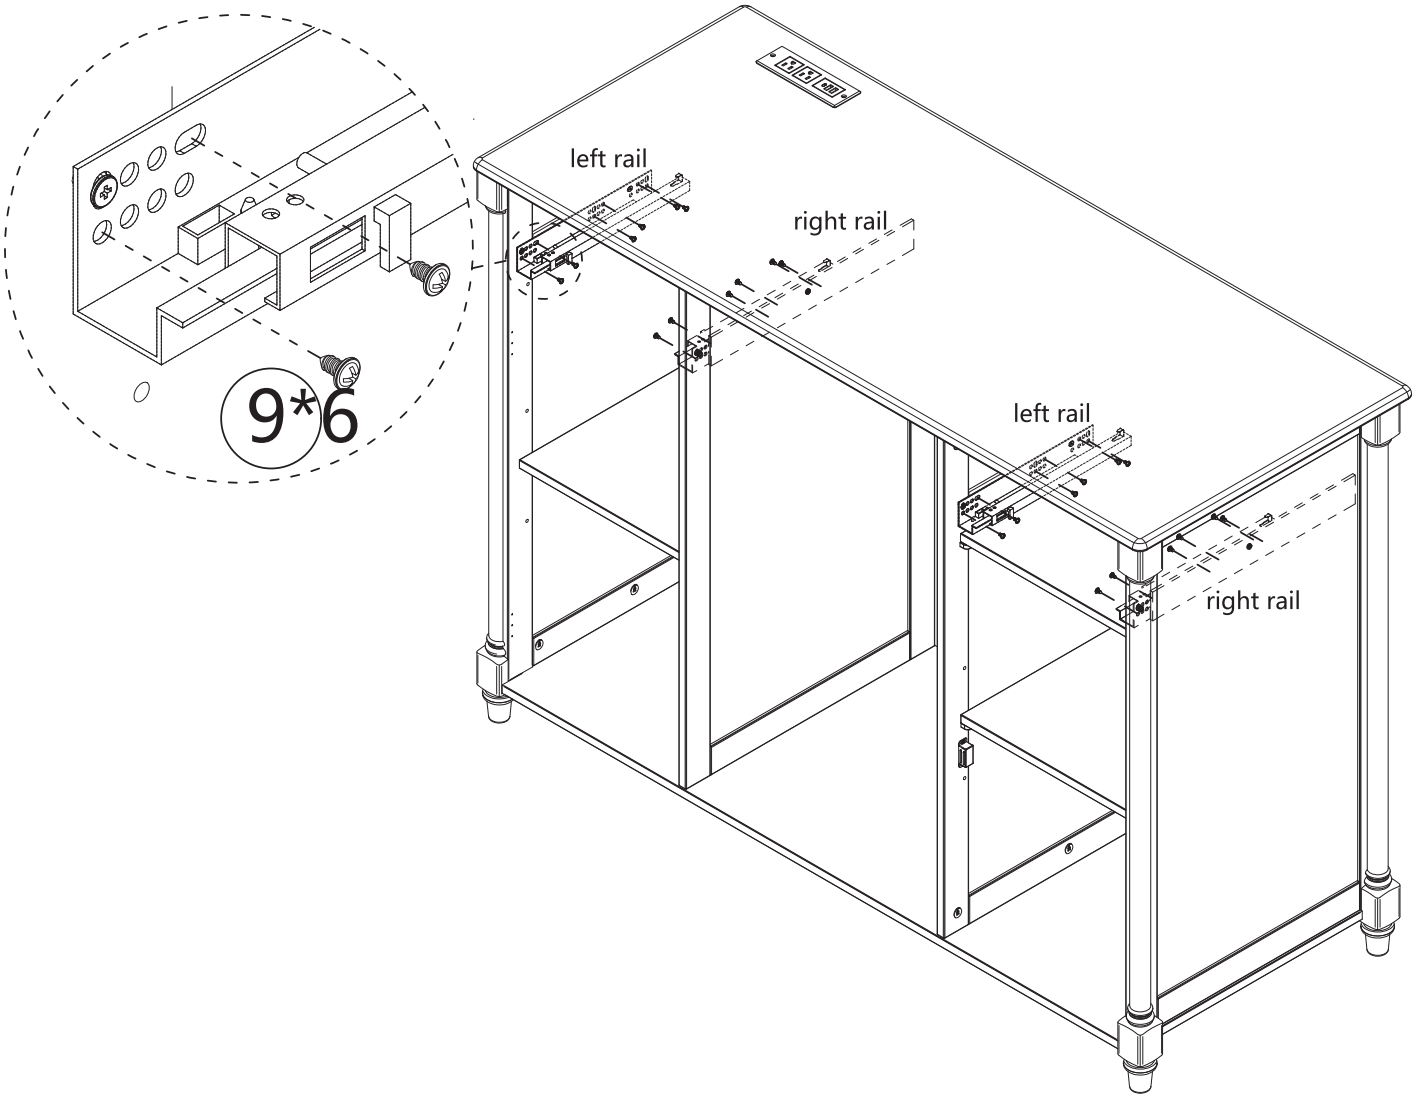


Installation instructions


Step 28

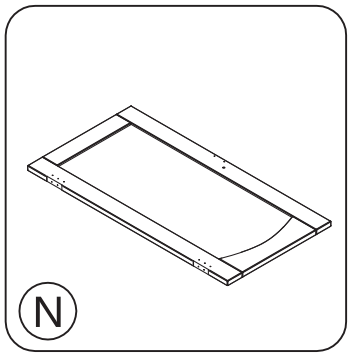


Left door panel
Qty:1

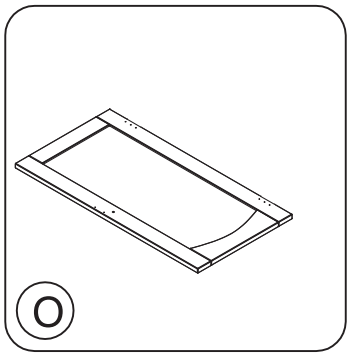


Right door panel
Qty:1

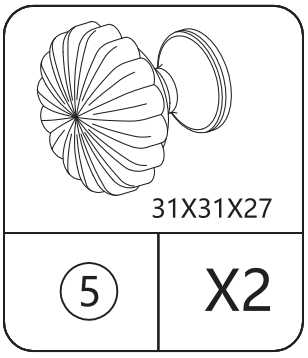


Metal handle

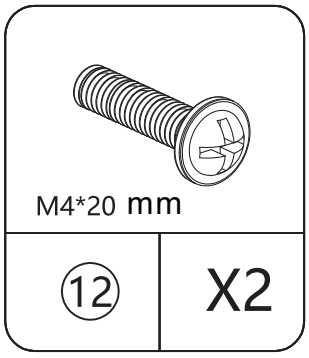


Cross umbrella head screw

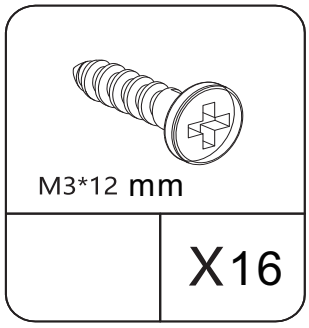

Cross conical tapping screws

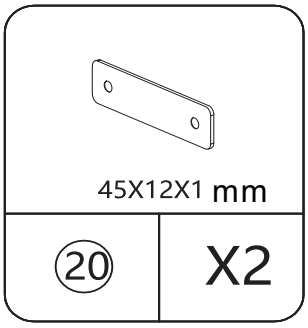


Door suction
hardware gasket

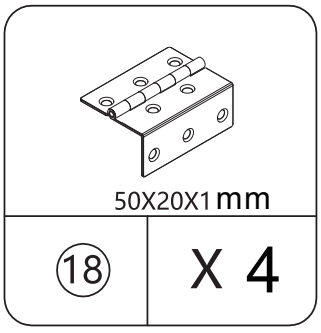


door hinge

1. Use part #6 to attach part #20 on the front of the left door panel (N).
2. Use part #6 to attach part #20 on the front of the right door panel (O).
3. Use part #12 to go through N and O and attach the handle (part #5).
4. Mount #18 on the side of door panels N & O with #6.

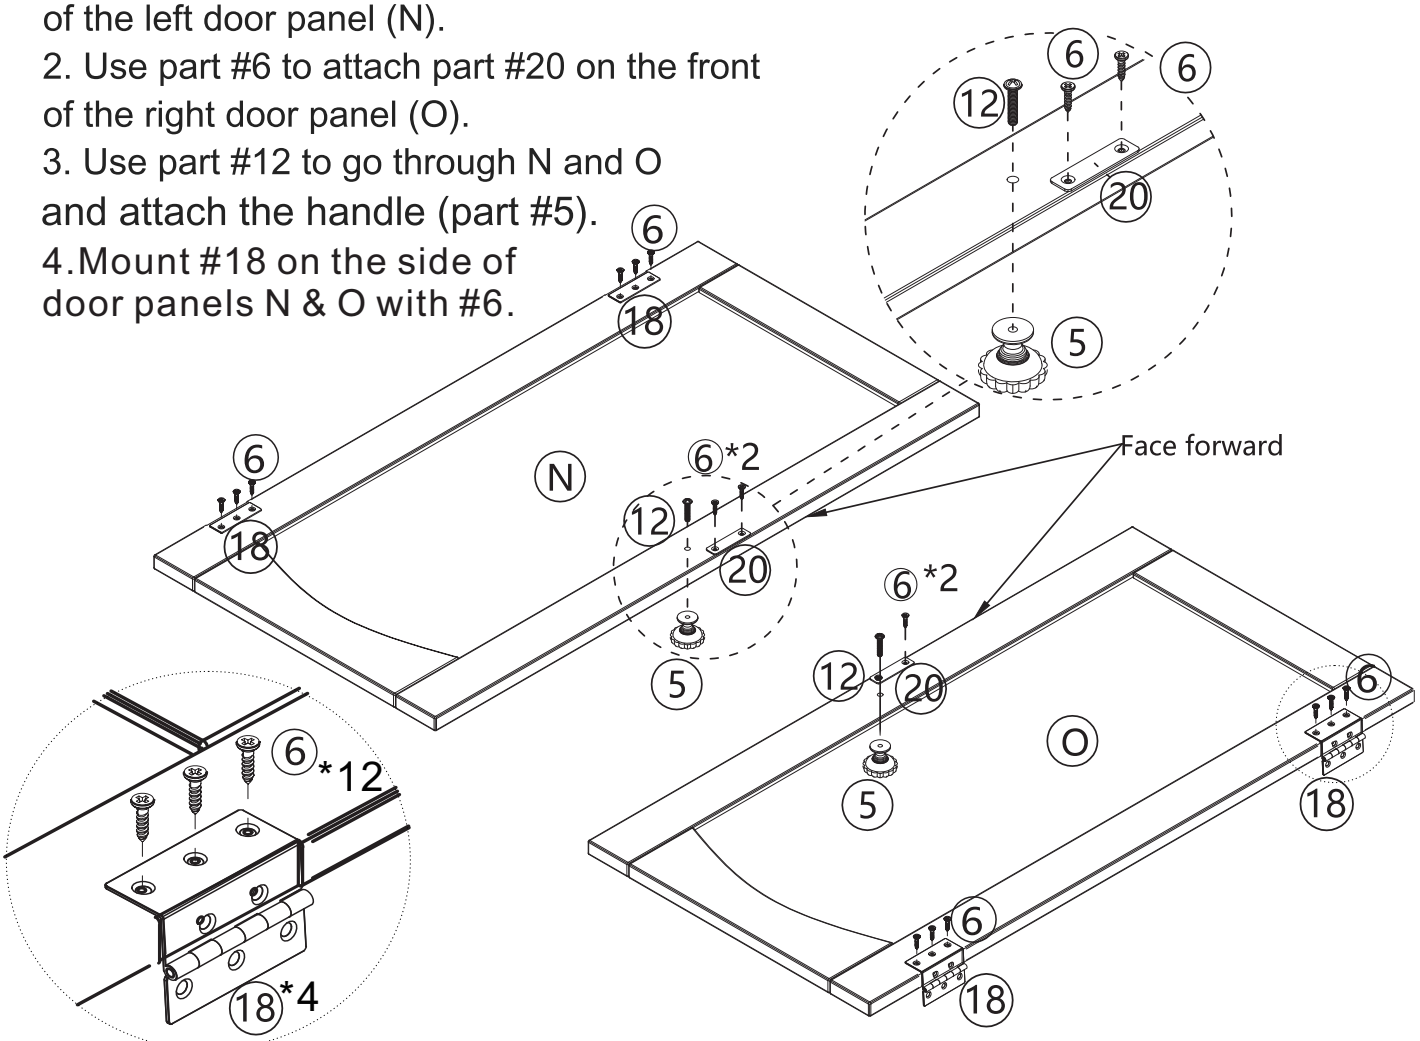


1. Here's what the finished door panel should look like.
Check the gaps between the door and cabinet first.

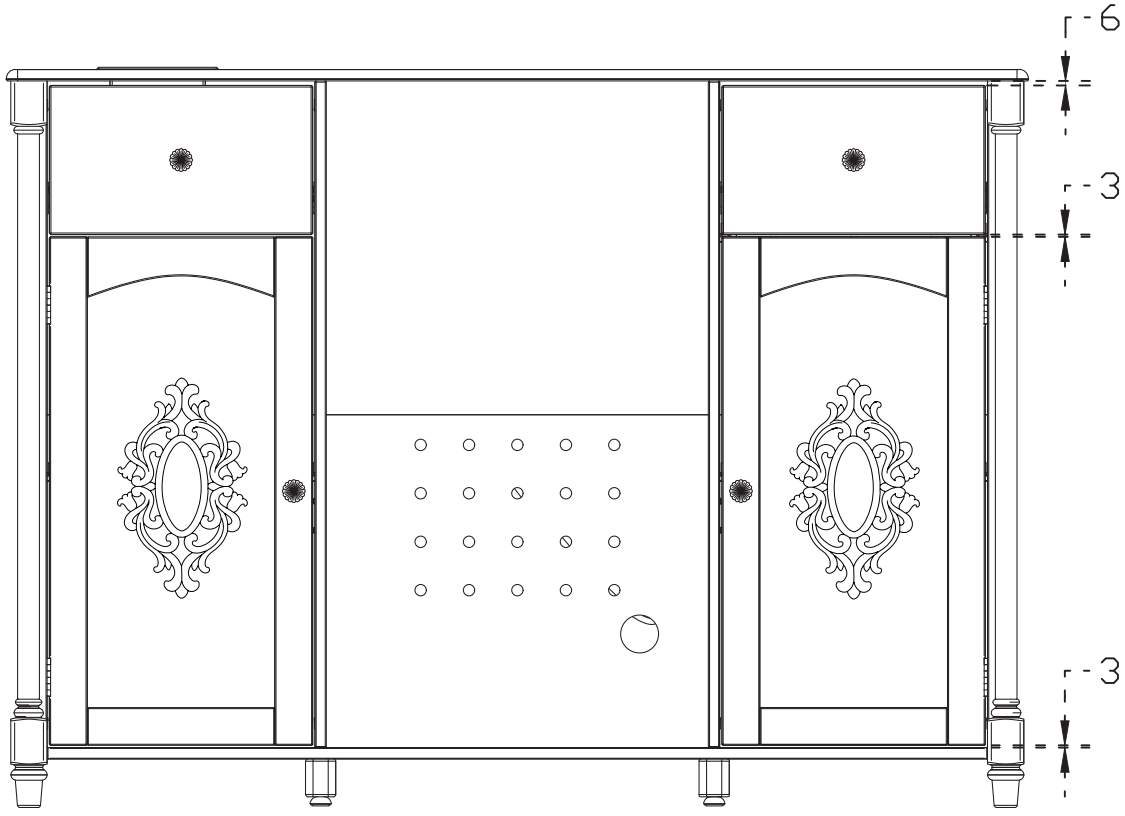


Installation instructions

Step 30

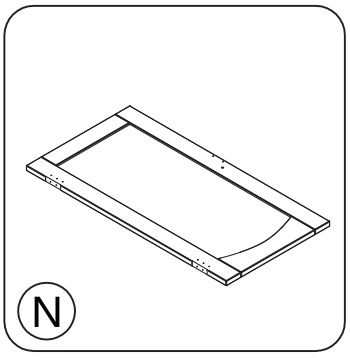


Left door panel
Qty:1

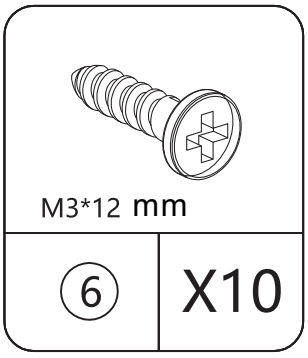


Cross conical tapping screws

1.Mount door panel **N** to the left side of the cabinet with **#6** screws.

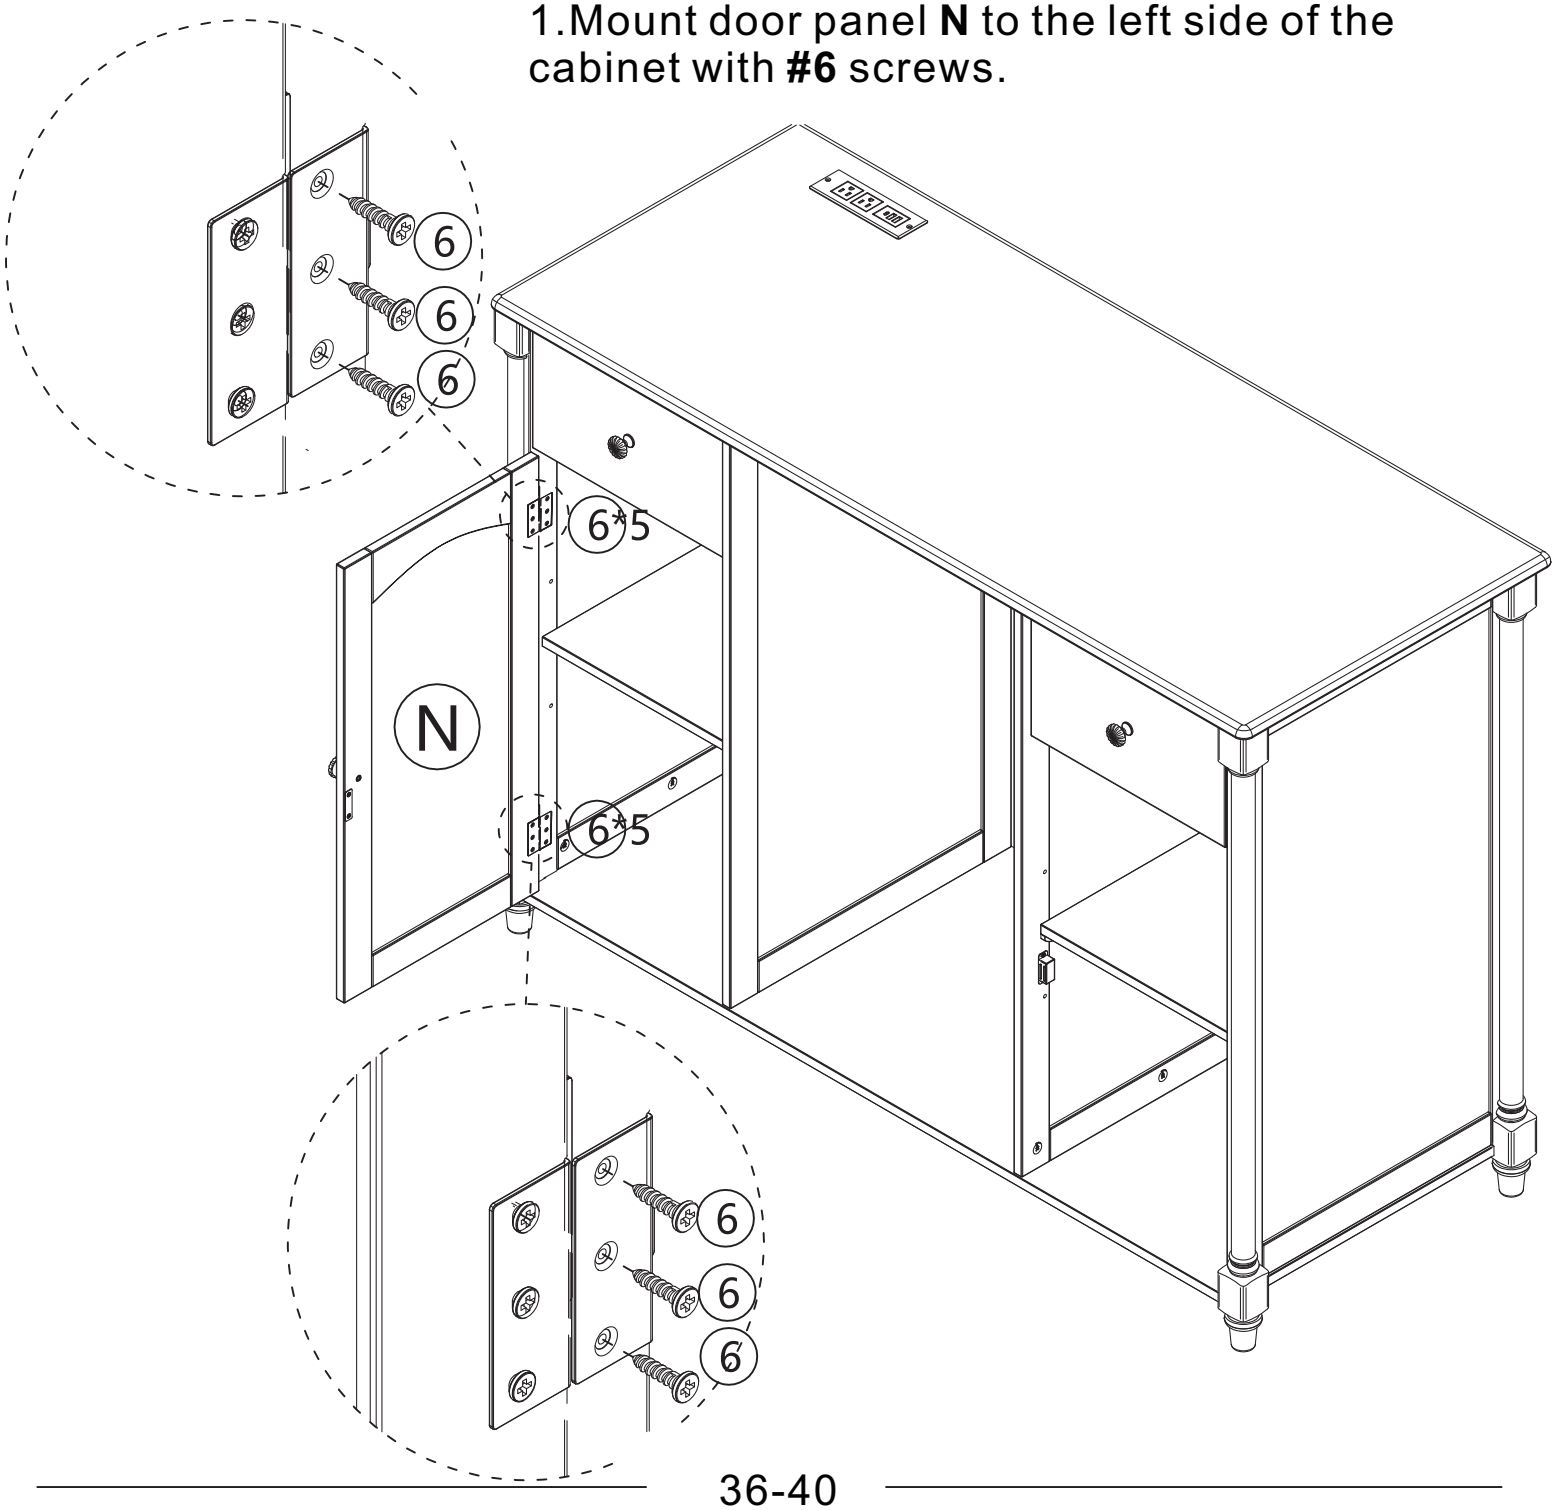


Installation instructions

Step 31

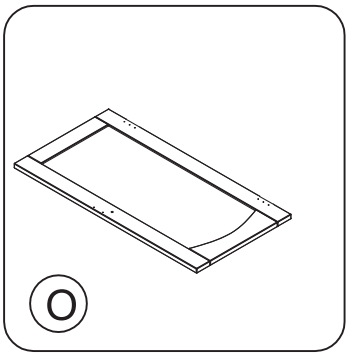


Right door panel
Qty:1

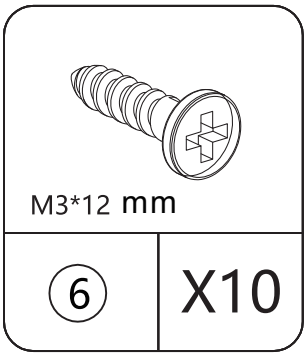


Cross conical tapping screws

1.Mount door panel **O** to the right side of the cabinet with **#6** screws.

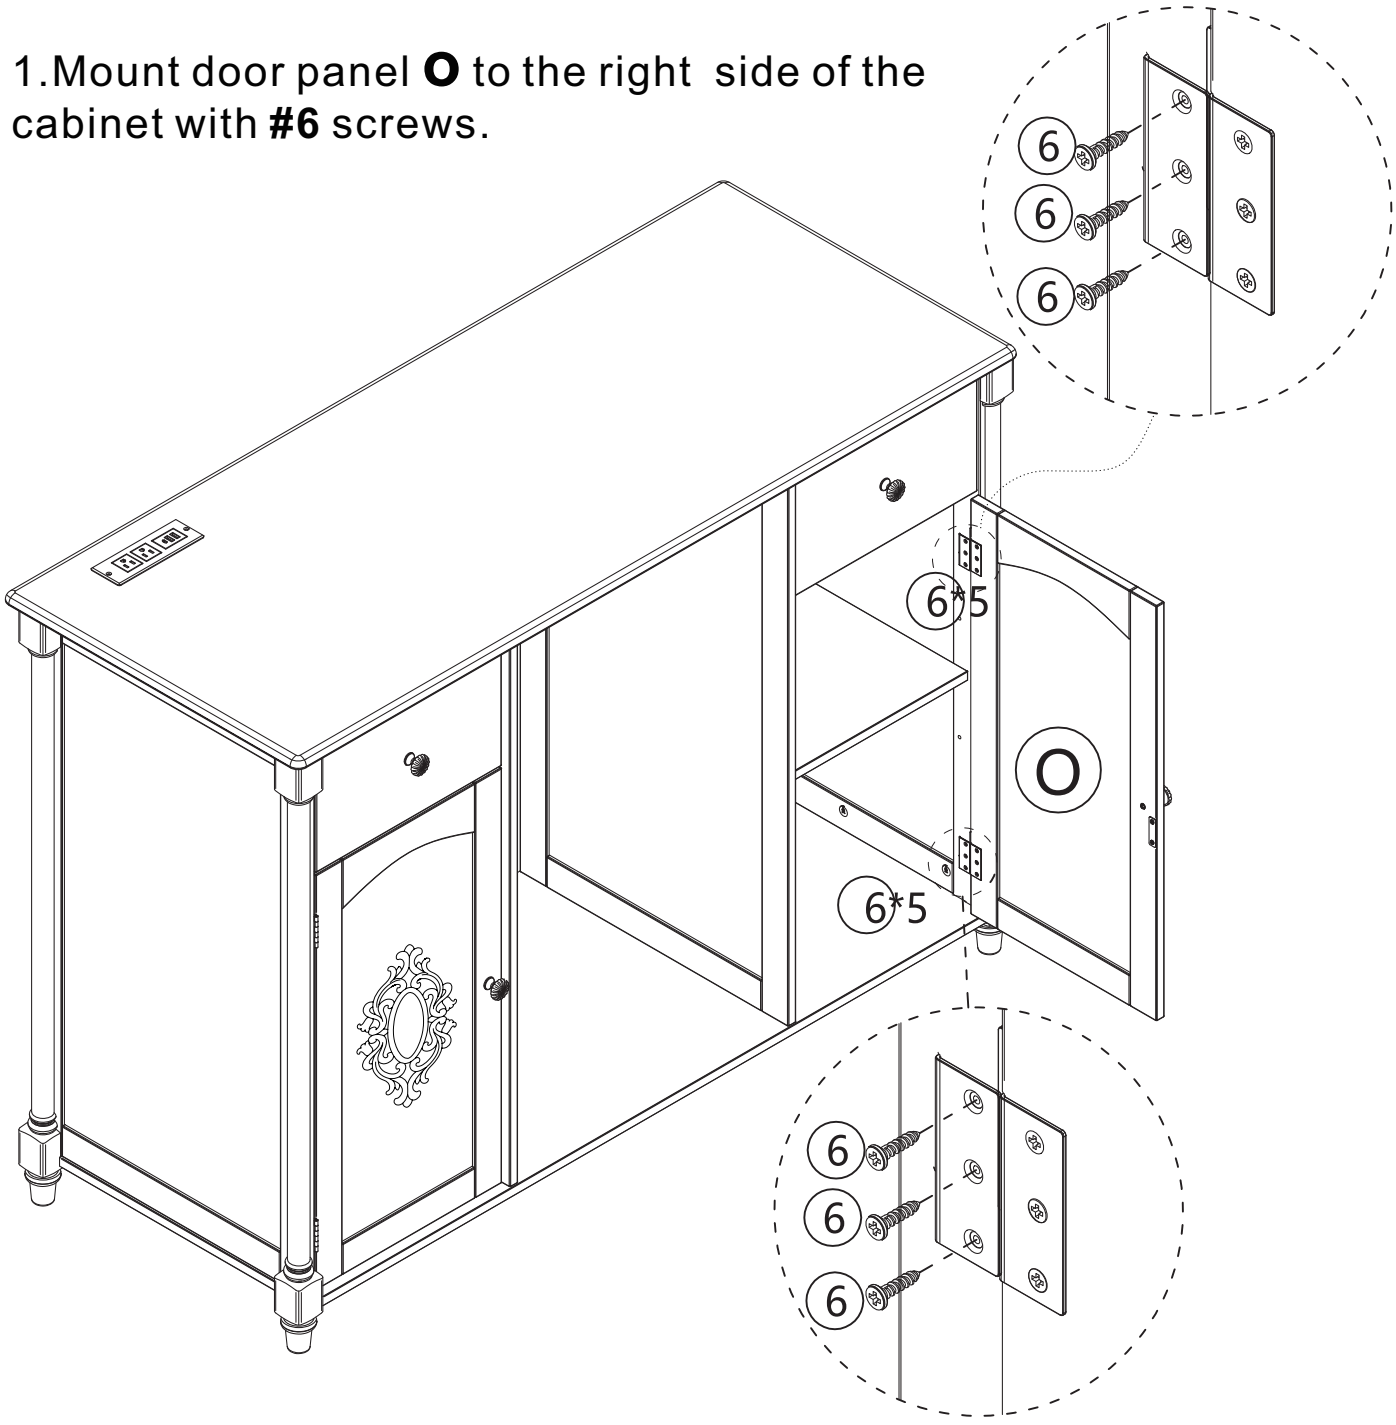

Installation instructions


Step 32

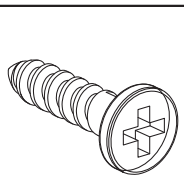

M4*16 mm

⑦	X12


Cross conical tapping screws

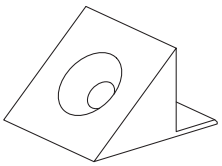

15X14X9

㉒	14

backplate buckle

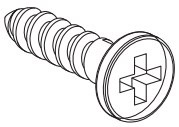


M3*12 mm

⑥	14

Cross conical tapping screws


1. Use the #22 back panel fasteners and #6 cross conical screws to secure the panels around the back panel.

2. Use the #7 cross conical screws to connect the middle of the back panel to the center vertical panel.

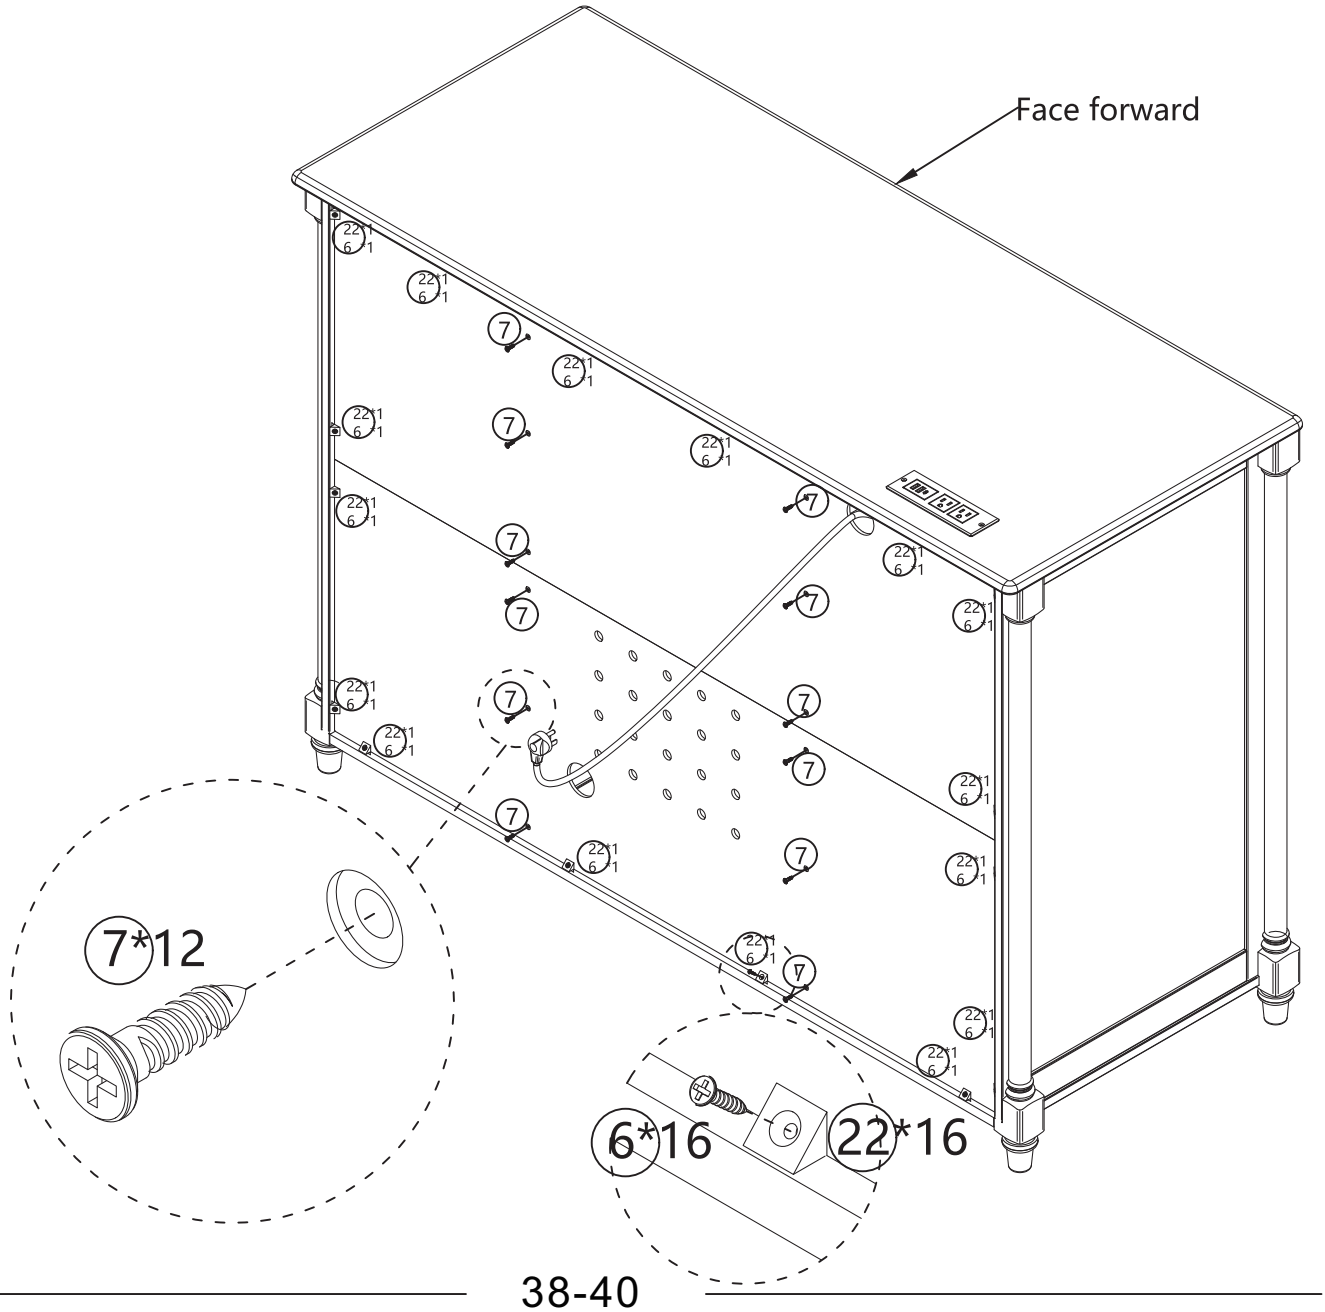


Installation instructions

Step 33

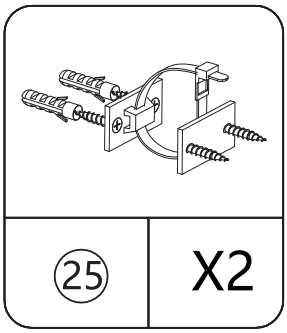

㉕	X2

Hardware to prevent tipping

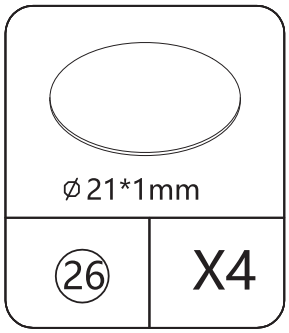


㉖	X4


foot pad

Tip: Skip this step if not required on site.


1. Install the anti-tilt hardware. See the diagram on the right for details.
2. Stick the foot pads (#26) on the bottom of the feet.
3. Just plug the power cord (#1) into the socket.

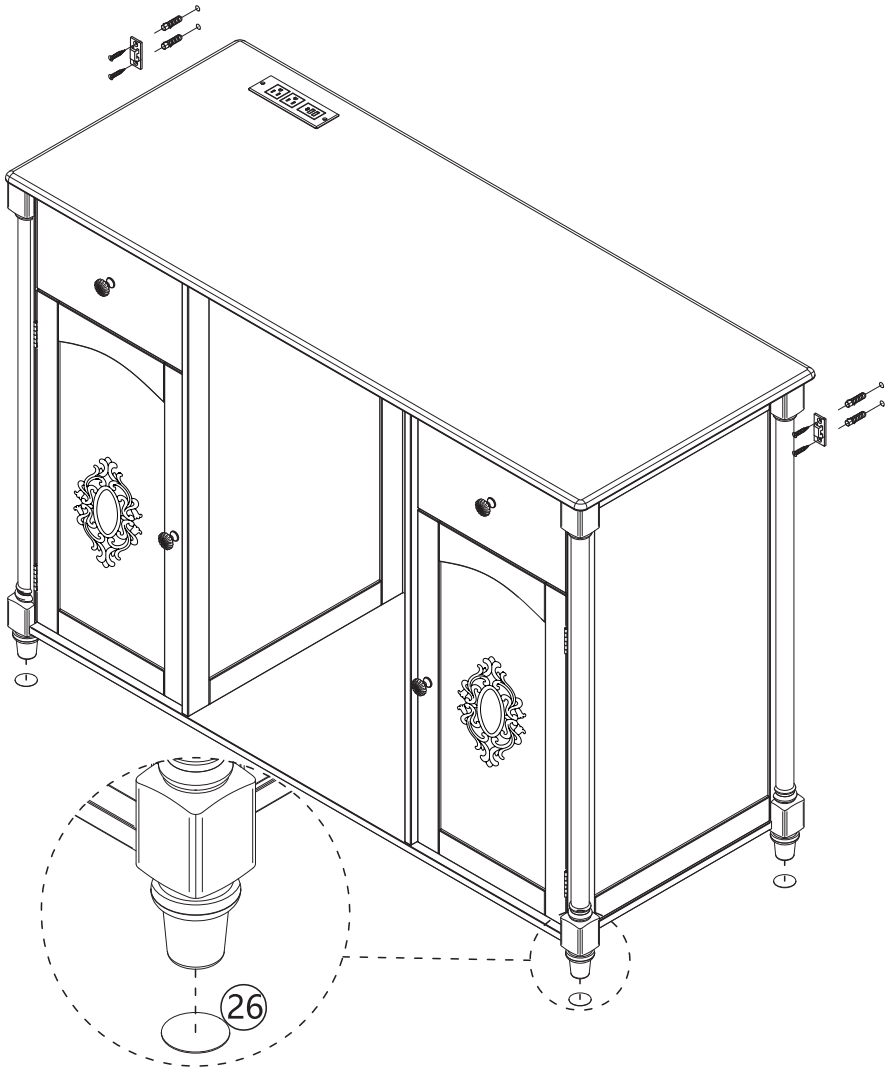


1. Drill holes in the wall and insert the expansion anchors

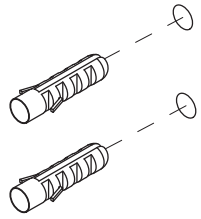


3. Use M4x20 screws to lock the cabinet-side anchors

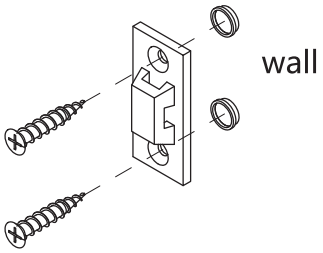


2. Use M4x40 screws to lock the wall-side anchors

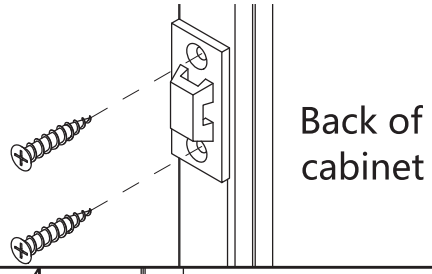

4.

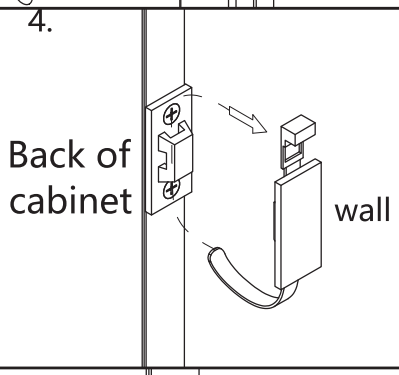

5.

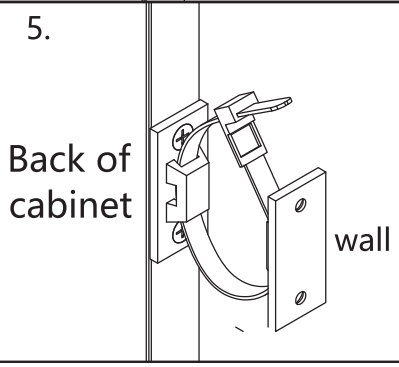

Furniture maintenance

Wipe down surfaces with a soft cloth only

· skip the harsh chemicals.

Use coasters under hot items to protect the finish.

Keep it out of direct sunlight and away from very humid or dry spots.

Check the screws every now and then · tighten gently

but don't go overboard.

After-sales service support

Ran into trouble during assembly? Missing parts?

Quality issue?

Just reach out through the messaging system on

the platform where you ordered

Email usually gets a faster reply!

Return Guide

Changed your mind? No problem · just follow

the return process on the platform where you bought it.

Got a defective item? Message us before sending it back.

If the package arrives damaged, try to refuse delivery

if you can. If you've already got it, follow

the retailer's return policy for damaged goods.

Keep all original packaging and paperwork!

Tossing the box before contacting us

could void your refund.