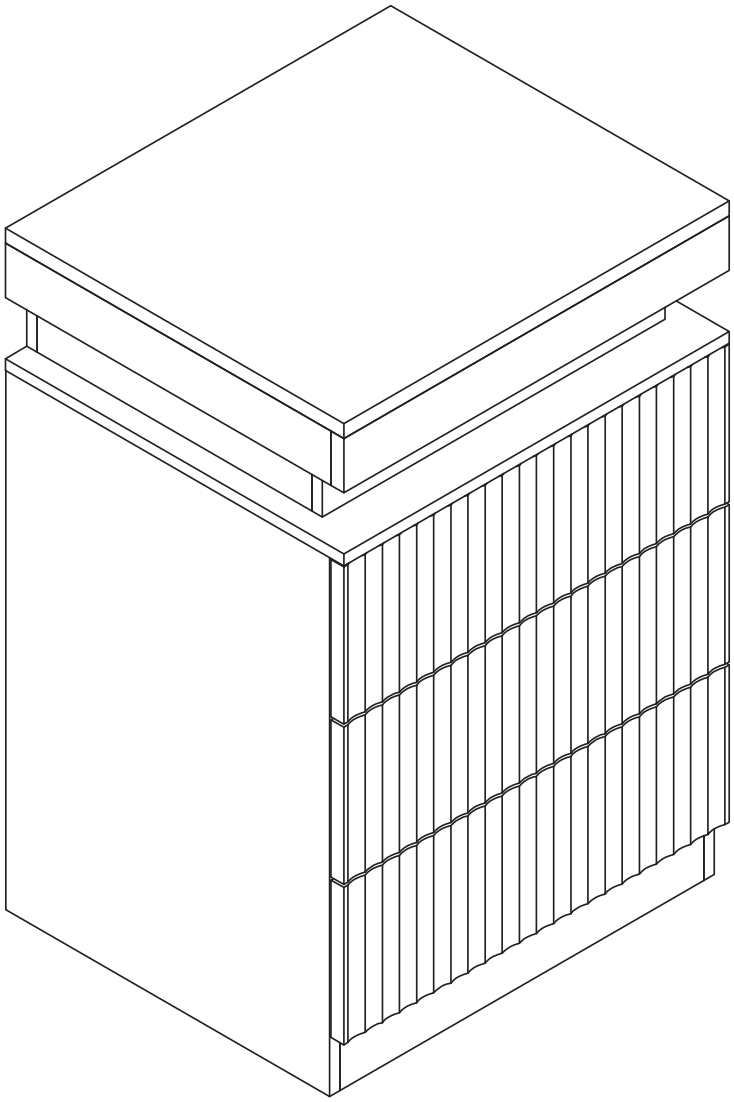
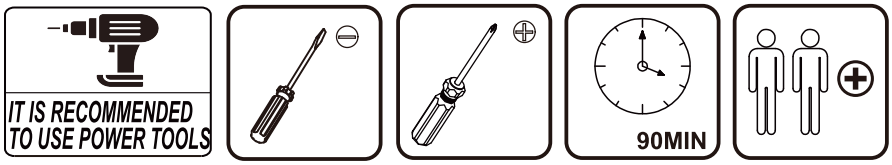
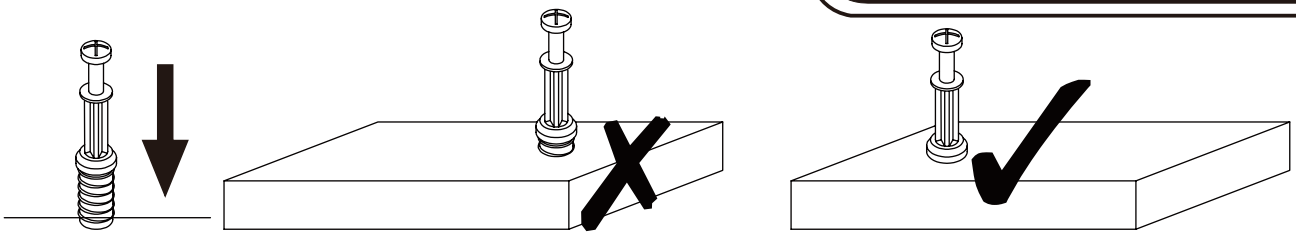
Installation & Assembly

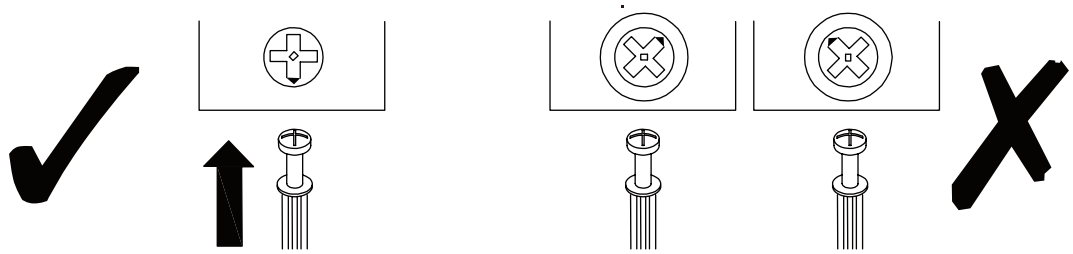




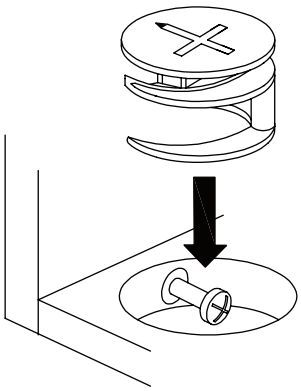
***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**



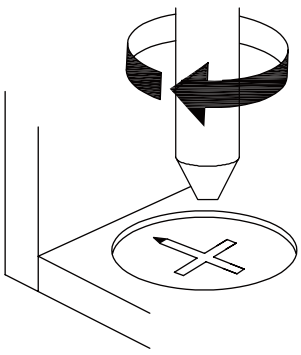
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.



EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

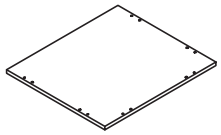







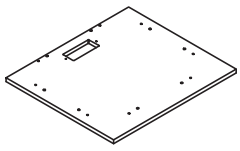
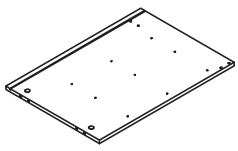
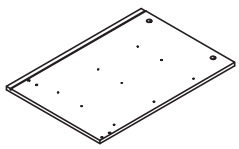


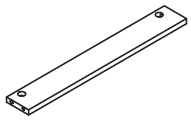

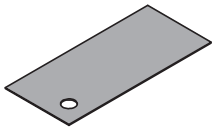
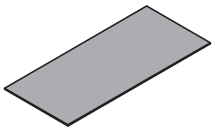
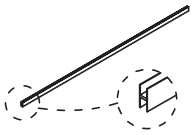
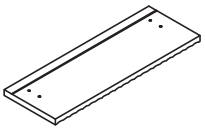



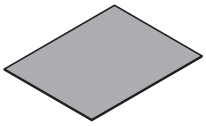
EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

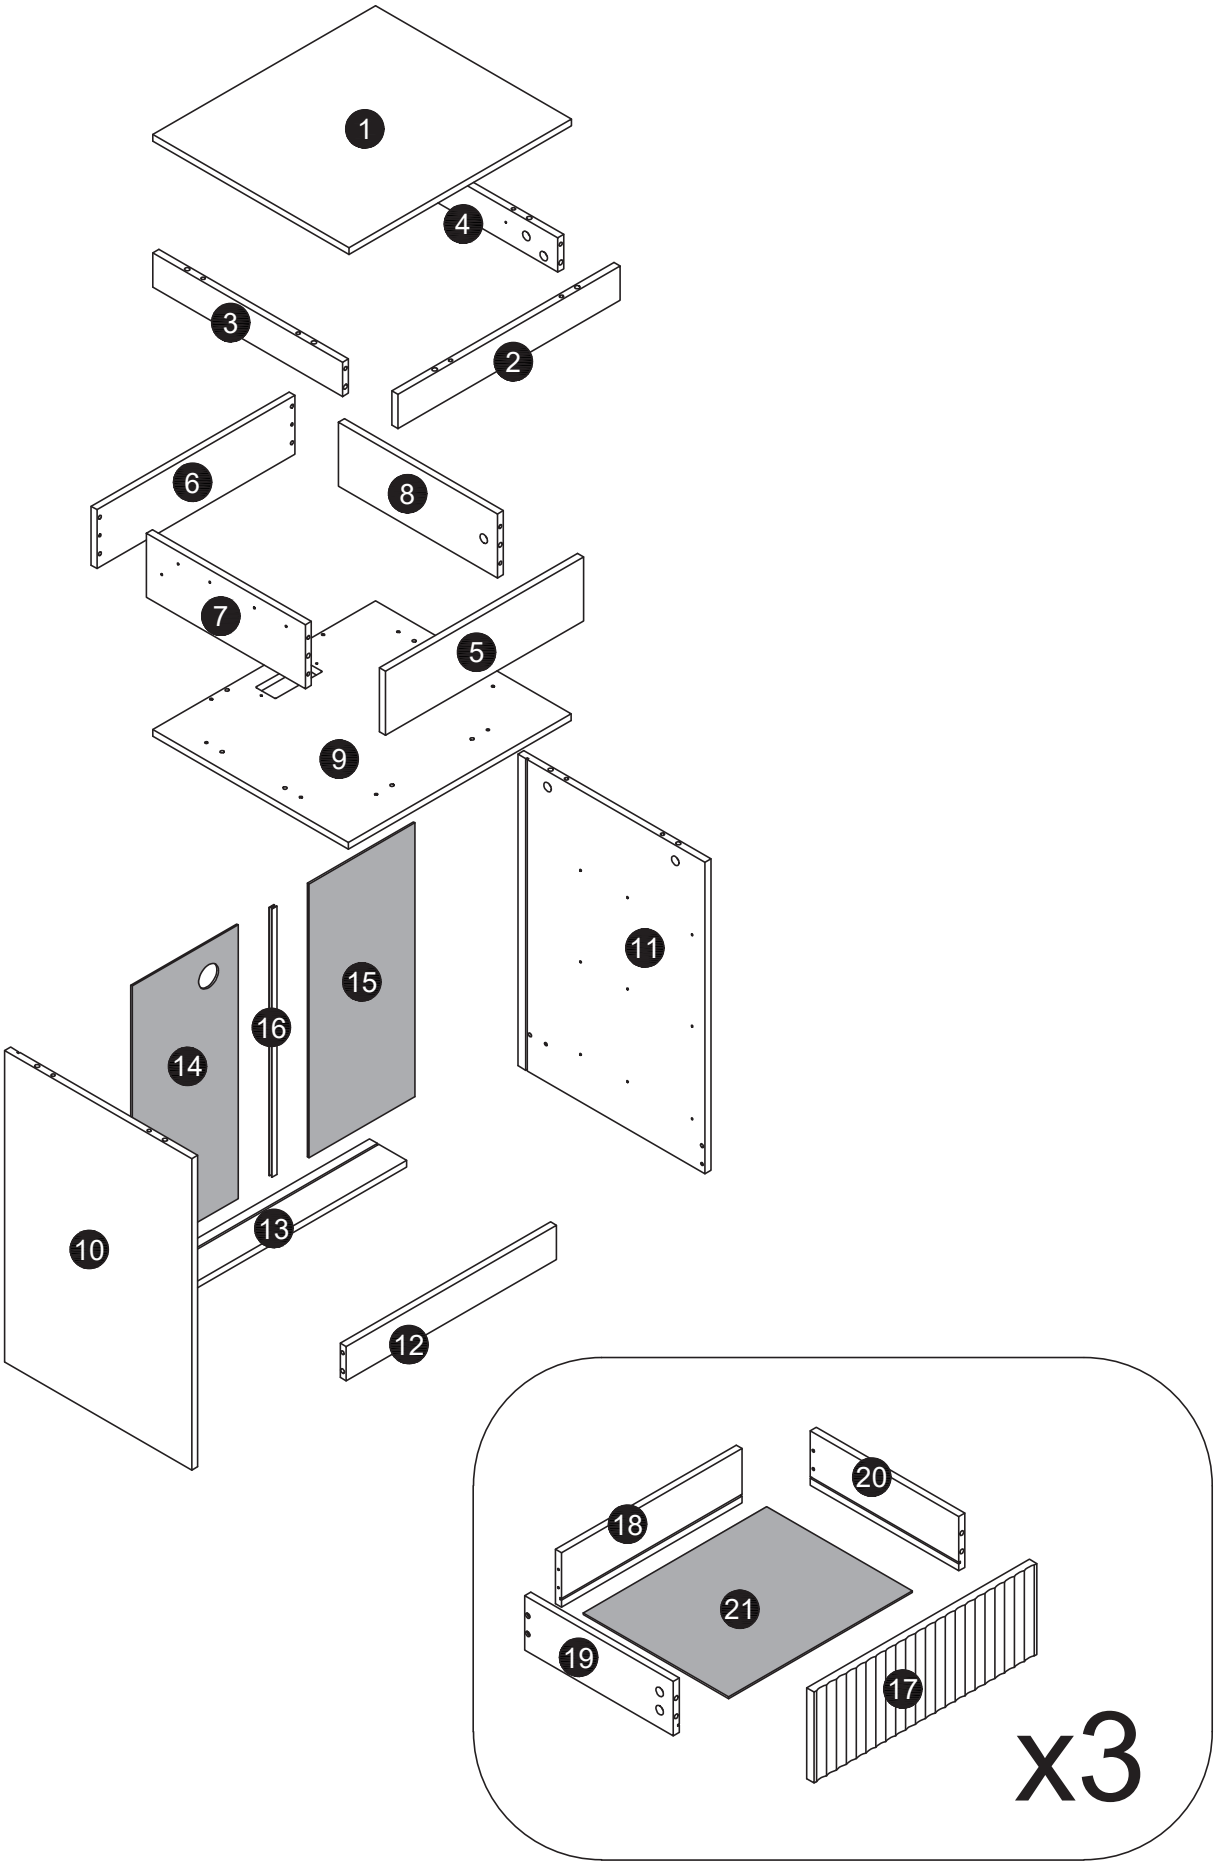


EN_ Turn cam lock clockwise to tighten.






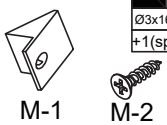





PACKING DELALS

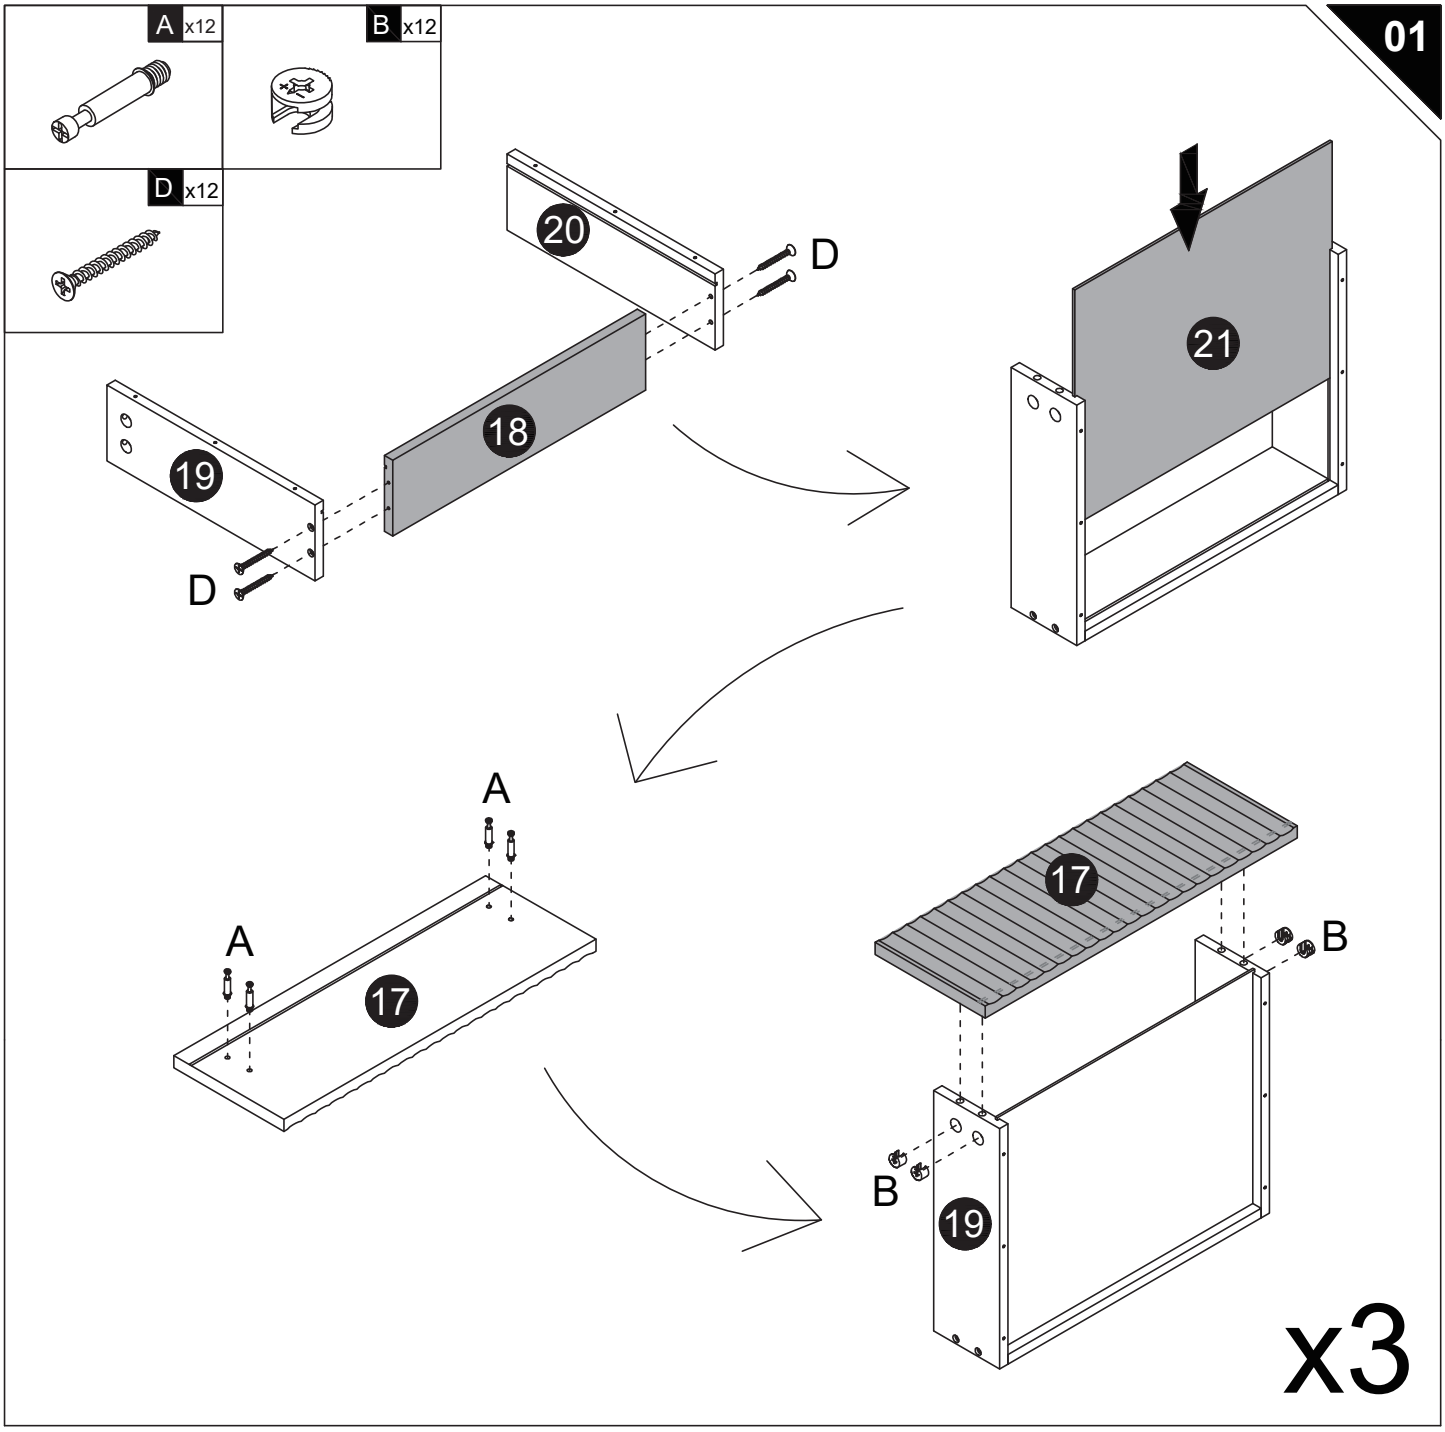
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	
⑪		x1	

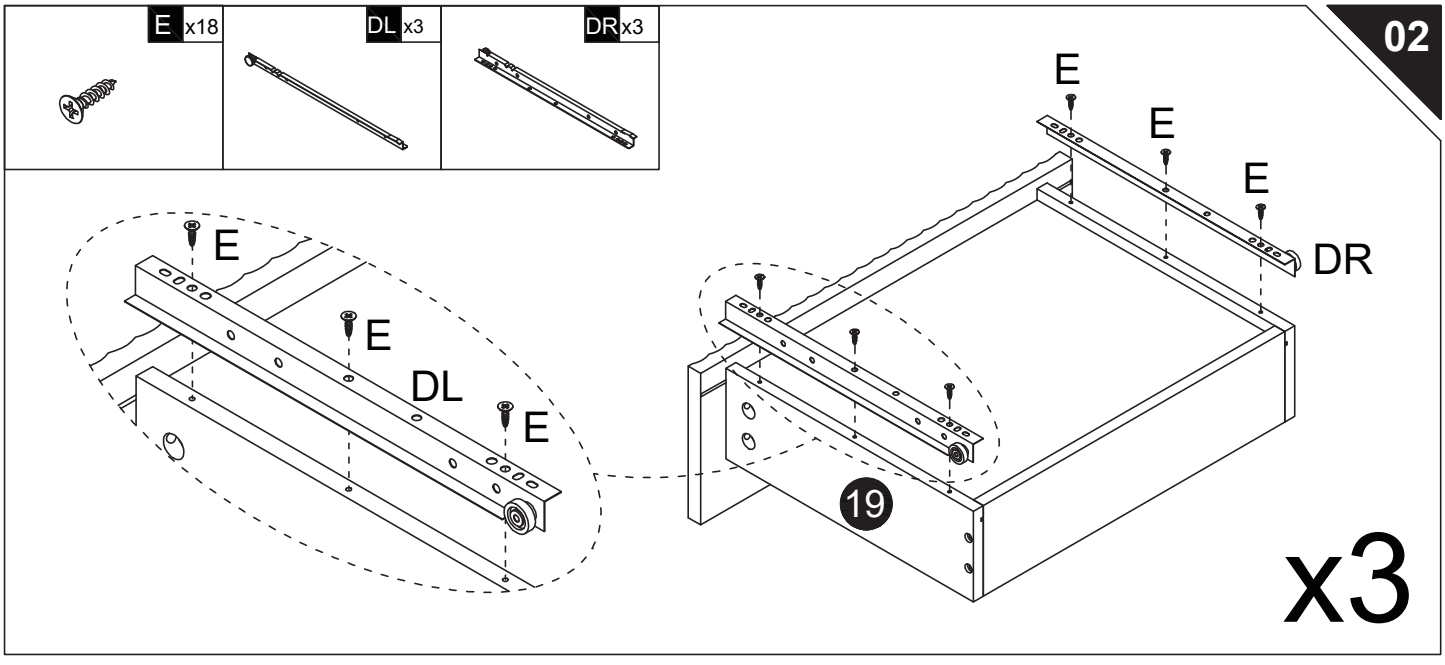
NO.	PARTS	QTY	SPARE
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x3	
⑱		x3	
⑲		x3	
⑳		x3	
㉑		x3	
	 Hardware Kit	x1	

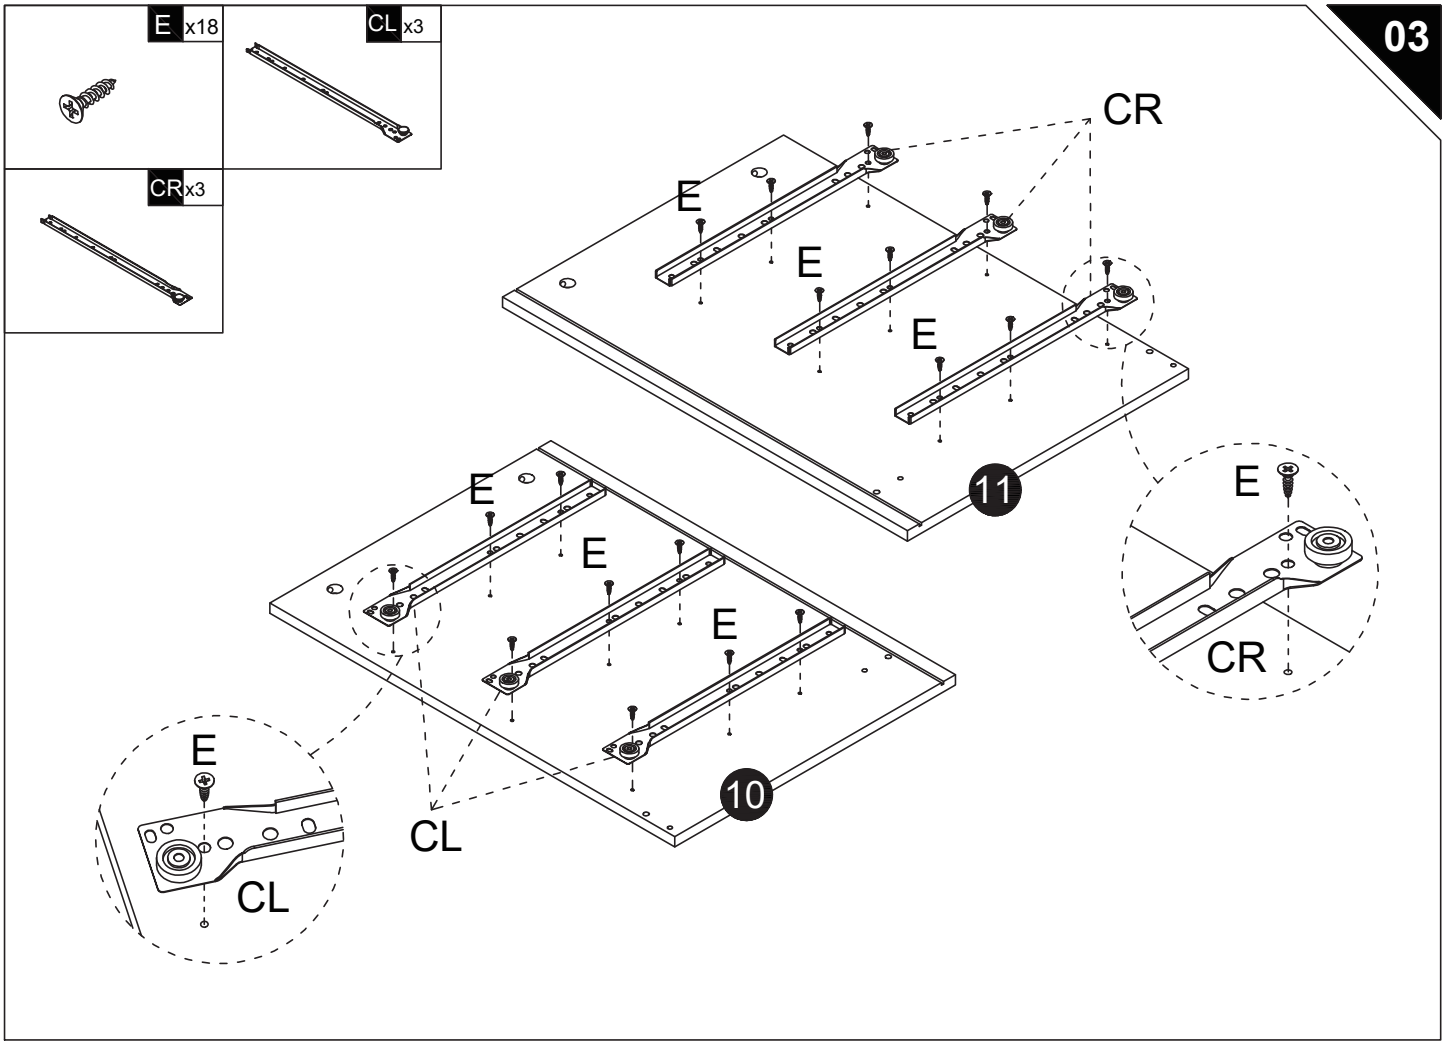

1
4
3
2
6
8
7
5
9
11
15
16
14
10
13
12
20
18
21
19
17
x3

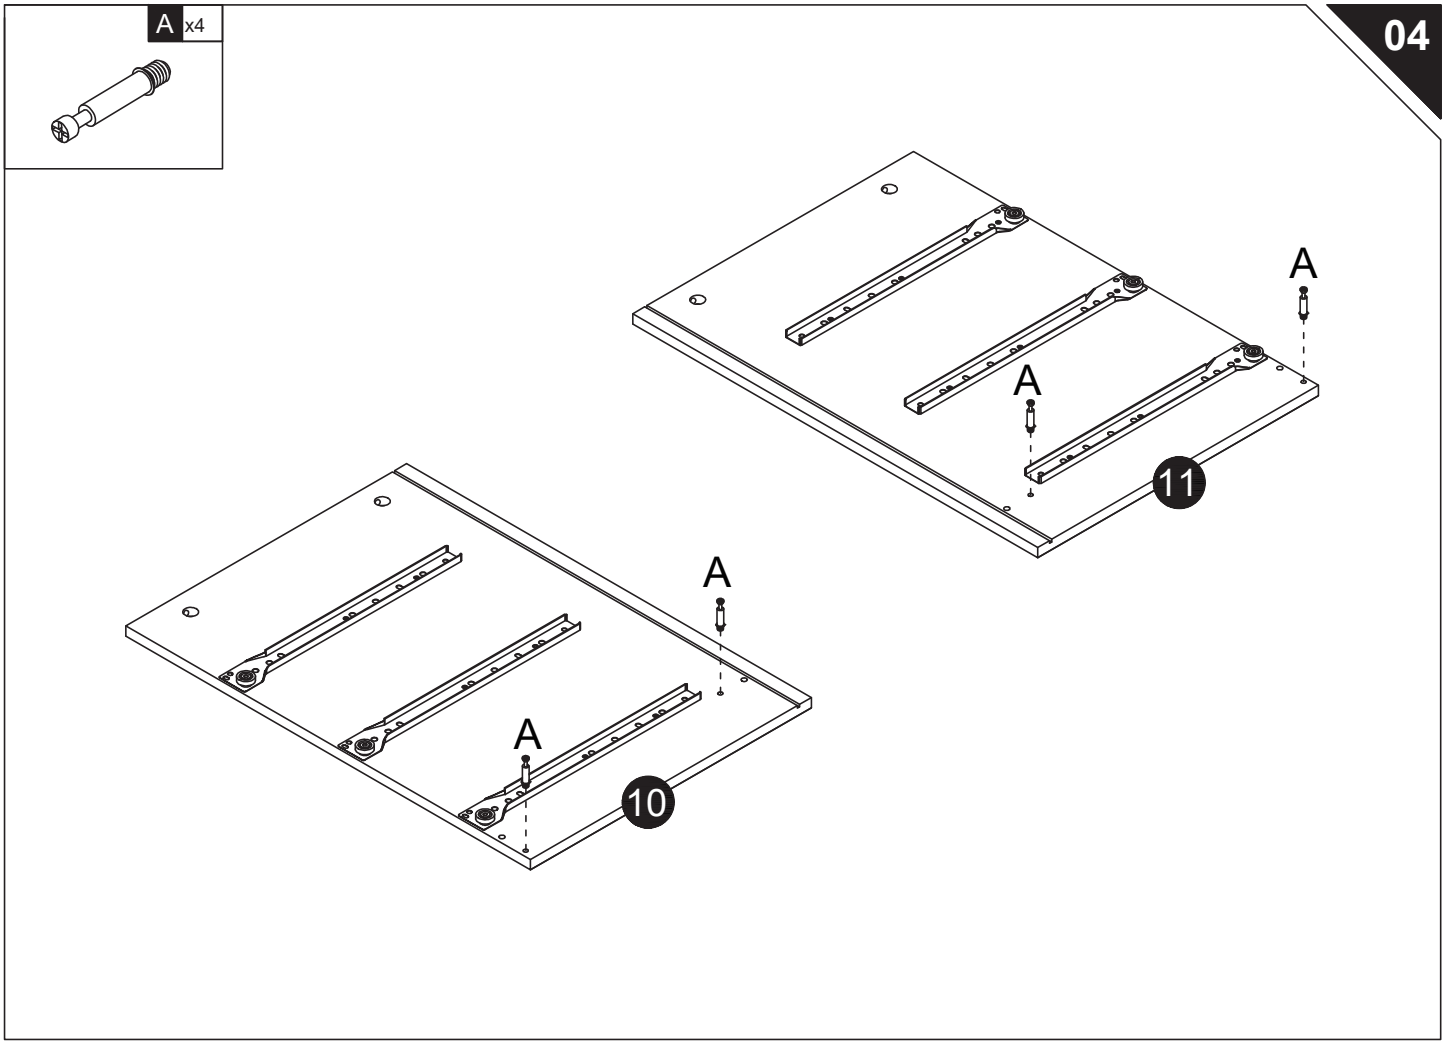
HARDWARE

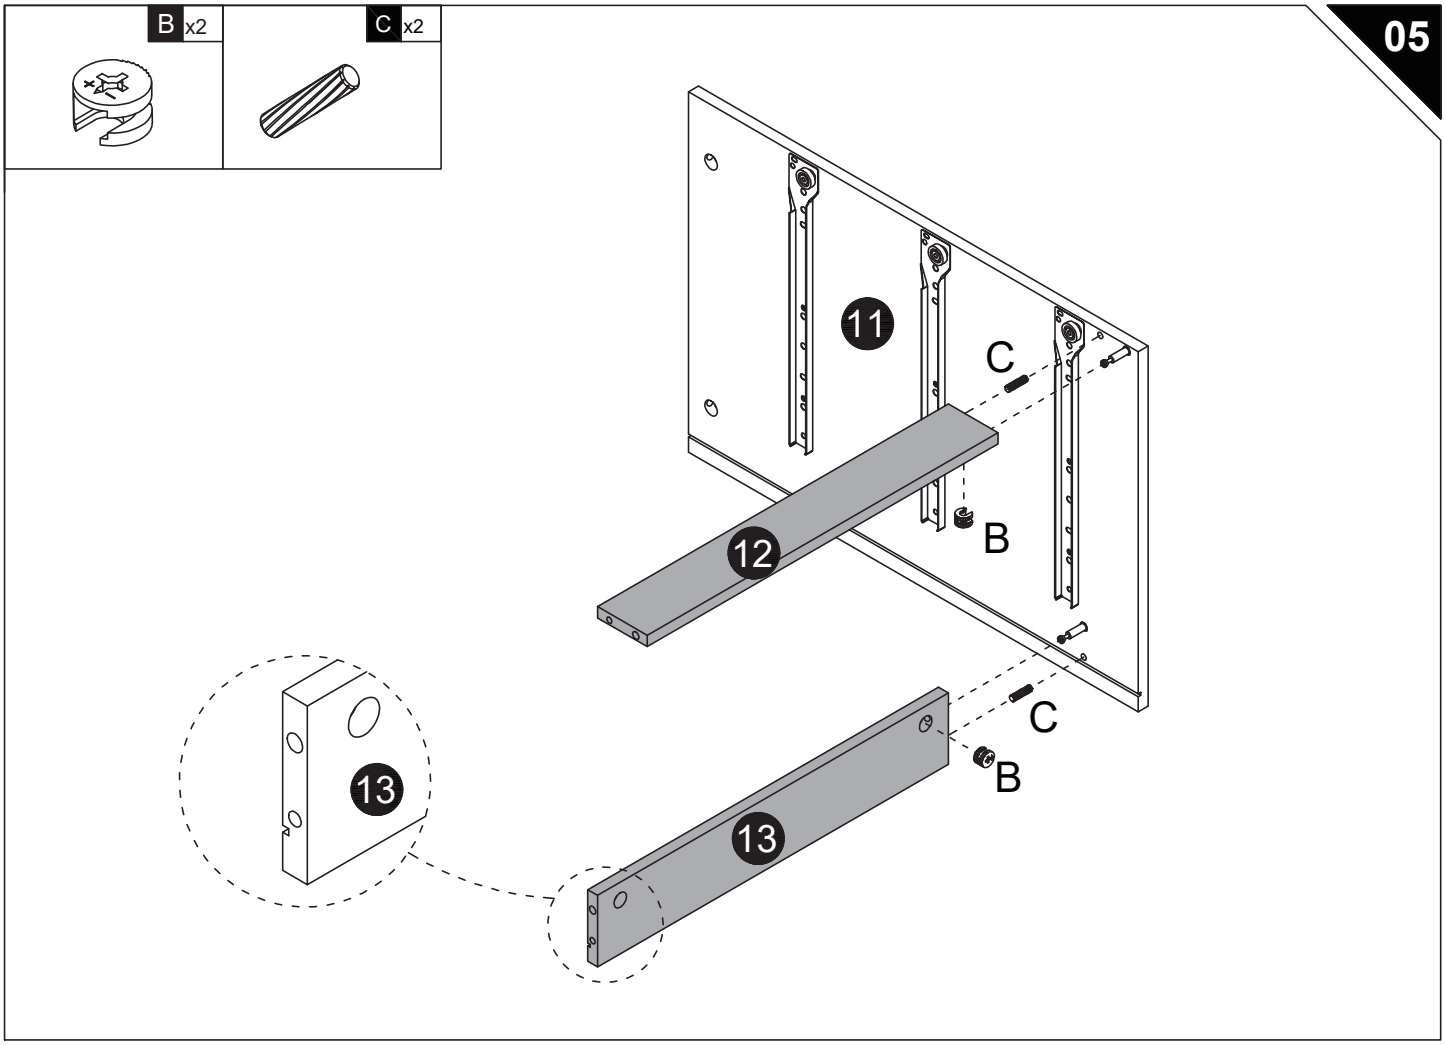
A x30 Ø6x35mm +3(spare) 	B x30 Ø15x10mm +3(spare) 	C x32 Ø6x30mm +3(spare) 	D x23 Ø4x35mm +2(spare) 	E x50 Ø3.5x12mm +5(spare) 	F x1 
G x2 Ø3.5x12mm 	H x1 Ø4x10mm  H-1 H-2	I x1 	J x1 	K x1 Ø4x14mm  K-1 K-2	L x1 
M x4 Ø3x16mm +1(spare)  M-1 M-2	N x2 				
CL x3 L300mm 	CR x3 L300mm 	DL x3 L300mm 	DR x3 L300mm 		

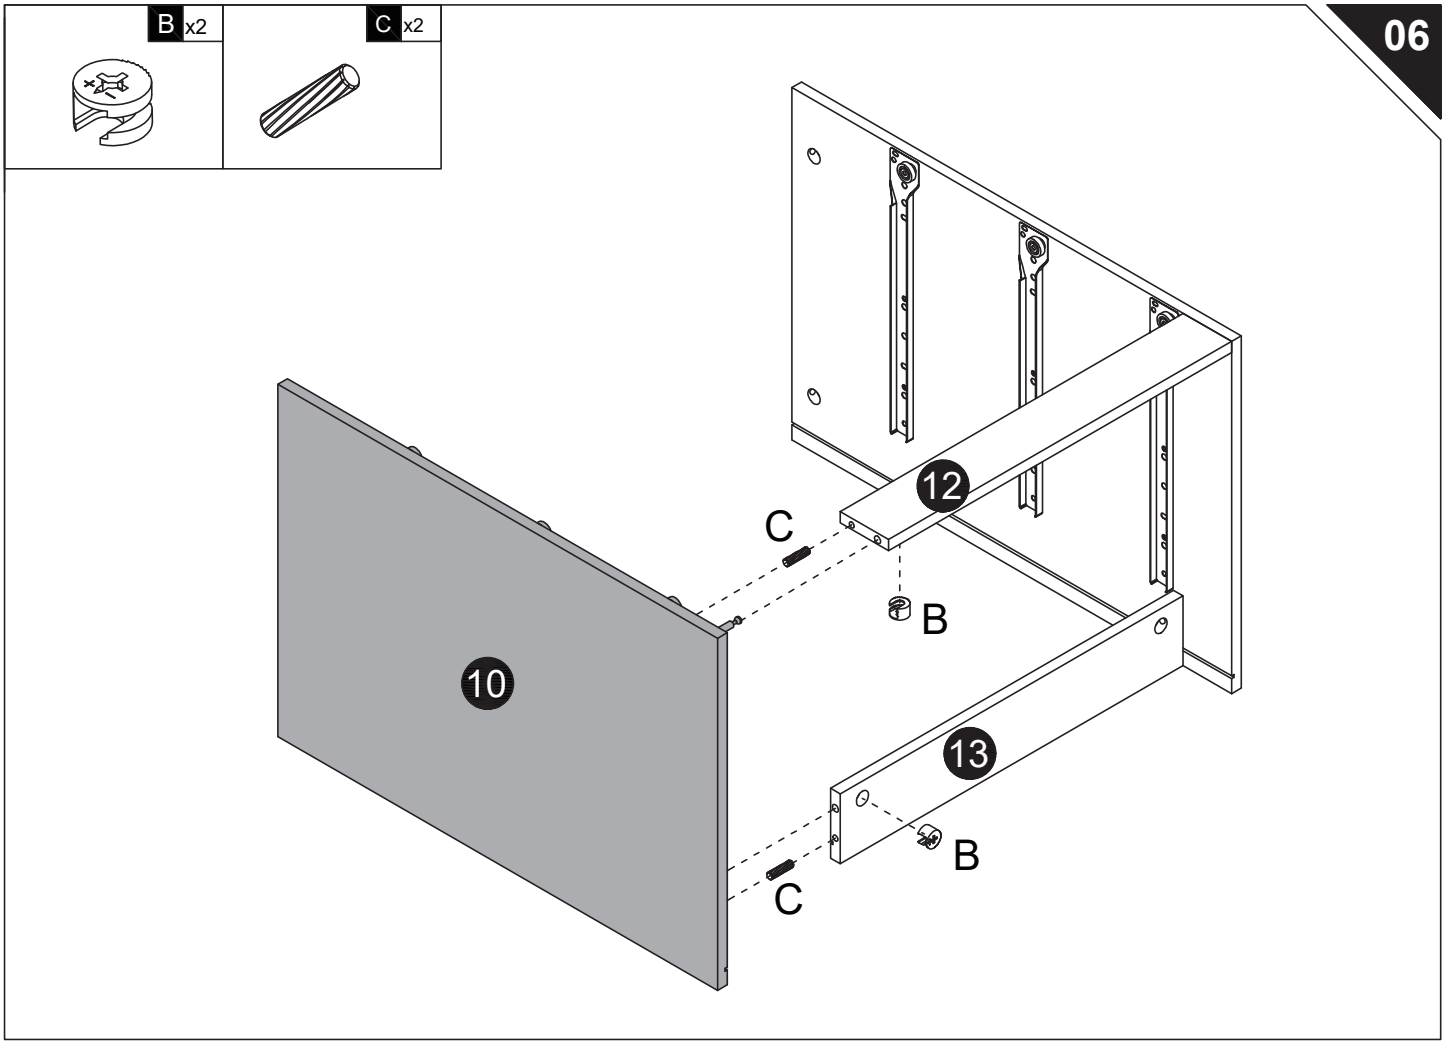

01
A x12
B x12
D x12
20
D
18
19
D
21
A
A
17
17
B
B
19
x3


02
E x18
DL x3
DR x3
E
E
DL
E
E
E
E
DR
19
x3

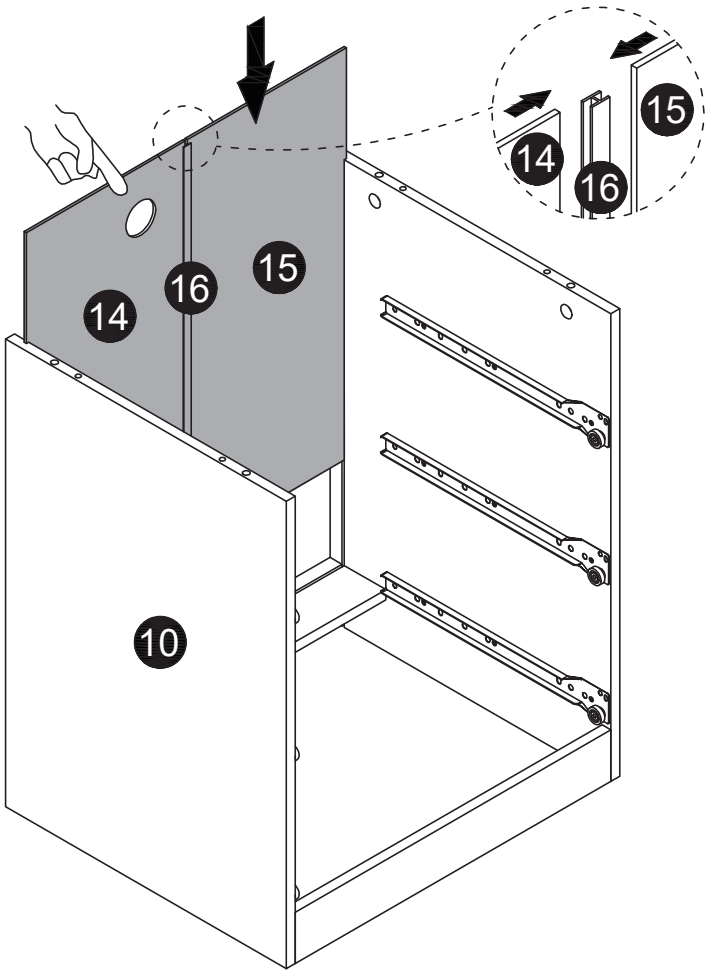

03
E x18
CL x3
CR x3
CR
E
E
E
11
E
E
E
E
CR
E
E
CL
CL
10


04
A x4
A
A
11
A
A
10

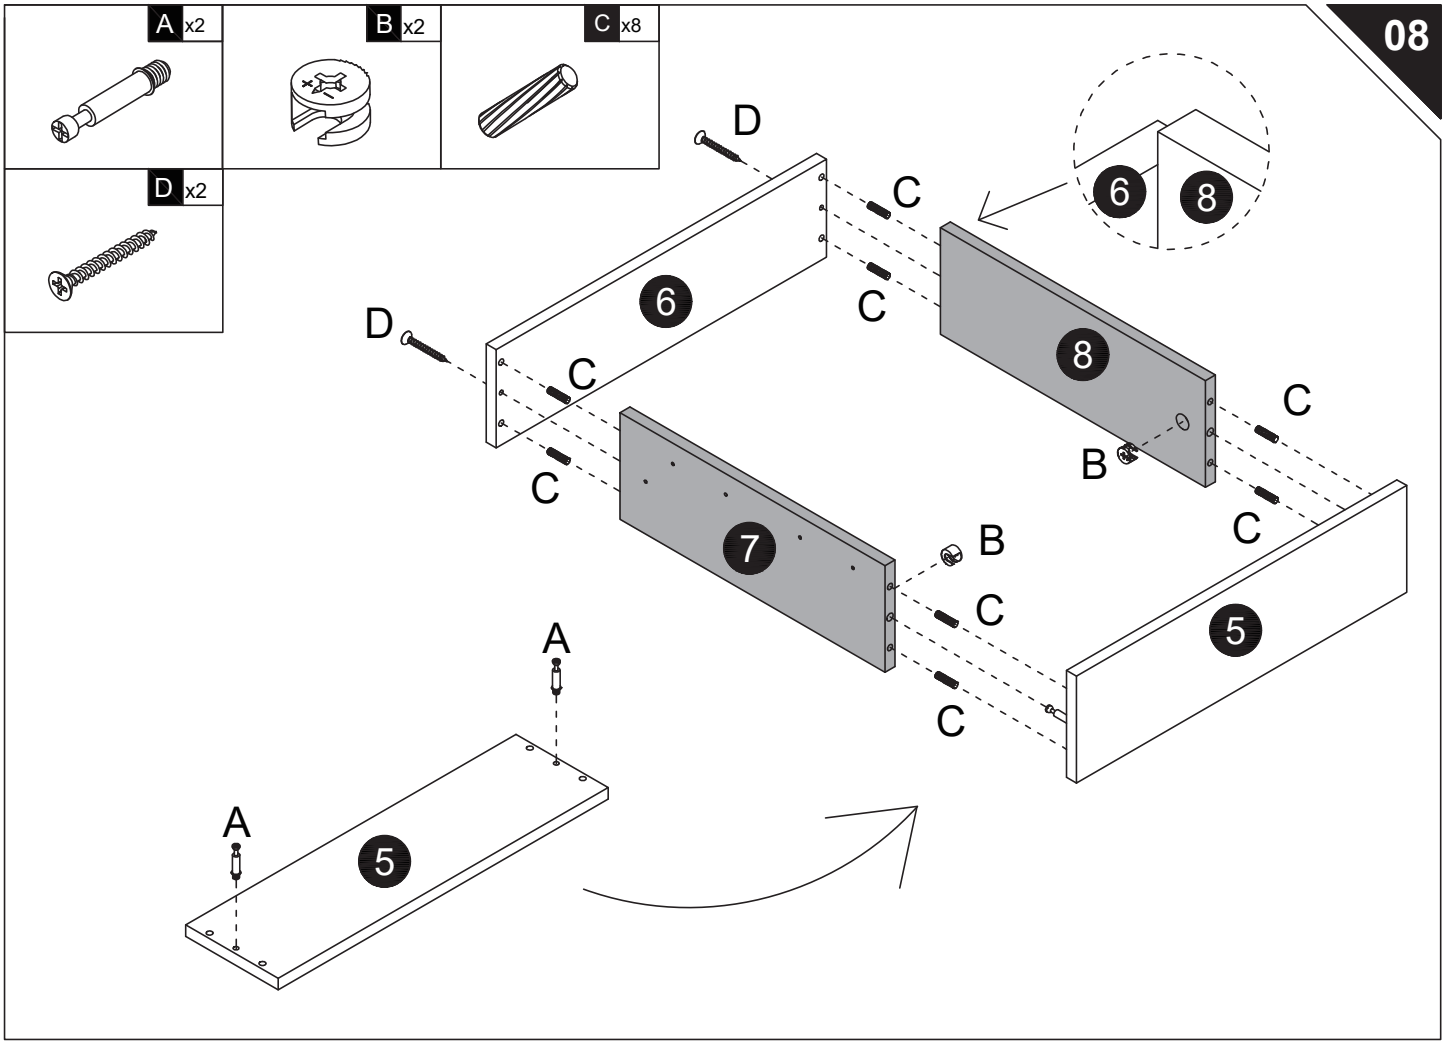

B x2
C x2
05
11
C
B
12
C
B
13
13


B x2
C x2
06
12
C
B
10
13
B
C

07



08



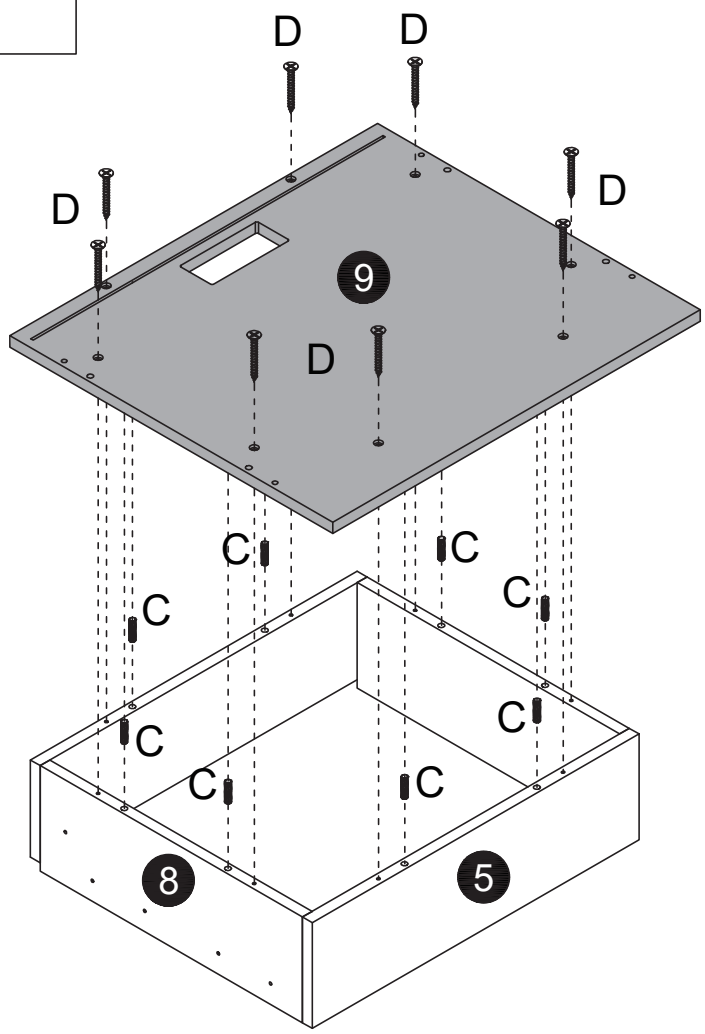
09

C x8




D x8

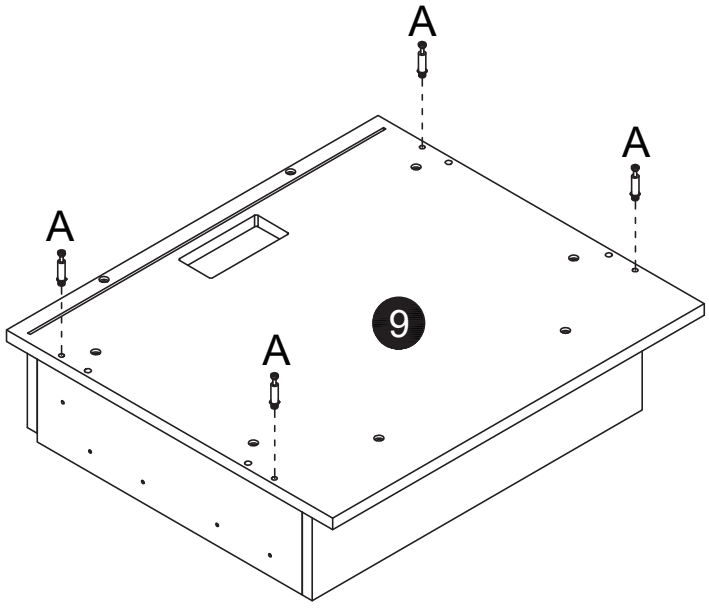


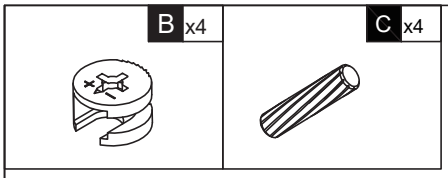


10

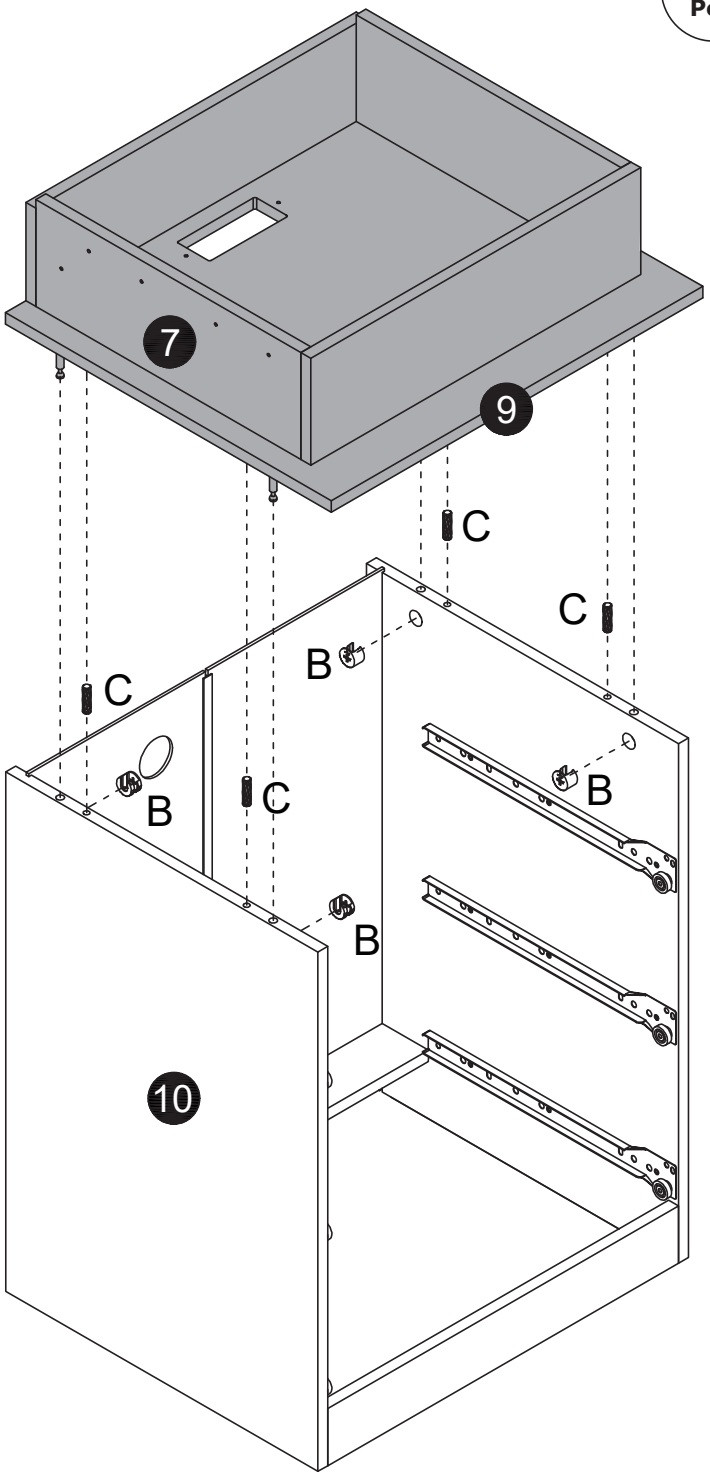
A x4






B x4
C x4

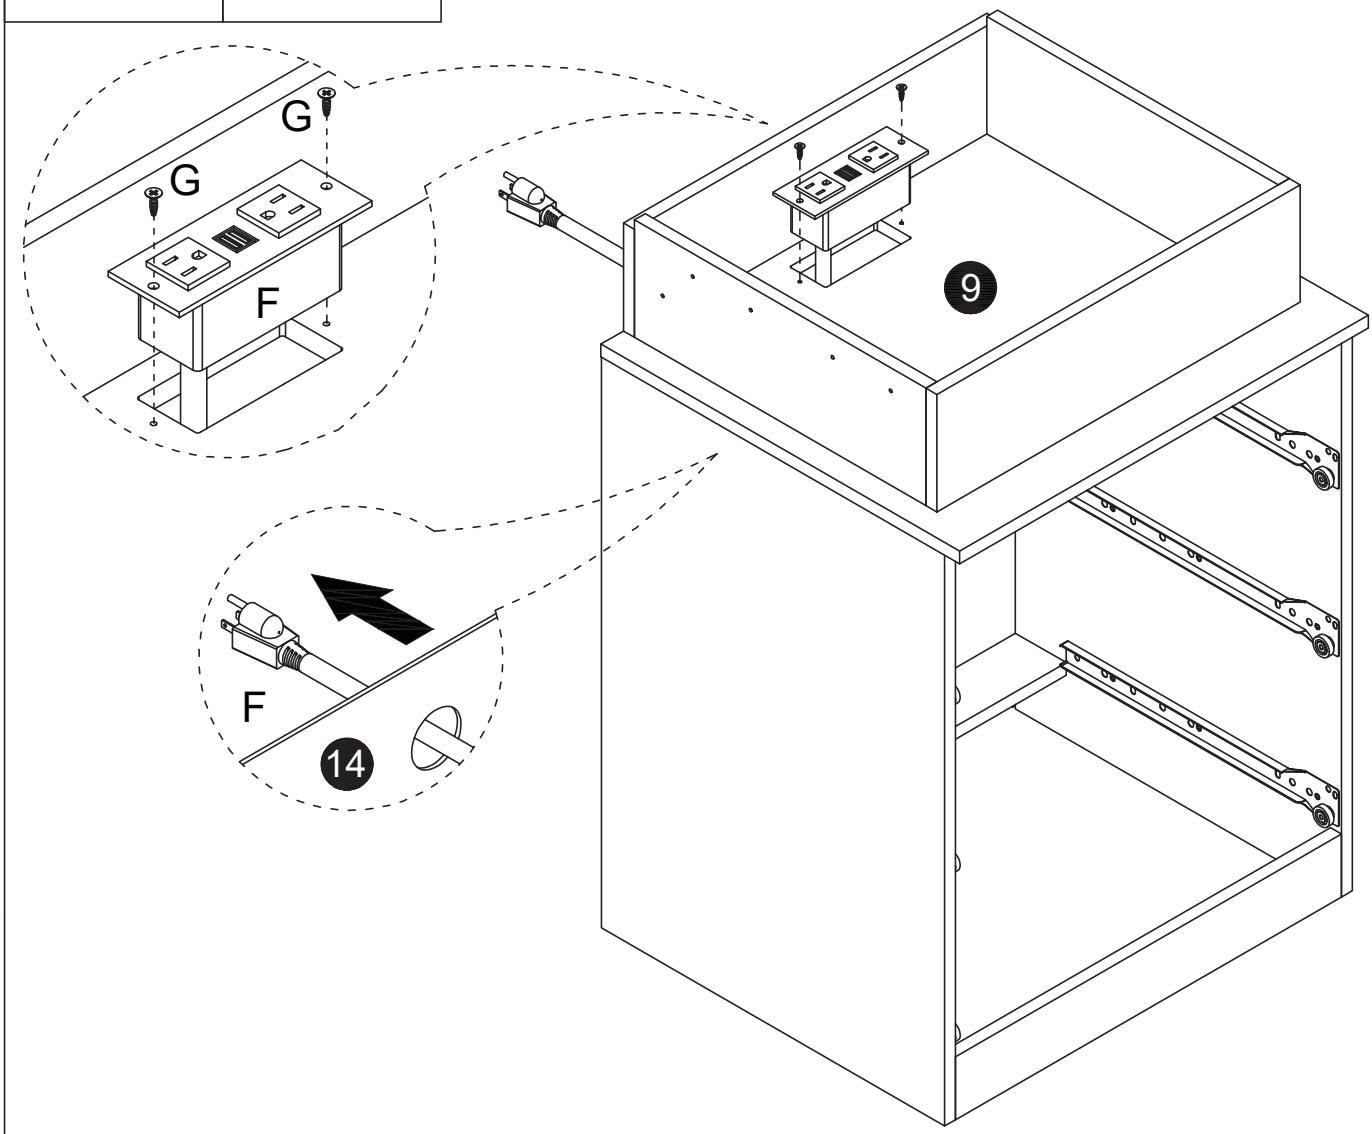

Need Two or More
People To Complete


7
9
C
C
C
B
B
C
B
B
10

12

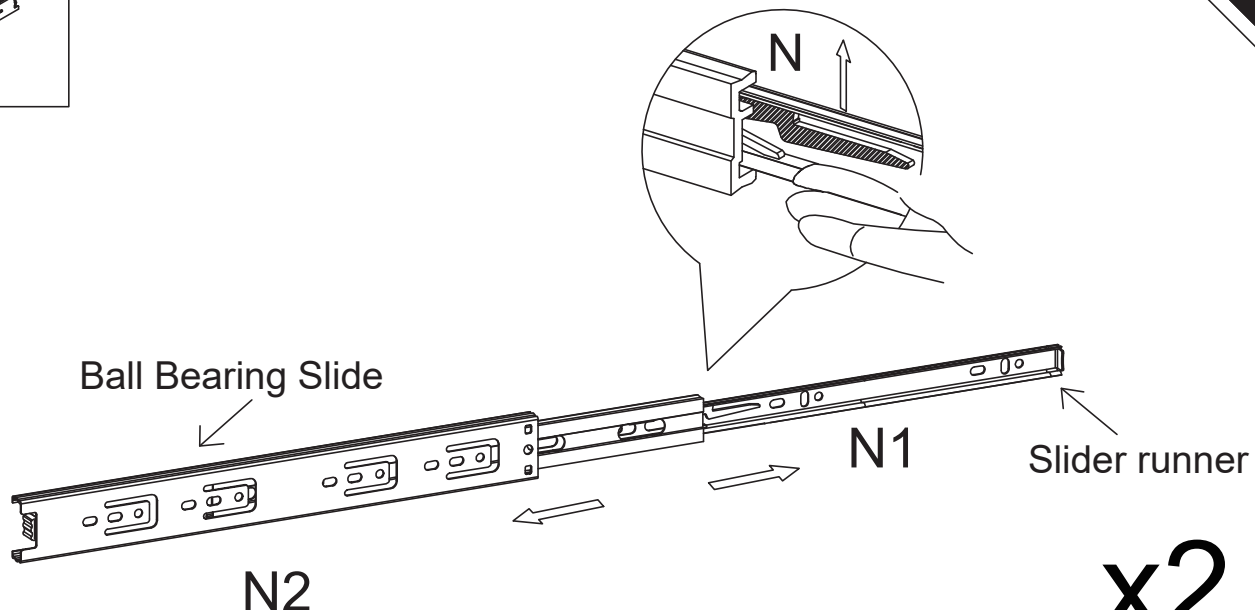
F x1

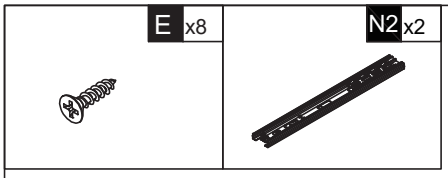
G x2

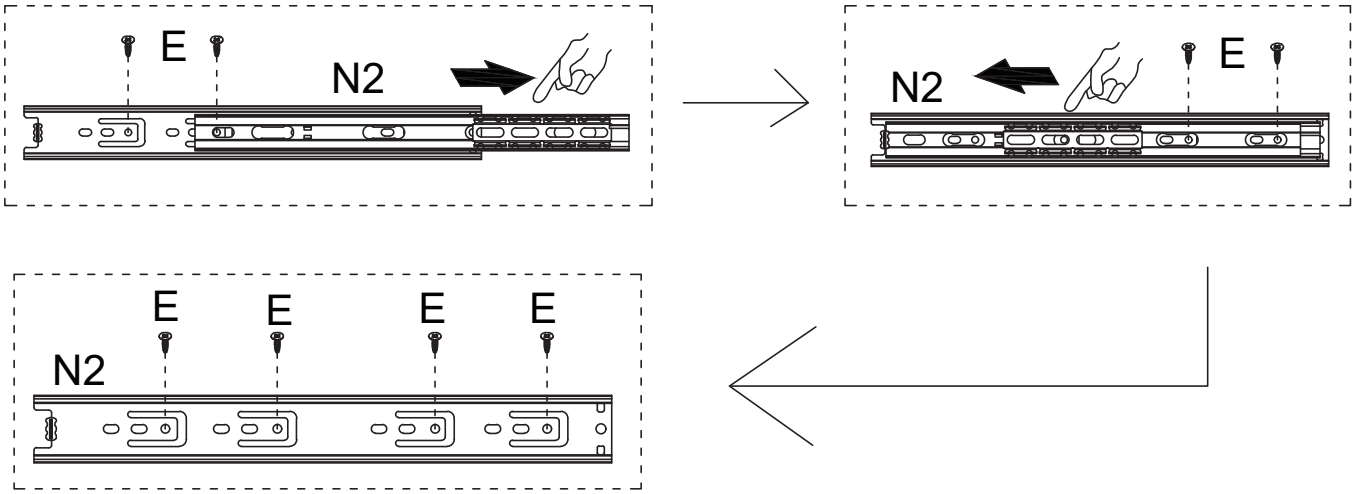


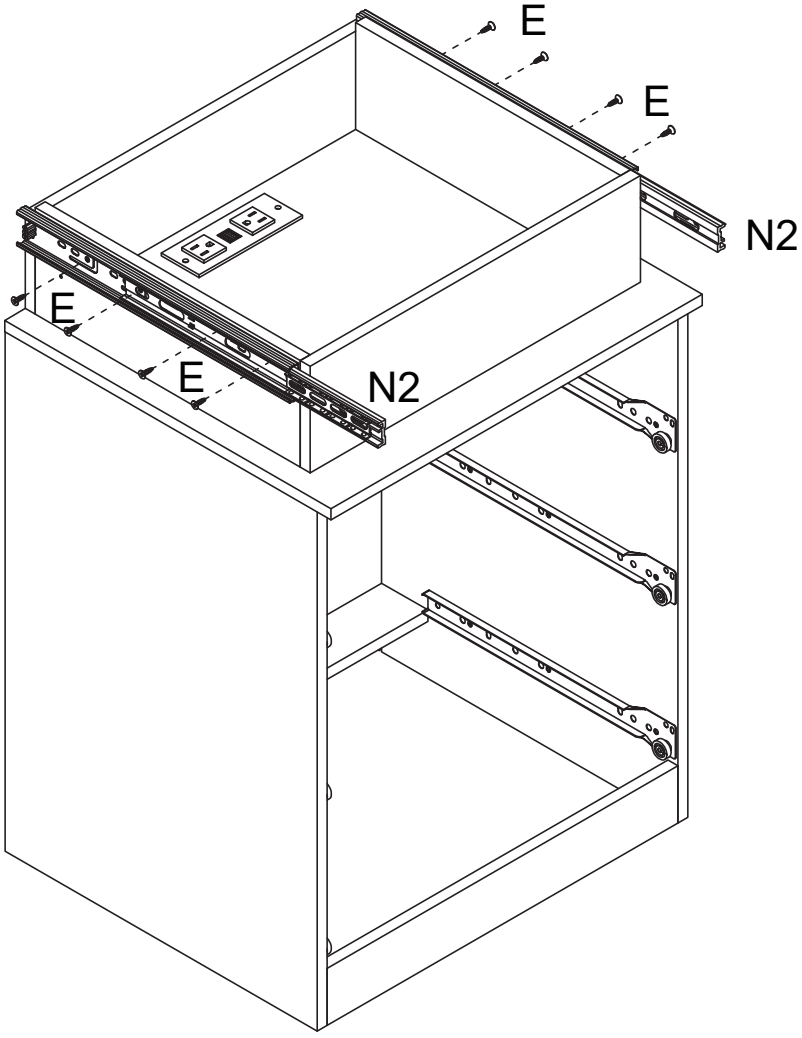
13

N x2




E x8
N2 x2


E
N2
N2
E
E
E
E
E
N2


E
E
N2
E
E
N2

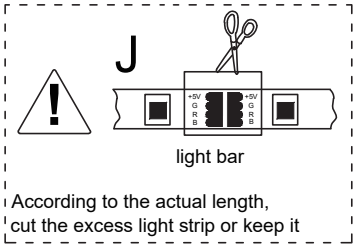
H x1

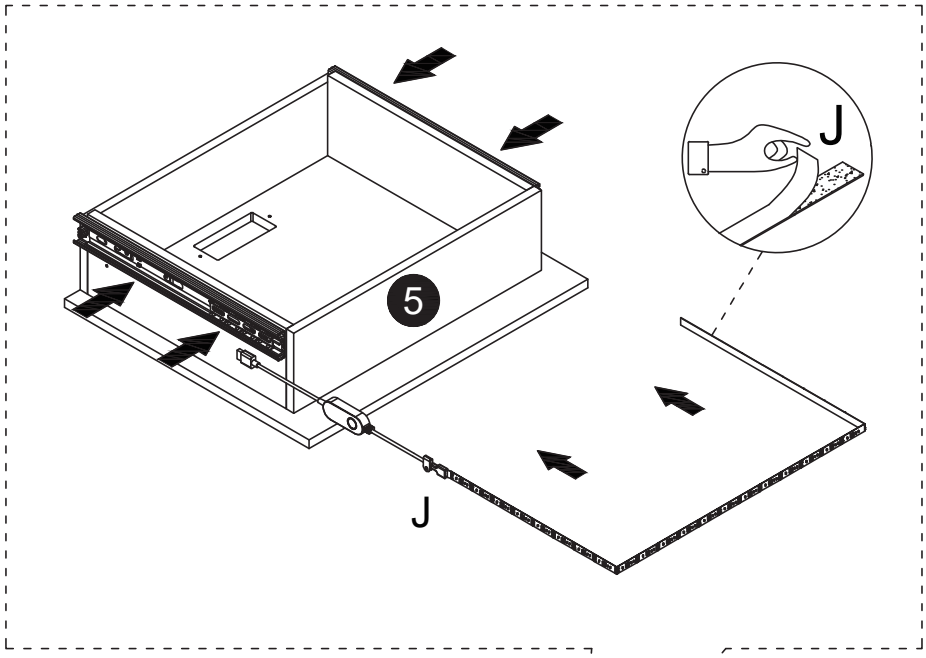


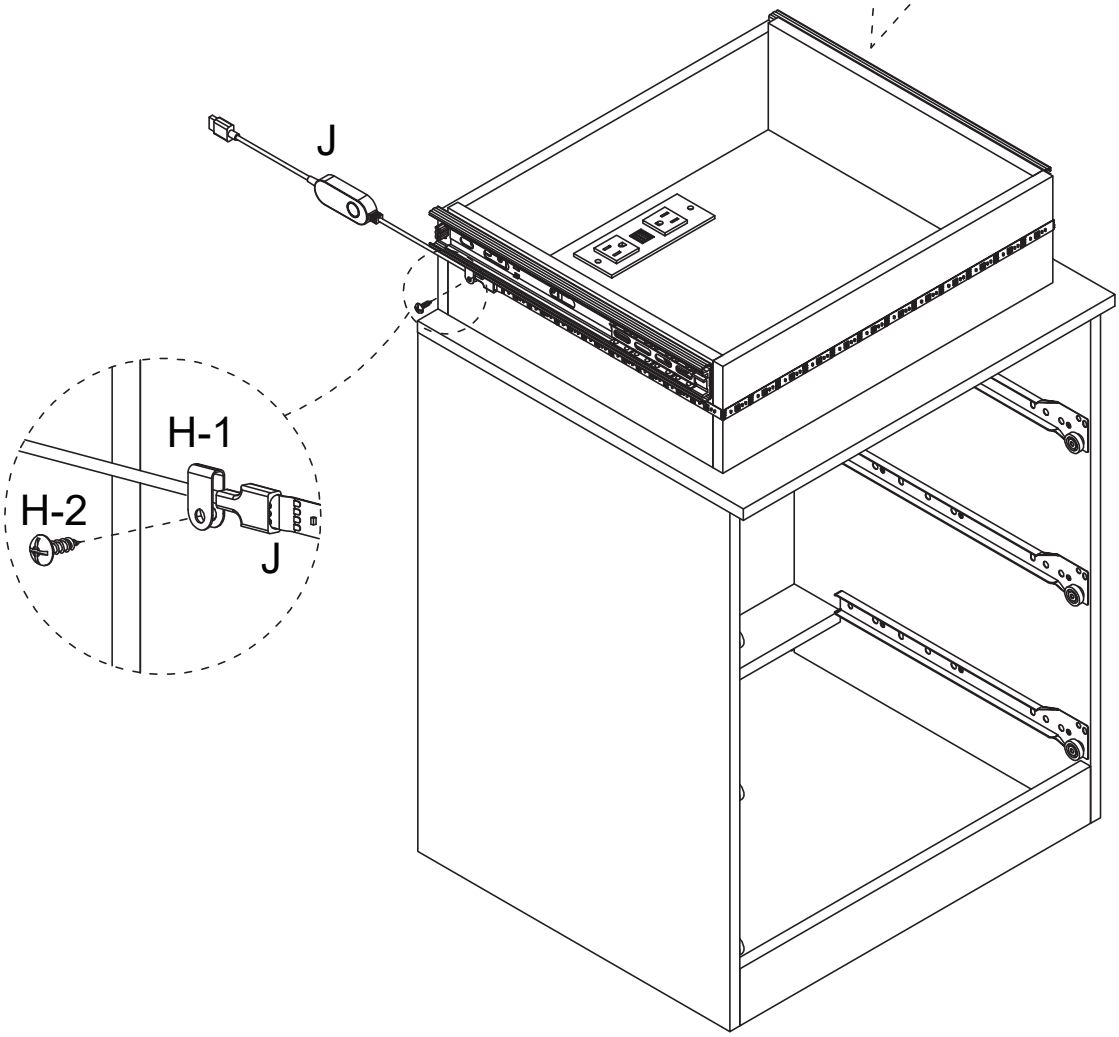
H-1 H-2

J x1



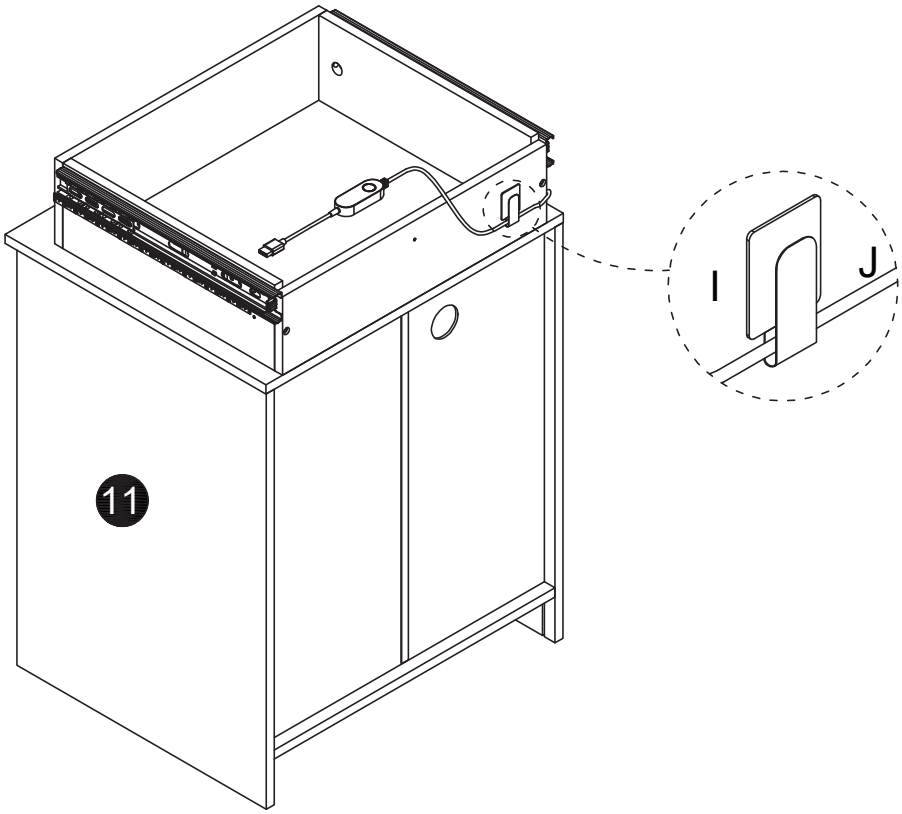

J
+5V
G
R
B
+5V
G
R
B
light bar
According to the actual length,
cut the excess light strip or keep it


5
J
J



J
H-1
H-2
J

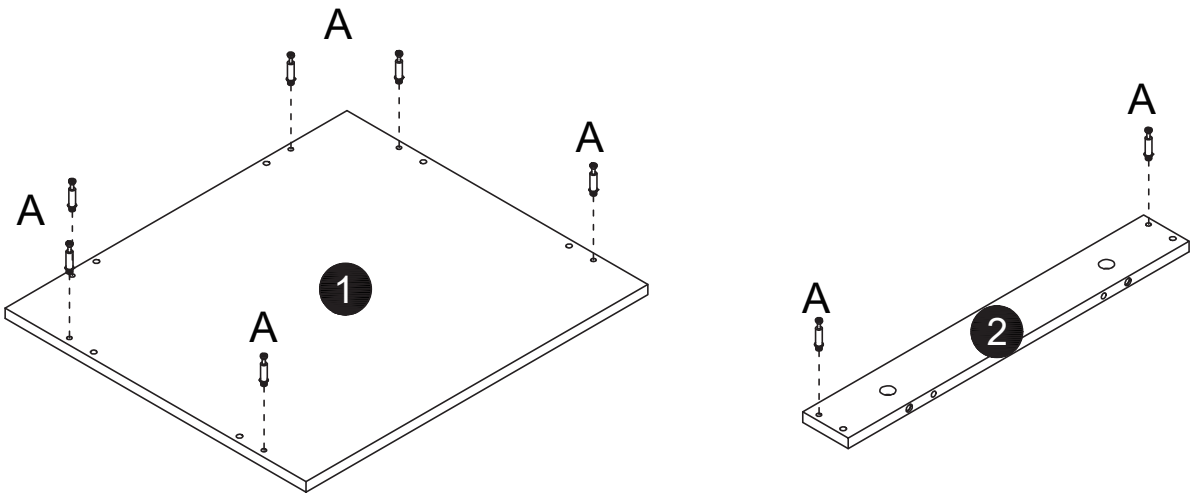
I x1





A x8



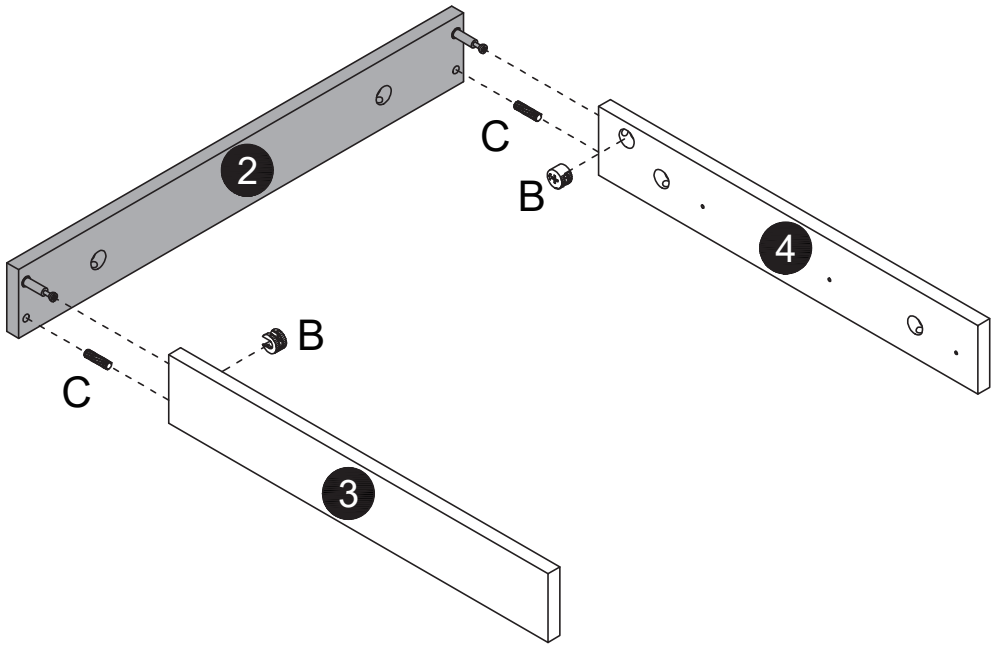


B x2



C x2



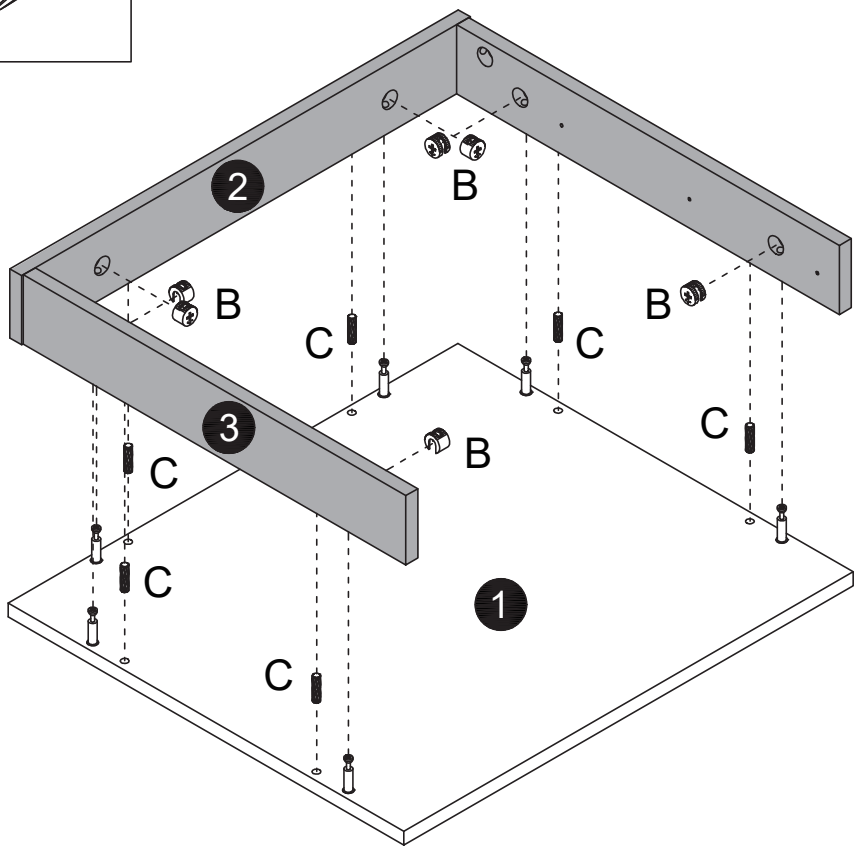


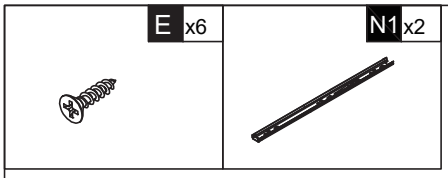
B x6

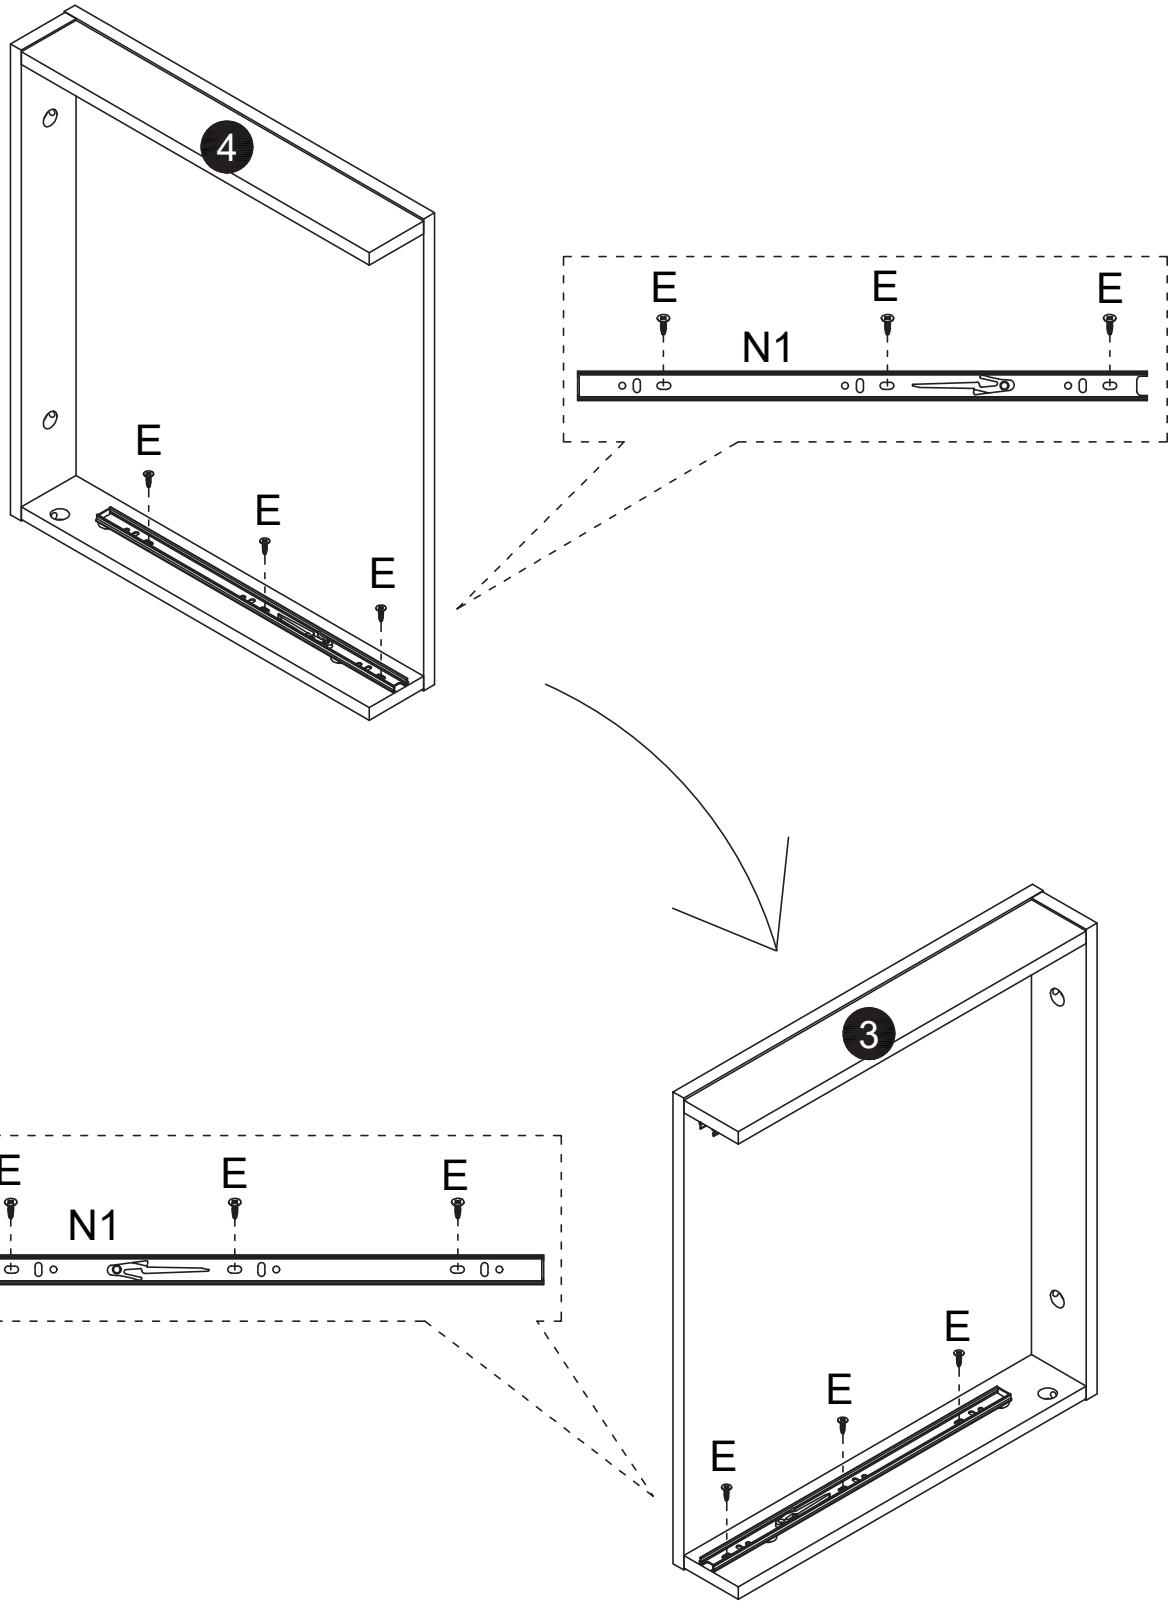


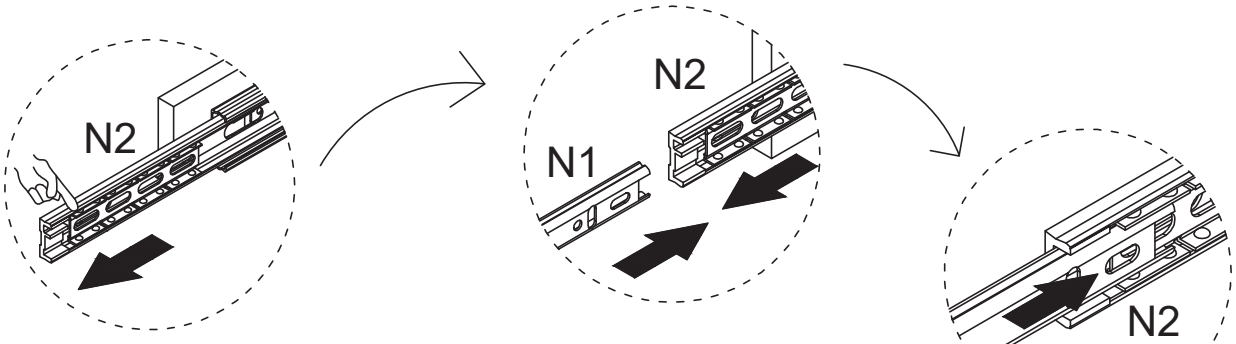
C x6

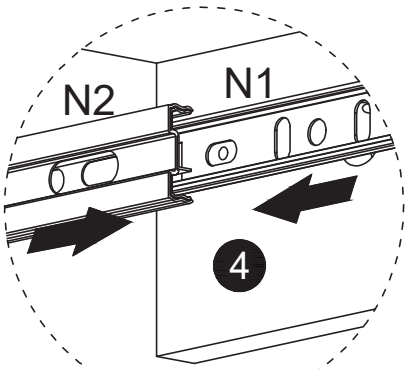


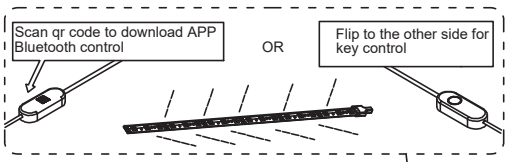


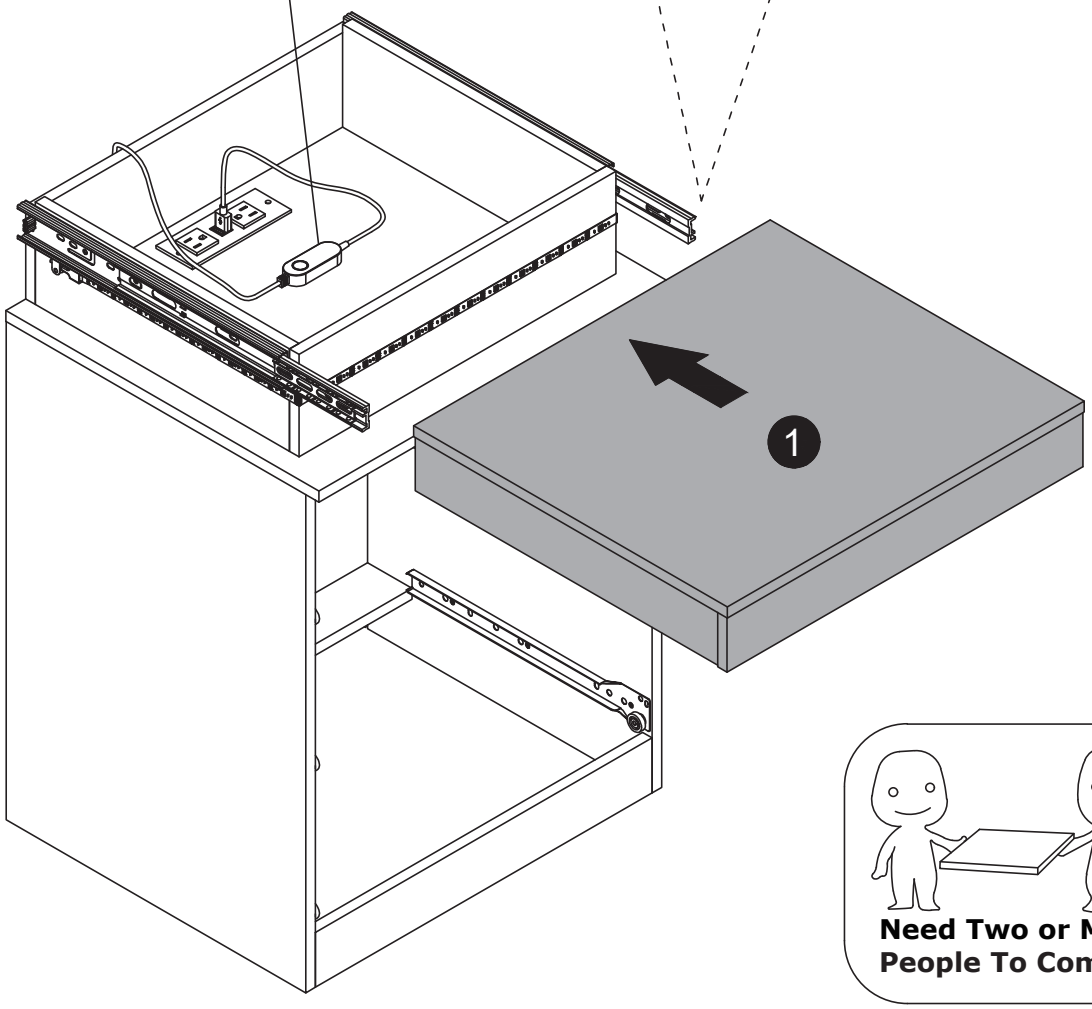

E x6
N1 x2


4
E
E
E
E
E
E
N1
3
E
E
E
E
E
E
N1

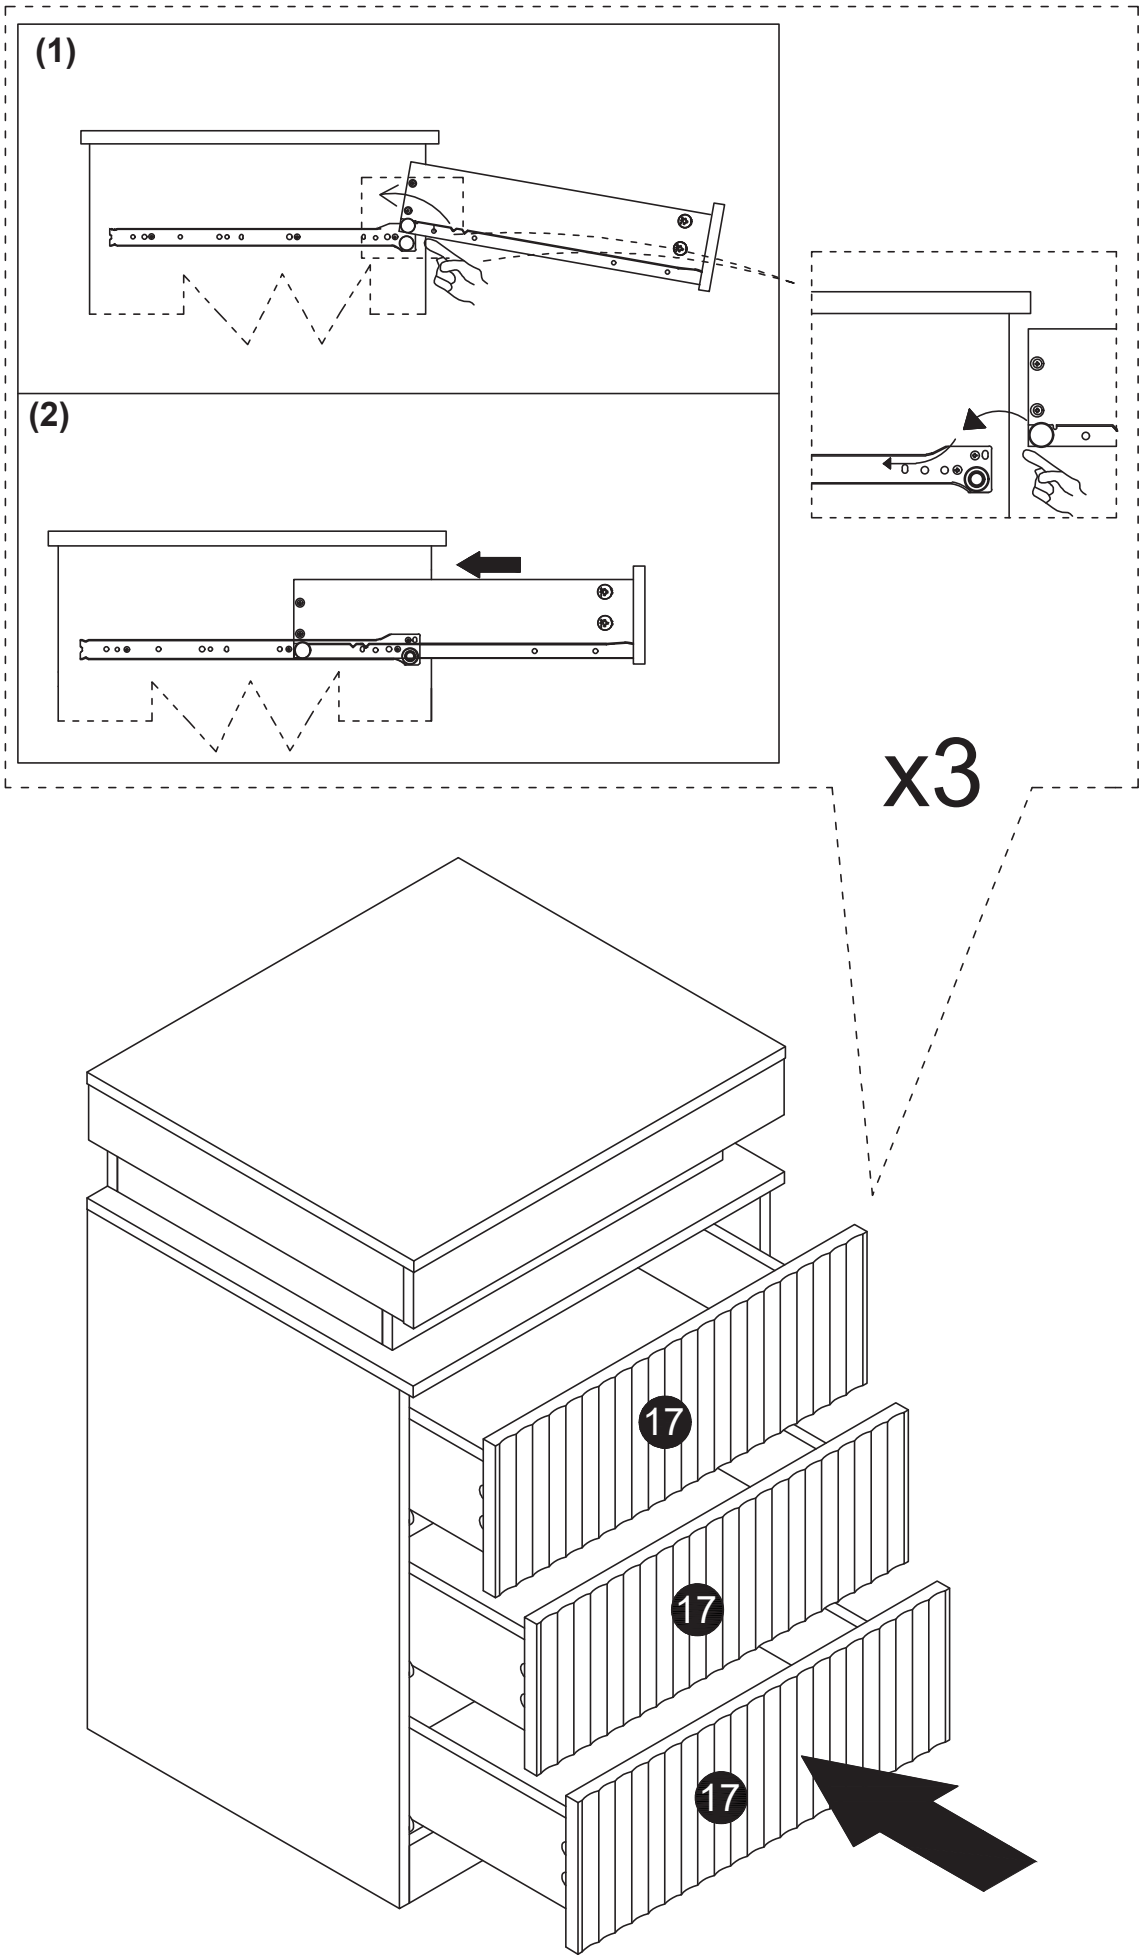

N2
N2
N1
N2
N1


N2
N1
4


Scan qr code to download APP
Bluetooth control
OR
Flip to the other side for
key control


1

Need Two or More
People To Complete


(1)
(2)
x3
17
17
17

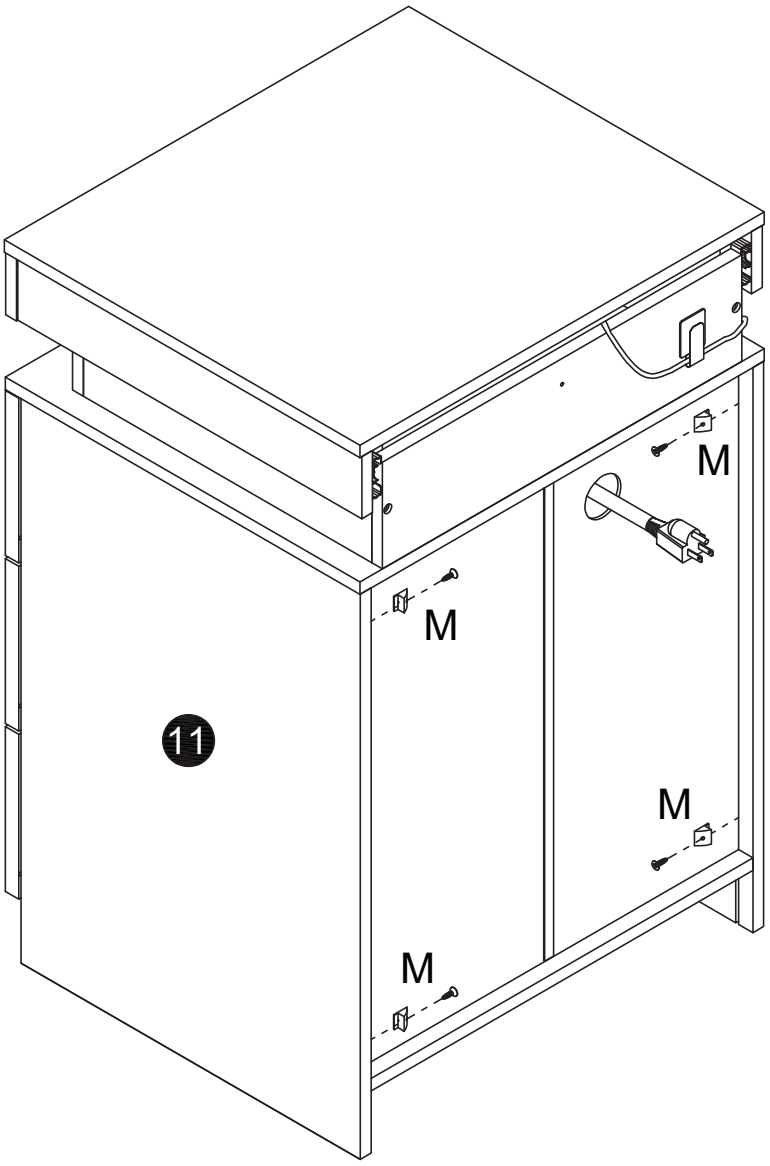
M x4

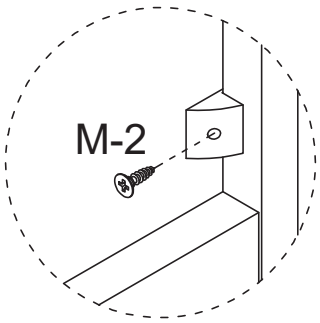


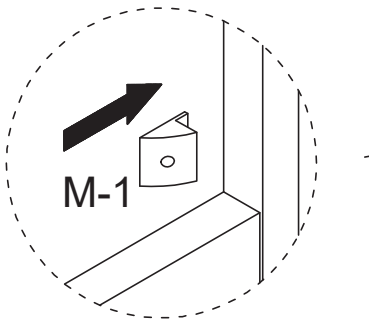
M-1

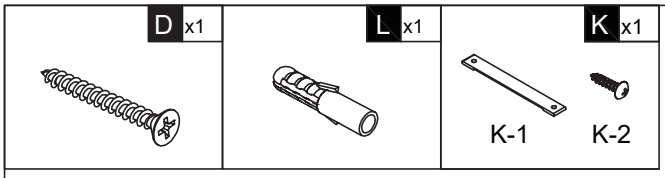


M-2

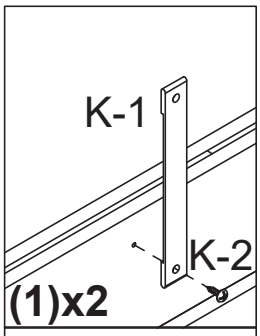




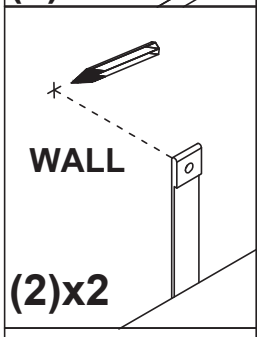




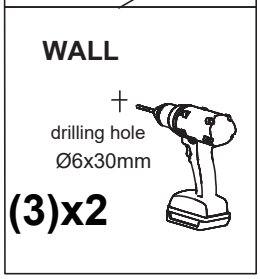
Done



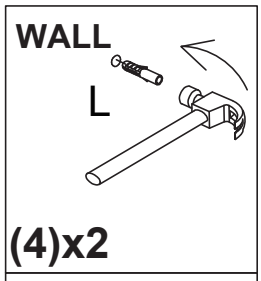
First fix the anti-rewind screw in the reserved hole of the product.



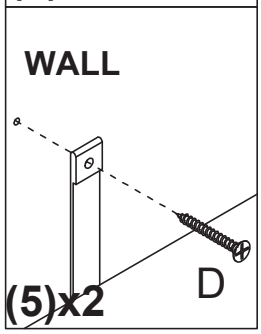
then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.



Then use a tape drill to make holes in the wall that are suitable for the product screws.



Then,put the expansion bolt into the hole



Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

