wayfair

ASSEMBLY INSTRUCTION
INSTRUCTION D'ASSEMBLAGE

DRESSER 4 DRAWER/ COMMODE A 4 TIROIRS


Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.
Merci d'avoir acheté ce produit de qualité. Vérifiez avant le montage que vous avez toutes les pièces et fixations. Les pièces qui semblent manquer se trouvent souvent dans les matériaux d'emballage. Si vous n'avez pas toutes les pièces de la liste, demandez à votre détaillant et nous vous les enverrons immédiatement.

It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

Il est recommandé de placer des coussins protecteurs sous tous les pieds et toutes les bases des meubles pour éviter d'endommager ou d'égratigner les planchers en bois ou autres surfaces dures, et pour limiter l'empreinte et empêcher la décoloration quand les meubles reposent sur la moquette.

Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.

Le matériel peut se desserrer au fil du temps. Vérifiez périodiquement que toutes les connexions sont serrées. Serrer à nouveau si nécessaire.

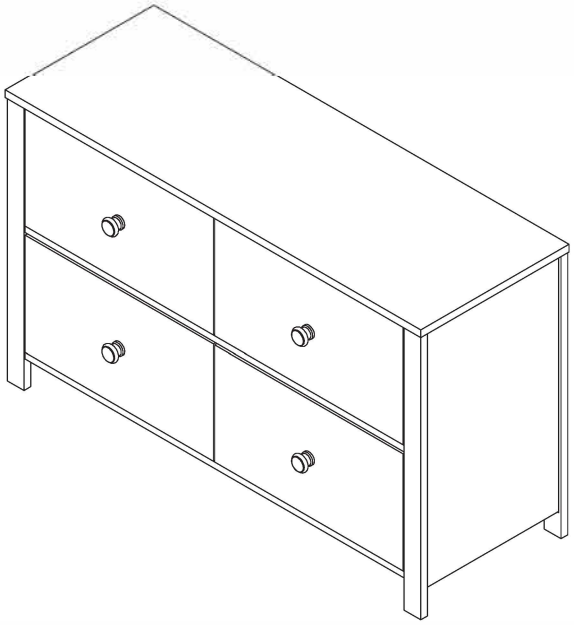

HARDWARE LIST / LISTE DE QUINCAILLERIE

NO.	SKETCH / ESQUISSE	DESCRIPTION / LA DESCRIPTION	SIZE / TAILLE	QTY / QTÉ
1		THMS	M4 x 38mm	4 PCS
2		HANDLE-9962		4 PCS
3		ANTI-TIPPING RESTRAINT		1 SET


*THE ABOVE HARDWARE ARE PACKED IN #B2048-DR FOR ASSEMBLY
LES ÉLÉMENTS DE QUINCAILLERIE CI-DESSUS SONT EMBALLÉS DANS LA RÉFÉRENCE #B2048-DR POUR L'ASSEMBLAGE

** Screwdriver (not provided) / Tournevis (non fourni) 

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED /
NE PAS SERRER LES BOULONS TANT QUE L'ASSEMBLAGE N'EST PAS COMPLÈTEMENT TERMINÉ


MADE IN MALAYSIA / FABRIQUÉ EN MALAISIE

STEP 1 / ÉTAPE 1

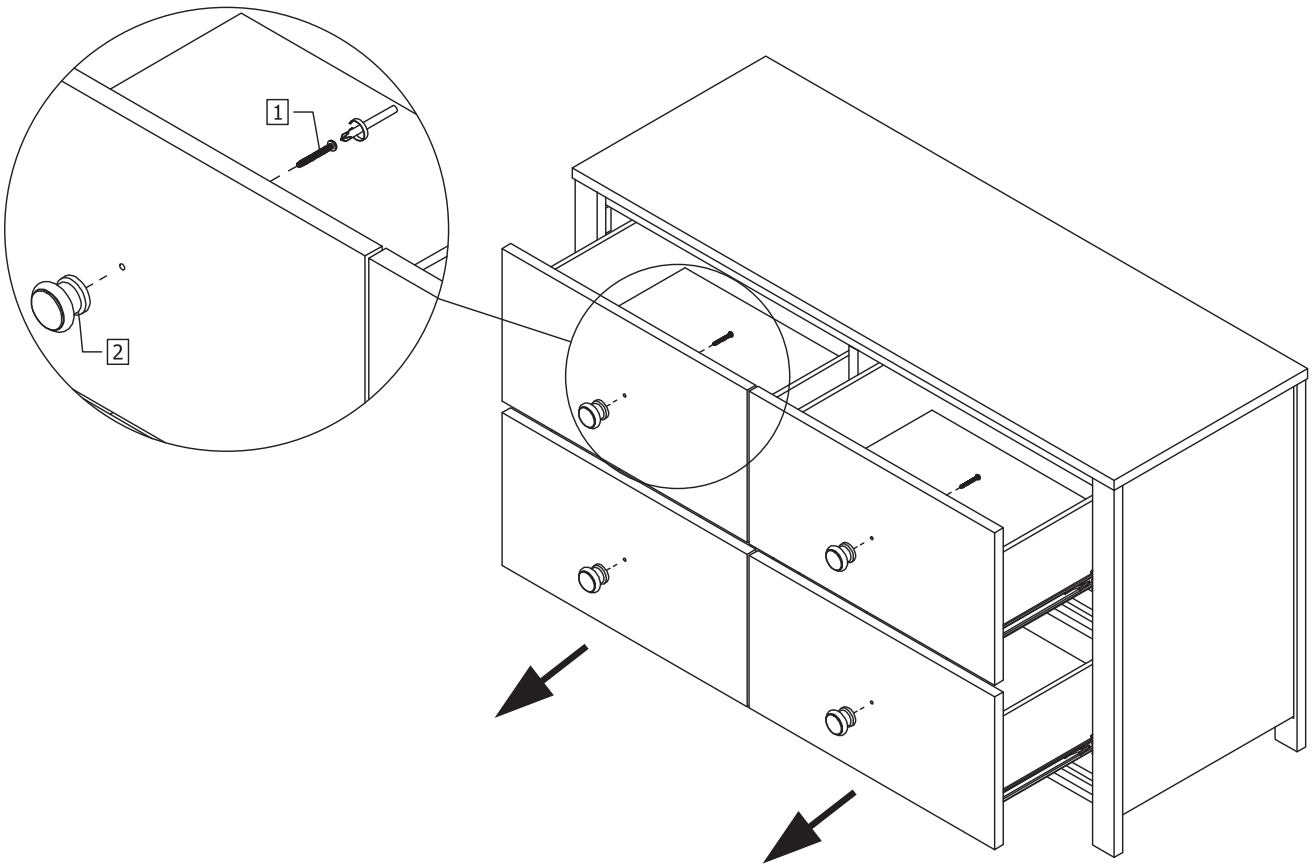

- Pull out the Drawer.
- Attach the Handle(2) to Drawer Front and tighten with the THMS M4 x 38mm(1) using a screwdriver.

COMPLETED /COMPLÉTÉ

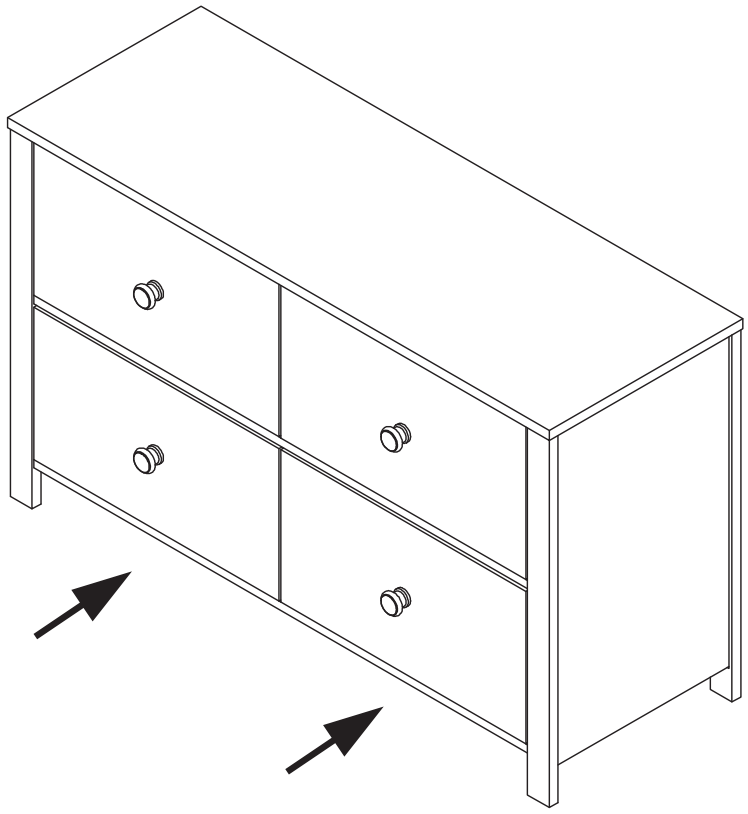

- After assembling the Handle(2), push the Drawer back in.

ATTENTION : To prevent tip-overs, this product must be attached to the wall using the Anti-Tipping Restraint (3) provided, as shown below.

