









ASSEMBLY INTRUCTIONS

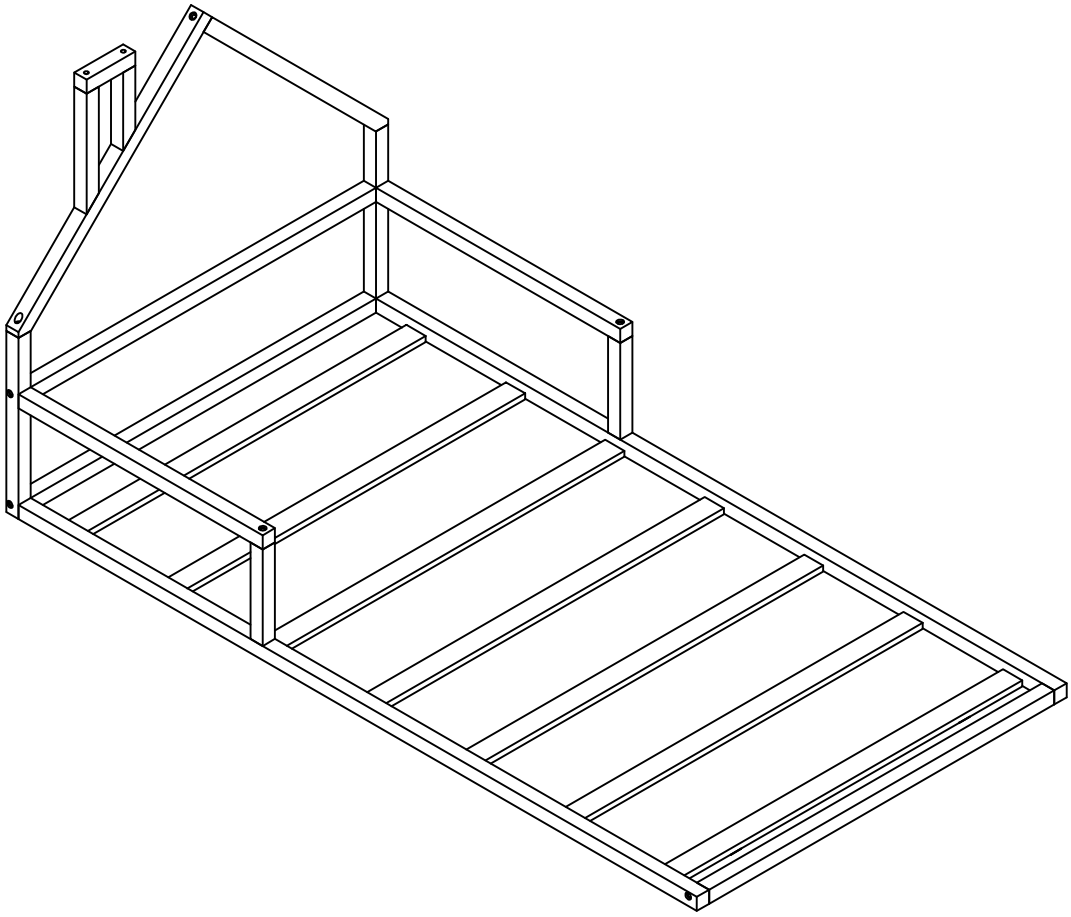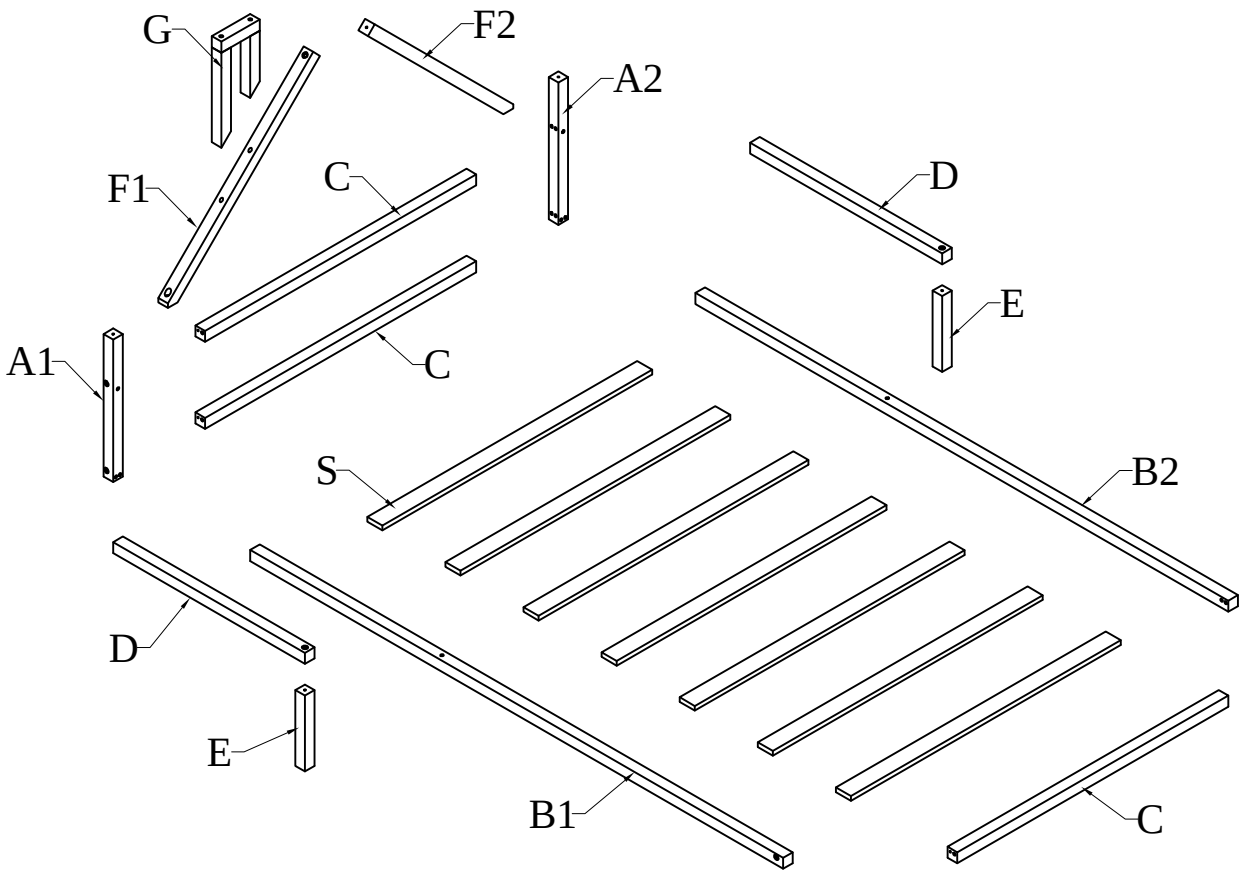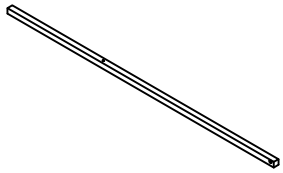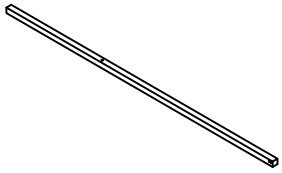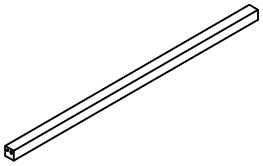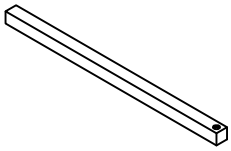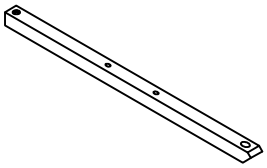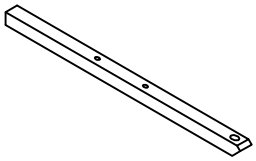




DETAIL VIEW




BOX

A1  Front leg - left (1pc)	A2  Back leg - left (1pc)	B1  Side rail - left (1pc)	B2  Side rail - right (1pc)
C  Horizontal rail (3pcs)	D  Handrails (2pcs)	E  Verticar rail (2pcs)	F1  Vertical bar - left (1pc)
F2  Vertical bar - right (1pc)	G  Chimney frame (1pc)	S  Slats (7pcs)	

HARDWARE LIST

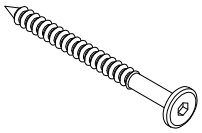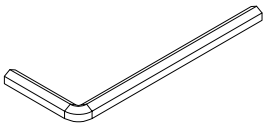
1  Hexagonal bolts catch wood Ø6 * 70 - 17pcs	2  Hexagonal bolts catch wood Ø6 * 60 - 2pcs	3  Wood dowel Ø8 * 30 - 8pcs	4  Allen key K4 - 1pc



Asembly Tools Required (Not Included)

STEP 1


1	3
	
Hexagonal bolts catch wood Ø6 * 70 - 4pcs	Wood dowel Ø8 * 30 - 4pcs

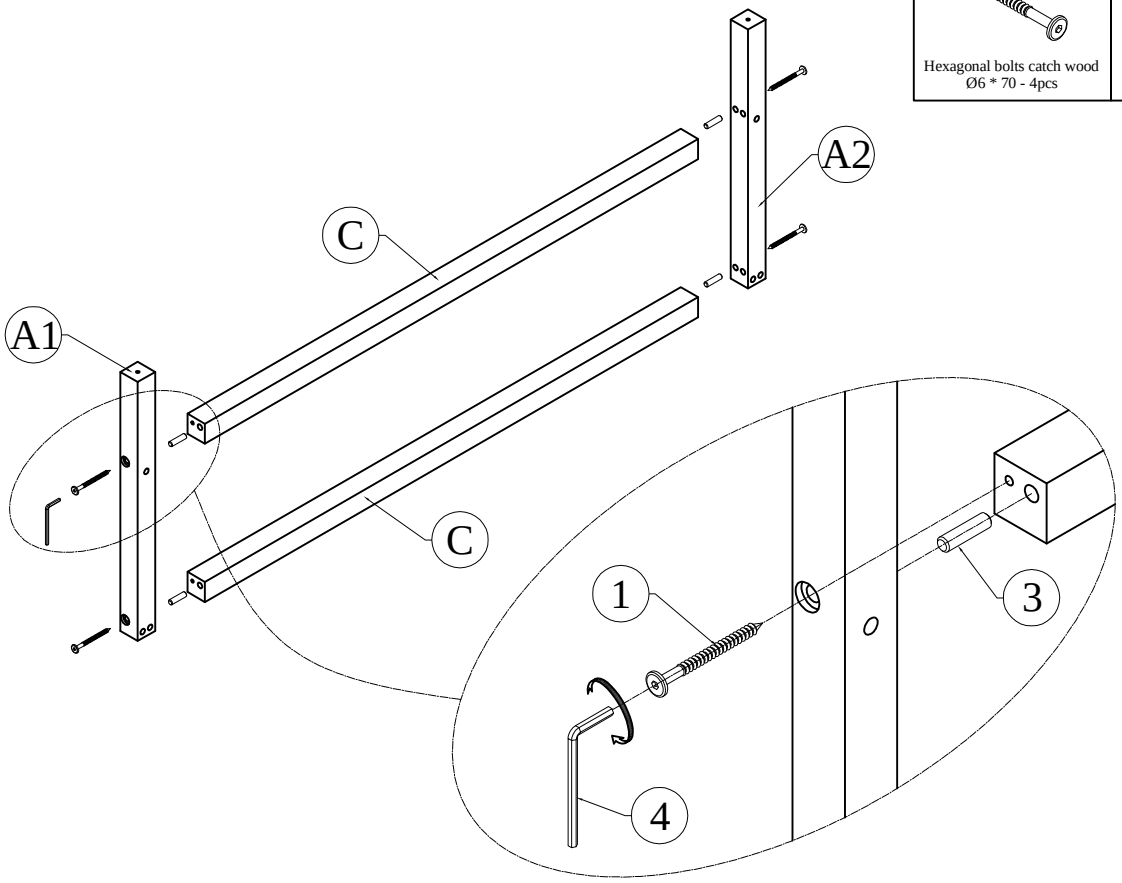


STEP 2

1

Hexagonal bolts catch wood Ø6 * 70 - 1pc

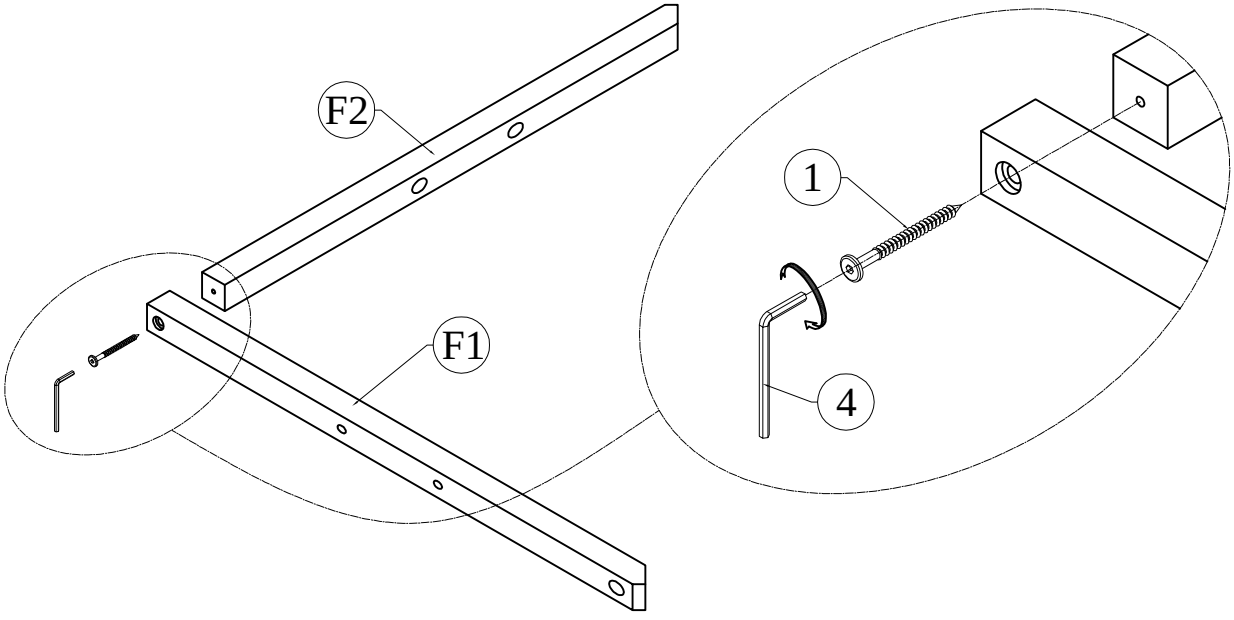

STEP 3

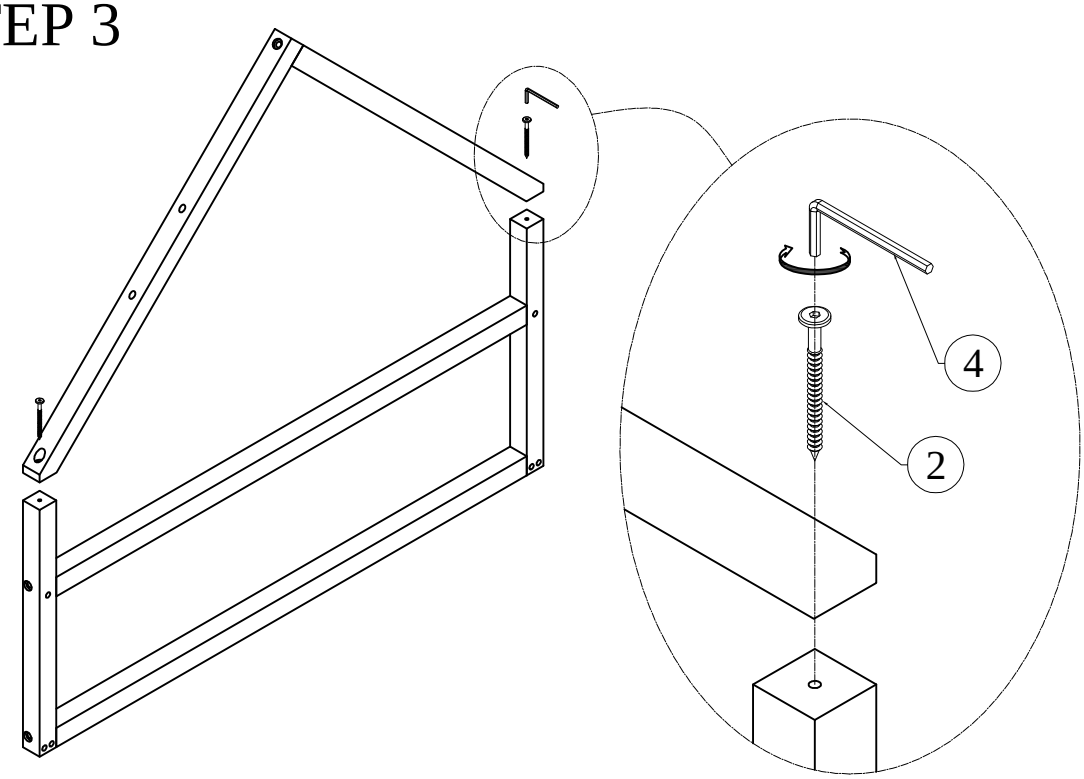


2



Hexagonal bolts catch wood
Ø6 * 60 - 2pcs

STEP 4

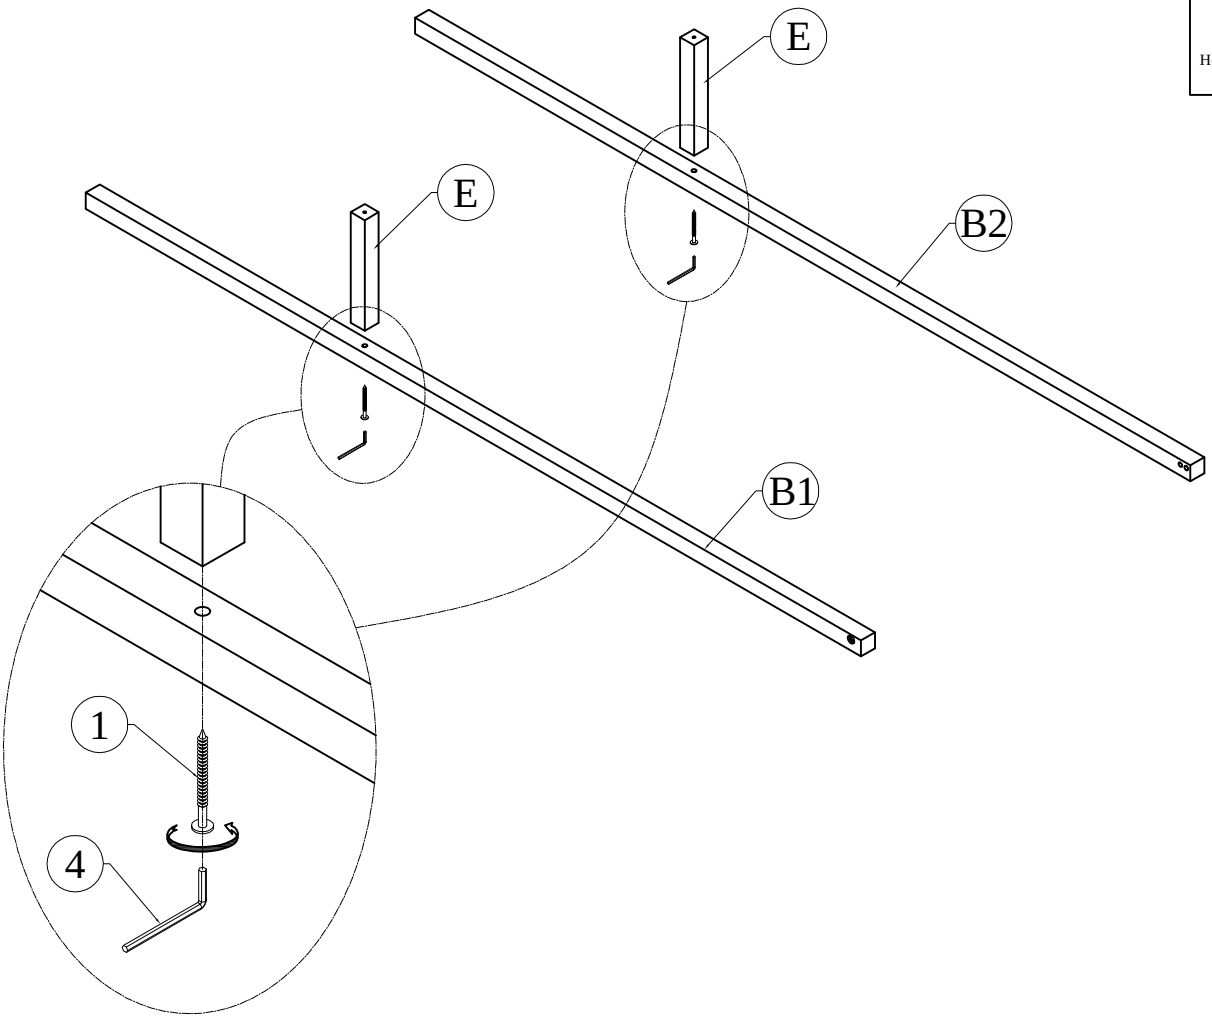

1



Hexagonal bolts catch wood
Ø6 * 70 - 2pcs


STEP 5

1	3
	
Hexagonal bolts catch wood Ø6 * 70 - 2pcs	Wood dowel Ø8 * 30 - 2pcs

STEP 6

1

Hexagonal bolts catch wood Ø6 * 70 - 2pcs

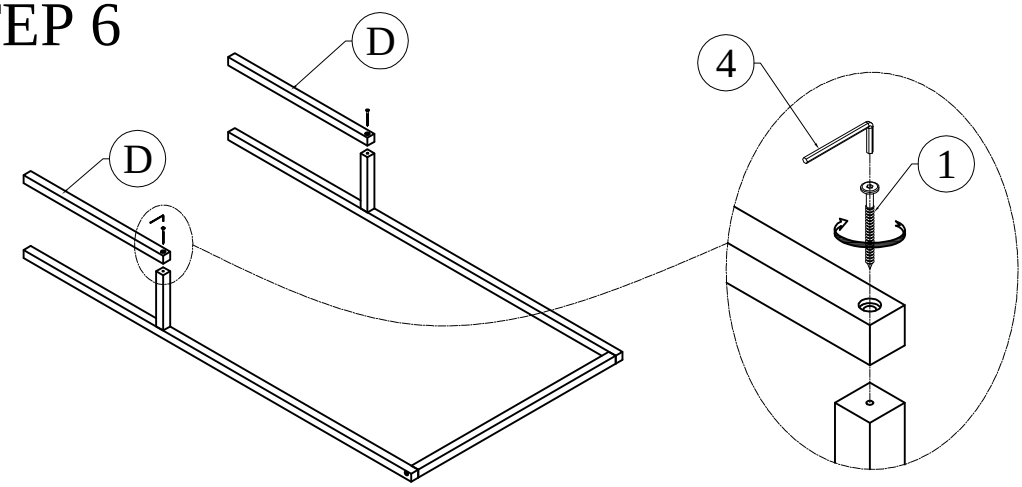

STEP 7

1	3
	
Hexagonal bolts catch wood Ø6 * 70 - 4pcs	Wood dowel Ø8 * 30 - 2pcs


STEP 8

The distance between the slats is 9-1/4 inch

1




Hexagonal bolts catch wood
Ø6 * 70 - 2pcs

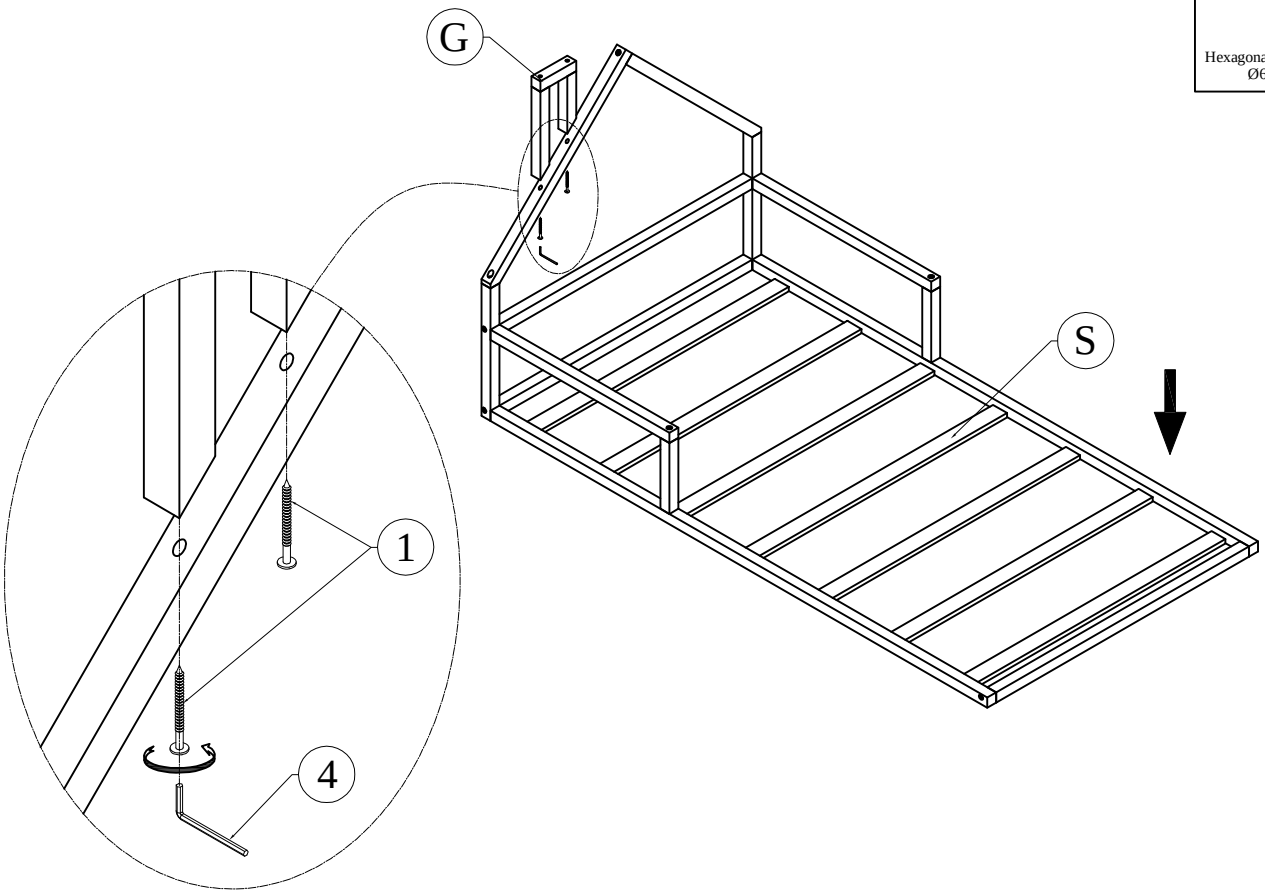

COMPLETED

OPTION 1

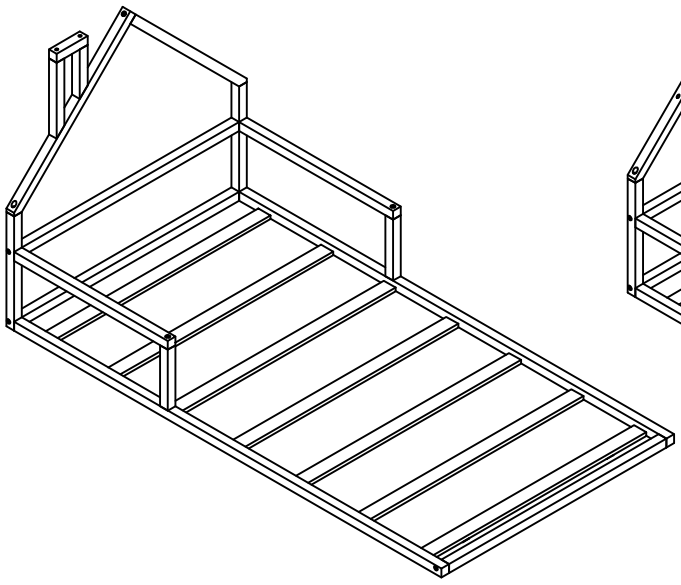

OPTION 2

