
domi
outdoor living

# 11'× 13' Metal Patio Gazebo

# ASSEMBLY MANUAL

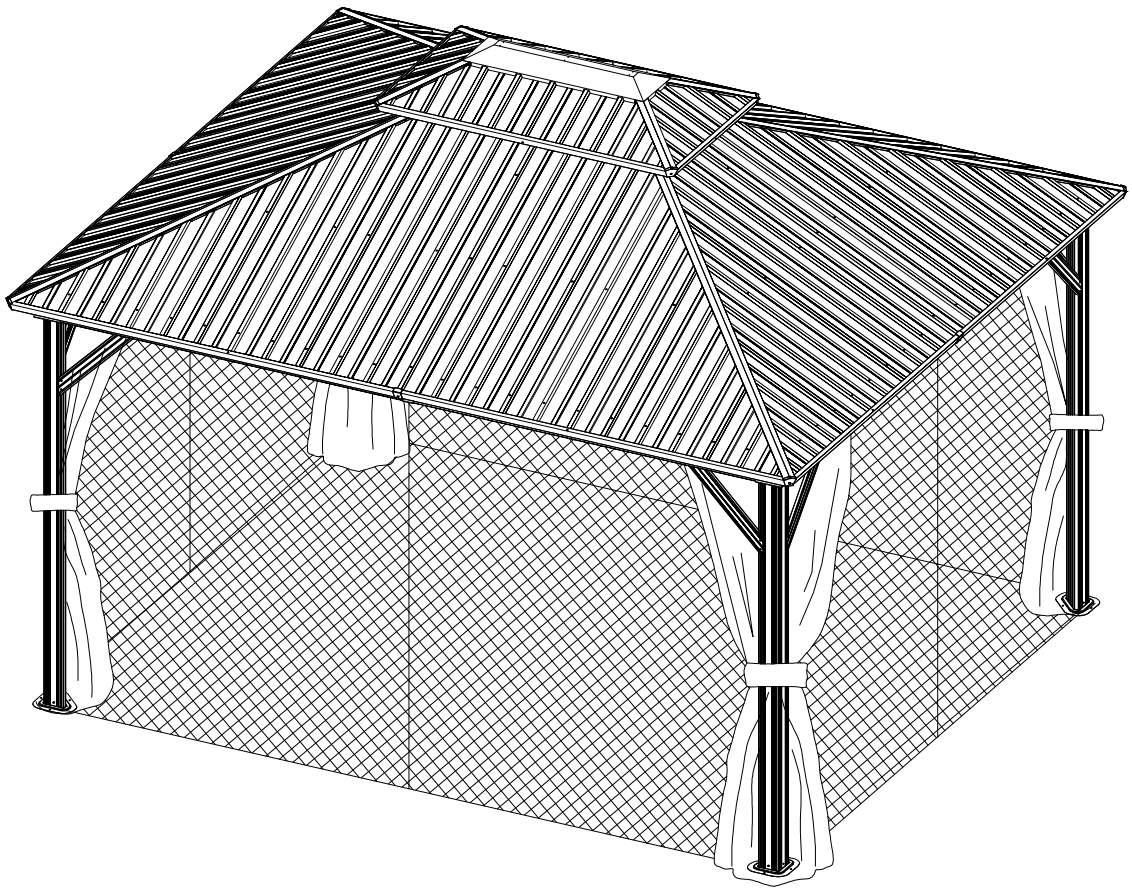

## MODEL# : LGMF1805

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2024–2026 domi outdoor living LLC. All Rights Reserved.

## *Pre-assembly*




1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.

## *Warning & Attention*

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;


-It would be much easier to assemble the product with three or more people;


-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

⚠Use bolts to secure the frame to the ground to against the strong wind.

IMPORTANT: A gaze may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.


1

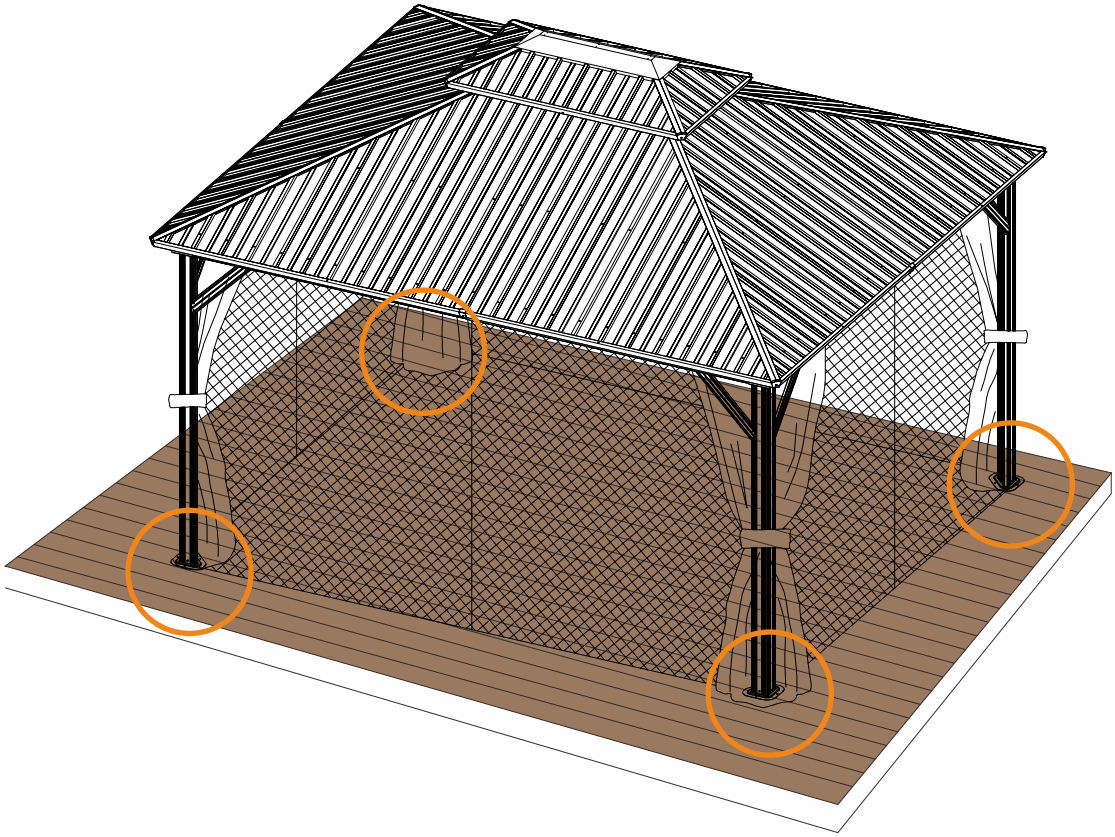





×12


If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the gazebo.

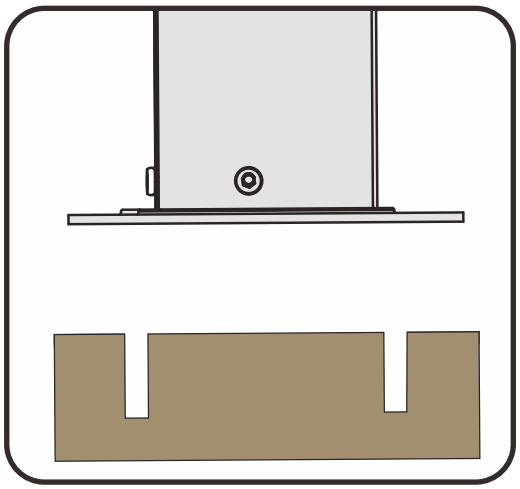

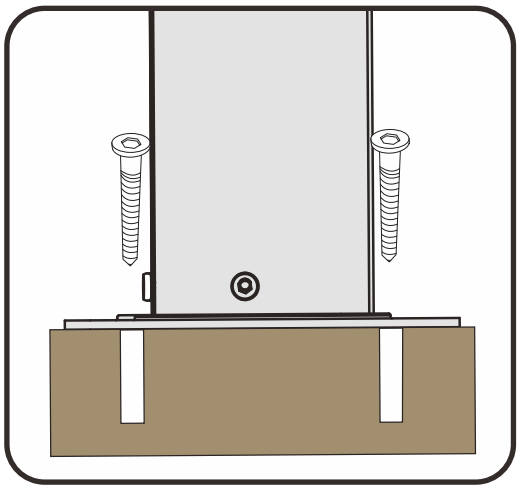

## 2

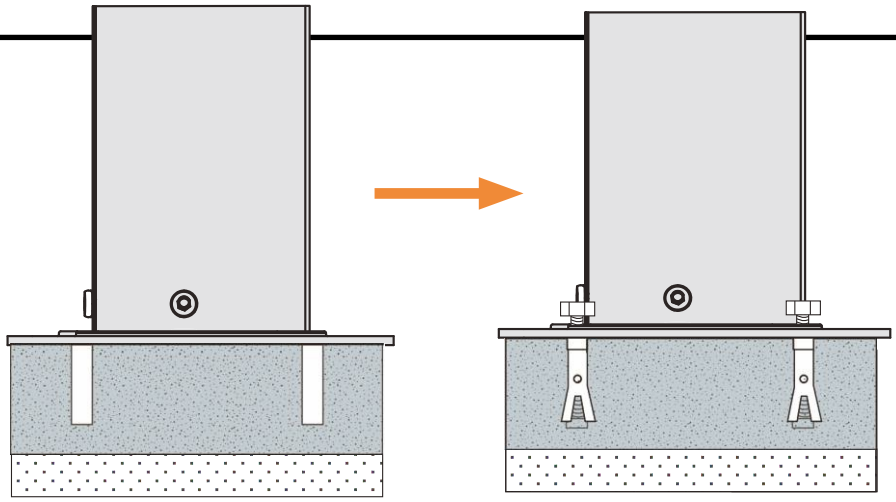


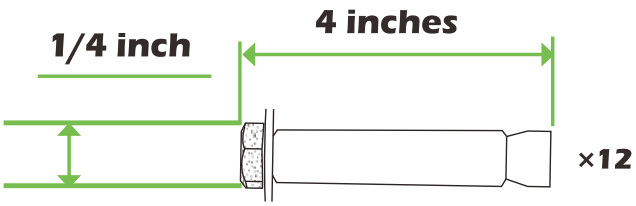



If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo

## 3



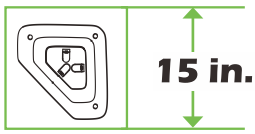





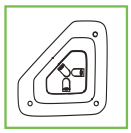



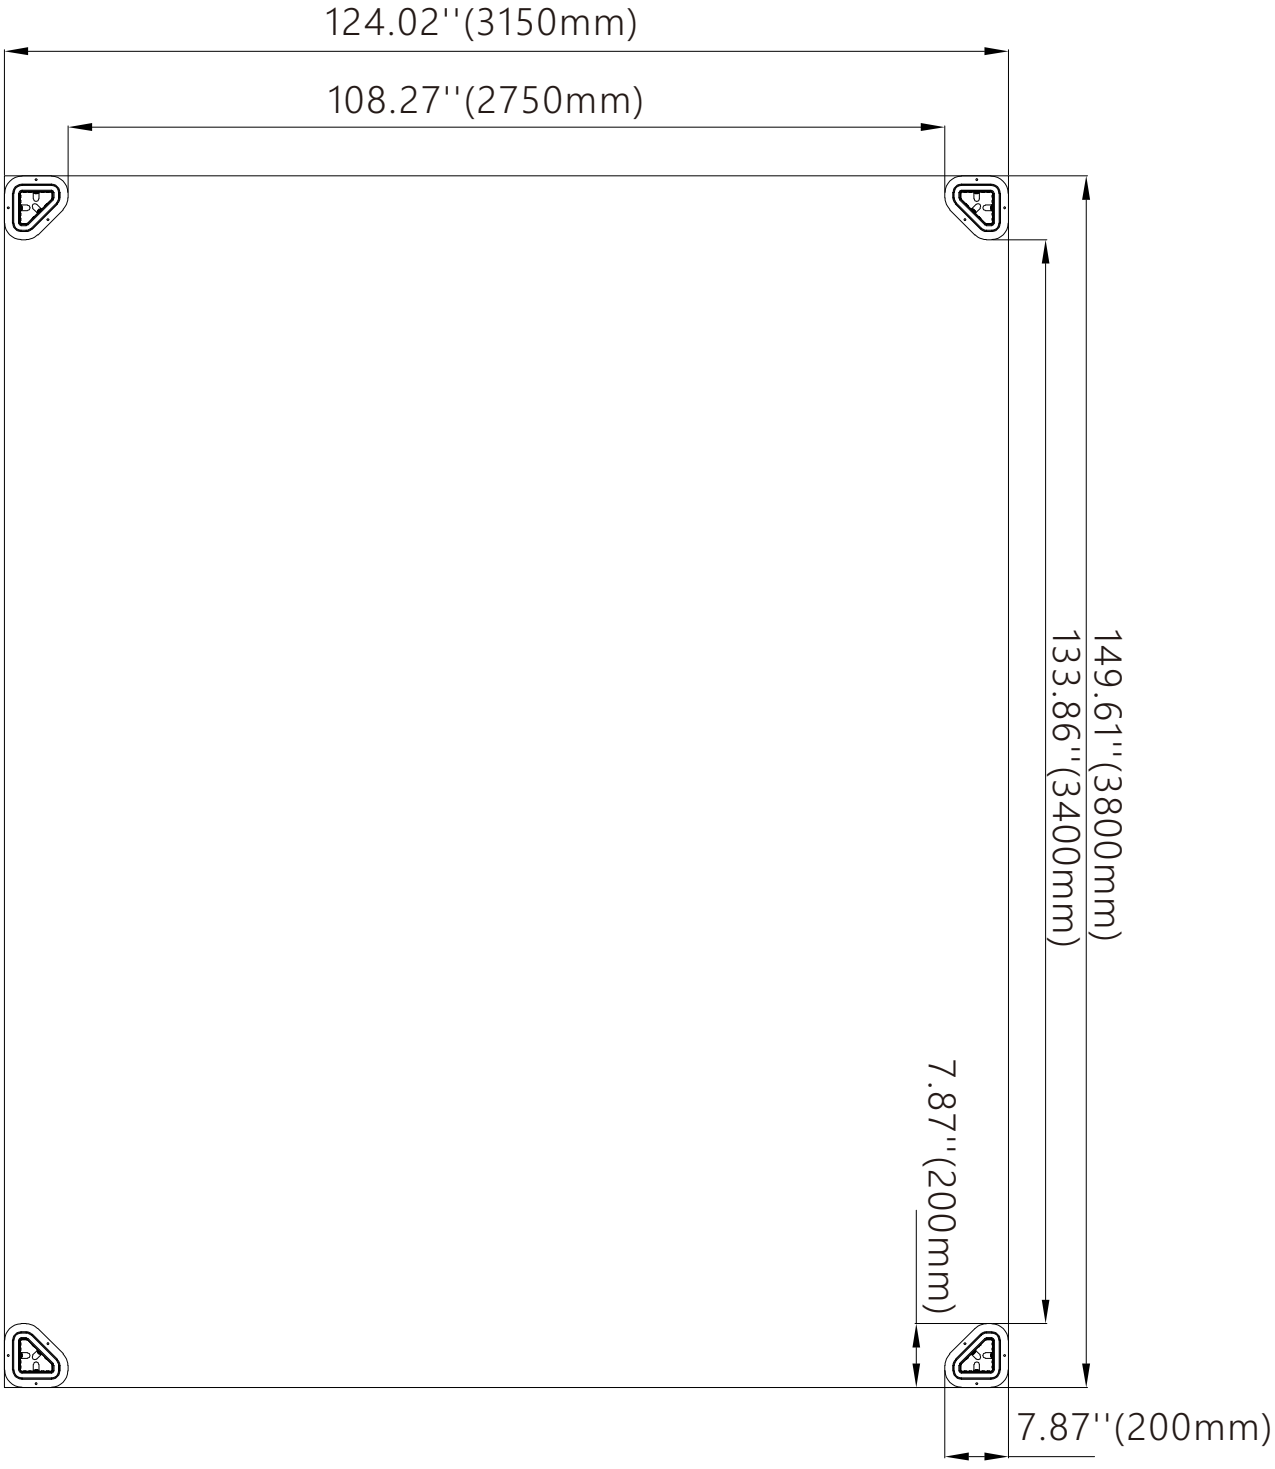
Or you can make a concrete footing for gazebo, **15×15×15 inches** is recommended.use expansion bolts to mount the pergola like (2) shows.

**IMPORTANT:**
**Anchor is not recommended**

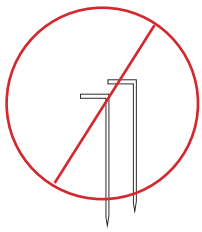

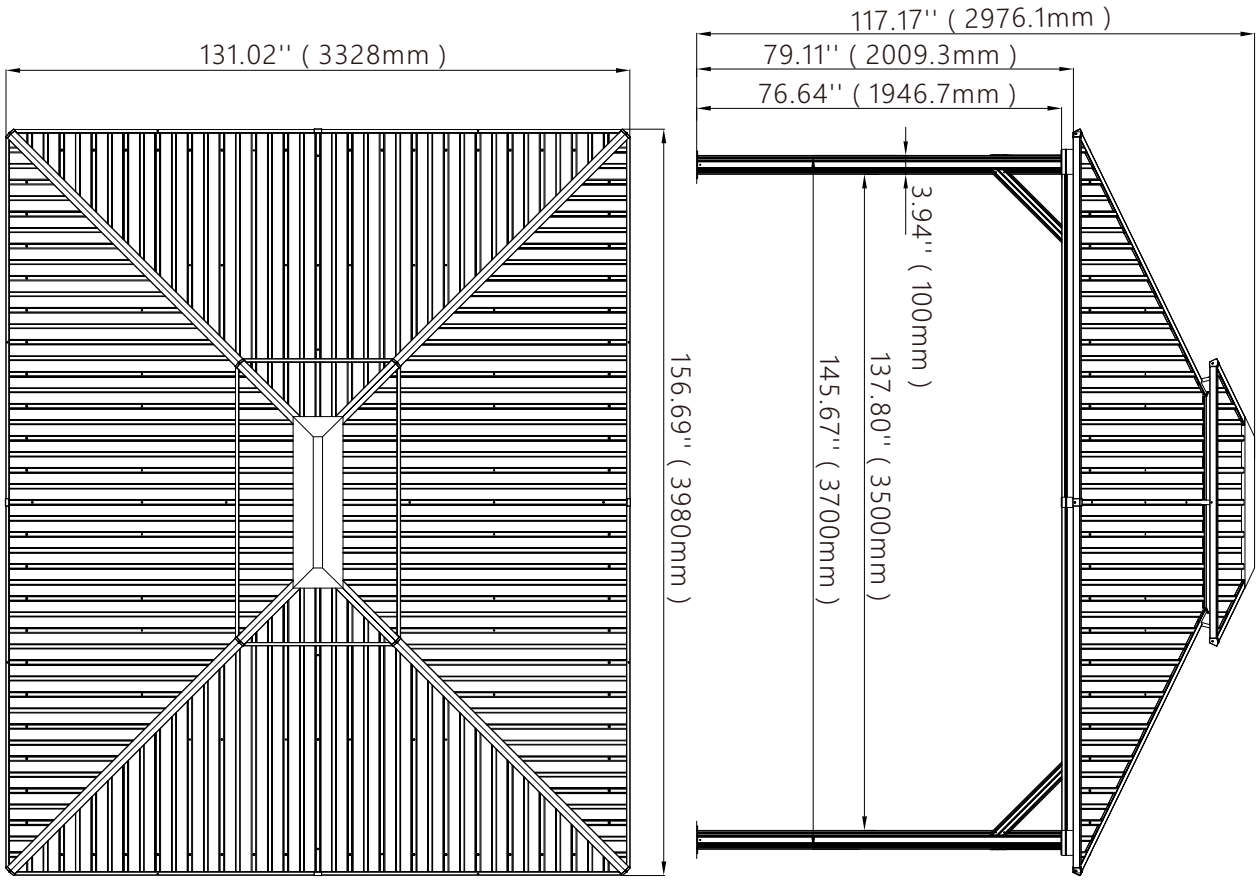

131.02'' ( 3328mm )
156.69'' ( 3980mm )
117.17'' ( 2976.1mm )
79.11'' ( 2009.3mm )
76.64'' ( 1946.7mm )
3.94'' ( 100mm )
137.80'' ( 3500mm )
145.67'' ( 3700mm )

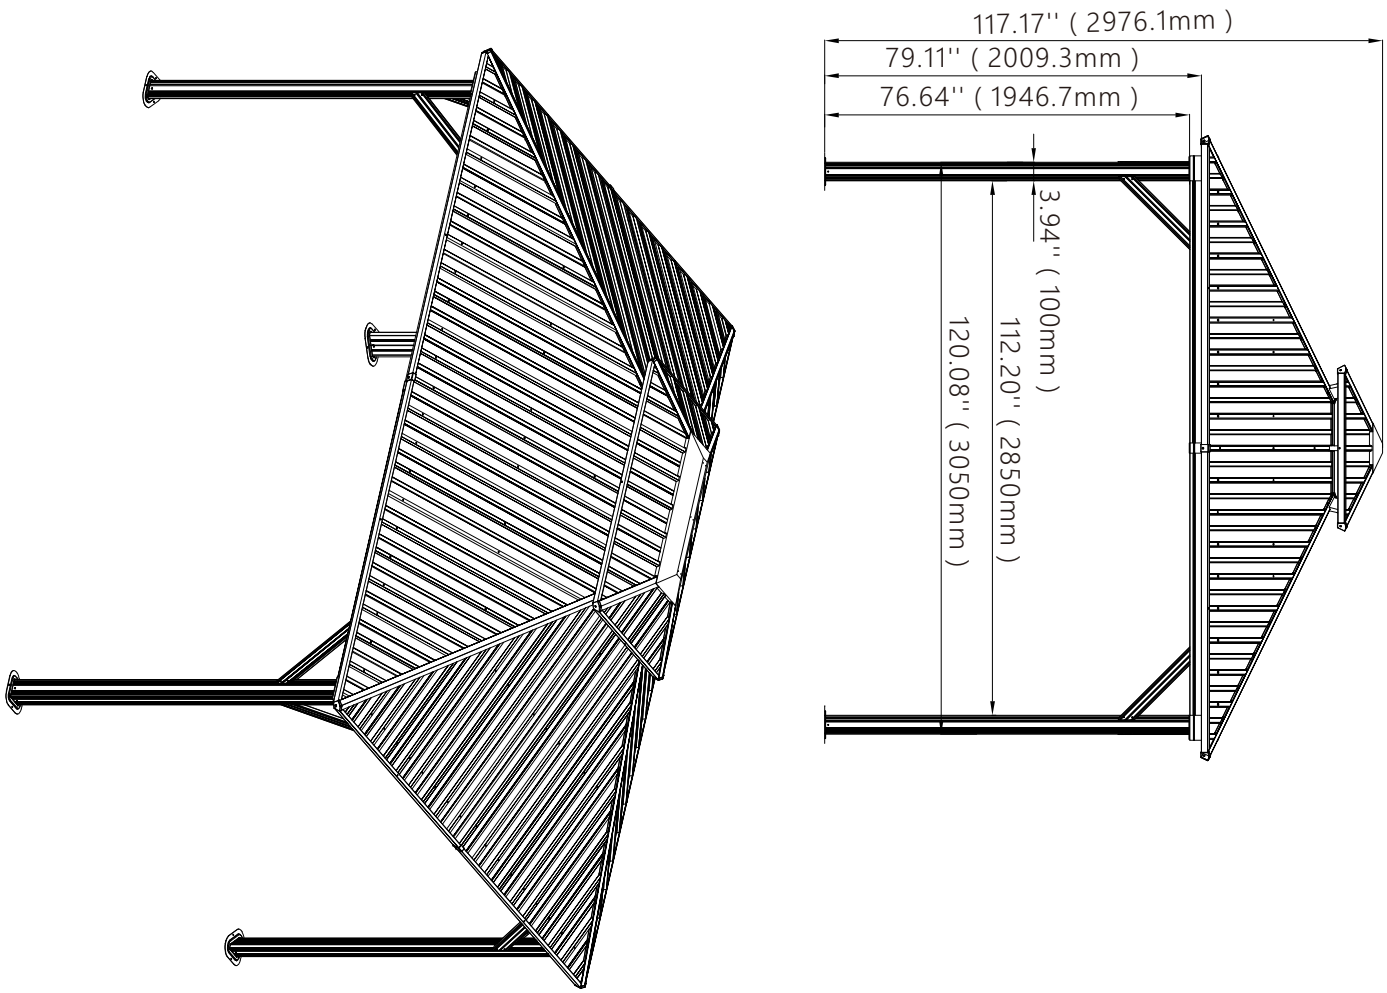
117.17'' ( 2976.1mm )
79.11'' ( 2009.3mm )
76.64'' ( 1946.7mm )
3.94'' ( 100mm )
112.20'' ( 2850mm )
120.08'' ( 3050mm )



124.02''(3150mm)
108.27''(2750mm)
149.61''(3800mm)
133.86''(3400mm)
7.87''(200mm)
7.87''(200mm)



A 4x Post




C 2x Beam



C1 2x Beam



D 2x Beam




D1 2x Beam




E 4x Corner Roof Tube




E1 4x Finishing Bar




E2 4x Middle Roof Tube



F 4x Solidifying Bar



G 4x Solidifying Bar




H 2x Finishing Bar



H1 2x Finishing Bar



J 2x Finishing Bar




J1 2x Finishing Bar



K 2x Finishing Bar




K1 2x Finishing Bar




K2 2x Finishing Bar



K3 2x Finishing Bar

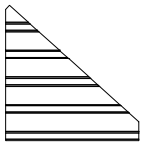


L1 2x Roof Panel

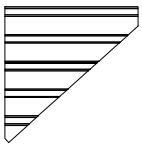


L2 2x Roof Panel



M1 2x Roof Panel

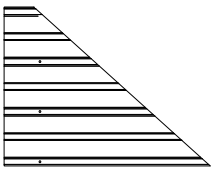


M2 2x Roof Panel

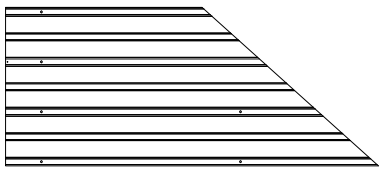


M3 2x Roof Panel




M4 2x Roof Panel

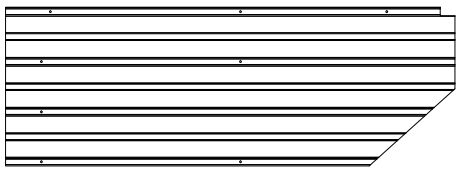

M5 2x Roof Panel

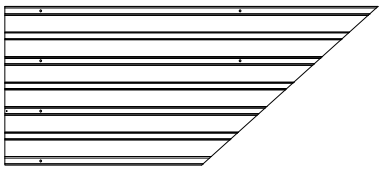

M6 2x Roof Panel

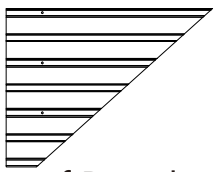


M7 2x Roof Panel




M8 2x Roof Panel



N1 2x Roof Panel

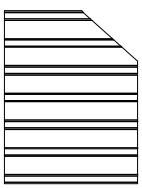


N2 2x Roof Panel

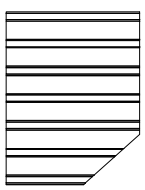


N3 2x Roof Panel




N4 2x Roof Panel

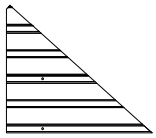


P1 2x Roof Panel

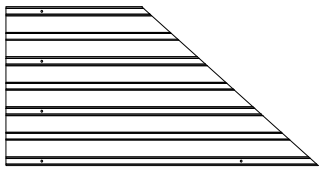


P2 2x Roof Panel

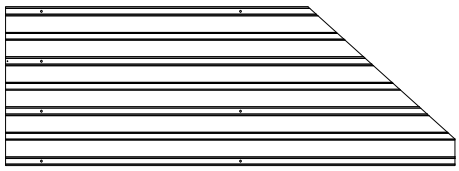

P3 2x Roof Panel

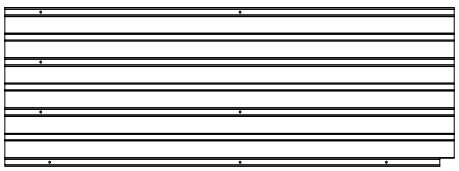


P4 2x Roof Panel

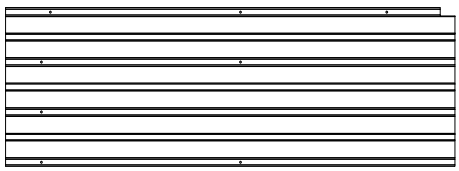


P5 2x Roof Panel




P6 2x Roof Panel

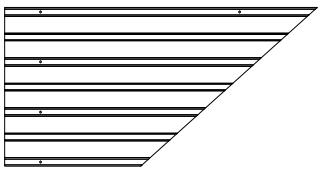


P7 2x Roof Panel

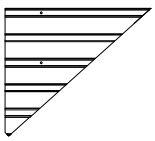

P8 2x Roof Panel




Q 2x Plastic Bar




Q1 4x Plastic Bar



T 2x Track




T1 2x Track



T2 2x Track




T3 2x Track




B 4x Base




B1 8x Bracket

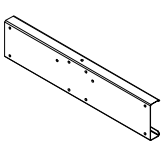


C2 4x Union Bar

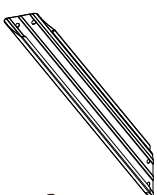


R 4x Corner Solidifying Bar

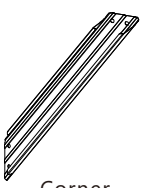


R1 4x Corner Solidifying Bar

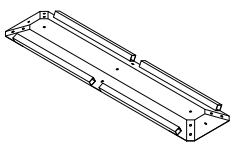

S 1x Inside Roof Connector

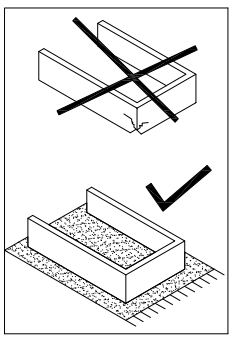


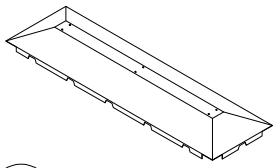


S1 1x Outside Roof Connector



S2 3x Hook




U 4x Bracket



U1 4x Bracket




U2 4x Bracket




U3 4x Bracket




V 112x Track Glider



W 112x Plastic Spacer



X 4x Joint Cover




X1 4x Corner Cover




X2 4x Finishing End




X3 12x Finishing End



Y 4x Curtains

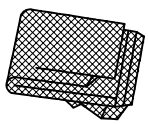

Y1 4x Mosquito Netting

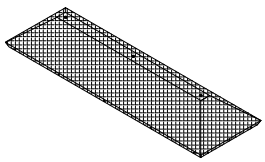

Y2 1x Small Mesh



Z 68x Plastic Clips



Z1 2x Plastic Clips




Z2 2x Plastic Clips



Z3 4x Plastic Clips



Z4 4x Plastic Clips

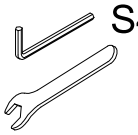


1 1x S4



2 24x ST6.3x18



3 24x ST5x16



4 32x M6x35




5 116x M6



7 8x M6x10




8 216x M6x16




9 8x M6x25



10 72x M6x28



11 4x M6x45




12 28x M6x50

# POST ASSEMBLY



A 4x



B 4x



B1 8x


S4

1 1x



M6x16

8 28x

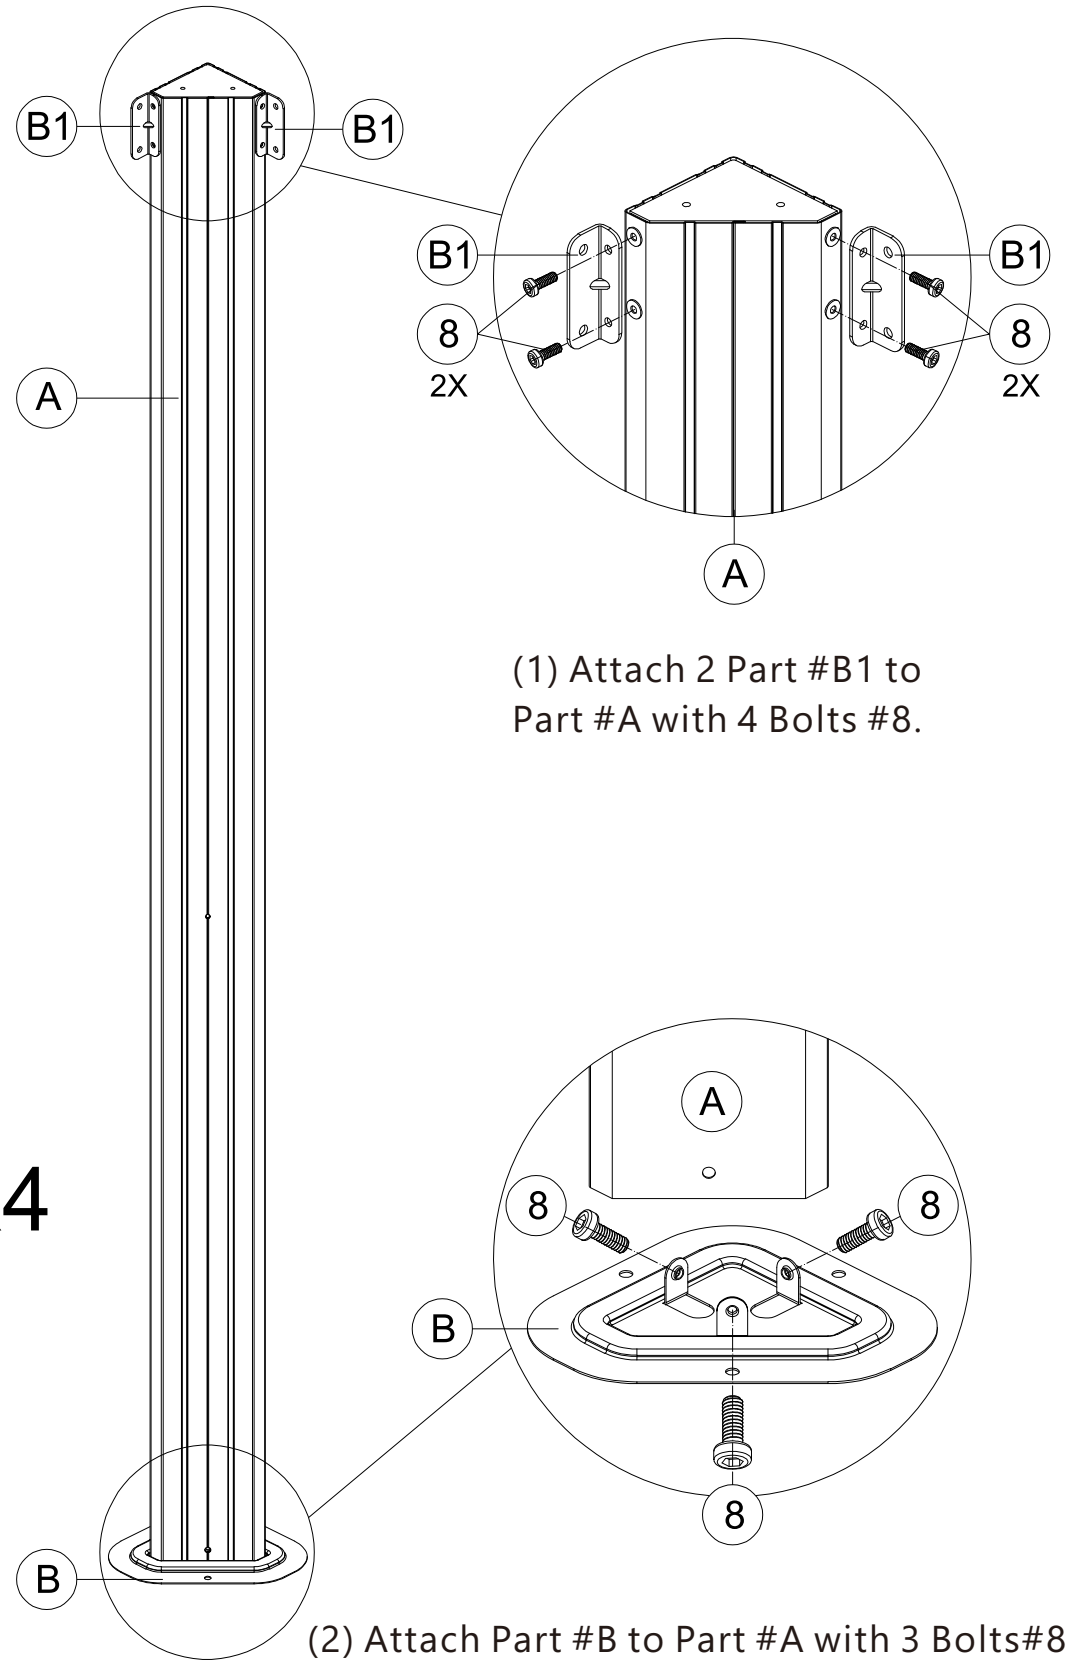



(1) Attach 2 Part #B1 to Part #A with 4 Bolts #8.

(2) Attach Part #B to Part #A with 3 Bolts#8.

(3) Repeat the above procedures to assemble the other 3 Part #A.


# BEAM ASSEMBLY:

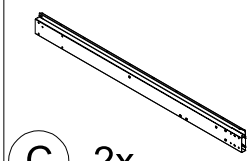

C 2x



C1 2x



C2 2x



X 2x




S4

1 1x




M6x16


8 20x

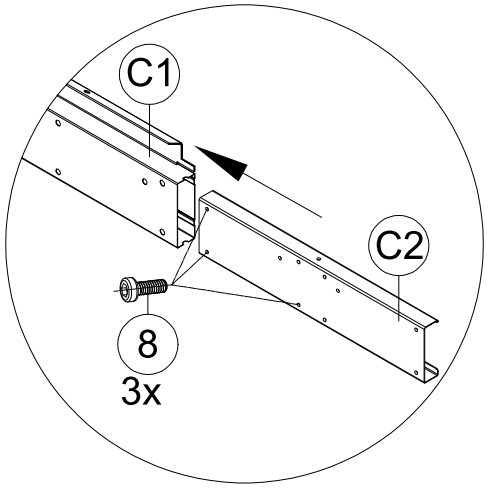



(1) Insert Part #C2 into Part#C and secure with 3 Bolts #8.

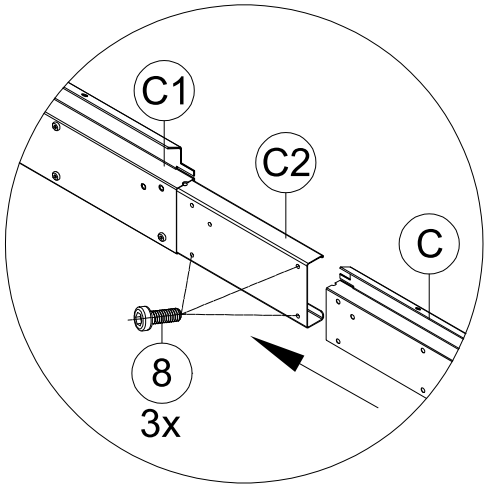



(2) Insert the other side of Part #C2 into Part #C1 and secure with 3 Bolts #8.

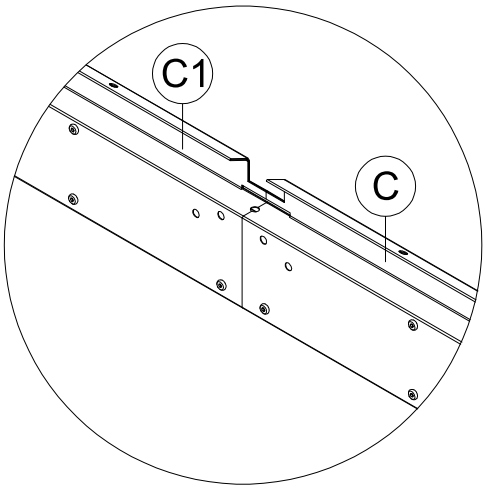


(3) Connect Part #C and Part #C1 through Part #C2.

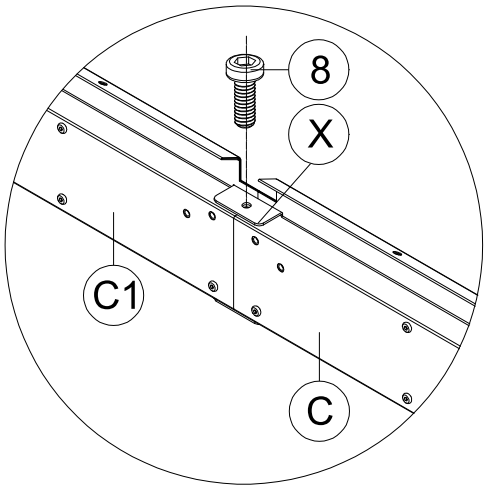


(4) Insert Part #X into the beam and secure with Bolt #8.

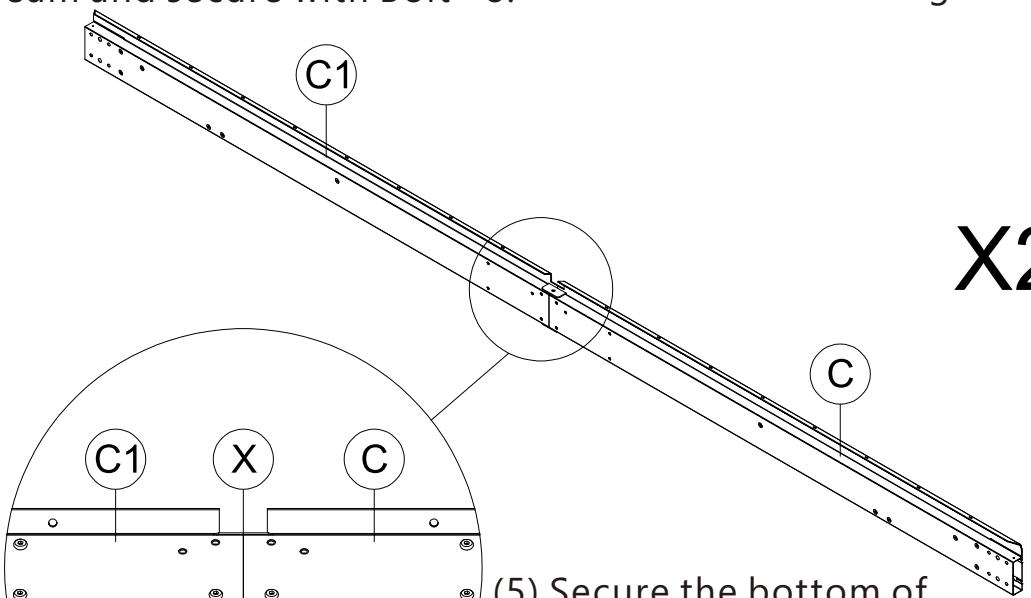



X2





(5) Secure the bottom of Part #X and Part#C1/C with 3 Bolts #8.


(6) Repeat the above procedures to assemble the other beams.



C2 2x

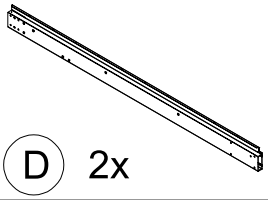

D 2x

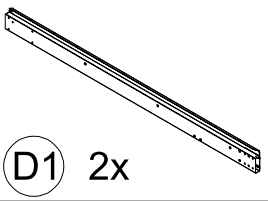

D1 2x



X 2x



S4


1 1x




M6x16

8 20x


3

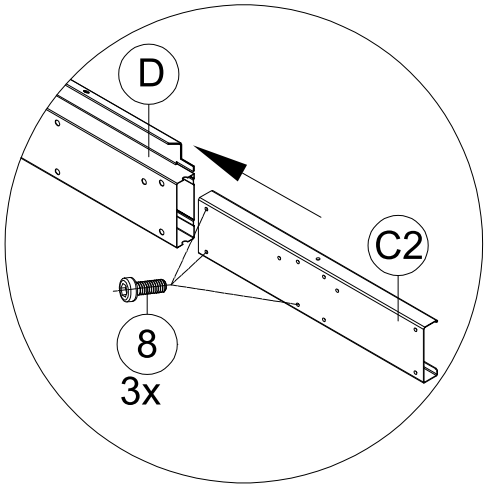



(1) Insert Part #C2 into Part#D and secure with 3 Bolts #8.

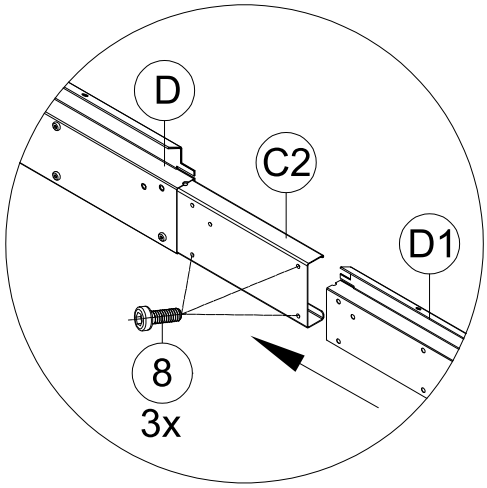



(2) Insert the other side of Part #C2 into Part #D1 and secure with 3 Bolts #8.

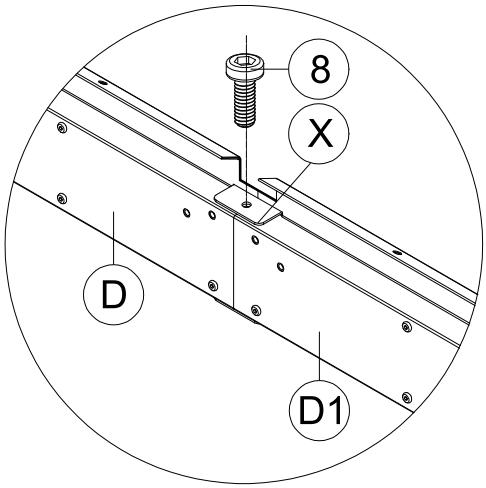


(4) Insert Part #X into the beam and secure with Bolt #8.

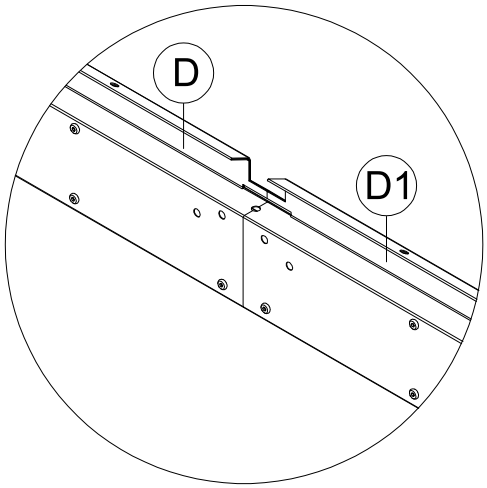


(3) Connect Part #D and Part #D1 through Part #C2.

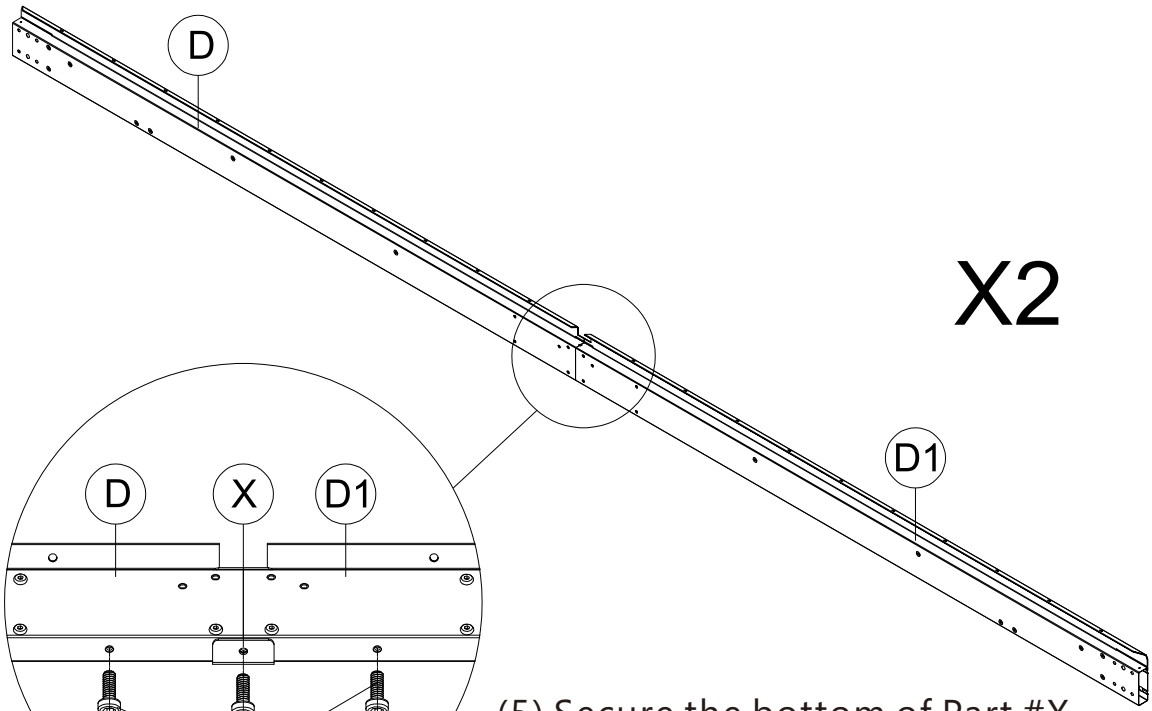


X2




(5) Secure the bottom of Part #X and Part#D1/D with 3 Bolts #8.

(6) Repeat the above procedures to assemble the other beams.



T 2x




T1 2x





V 48x


# TRACK ASSEMBLY:

(1) Slide the Track Gliders to the double-rail track #T & T1 (each slot should slide 6 Track Gliders).

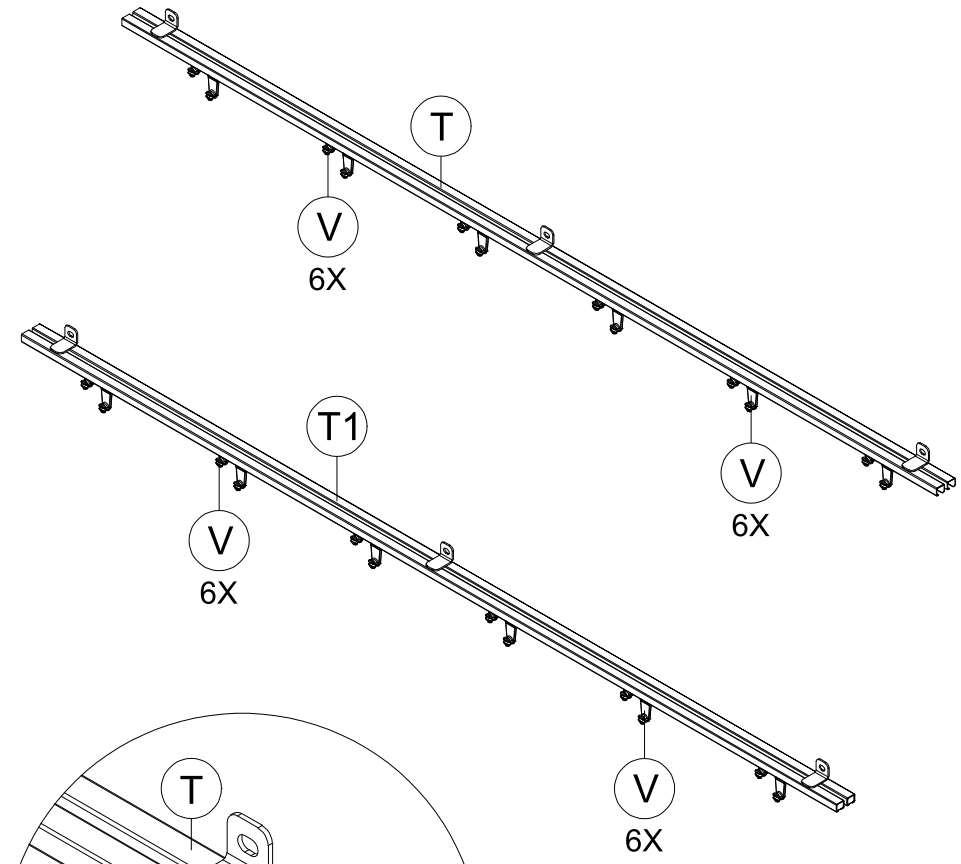

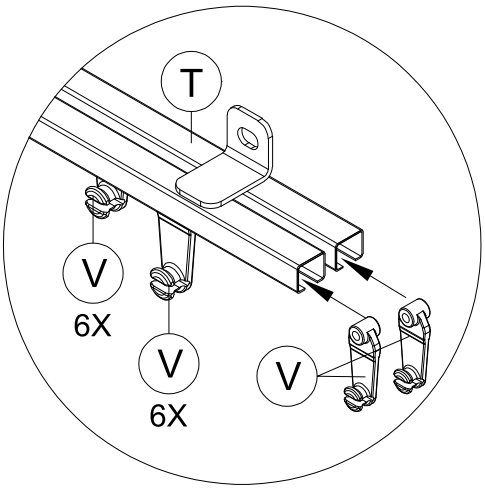


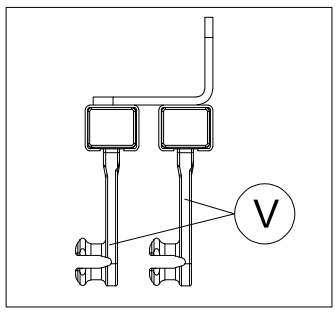
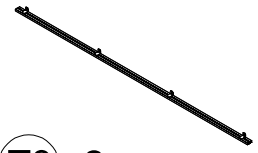


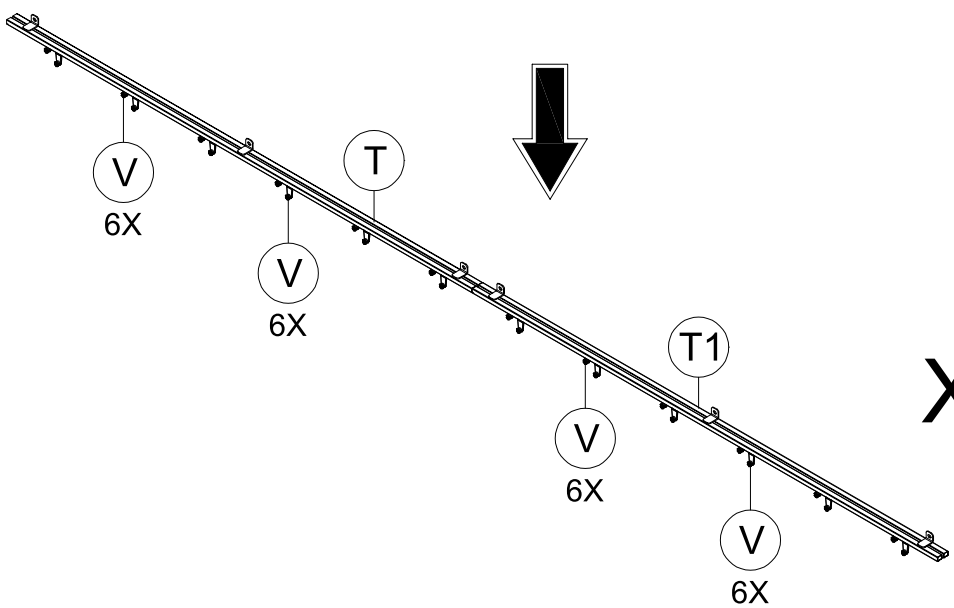

X2

(2) Repeat the above procedures for another track #T&T1.

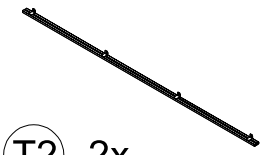

T2 2x





T3 2x





V 64x

(1) Slide the Track Gliders to the double-rail track #T2&T3 (each slot should slide 8 Track Gliders).

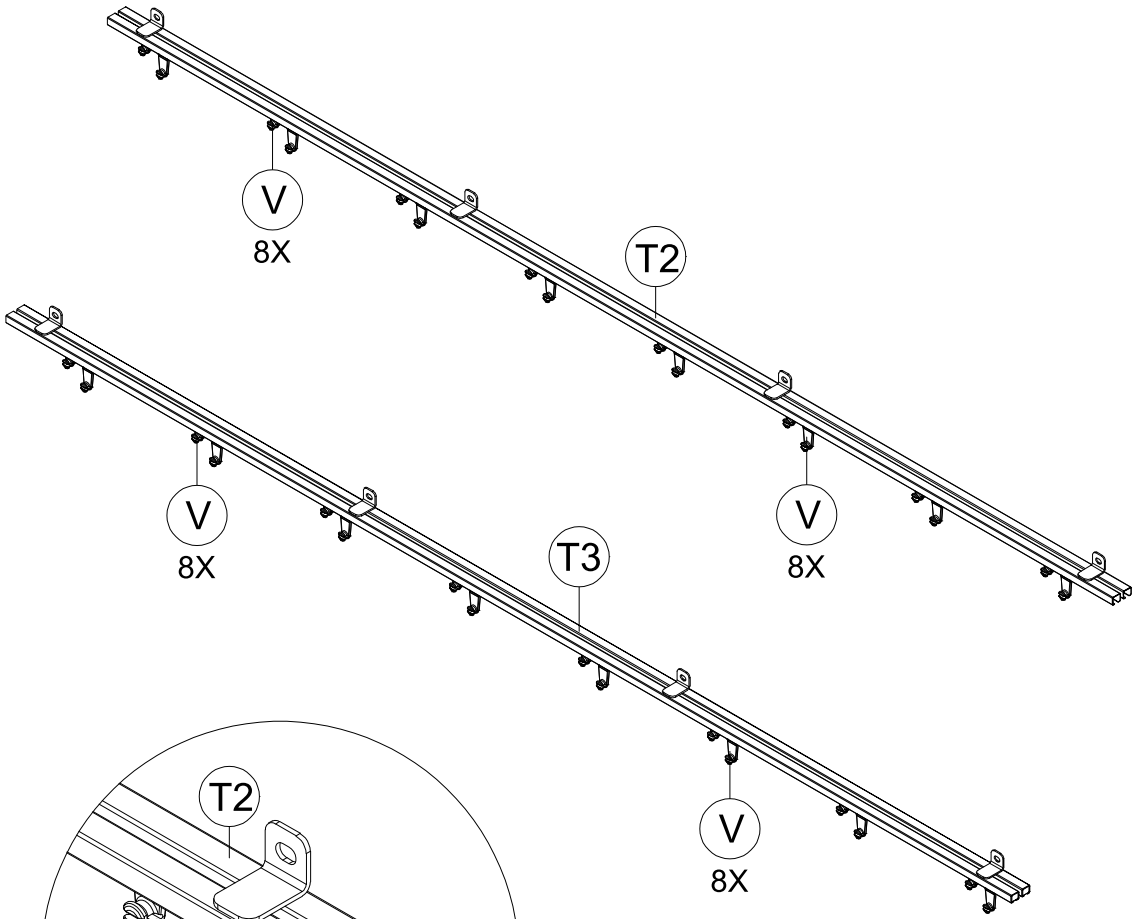

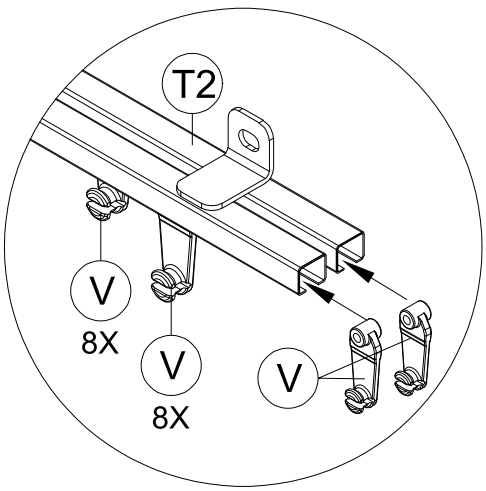
X2

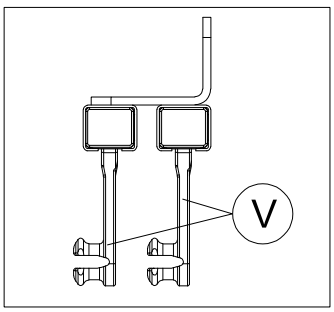(2) Repeat the above procedures for the another track #T2&T3.

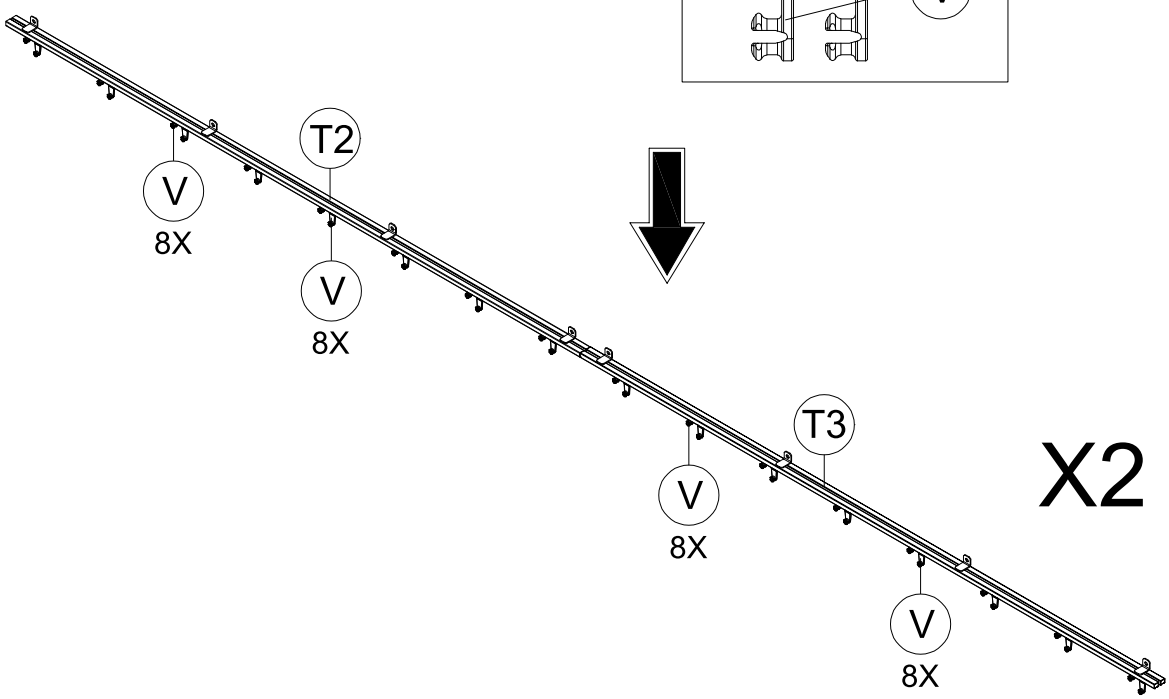
S4

1 1x

M6x16

8 12x

(1) Use 6 Bolts #8 to fix the track #T & T1 to the beam #C&C1.

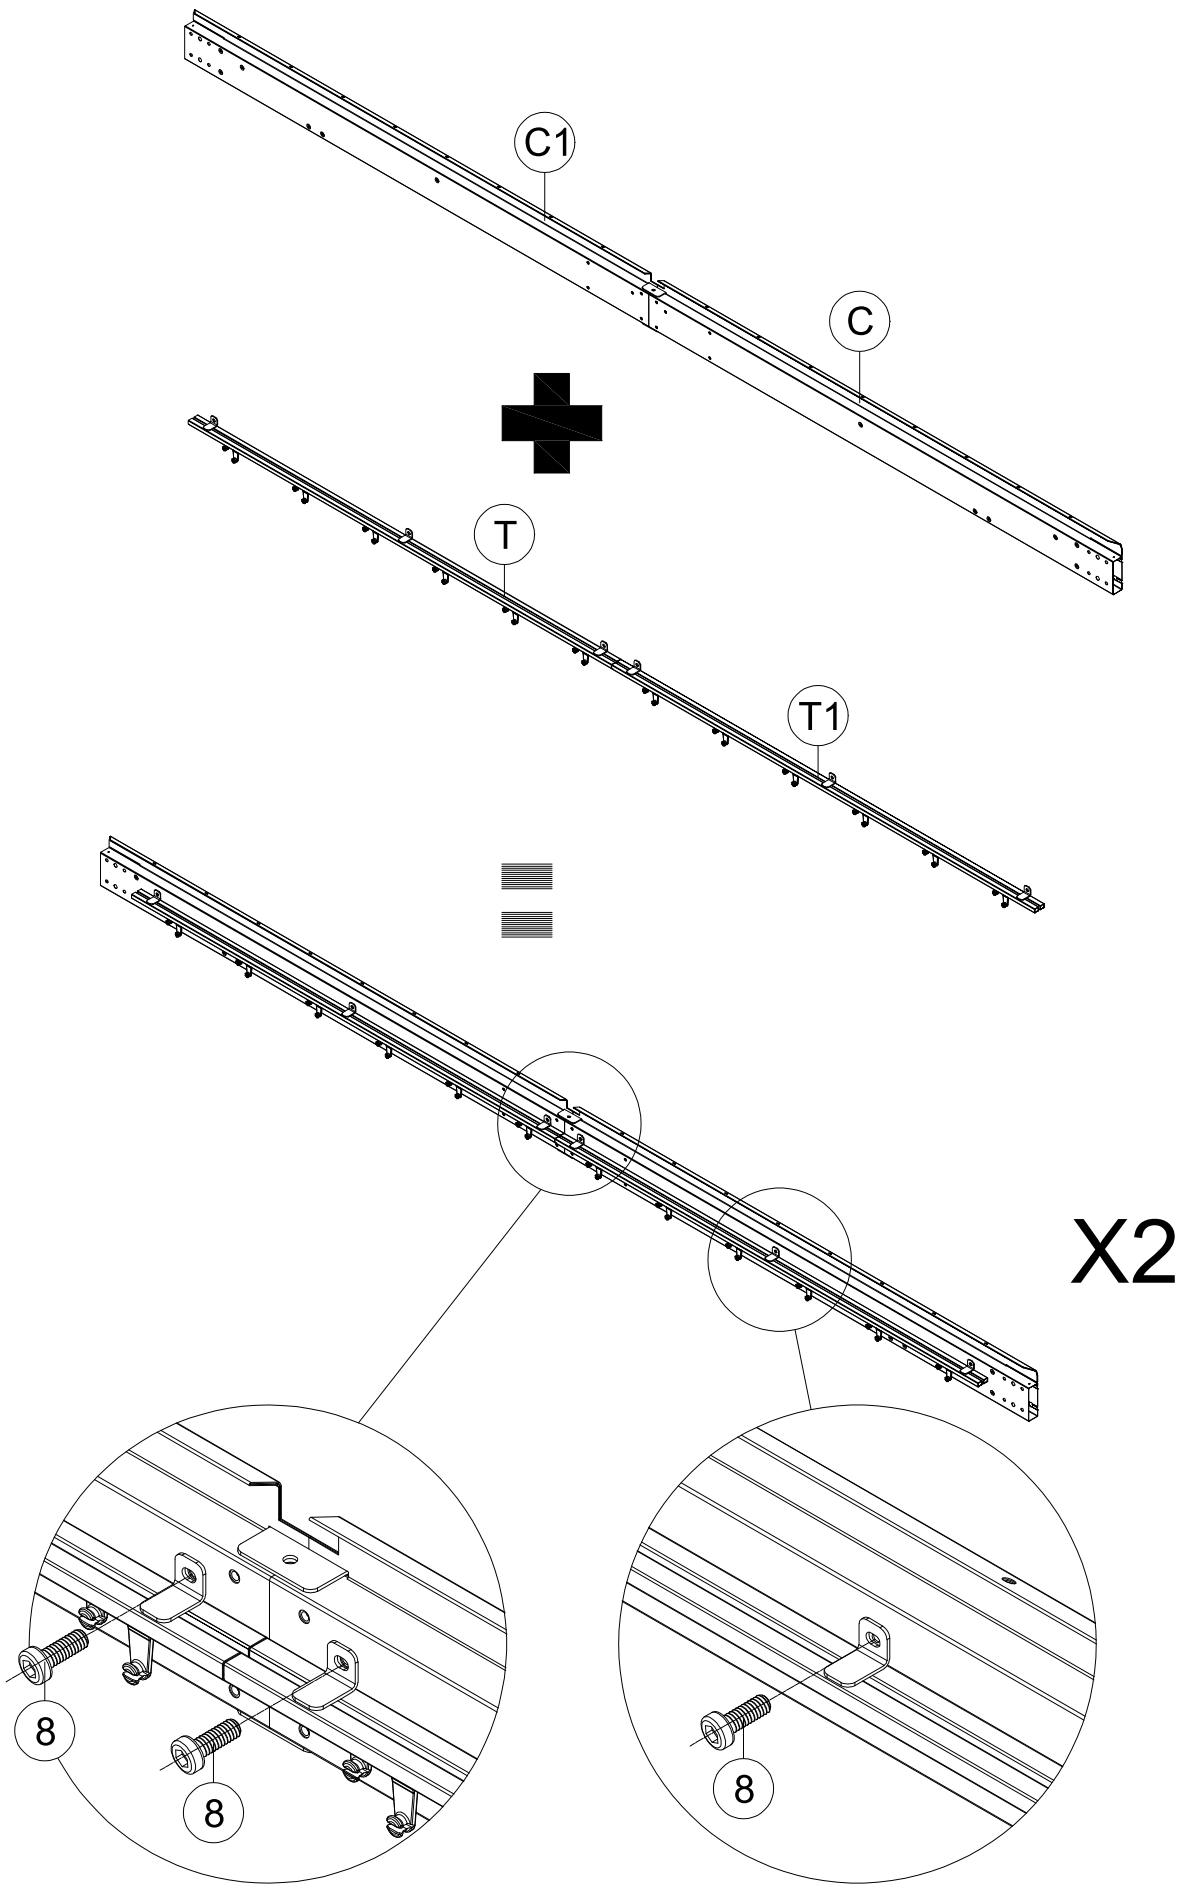


(2) Repeat the above procedures for another beam.


S4

1 1x

M6x16

8 16x

(1) Use 8 Bolts #8 to fix the track #D&D1 to the beam #T2&T3.

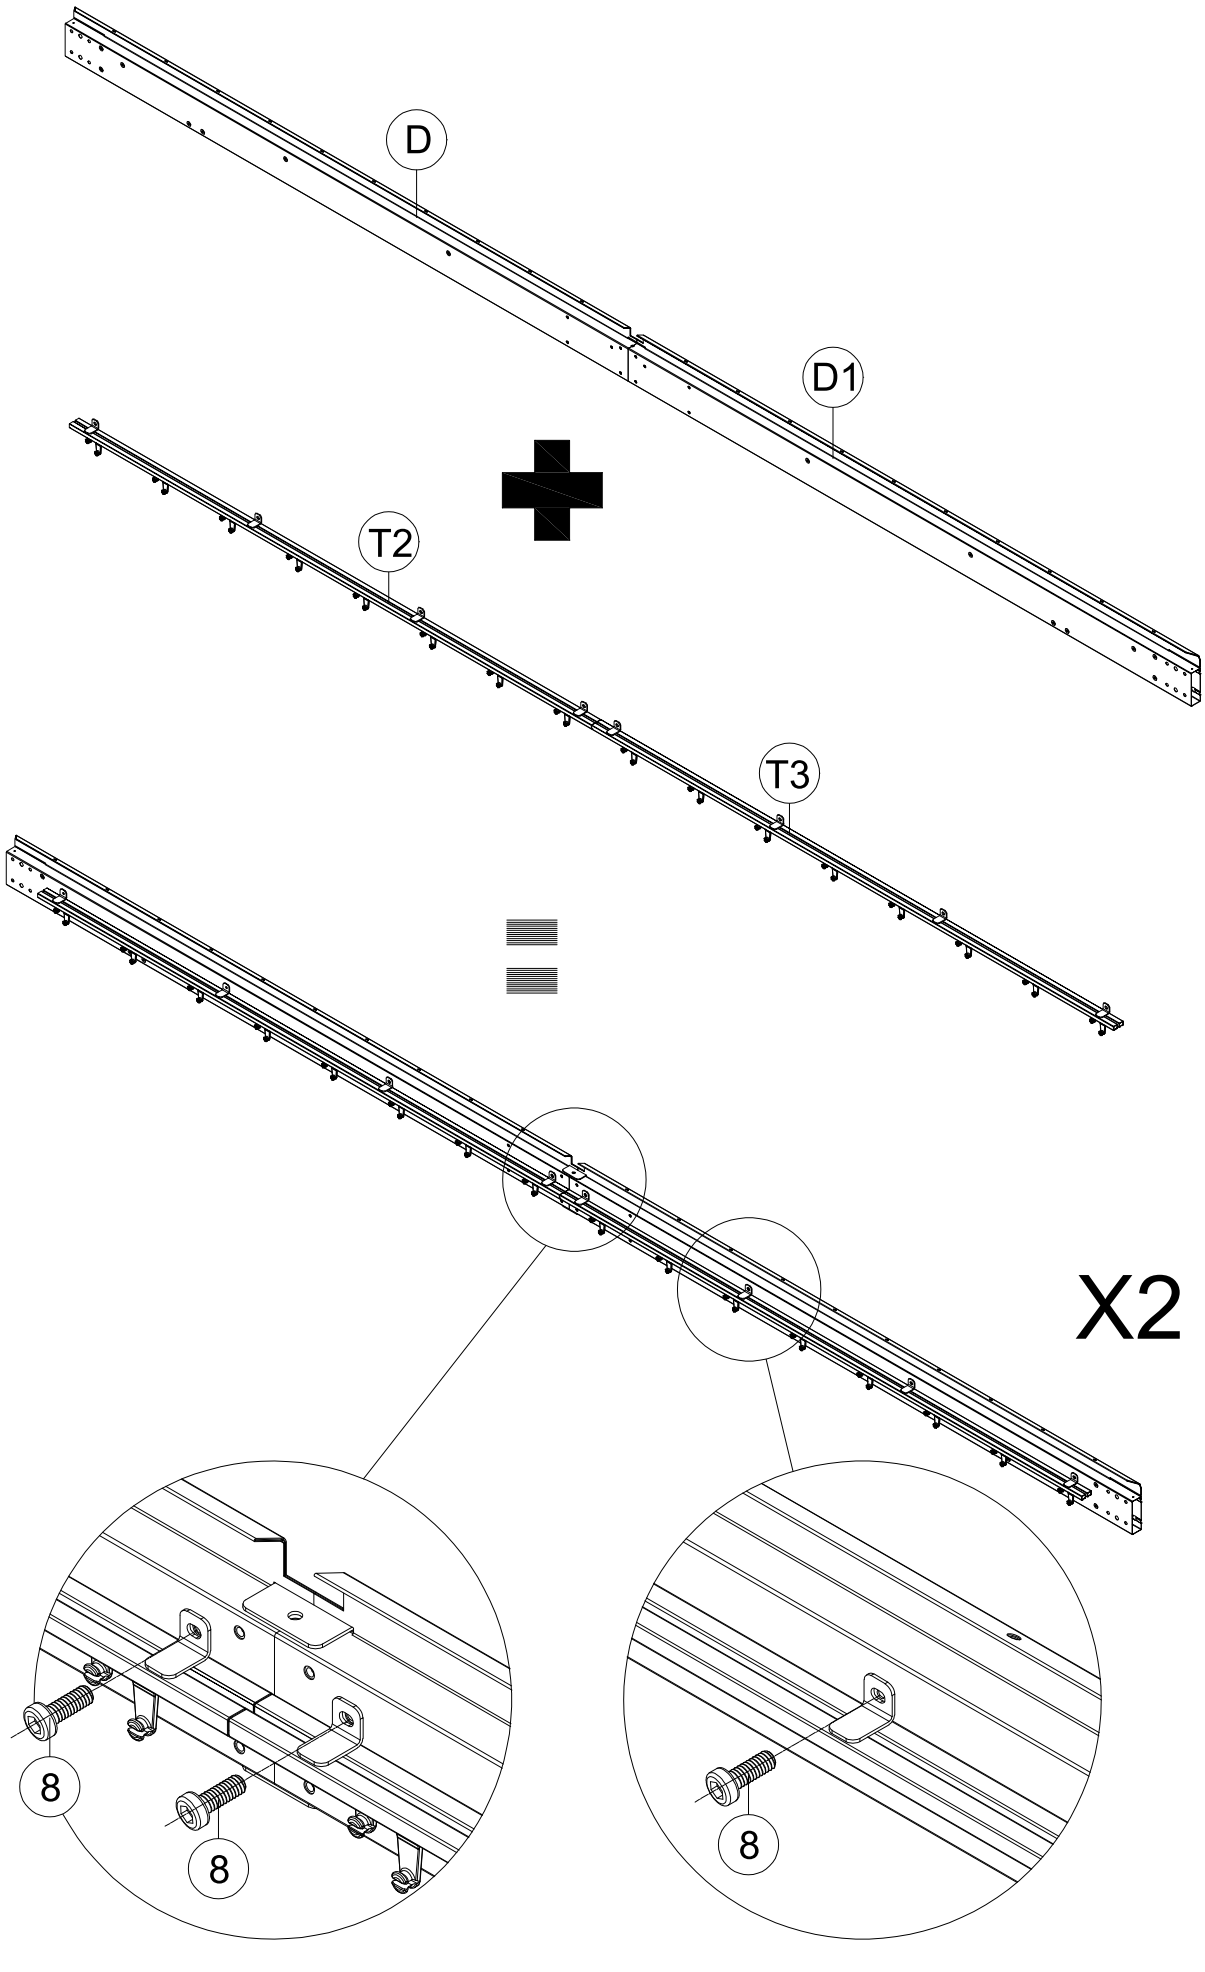



(2) Repeat the above procedures for the other beam.

S4

1 1x

M6x35

4 32x

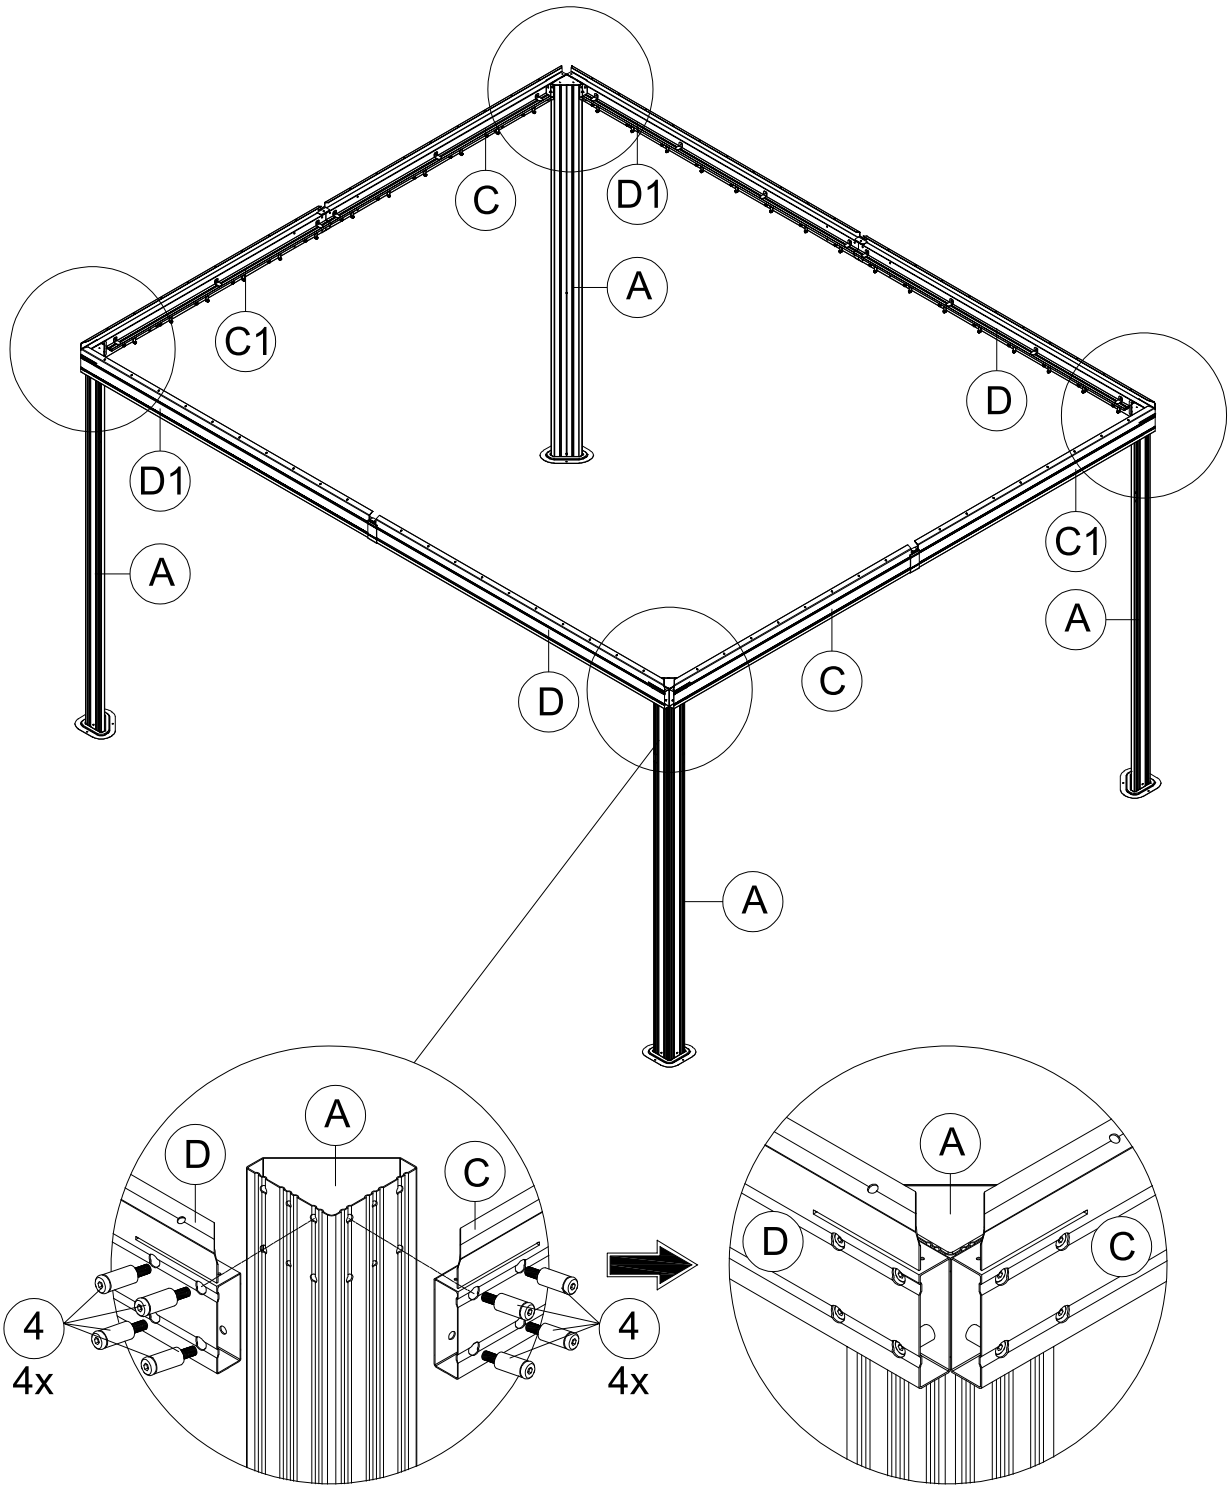


**Outside View**

(1) Connect Beam #C & C1 & D & D1 to Post #A with 8 Bolts #4. (From Outside).

(2) Repeat the above procedures to assemble the other 3 corners.

**Please don't tighten all bolts.**


S4

1 1x


M6x16

8 16x


(1) Connect Beam #C & C1 & D & D1 to Post #A with 4 Bolts #8 (From Inside)

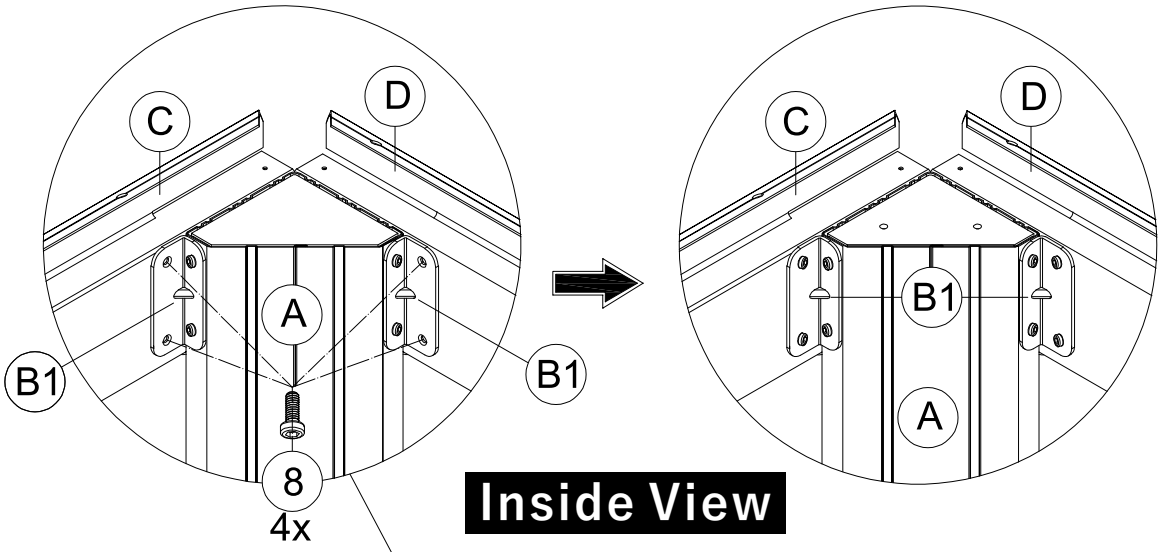



**Inside View**

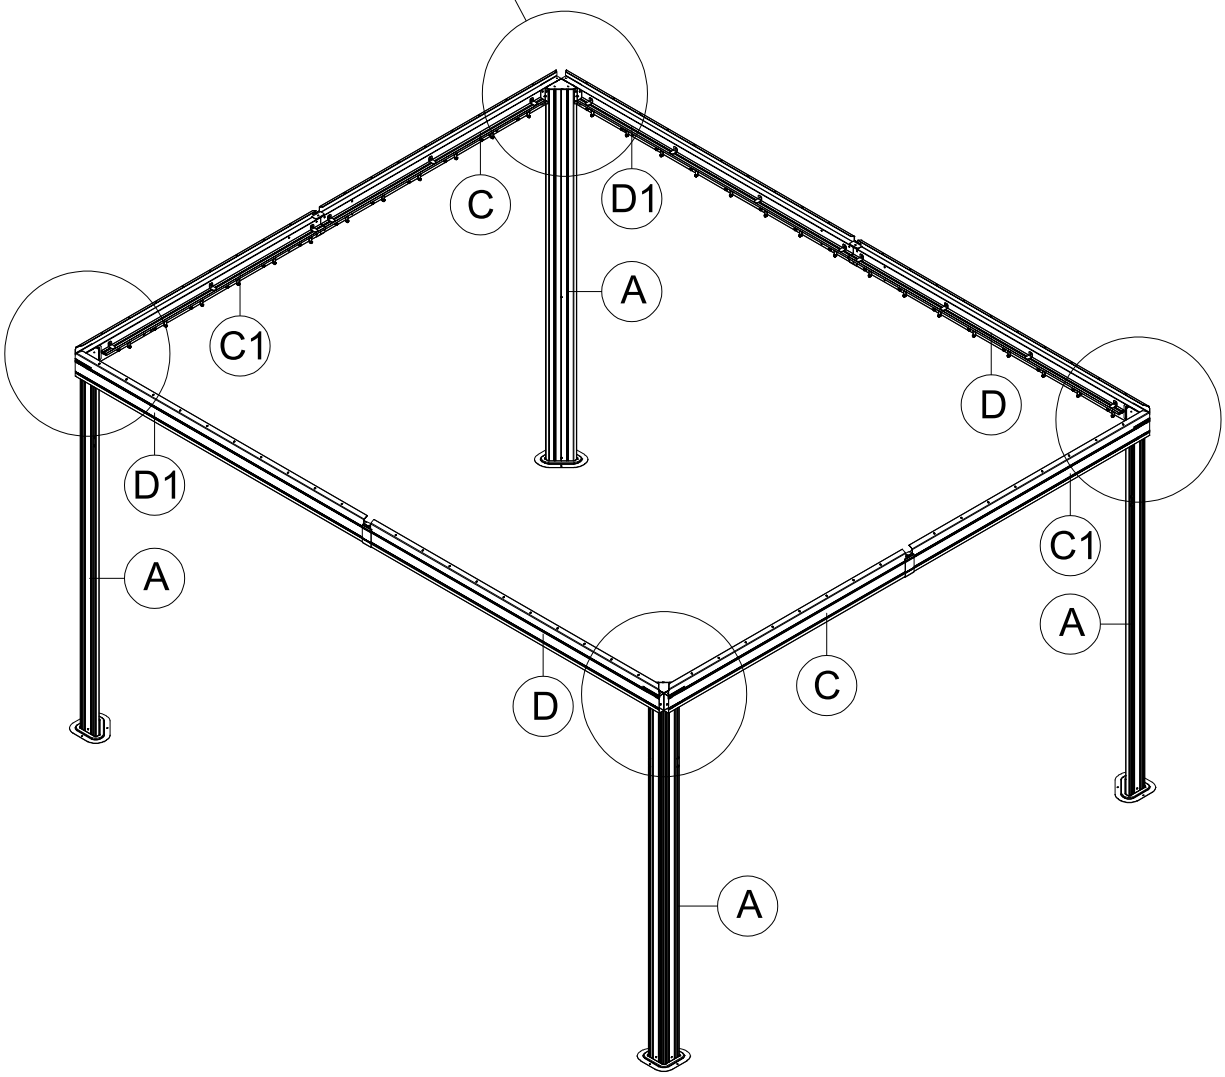


(2) Repeat the above procedures to assemble the other 3 corners. Please don't tighten all bolts.

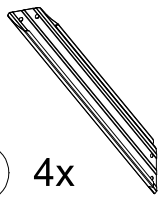

R 4x

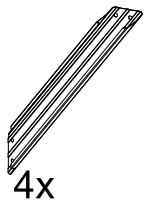

R1 4x



S4


1 1x





M6x16

8 32x

(1) Affix Part #R and Part #R1 to the frame with 8 Bolts #8.

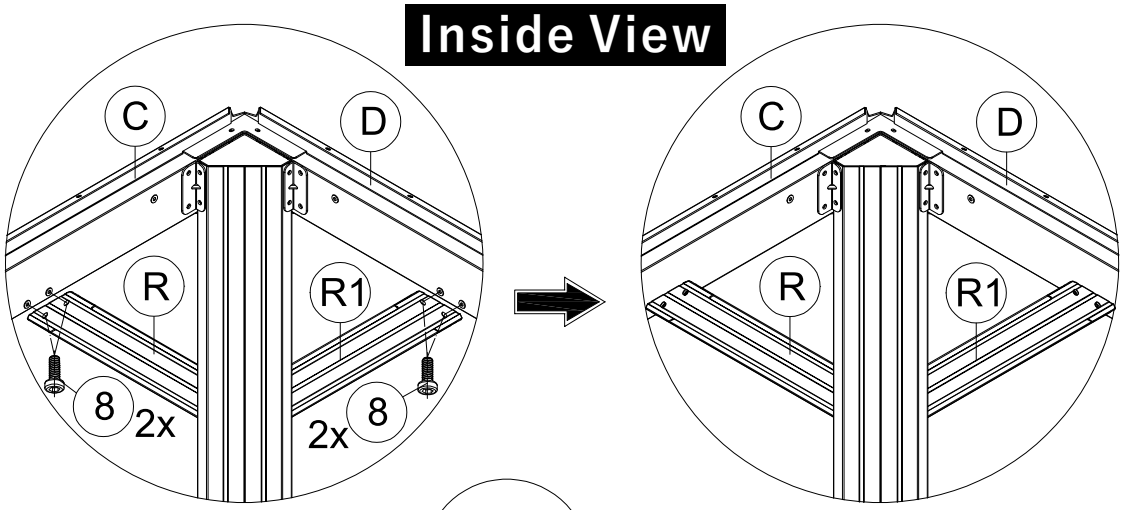


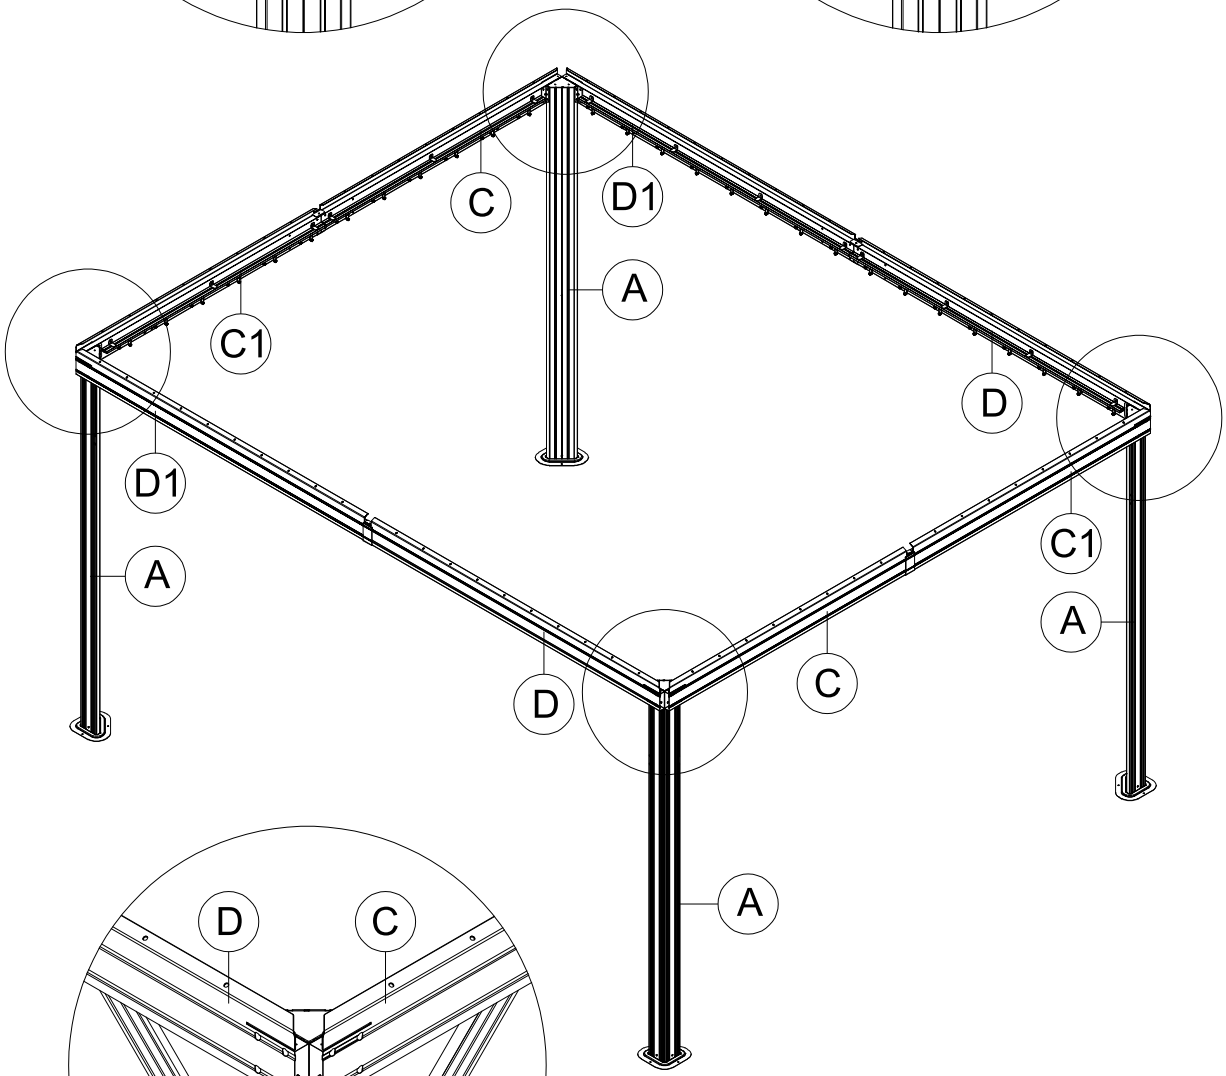
Outside View

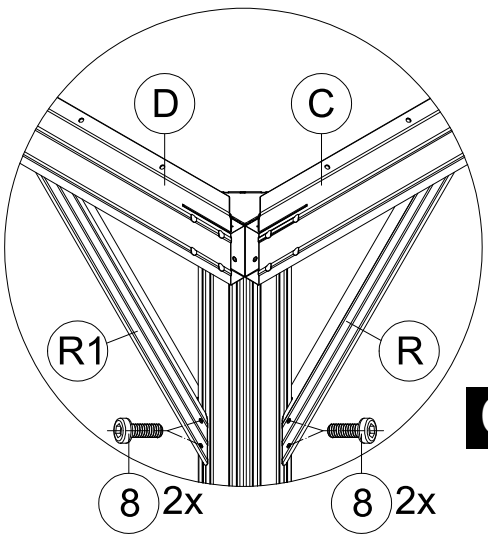(2) Repeat the above procedures for the other 3 corners.
**Tighten all the bolts.**




X1 4x





ST5x16

3 16x

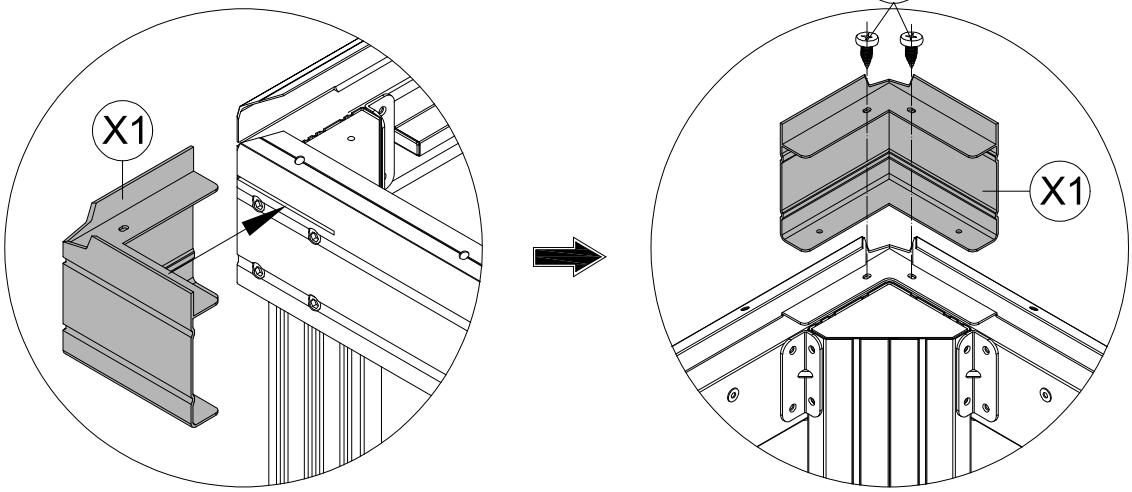



(1) Cover the corner with Part #X1.
(2) Secure with 2 Self-tapping Screws #3.(from top to bottom).
(3) Secure with 2 Self-tapping Screws #3/(from bottom to top).

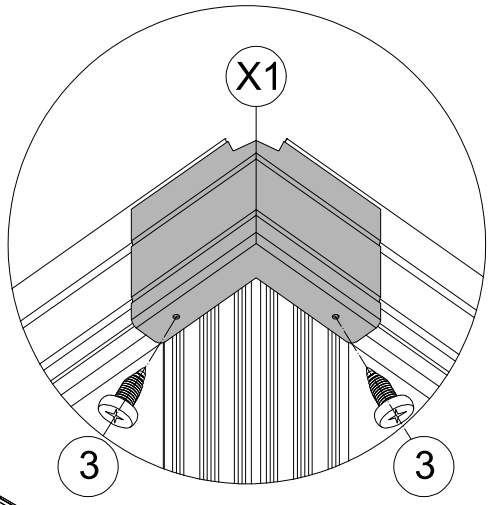

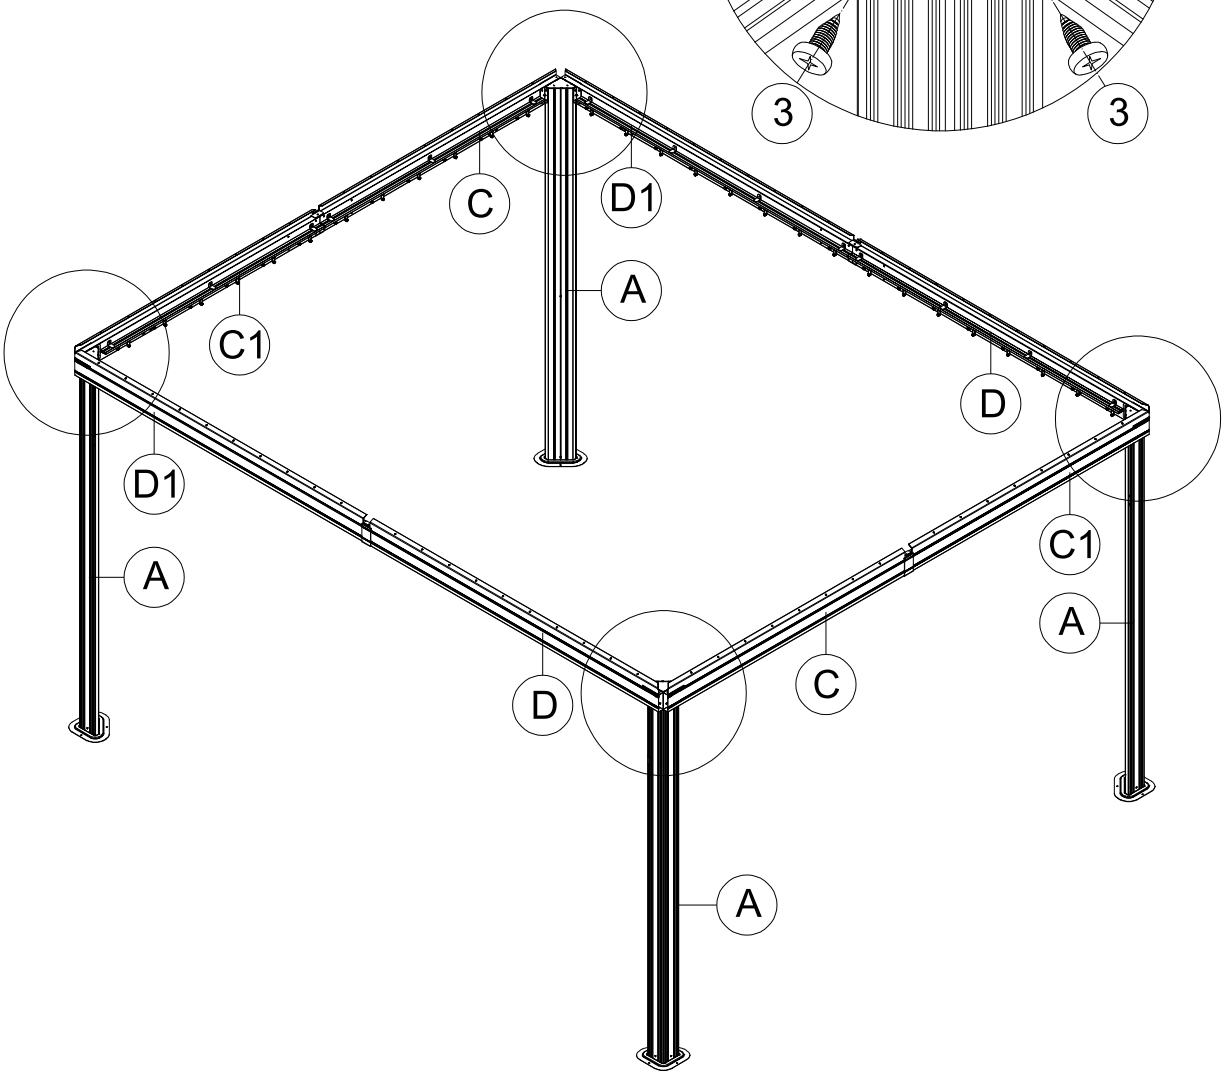

(4) Repeat the above procedures for the other 3 corners.

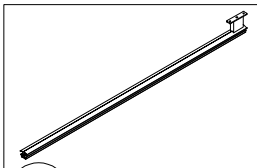

E 4x



E1 4x



U 4x




S4

1 1x




M6x16

8 12x

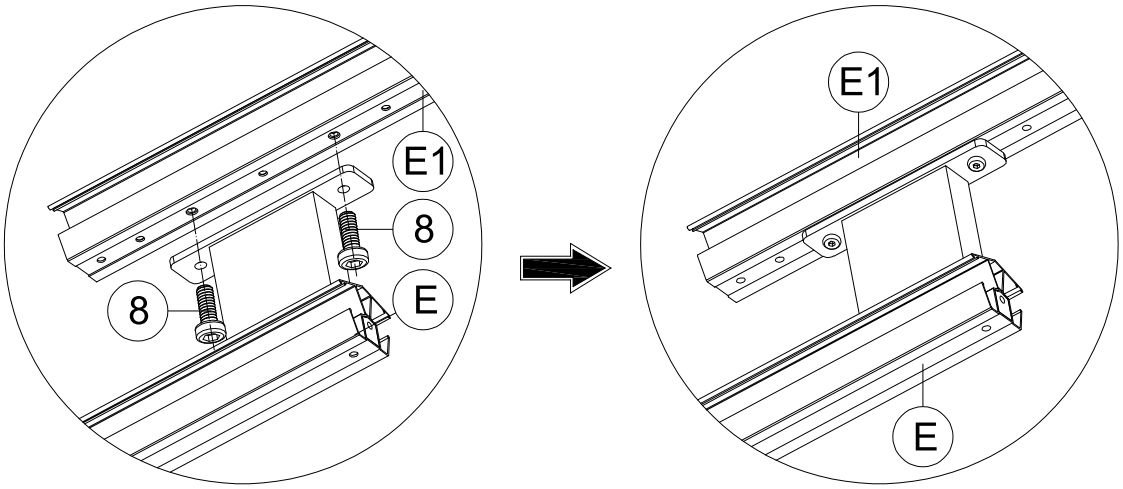



(1) Use 2 bolts #8 to secure #E & E1.
(2) Attach Part #U to Part #E with Bolt #8.

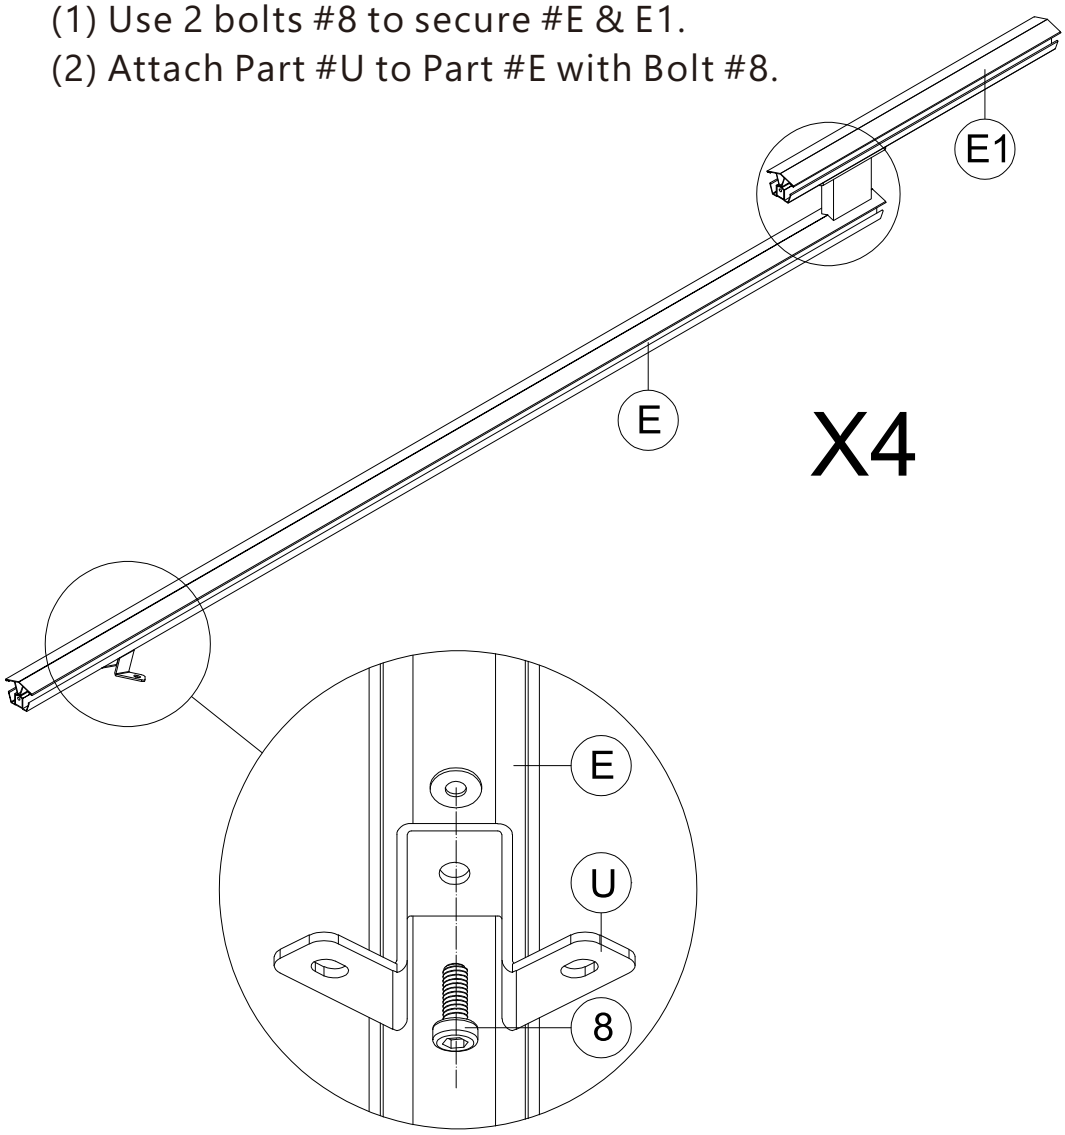


X4

(3) Repeat the above procedures for the other 3 corner roof bars.

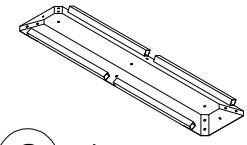

S 1x

S4


1 1x




M6x16

8 16x

Please have a freestanding ladder ready at the center of the gazebo

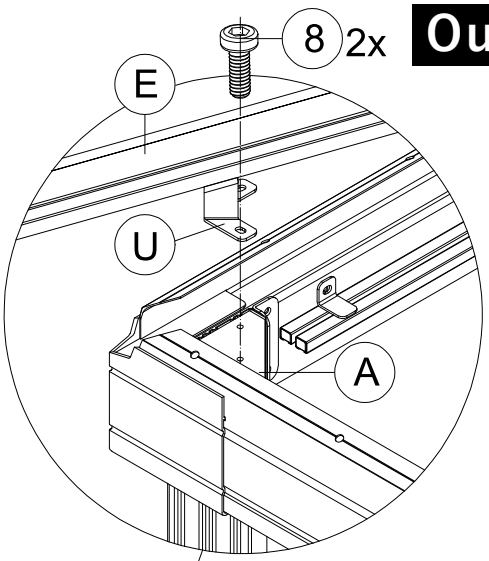



**Outside View**

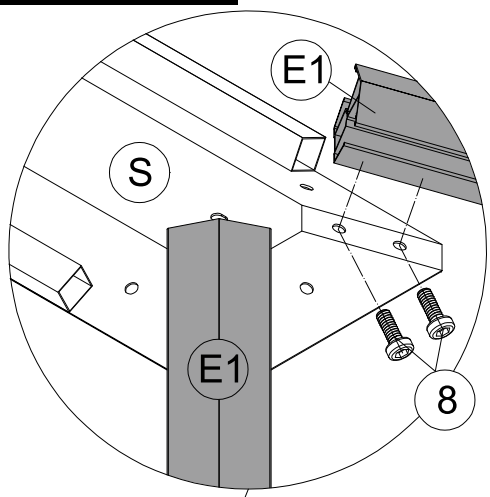



(2)Place 4 Part #E on 4 Part #A; Secure with 8 Bolts #8.

(1) Place 4 Part #E1 on the 4 corners of Part #S. Secure with 8 Bolts #8 (from bottom to top).

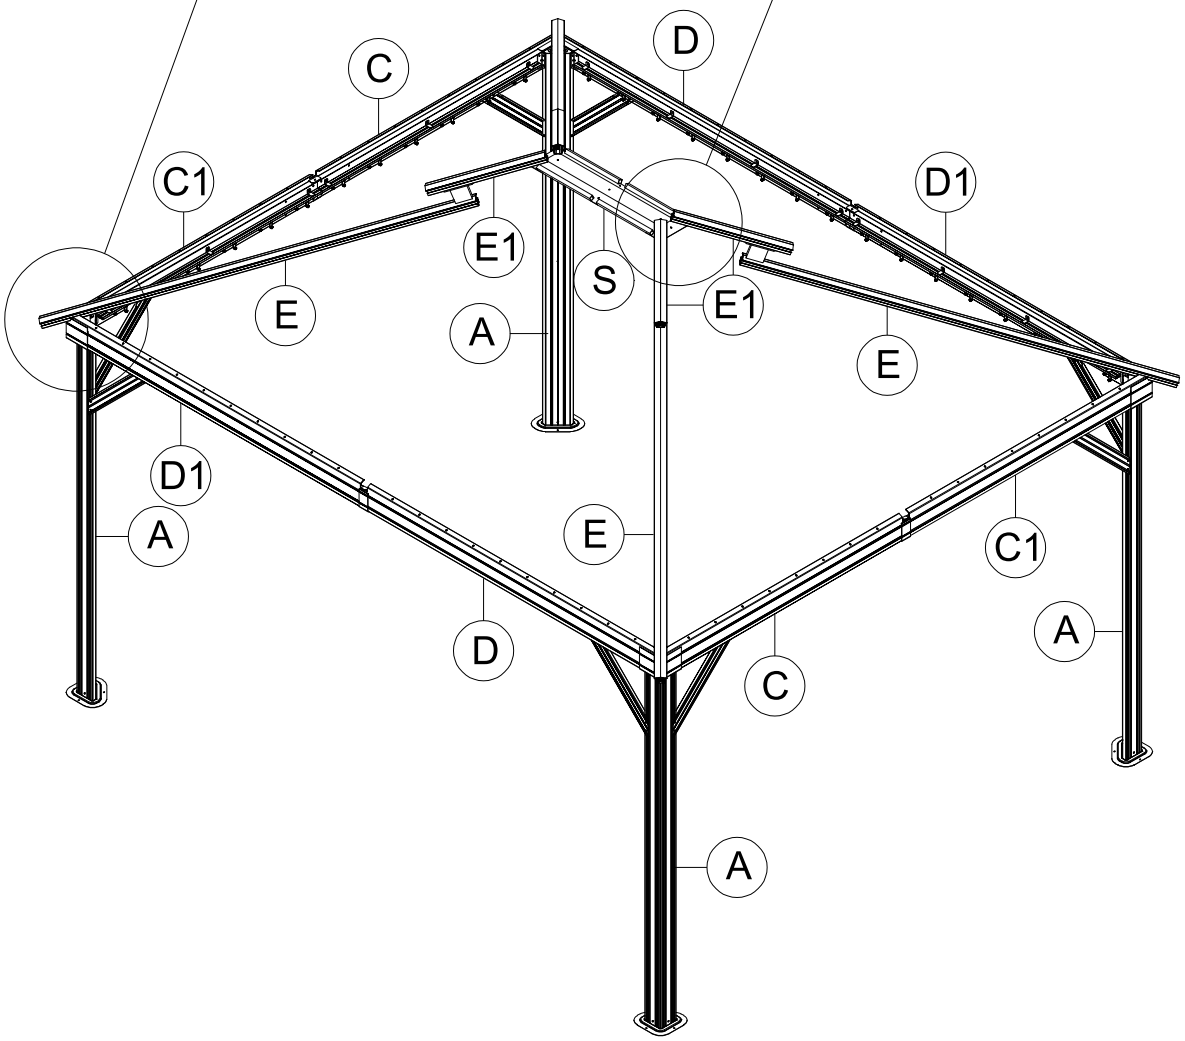


**ATTENTION:** You can also finish this step on the ground and then lift 4 corner roof bars and inside roof connector to the top together (Need 2 people and 2 ladders).

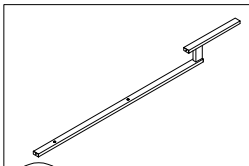

E2 4x



U1 4x




S4


1 1x




M6x10

7 4x

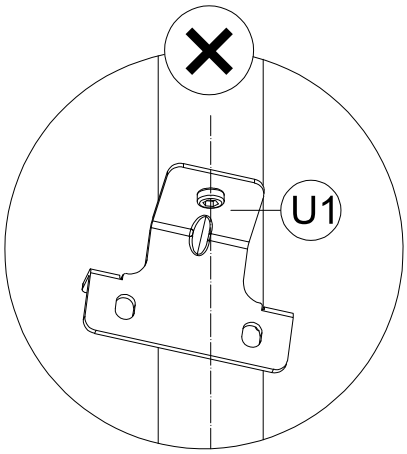

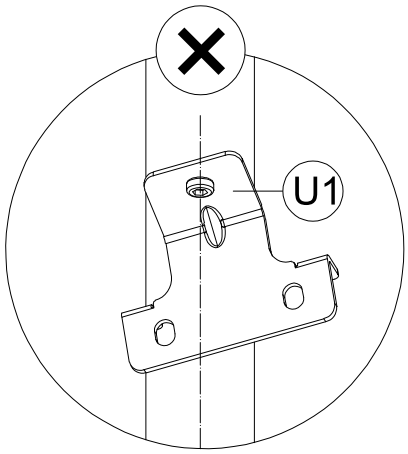


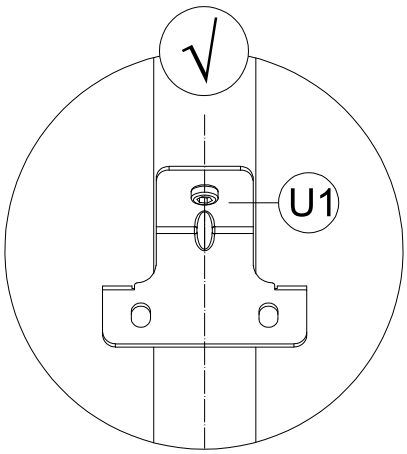
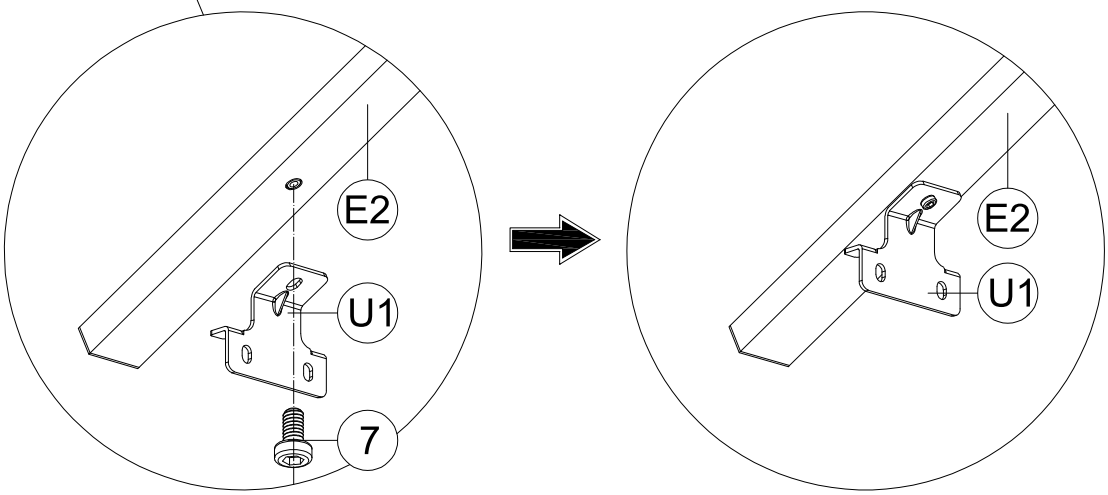







X4

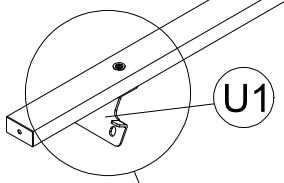


(1) Attach Part #U1 to Part #E2 with Bolt #7.
(2) Repeat the above procedures for the other 3 roof bars.


S4

1 1x


M6x16


8 6x

(1) Place Part #E2 on Part #S.
Secure with Bolt #8 (from bottom to top).

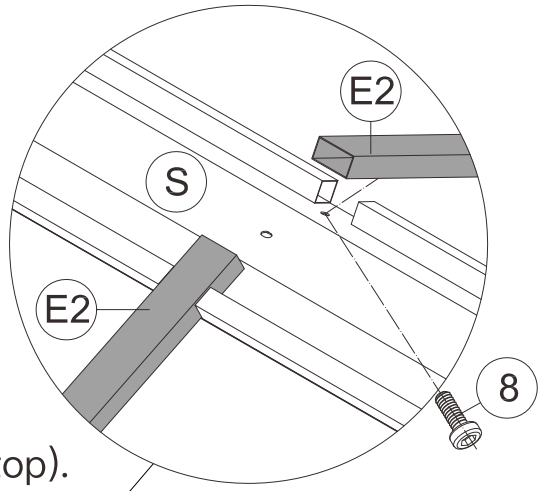


**Outside View**

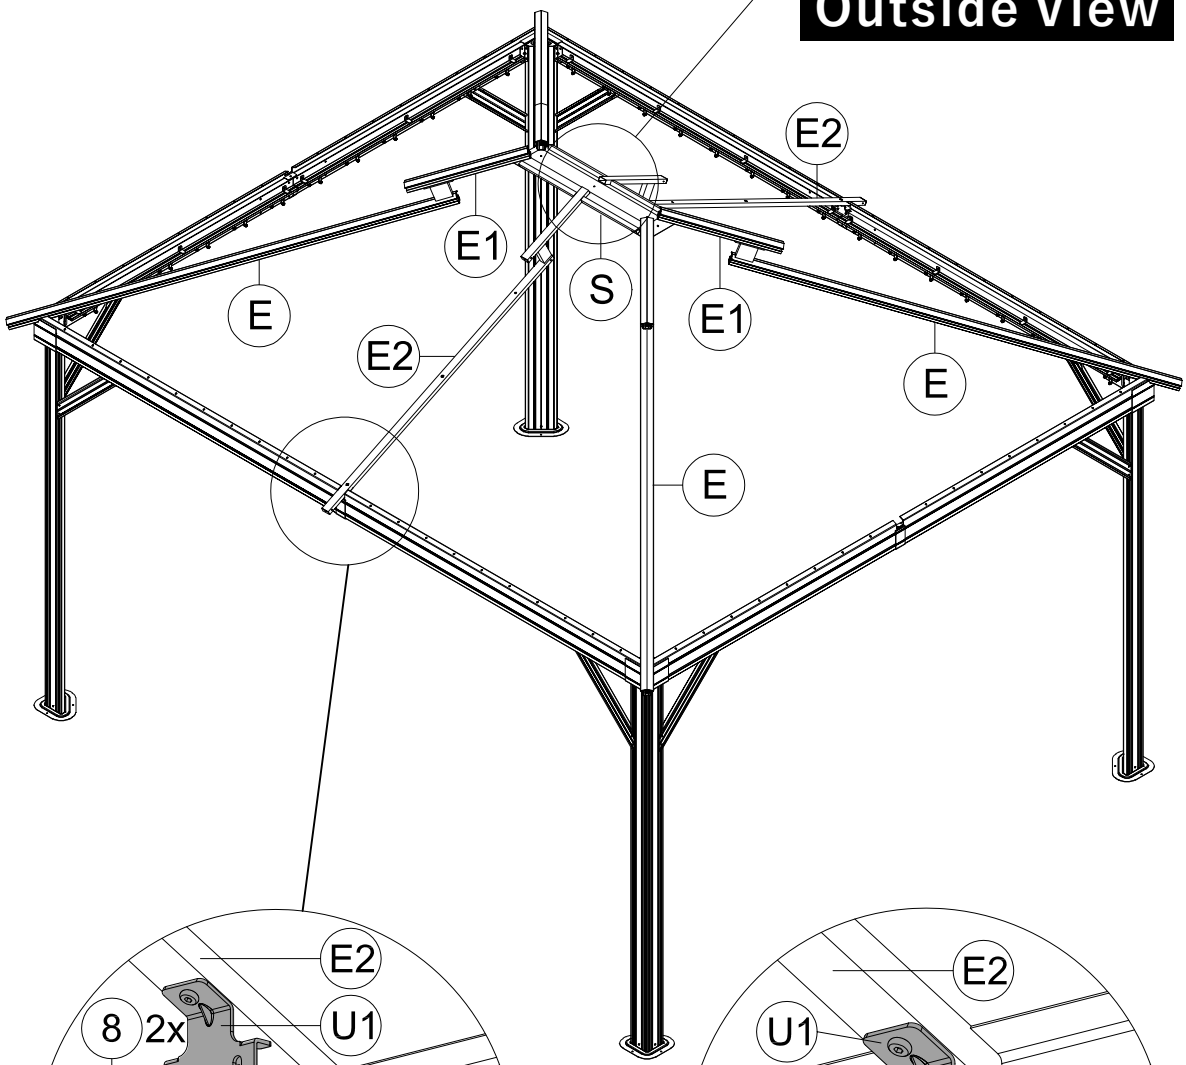

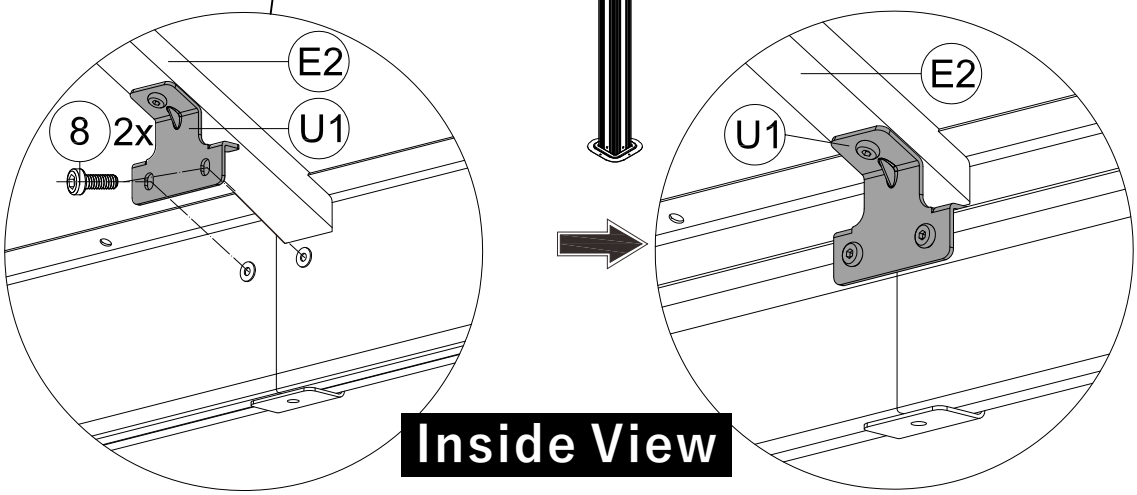
**Inside View**

(2) Connect Part #E2 and the Assembled Beam #D & D1with part #U1. Secure with 2 Bolts #8.

**(3) Repeat the above procedures to assemble the opposite side.**


S4


1 1x


M6x16


8 6x

(1) Place Part #E2 on part #S. Secure with Bolt #8 (from bottom to top).

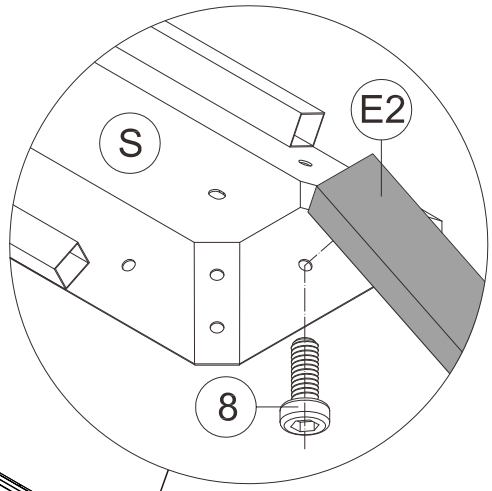

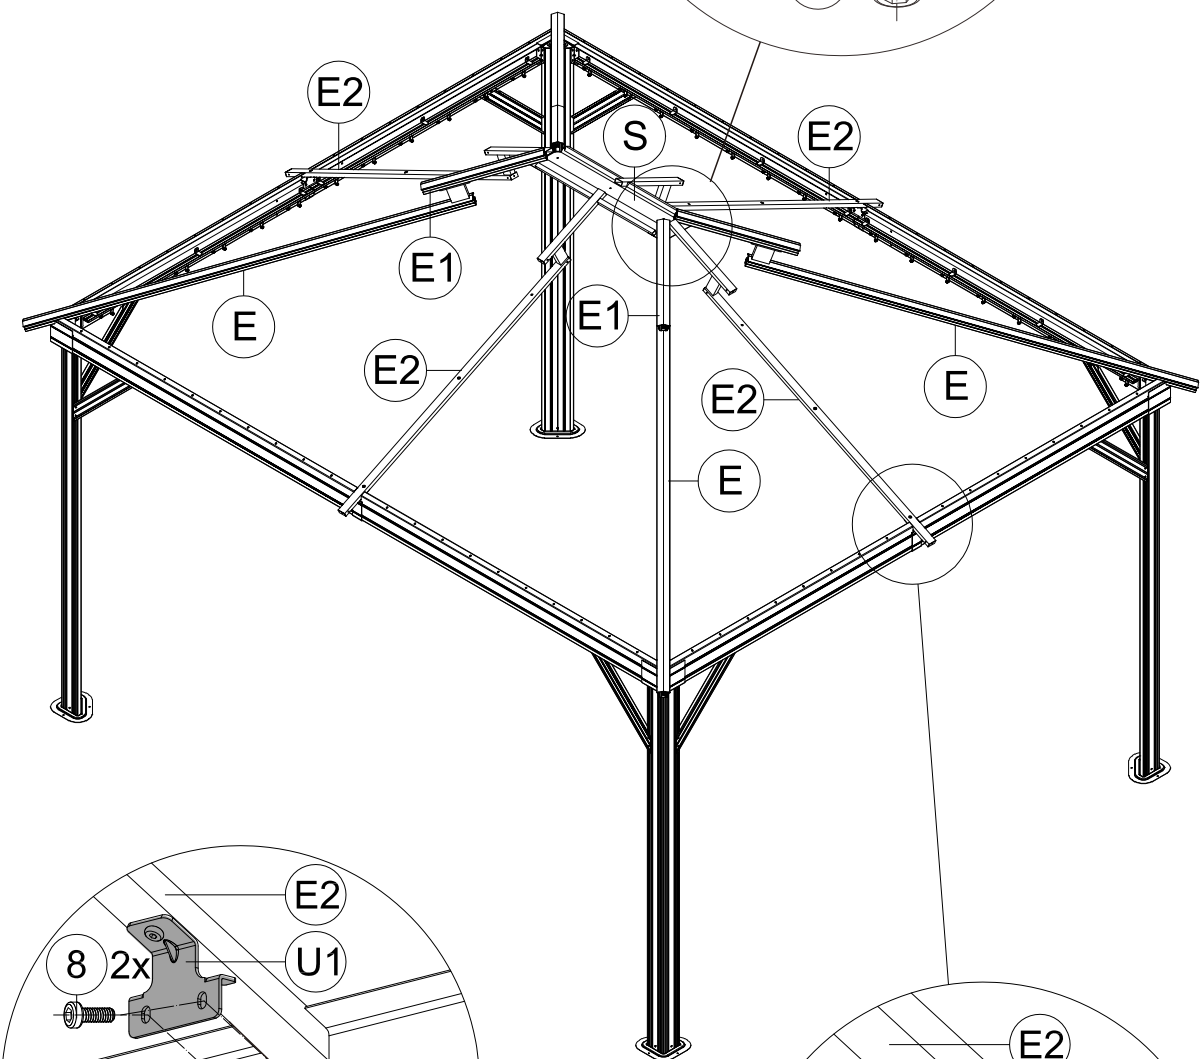


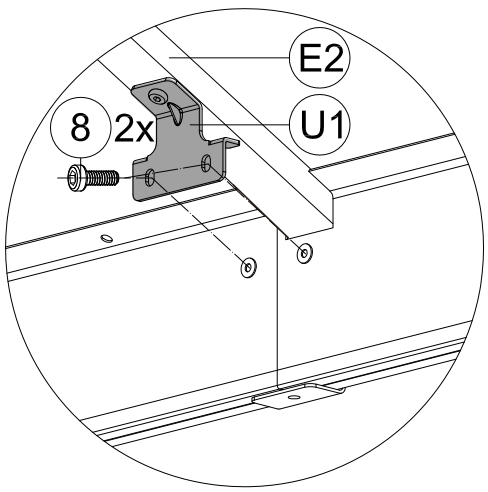



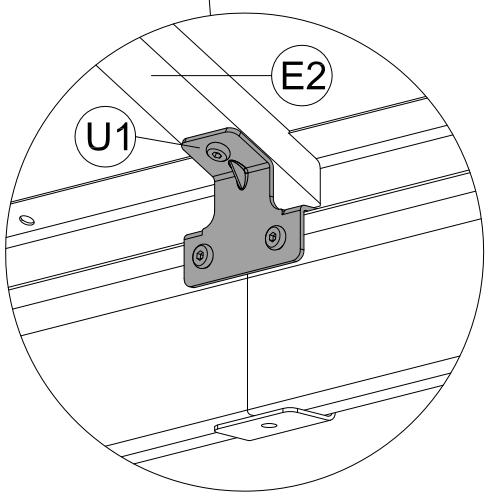

(2) Connect Part #E2 and Beam #C & C1 with part #U1. Secure with 2 Bolts #8.

(3) Repeat the above procedures for the opposite side.

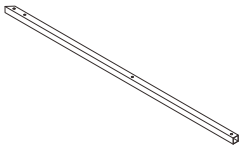

G 4x



U3 2x



S4

1 1x




M6x10

7 2x



M6x16

8 4x

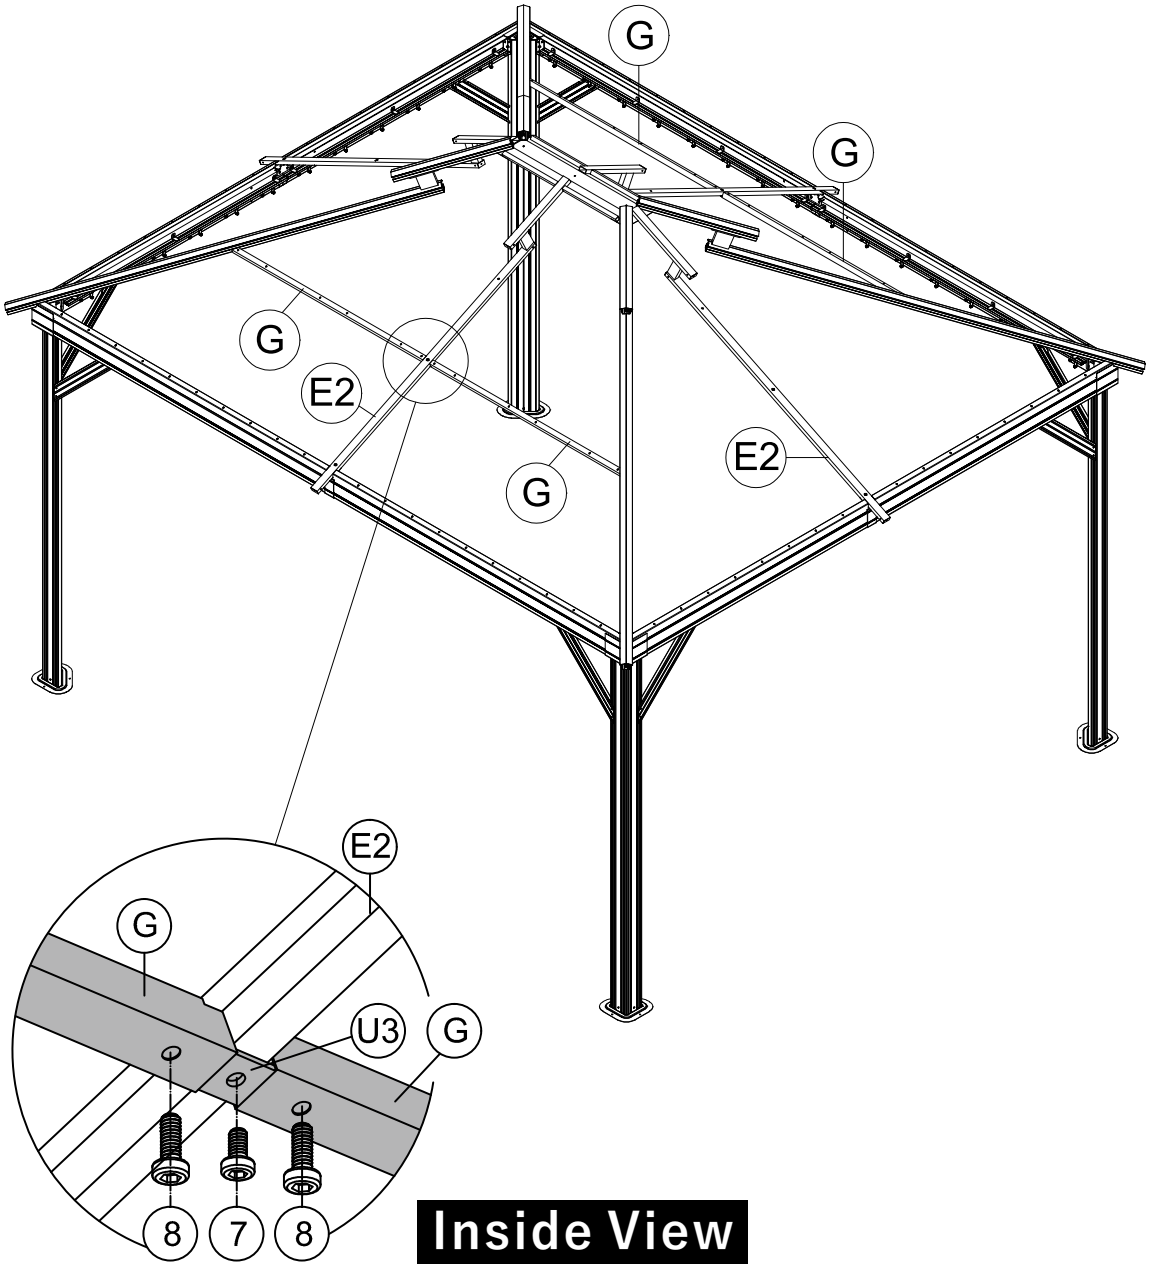



**Inside View**


(1) Insert Part #U3 into Part #G.

(2) Attach Part #G to the Part #E2
with 1 Bolt #7 and 2 Blots #8.


**(3) Repeat the above procedures to assemble the opposite side.**

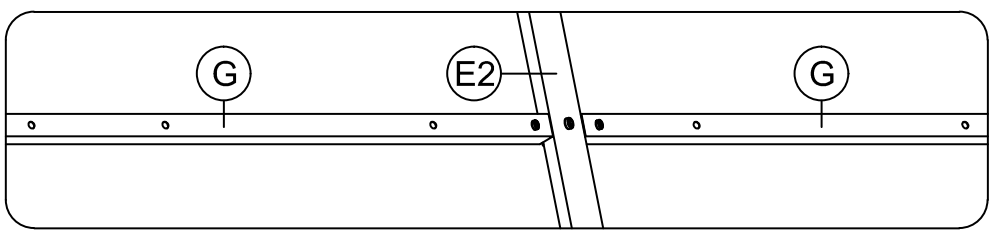


**Outside View**

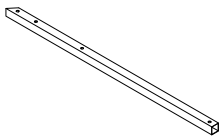

F 4x



U3 2x



S4

1 1x




M6x10

7 2x



M6x16

8 4x

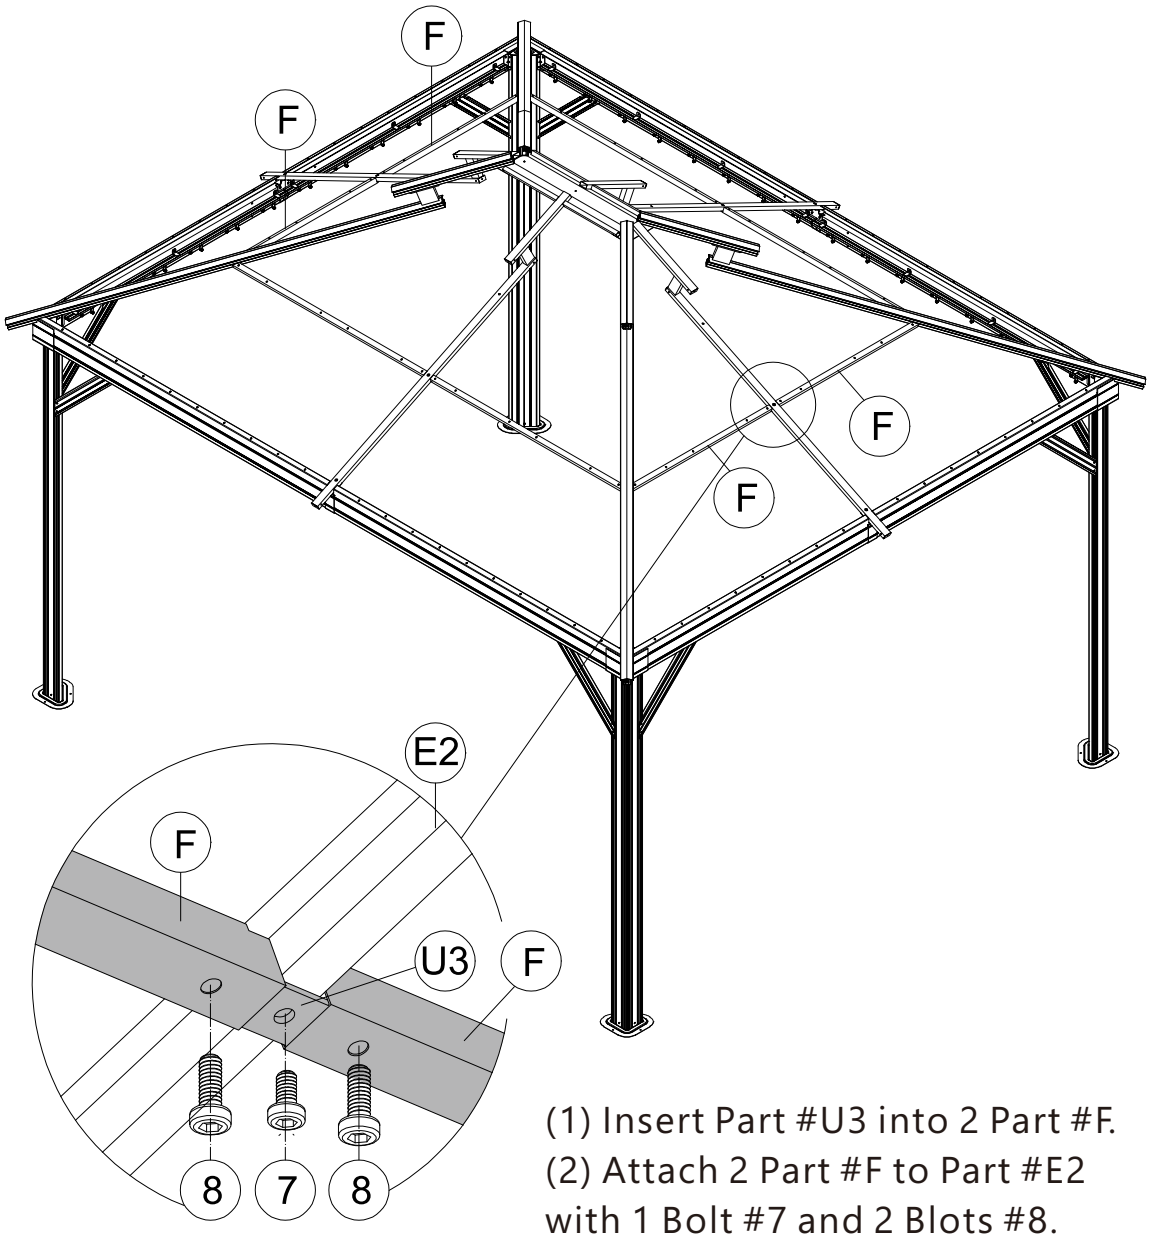






**Inside View**

(1) Insert Part #U3 into 2 Part #F.
(2) Attach 2 Part #F to Part #E2 with 1 Bolt #7 and 2 Blots #8.
(3) Repeat the above procedures to assemble the opposite side

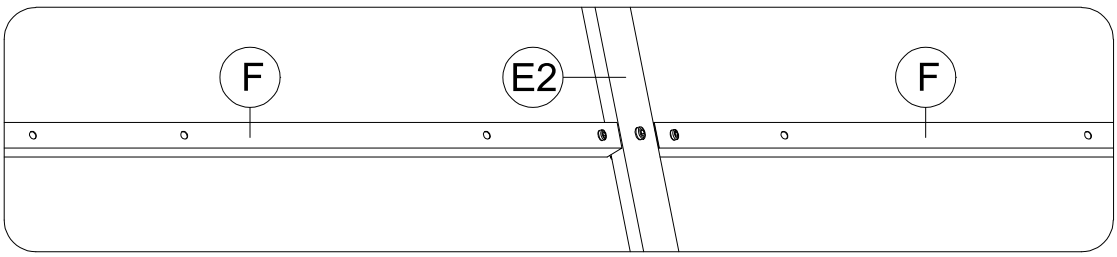


**Outside View**



U2 4x




S4


1 1x



M6x16


8 12x

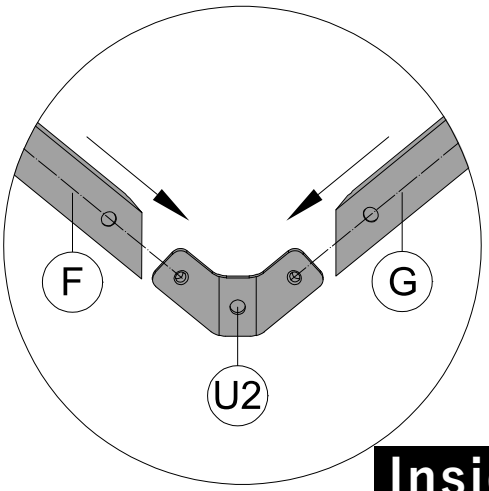


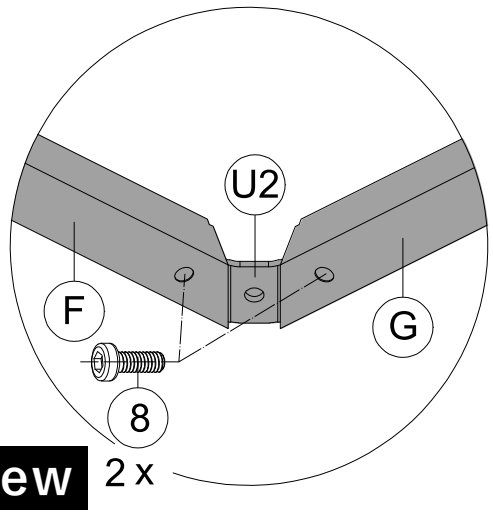
**Inside View** 2 x


(1) Insert Part #U2 into Part #F and Part #G.
(2) Secure with 2 Bolts #8.
(3) Secure them to Part #E with Bolt #8 .



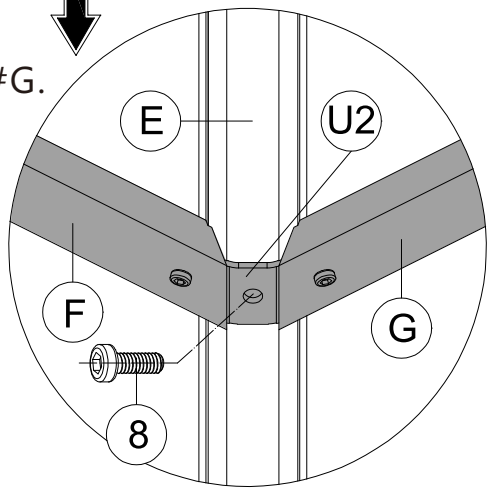


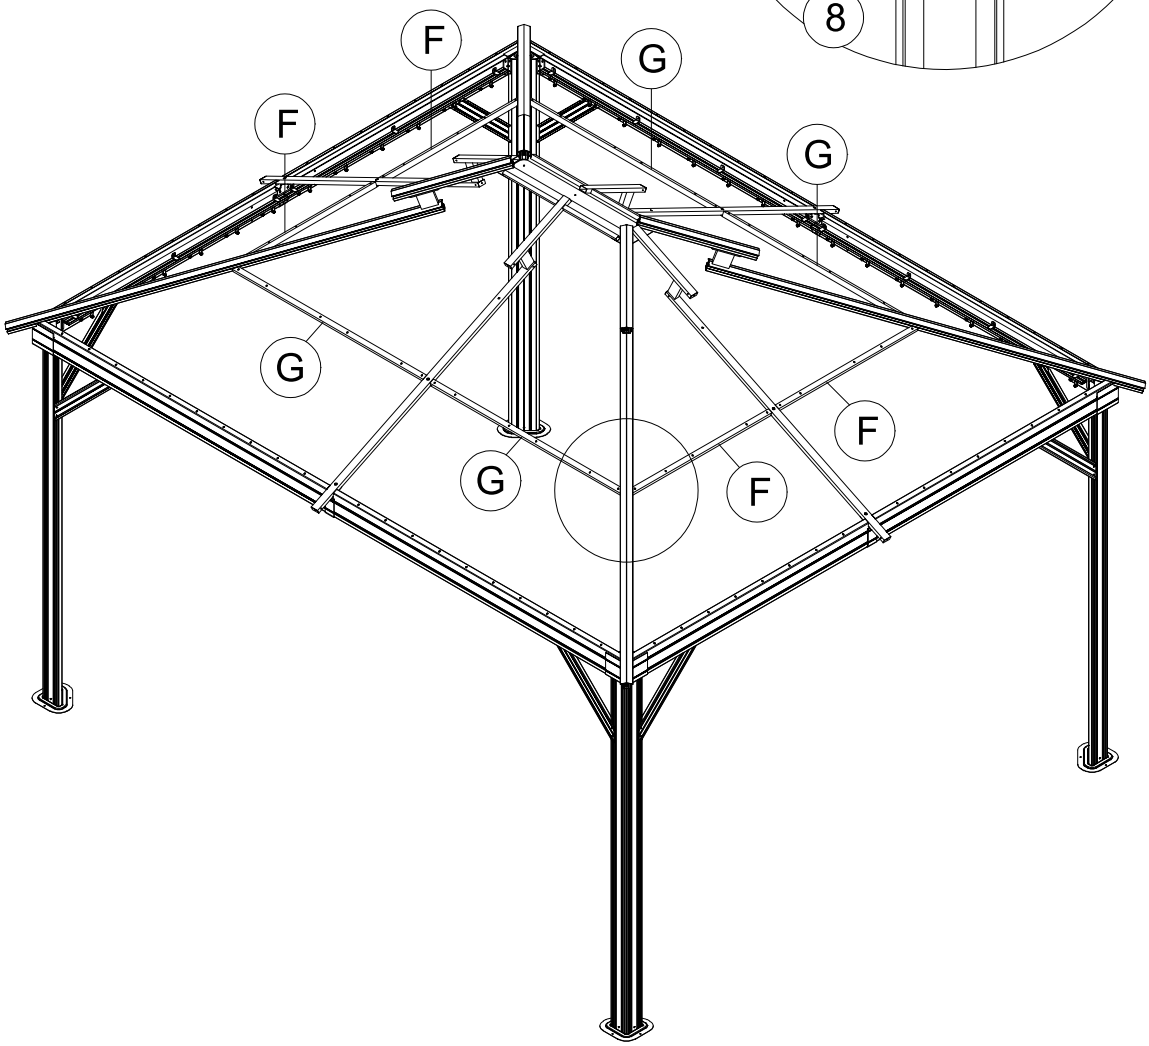


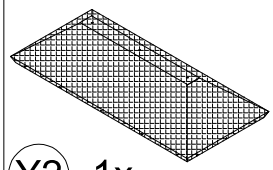

Repeat the above procedures to assemble the other 3 sides.

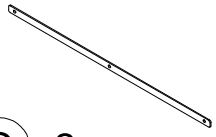


Q 2x

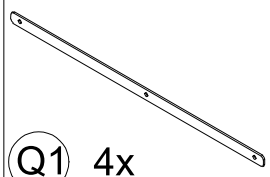


Q1 4x




Y2 1x

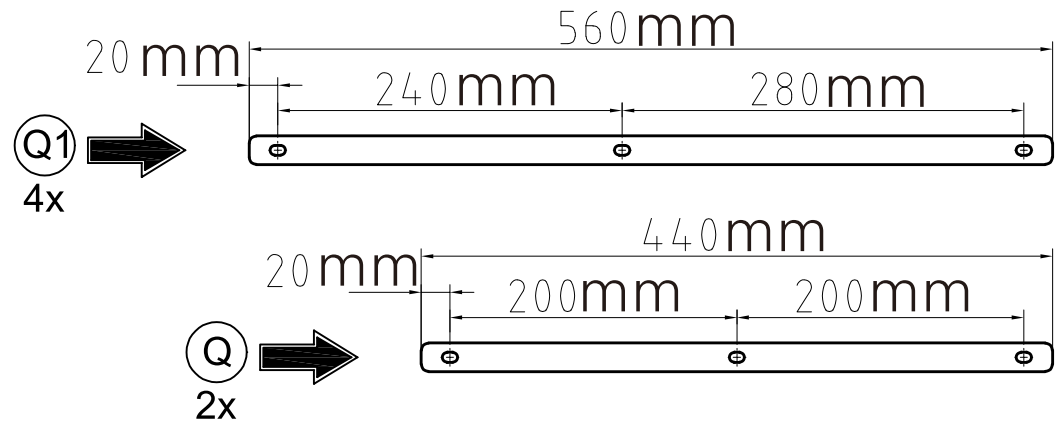



Insert the Plastic Bar into the Small Mesh.

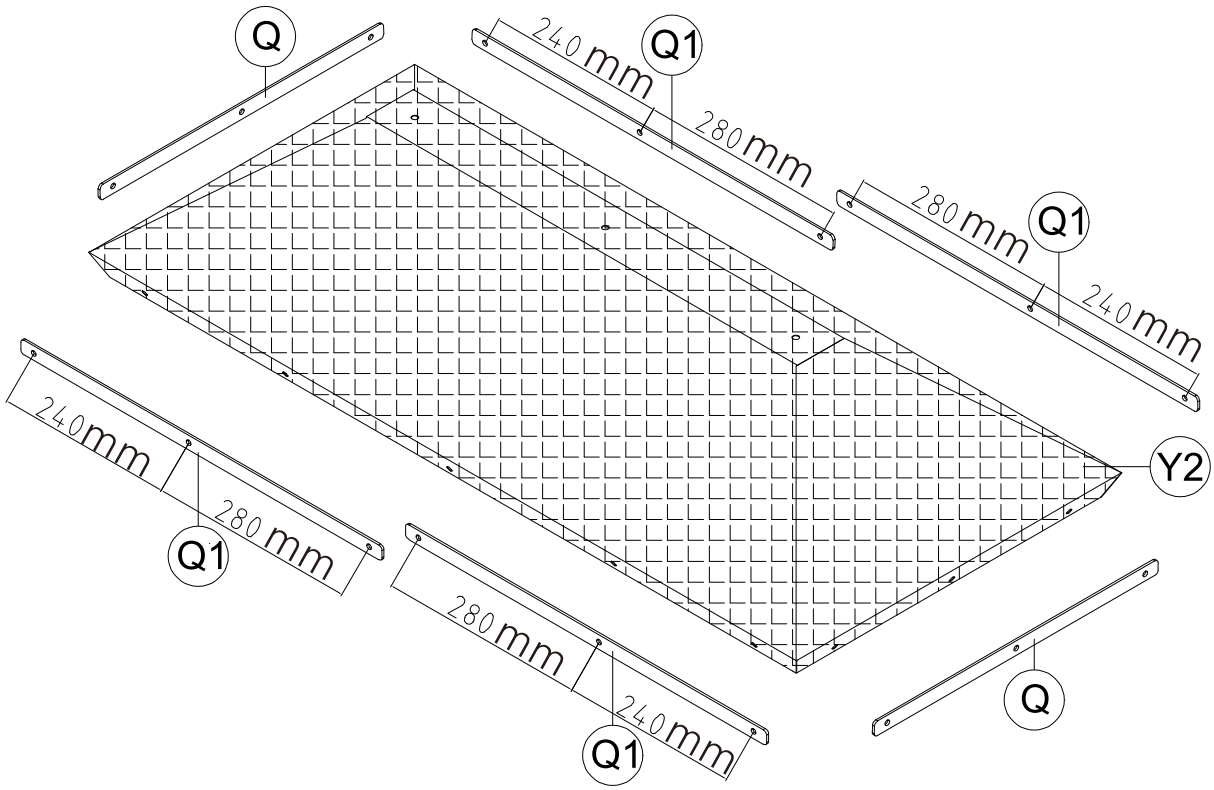

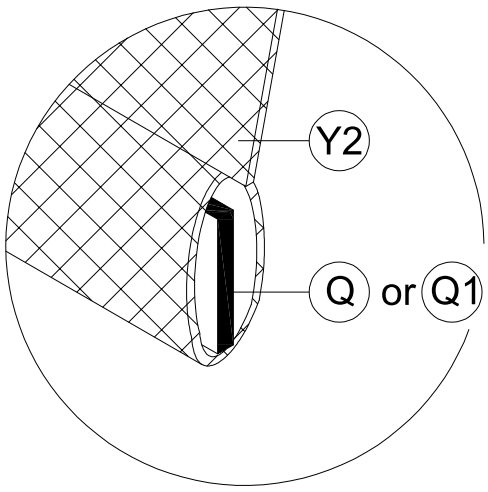




# Insert

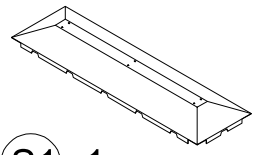
Pay attention to the installation direction of #Q1.




S1 1x




S2 3x

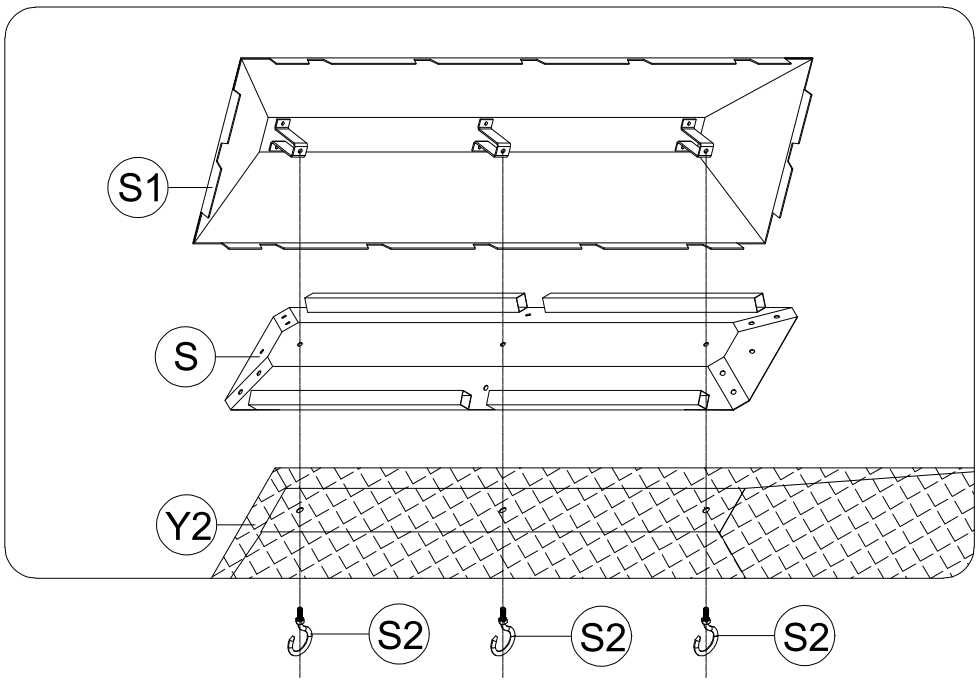


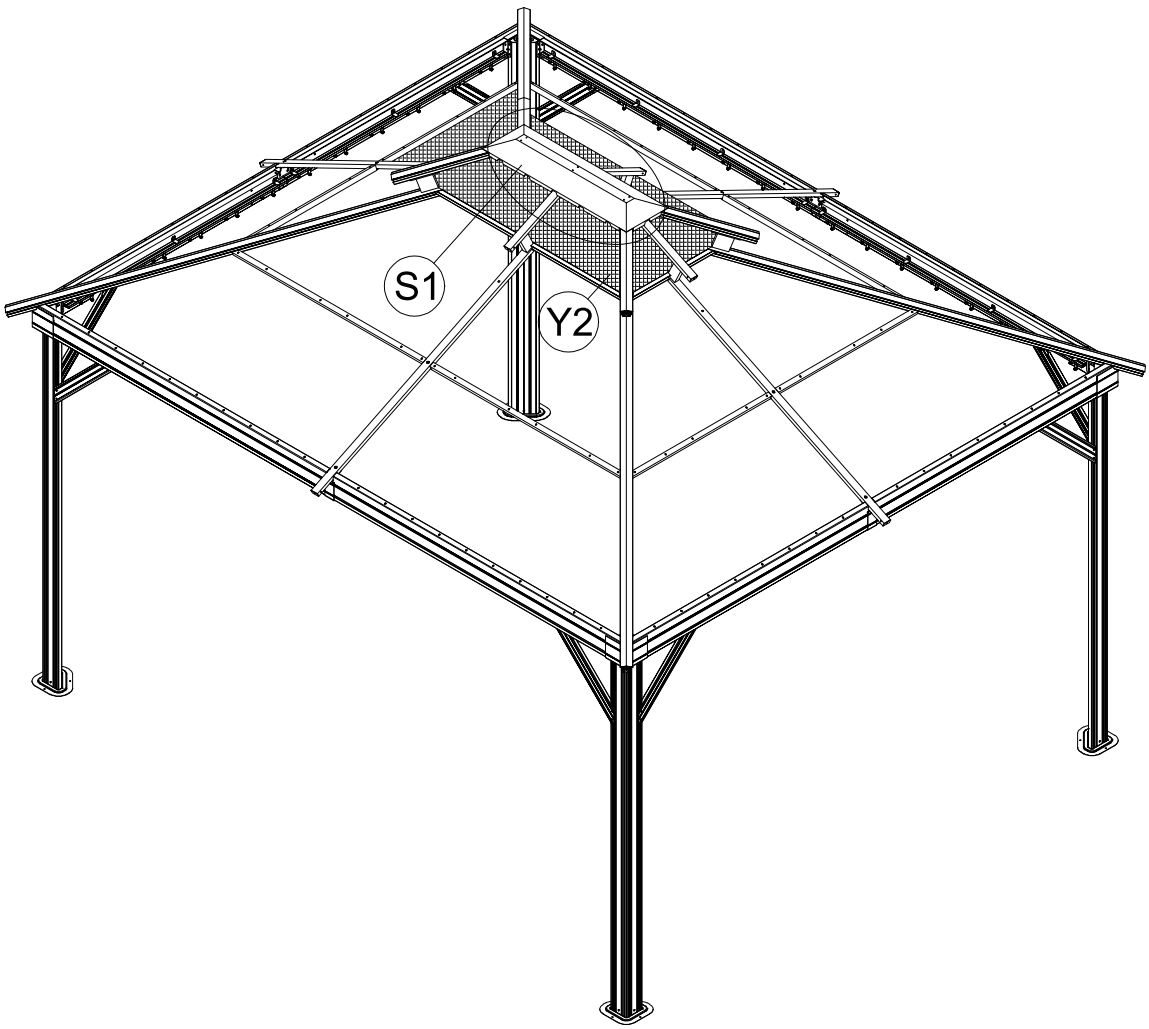
Place the Outside Roof Cover #S1 on the inside Roof Connector #S, align the holes and use 3 Hooks #S2 to secure the Small Mesh #Y2 to the inside Roof Connector(From Bottom to Top).

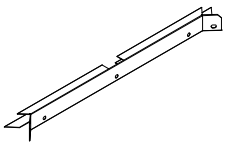

J 2x

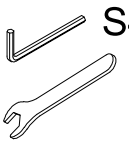

S4

1 1x



ST6.3x18

2 2x



M6


5 4x




M6x16


8 4x

Use Screw #2 to assemble the plastic bar #Q (in the small mesh #Y2) and finishing bar #J to the middle roof tube #E2.

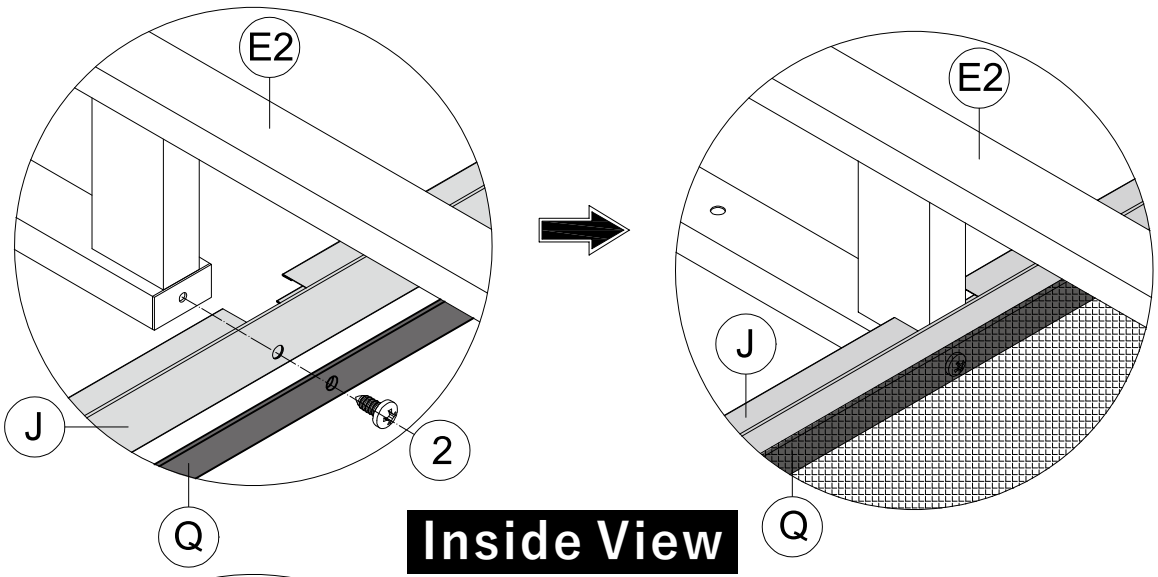



**Inside View**

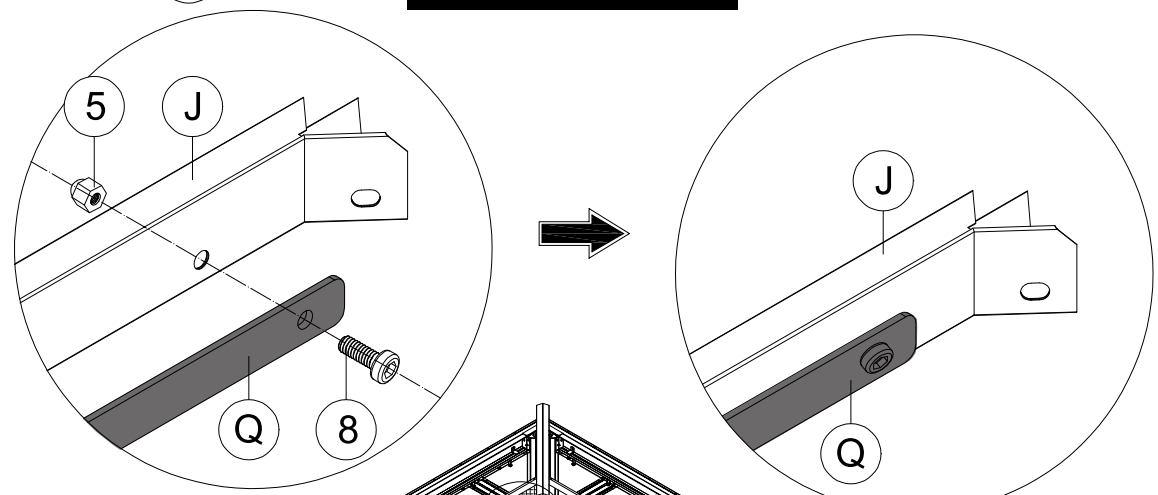


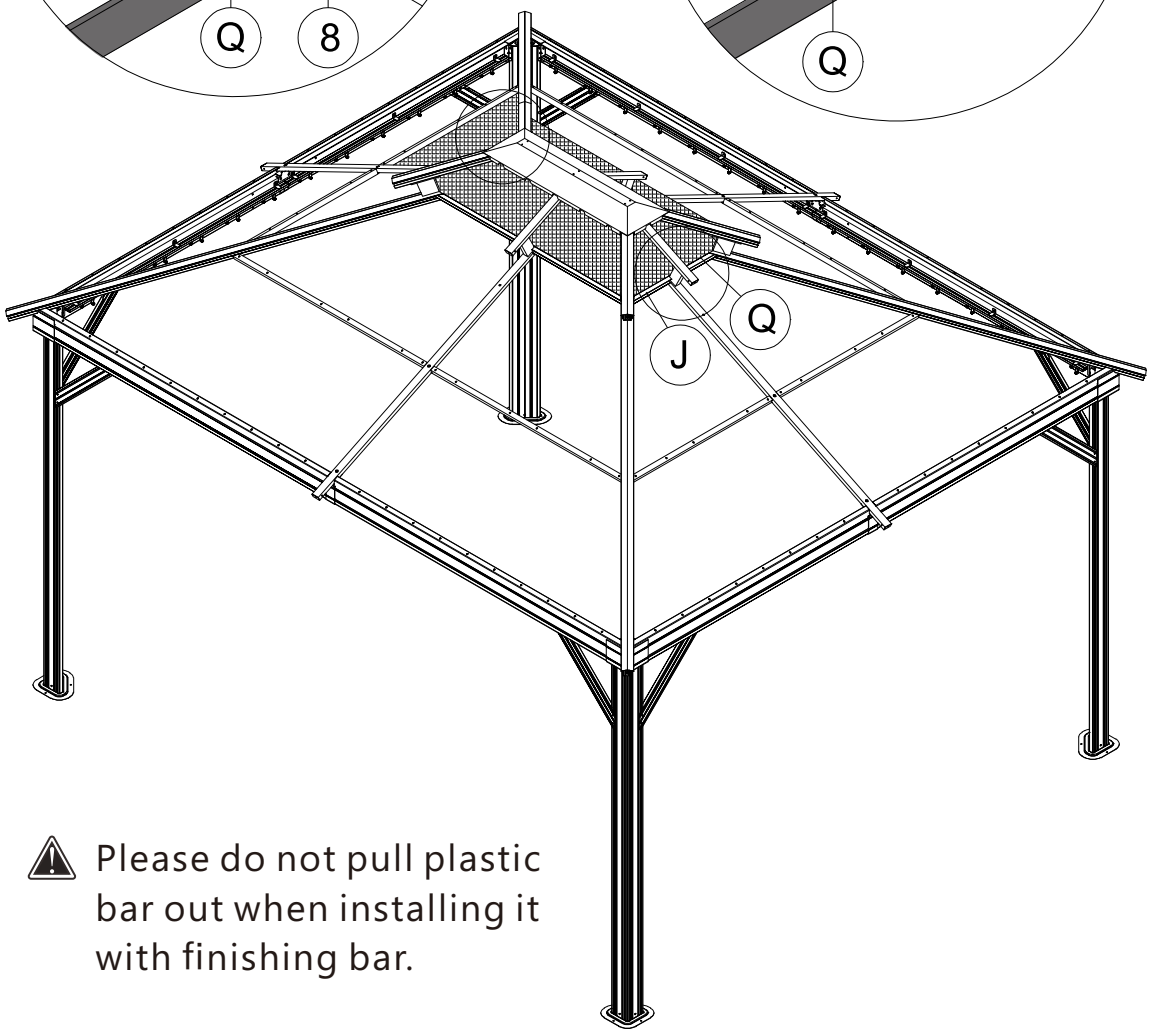
⚠ Please do not pull plastic bar out when installing it with finishing bar.

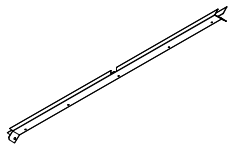

J1 2x

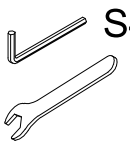

S4

1 1x



ST6.3x18

2 2x



M6


5 8x



M6x16

8 8x

Use Screw #2 to assemble the plastic bar #Q1 (in the small mesh #Y2) and finishing bar #J1 to the middle roof tube #E2.

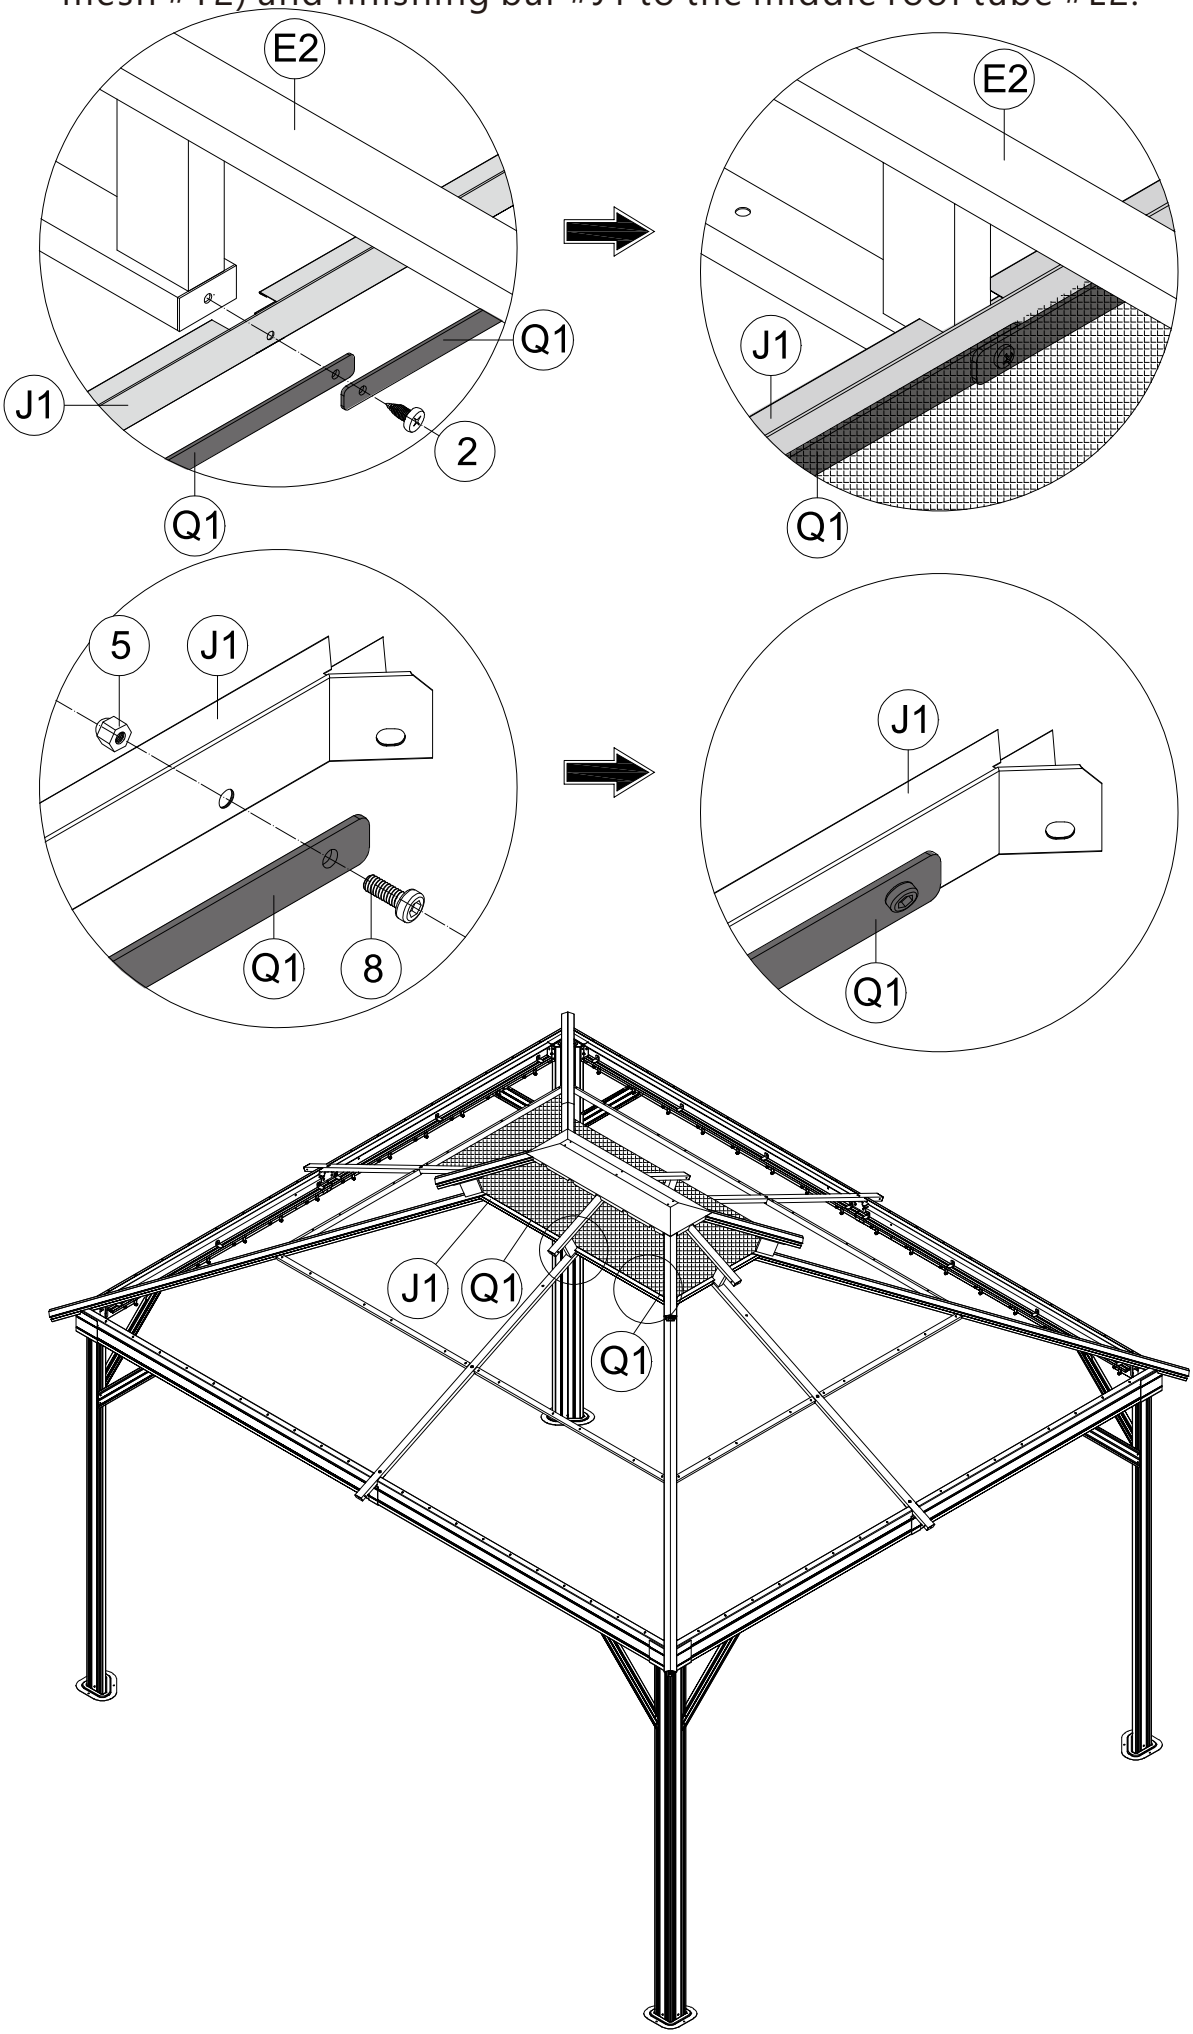




X3 4x




ST6.3x18

2 4x


Use Screw #2 to secure the small mesh, finishing end #X3 and finishing bar to the corner roof tube #E.

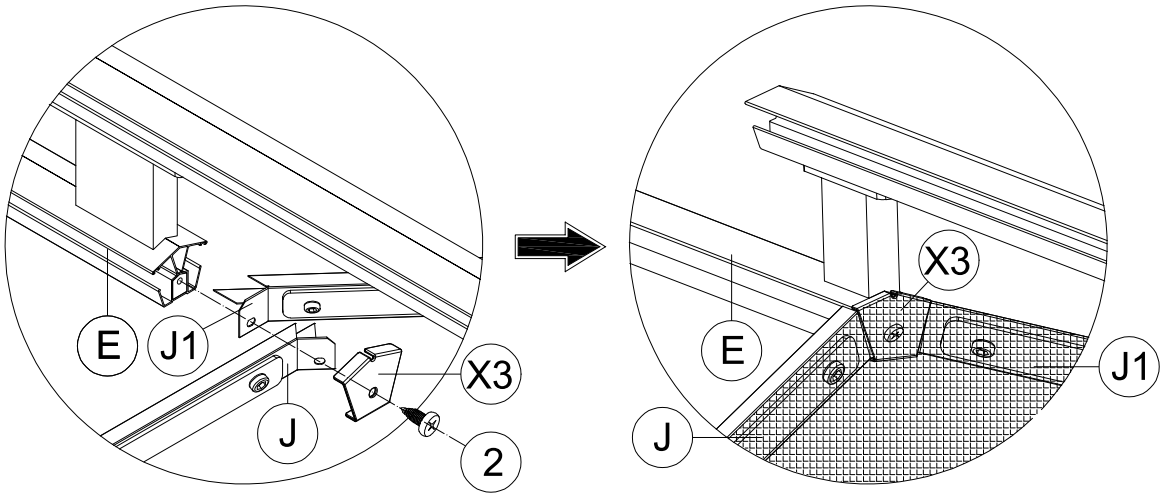



**Inside View**

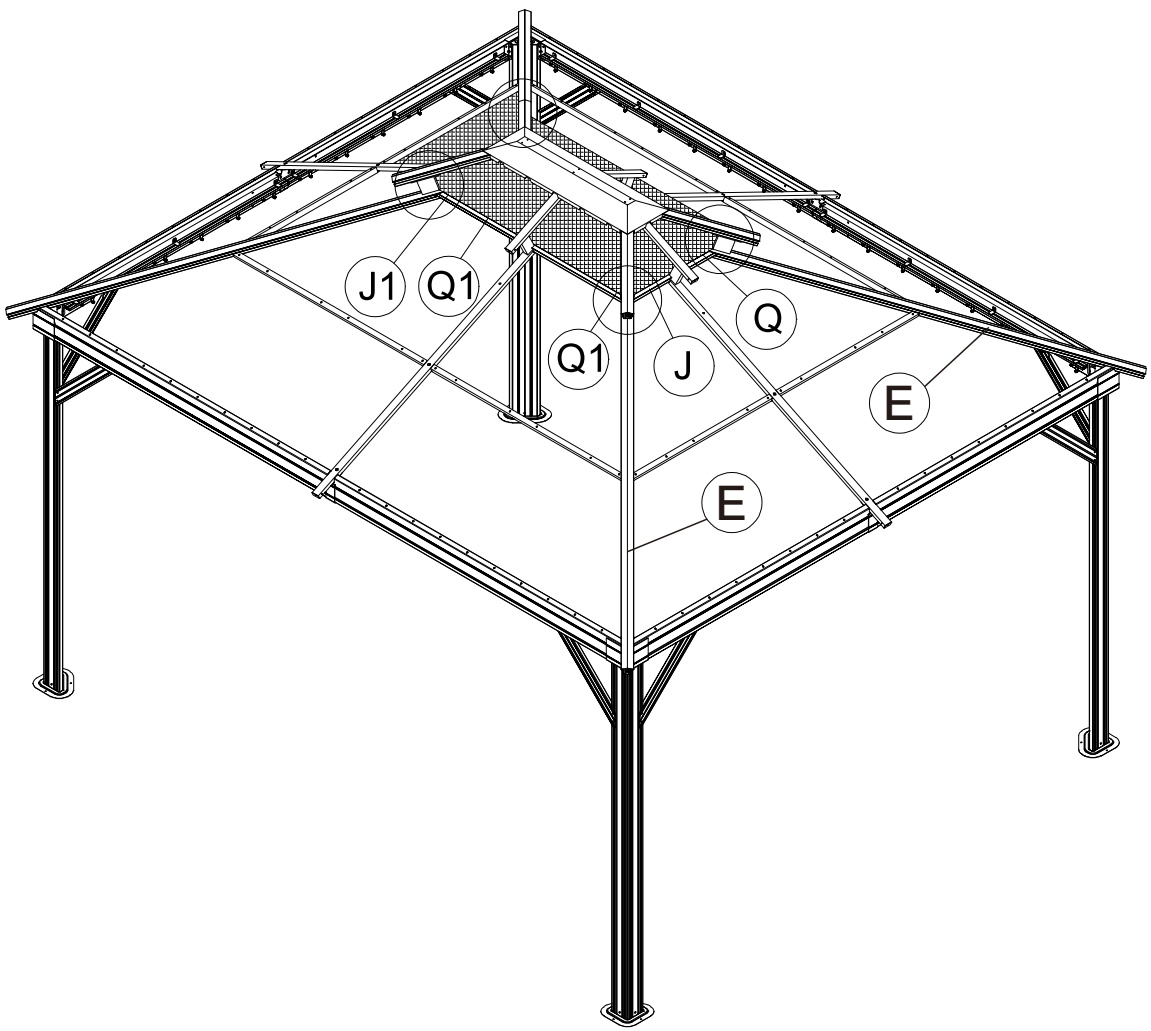


Repeat the above procedures to assemble the other 3 corners.

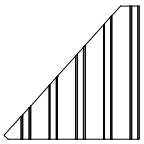

L1 2x

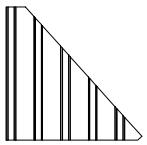

L2 2x




Z 4x





Z1 2x




Z2 2x

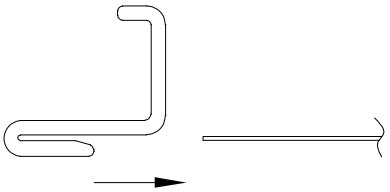

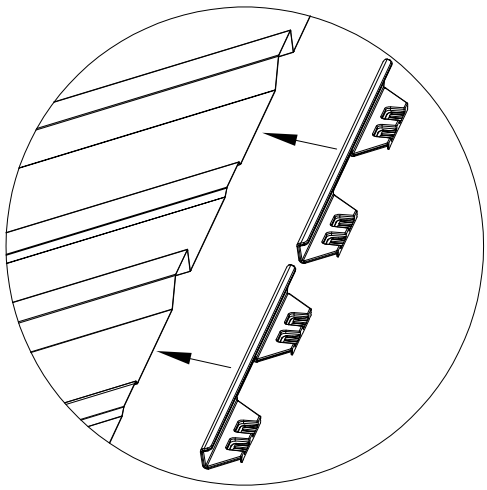


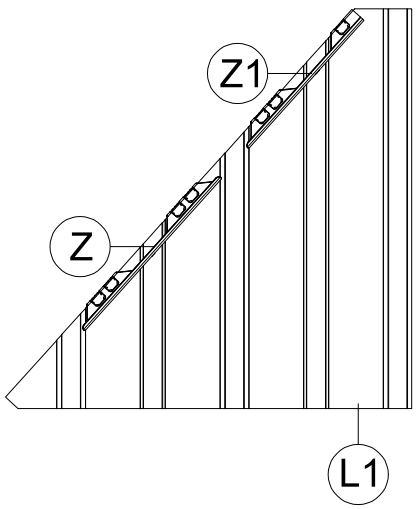




X2

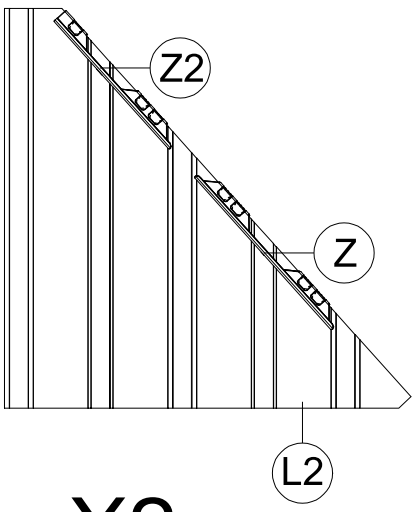


X2

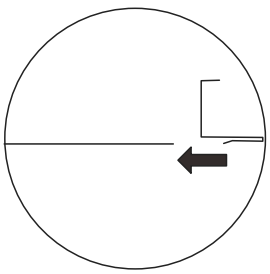

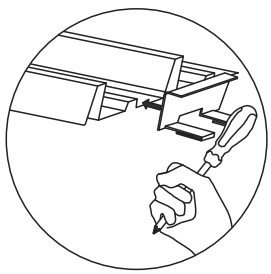

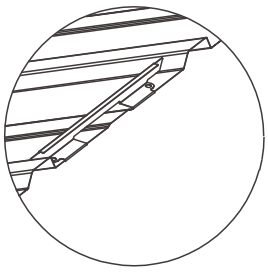


Attach plastic clips #Z #Z1 #Z2 by lightly tapping with a screwdriver.


⚠ **Please install Plastic Clips in strict accordance with the instructions.**




N1 2x

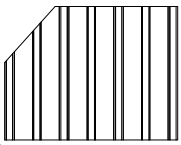


N2 2x

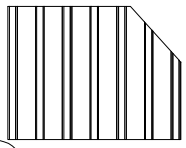


N3 2x




N4 2x




Z 8x

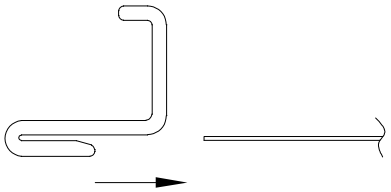


**Section View**

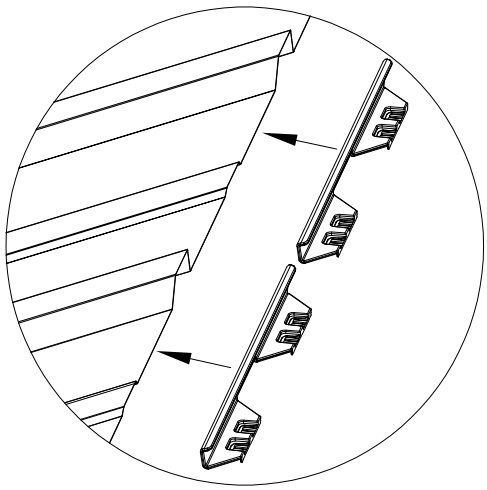

Please install Plastic Clips in strict accordance with the instructions.

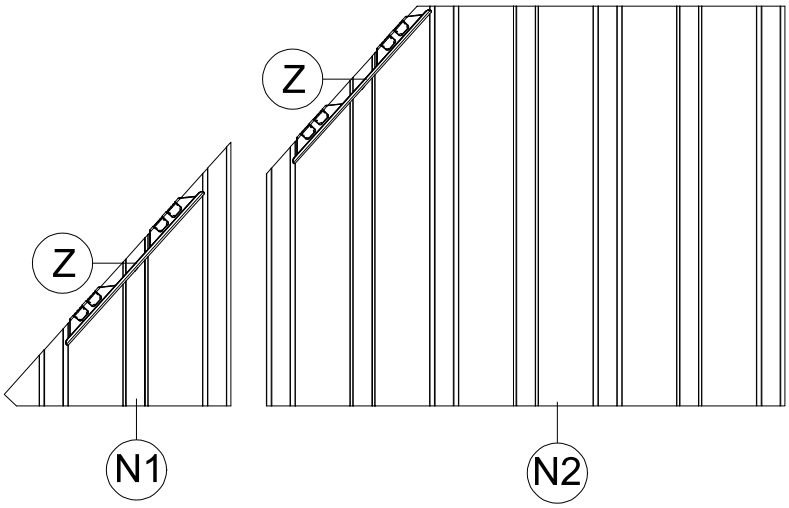




X2

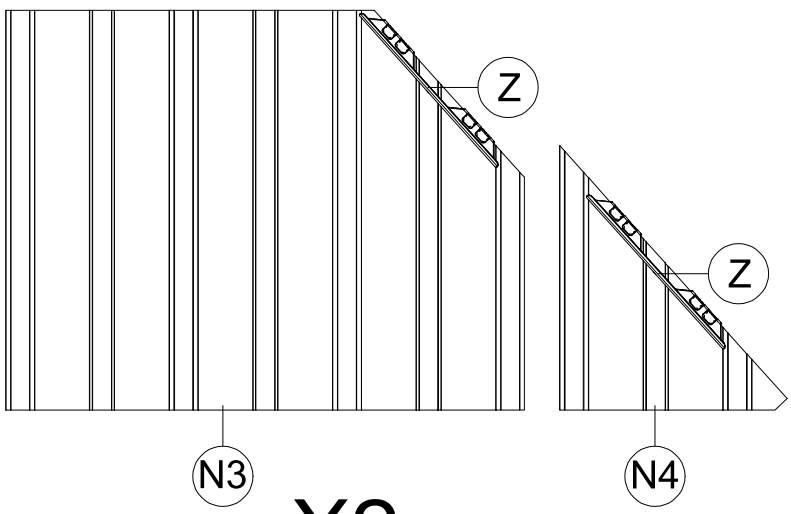


X2

ATTENTION: The bigger roof panel need to cover the smaller one.

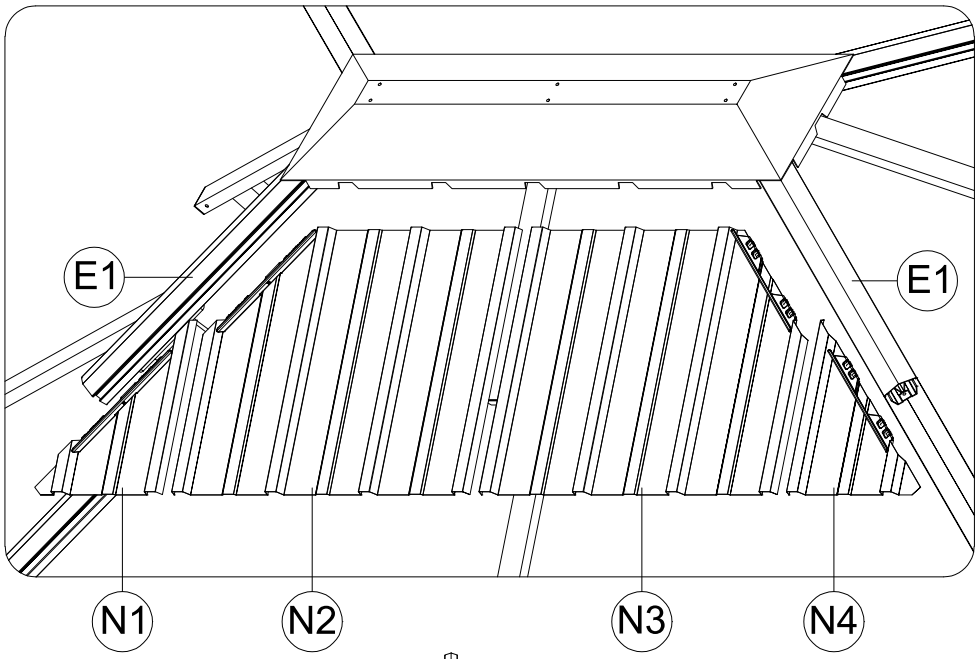

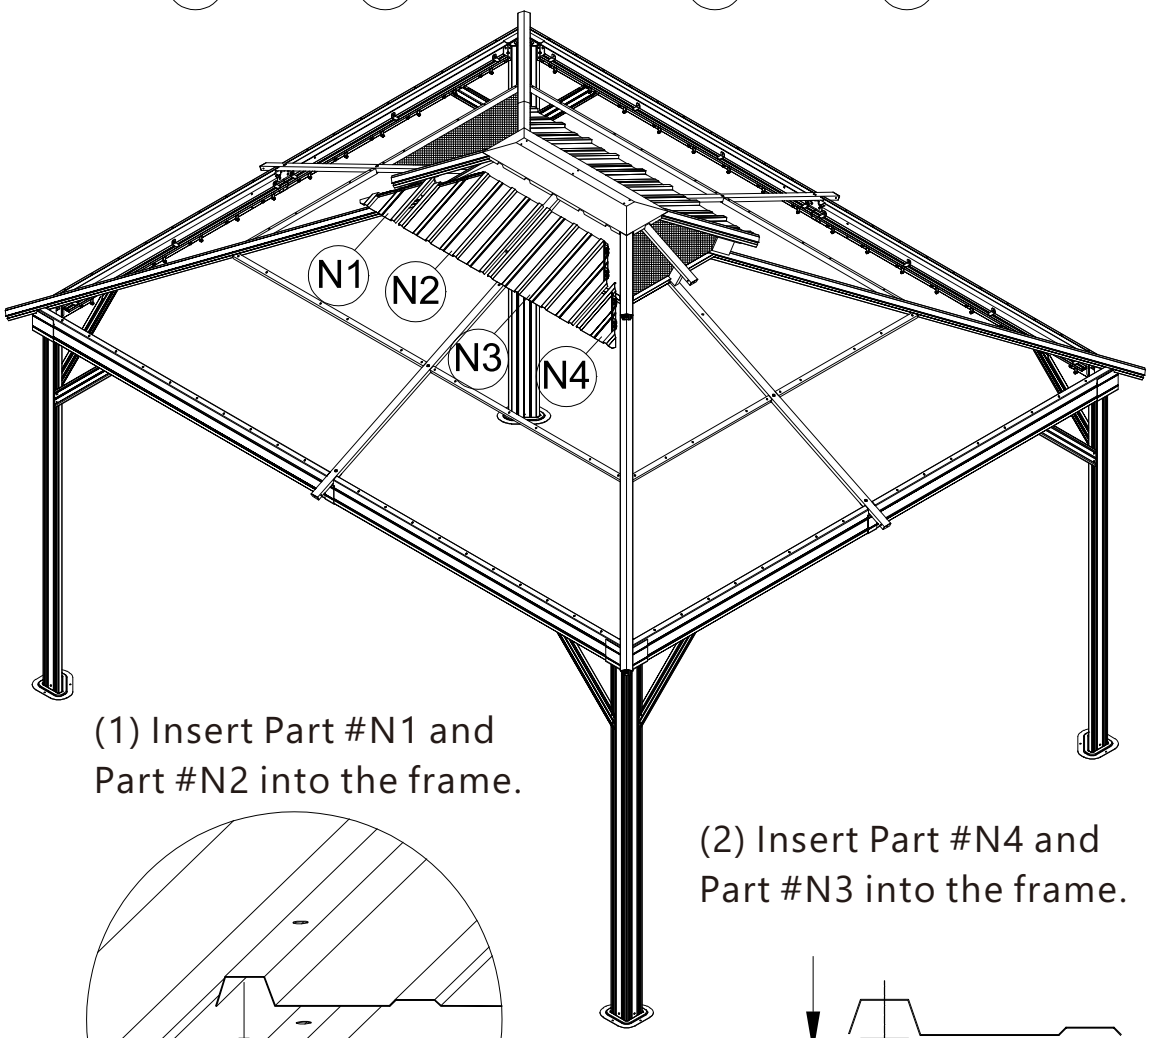

(1) Insert Part #N1 and
Part #N2 into the frame.



(2) Insert Part #N4 and
Part #N3 into the frame.



You can also install the Finishing Bar #H,H1 first in the following steps.




H1 2x




ST6.3x18

2 2x

Attach Part #H1 to Part #E2, securing with Screw #2.

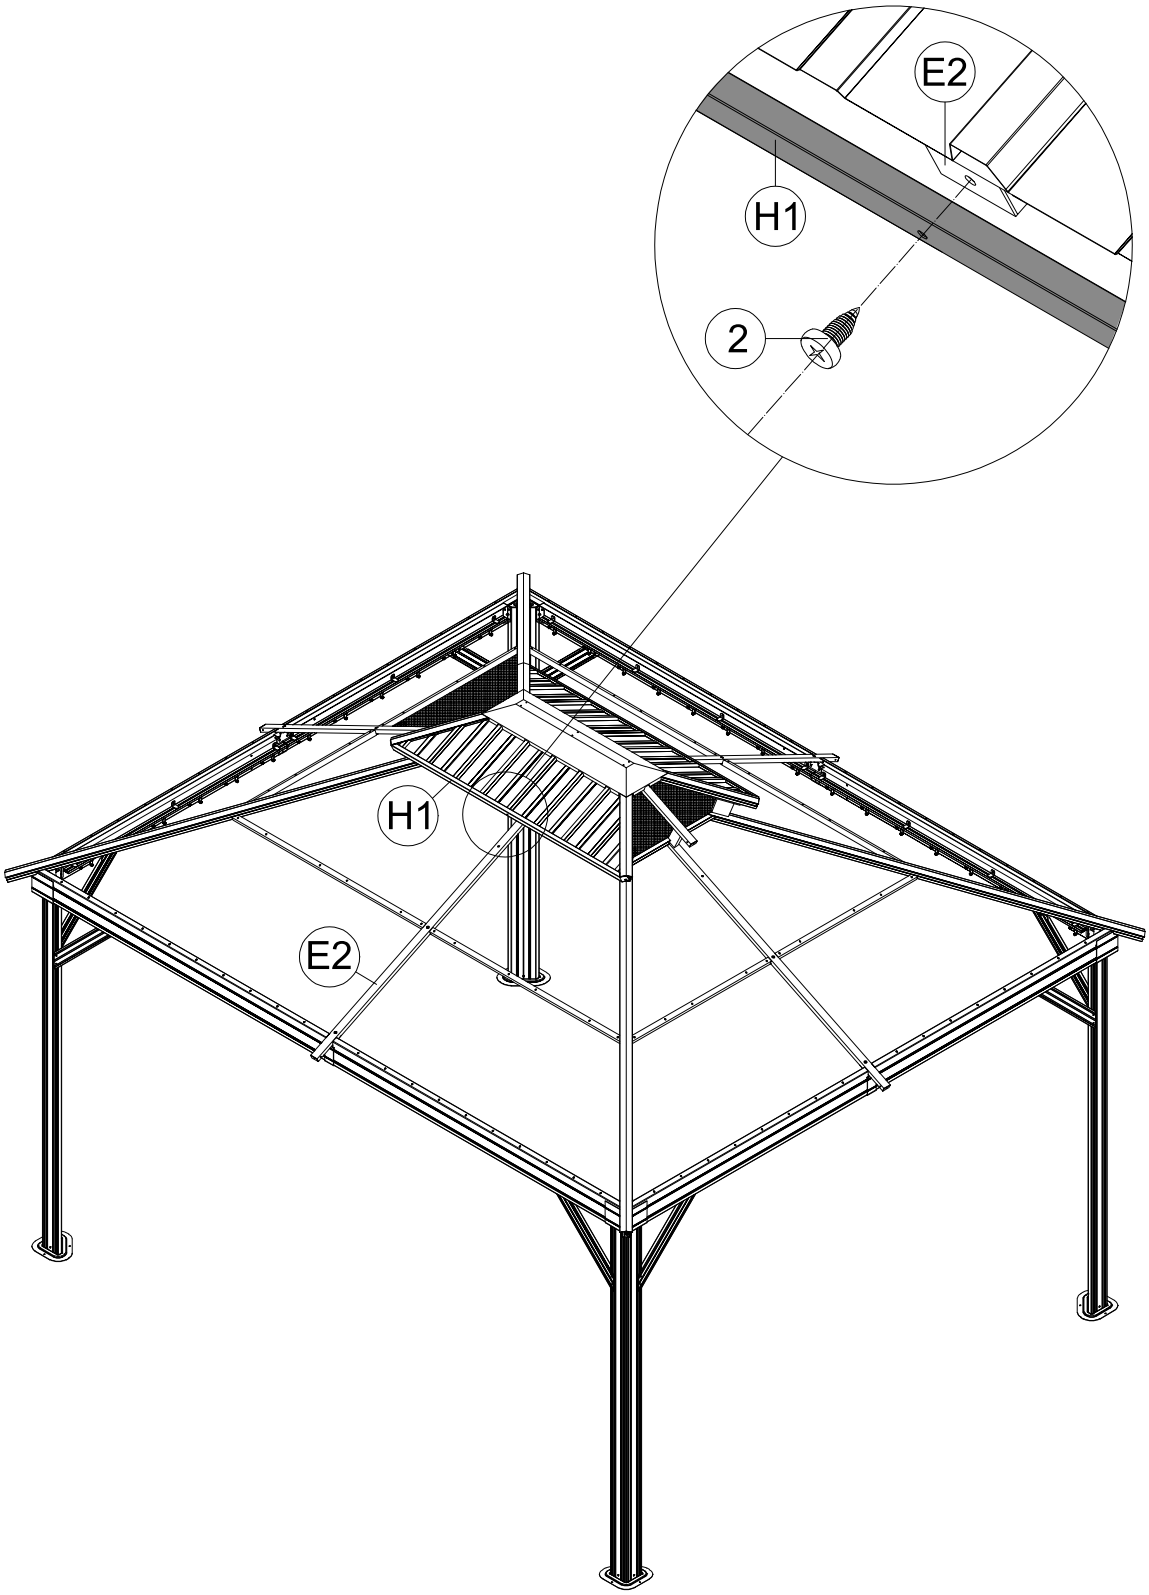


Repeat the above procedures to assemble the opposite side.

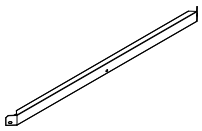


H 2x




ST6.3x18

2 2x

(1) Insert Part #L1 and Part #L2 into the frame.

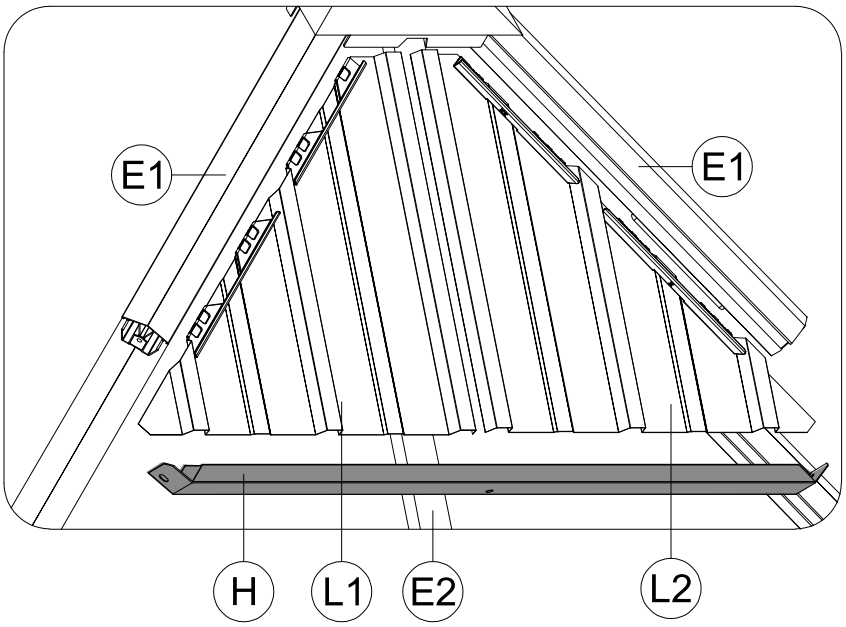

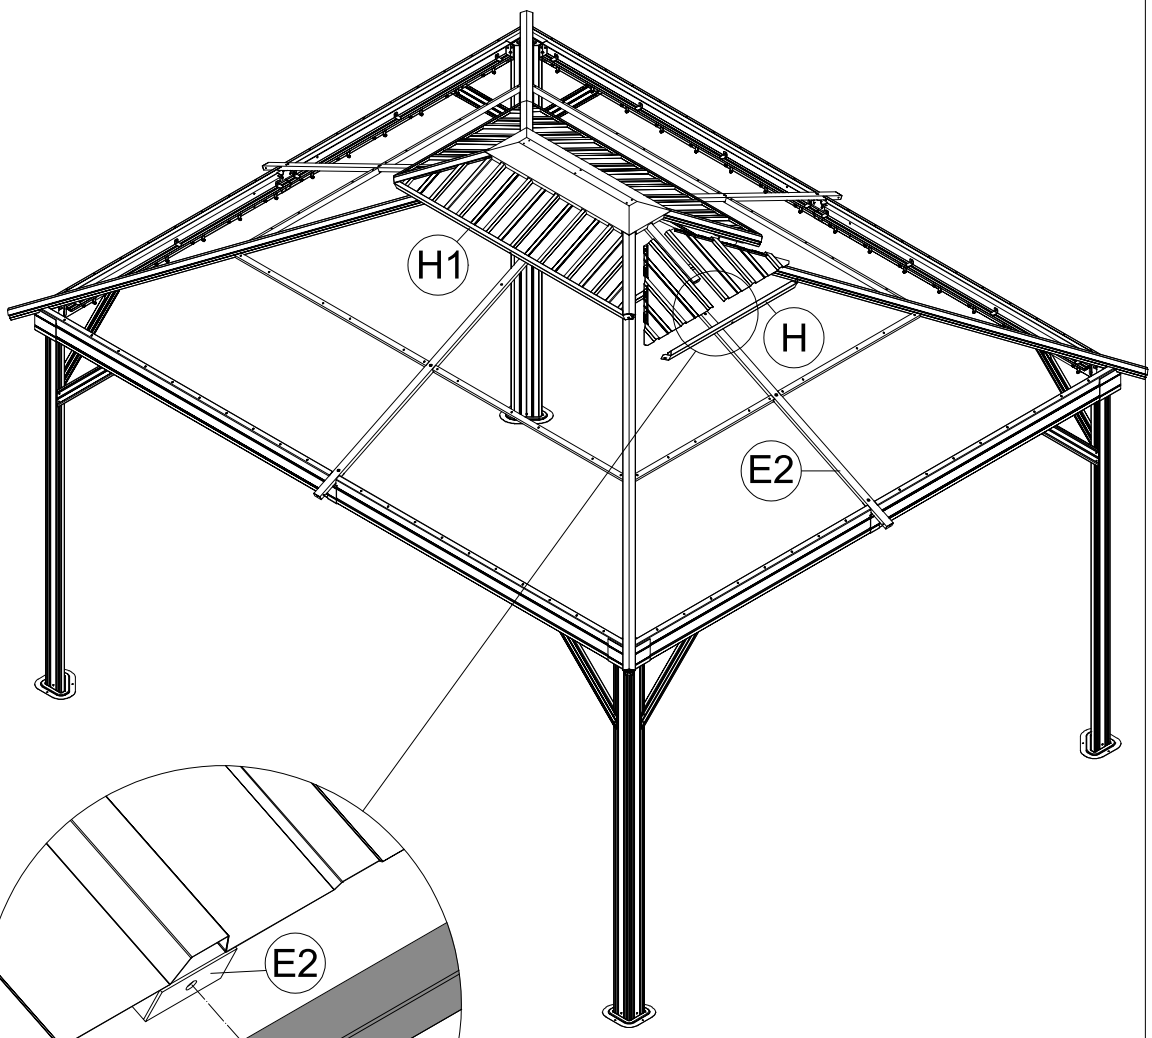



(2) Attach Part #H to Part #E2, securing with Screw #2.

Repeat the above procedures to assemble the opposite side.




X3 4x



ST6.3x18


2 4x

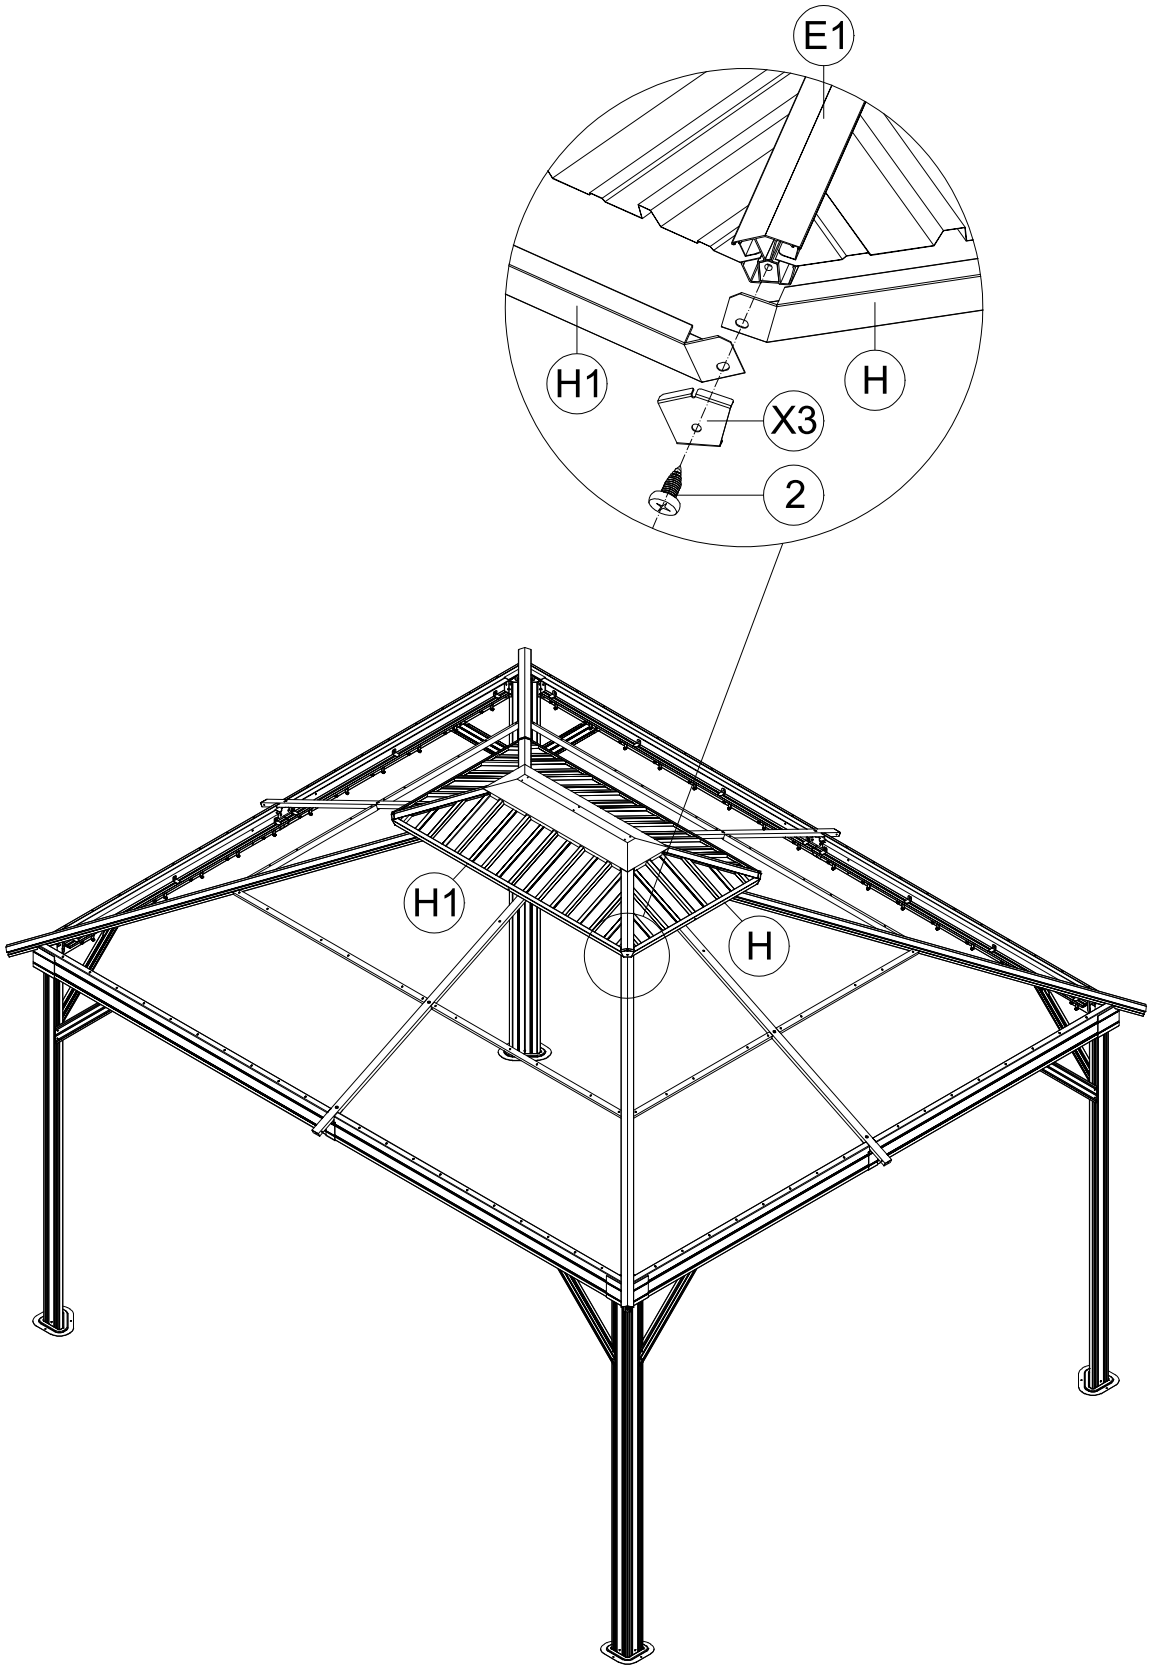



Place Part #H and Part #H1 on Part #E1, put on Part #X3 and secure with Screw #2.
Repeat the above procedures to assemble the other 3 corners.




M1 2x




M2 2x



M3 2x



M4 2x





Z 14x




Z3 2x

Install Part #Z,#Z3 to Roof Panels.

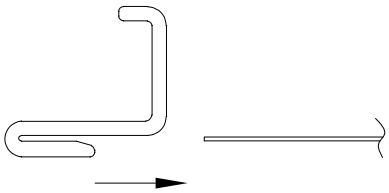


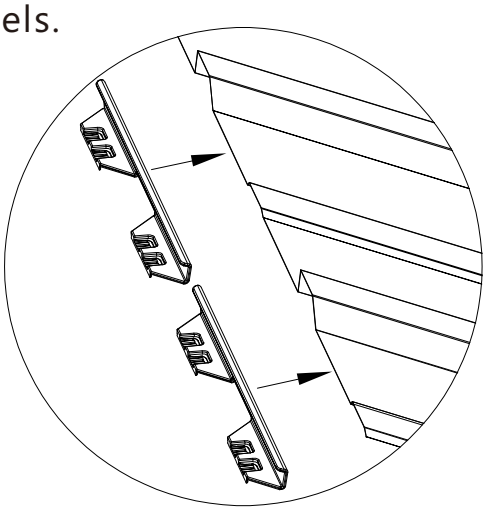

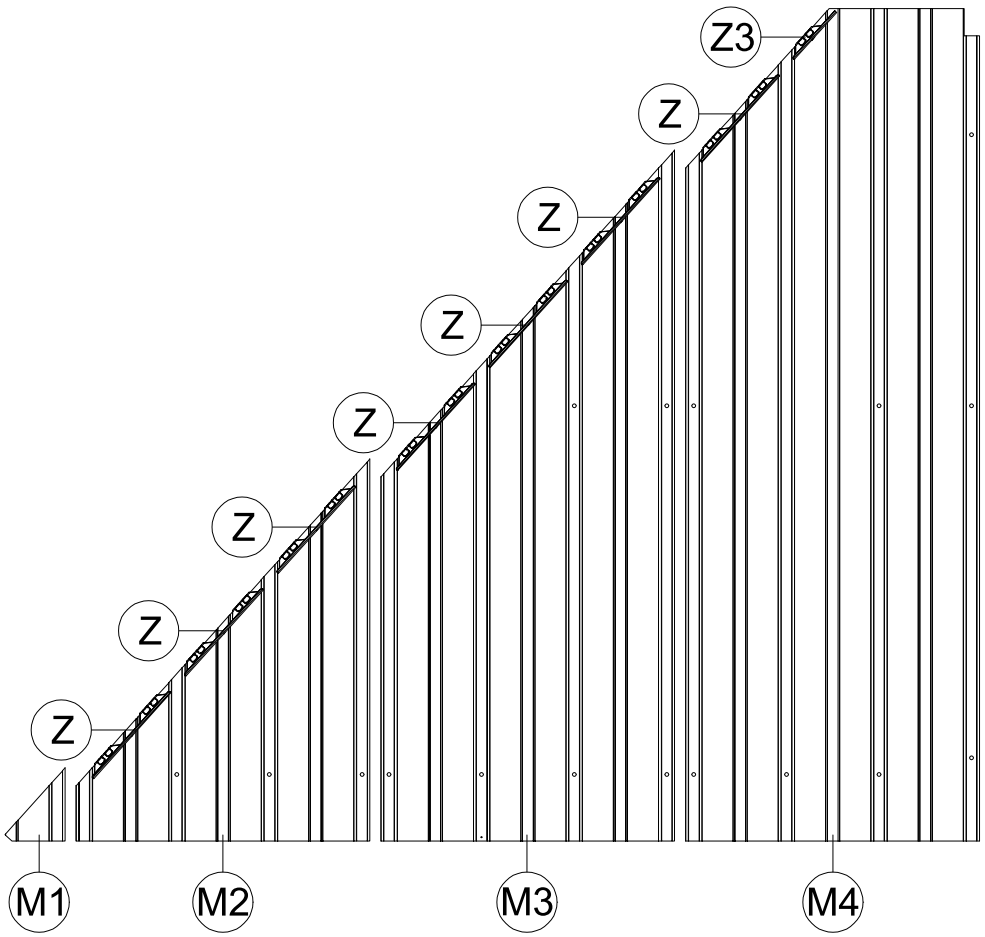



X2


Please install Plastic Clips in strict accordance with the instructions.



M5 2x




M6 2x



M7 2x



M8 2x





Z 14x




Z4 2x

Install Part #Z & #Z4 to Roof Panels.

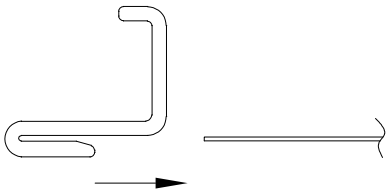

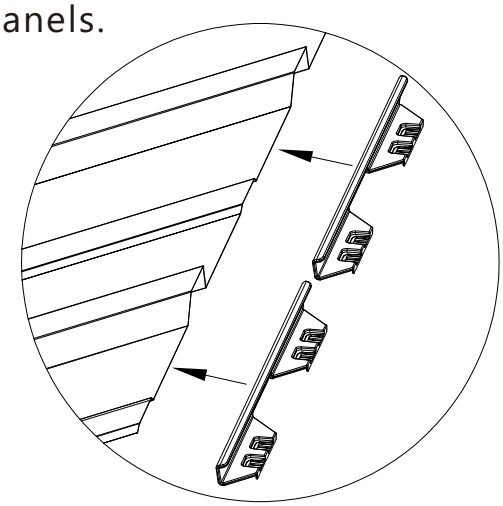

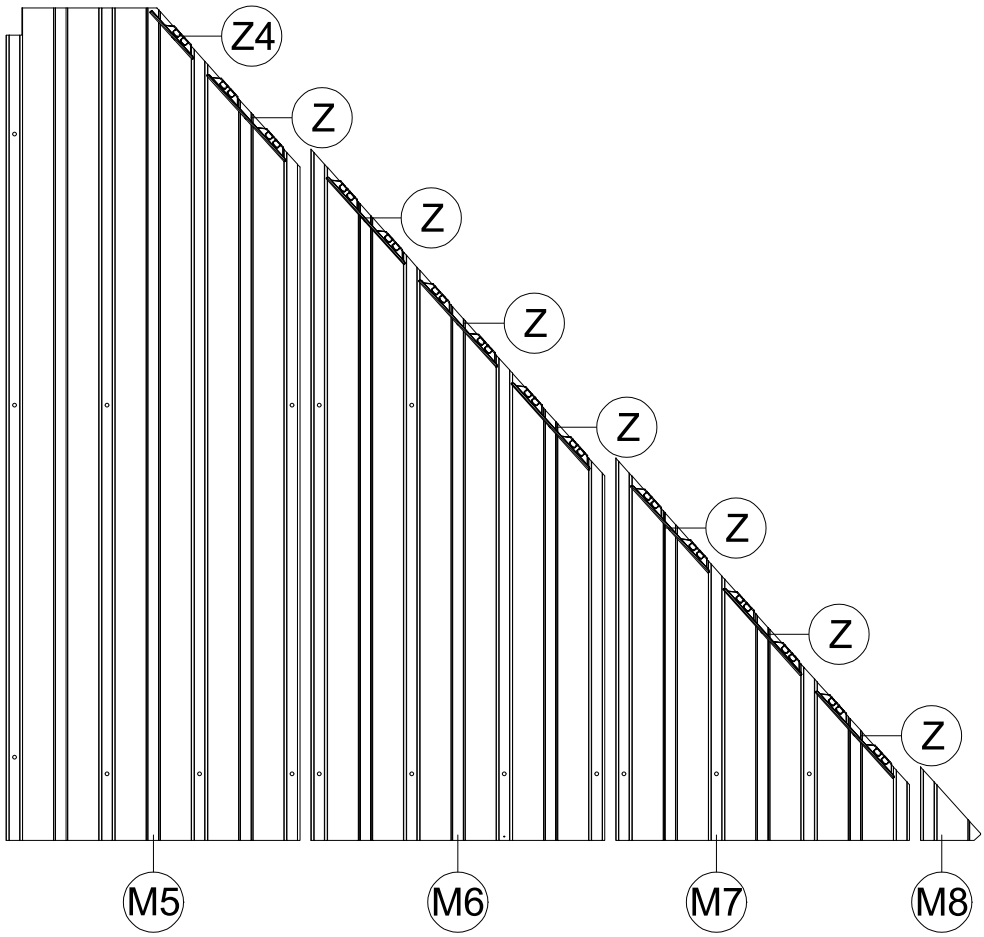



X2

Please install Plastic Clips in strict accordance with the instructions.




P1 2x




P2 2x



P3 2x



P4 2x





Z 14x




Z3 2x

Install Part #Z & #Z3 to Roof Panels.

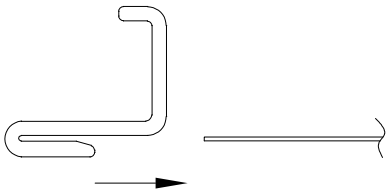

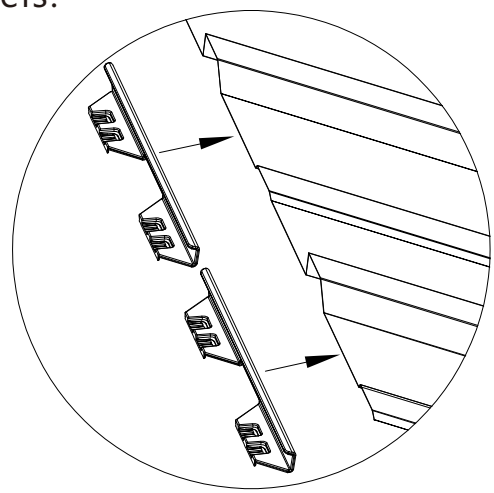

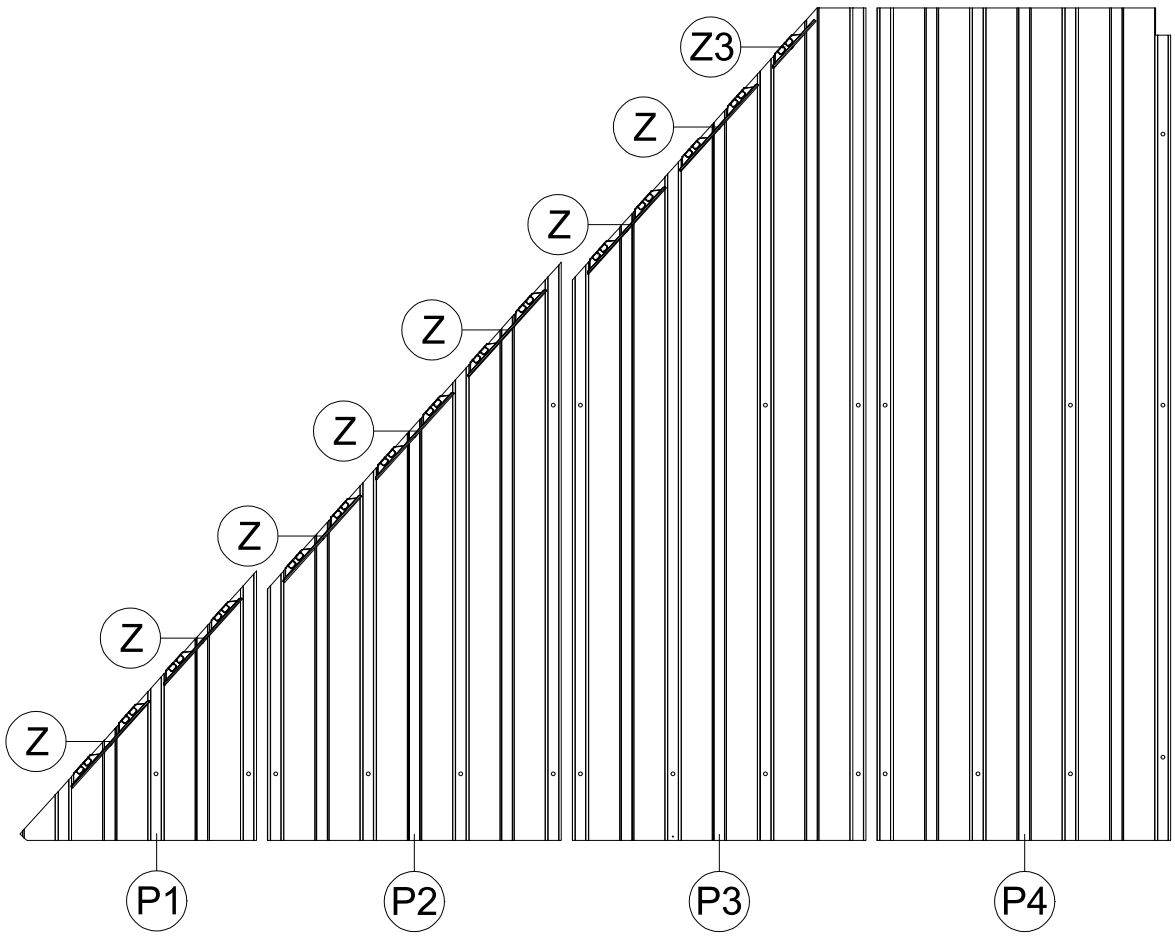


X2




Please install Plastic Clips in strict accordance with the instructions.



P5 2x




P6 2x



P7 2x



P8 2x





Z 14x




Z4 2x

Install Part #Z & #Z4 to Roof Panels.

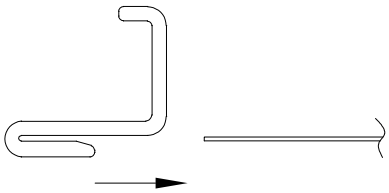


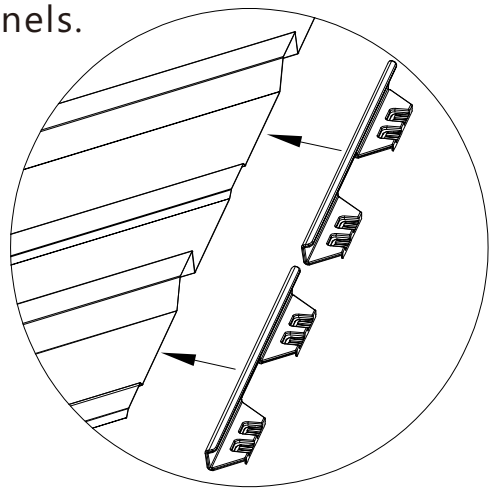

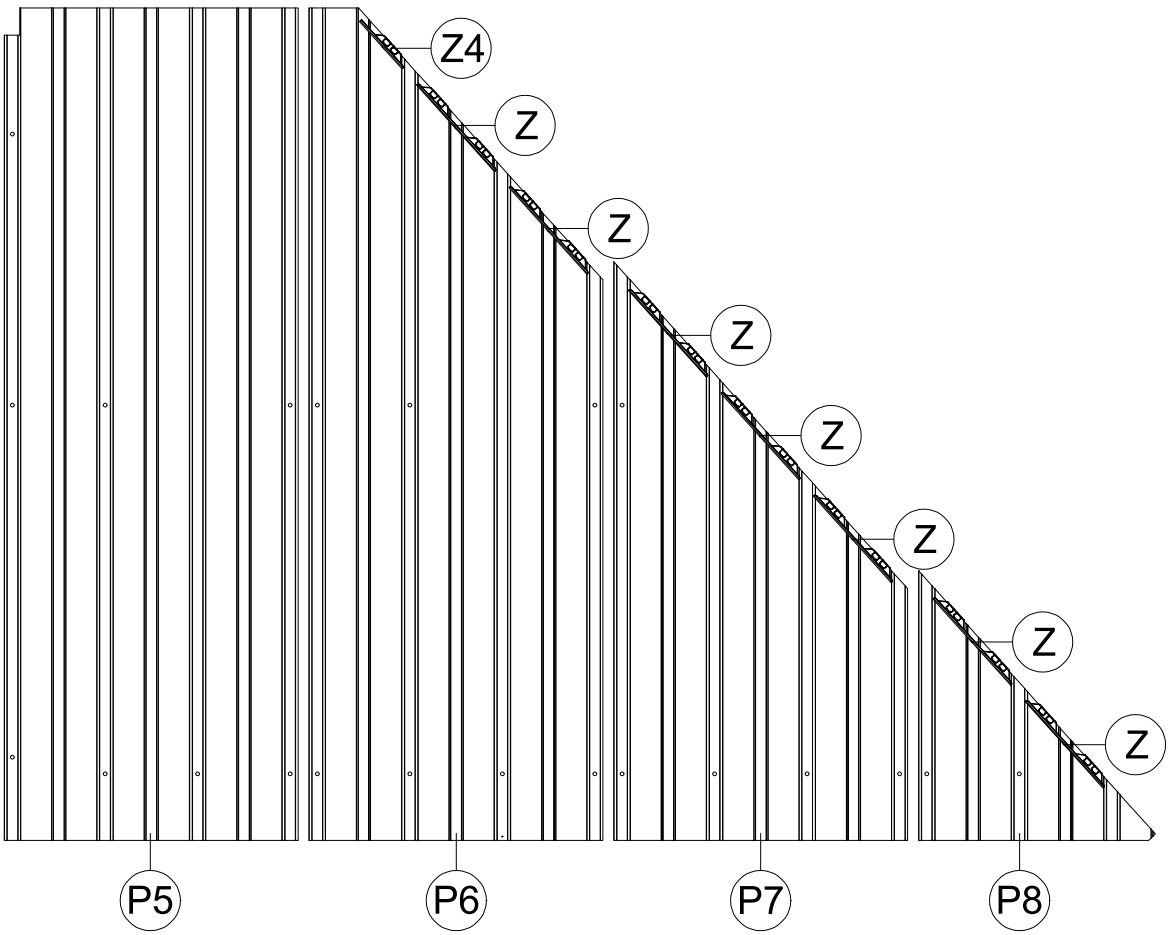




X2


Please install Plastic Clips in strict accordance with the instructions.

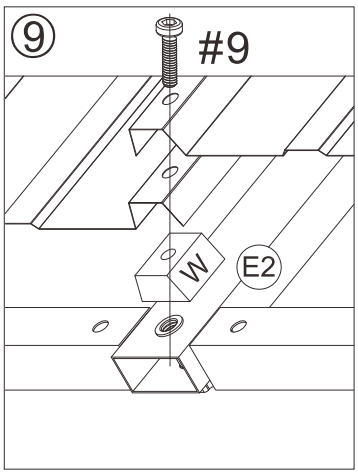



⚠ Part #W should be inserted between roof panels and solidifying bar or beams, then secure with bolts and nuts.

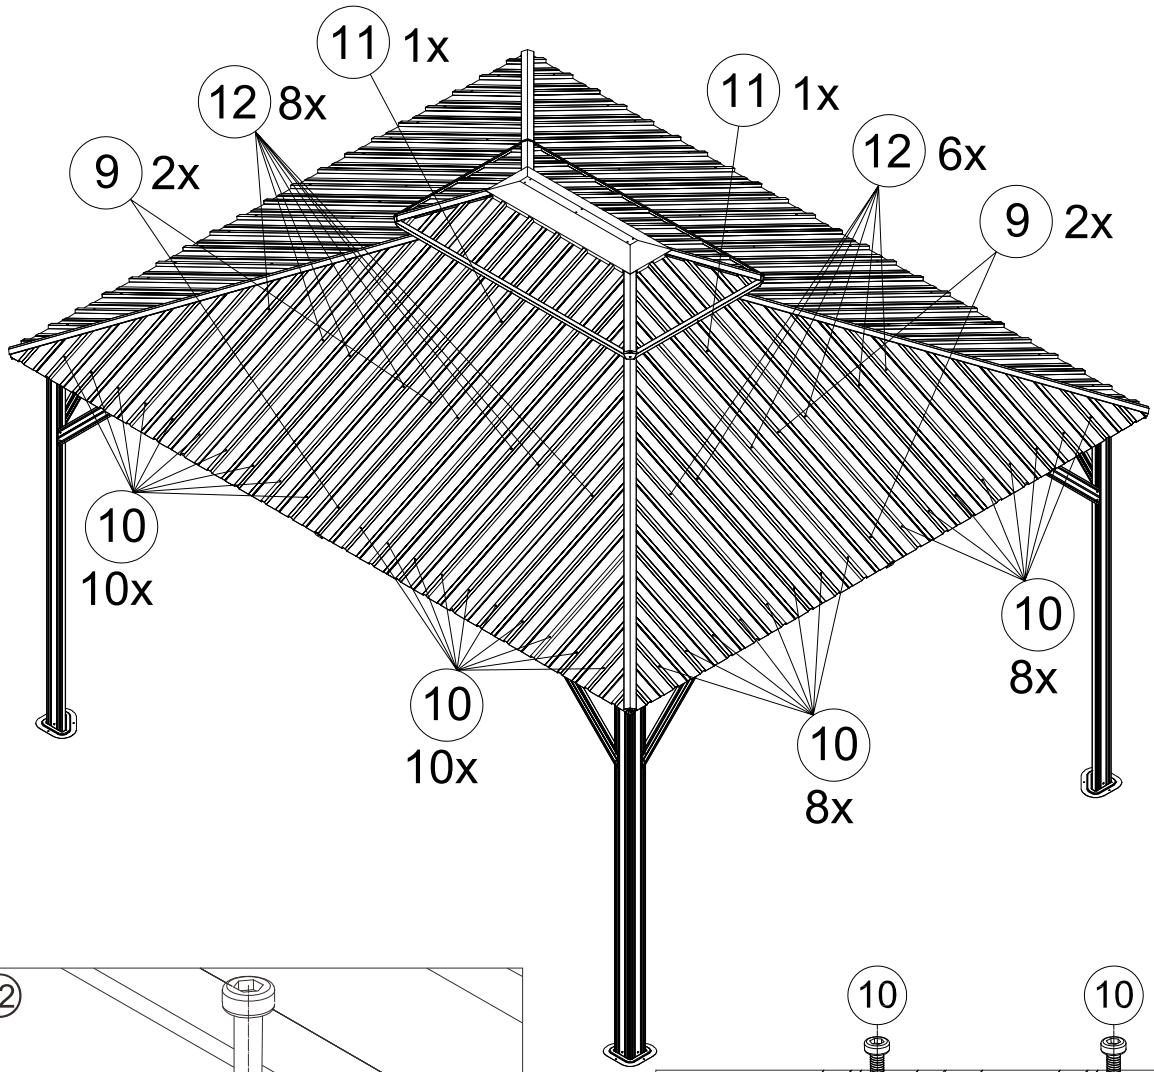


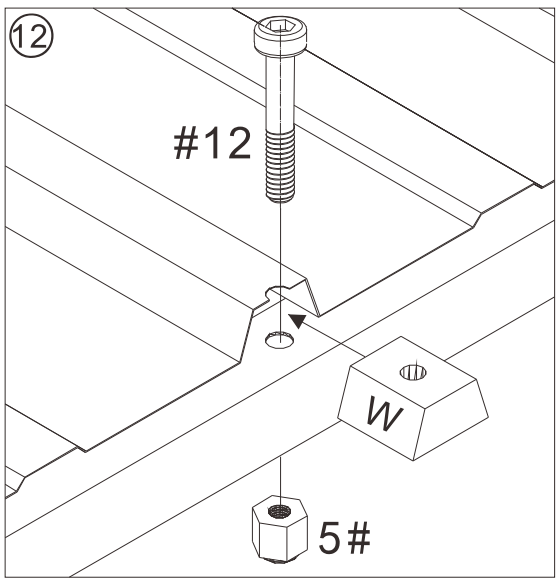

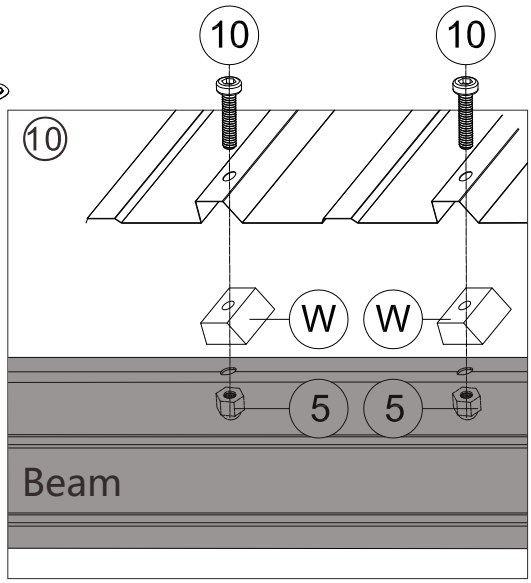W 36x




1 1x

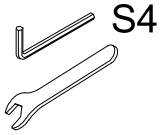


M6

5 36x



M6x28

10 28x




M6x50


12 8x

ATTENTION: The bigger roof panel need to cover the smaller one.


(1)Insert Part #P1 #P2, and #P3 into the frame.

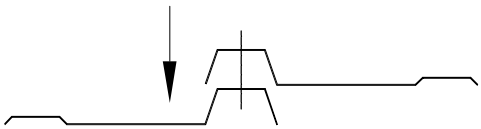


(2)Place 2 Part #W between roof panels and solidifying bars. Then secure with 2 Bolts #12 and 2 Nuts #5.

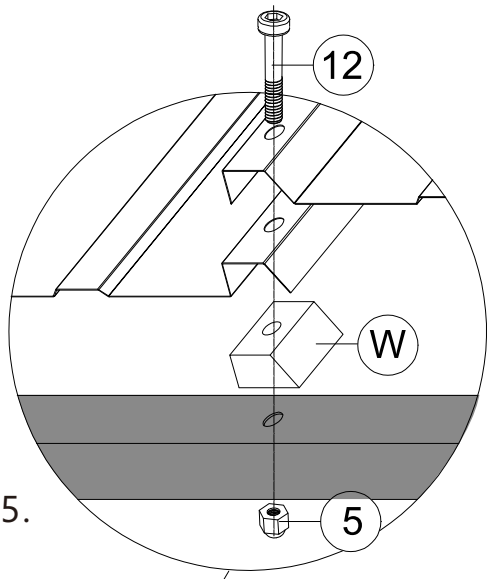


Solidifying Bar

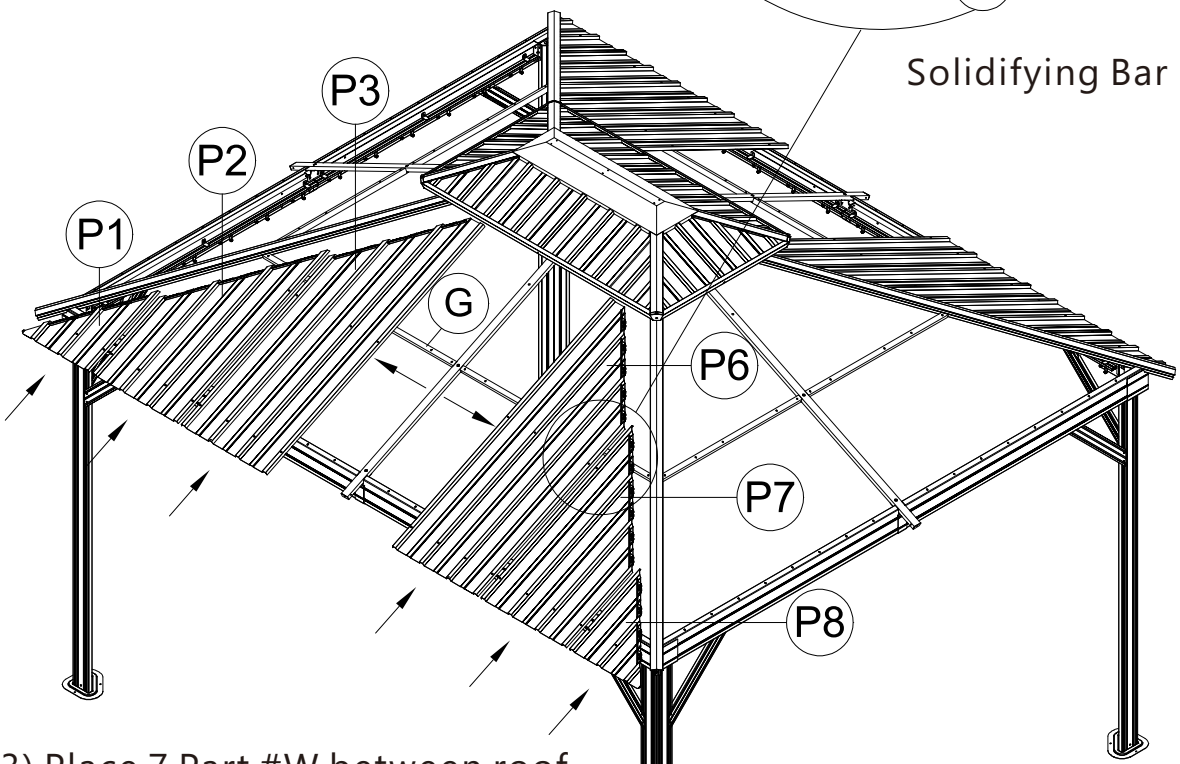



(3) Place 7 Part #W between roof panels and beams. Then secure with 7 Bolts #10 and 7 Nuts #5.

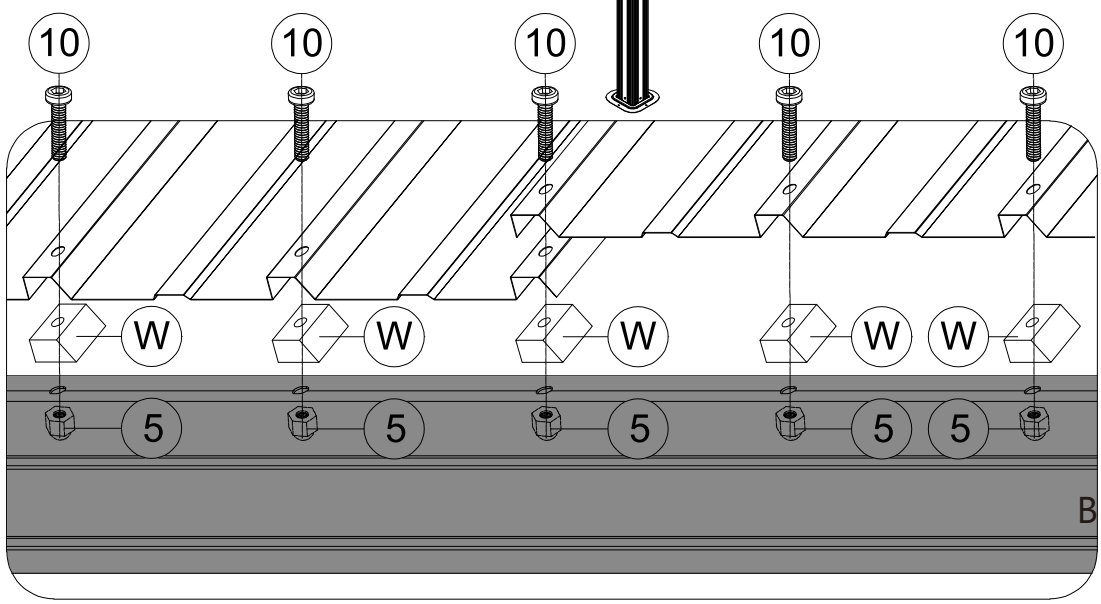



Beam

Repeat the above procedures to assemble #P6,#P7 & #P8 and the opposite side.



W 20x

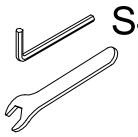


1 1x




M6

5 20x




M6x28


10 12x




M6x50

12 8x

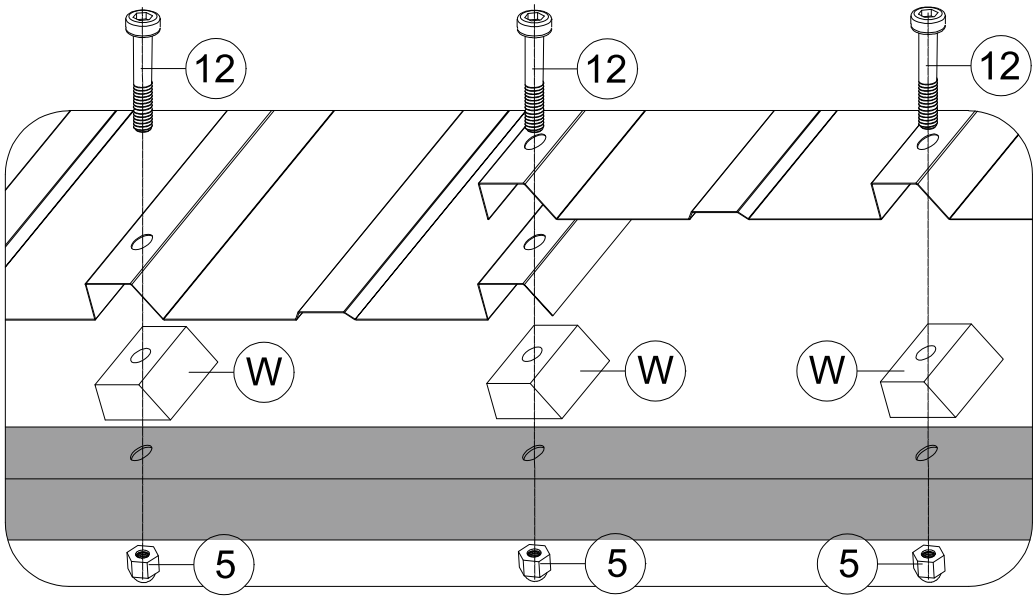

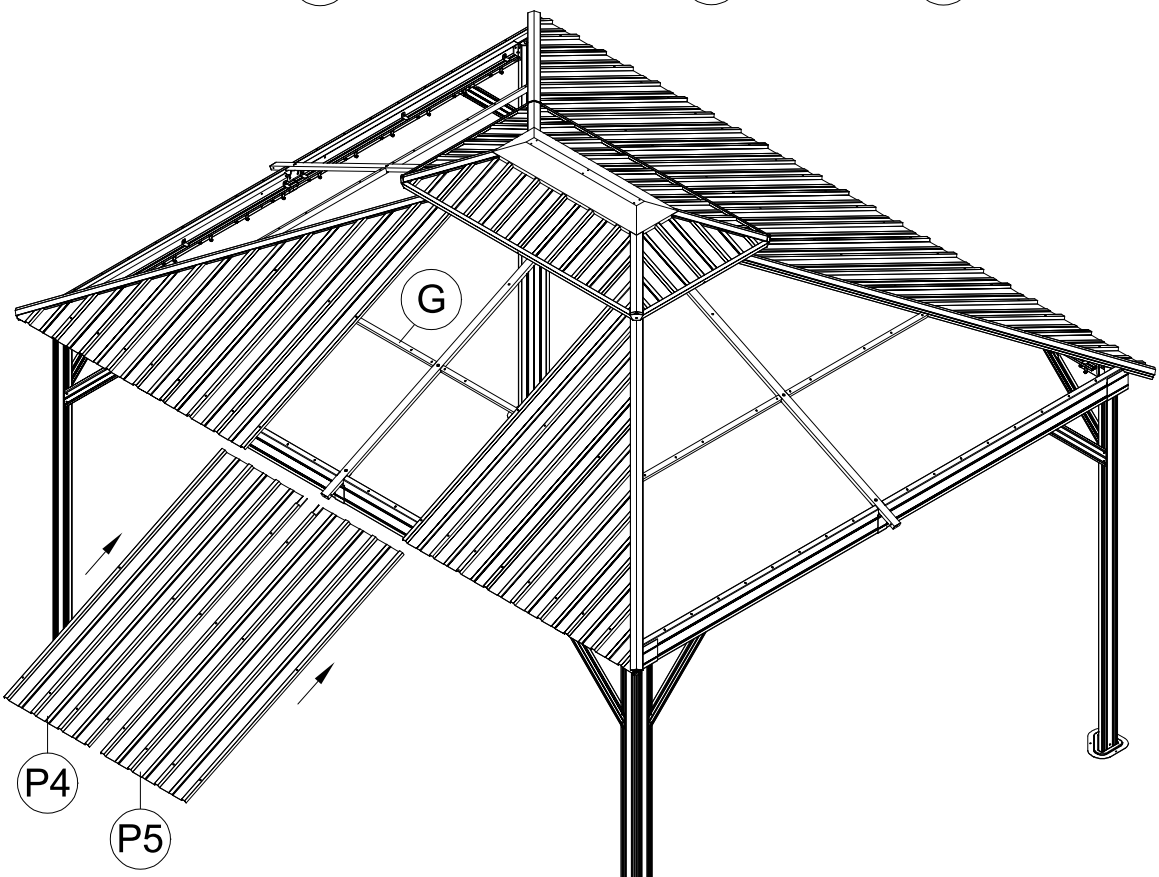
37-1

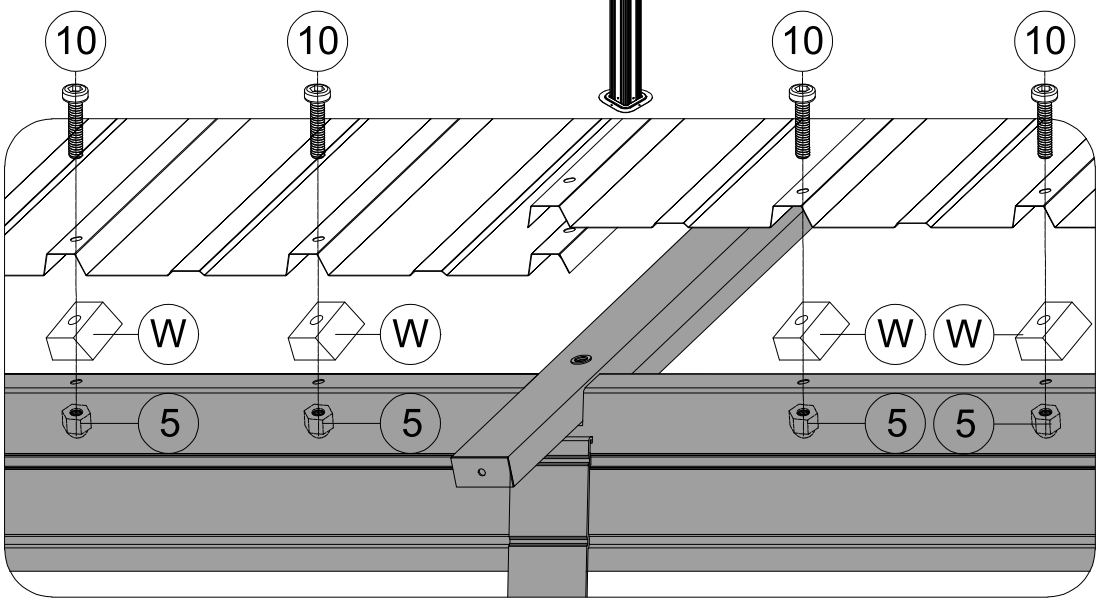(1) Insert Part #P4 and #P5 into the frame.


(2) Place 4 Part #W between roof panels and solidifying bar.

Then secure with 4 Bolts #12 and 4 Nuts #5.


(3) Place 6 Part #W between roof panels and beams.

Then secure with 6 Bolts #10 and 6 Nuts #5.

Repeat the above procedures to assemble the opposite side.



W 6x

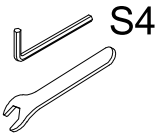


S4

1 1x




M6

5 2x



M6x25


9 4x



M6x45


11 2x

(1) Place 1 Part #W between roof panels and Roof Tube #E2.
Then secure with 1 Bolts #11 and 1 Nuts #5.

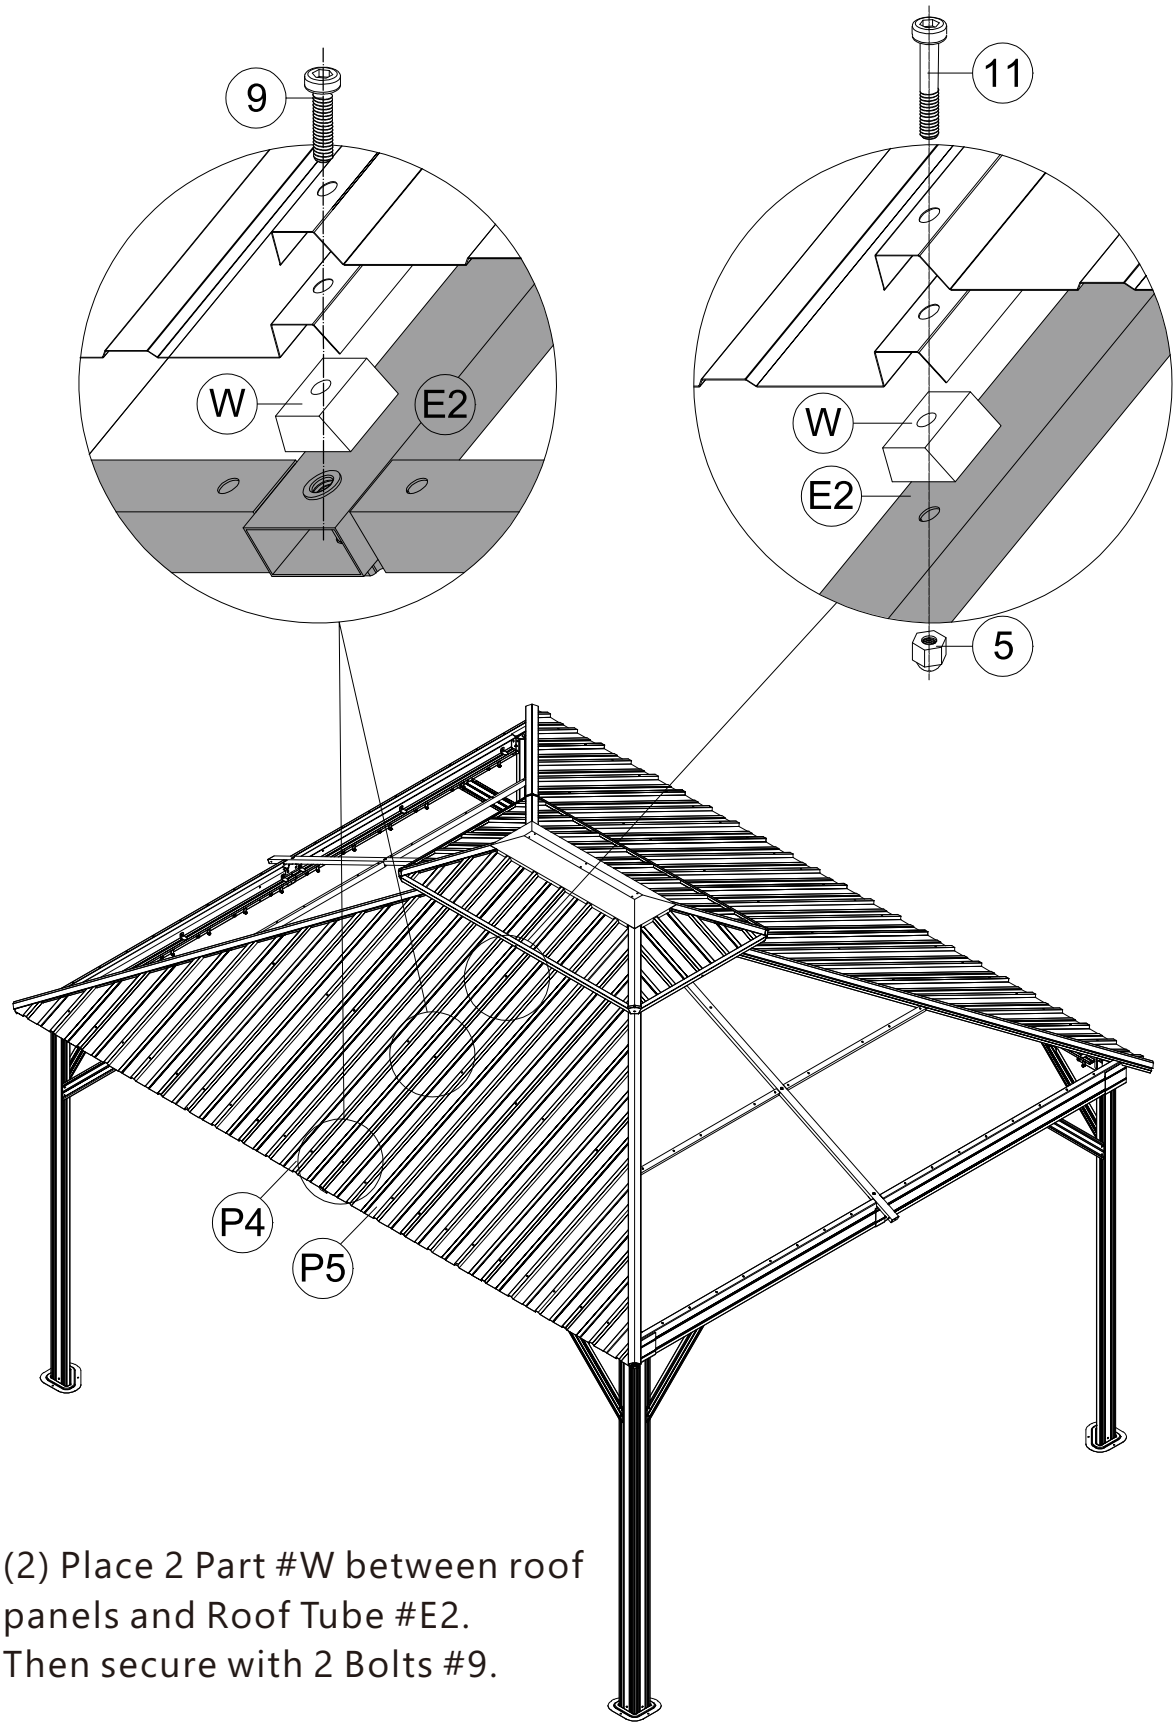



(2) Place 2 Part #W between roof panels and Roof Tube #E2.
Then secure with 2 Bolts #9.

Repeat the above procedures to assemble the opposite side.



W 24x

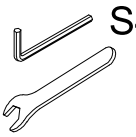


1 1x




M6

5 24x



M6x28


10 20x




M6x50


12 4x

ATTENTION: The bigger roof panel need to cover the smaller one.

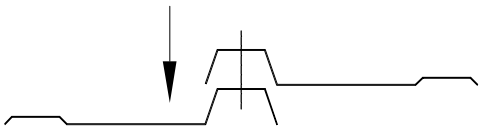

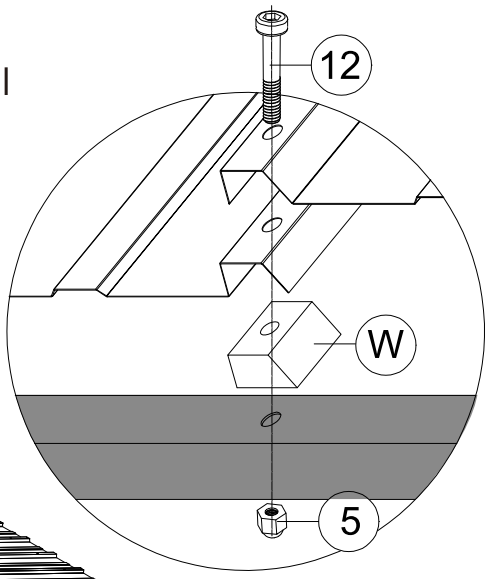



(1) Insert Part #M1 , M2,M3 into the frame.

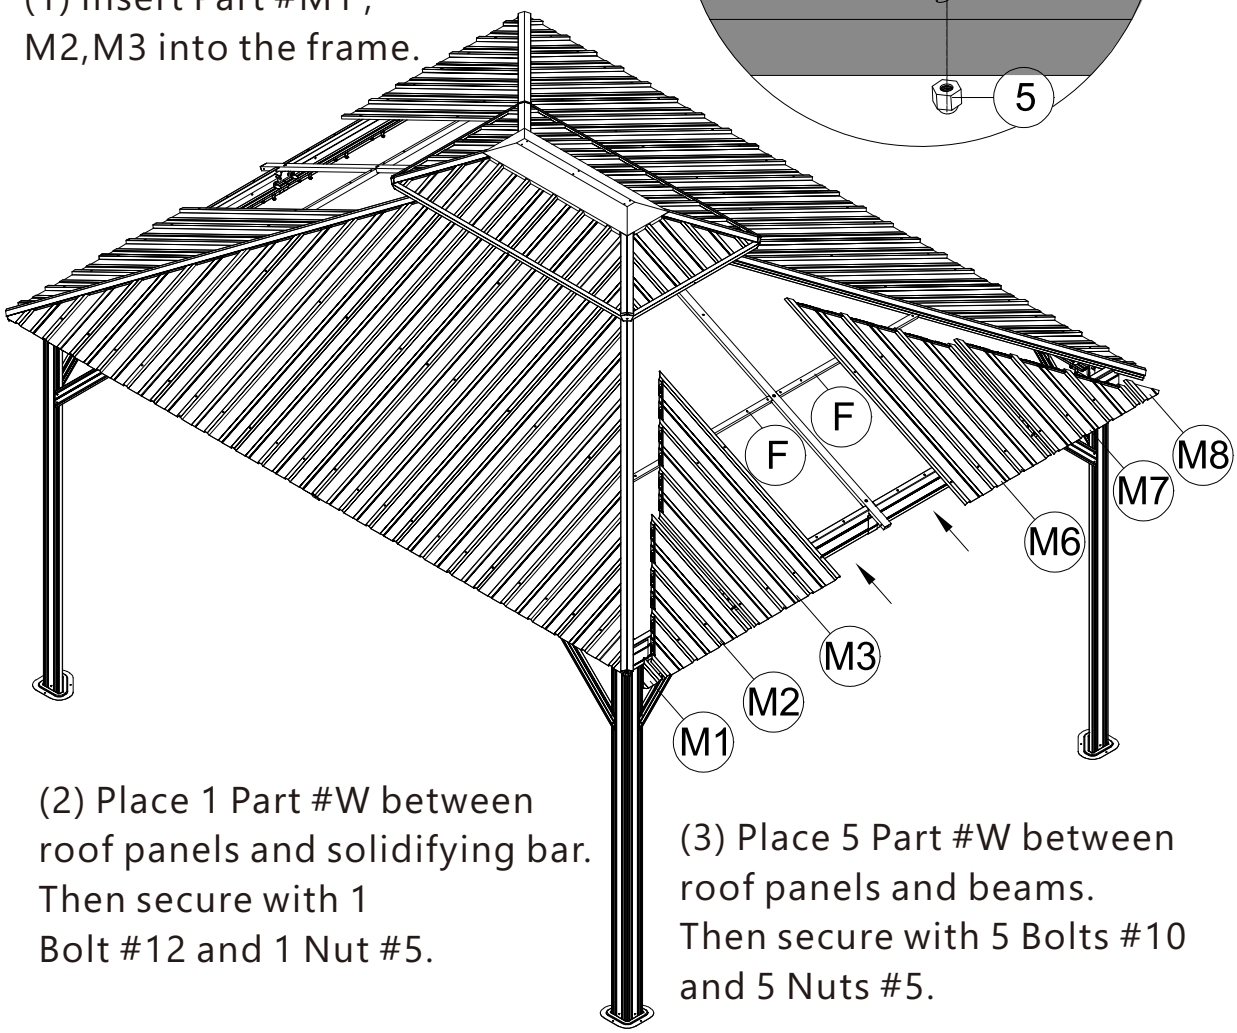



(2) Place 1 Part #W between roof panels and solidifying bar. Then secure with 1 Bolt #12 and 1 Nut #5.


(3) Place 5 Part #W between roof panels and beams. Then secure with 5 Bolts #10 and 5 Nuts #5.

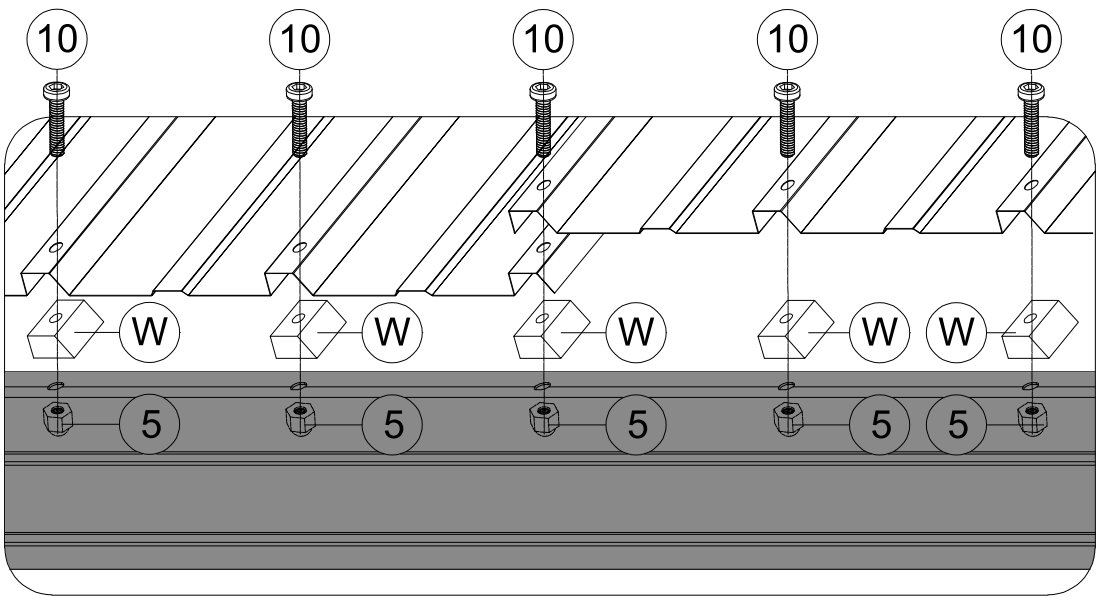


Repeat the above procedures to assemble #M6,M7,M8 and the opposite side.



W 20x

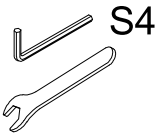


1 1x




M6

5 20x




M6x28


10 12x





M6x50

12 8x

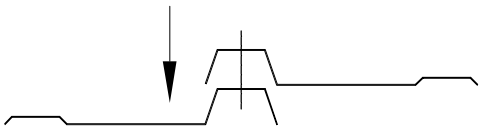

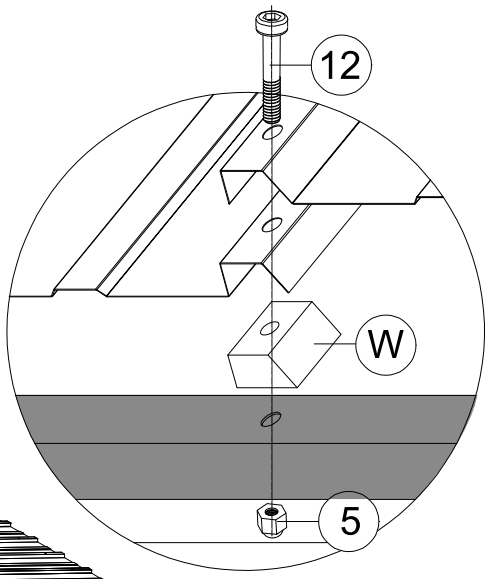

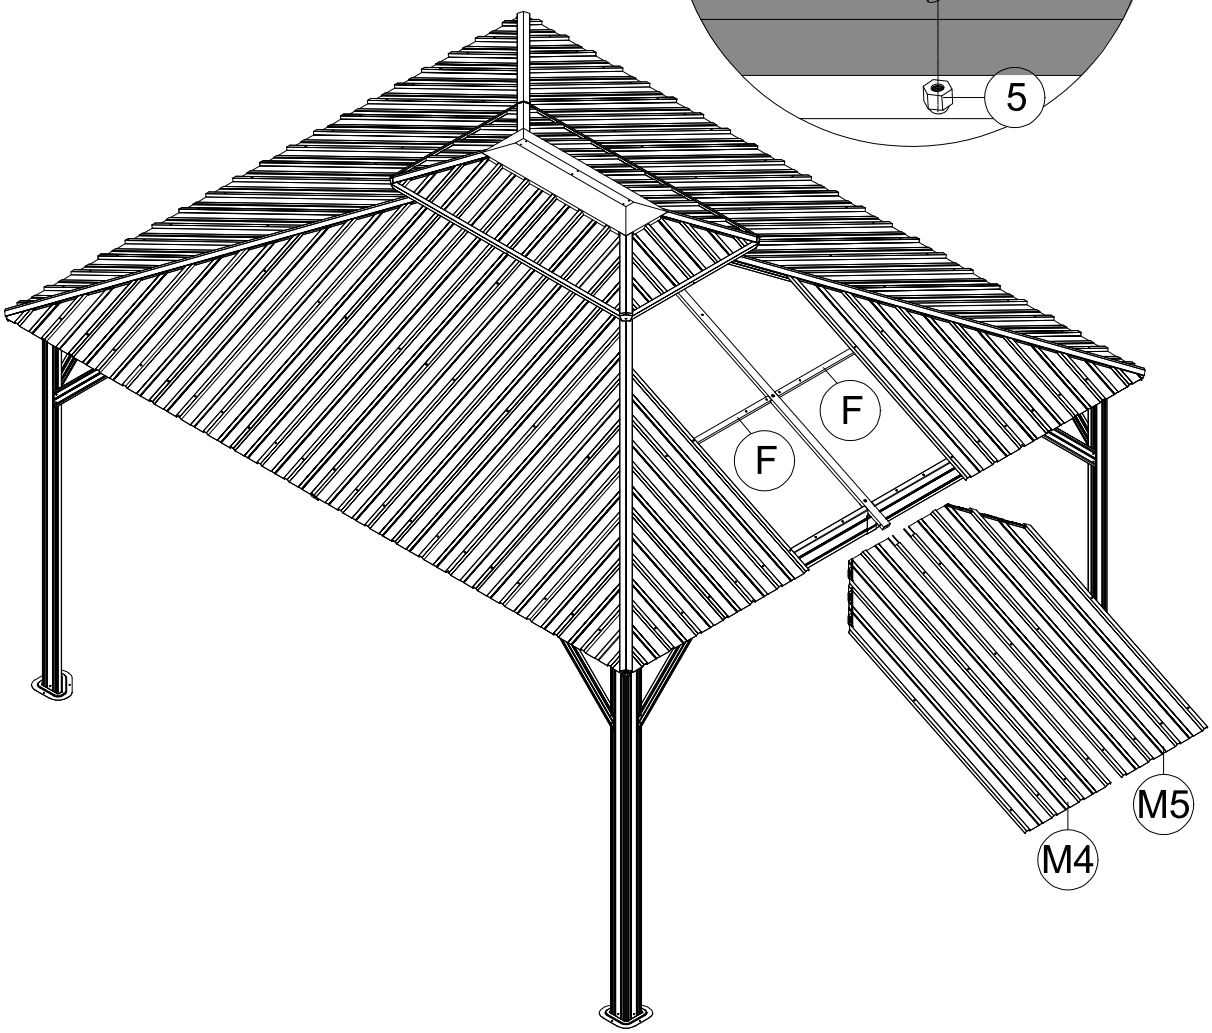(1) Insert Part #M4 and M5 into the frame.

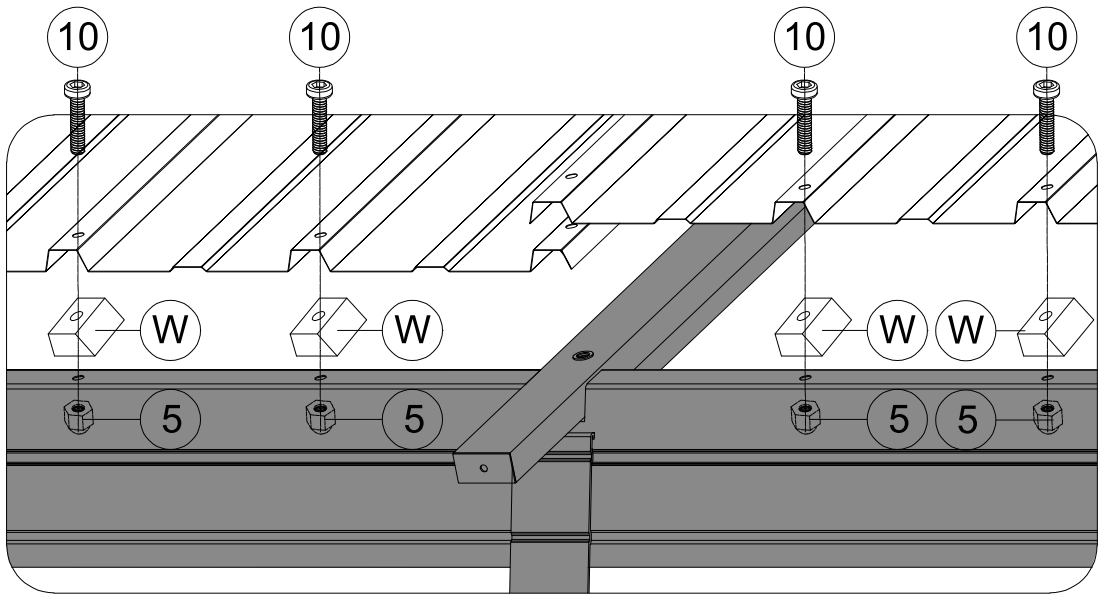
(2) Place 4 Part #W between roof panels and solidifying bars.

Then secure with 4 Bolts #12, 4 Nuts #5.


(3) Place 6 Part #W between roof panels and beams.

Then secure with 6 Bolts #10 and 6 Nuts #5.

Repeat the above procedures to assemble the opposite side.



W 6x

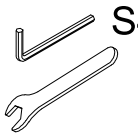


S4

1 1x




M6

5 2x



M6x25


9 4x




M6x45

11 2x


(1) Place 1 Part #W between roof panels and middle roof tube #E2.
Then secure with 1 Bolt #11 and 1 Nut #5.

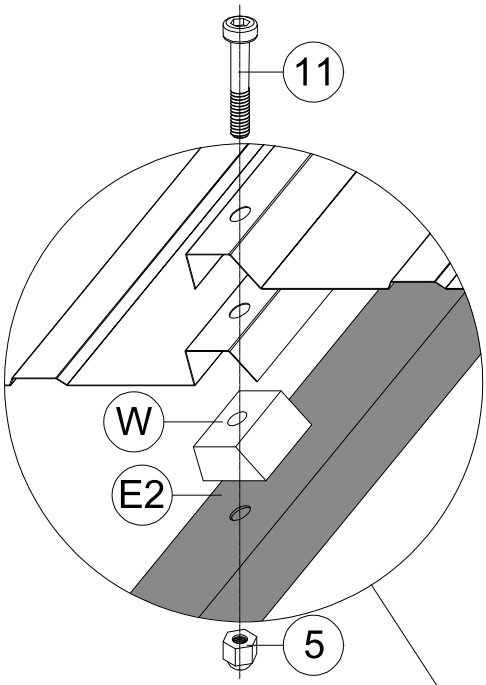

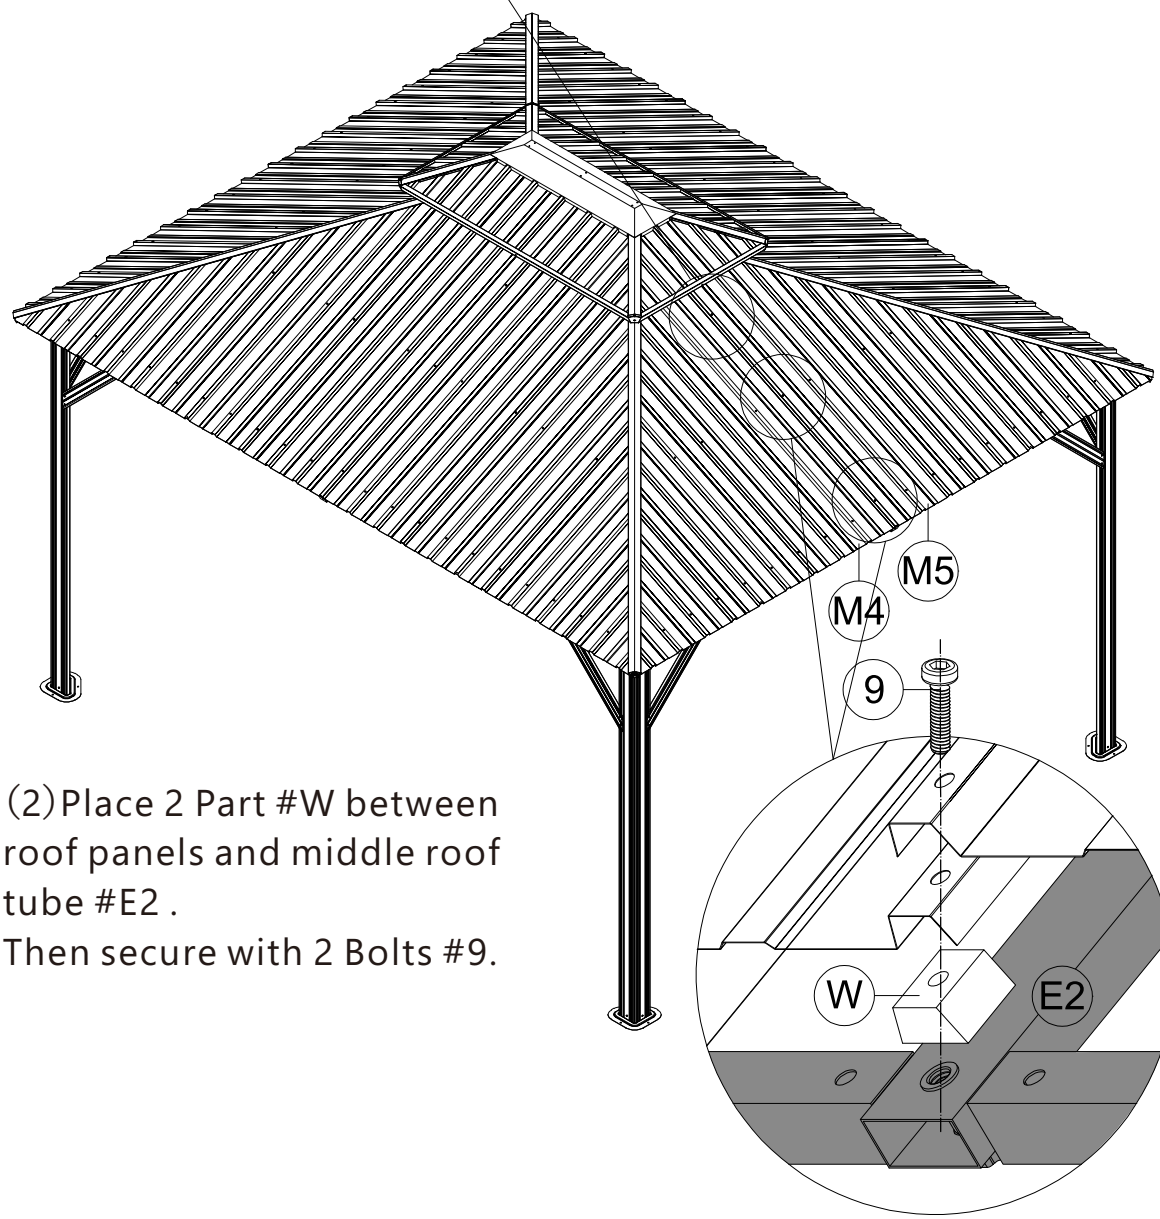




(2) Place 2 Part #W between roof panels and middle roof tube #E2 .
Then secure with 2 Bolts #9.

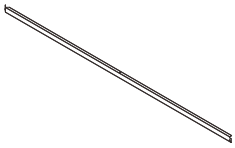Repeat the above procedures to assemble the opposite side.

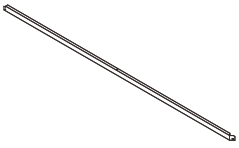

K2 2x



K3 2x




X2 2x



ST6.3x15

2 2x

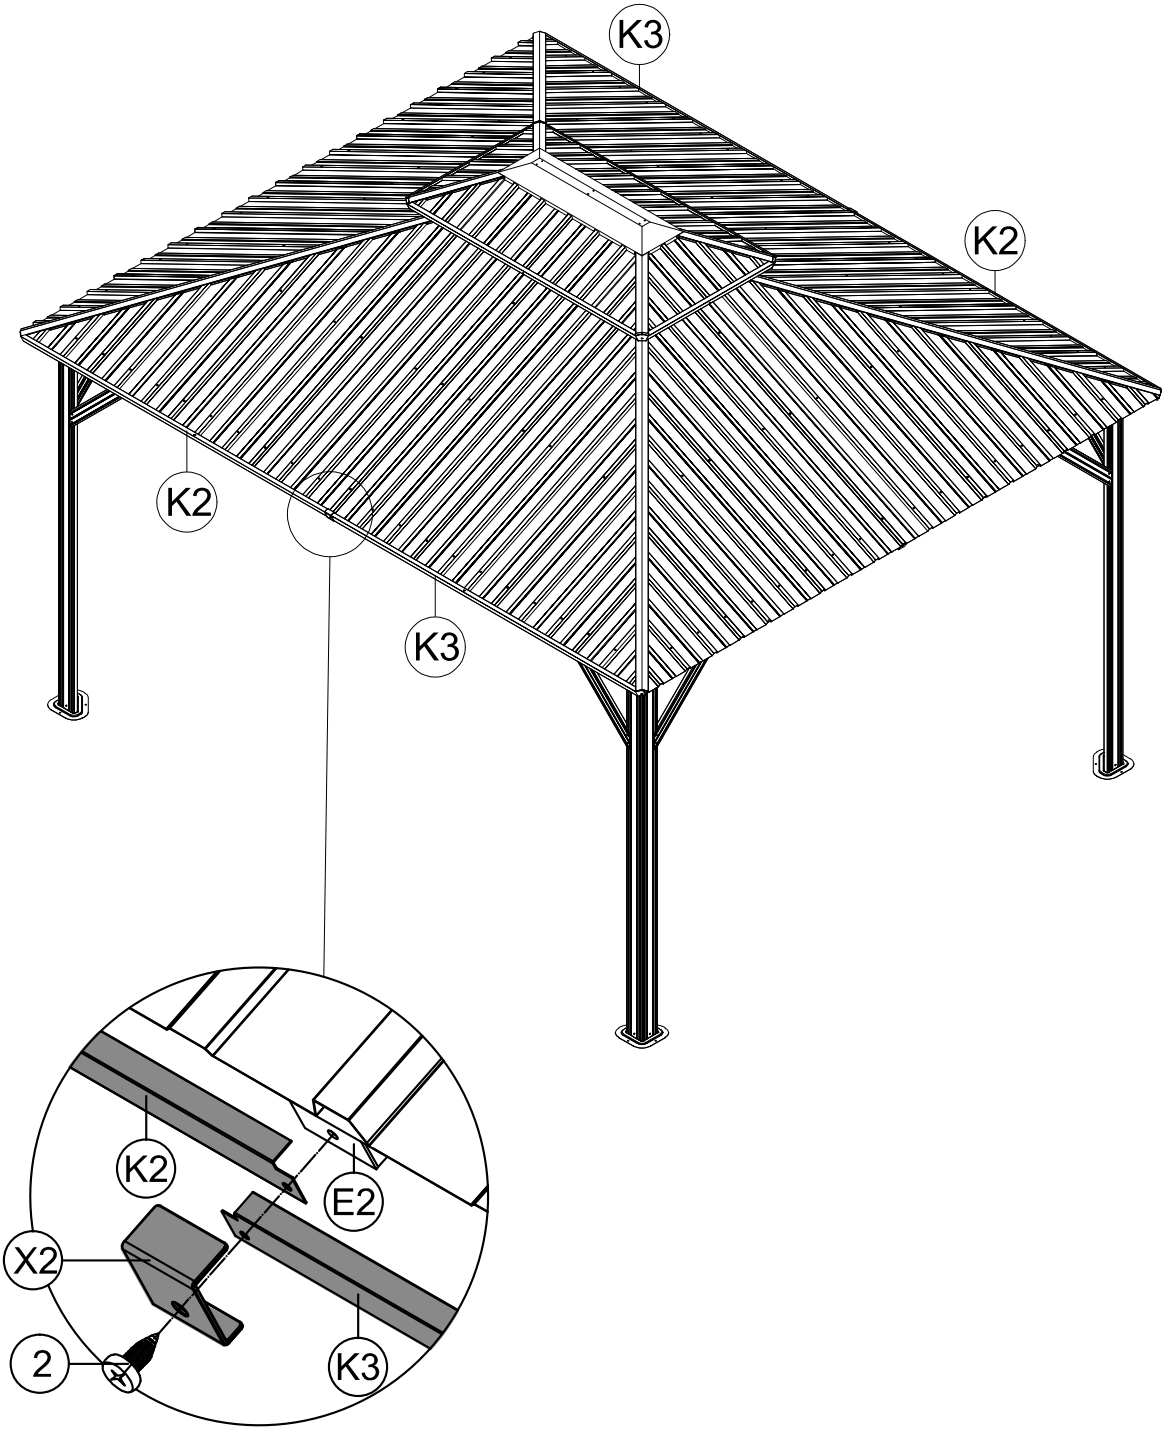







(1) Place Part #K2 and Part #K3 on Part #E2;
Put on Part #X2 and secure with Screw #2.

**(2) Repeat the above procedures to assemble the opposite side.**

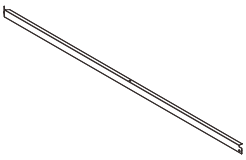

K 2x

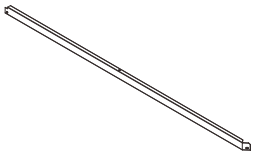

K1 2x




X2 2x



ST6.3x15

2 2x

(1) Place Part #K and Part #K1 on Part #E2;
Put on Part #X2 and secure with Screw #2.

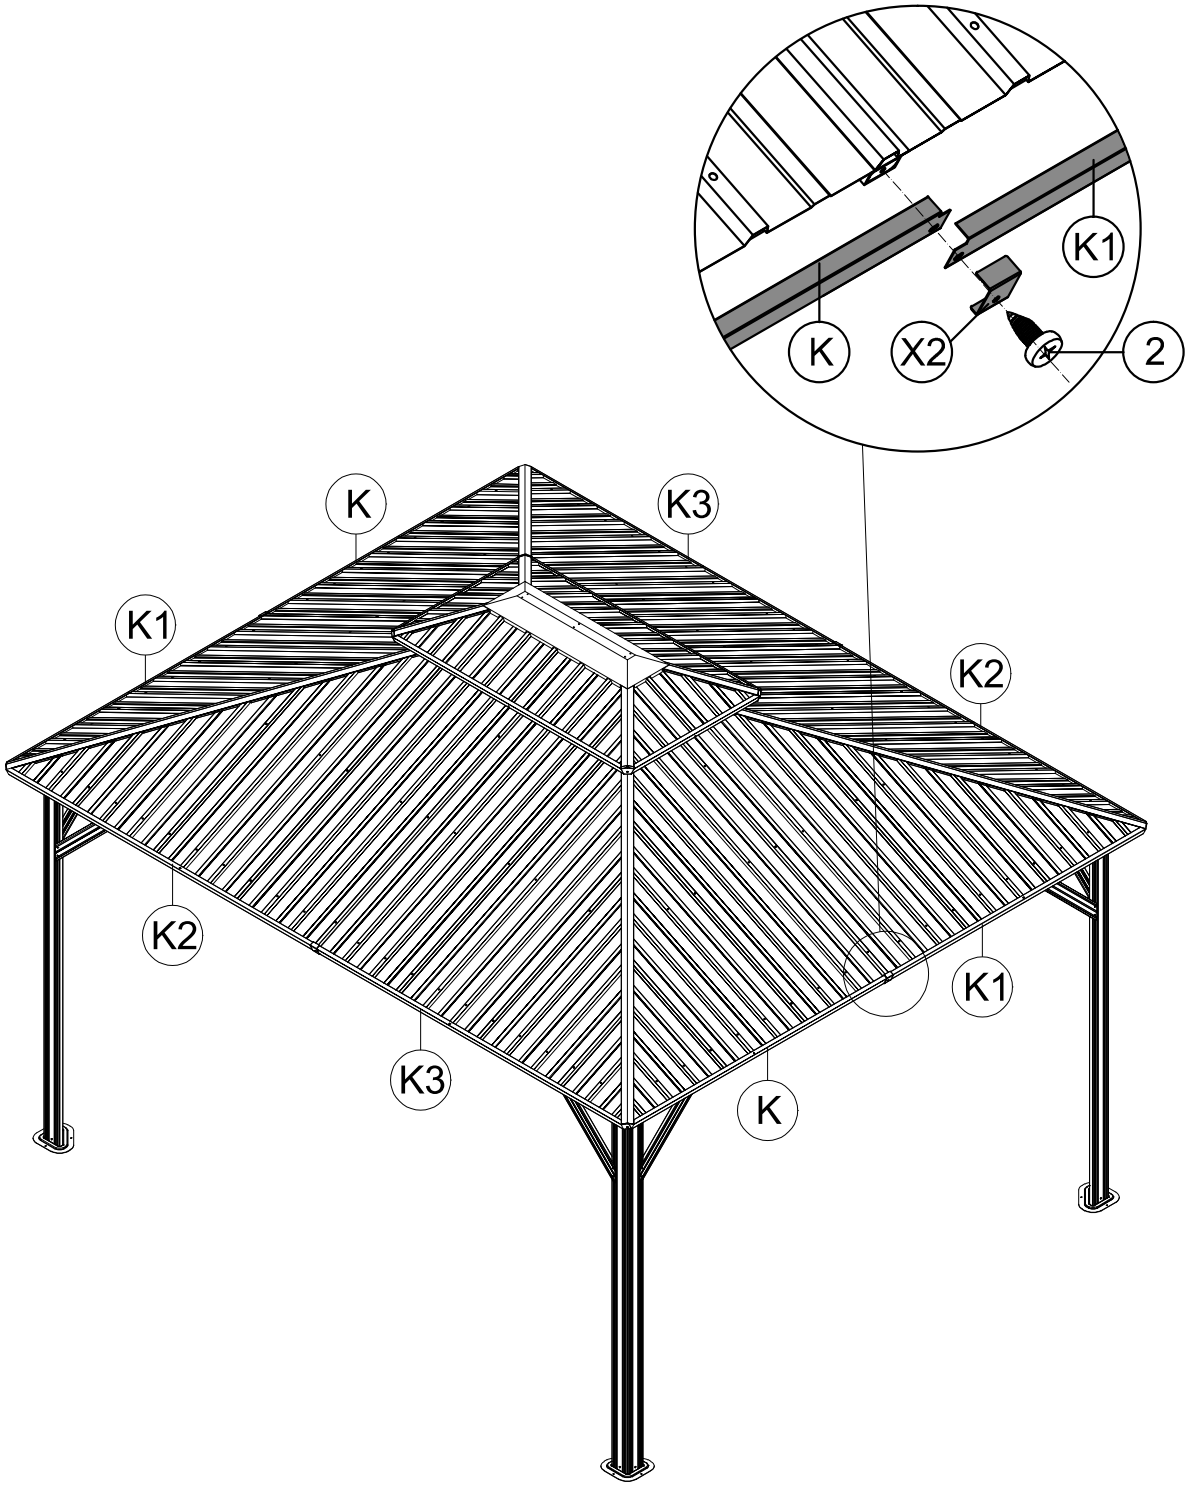


**(2) Repeat the above procedures to assemble the opposite side.**




X3 4x



ST6.3x15

2 4x

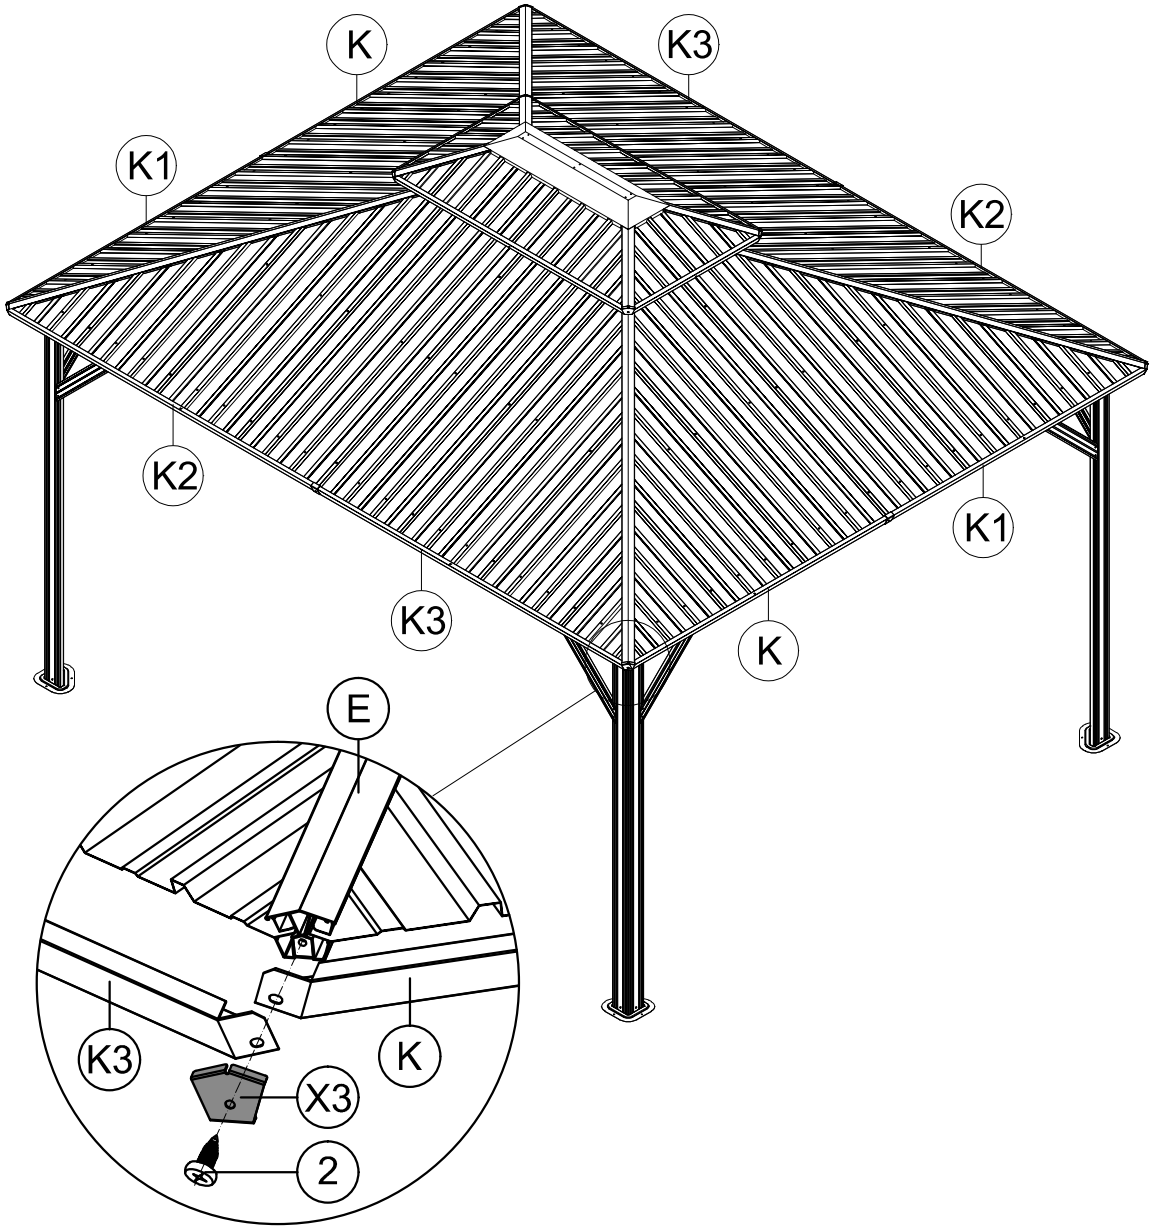



(1) Place Part #K3 and Part #K on Part #E;
Put on Part #X3 and secure with Screw #2.

**(2) Repeat the above procedures to assemble the other 3 corners.**




ST5x16

3 8x

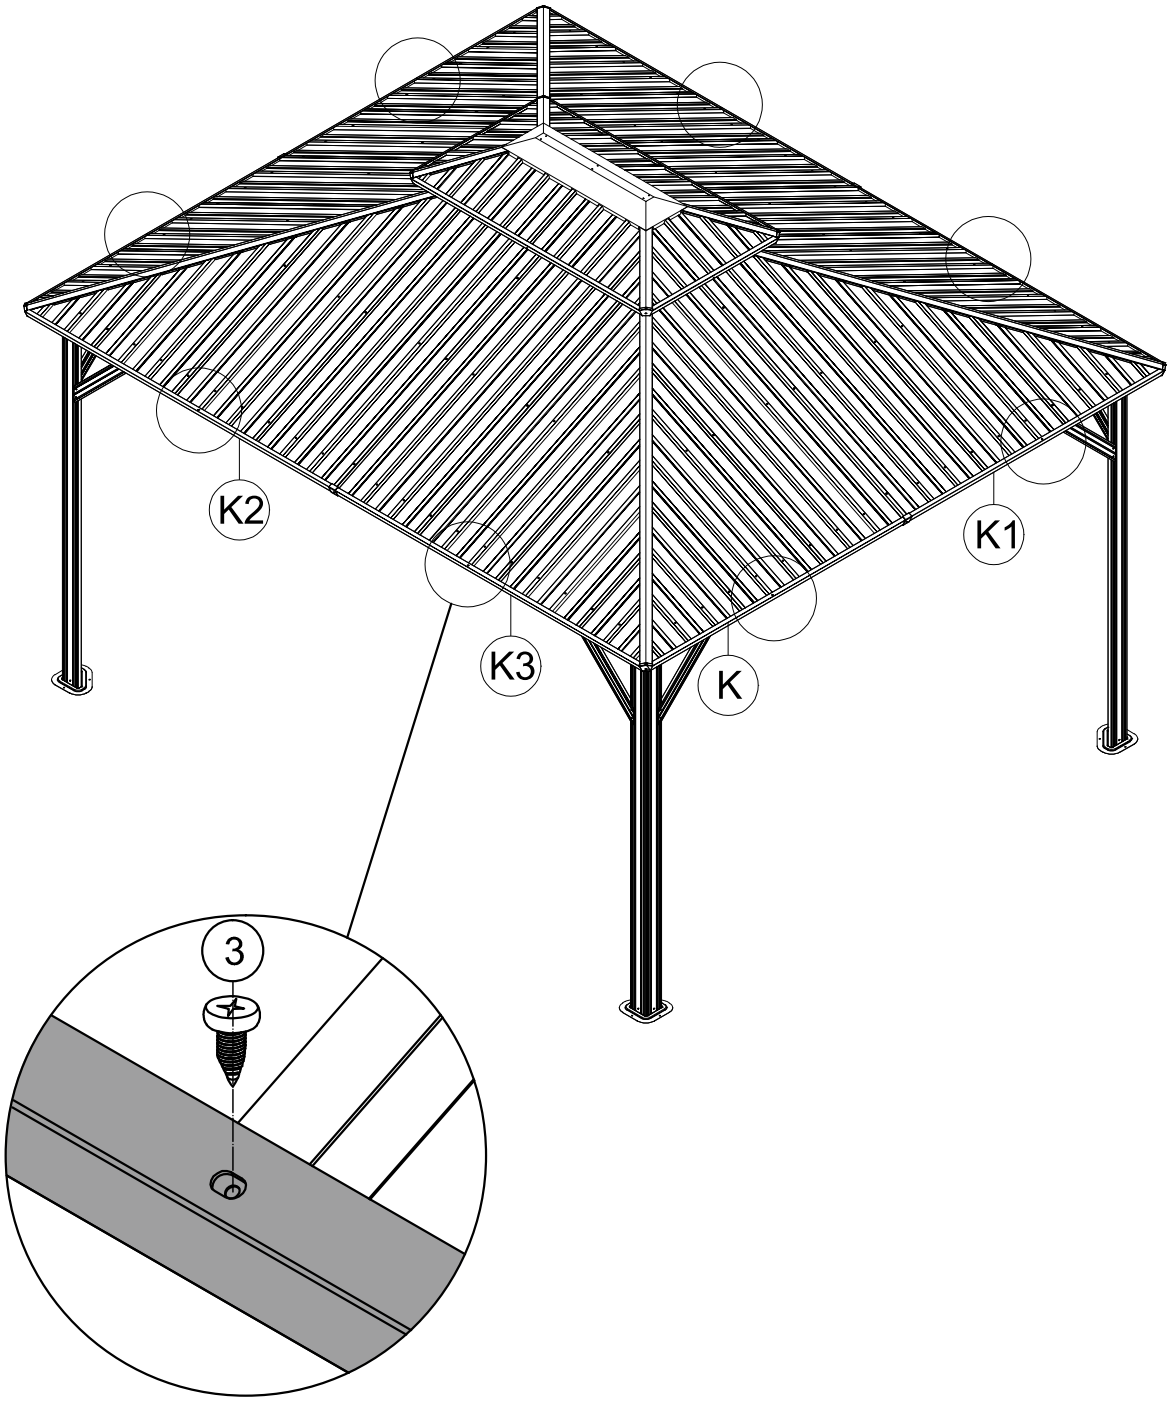



(1) Attach roof panels to finishing bars with 2 Screws #3.


**(2) Repeat the above procedures to assemble the other 3 sides.**

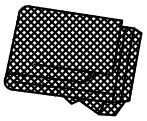



Y1 4x


## Hang up Mosquito Netting to Inside Track.

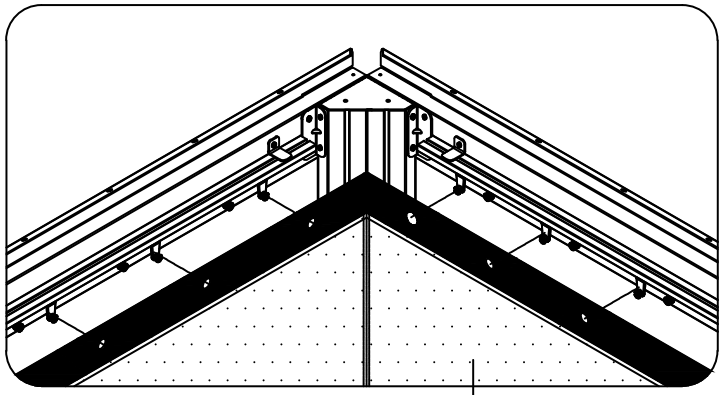

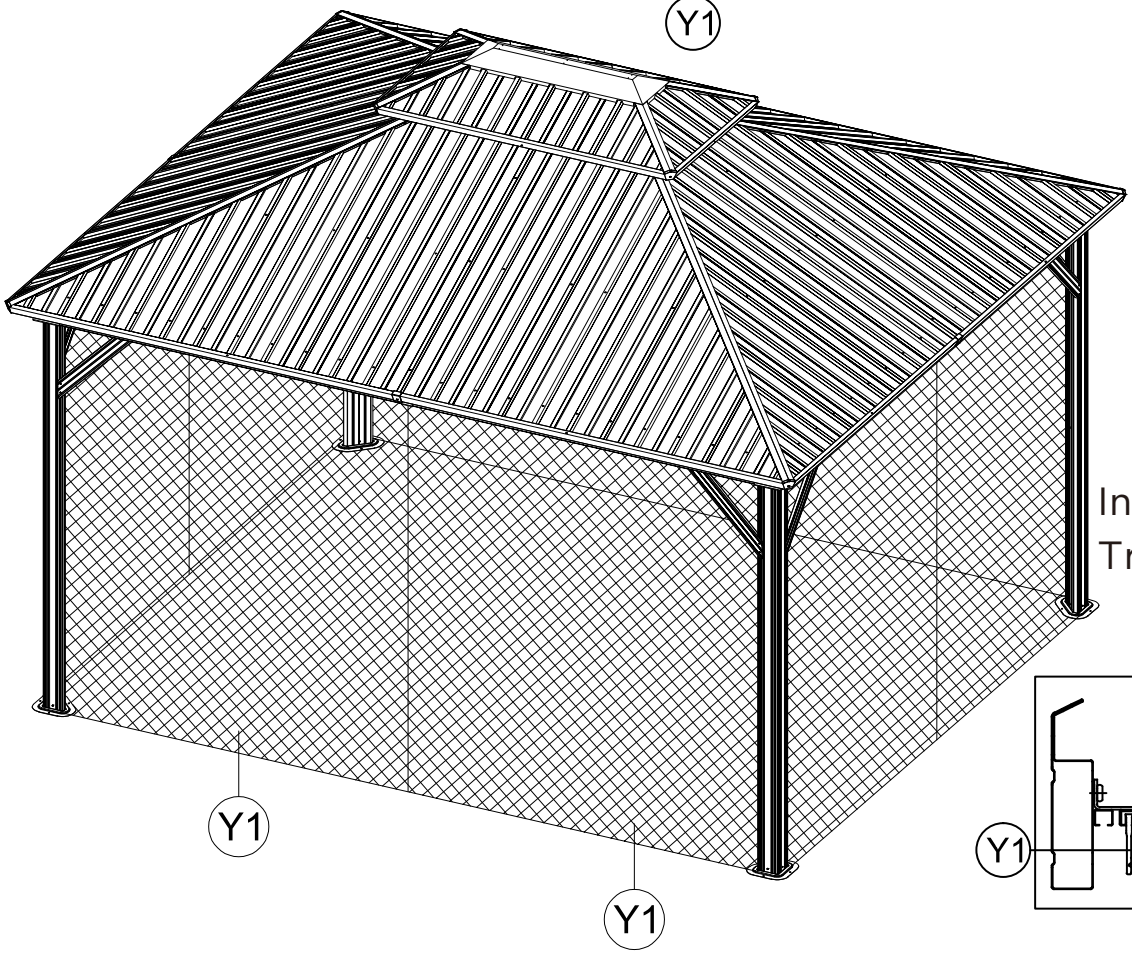


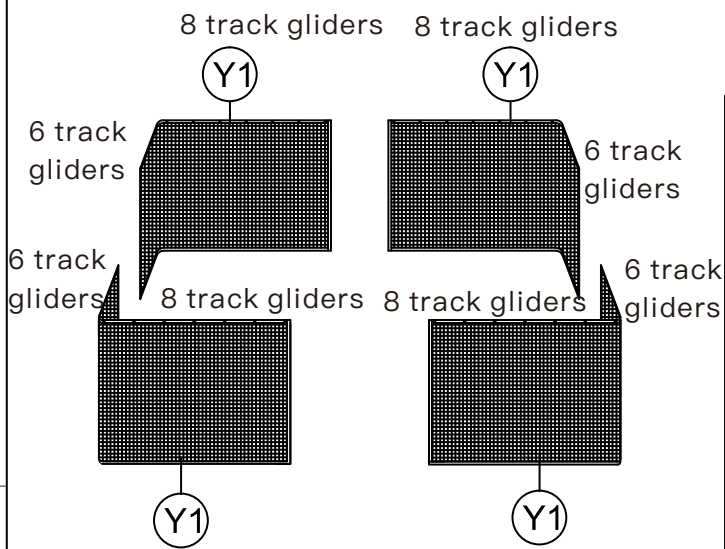
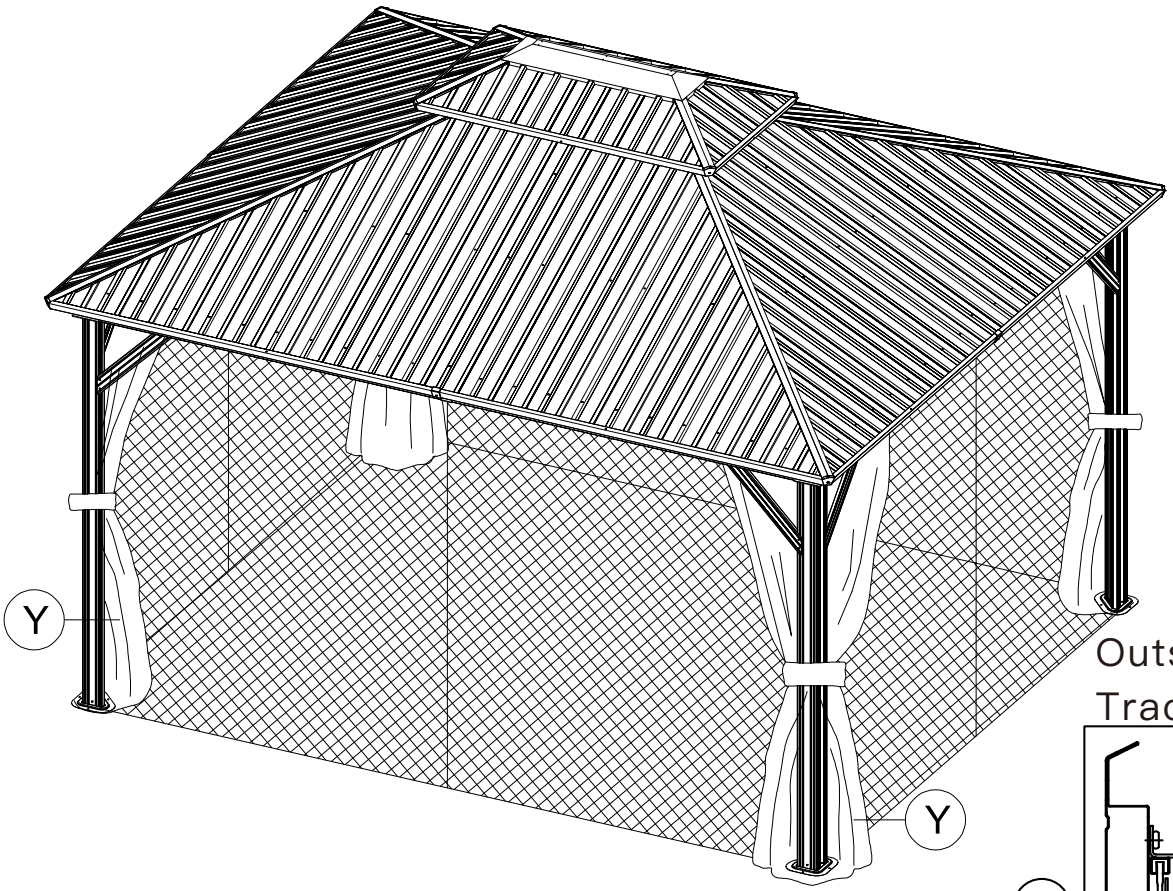


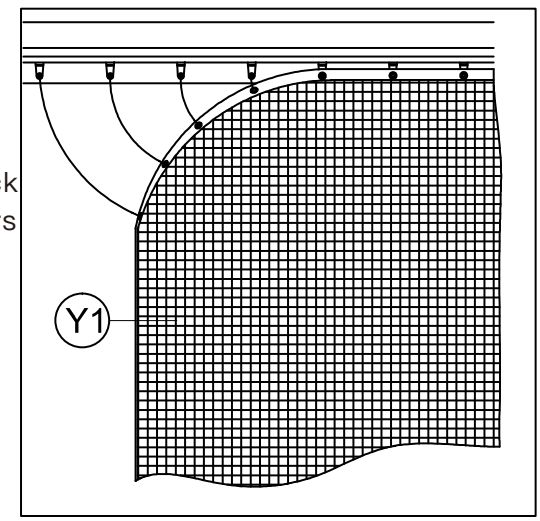Y 4x

## Hang up Curtains to Outside Track.

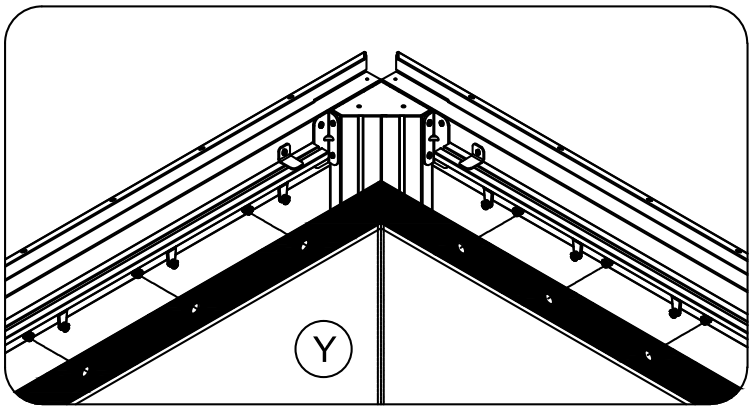



**Open the gazebo curtains and secure them with straps when wind speeds exceed 30 mph.**





Outside Track



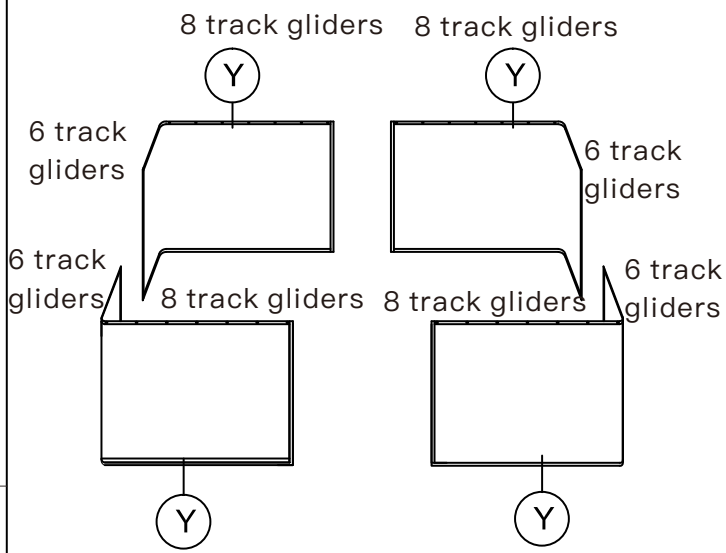

domi
outdoor living
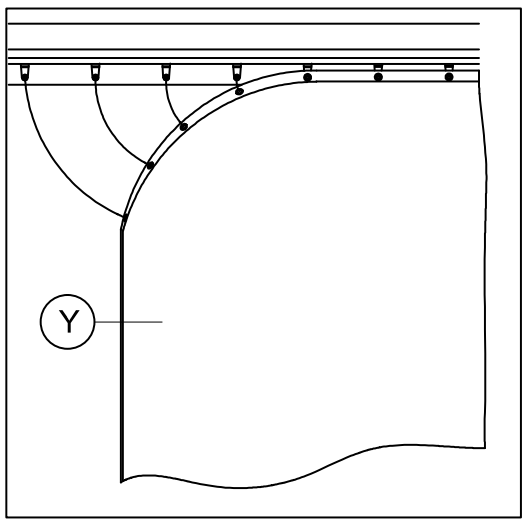
# Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So,if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

## Support:

**After-sales contact email:**
service@domioutdoorliving.com

**Business cooperation contact email:**
marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.

© Copyright 2024-2026 domi LLC. All Rights Reserved.