
# BATHROOM VANITY SET

**Colors/Finishes:** White,Navy Blue,Sage Green,Oak,Walnut

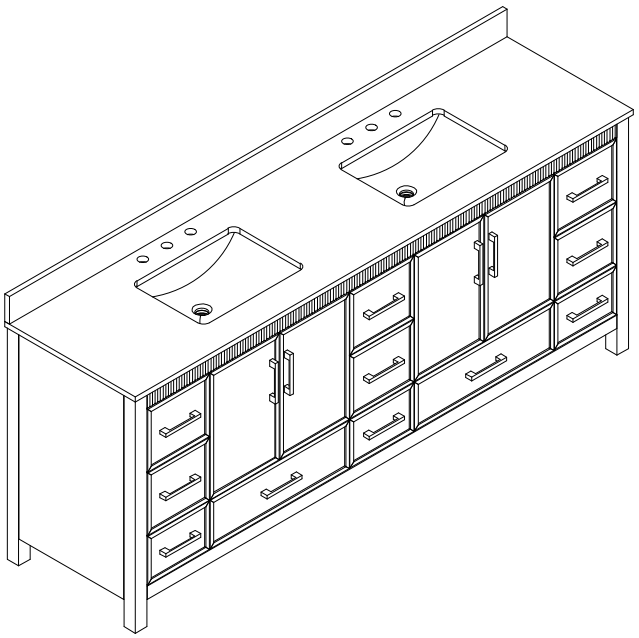

## VANITY FEATURES:

**1.Material:**

**WT / NB / SG:** Solid wood frame, high-quality plywood.

**OAK / WAL:** Oak wood frame, high-quality venner plywood.

**2.Doors:** 4 soft-close doors. Soft-close hinges system.

**3.Drawers:** 11 soft-close drawers, Concealed Soft-close sliders.

**4.Hardware:** Metal Alloy

**5.Installation Type:** Freestanding

**6.Built-in Adjusters:** Adjustable height levelers

**7.Vanity Top:** High-quality quartz with two undermount sink


**8.Assemble required:** No

**9.Vanity top Included:** Yes

**10.Nominal Dimension(W*D*H):** 84*22*35 inches

## Contents

84″Vanity……PAGE2
84″Vanity Top……PAGE3
Vanity Installation……PAGE4

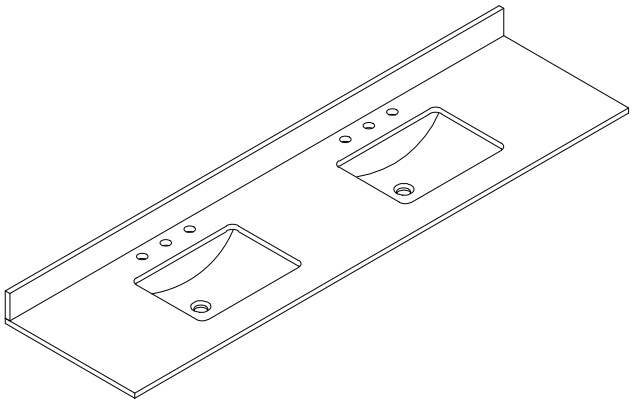

## VANITY TOP FEATURES:

**1.Material:** High-quality quartz

**2.Top Color:** Pure White Quartz

**3.Sink:** 2*20”under mount rectangle sink

**4.Faucet Holes:** Top pre-drilled for 8”widespread faucet holes

**5.Sink Certified:** CUPC certified

**6.Backsplash:** 4”backsplash included

**7.Faucet Included:** No


**8.Nominal Dimension(W*D*H):** 84*22*0.79 inches




All dimensions and specifications are nominal and may vary.Use actual products for accuracy in critical situations.

## PRODUCT DIAGRAMS:


### Front

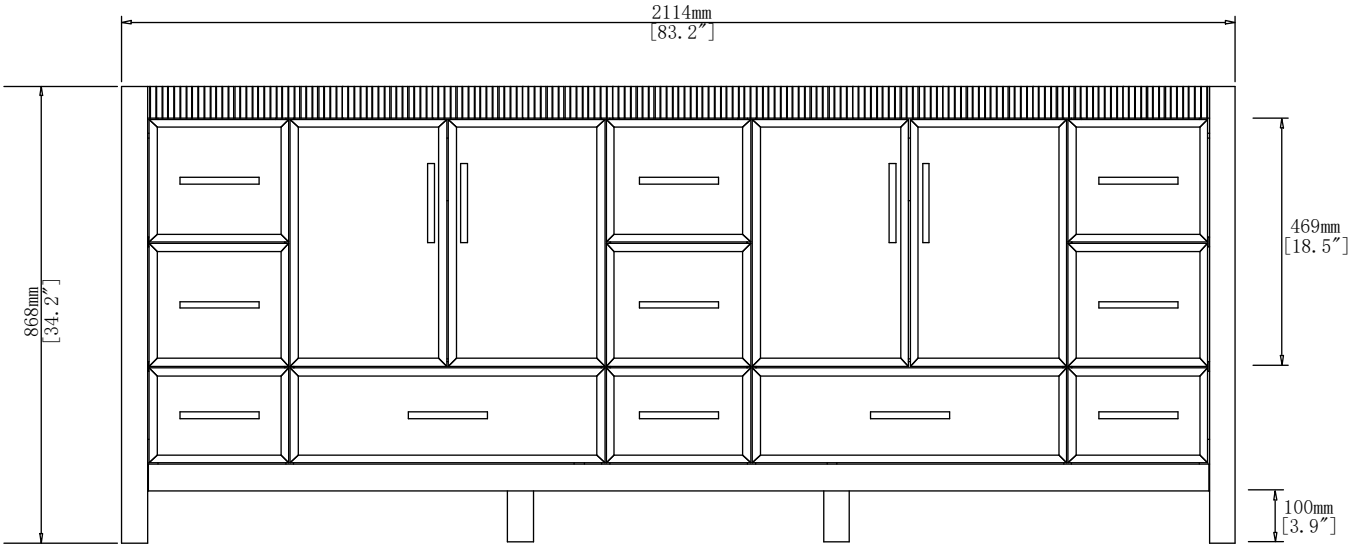



### Back

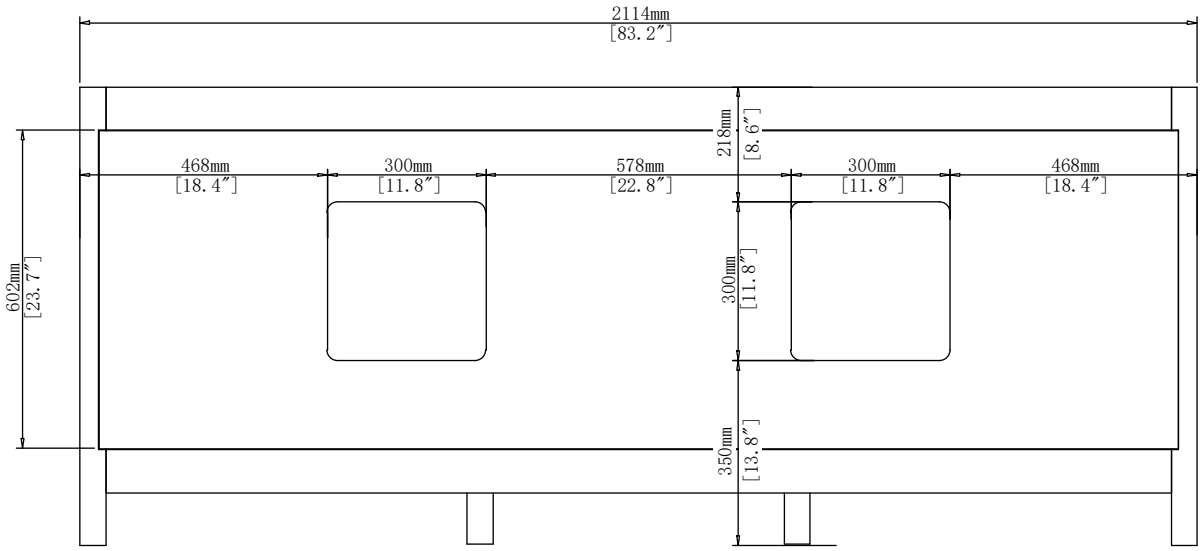


### Top

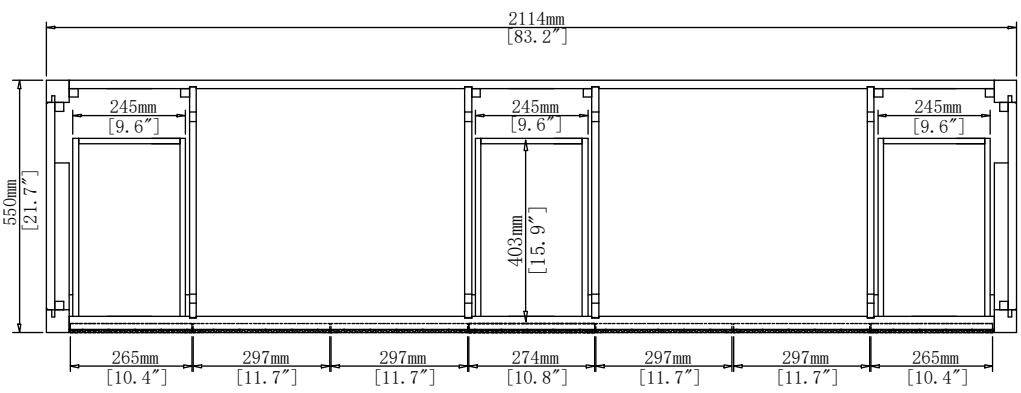


### Side

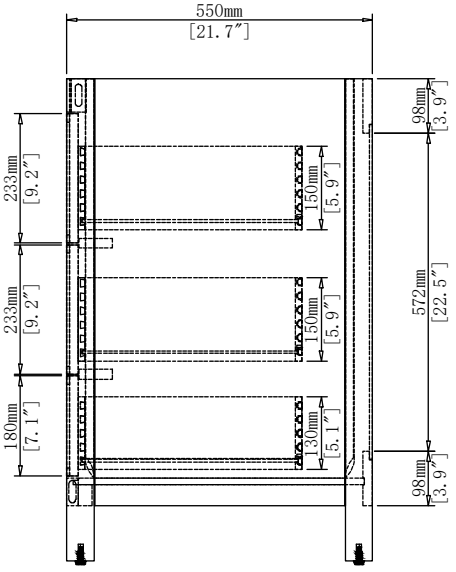





All dimensions and specifications are nominal and may vary.Use actual products for accuracy in critical situations.


# VANITY TOP

***With rectangular undermount sink***

**VanityTop**

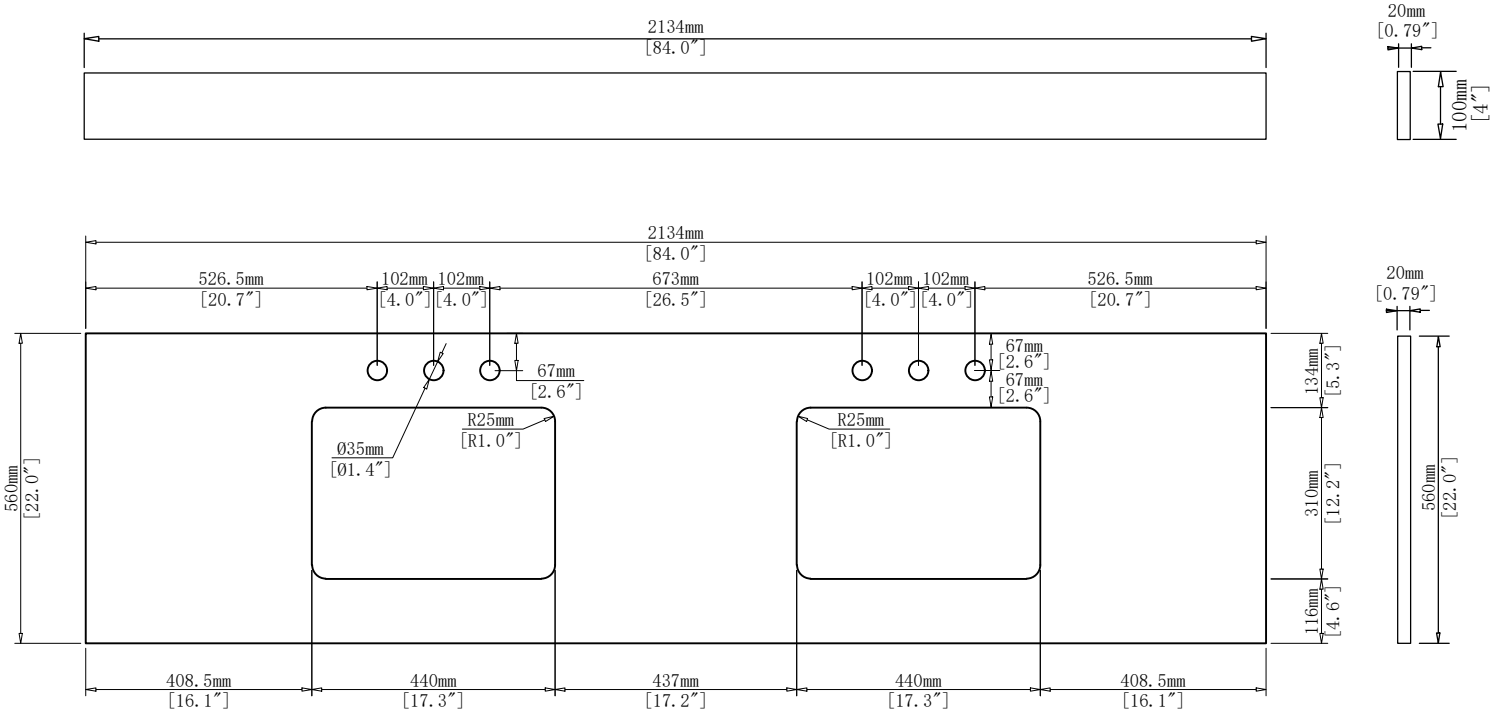


**Undermount Sink**

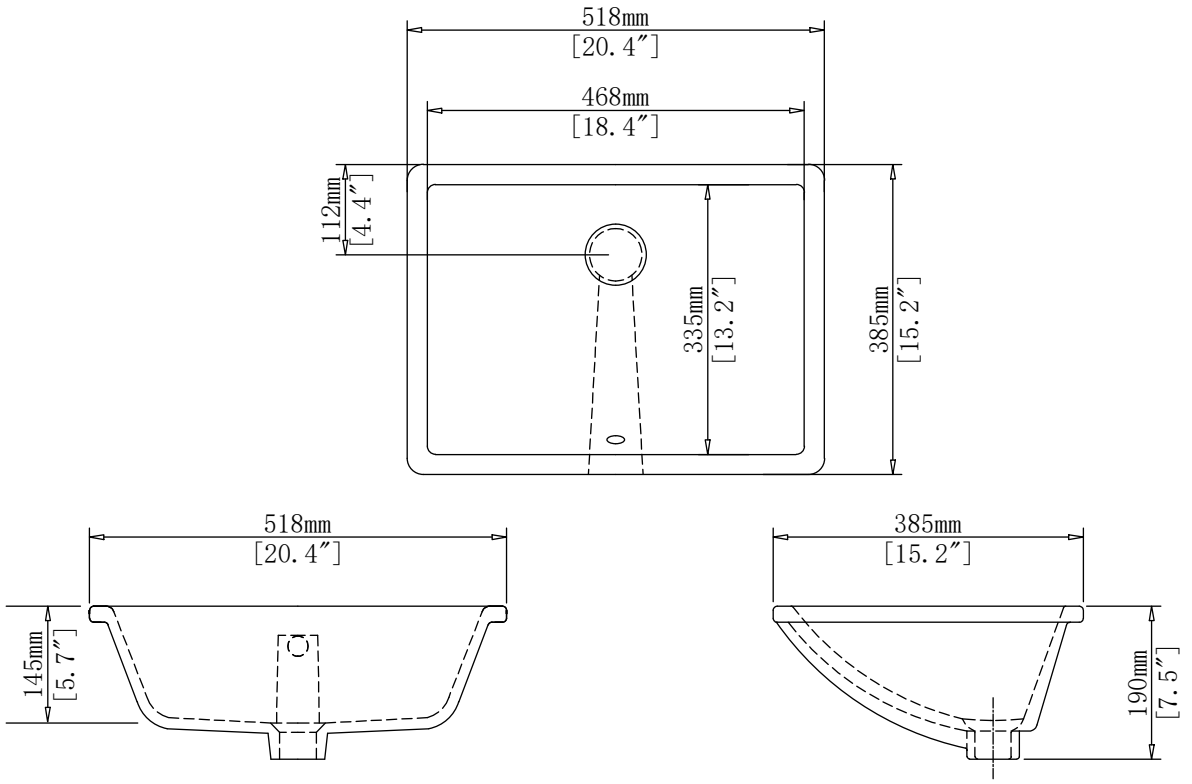





All dimensions and specifications are nominal and may vary.Use actual products for accuracy in critical situations.

# Vanity Installation

## SUGGESTED TOOLS AND MATERIALS:


Sealant


Measuring tape


Safety glasses



Rag


Level

## INSTALLATION INSTRUCTLONS


We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing .We accept no liability for any damage to the floor,plumbing,vanity cabinet,sink,counter top,or personal injury during installation.

**1**

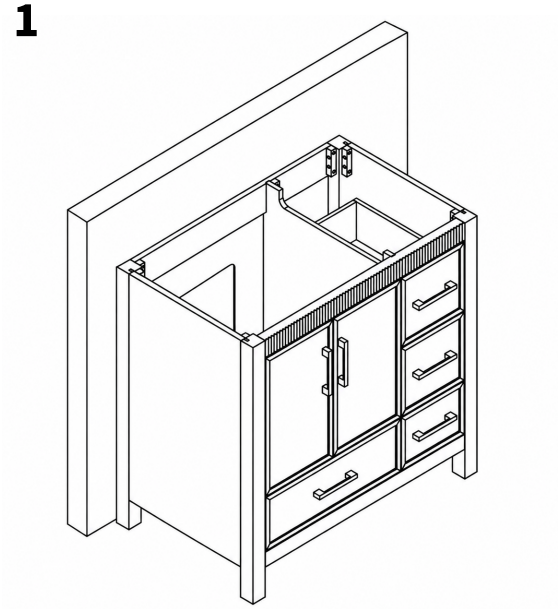


Remove vanity from box and examine vanity for any defects or damage.Carefully place vanity against wall.

**2**

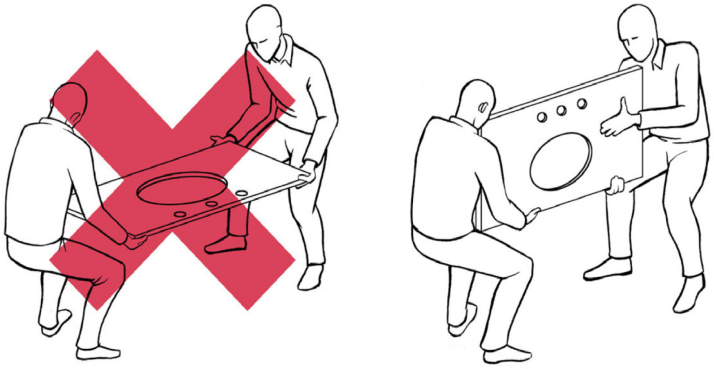


Always use a two man crew,a single person crew is much more likely to break or chip the stone top.

**3**

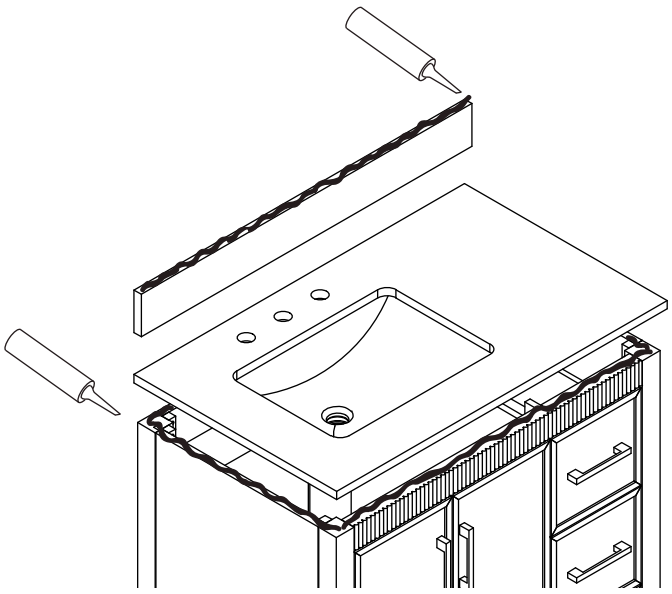

Apply bead of quality sealant evenly along the bottom of backsplash and the top of the vanity.

**4**

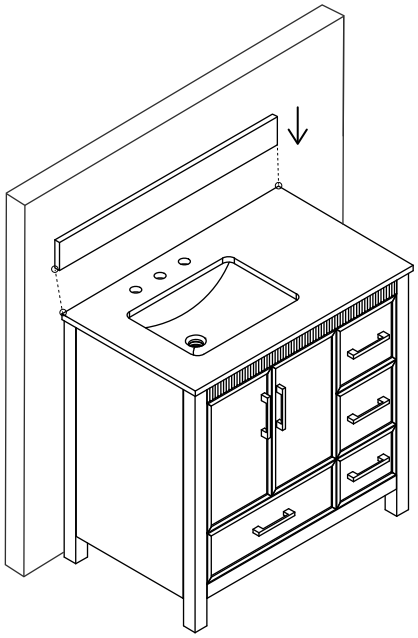

Finally,place the bottom side of back splash with sealant onto the counter top and check alignment of back splash.



* Note:sink style,shape,counter top,vanity may vary from the picture above. Instructional purpose only *