

# BED FRAME

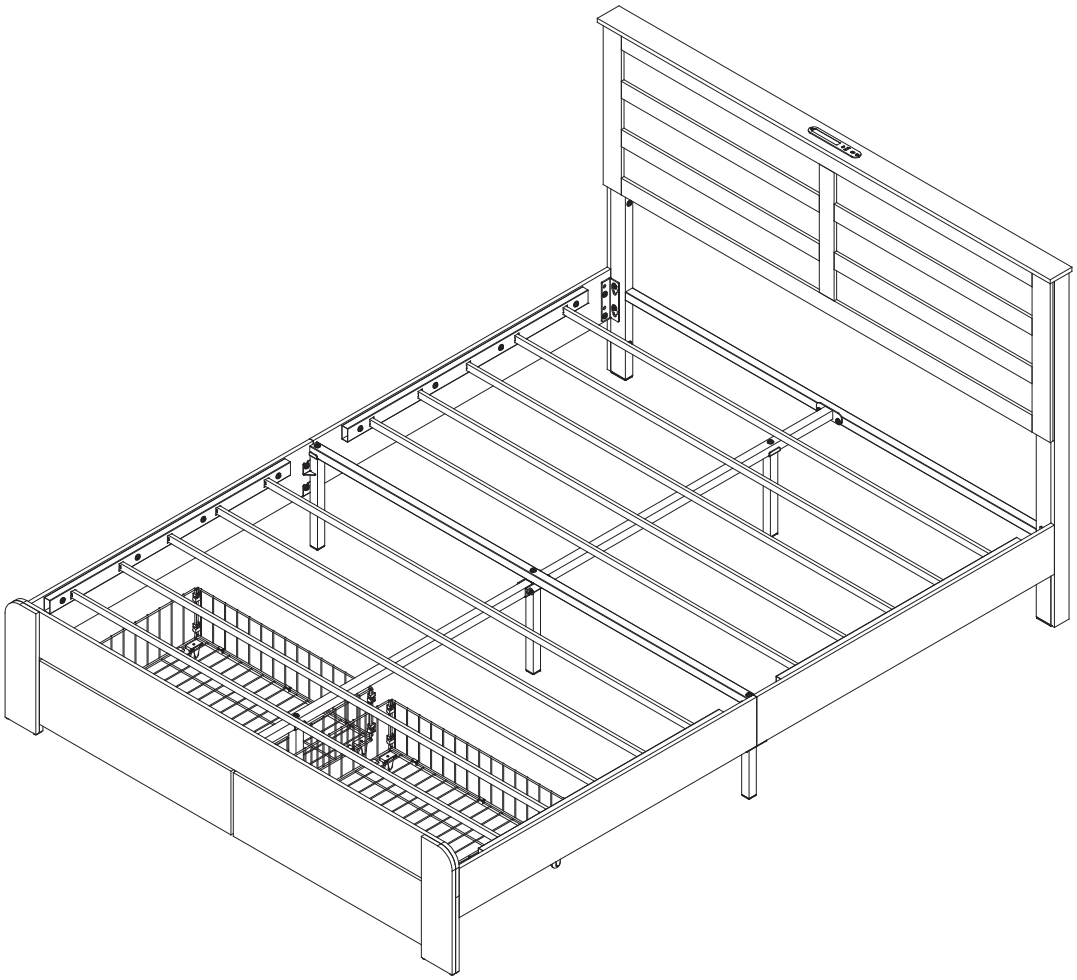

Thank you for choosing our products, please assemble and use it following the instructions.

# Assembly Instruction

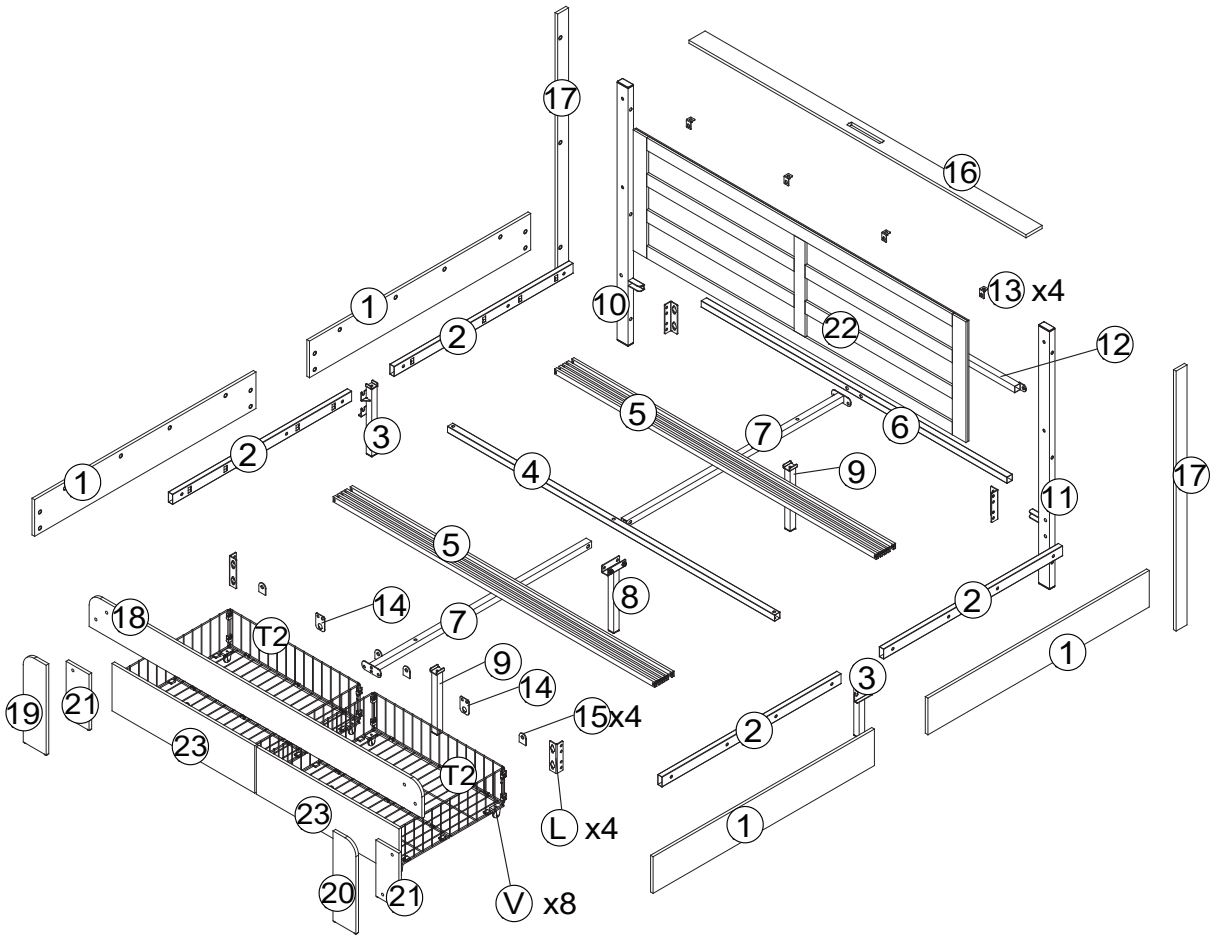



## Important Note

HARDWARE NOTE :

1.Two or more people are required for assembly

2.Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

# Components

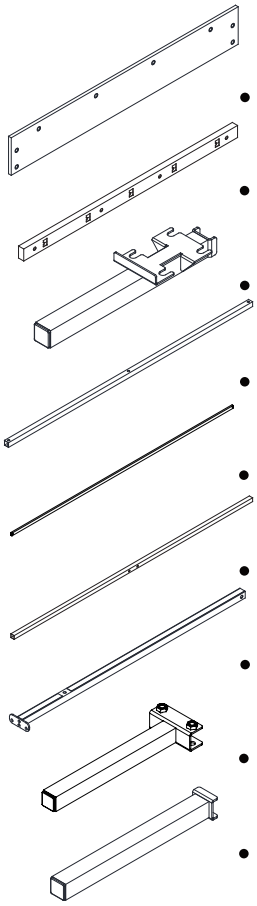

1 x4pcs

2 x4pcs

3 x2pcs

4 x1pc


5 x10pcs

6 x1pc

7 x2pcs

8 x1pc

9 x2pcs

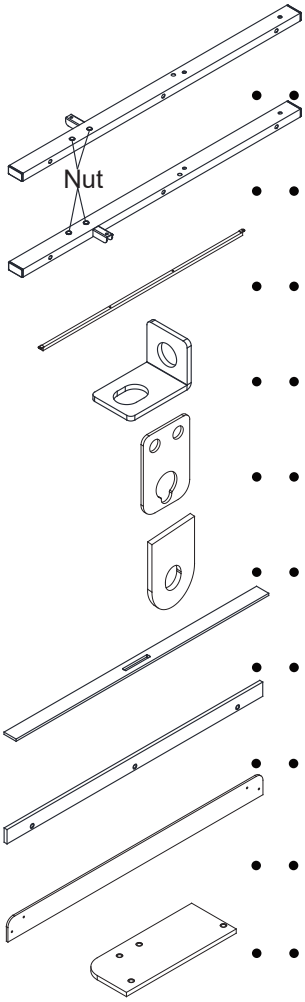


10 x1pc

11 x1pc

12 x1pc

13 x4pcs

14 x2pc


15 x4pcs

16 x1pc

17 x2pcs

18 x1pc

19 x1pc

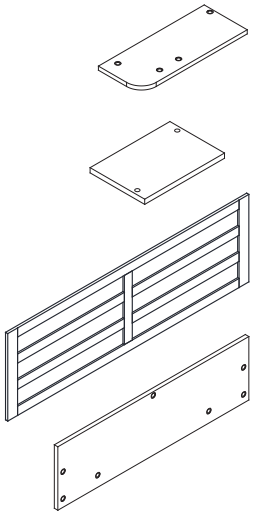

20 x1pc

21 x2pc

22 x1pc

23 x2pcs



M8x12 A x48pcs



M8x20
white zinc B x8pcs



M8x25 C x4pcs



M8x30
white zinc D x16pcs



M8x35 E x14pcs



M8x45 F x2pcs



M8x60 G x7pcs



M4x10 H x8pcs



ST4x14 I x2pcs




M8x14
color zinc


J x2pcs



K x20pcs




L x4pcs




M4

M x1pc




M8

N x1pc

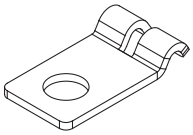


O x4pcs

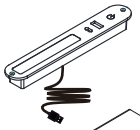

U x1pc




V x8pcs

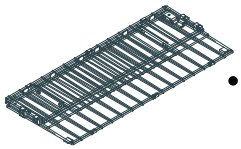


T2 x2pcs

## 1

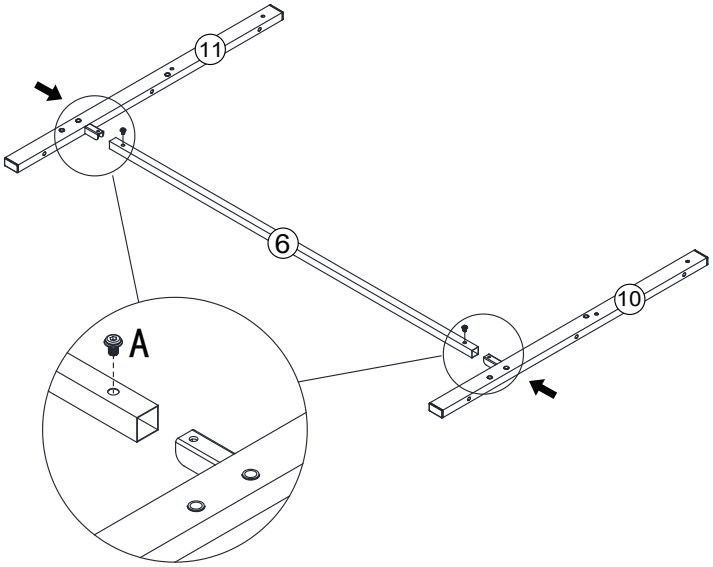



| A | M8x12 | 2pcs |
|---|---|---|

## 2

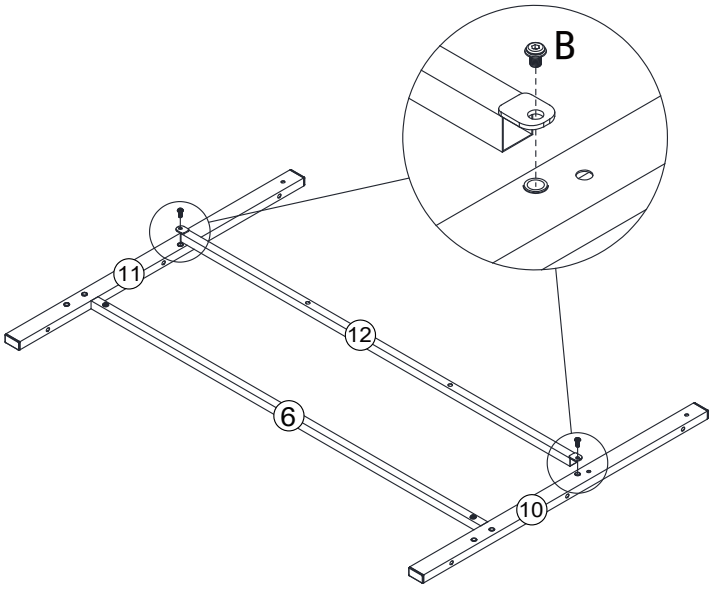


| B | M8x20 | 2pcs | white zinc |
|---|---|---|---|


## 3

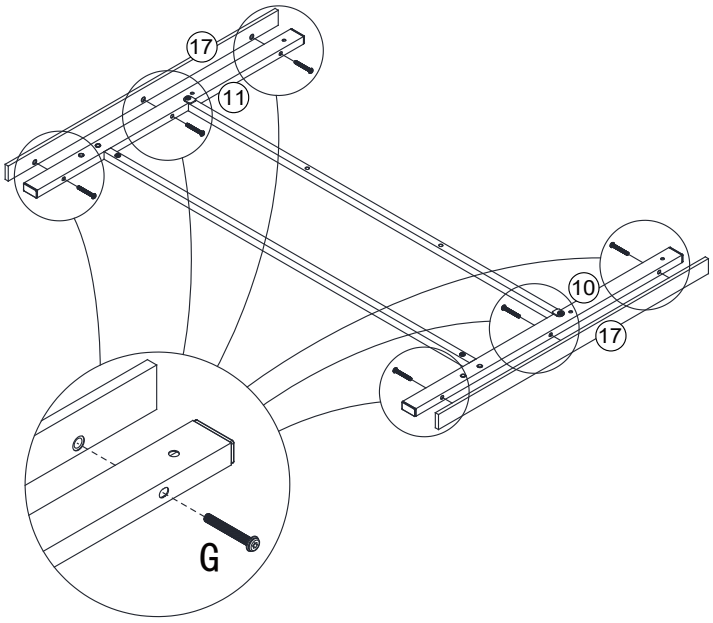


⚠ Do not fully tighten the screws yet.


| G | M8x60 | 6pcs |
|---|---|---|

## 4

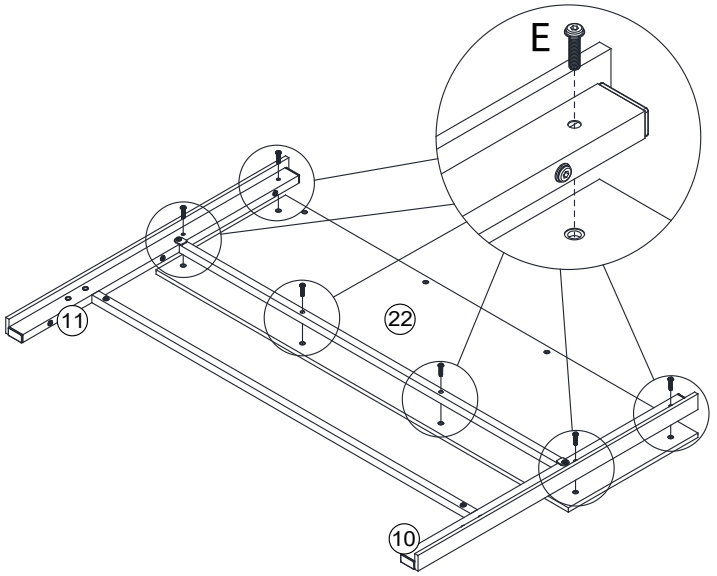


| | | |
|---|---|---|
| E | M8x35 | 6pcs |


## 5

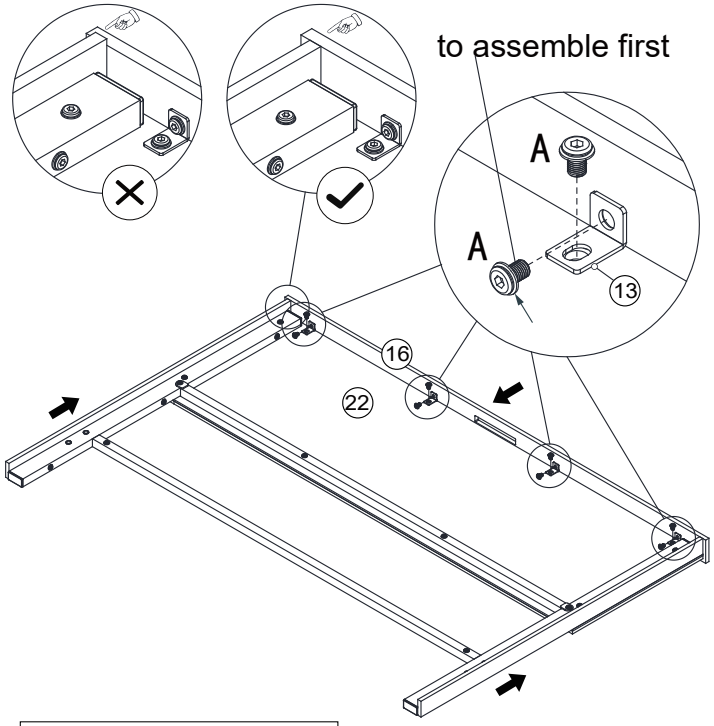


Fully tighten all the screws.


| | | |
|---|---|---|
| A | M8x12 | 8pcs |

## 6

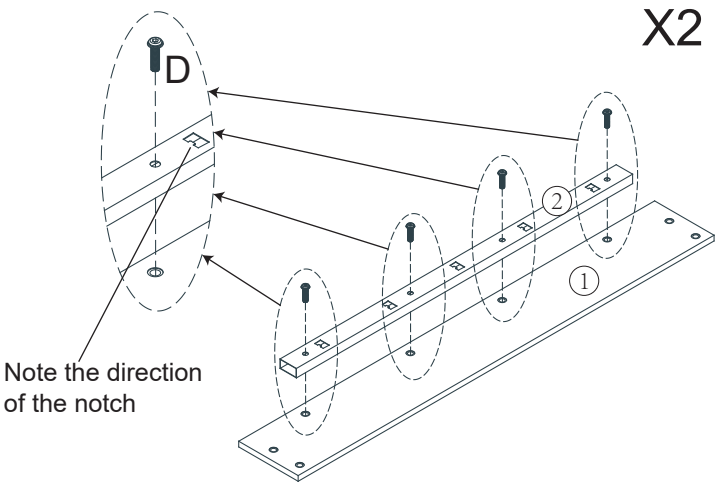



| | | | |
|---|---|---|---|
| D | M8x30 | 8pcs | white zinc |

## 7

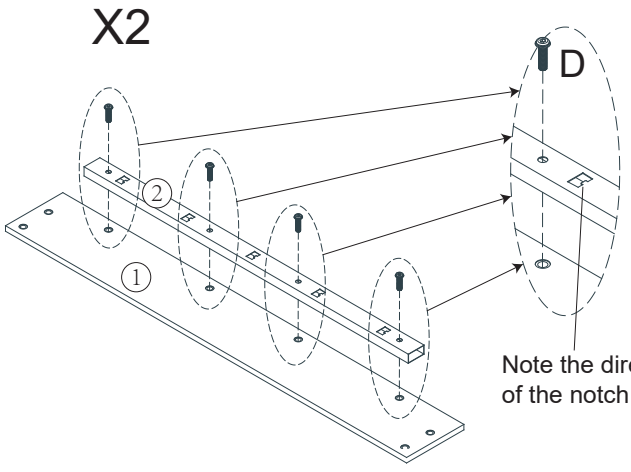



| | | | |
|---|---|---|---|
| D | M8x30 | 8pcs | white zinc |

## 8

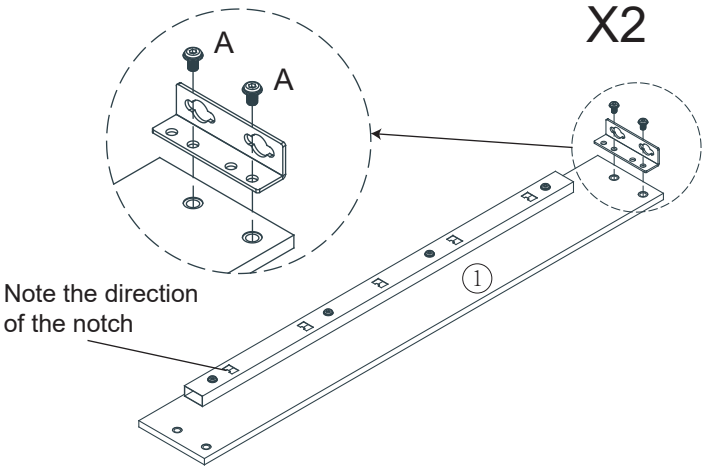



| | | |
|---|---|---|
| A | M8x12 | 4pcs |

## 9

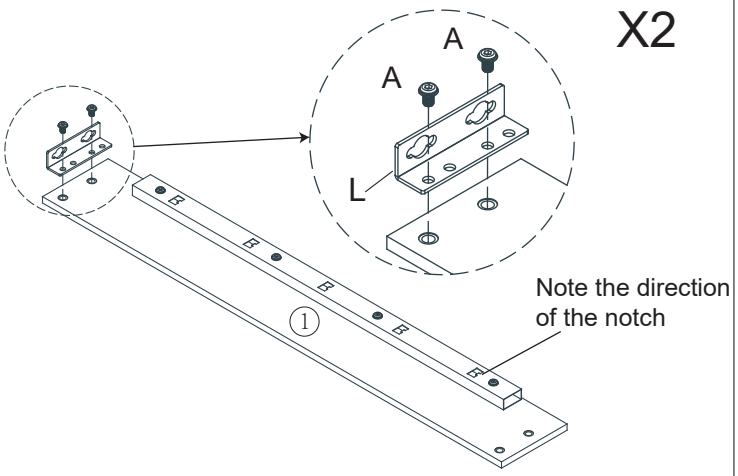



| | | |
|---|---|---|
| A | M8x12 | 4pcs |

## 10

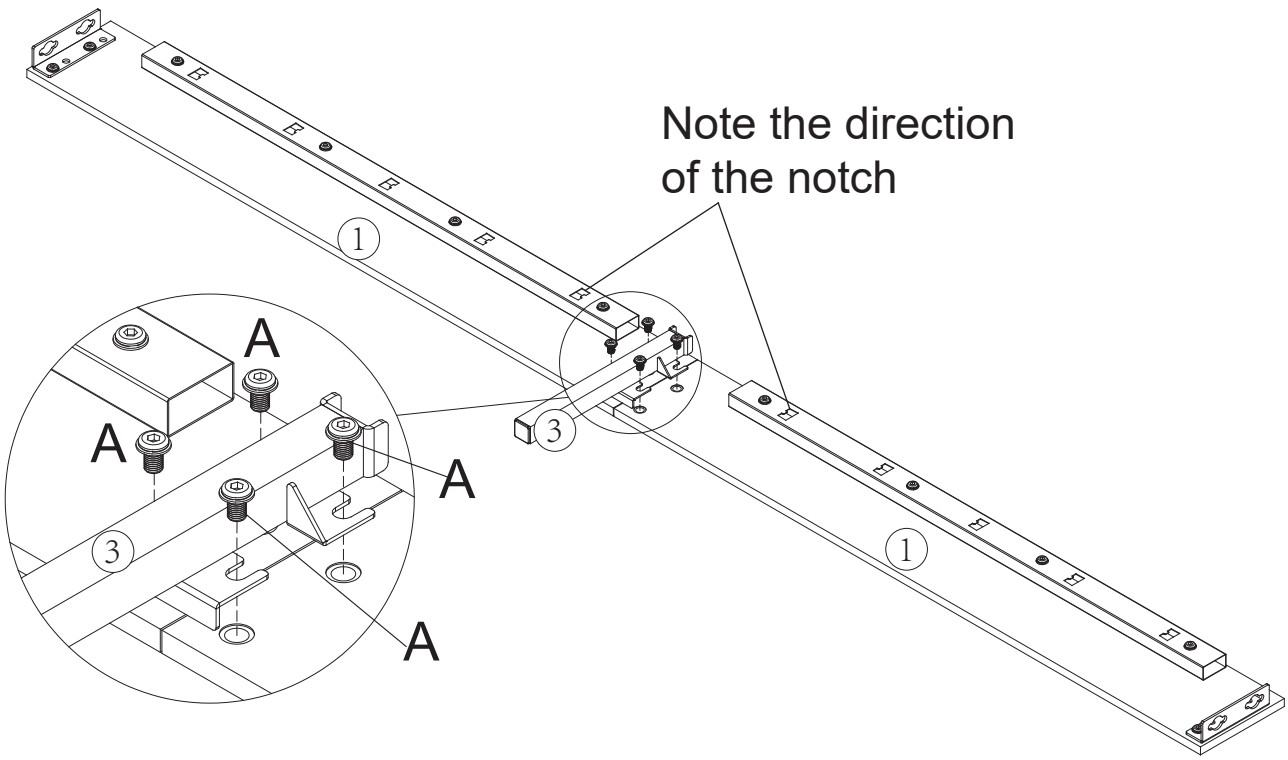



| | | |
|---|---|---|
| A | M8x12 | 8pcs |

## 11

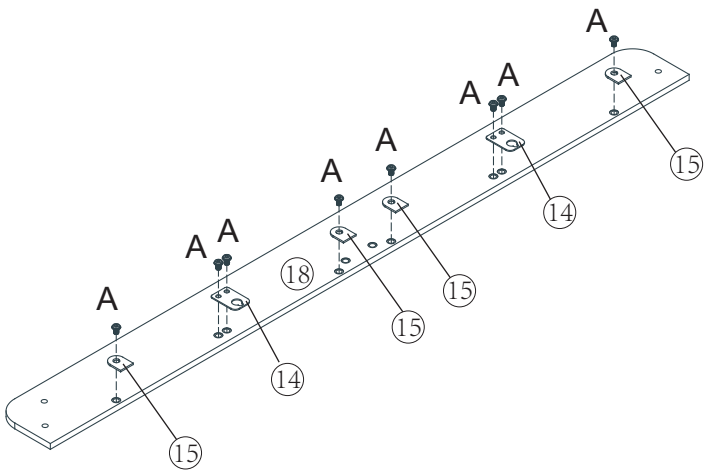



| A | M8x12 | 8pcs |
|---|---|---|

## 12

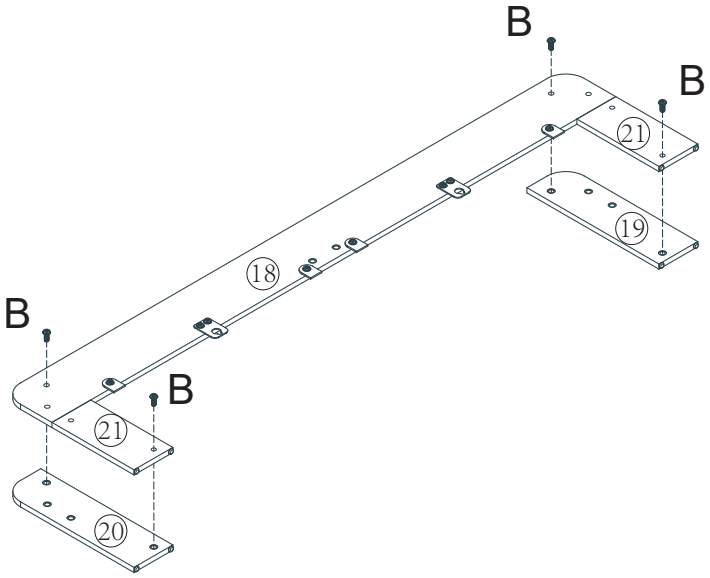


| B | M8x20 | 4pcs | white zinc |
|---|---|---|---|


## 13

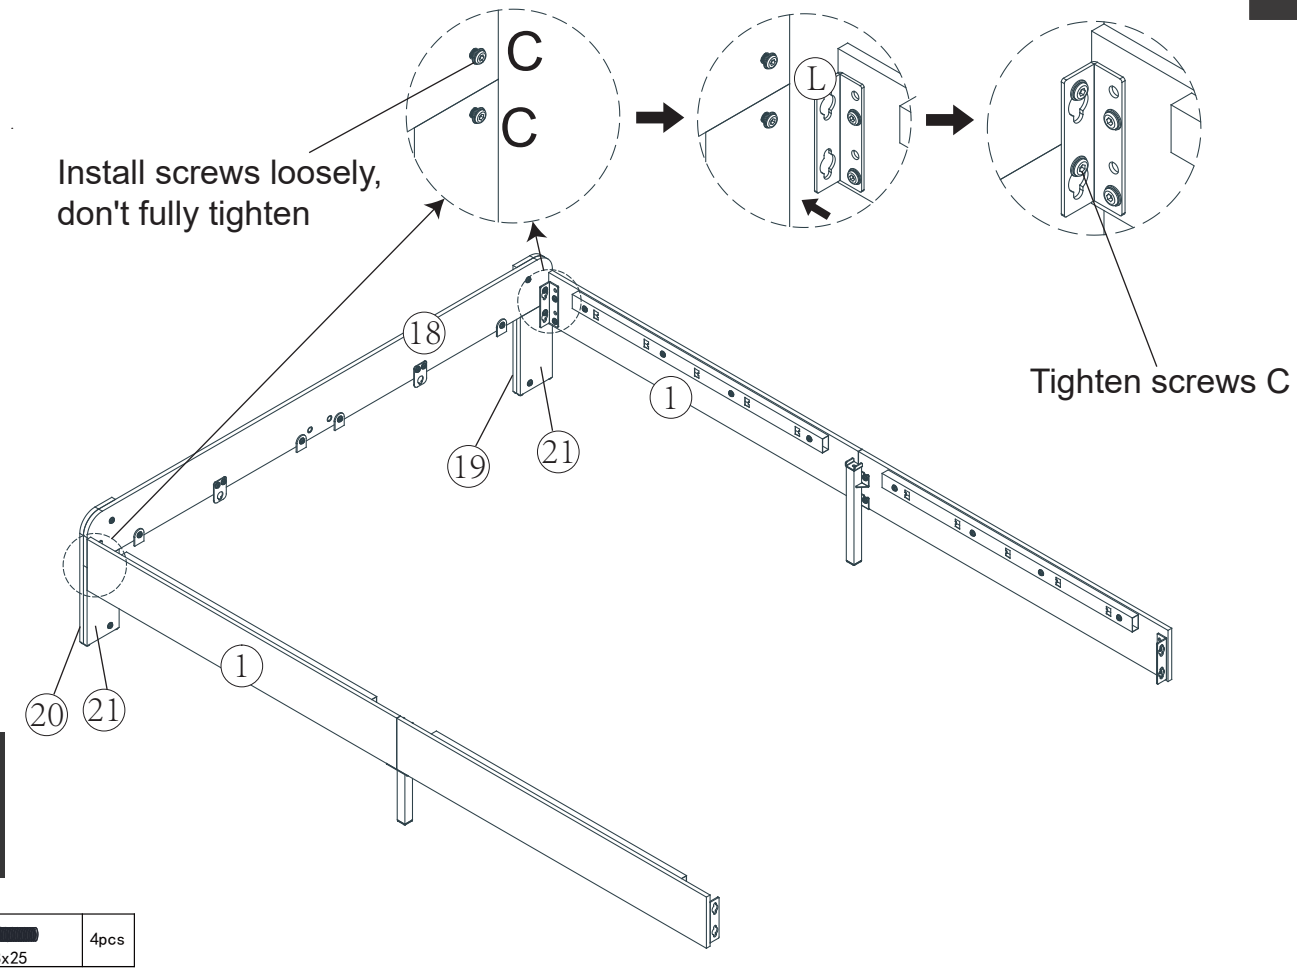


2 persons required for assem bling

| C | M8x25 | 4pcs |
|---|---|---|


## 14

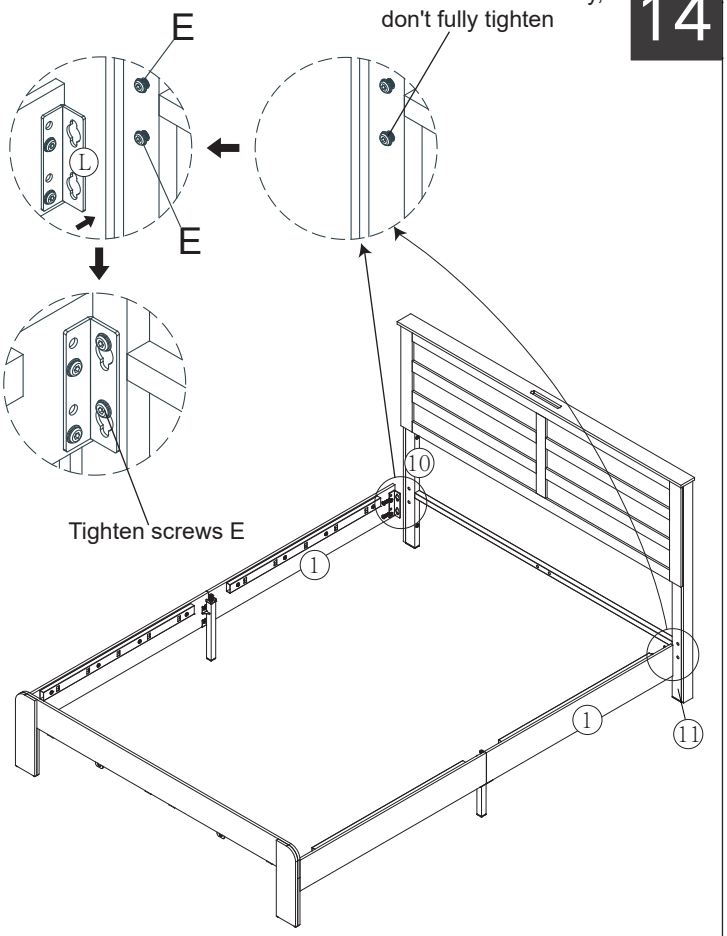


| | | |
|---|---|---|
| E | M8x35 | 4pcs |

## 15


Tighten screws

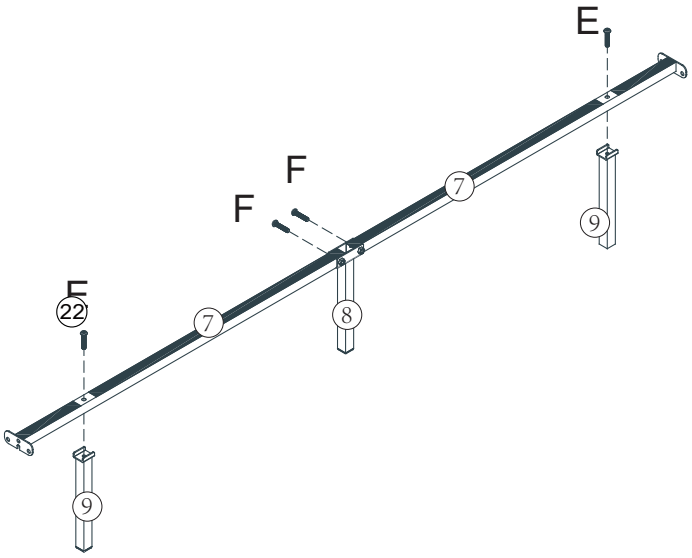


| | | |
|---|---|---|
| E | M8x 35 | 2pcs |
| F | M8x45 | 2pcs |

## 16

Assemble second

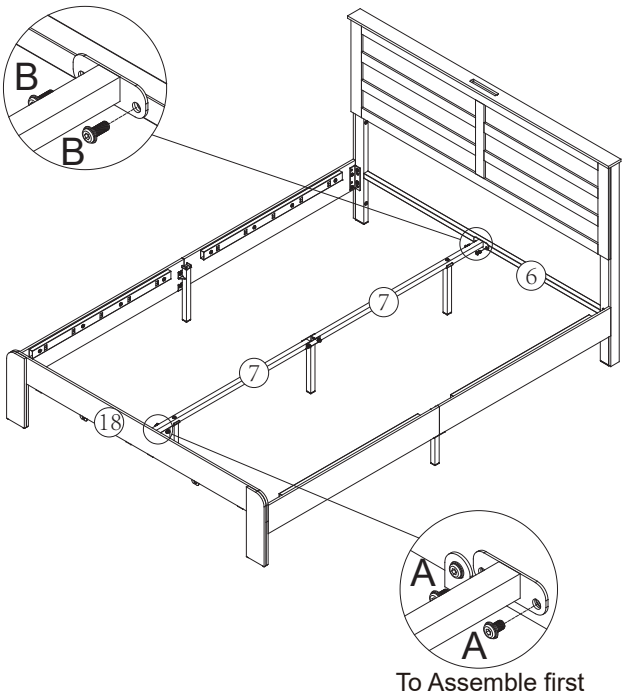



To Assemble first

| | | |
|---|---|---|
| A | M8x12 | 2pcs |
| B | M8x20 | 2pcs |


white zinc

## 17

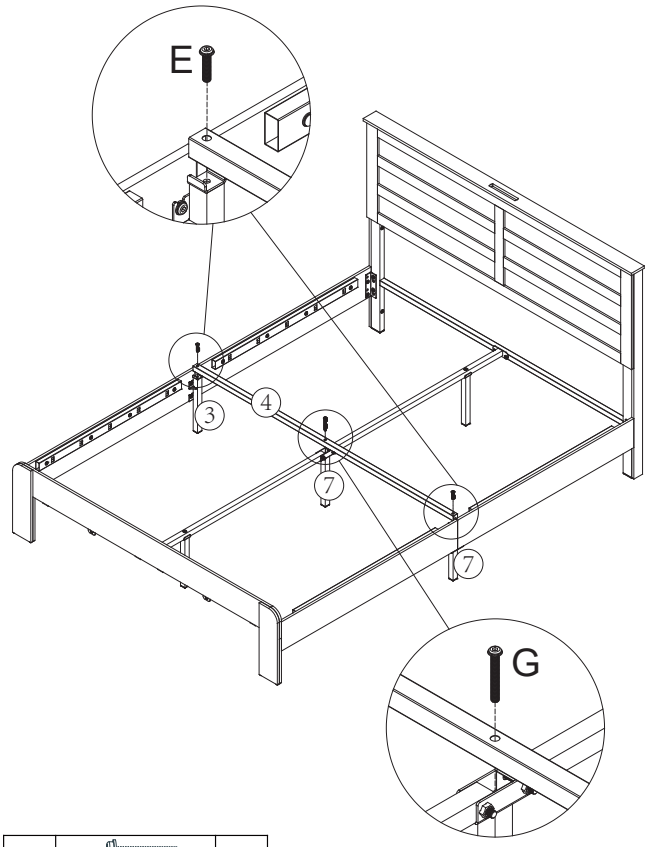



| | | |
|---|---|---|
| E | M8x 35 | 2pcs |
| G | M8x60 | 1pc |

18

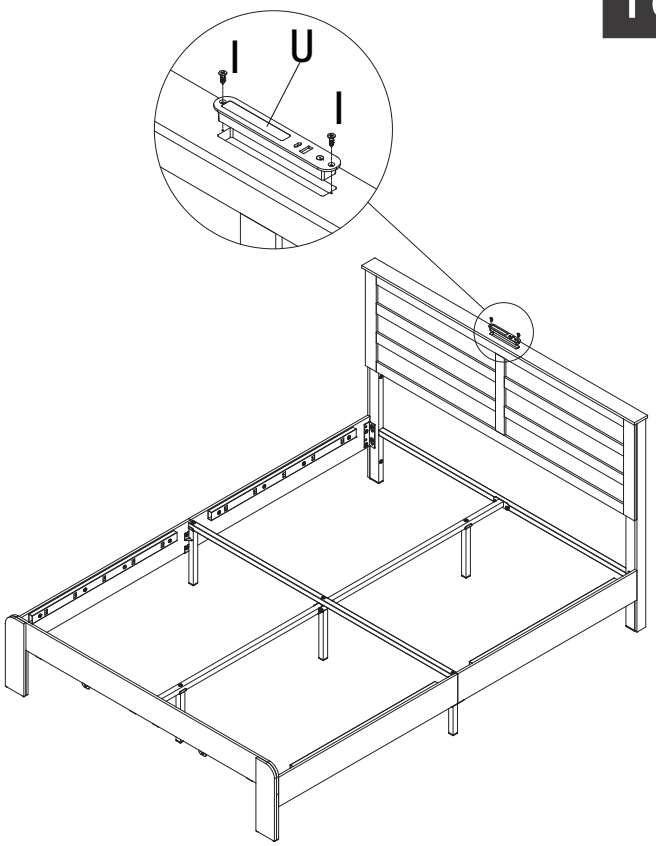



| | | |
|---|---|---|
| I | ST4x14 | 2pcs |

19

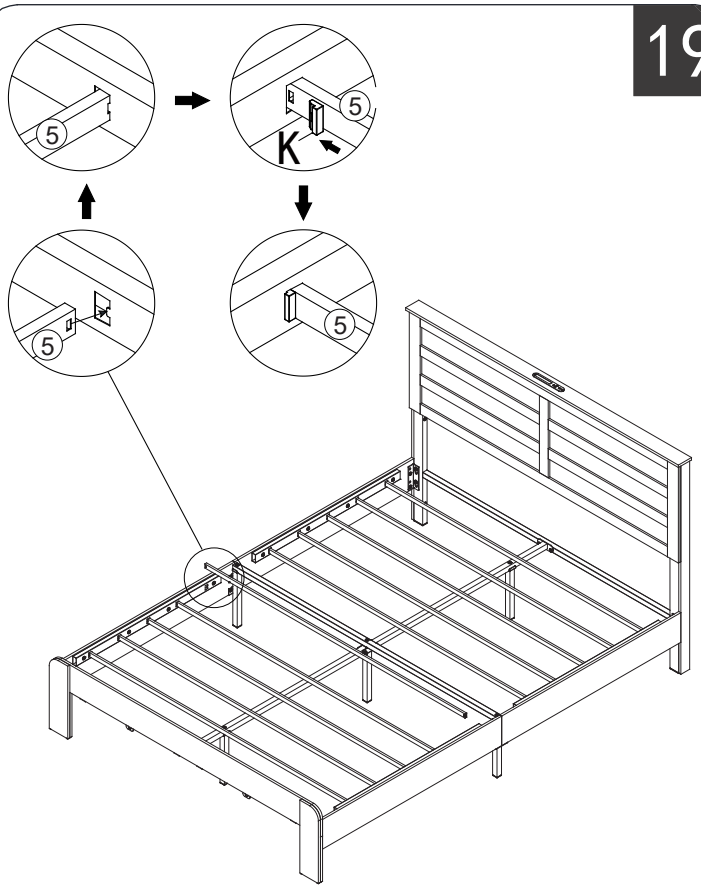



| | | |
|---|---|---|
| K | | 20pcs |

20

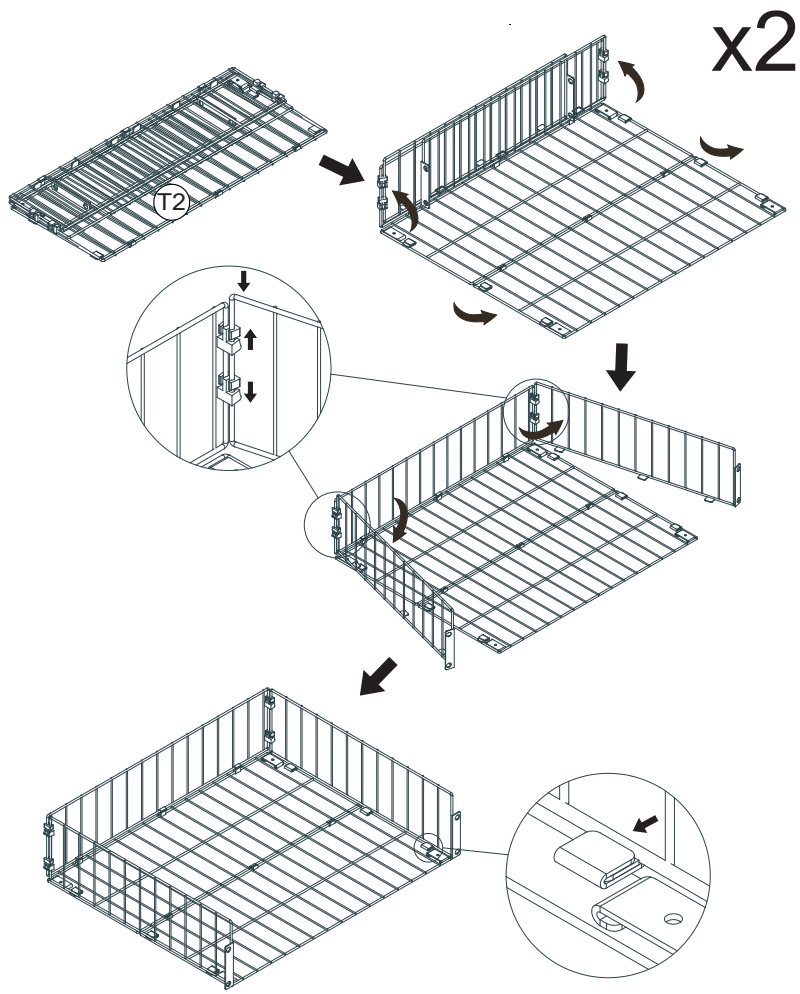

## 21

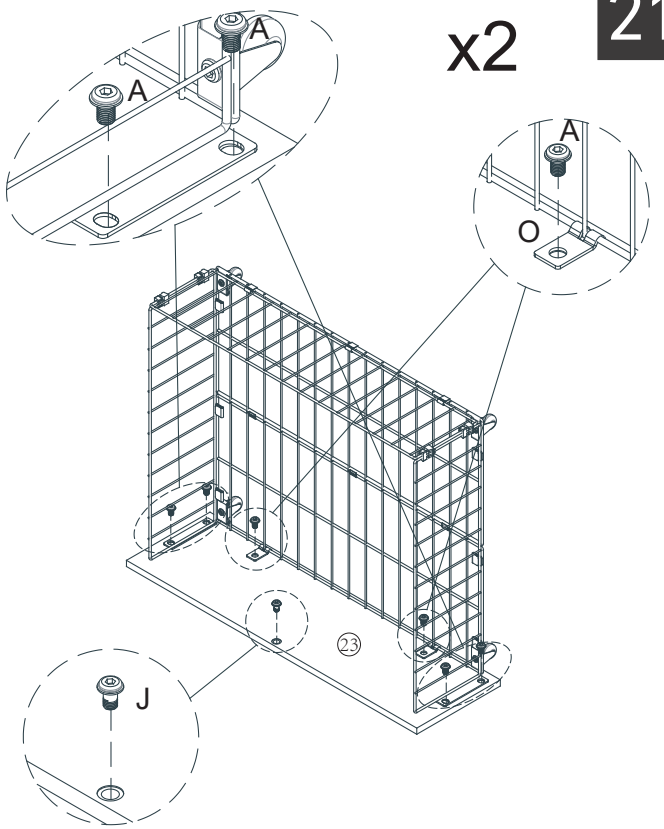



x2

| | | |
|---|---|---|
| A | M8x12 | 12pcs |
| J | M8x14 | 2pcs |
| O | | 4pcs |


Color zinc

## 22

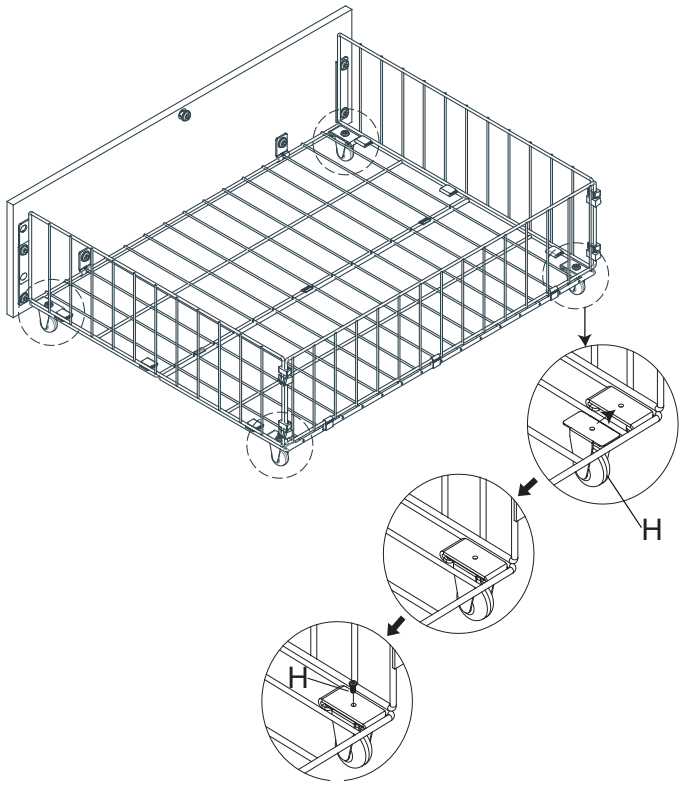


| | | |
|---|---|---|
| H | M4x10 | 8pcs |

## 23

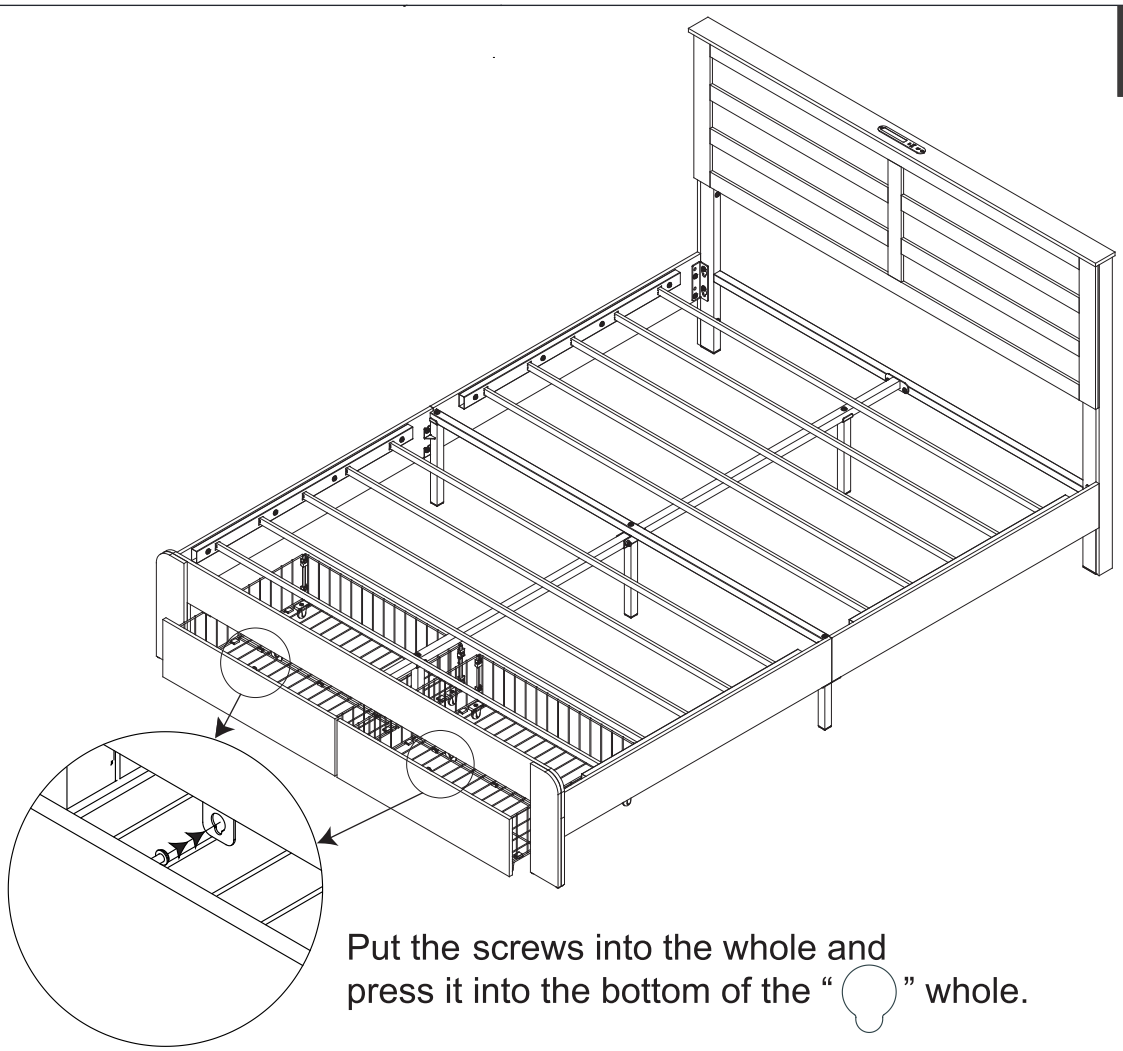

Put the screws into the whole and press it into the bottom of the “ ” whole.

24

