ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION : **SEMI ROUND BEDSIDE**

1

Reverse the Bedside top & place the leg as shown & align the leg to match the apron.

Twist the leg into the iron fitting slot by rotating it. **2**

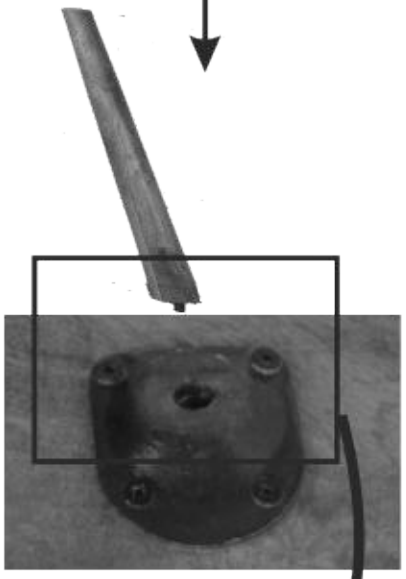

3

Fix the other legs in the similar way

4
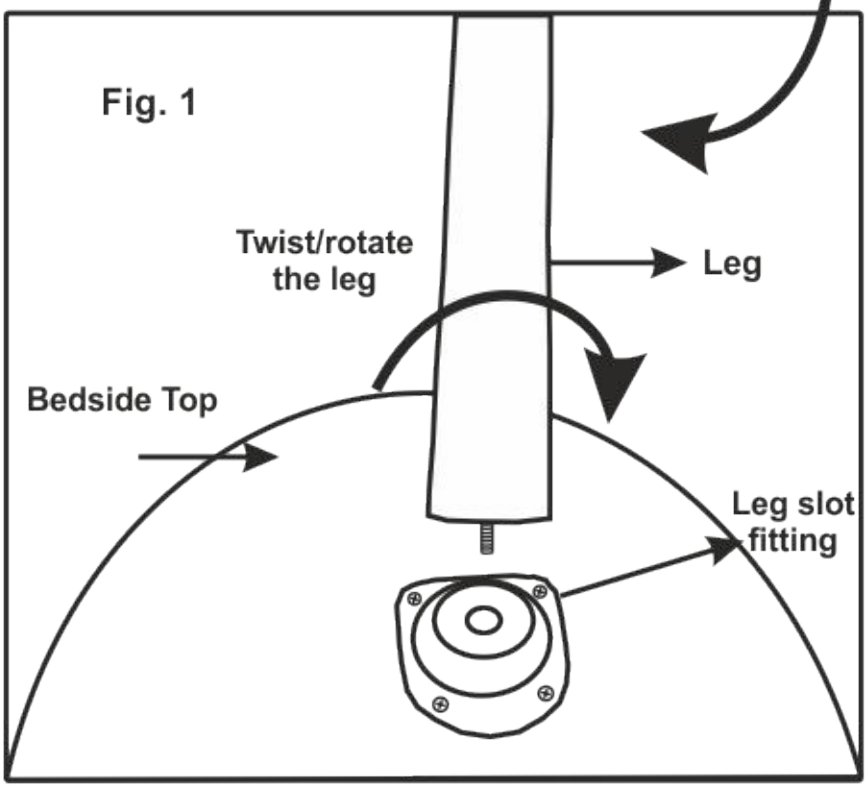
Reverse the Bedside straight. Now your Bedside is ready for use