ASSEMBLY INSTRUCTIONS

HEADBOARD


THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT.IDENTIFY AND COUNT ALL PARTS AND COMPARE WITH HARDWARE LIST AS BELOW:

(BOX 1) BOX OF HEADBOARD

ITEM	DRAWING	DESCRIPTION	QTY
A		HEAD BOARD	1
B		HB LEG POST (L/R)	2
C		BOTTOM RAIL	1

(BOX 1) BOX OF HEADBOARD (HARDWARE LIST)

ITEM	DRAWING	DESCRIPTION	DIMENSION	QTY
D		ALLEN KEY M5	5 X 35 X 120MM	1
E		ALLEN KEY M4	4 X 35 X 55MM	1
F		CONNECTION BOLT (JCBC M8x35mm) W/SPRING WASHER & WASHER MEDIUM		4
G		CONNECTION BOLT (JCBC M6x35mm) W/SPRING WASHER & WASHER MEDIUM		2

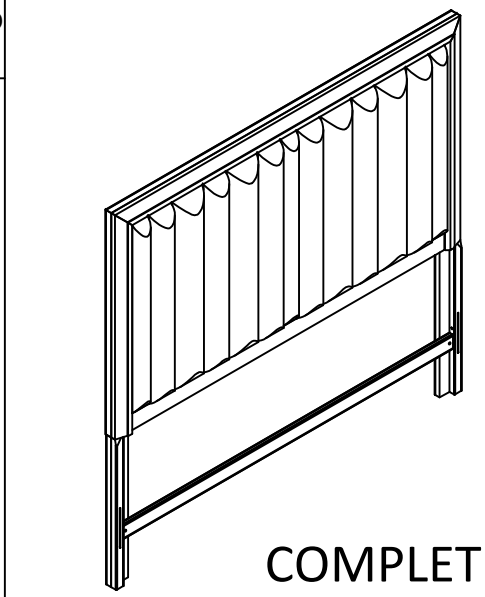

COMPLETED ASSEMBLY

BACK VIEW

STEP 1 :ATTACH AND TIGHTEN THE LEG POST (L/R) (B) TO THE HEADBOARD (A).INSERT CONNECTION BOLT (F) WITH WASHER TO AFFIX.

STEP 2: AFFIX THE BOTTOM RAIL (C) TO THE HEADBOARD LEG (B) USING CONNECTION BOLT (G) WITH WASHER.

NOTE:PERIODICALLY CHECK TO ENSURE THAT ALL CONNECTORS (BOLTS, SCREW, ETC) ARE TIGHT.

CLEANING INSTRUCTION

AFTER ASSEMBLED,CLEAN & POLISH THE COMPLETE PARTS IF NECESSARY WITH SOFT CLOTHES AND INDUSTRIAL RECOGNIZED FURNITURE POLISH.

THE HARDWARE IS LOCATED IN THE PACKING ITEMS

MADE IN MALAYSIA

ASSEMBLY INSTRUCTIONS

BED

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT.IDENTIFY AND COUNT ALL PARTS AND COMPARE WITH HARDWARE LIST AS BELOW:

PART LIST

(BOX 1) BOX OF HEADBOARD

ITEM	DRAWING	DESCRIPTION	QTY
A		HEADBOARD	1

(BOX 2) BOX OF FOOTBOARD

ITEM	DRAWING	DESCRIPTION	QTY
B		FOOTBOARD	1
C		WOODEN SLAT	5
D		SLATS SUPPORT	10

(BOX 2) BOX OF FOOTBOARD HARDWARE LIST


ITEM	DRAWING	DESCRIPTION	DIMENSION	QTY
E		C.S.K. SCREW(M4)	4 X 32MM	10


(BOX 3) BOX OF SIDE RAILS

ITEM	DRAWING	DESCRIPTION	QTY
F		SIDE RAILS	2

SCREW DRIVER IS NOT INCLUDED


HAMMER IS NOT INCLUDED

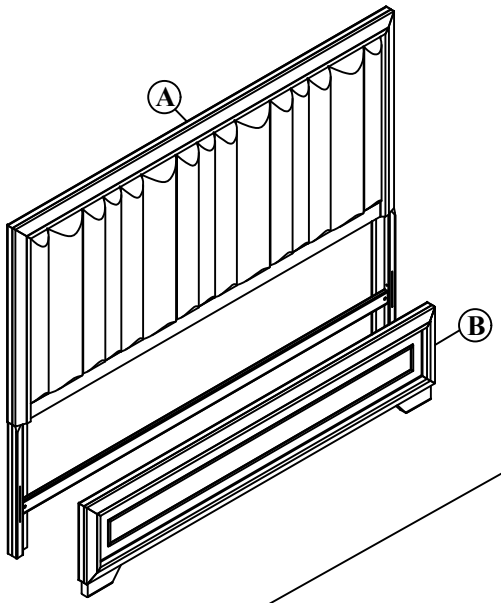

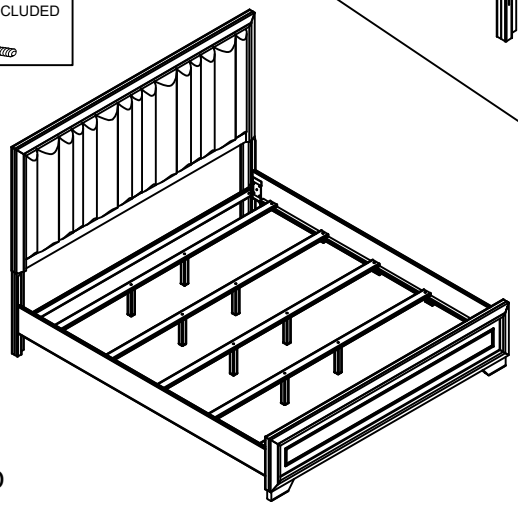


COMPLETED ASSEMBLY

STEP 1 :

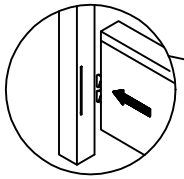


STEP 2 :

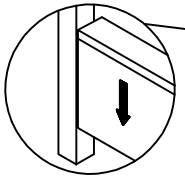

PRESS LATERALLY INTO THE GROOVE AND DROP DOWN.

STEP 3 :

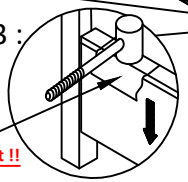


Important !!

LEVEL THE SIDE RAIL BY COVERING WITH A SOFT CLOTH AND TAPPING WITH A HAMMER.

STEP 4 :

AFFIX THE SLAT SUPPORT (D) AND ADJUST HEIGHT FOR THE WOODEN SLAT (C)

STEP 5 :

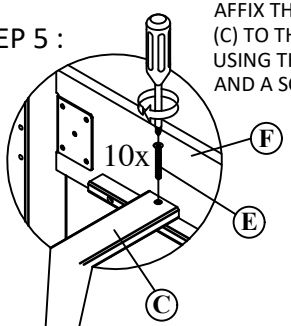

AFFIX THE WOODEN SLAT (C) TO THE SIDE RAIL (F) USING THE CSK SCREW (E) AND A SCREWDRIVER

NOTE:PERIODICALLY CHECK TO ENSURE THAT ALL CONNECTORS (BOLTS, SCREW, ETC) ARE TIGHT.

CLEANING INSTRUCTION

AFTER ASSEMBLED,CLEAN & POLISH THE COMPLETE PARTS IF NECESSARY WITH SOFT CLOTCH AND INDUSTRIAL RECOGNIZED FURNITURE POLISH.

THE HARDWARE IS LOCATED IN THE PACKING ITEMS

MADE IN MALAYSIA