Commercial Work Bench Assembly Instructions

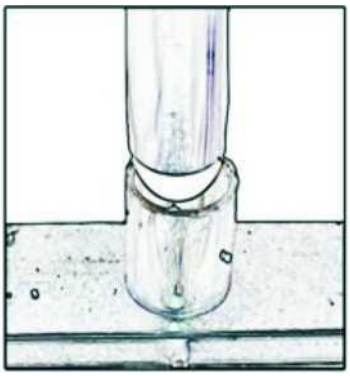

①

Let the tabletop upside down on a soft clotin to prevent scratches.
Insert one pipe into a comer support.

②

Remove the allen screws and allen wrench.

③

Each corner support requires Two allen screws. Wait until the table is completely assembled before securely tighening each allen screw.

④

After all four pipes have been Attached,lower the adjustable Table base and let each pipe Into the base holes.

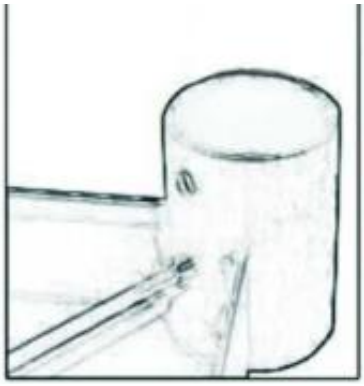

⑤

Each corner support requires Two allen screws .Wait until the table is completely assembled before securely tightening each allen screw.

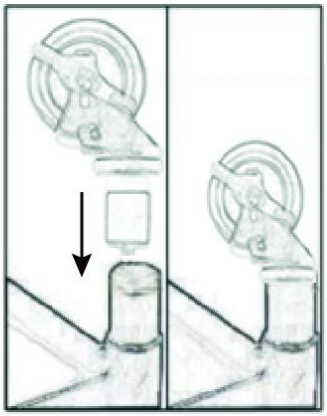

⑥

Insert four casters into the four foot tubes, all of which are universal wheels, two of which have brakes.

⑦

Turn the table over after each screw is securely tightened .Two people should be required to rotate the table.