



Mobile folding sideboard CZ20

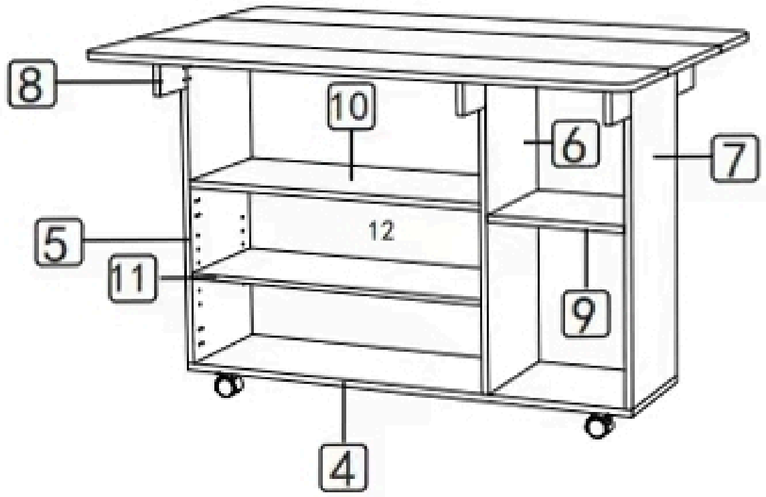


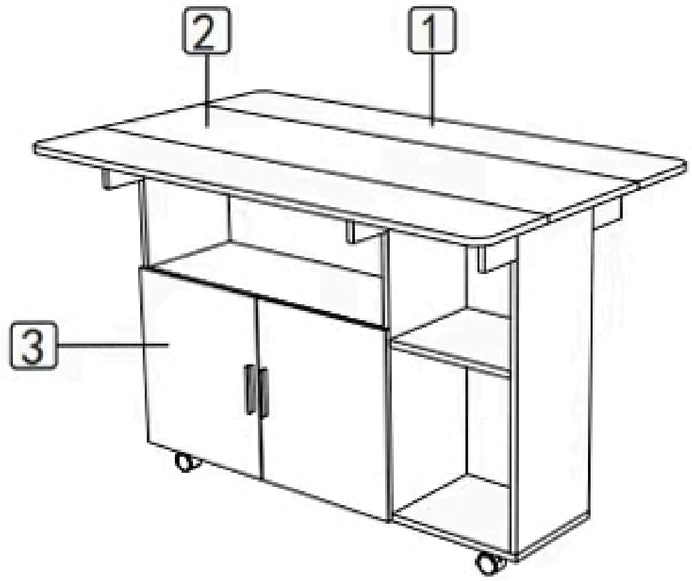




x12	x4	x12	x112	x2	x2	x4	x4
A. eccentric wheel lead screw	B. Handle wire	C. Fold the signature	D. Small self-tapping	E. Hexagonal self-tapping	F. Handle	G.Caster wheel	H.Straight-arm hydraulic hinge
x6	x4	x4	1	2	3	4	5
I. Felt	J. eccentric wheel lead screw	K. Plate support shaft					
6	7	8	9	10	11	12	


1

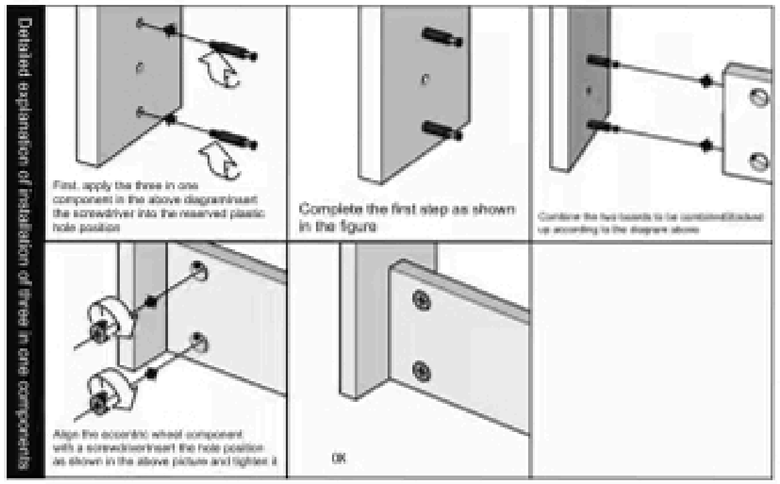
Detailed explanation of installation of three in one components
First, apply the three in one component in the above diagramInsert the screwdriver into the reserved plastic hole position
Complete the first step as shown in the figure
Align the eccentric wheel component with a screwdriverInsert the hole position as shown in the above picture and tighten it
OK


2

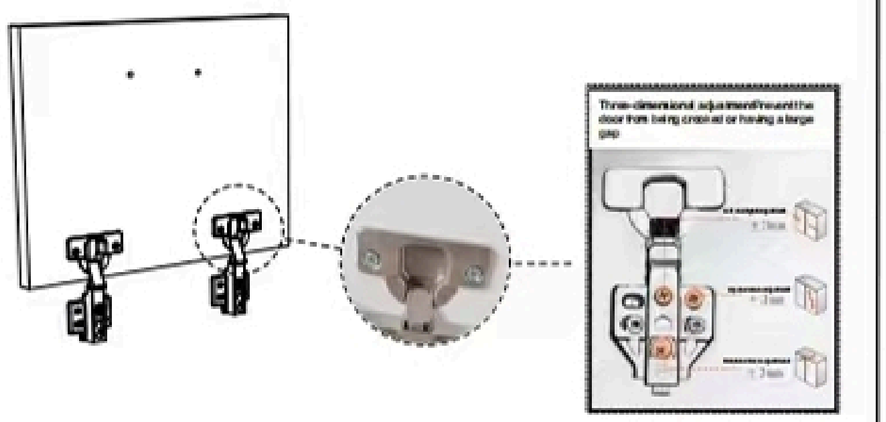
Three-dimensional adjustmentPrevent the door from being crooked or having a large gap


3

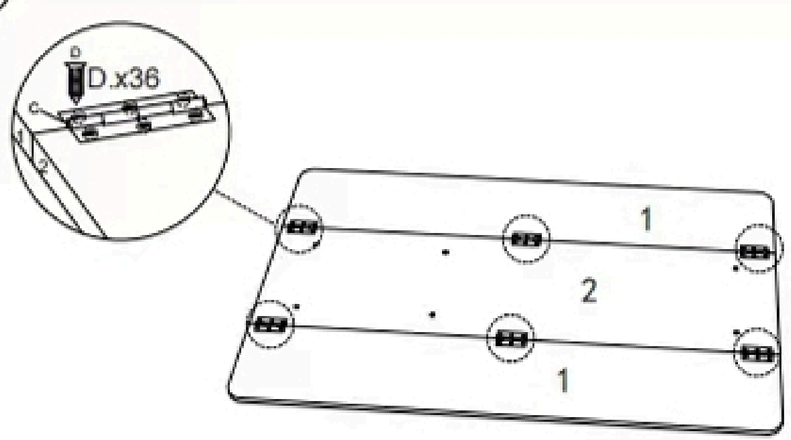
D.x36
1
2
1


4

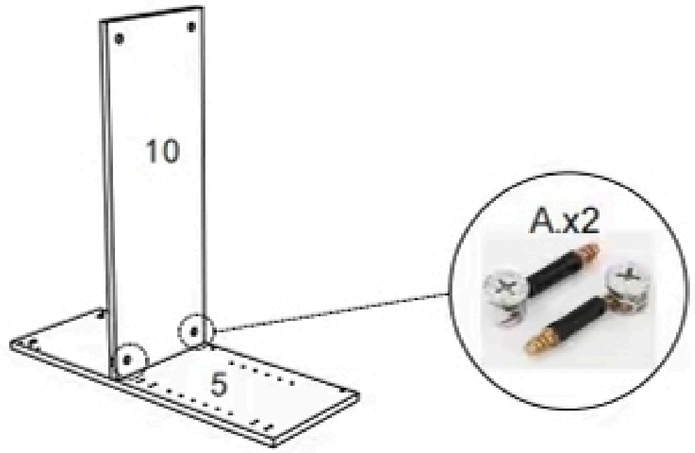
10
5
A.x2


5

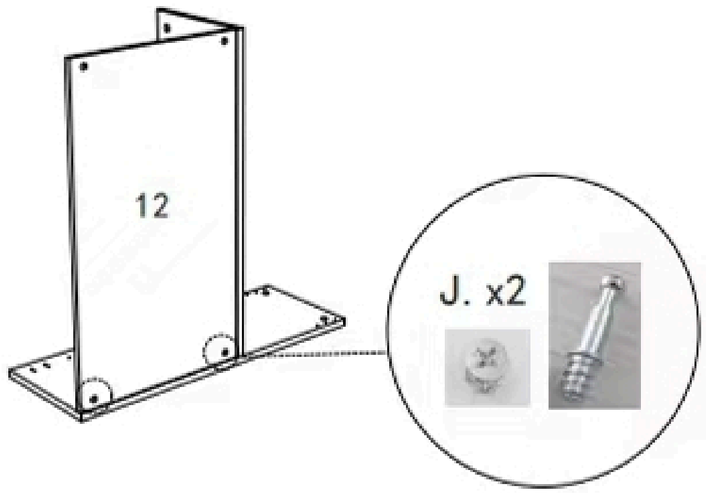
12
J. x2


6

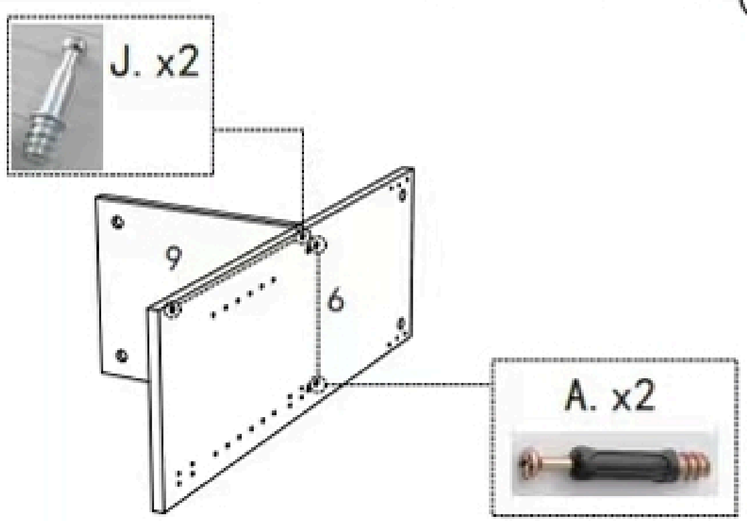
J. x2
9
6
A. x2


7

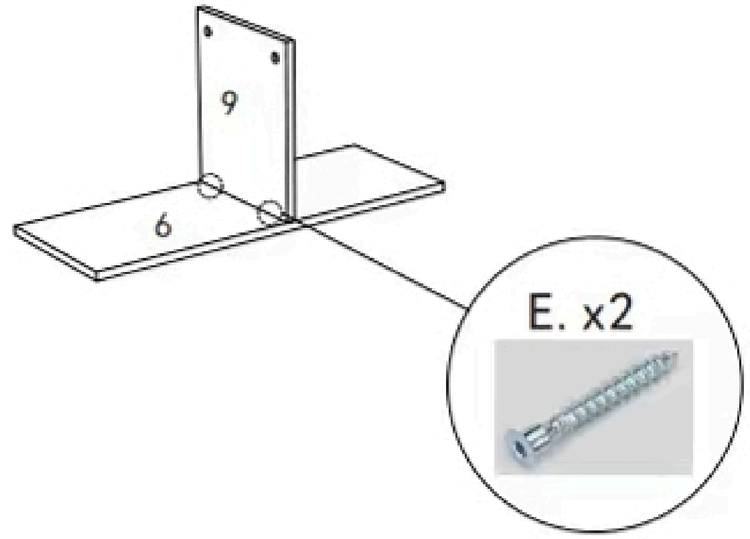
9
6
E. x2


8

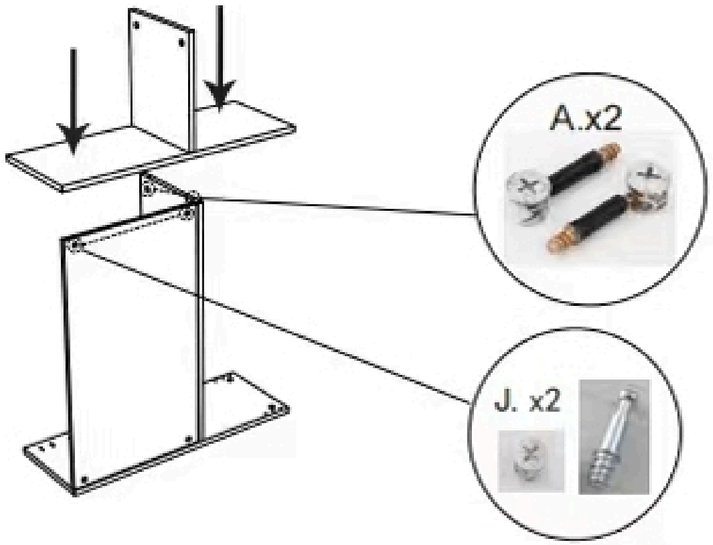
A.x2
J. x2


9

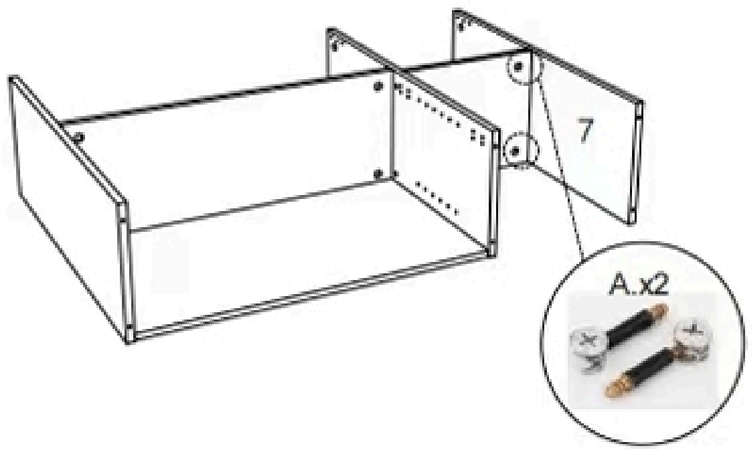
7
A.x2


10

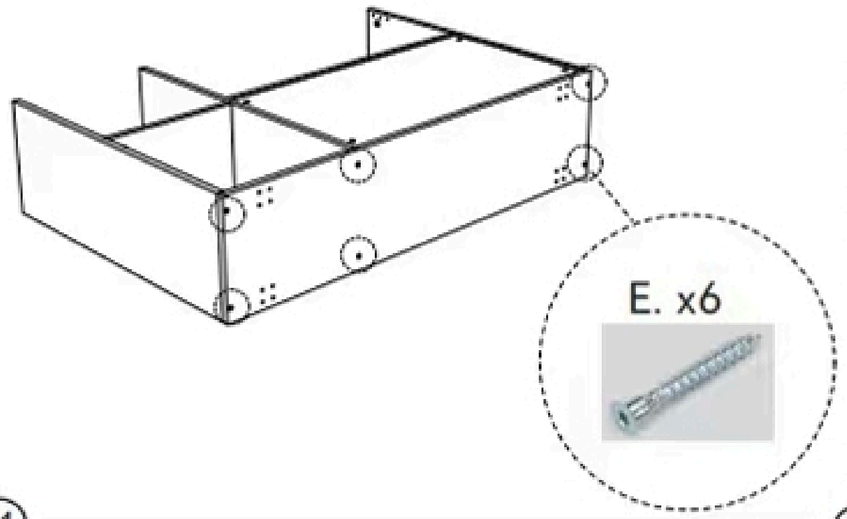


11

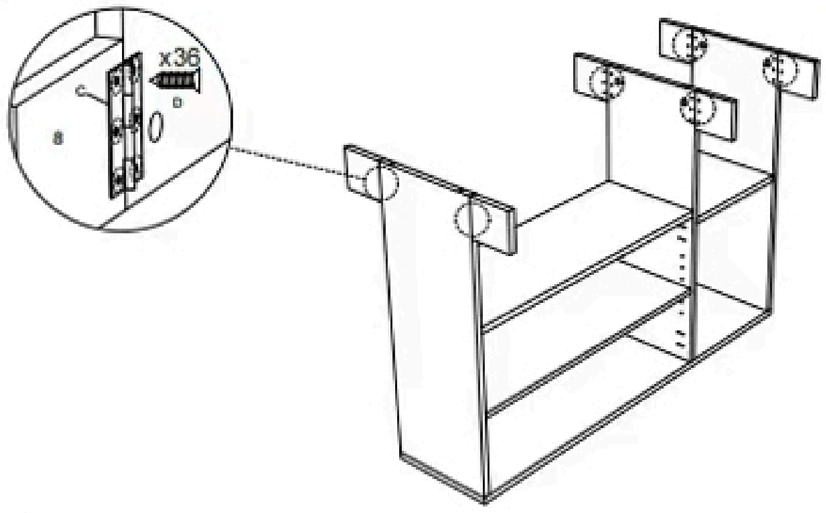


12

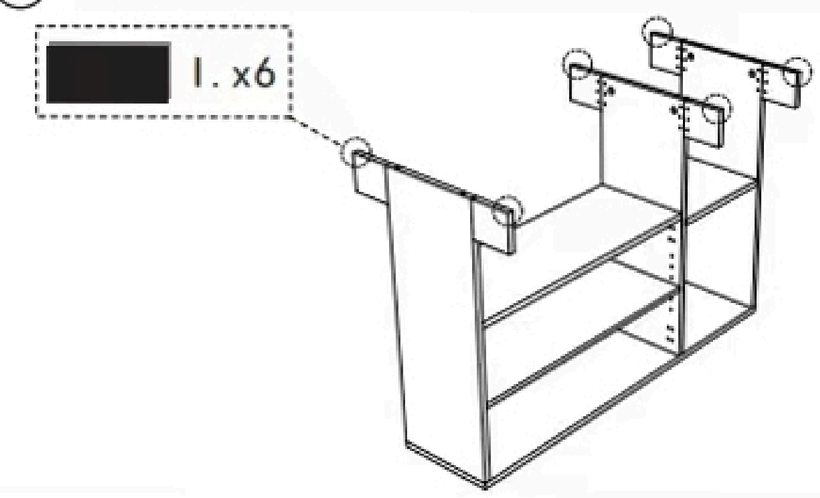


13

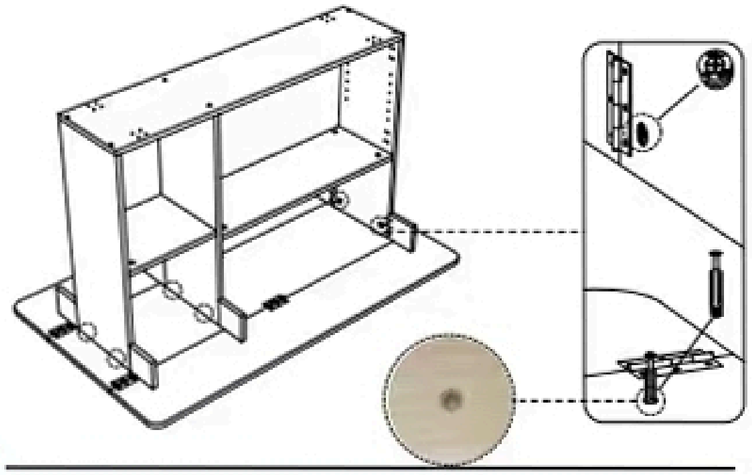


14

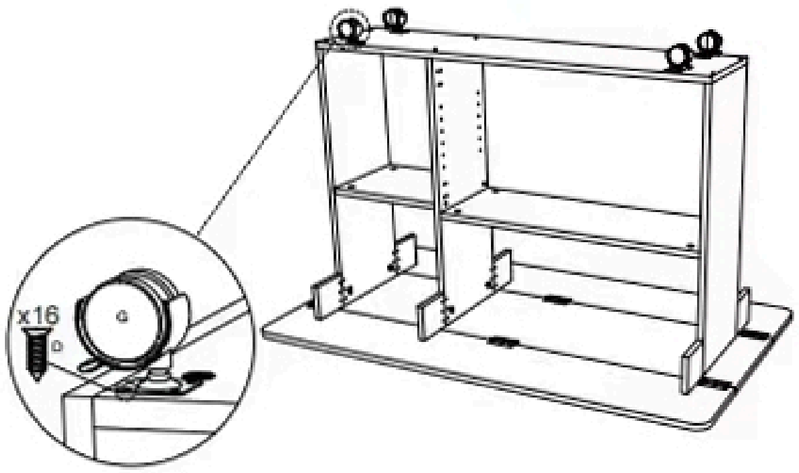

15

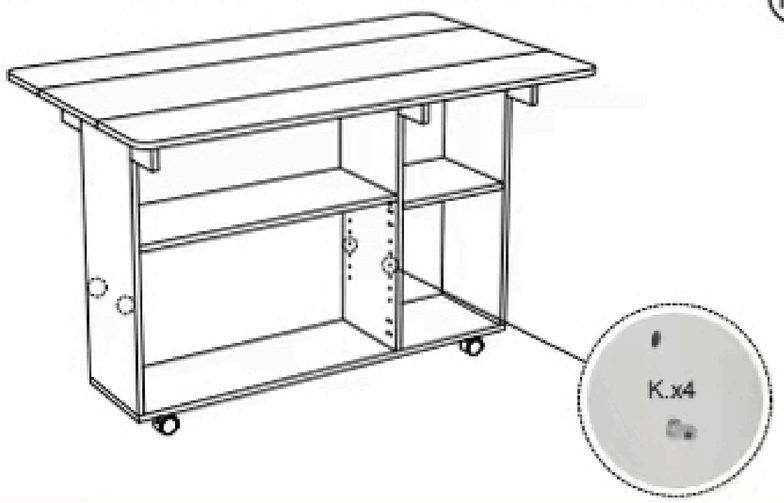

16

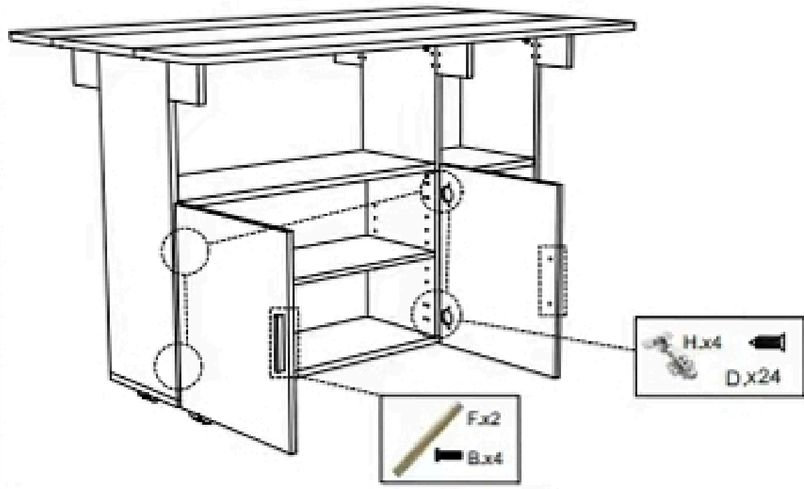

17

18