
Kwikset


Welcome to the Kwikset family!

This guide will get you ready to install your new knob.

If you have any issues, please visit our support center: **kwikset.com/support** or call us at 1-800-327-5625.


*Tools







wood block

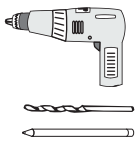

*Tools will depend on install type

Door Prep: If you need help in preparing your door

Drilling template: If you need help in drilling your door

This manual can be used to install a variety of knobs.

For installation instruction for the below designs, follow directions on **page 2.**



Polo



Cove



Tylo



Juno



Maven



Abbey

For installation instruction for the below designs, follow directions on **page 6.**




Arroyo



Pismo



Sora

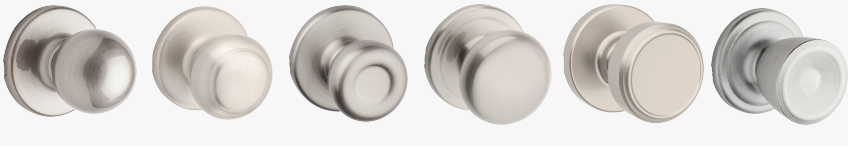


Polo **Cove** **Tylo** **Juno** **Maven** **Abbey**

1 Separate knobs (if pre-assembled)

If installing a non-rotating knob, skip to step 2


A

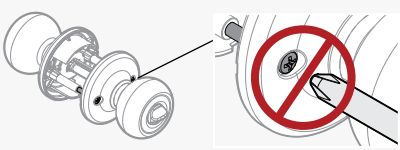


DO NOT remove screws!

B

Twist the side with the holes.

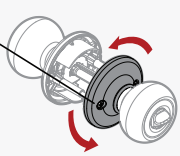

counter-clockwise

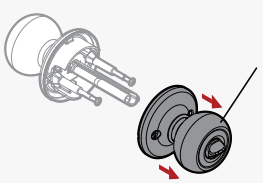


Pull to separate knobs.

C Set knobs aside until ***step 4.***


2 Adjust the backset of the latch (if needed)

A Hold the latch in front of the door hole, with the latch face flush against the door edge.

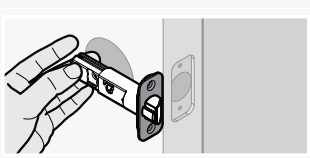


B If the latch holes are centered in the door hole, no adjustment is required. Proceed to step 3.


If the latch holes are **NOT** centered, adjust latch. See “Latch Adjustment” (step 2C).

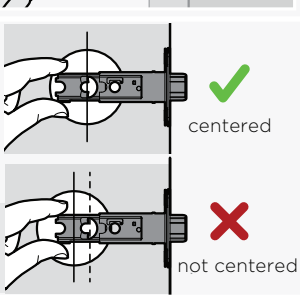

C Latch Adjustment (only if needed)

Move the pin to extend the latch.

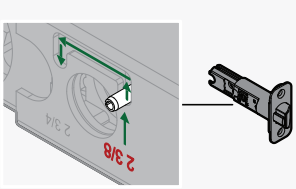


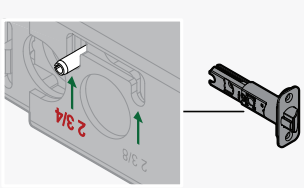


3 Install latch




or

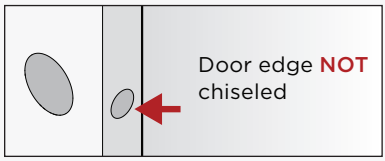


A

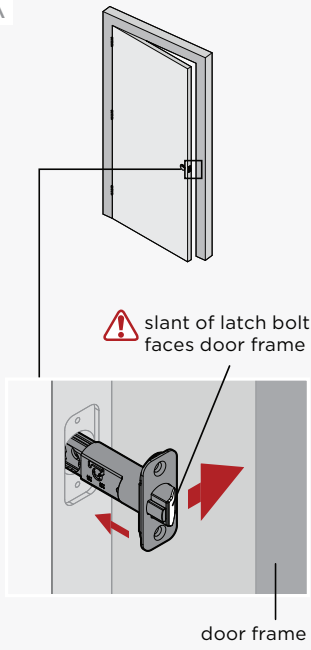


B

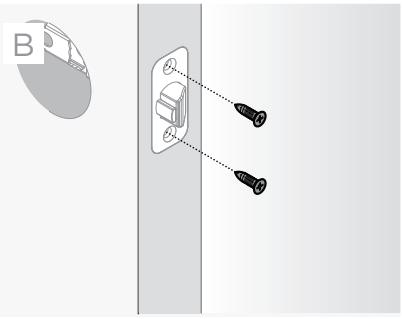


A Remove plates

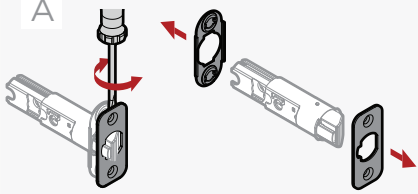

B Install drive-in collar

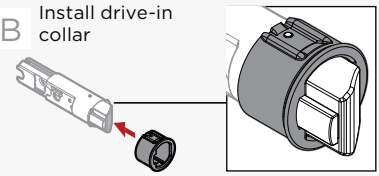


C Use hammer and wood block to tap in latch without damaging it.

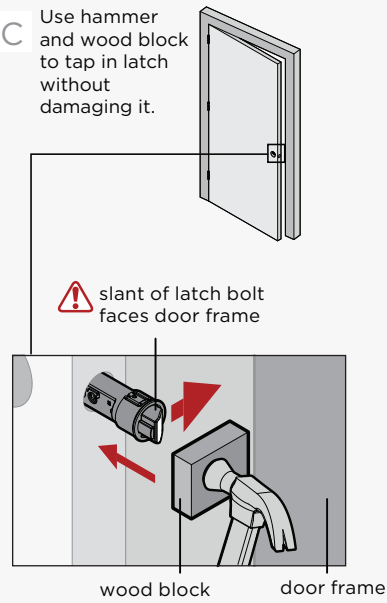


4 Install Passage/Privacy knobs


A

IMPORTANT: If installing a passage lock on an entry door, make sure the knob with the screw holes is on the interior side of the door.

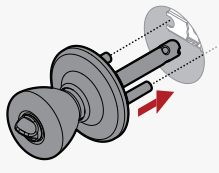


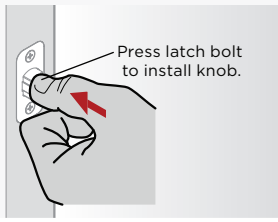


B

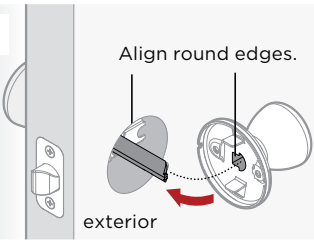

C

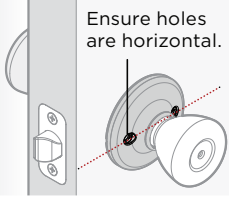


D

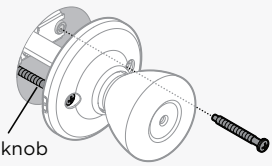

Tip: Pull knob slightly away from door to see where screws insert.


E

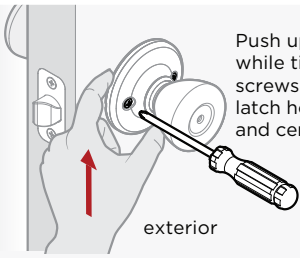


Installed *Passage/Privacy knobs,* now proceed to step 5

⚠ For Privacy Locks **ONLY**


Your emergency tool may look different depending on your model.

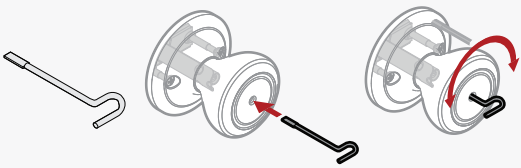

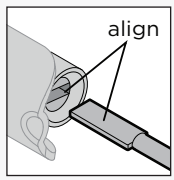


4 Install Nonrotating knobs

A Mark drill holes using the knob, then drill 1/8" (3 mm) 1/2" (13 mm) deep. (Screws may be positioned horizontal or vertical)

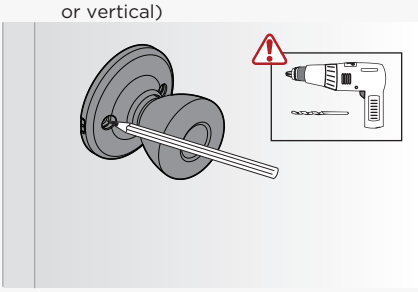

B

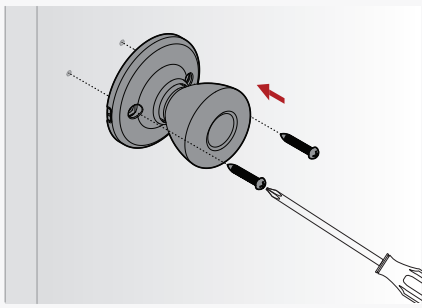


Installed *Nonrotating knob,* now proceed to step 5

4 Install Entry knobs

A


Press latch bolt to install exterior knob.



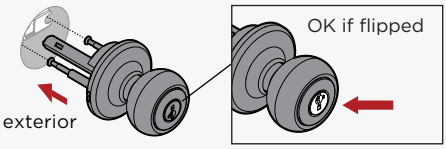

B

Align round edges.

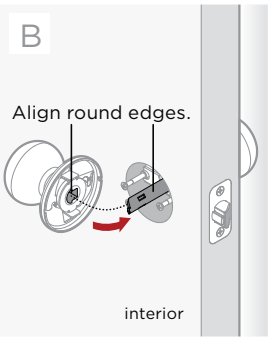


C To catch screws:


1. Twist counter-clockwise

2. Push while twisting

3. Twist clockwise

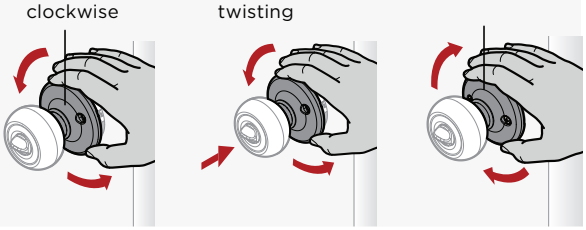


D

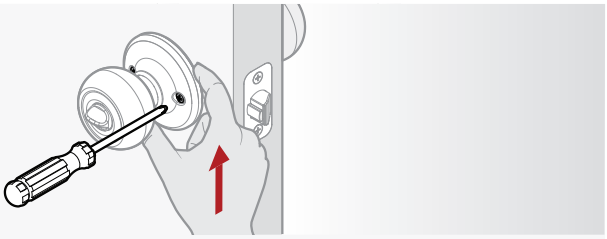

Installed *Entry knobs,* now proceed to step 5


5 Install strike to door frame

A

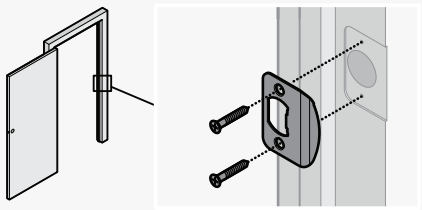


B Close door, test latch operation and make adjustments as needed:

If small bolt of latch enters strike hole, reposition strike.

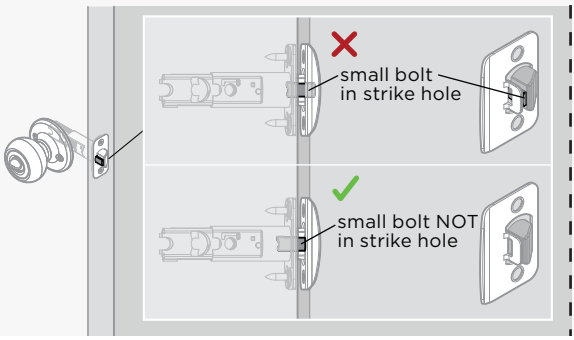

If latch is loose in the strike, adjust the strike tab so it grips the latch bolt better when the door is closed.

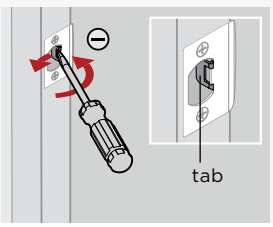



Arroyo




Pismo



Sora


1 Adjust the backset of the latch (if needed)

A Hold the latch in front of the door hole, with the latch face flush against the door edge.

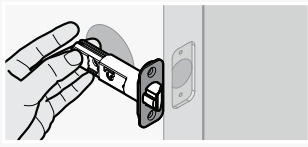


B If the latch holes are centered in the door hole, no adjustment is required. Proceed to step 2.


If the latch holes are **NOT** centered, adjust latch. See “Latch Adjustment” (step 1C).

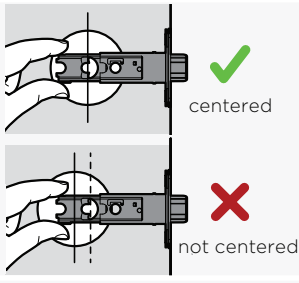

C Latch Adjustment (only if needed)

Move the pin to extend the latch.

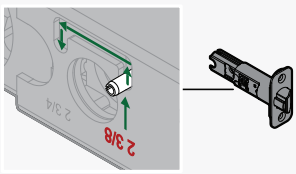


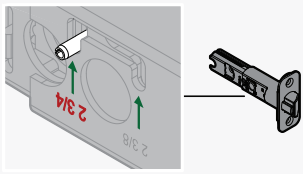


2 Install latch




or

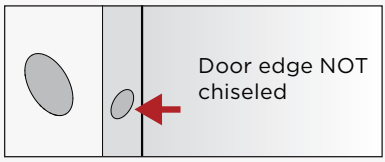


A

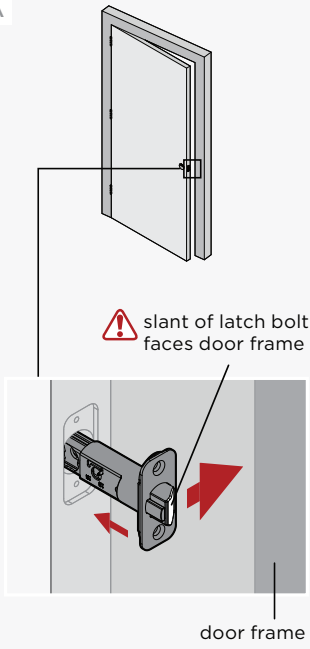


B

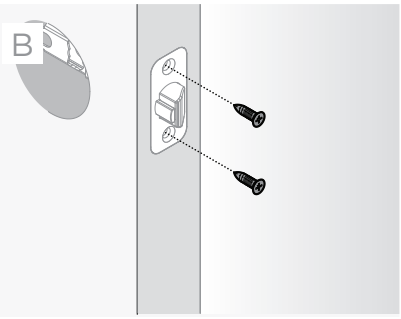


A Remove plates

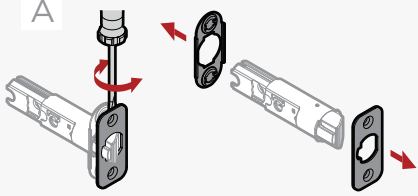

B Install drive-in collar

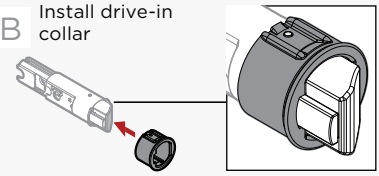

C Use hammer and wood block to tap in latch without damaging it.

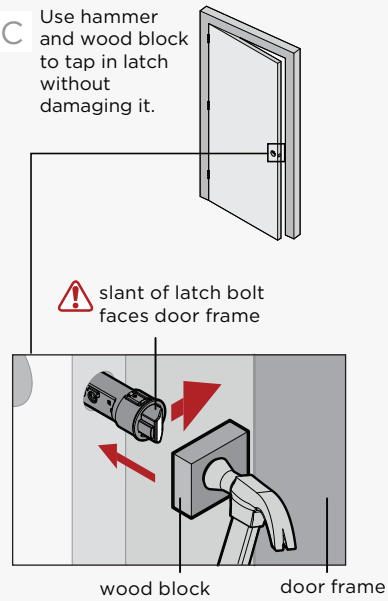


3 Install knobs

A *Before you begin your installation, you **MUST** remove the interior knob.*

Loosen the pre-installed set screw.




counterclockwise

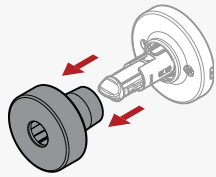

B Press latch bolt to install exterior knob.




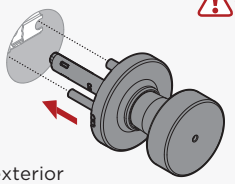

exterior

IMPORTANT: If installing a passage lock on an entry door, make sure the knob with the screw holes is on the interior side of the door.

C Install interior knob base.

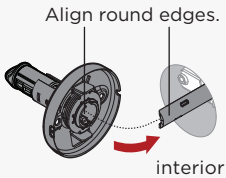


Align round edges.


interior




D If the interior base won't sit flush with the door surface, rotate turnbutton to align.

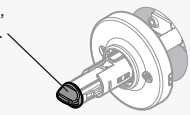

interior

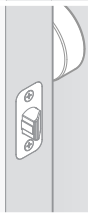

E Insert screws and tighten by hand. (Screws may be positioned horizontal or vertical)

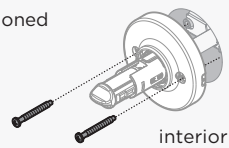



interior




Tip: Pull knob slightly away from door to see where screws insert.


F Push up on knob base while tightening screws to keep latch horizontal and centered.

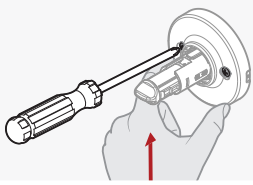

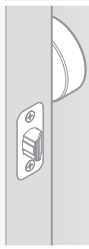


G Install knob.

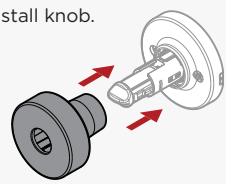

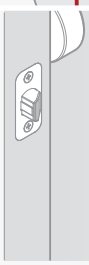

Align holes on knob and knob base before tightening the pre-installed set screw.

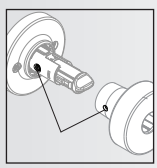



clockwise


Installed solid knob, now proceed to step 4

⚠ For Privacy Locks **ONLY**


Your emergency tool may look different depending on your model.





To unlock, insert emergency tool fully and push.

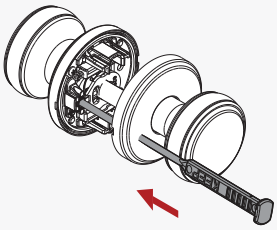


or

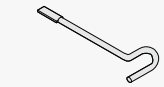

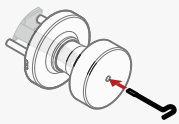


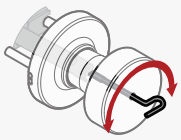


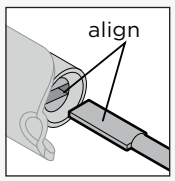

4 Install strike to door frame


A

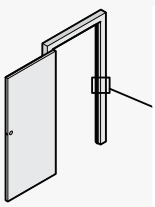

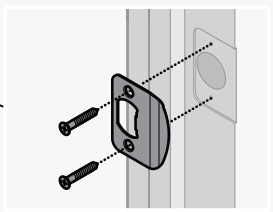


B Close door, test latch operation and make adjustments as needed:

If small bolt of latch enters strike hole, reposition strike.

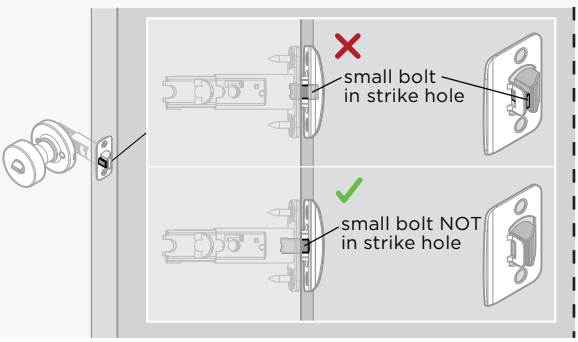

If latch is loose in the strike, adjust the strike tab so it grips the latch bolt better when the door is closed.

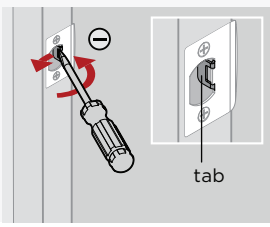

SmartKey Rekeying Instructions



For rekeying instructions, you can also visit:
https://www.kwikset.com/support/answers/how-to-re-key-your-smartkey-security-locks

If you have any issues, please visit our support center: **kwikset.com/support** or call us at 1-800-327-5625.

WARNING: This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. In order to enhance security and reduce risk, you should consult a qualified locksmith or other security professional.

Copyright © 2025 ASSA ABLOY Americas Residential Inc. All rights reserved