Modern Home Office Chair

Model: 7237

Made in China

INSTRUCTION MANUAL

Modern Home Office Chair

PARTS DESCRIPTION

A	B	C	D	E	F
X1	X1	X1	X1	X1	X1
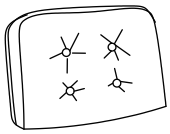					

G	H	I	J
X2	X5	X4	X1
			
M6*30mm	M6*25mm	M6*20mm	

ASSEMBLY STEPS

