
Bathroom cabinet

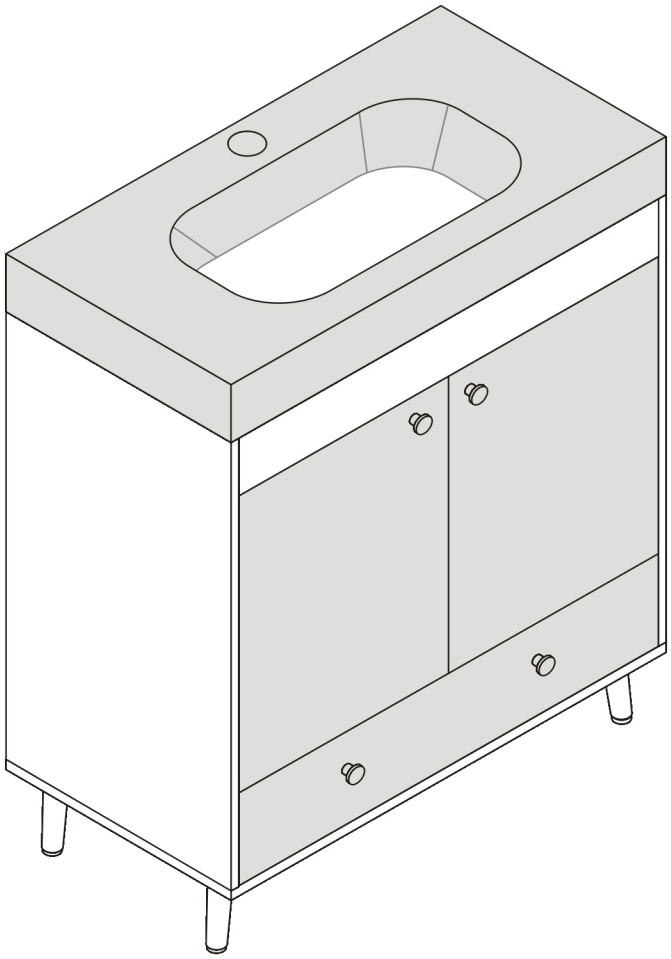


2 Persons


L752*W455*H593MM

Installation Instructions

Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

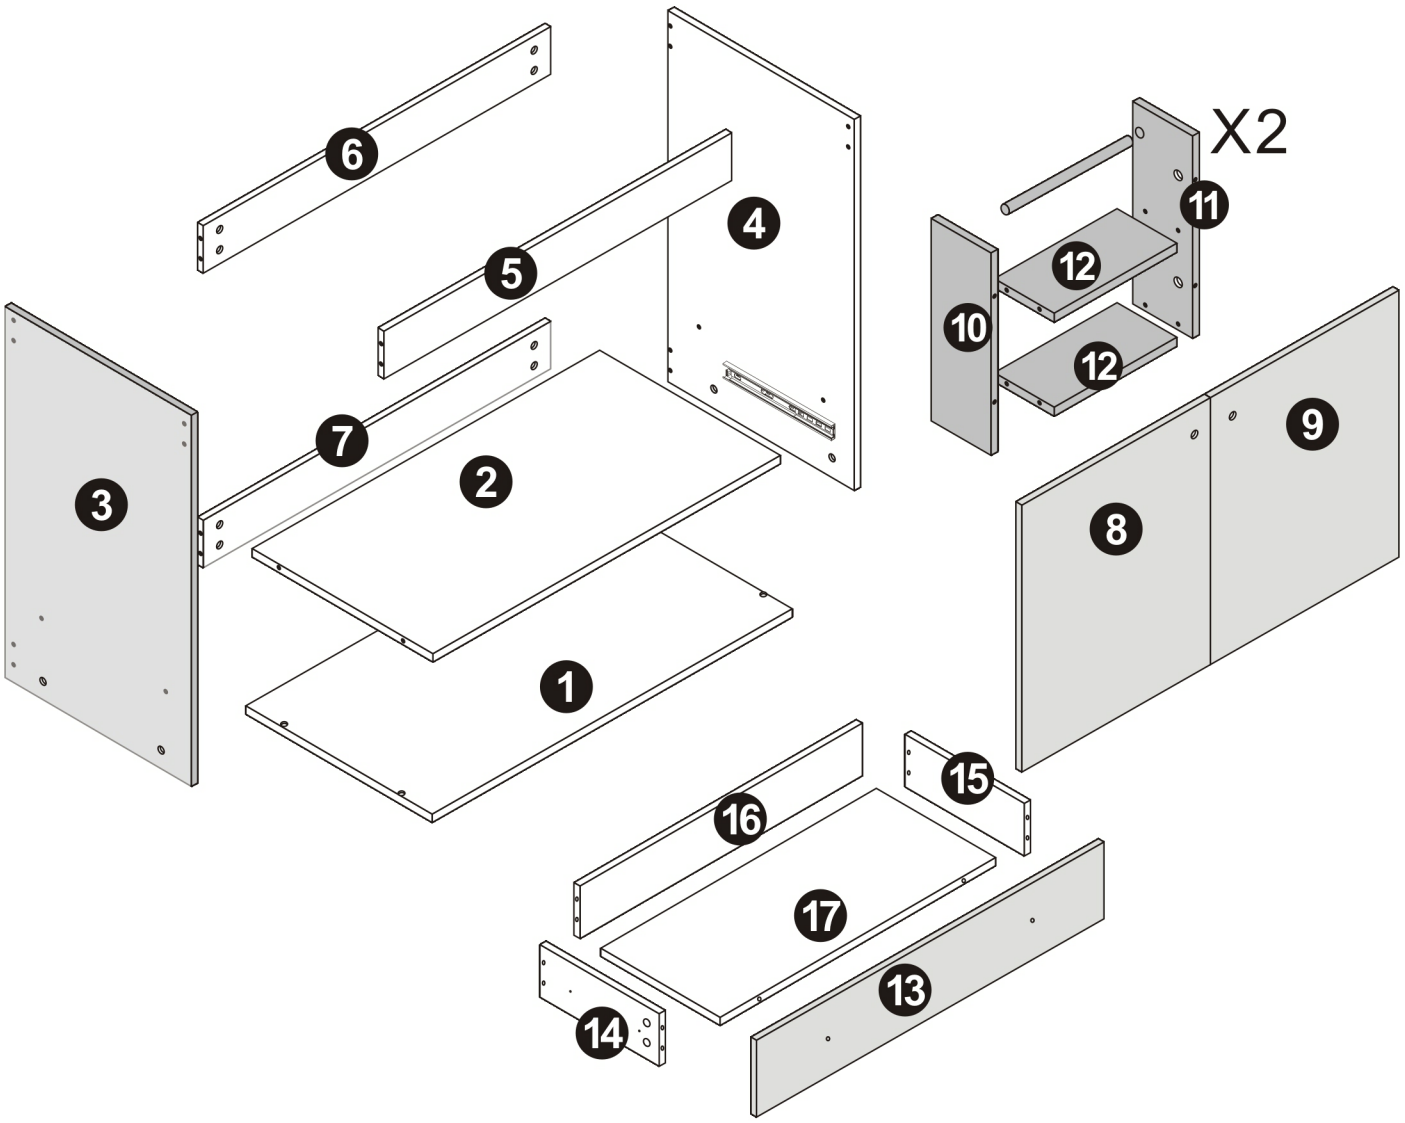


Disassembly and installation of accessories

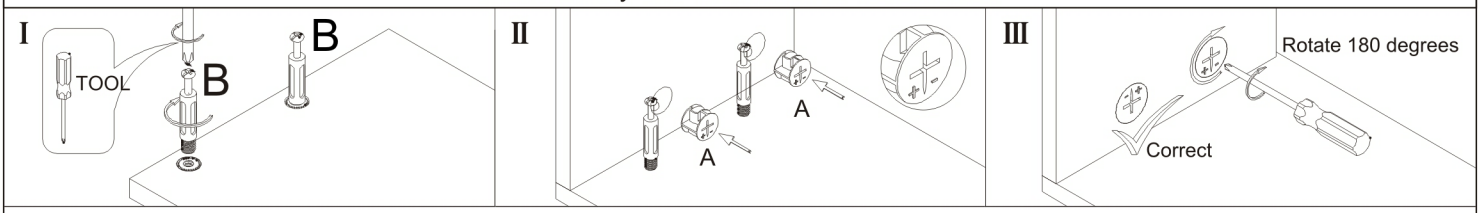

A	52PCS	B	52PCS	C	64PCS	D	10PCS	E	4PCS	F	4PCS	G	4PCS	H	4PCS
15*10mm		6*28mm		3.5*14mm		3.5*35mm		4*20		Handles		Sponge Mat		9.8cm	


I	2PCS	J	2PCS	K	1PCS	L	4PCS	M	4PCS
Expansion screw		Corner code		Three-section Rail		Hardware Feet		Mid bend	

1

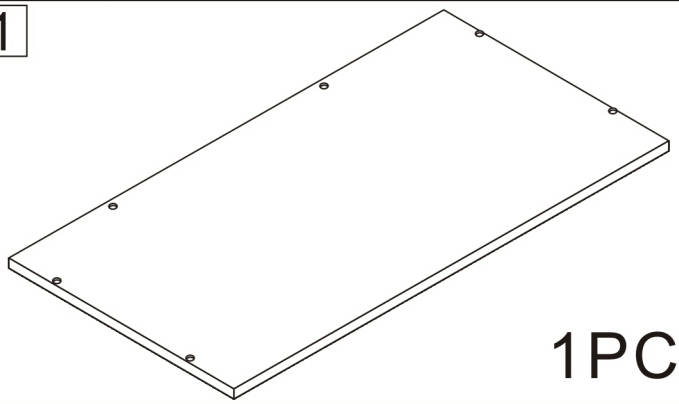


1PC

2

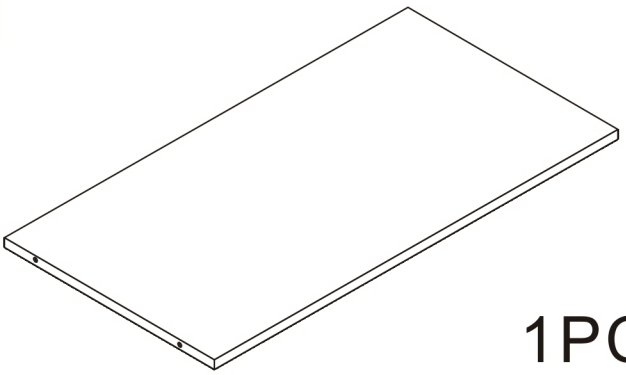


1PC

3

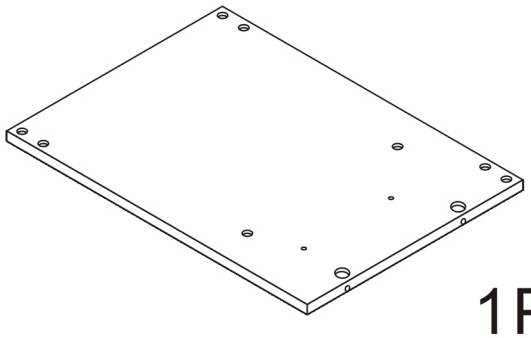


1PC

4

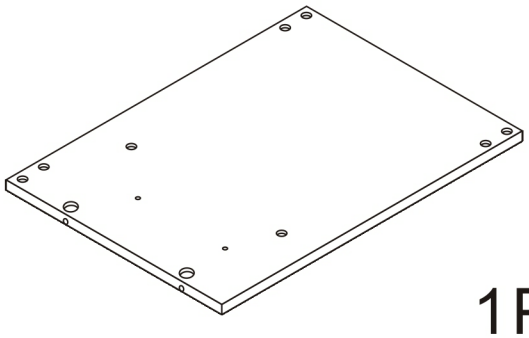


1PC

5

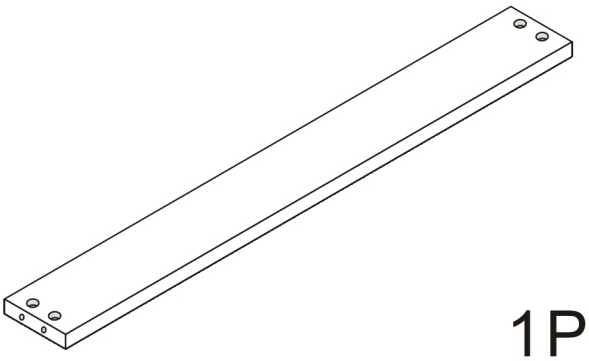


1PC

6

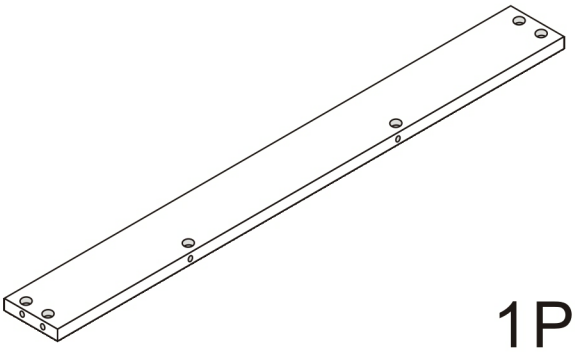


1PC

7

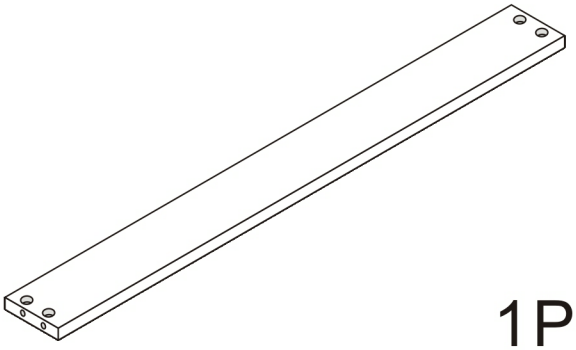


1PC

8

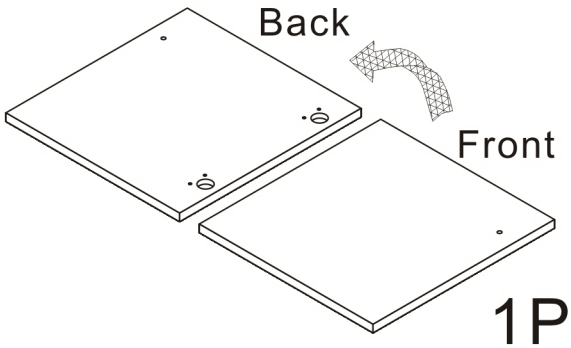


1PC

9

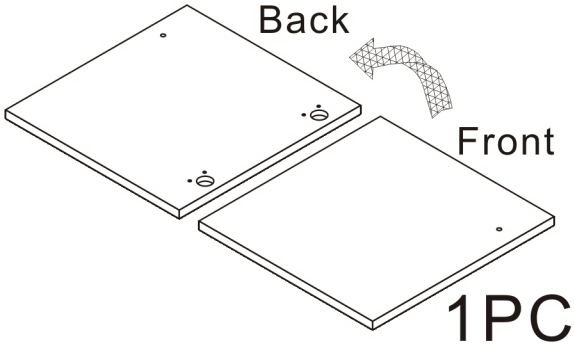


1PCS

10

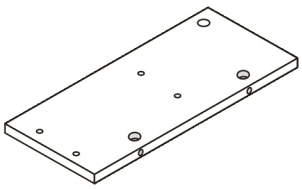


4PCS

11

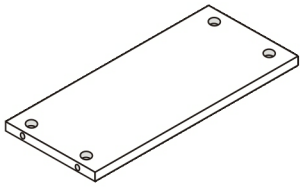


4PCS

12

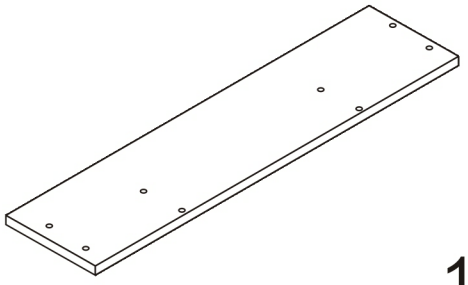


1PC

13

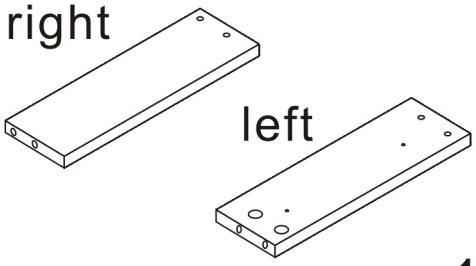


1PC

14

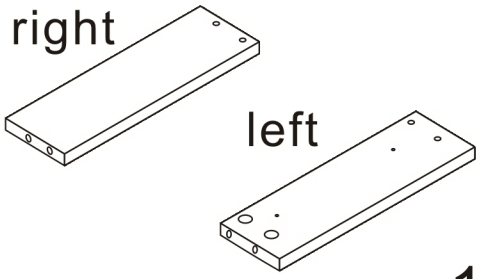


1PC

15

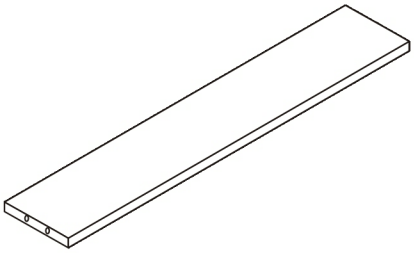


1PC

16

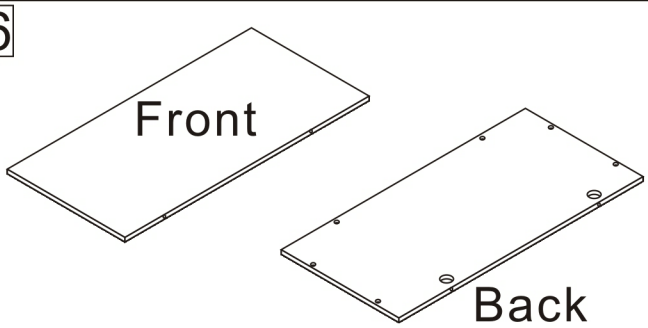


1PC


1

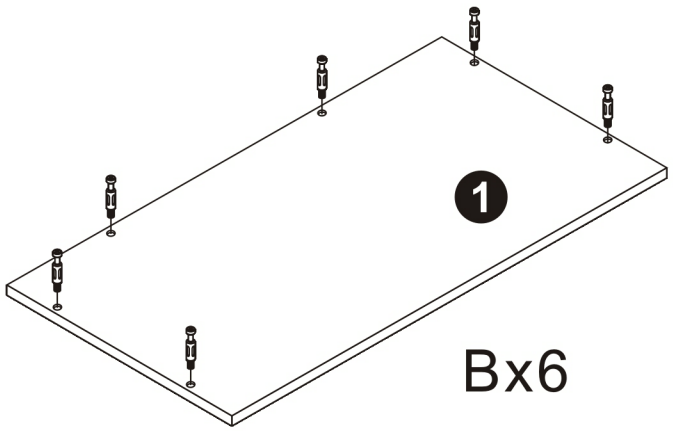


Bx6

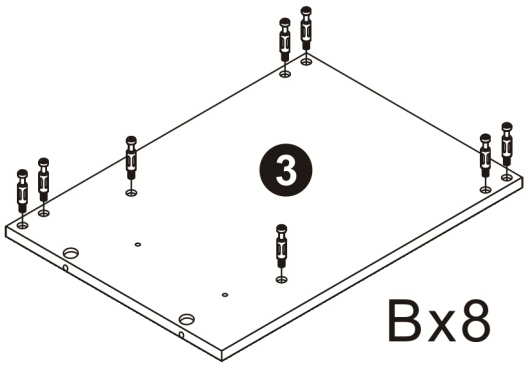


Bx8

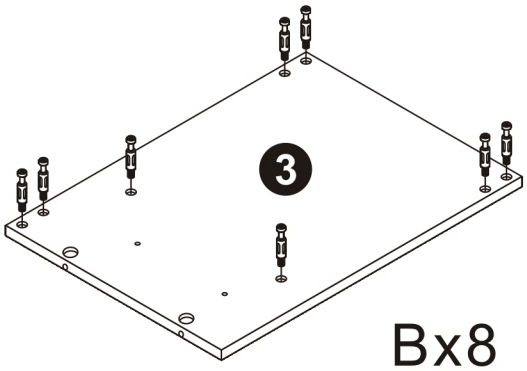

Bx8

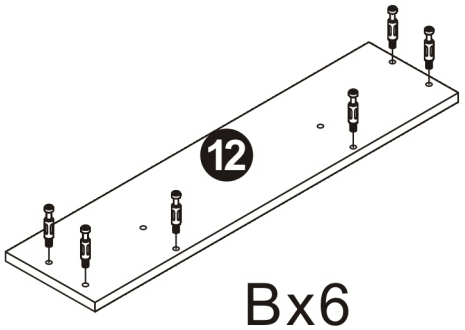


Bx6

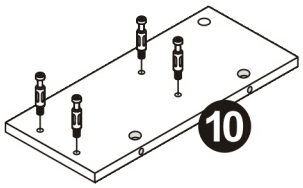


X2

Bx8

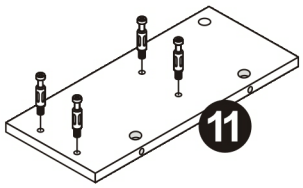


X2

Bx8

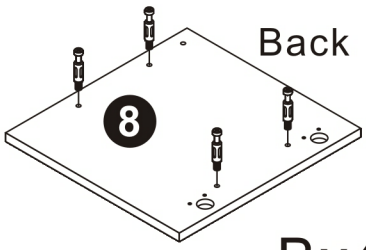


Bx4

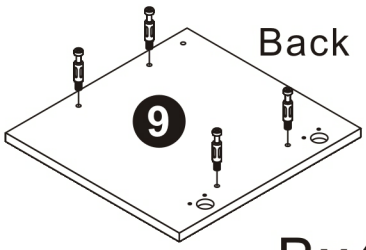

Bx4


B	52PCS
	
6*28mm	


2

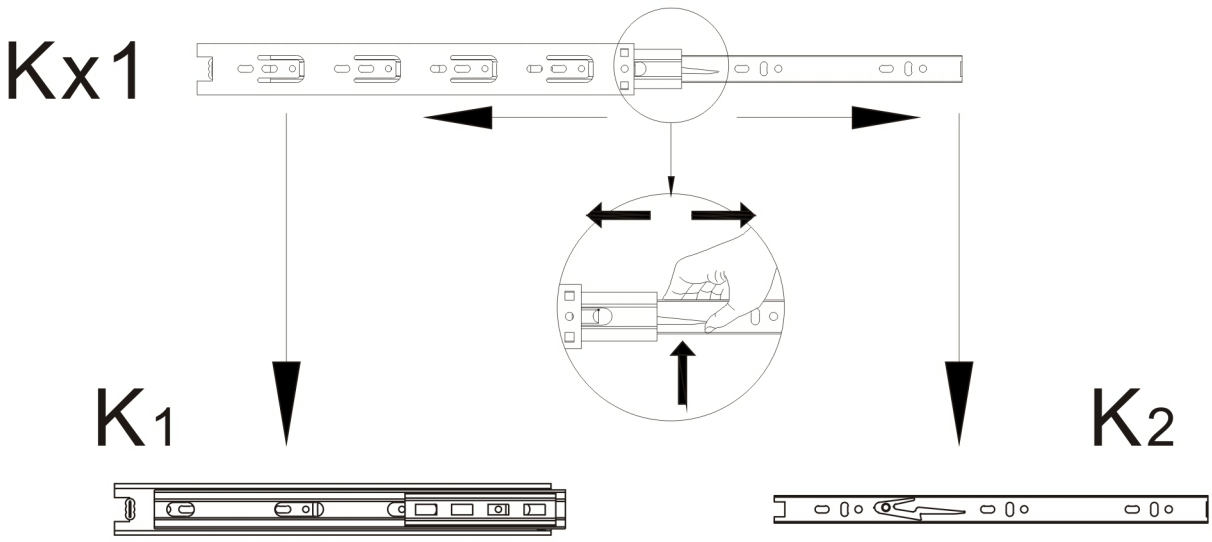

K1	1PCS
	
Three-section Rail	

3

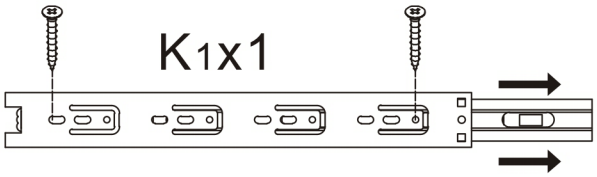


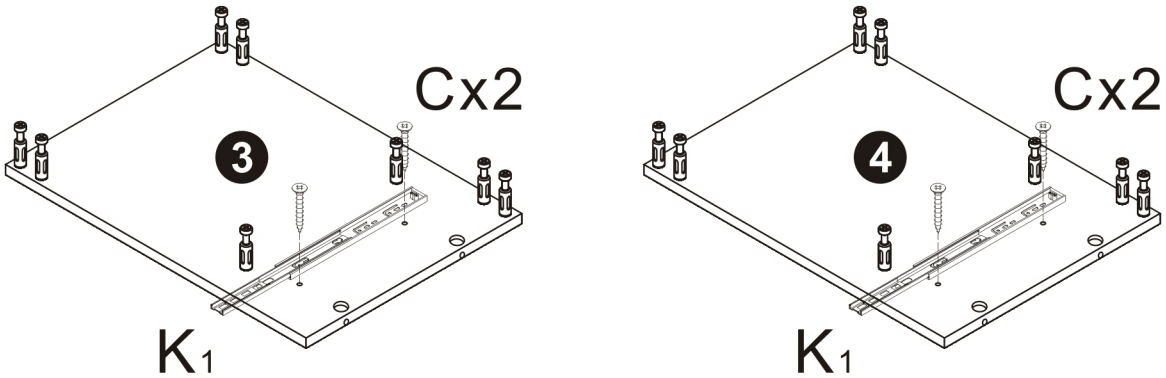

C	4PCS
	
3.5*14mm	


K1	1PCS
	
12 inch Three-section Rail	

4

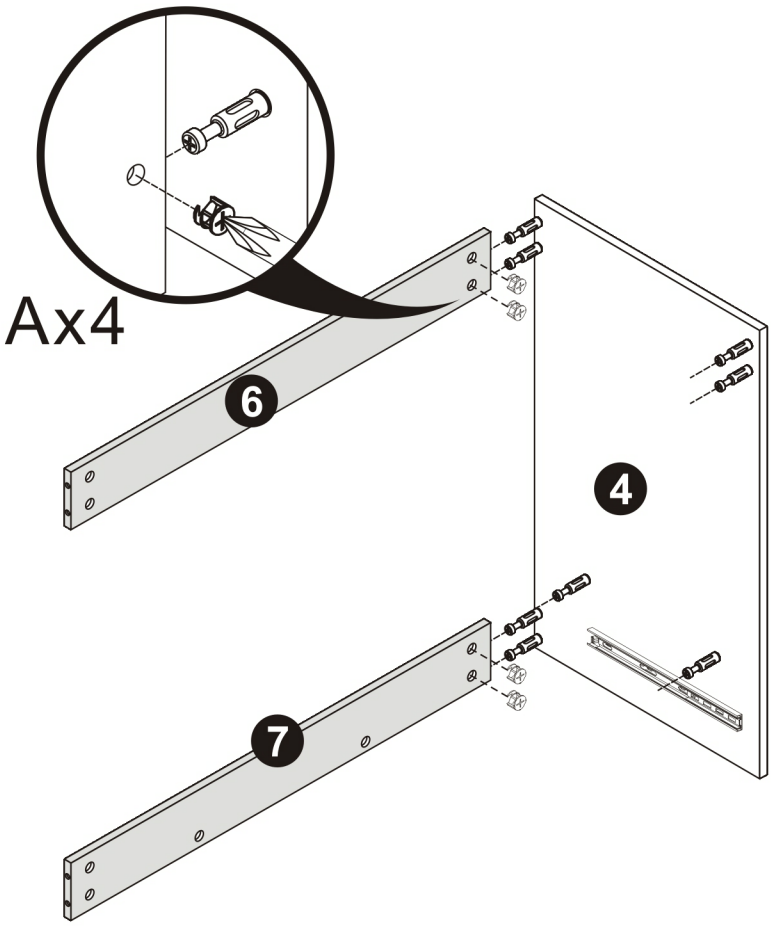


A	4PCS
	
15*10mm	

5

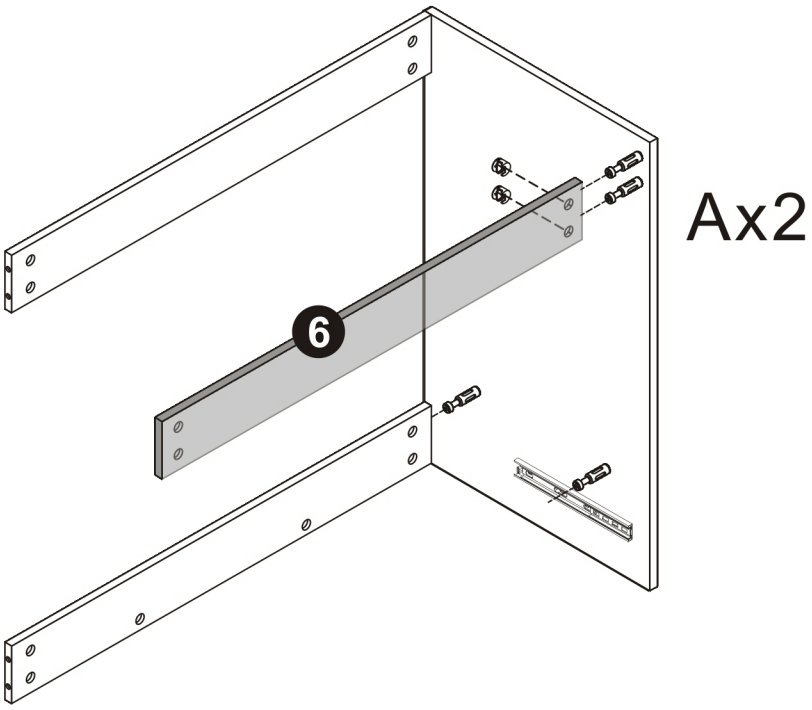


A	2PCS
	
15*10mm	

6

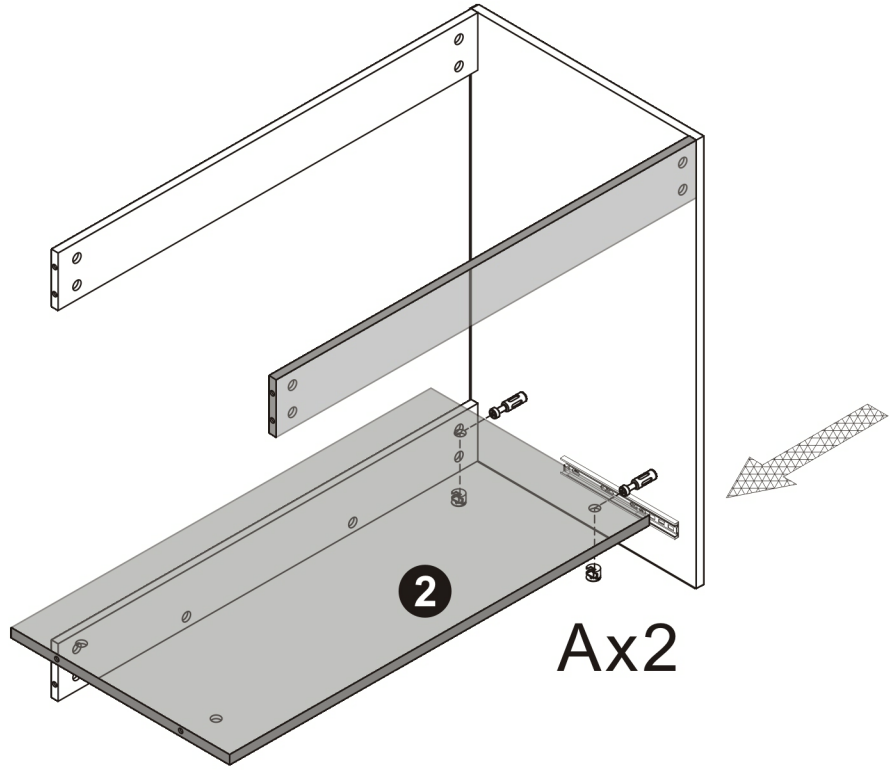


A	2PCS
	
15*10mm	

7

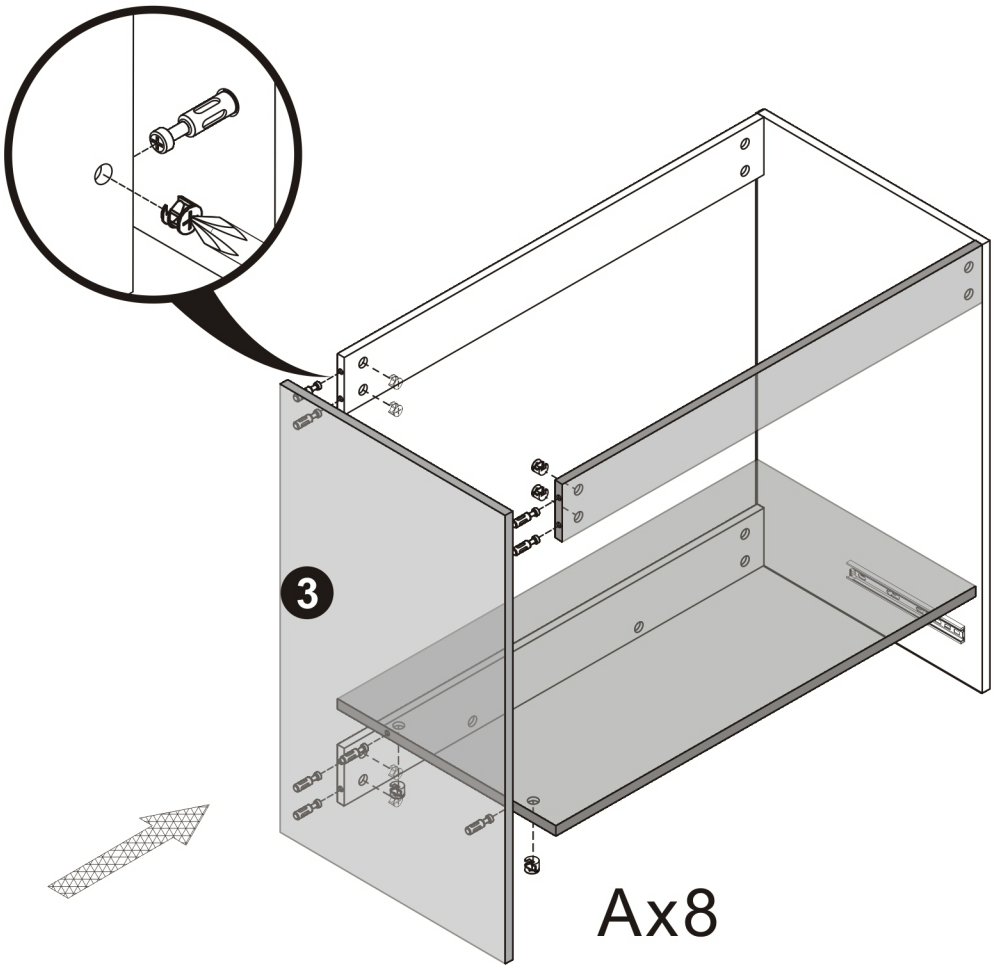


A	8PCS
	
15*10mm	

8

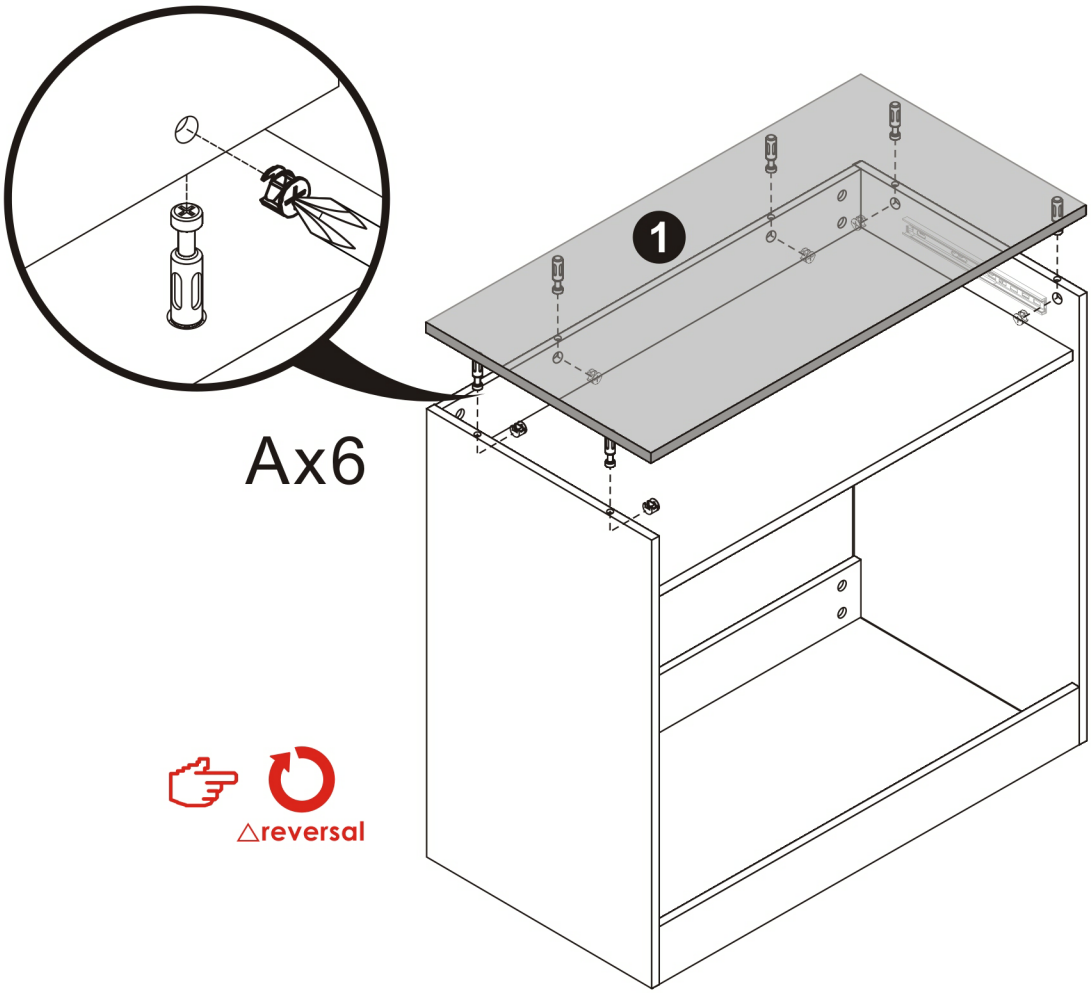

A	6PCS
	
15*10mm	

9

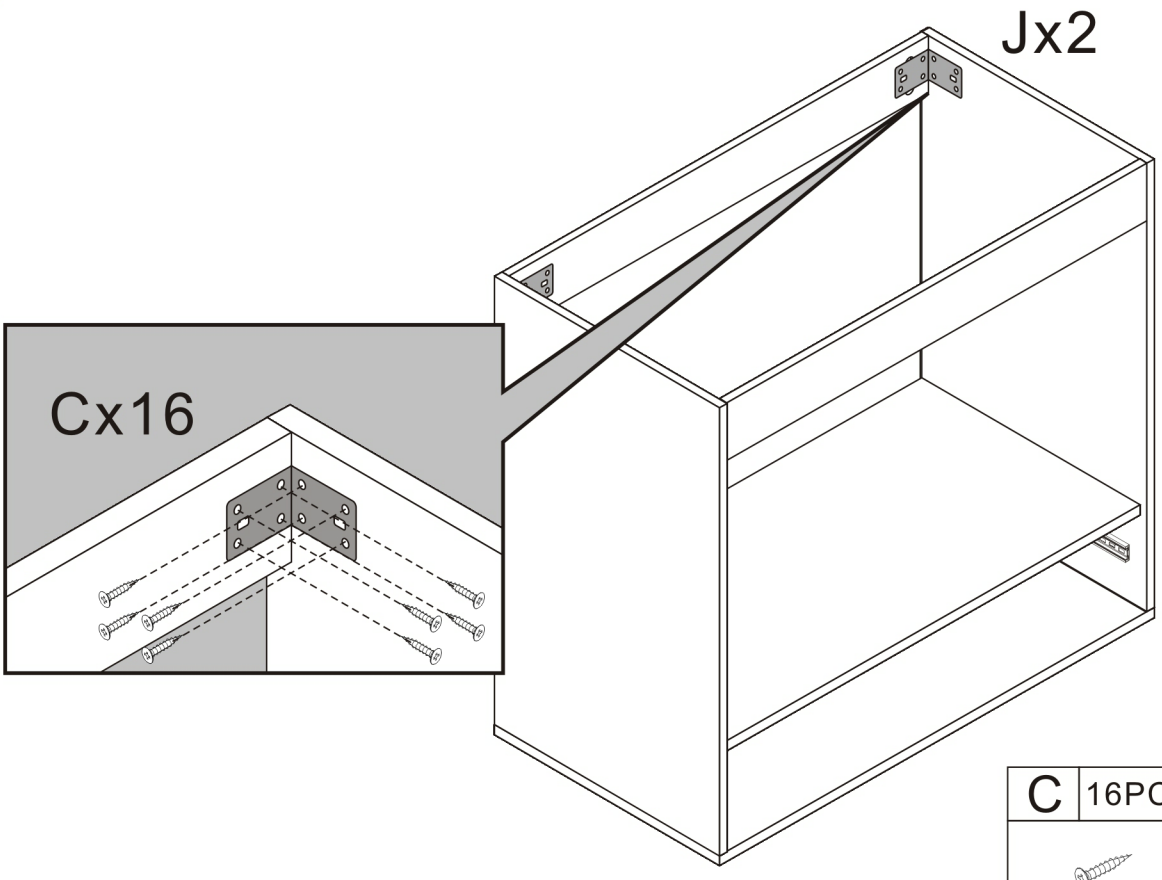


C	16PCS
3.5*14mm	


J	2PCS
	
Corner code	

10


Mx4
Cx8

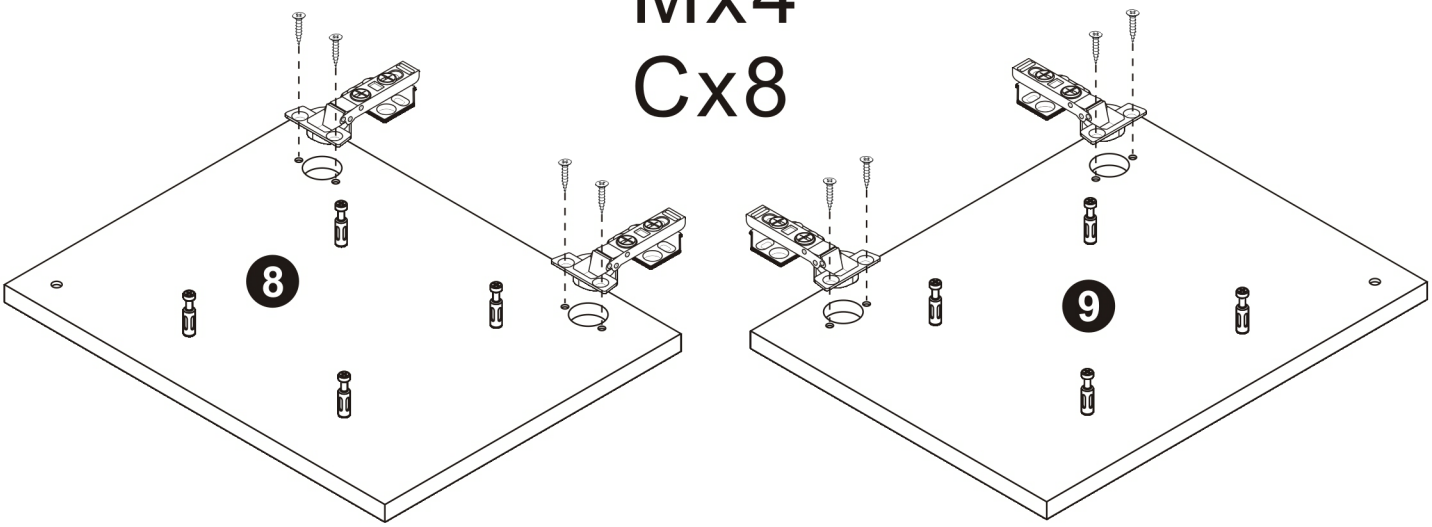


C	8PCS
	
3.5*14mm	

M	4PCS
	
Straight bend	


11

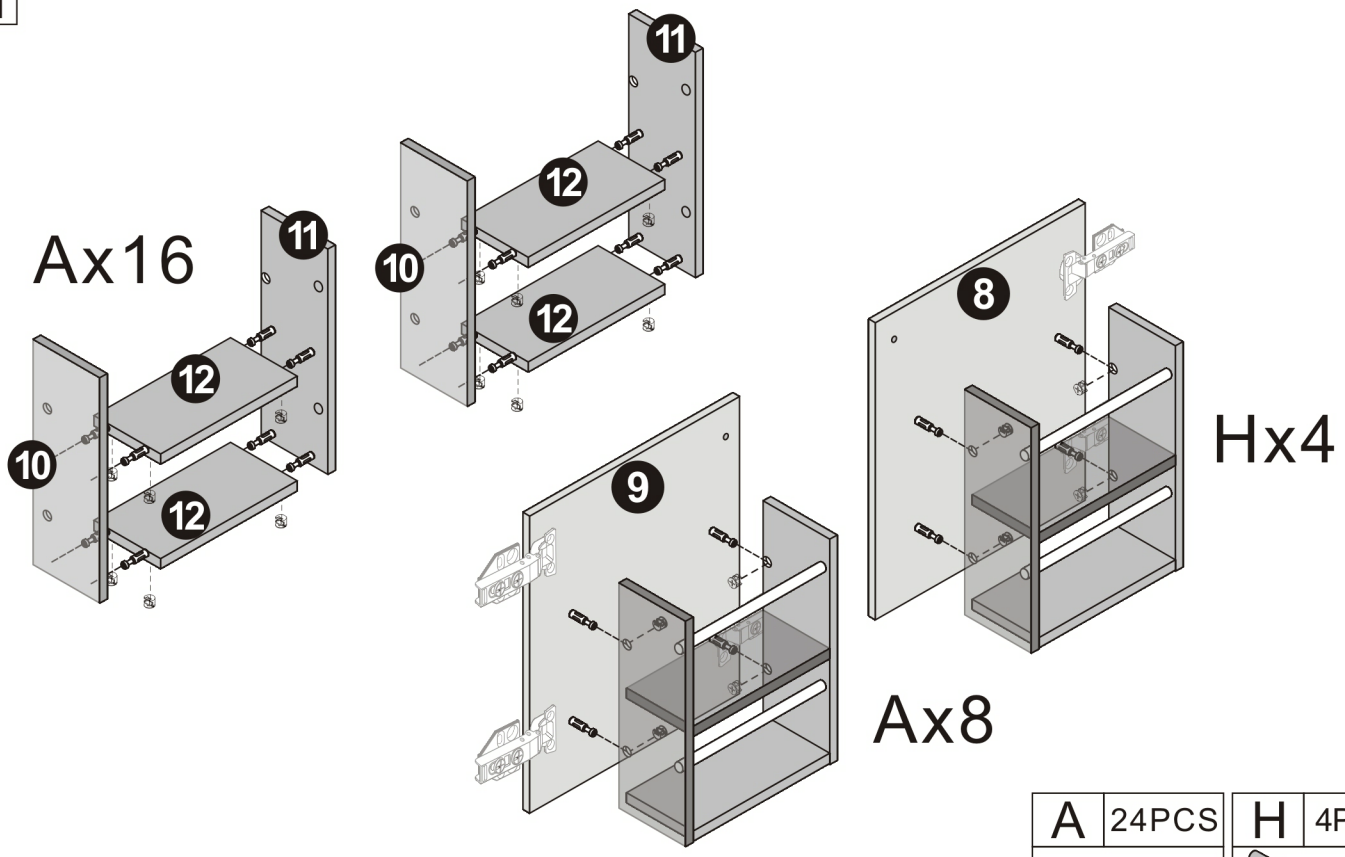


A	24PCS
	
15*10mm	

H	4PCS
	
9.8cm	


12

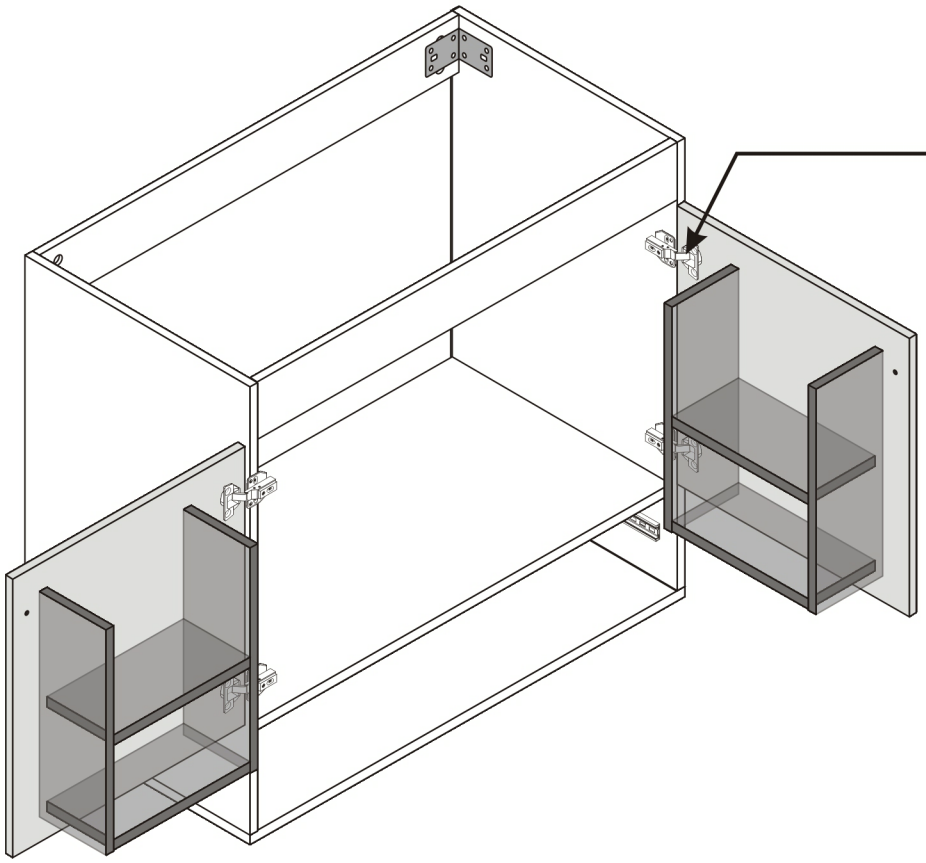

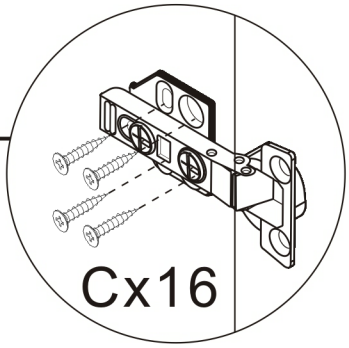

C	16PCS
	
3.5*14mm	

13

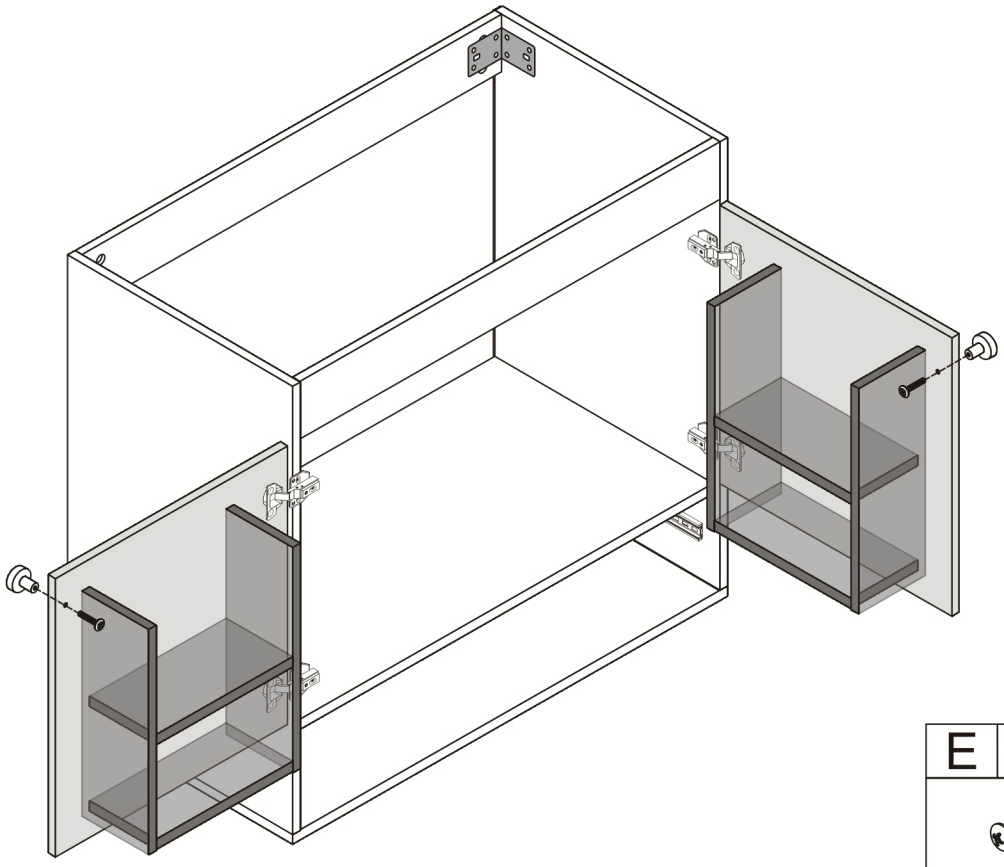


Ex2
Fx2

E	2PCS
	
4*20	


F	2PCS
	
Handles	

SPECIAL TIPS FOR DOOR ALIGNMENT
CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS
CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES


A. Lateral adjustment (Moving door left-right) by screw adjusting
Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
Réglage latéral (porte mobile gauche-droite) par réglage à vis

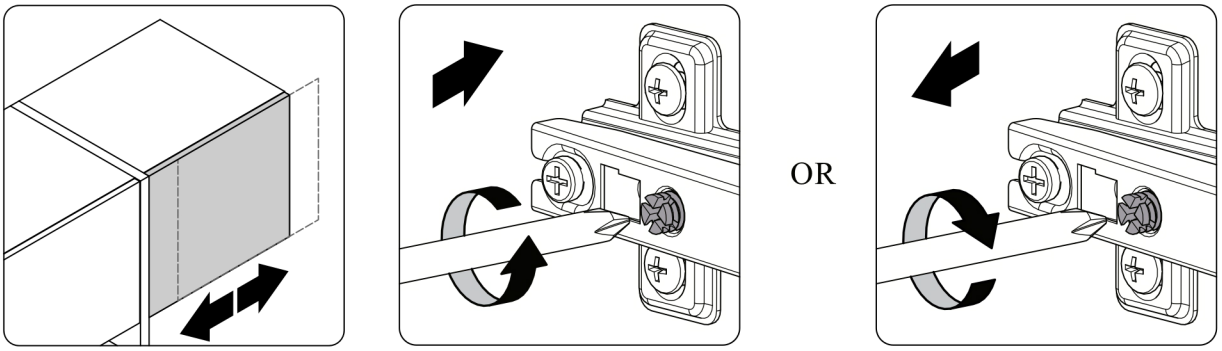


B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

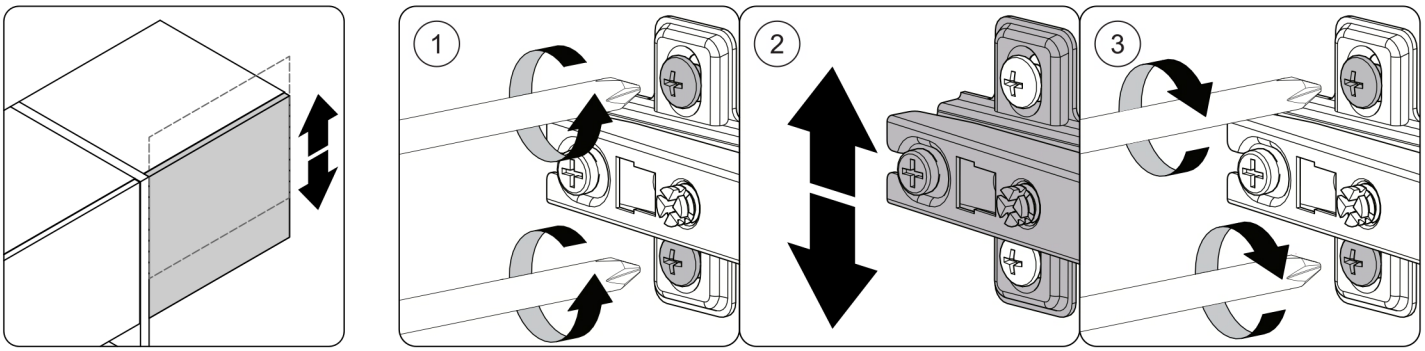



C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

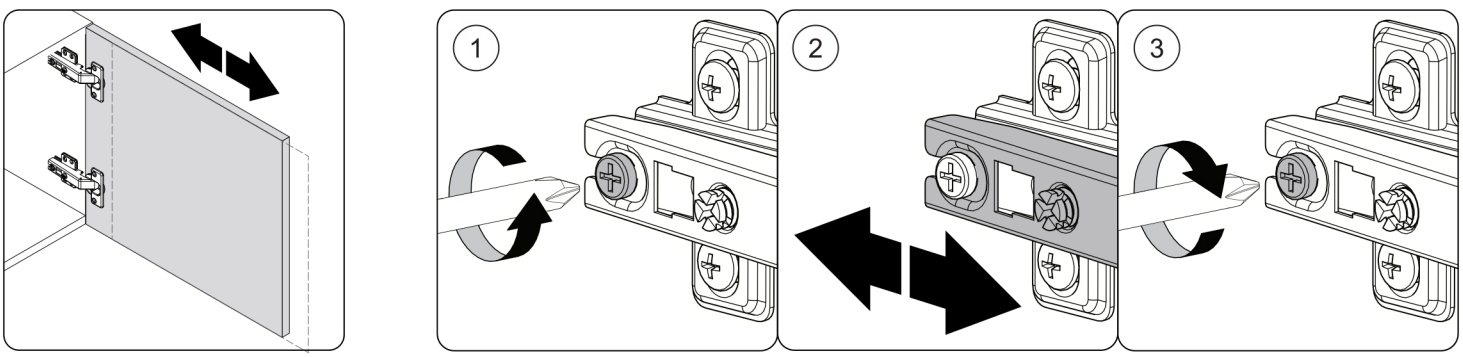


14

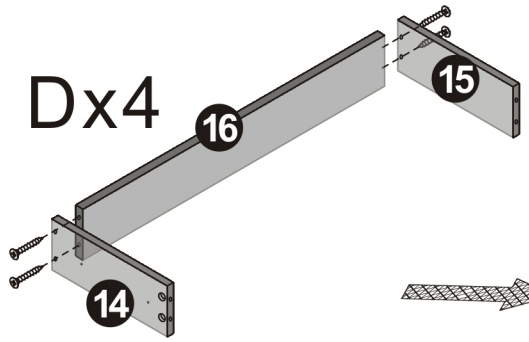

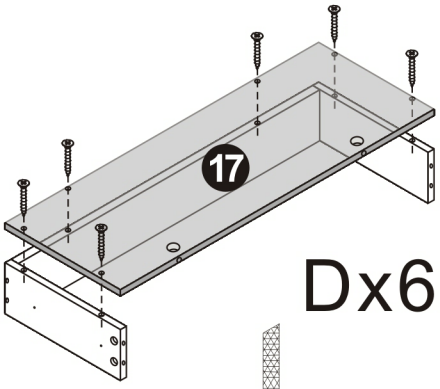


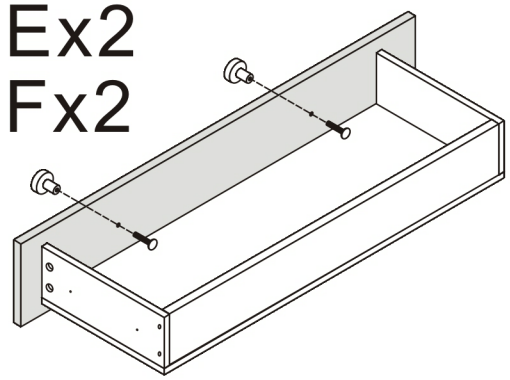

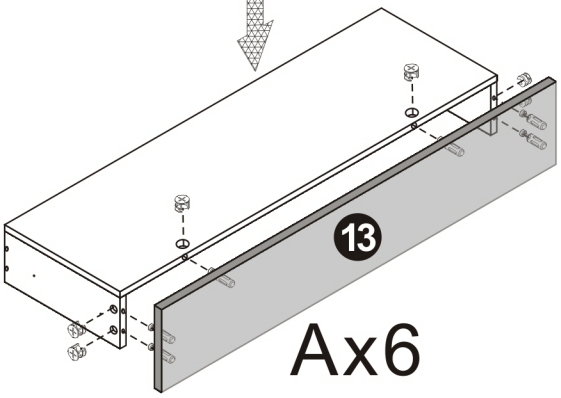


A	6PCS	D	10PCS	E	2PCS	F	2PCS
							
15*10mm		3.5*35mm		4*20		Handles	

15

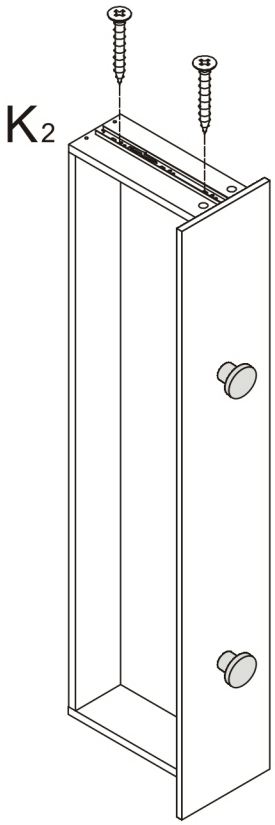

Cx2

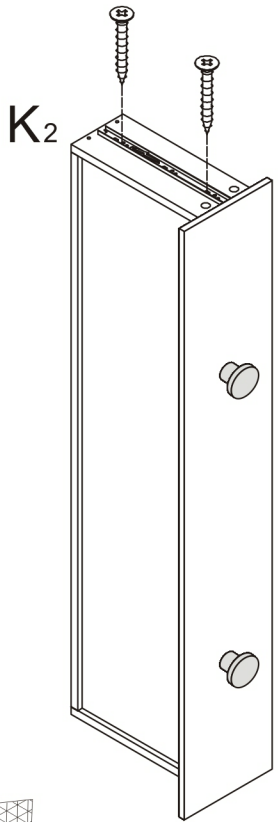


Cx2



C	4PCS	K	2PCS
			
3.5*14mm		Three-section Rail	


16

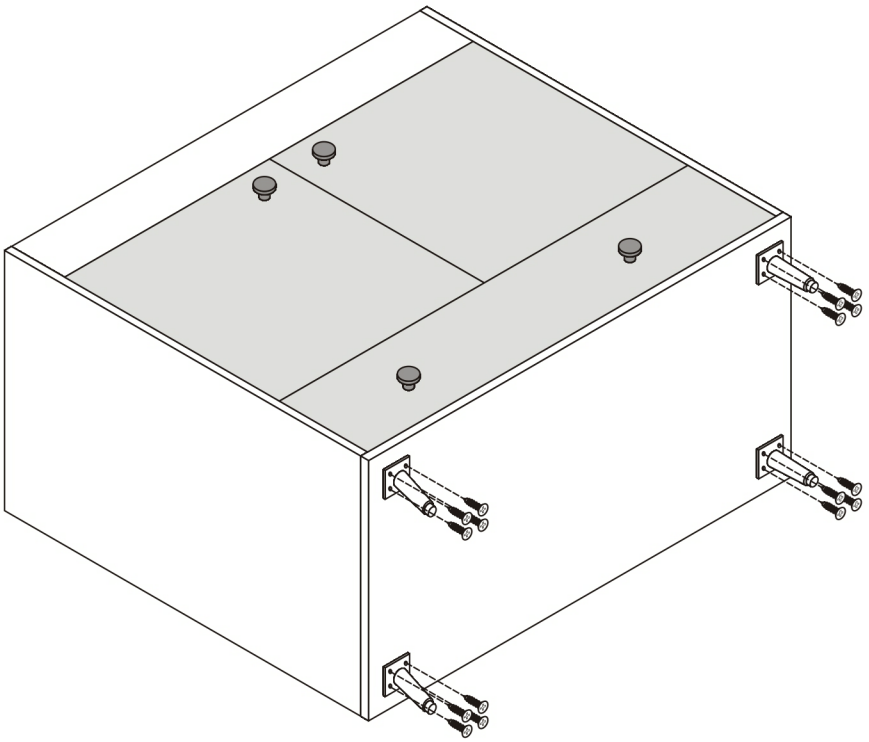

Cx16
Lx4


C	16PCS	L	4PCS
			
3.5*14mm		Hardware Feet	

17

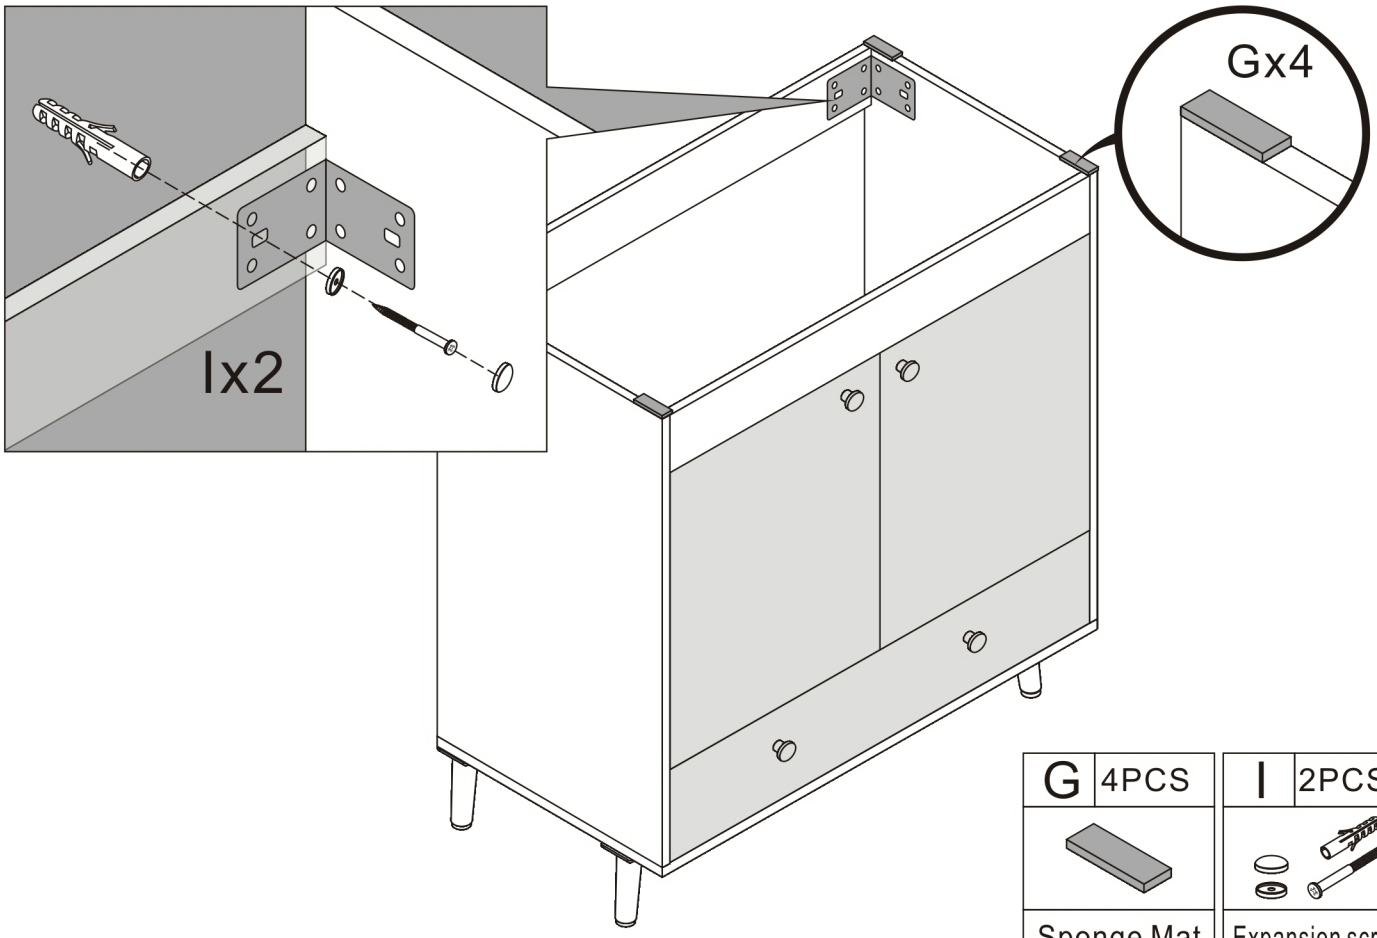


G	4PCS	I	2PCS
Sponge Mat		Expansion screw	

18

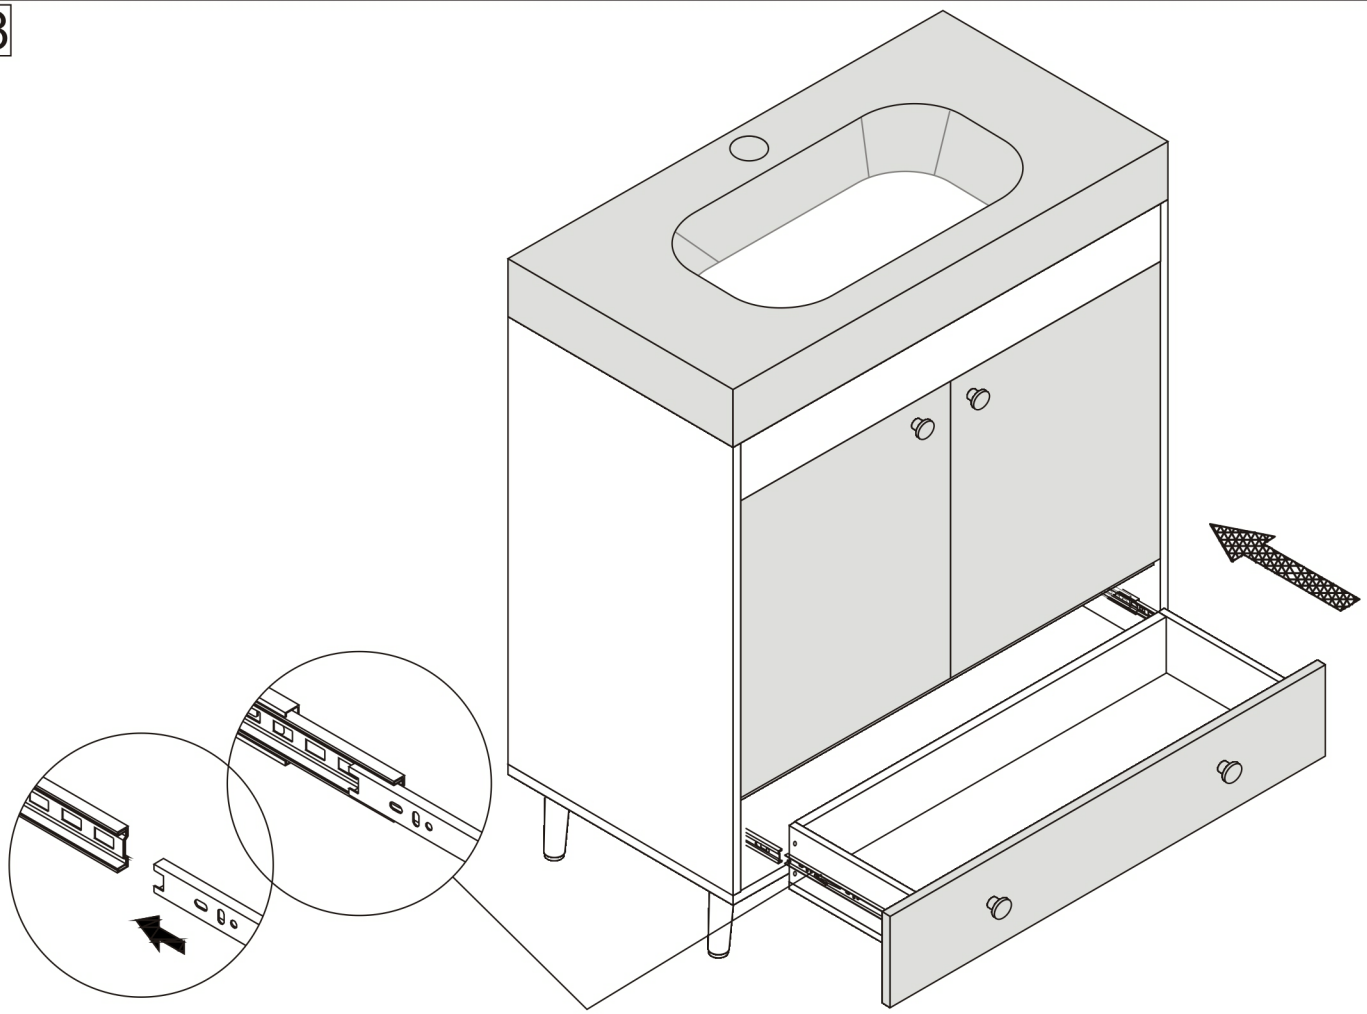

19

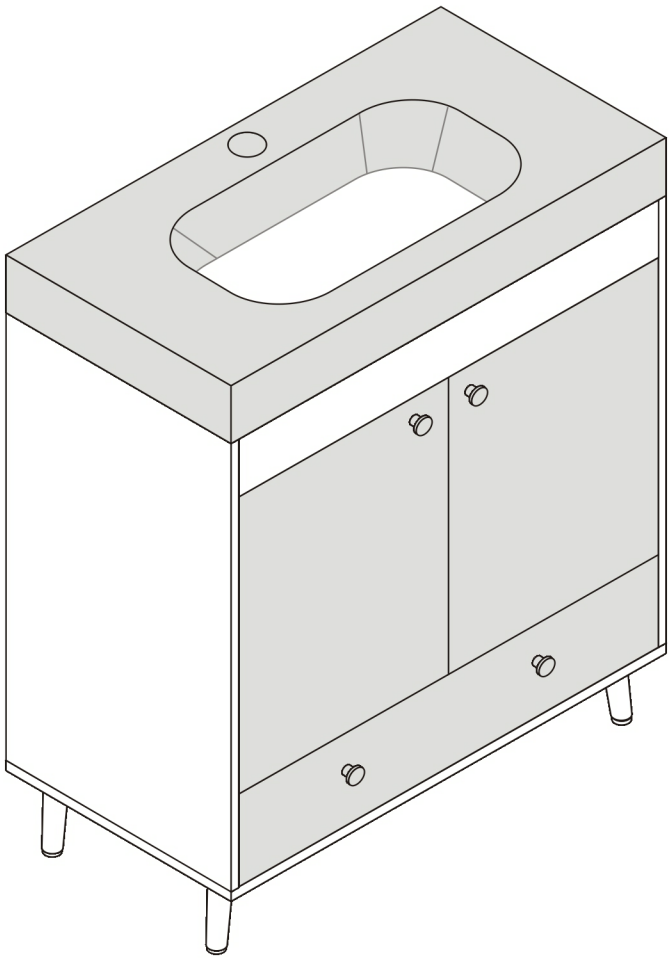

OK