Assembly Instruction

Note:

1.Should be assembled on flat ground to keep balance.

2.Before completing the installation, do not tighten the screws.

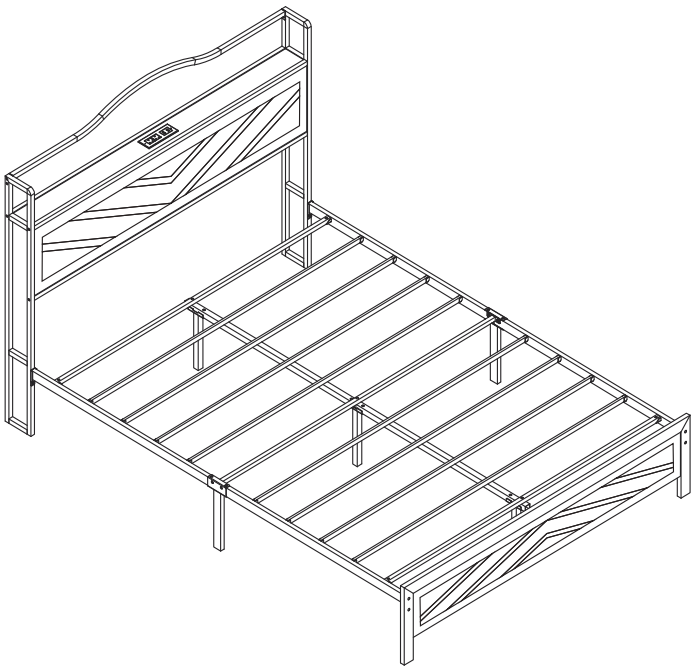

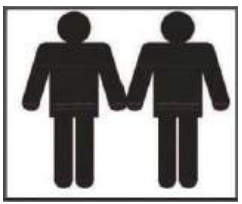

It needs at least
two people to install.

Before starting the
assembly, you must
read the whole
manual and follow
the instructions.

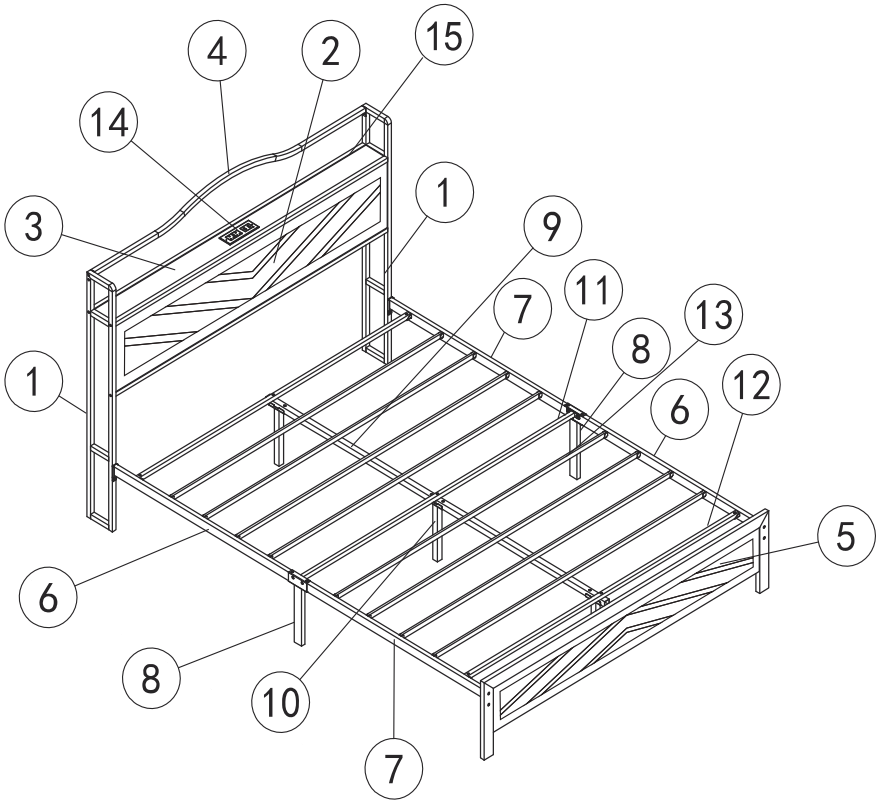
4
2
15
14
1
3
9
7
11
13
8
1
12
6
5
6
8
10
7

Assembly Instruction

Hardware arts

Ⓐ M6x10 6pcs	Ⓑ M6x30 4pcs	Ⓒ M6x40 8pcs	Ⓓ M8x35 16pcs	Ⓔ M8x55 7pcs	Ⓕ ∅3x10 2pcs	Ⓖ 4# 2pcs
Ⓗ M6x20 2pcs						

Part list

 ① 2 PCS	 ② 1 PC	 ③ 1 PC	 ④ 1 PC	 ⑤ 1 PC	 ⑥ 2 PCS	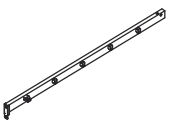 ⑦ 2 PCS
 ⑧ 2 PCS	 ⑨ 2 PCS	 ⑩ 3 PCS	 ⑪ 1 PC	 ⑫ 2 PCS	⑬ 8 PCS	

Assembly Instruction

Part list

 ⑭ 1 PC	**LED** ⑮ 2 PCS					

Assembly Instruction

A	M6x10	4pcs
G	4#	1pc

Attach Part (3) to Part(2) with Bolt (A) using Hex Key (G).

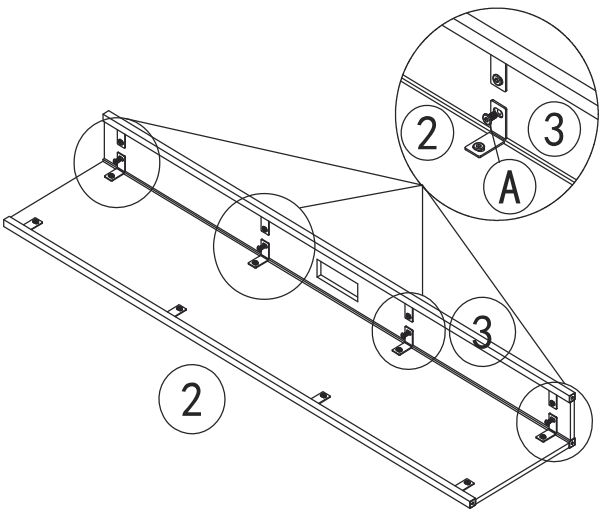

A	M6x10	2pcs	H	M6	2pcs
C	M6x40	8pcs	G	4#	2pcs

Attach Part (2,3,4) to Part(1) with Bolt (C) using Hex Key (G).
Attach Part (4) to Part(1) with Bolt (A,H) using Hex Key (G).

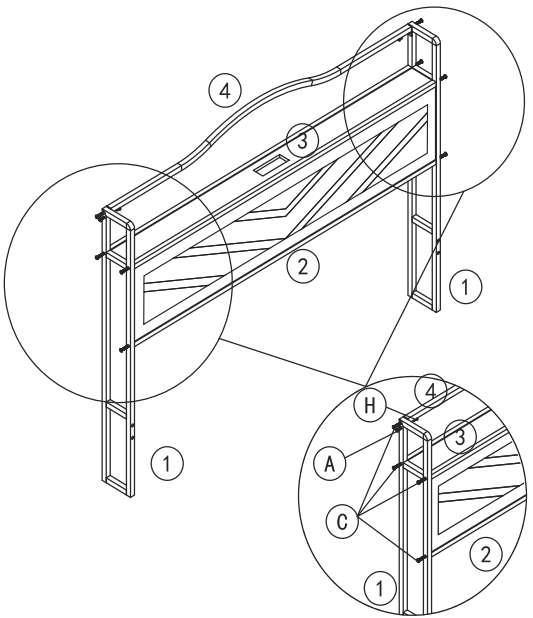

Assembly Instruction

E	M8x55	4pcs
G	4#	1pc

Attach Part (6,7) to Part(8) with Bolt (E) using Hex Key (G).

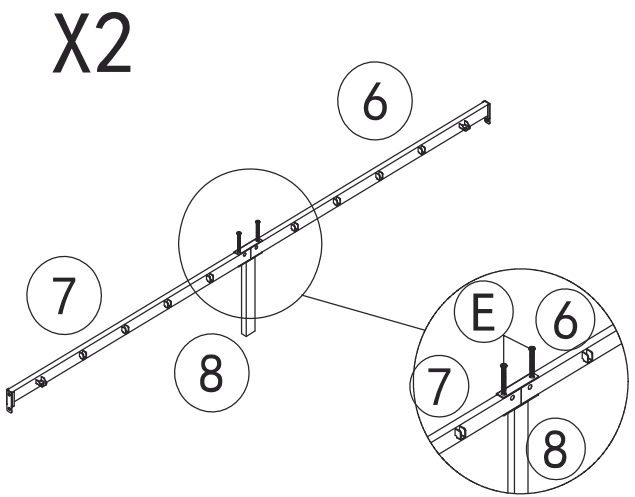

D	M8x35	4pcs
G	4#	1pc

Attach Part(9) to Part(10) with Bolt(D) using Hex Key (G).

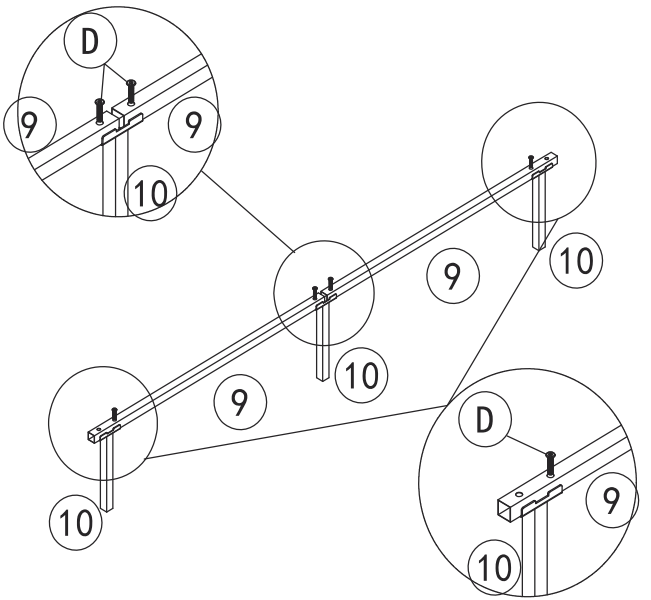

Assembly Instruction

D	M8x35	8pcs
G	4#	1pc

Attach Part (6,7) to Part(1,5) with Bolt (D) using Hex Key (G).

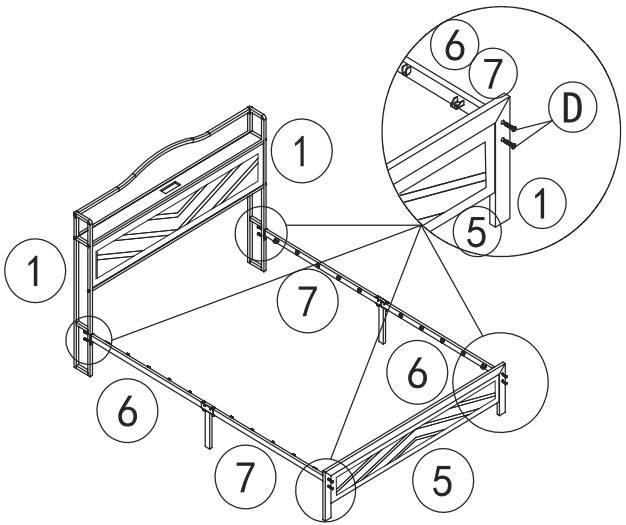

B	M6x30	4pcs
E	M8x55	2pcs
G	4#	1pc

Attach Part (12) to Part(9) with Bolt (E) using Hex Key (G).
Attach Part (12) to Part(6,7) with Bolt (B) using Hex Key (G).

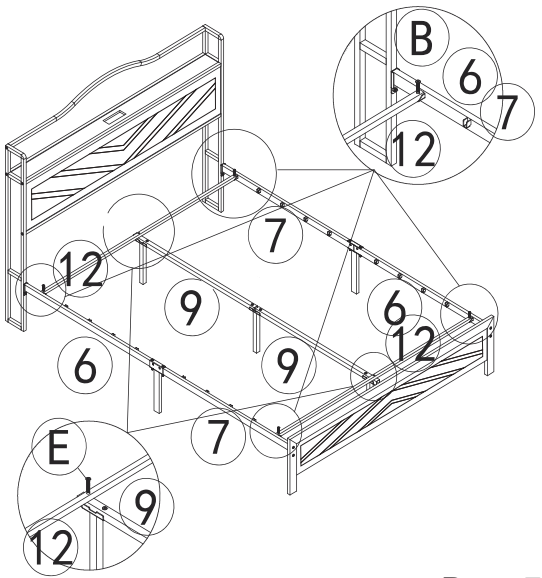

Assembly Instruction

F	∅3x10	2pcs
G	4#	1pc

Insert and secure lock Part (13) to the bed frame.
Attach Part (14) to Part(3) with Bolt (F) using Hex Key (G).

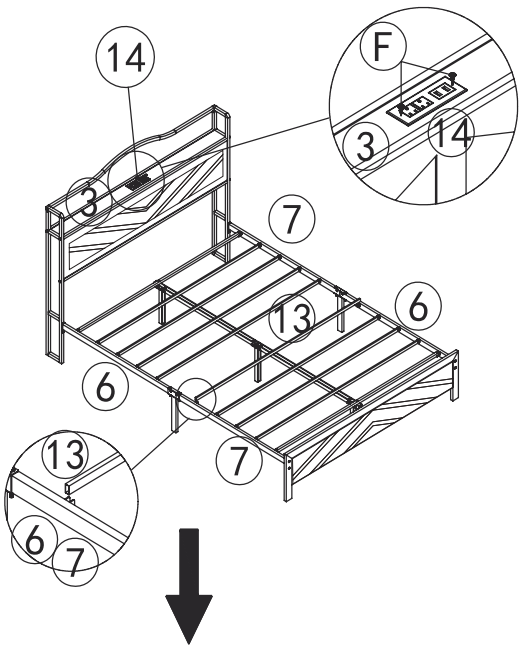

D	M8x35	4pcs
E	M8x55	1pc
G	4#	1pc

Attach Part (11) to Part(10) with Bolt (E) using Hex Key (G).
Attach Part (11) to Part(6,7) with Bolt (D) using Hex Key (G).

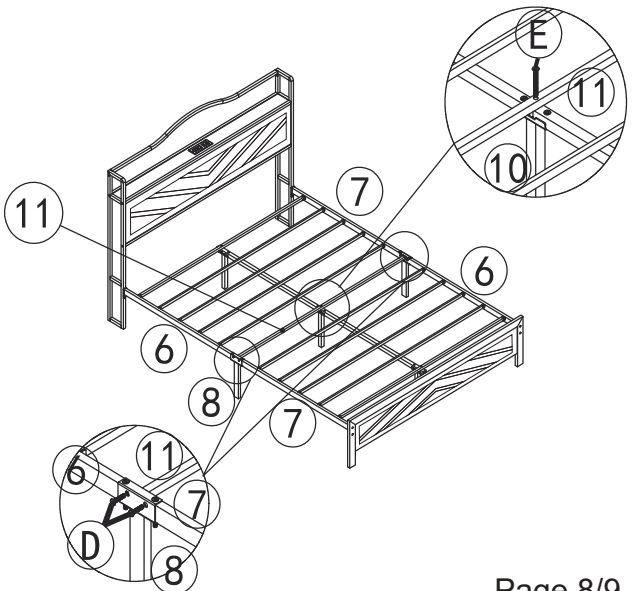

Assembly Instruction

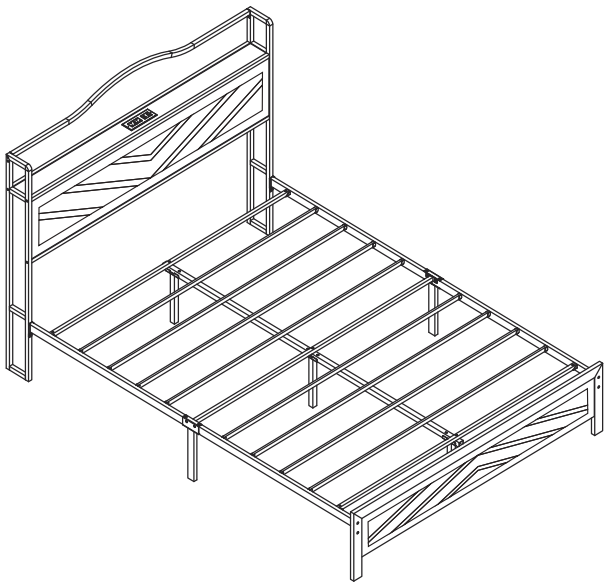
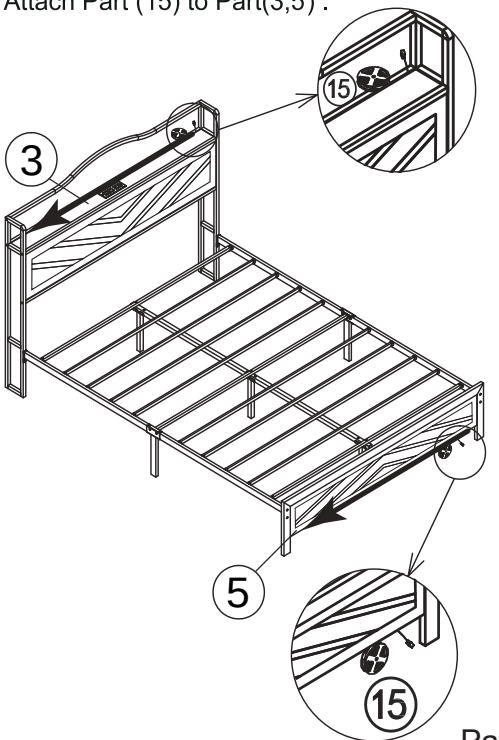
Attach Part (15) to Part(3,5) .