
H01A

Installation Instructions
Hinged Shower Door Series

Scan for **YouTube HD** Product Install Video

Scan QR Code for Installation Video

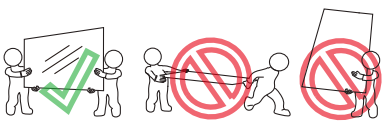

This fixed shower panel requires professional installation. Two installers are recommended.


All plastic bags are not toys. Keep them out of reach of infants and children to prevent choking

V01-2026


Tools




Level




Tape Measure



Pencil



Phillips Screwdriver



Silicone



Power Drill



Drill Bit Ø1/8" (3mm)




Drill Bit Ø3/16" (4mm)




Drill Bit Ø1/4" (6mm)




Drill Bit Ø5/16" (8mm)

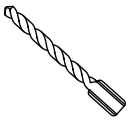


Drill Bit Ø3/8" (10mm)

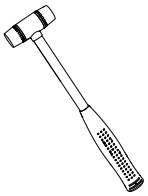

Soft Head Hammer

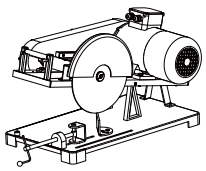


Chop saw**



Safety Glasses




Work Gloves



Hacksaw**



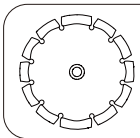


**Use the proper saw blade to cut stainless steel.



Painter's Tape




Razor Knife



Extender Driver Bit



#3 Phillips Driver Bit

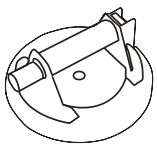

Professional-grade Glass suction cup

TIP

Measure the finished opening before proceeding with the installation to be sure that the correct model size has been ordered.


Be sure to cover the shower drain to prevent losing small parts.



Threshold must be level; Walls must be plumb.

Parts

1/1


Shower Door Components - Detailed Diagram

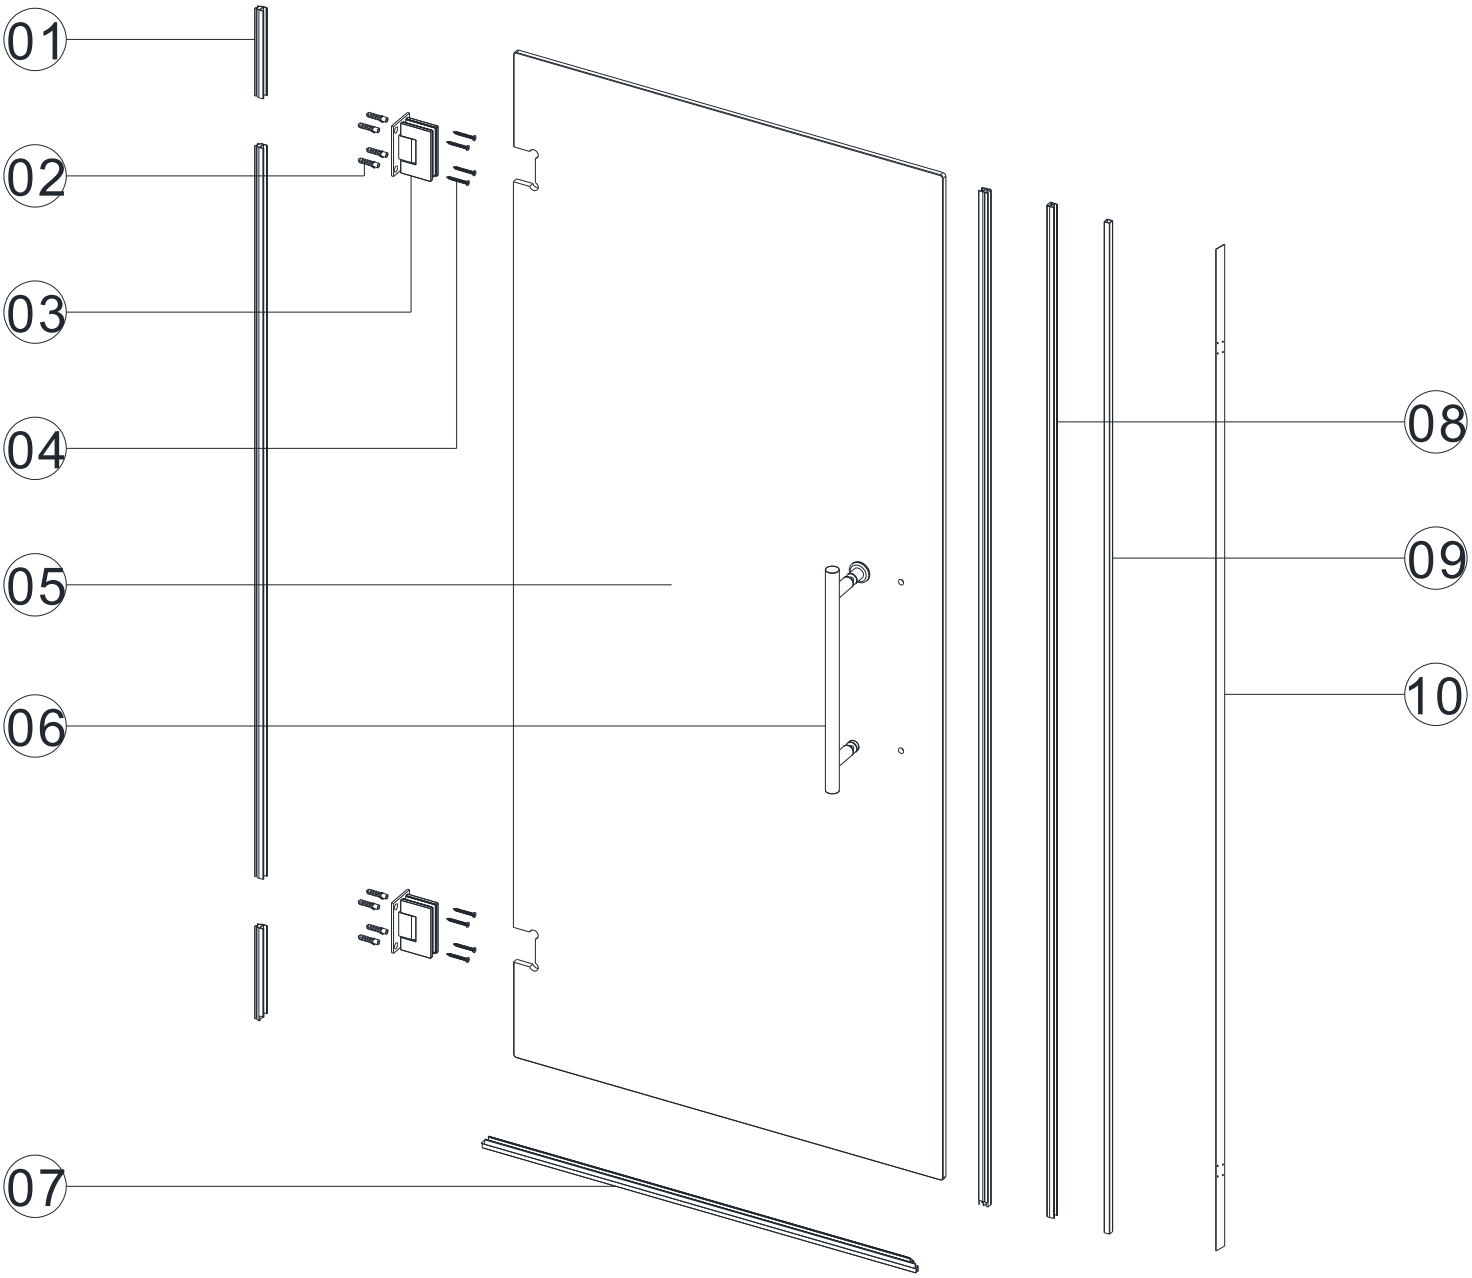

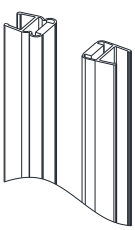
01  Bulb Vinyl Strip x1	02  Wall anchor x8	03  Hinge x2	04  Truss Head Screw x8	05  Hinged Door Panel x1
06  Handle x1	07  Water Sweep Vinyl Strip x1	08  Magnetic Strip x2	09  Fixed Wall Profile x1	10  Quick positioning plate x1

Spec
1/1

Reversible Mounting

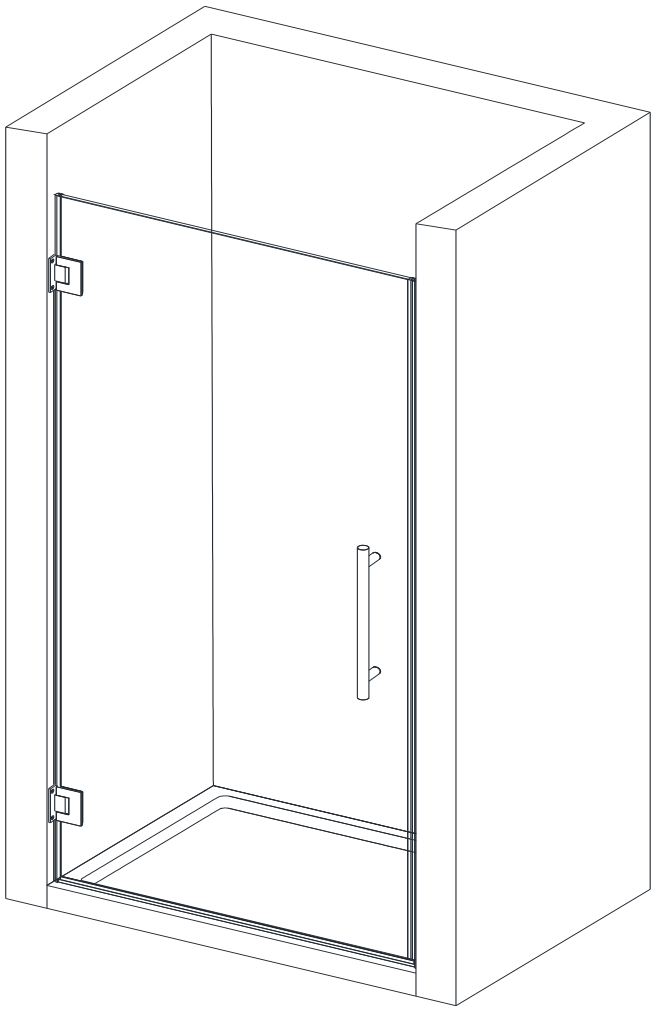

Left-hand installation

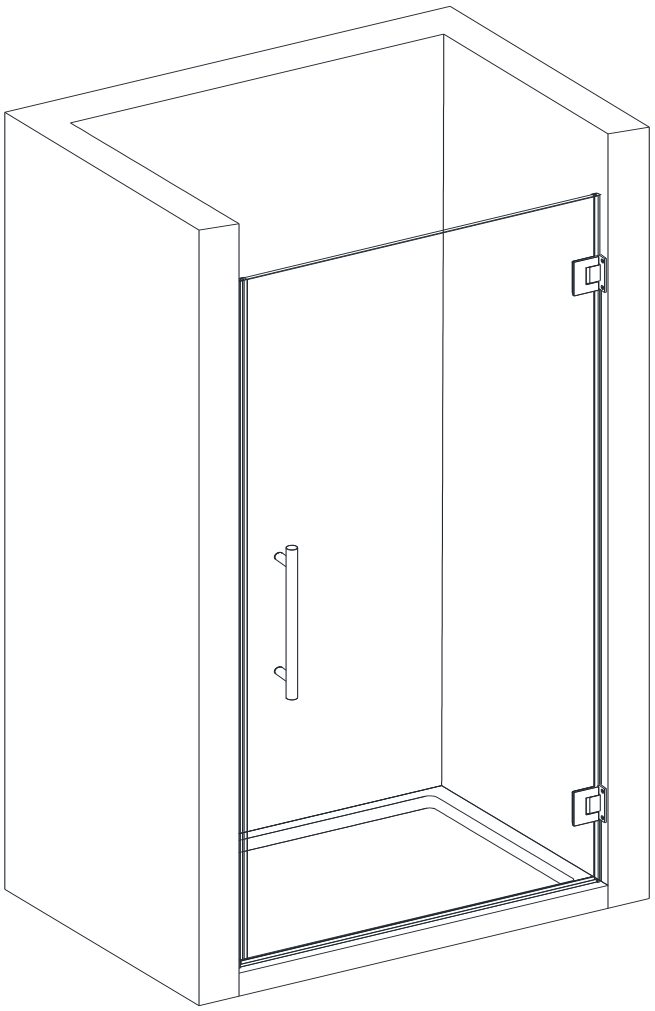


Right-hand installation

NOTE

This enclosure supports both left-hand and right-hand installation; instructions are demonstrated based on **left-hand** configuration, with left-hand setup following identical procedures.

Inst.Steps
1/1

Check Shower Base/Floor Level and Wall Plumb

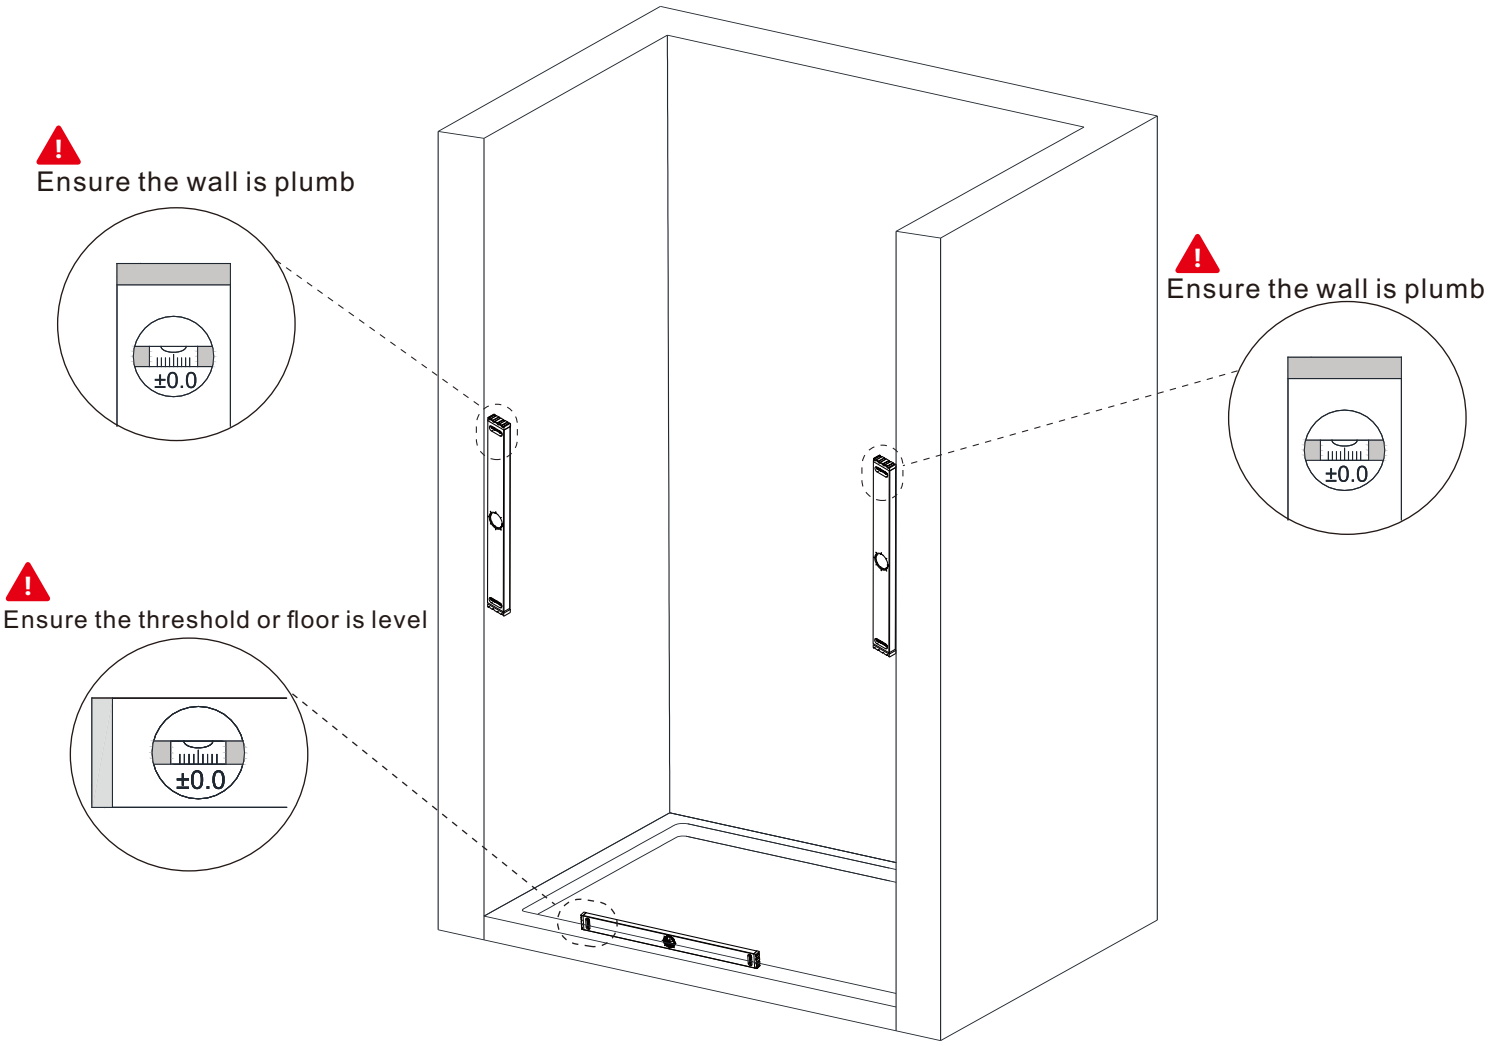

NOTE

Ensure vertical plate is plumb, horizontal plate level.
Align wall and floor holes on the same plane.


TIP

We recommend marking with a pencil for easy removal.

Inst.Steps

2/1

Measure Finished Opening Width

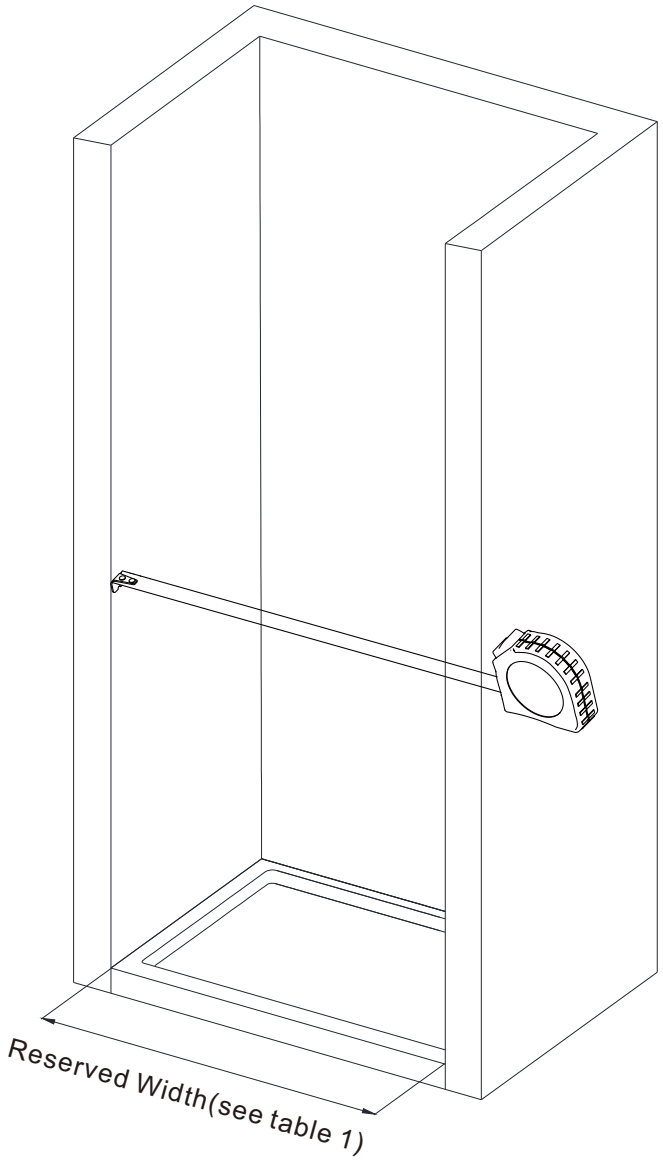



Product Dimensions & Reserved Width (Table1)		
No	Product Dimensions	Reserved Width
1	24''(610mm)	24''(610mm)~24-1/4''(616mm)
2	26''(660mm)	26''(660mm)~26-1/4''(666mm)
3	28''(711mm)	28''(711mm)~28-1/4''(717mm)
4	30''(762mm)	30''(762mm)~30-1/4''(768mm)
5	32''(813mm)	32''(813mm)~32-1/4''(819mm)
6	34''(864mm)	34''(864mm)~34-1/4''(890mm)


Inst.Steps
3/1

Mark mounting positions

Ensure the Wall material is plumb

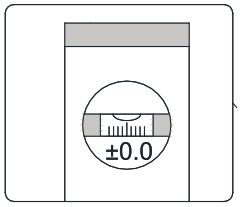

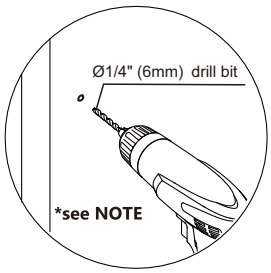

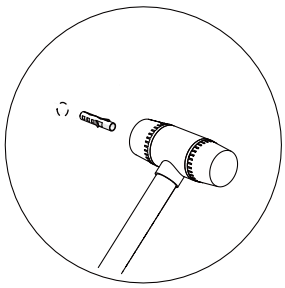



Insert the wall anchor firmly into the holes

For the Hole in the Wall:

- **If a stud is present behind the wall**:
  drill a **Ø1/4"(6mm)** hole up to the stud. **(recommended)**


OR

- **If no stud is present behind the wall**:
  drill a **Ø5/16"(8mm)** hole and install the **Wall Anchor .**

Parts Need		Tools Need
03 Quick positioning plate x1	02 Wall anchor x4	






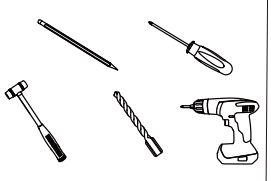



Inst.Steps
4/1

Mount the hinge

Disassemble the hinge

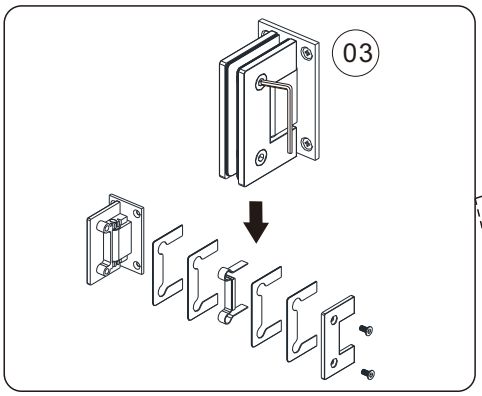


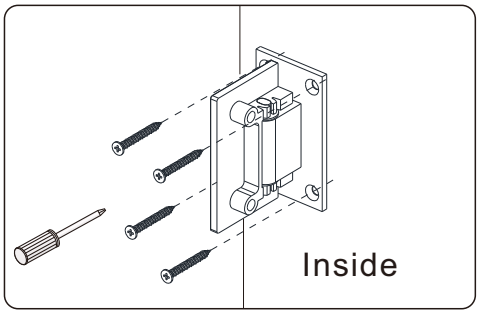


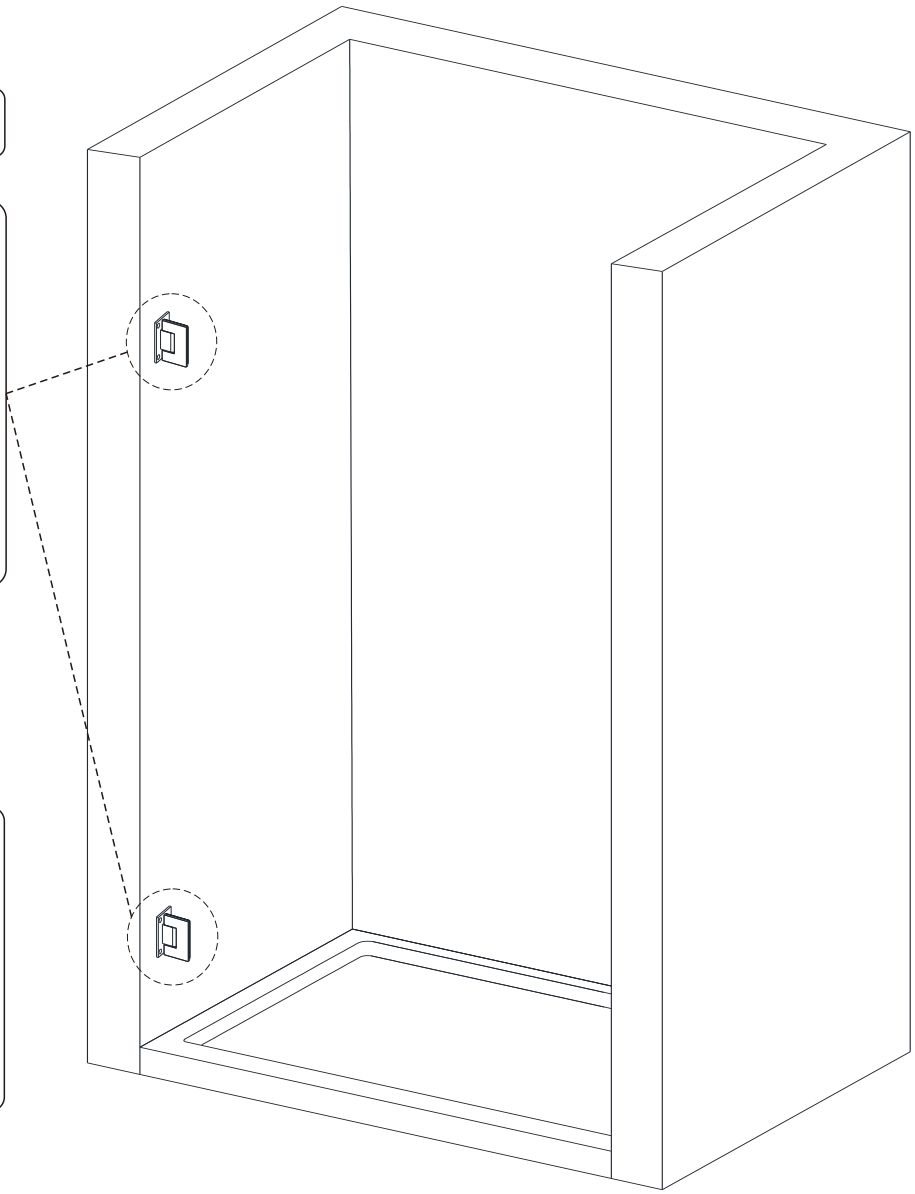


Mount the hinge base onto the holes. Keep the non-screw-mounting face of the hinge and washers in place for glass installation later

Parts Need

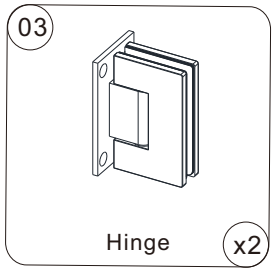

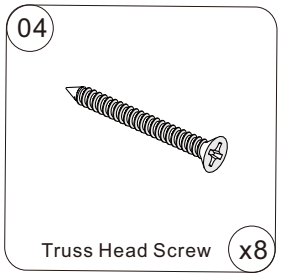


Tools Need

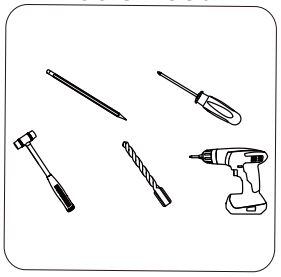



Inst.Steps
5/1


Install the hinged glass door to the wall

Mount the hinge with its screw-mounting face against the glass

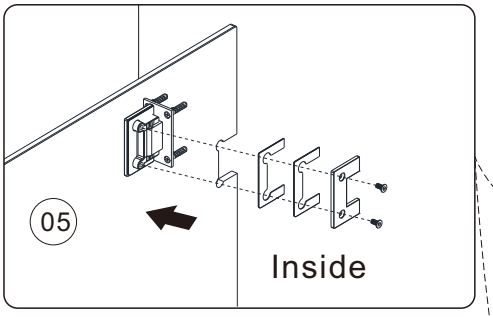

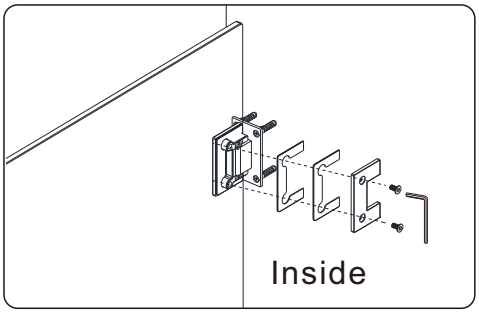

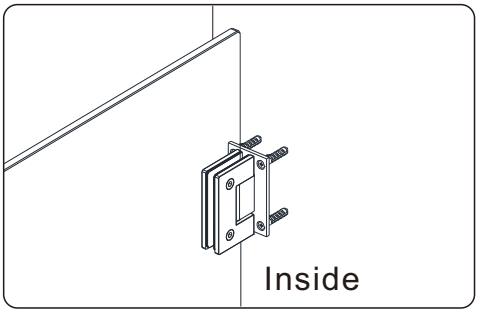


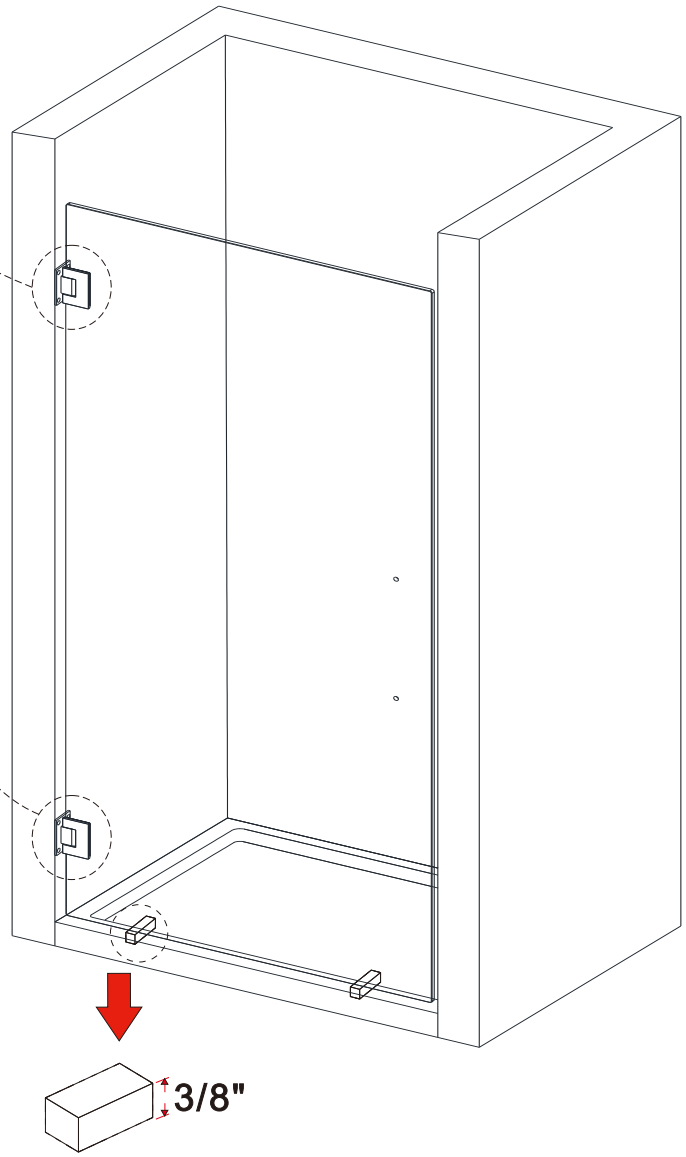


For proper glass-hinge hole alignment, raise glass with cardboard or planks for a 3/8" (9.5 mm) gap between glass bottom and floor


Do not overtighten hinges. Fully tighten only after the door panel is correctly positioned. Excessive screw tension may stress tempered glass and cause cracking or shattering.

Parts Need

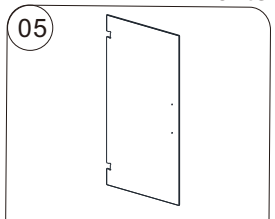

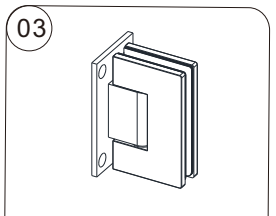


Tools Need

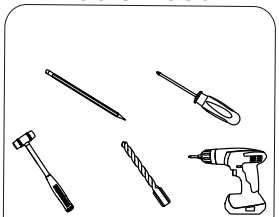



Inst.Steps


6/1

Cut to size & fit seal strip for hinged-glass-door side

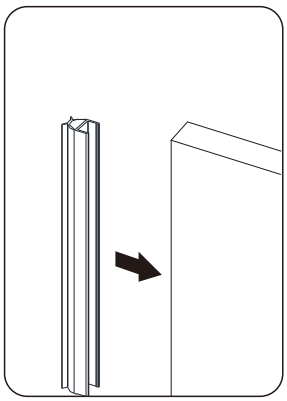

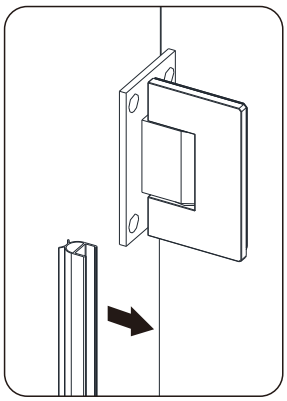


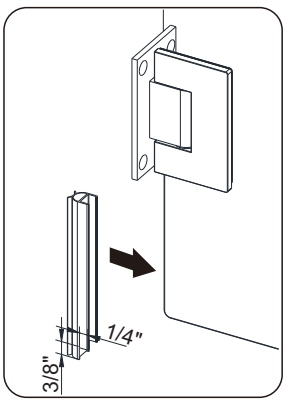

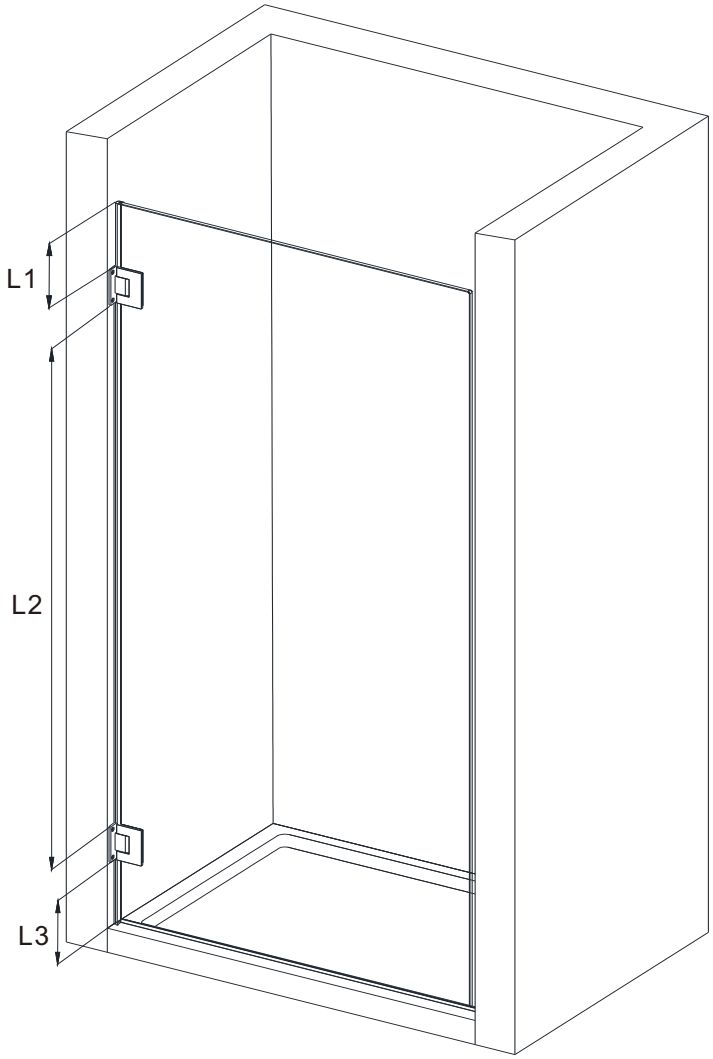


Cut-to-size Length Table for Seal Strip	
No	Height
L1	6-1/2''(165mm)
L2	52-1/16''(1325mm)
L3	6-1/2''(165mm)


Parts Need

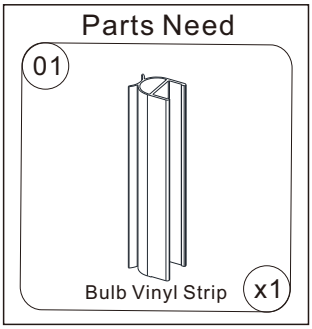


Inst.Steps
7/1


Fixed Wall Profile Positioning and Installation

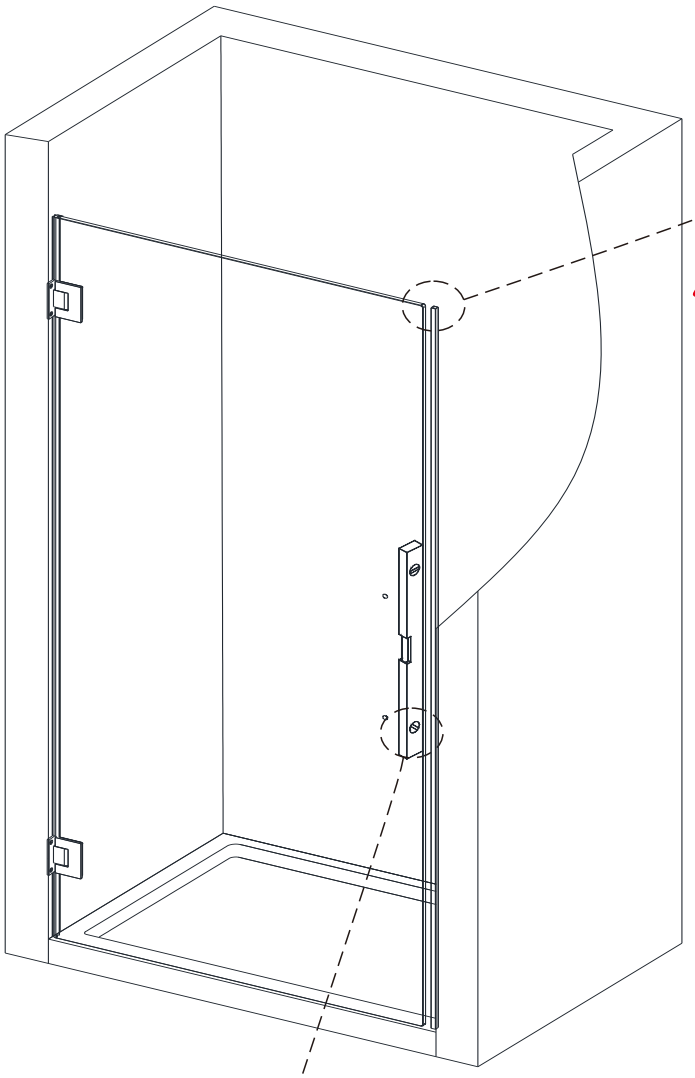

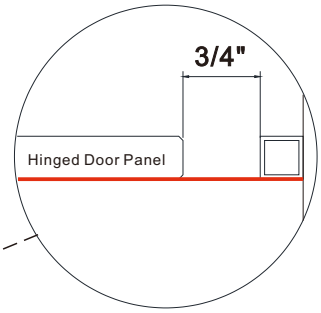



Ensure The Movable Door Glass And Fixed Wall Profile Are On The Same Plane

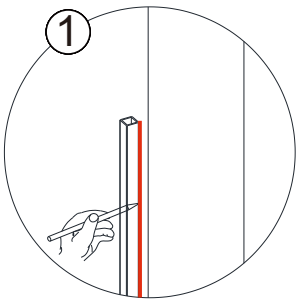

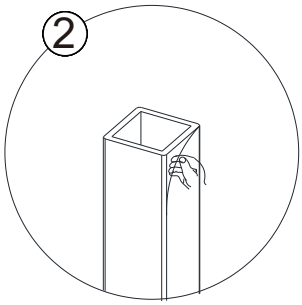


Peel off the release liner

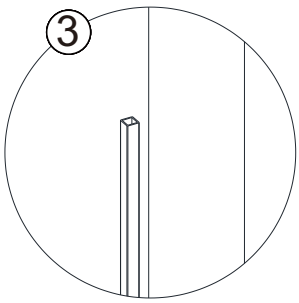

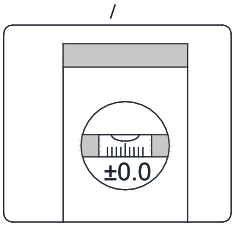



Ensure the Fixed Wall Profile material is plumb

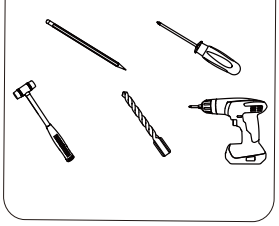
Parts Need	Tools Need
09  Fixed Wall Profile x1	


Inst.Steps
8/1

Install Magnetic Strip

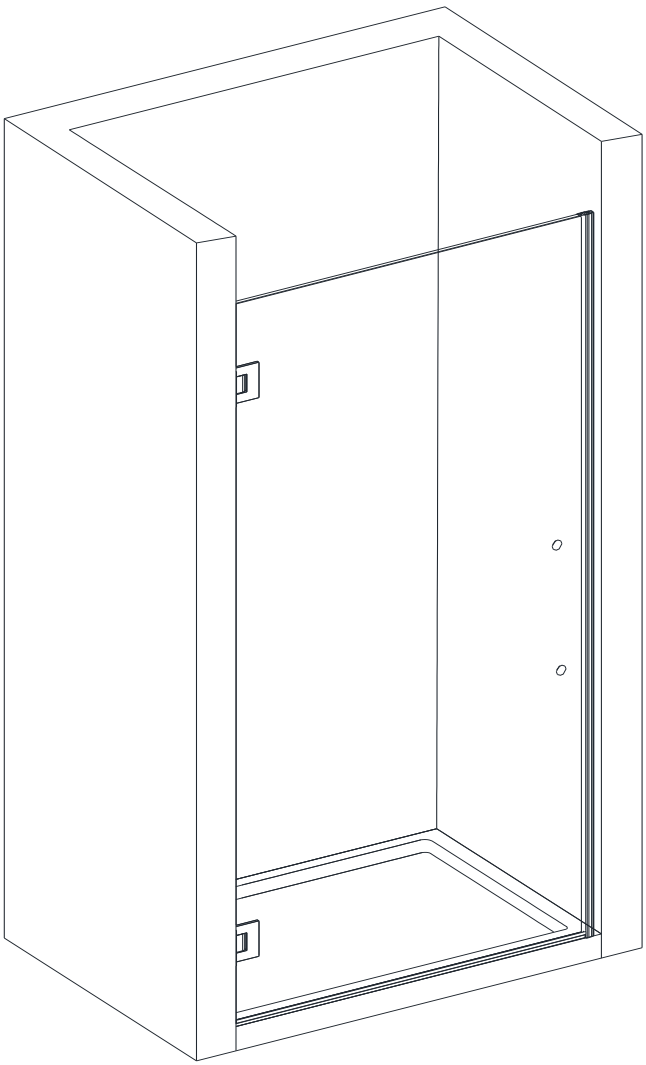

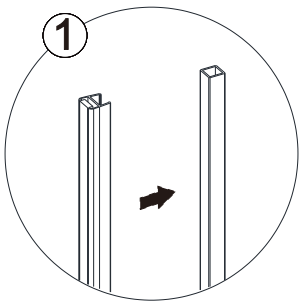

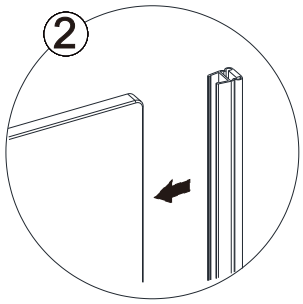

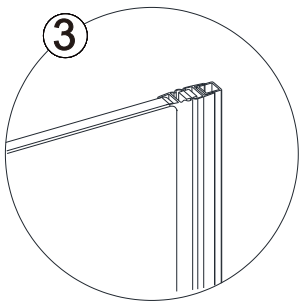


Adjust the door after installation to ensure smooth opening/closing and proper magnetic alignment

Parts Need	Tools Need
08 Magnetic Strip x2	

Inst.Steps
9/1

Install the bottom-seal strip

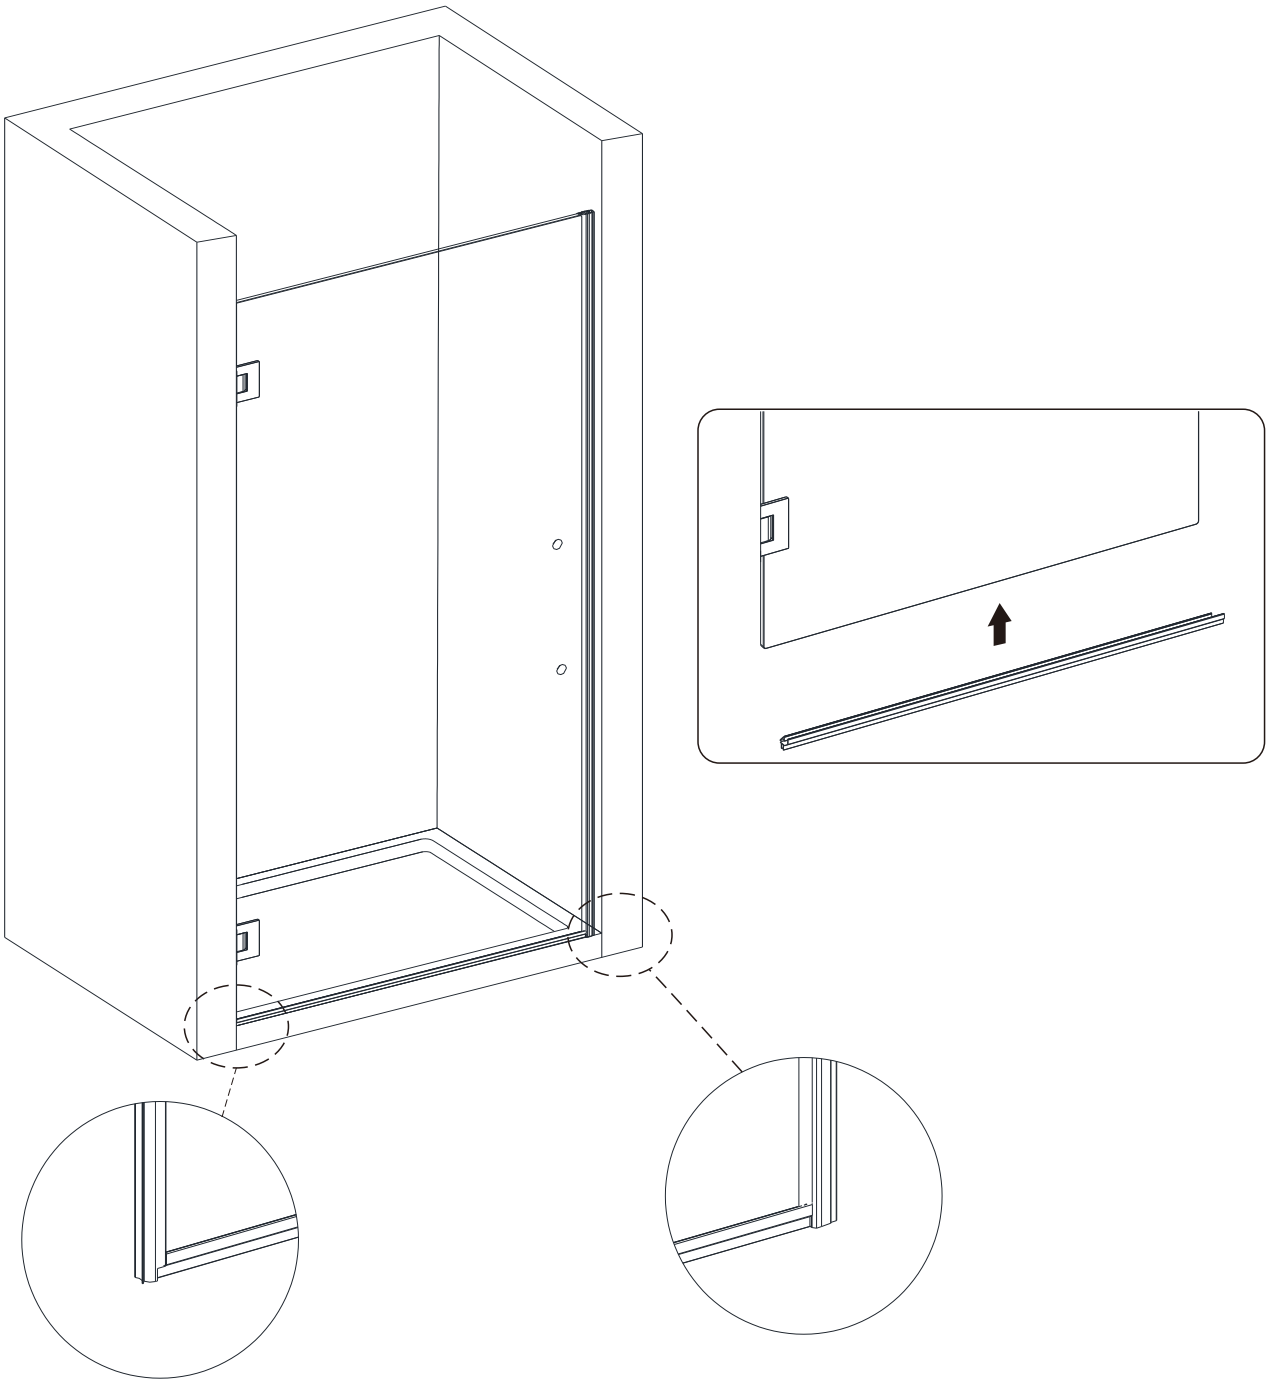


Once the bottom sealing strip is installed, make sure the seal fully closes upon door closure and the door opens & closes smoothly; otherwise, water leakage will occur

Parts Need	Tools Need
07 Water Sweep Vinyl Strip x1	

Inst.Steps
10/1

Install the Handle

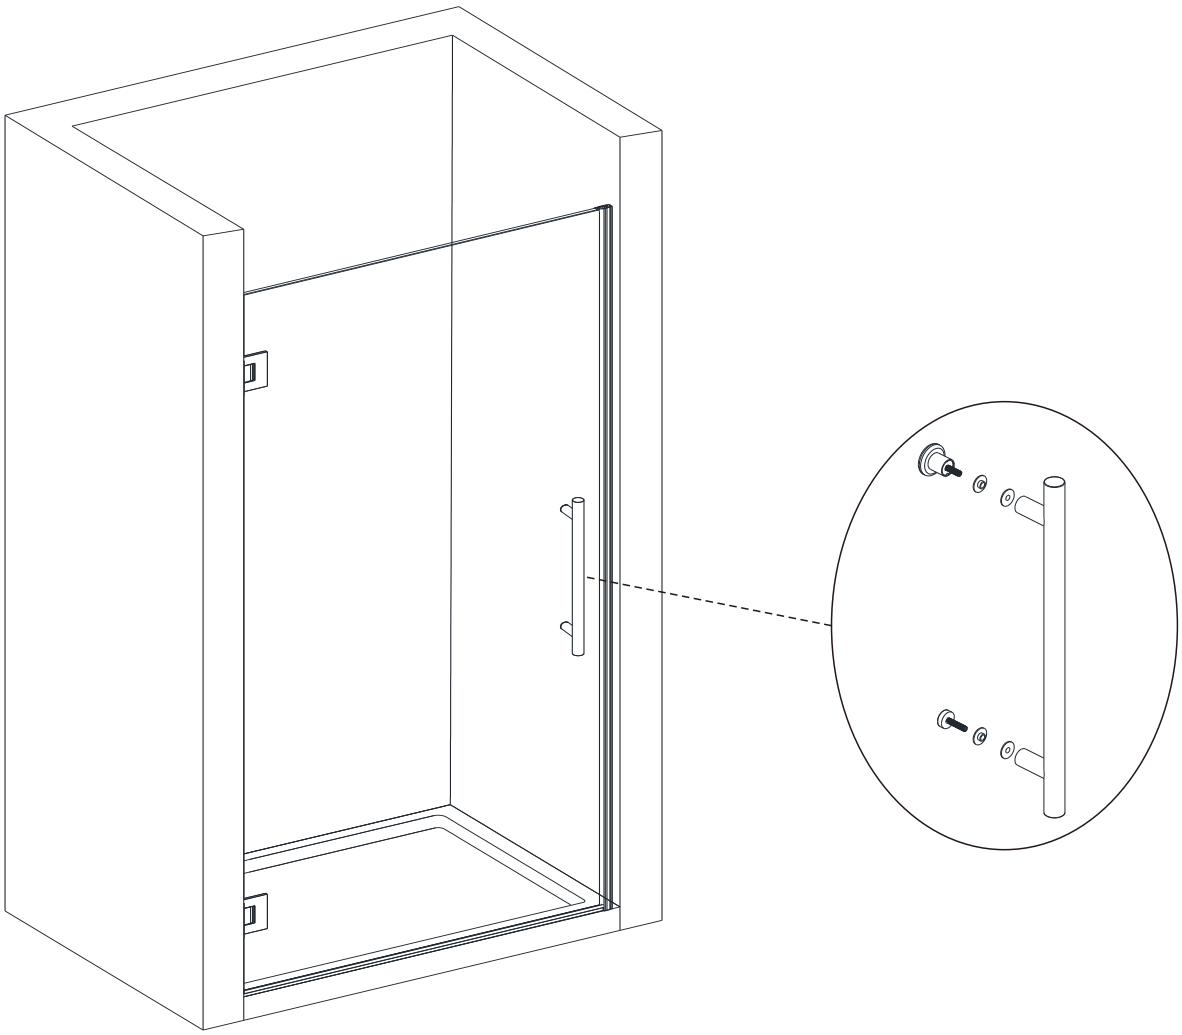


Do not over-tighten screws to prevent glass cracking

Parts Need	Tools Need
06 Handle x1	

Inst.Steps
11/1

Silicone Application & Curing

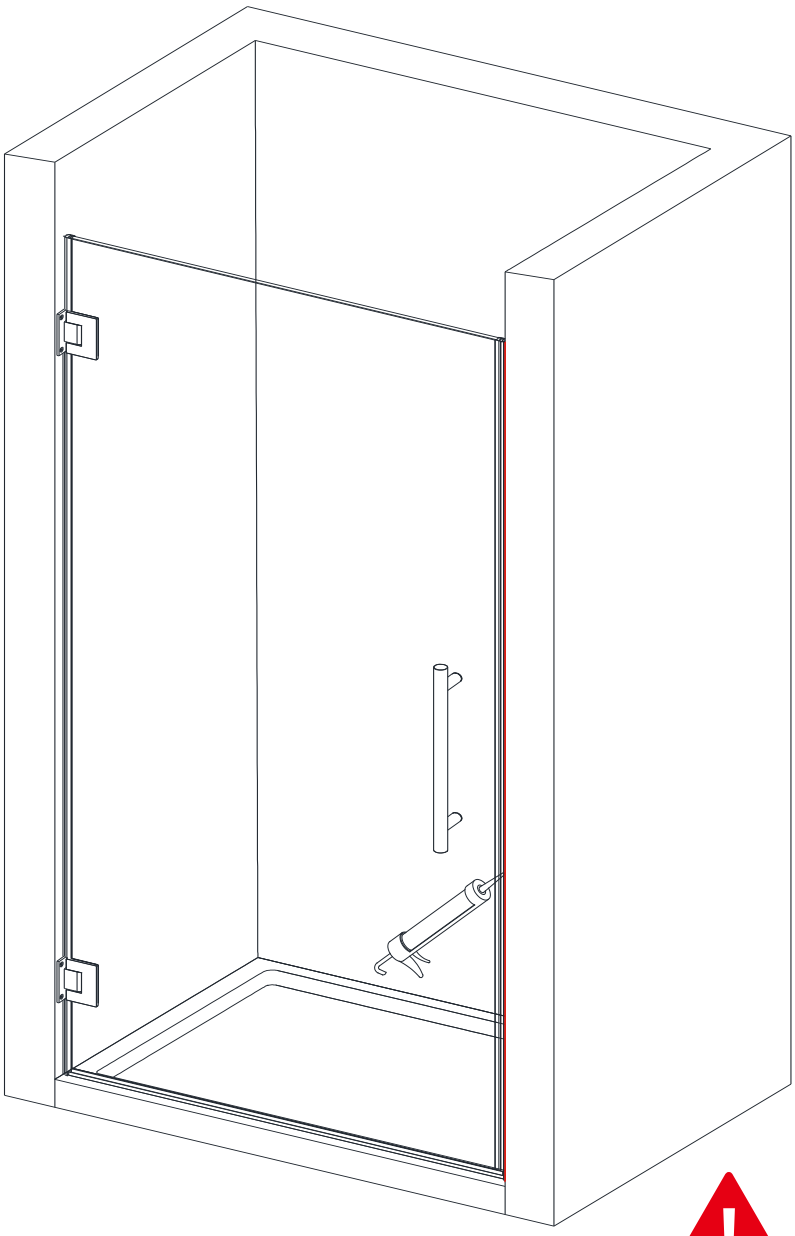





Allow 24 hours for the silicone to cure before using the shower.

The surfaces need to be clean and free of debris before applying silicone.

Do not return product to **store**. Contact us with any questions.

Add: 830 N CentralAve, Upland.CA91786
Web: www. ibathwiller.com
Email: supports@ibathwiller.com