ASSEMBLY INSTRUCTION

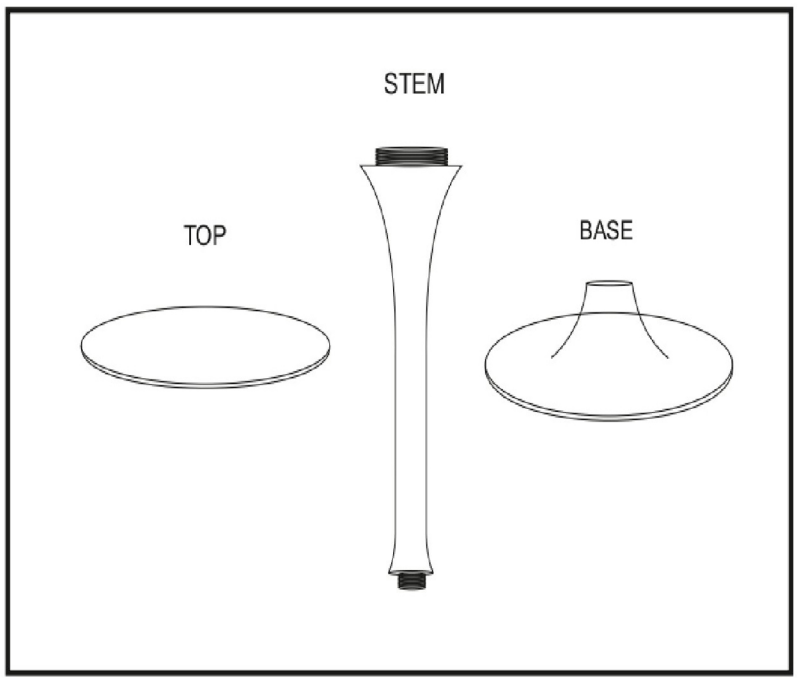

Align the stem into the base and tight clockwise.

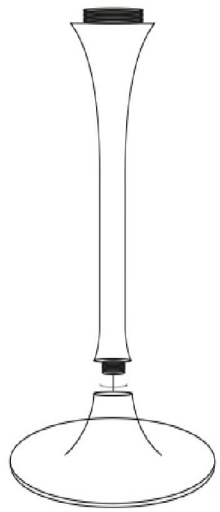

Align the top into the base and tight clockwise.

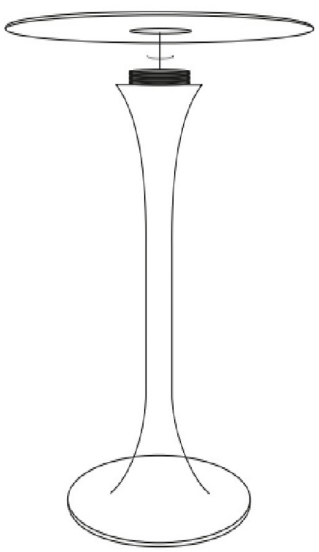
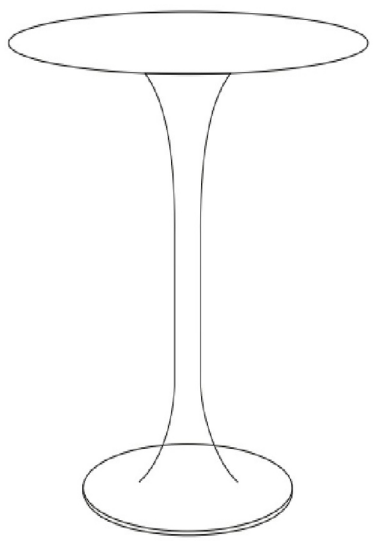
Complete Product