
WQG205---->12X24FT

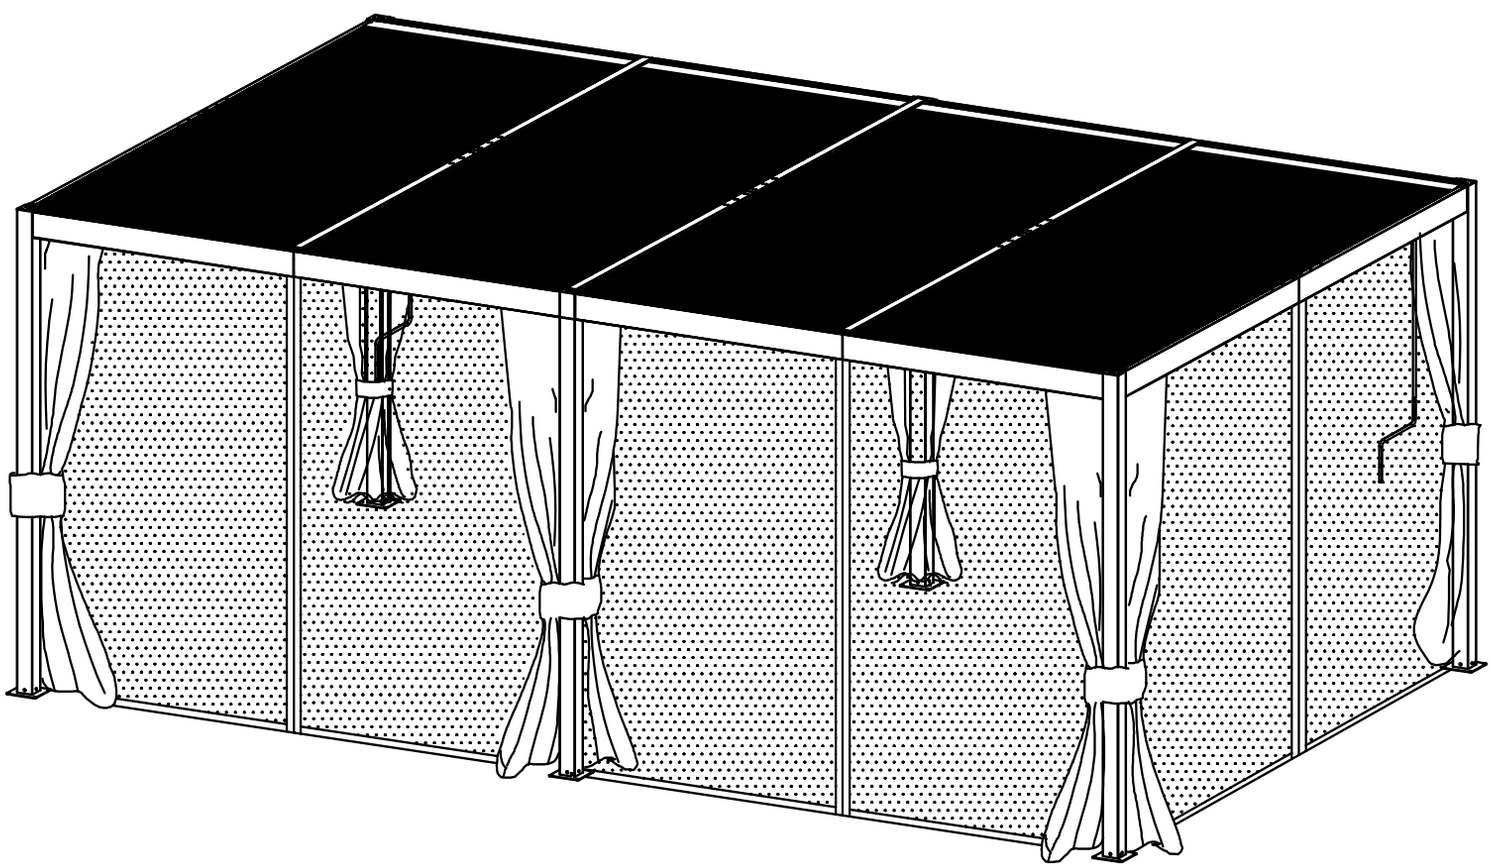

12X24FT
Louvered Pergola

Installation instructions

PRODUCT INSTRUCTION

Remember that the assembly might take (3) hours and requires (4) people.

Before You Begin

①Before starting assembly, please carefully inspect all parts in the package.
If you notice any damage, missing parts, or discrepancies, please contact us for assistance.
②Please note that we are not responsible for parts lost or damaged due to improper handling during assembly.

Preparation Is Key

①Confirm that your site preparation and foundation are fully ready before unpacking.
②Review all steps in this manual thoroughly before beginning.
③Consult local authorities regarding permits and building regulations.

Safety First

①Some parts have sharp metal edges — handle with care.
②Wear gloves, eye protection, and long sleeves during assembly or maintenance.
③Do not assemble in strong winds or extreme cold.
④Once installed, place heavier items near the bottom when filling.
⑤Do not allow children to play in the unit, and do not stand, sit, or store items on the roof.

Our Promise to You


①Inspired by the idea of “ Closer to life, ” we strive to provide well-designed, reliable products that enhance your outdoor living. Our goal is to help you connect with nature and enrich your lifestyle.②Here ’ s to creating your own outdoor sanctuary !

Need Help ?


If you have any questions during assembly, please reach out to our customer service team.


Installation Notes

- Refer to the provided diagram during assembly.
- These following tools are required but not included

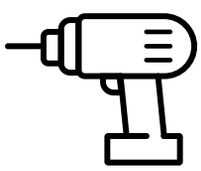
Power Drill



Tape Measure


Hammer

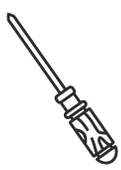

Screwdriver


Ladder



Scissors

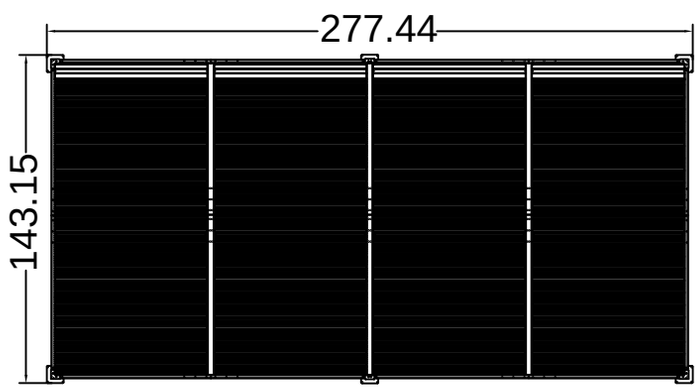

Top

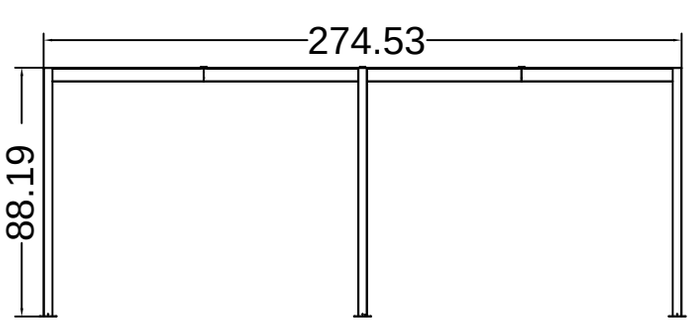

Front

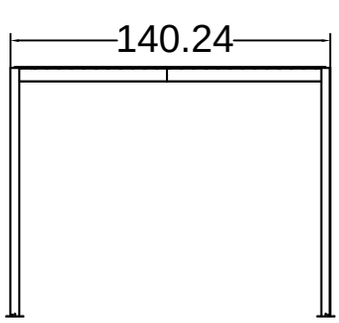

Left

ACCESSORIES LIST Serial number

Box A

Part name	A	A2	I-2	
Qty	2	1	2	

Box B

Part name	A	A2	I-2	
Qty	2	1	2	

Box C

Part name	E2	E3	F2	F3	Q	J	S
Qty	1	1	1	1	3	2	4
Part name	Y	S1	Y1	T	T1		
Qty	4	2	2	144	12		

Box D

Part name	E	E1	F	F1	Q1	I-1	K
Qty	1	1	1	1	6	4	4
Part name	L	M1	M2	N	N1	N2	O
Qty	4	4	4	6	4	2	6
Part name	P	R	R1	R2	V	1#	2#
Qty	8	1	4	3	2	106	32

ACCESSORIES LIST Serial number

Box D

Part name	3#	4#	5#	6#	7#	8#	9#
Qty	486	10	16	8	48	162	24

Box E

Part name	B	B1	C	C1	D	
Qty	1	1	1	1	2	

Box F

Part name	D1	D2	D3	G			
Qty	2	1	1	4			

Box G

Part name	H	
Qty	40	














Box H

Part name	H	
Qty	40	











Box I

Part name	H	
Qty	40	



ACCESSORIES LIST Figure style

 A×4	 A2×2	 B×1
 B1×1	 C×1	 C1×1
 D×2	 D1×2	 D2×1
 D3×1	 E×1	 E1×1
 E2×1	 E3×1	 F×1
 F1×1	 F2×1	 F3×1
 G×4	 H×120	







ACCESSORIES LIST Figure style

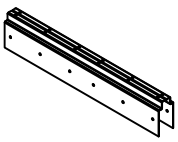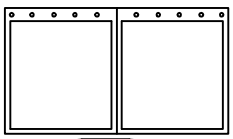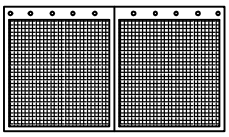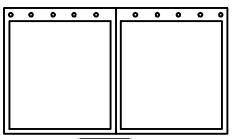 I-1×4	 I-2×4	 J×2
 K×4	 L×4	 M1×4
 M2×4	 N×6	 N1×4
 N2×2	 O×6	 Q×3
 Q1×6	 P×8	 R×1
 R1×3+1	 R2×3	 V×2
 S×4	 Y×4	 S1×2


ACCESSORIES LIST Figure style

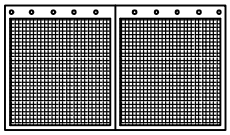 Y1×2	 T×144	 T1×12


ACCESSORIES LIST Figure style

 M6*15 1#×104+2	 M8*38 2#×32	 M5*16 3#×480+6
 M4*12 4#×8+2	 M6 5#×16	 M6*40 6#×8
 M6*15 7#×48	 M6*10 8#×160+2	 M8 9#×24
 6mm	 4mm	 4mm
		

ASSEMBLY STEP 1




A x4




A2 x2



O x6



1# x24

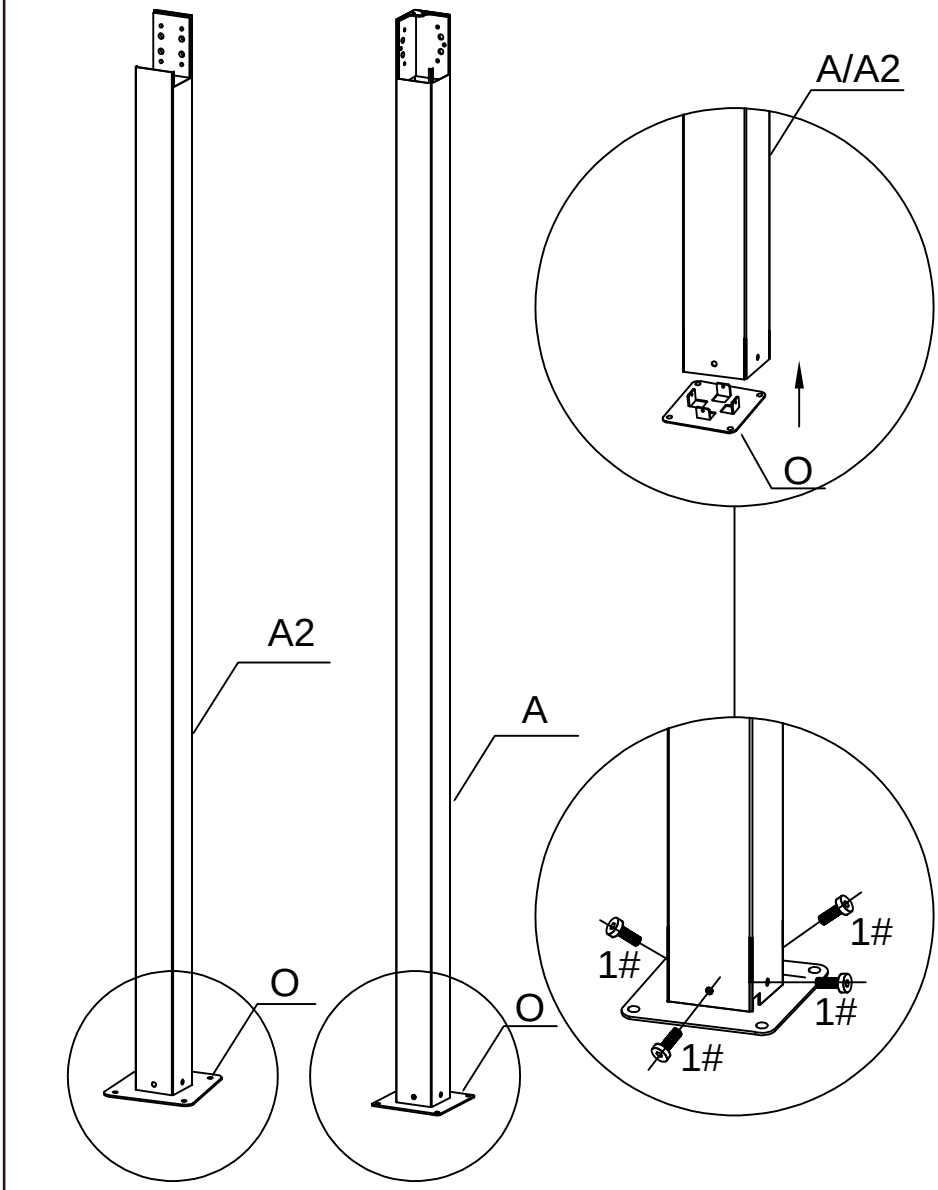

ASSEMBLY STEP 2



B x1



B1 x1




Q1 x1



P x1



8# x14

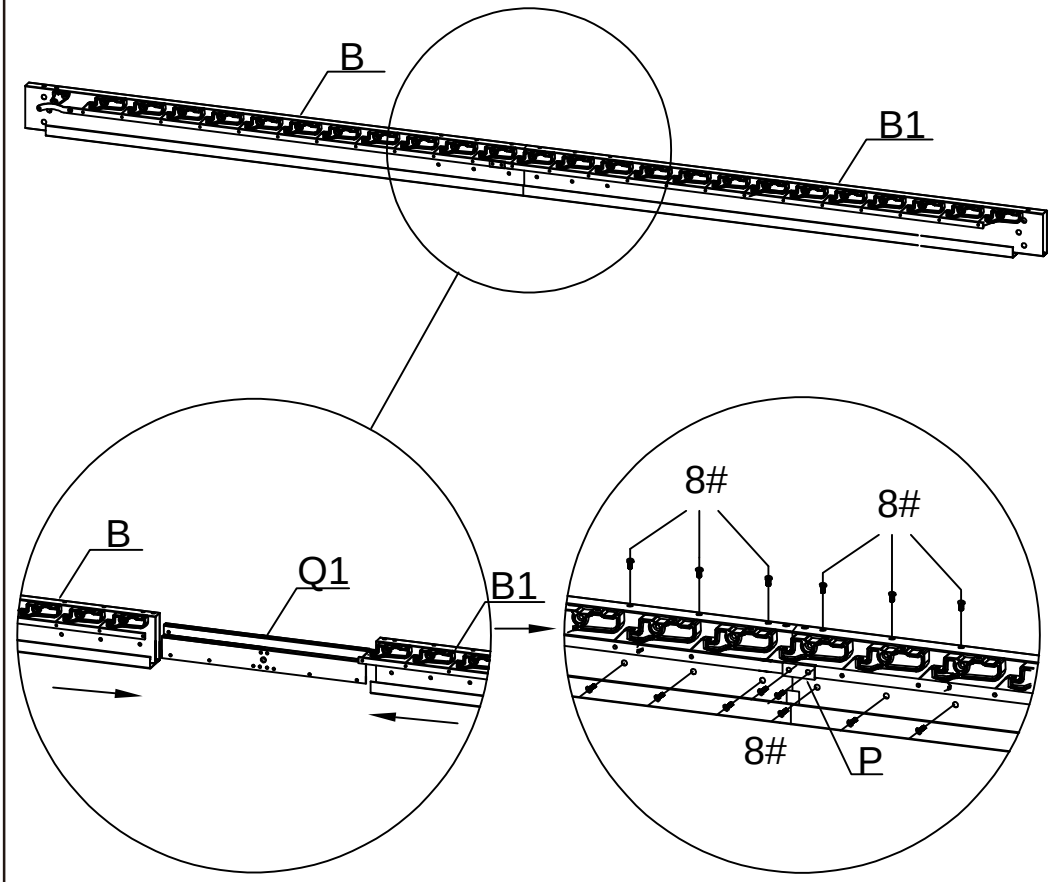

ASSEMBLY STEP 3



C x1




C1 x1




Q1 x1




P x1




8# x14

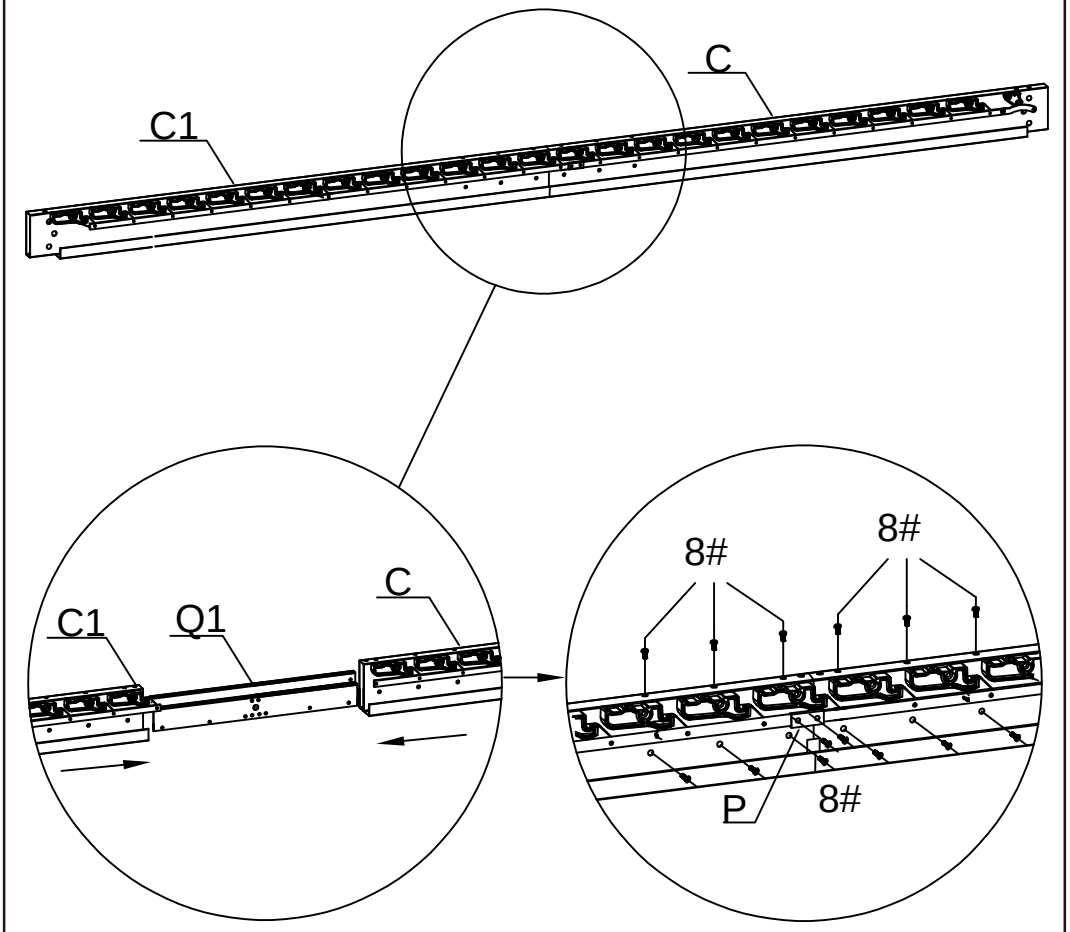

ASSEMBLY STEP 4



E x1



E2 x1



Q1 x1




N x1




7# x4




8# x12

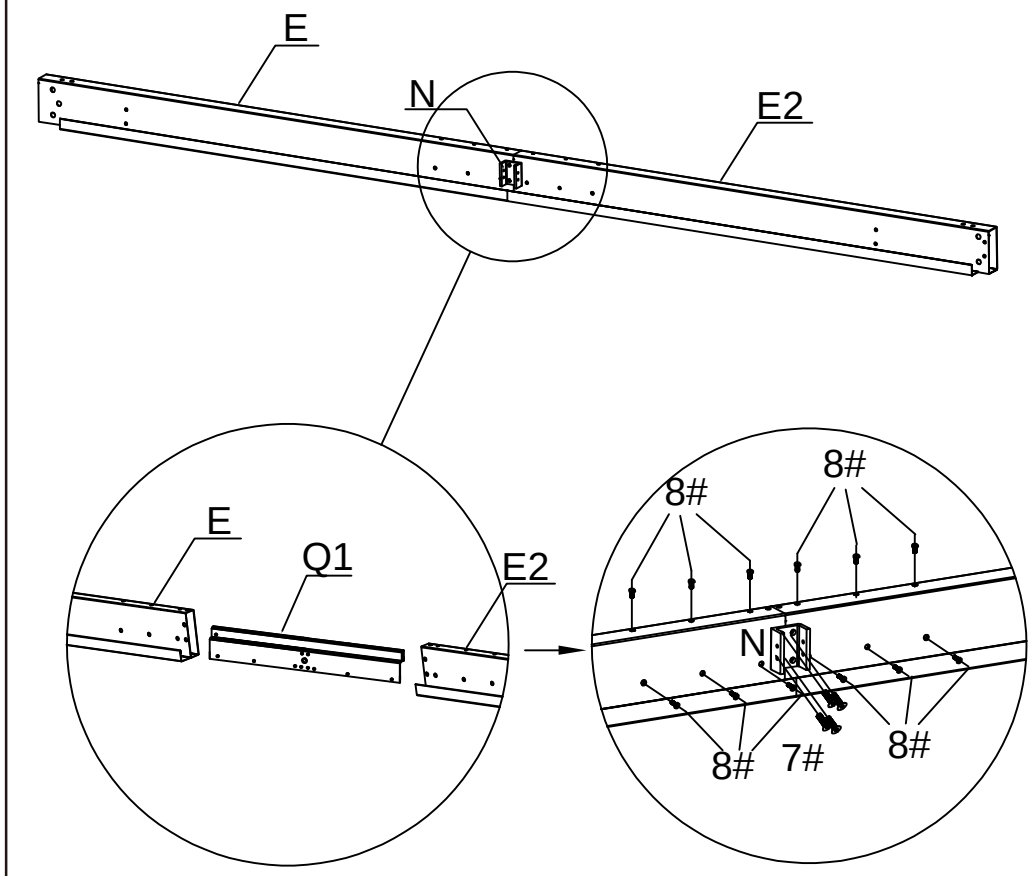

ASSEMBLY STEP 5



E1 x1



E3 x1




Q1 x1




N x1




7# x4




8# x12

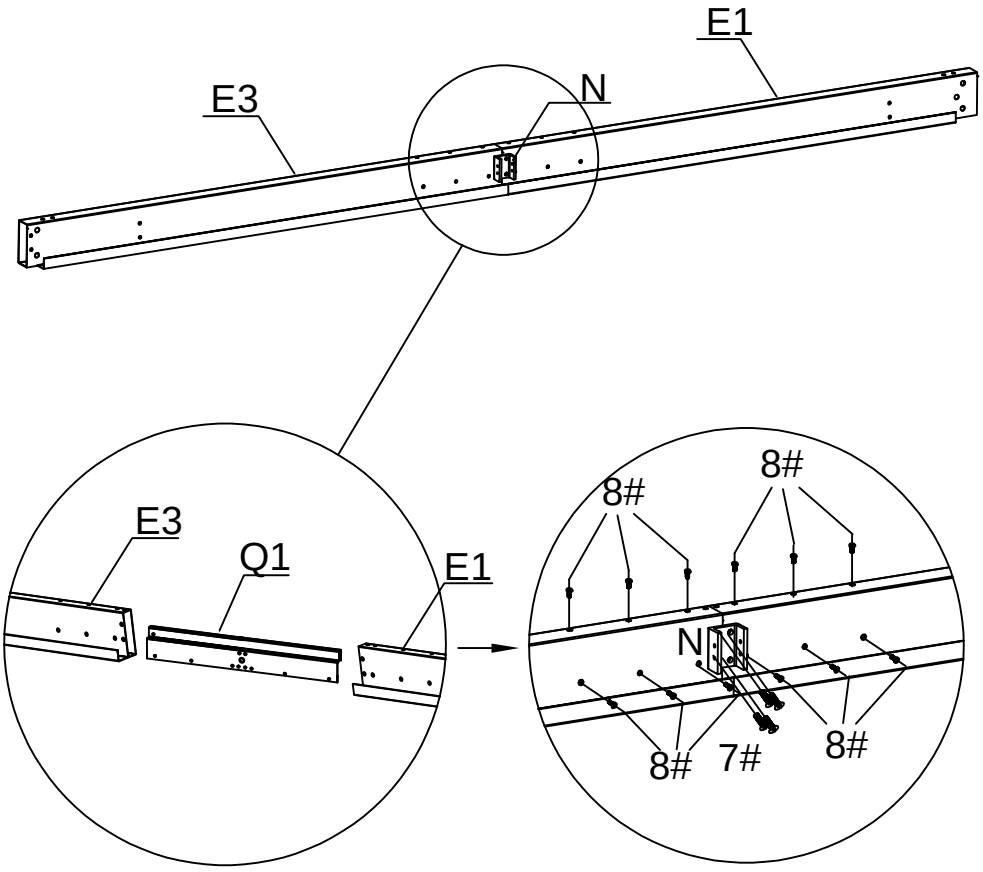

ASSEMBLY STEP 6



F x1



F2 x1



Q1 x1




N x1




7# x4




8# x12

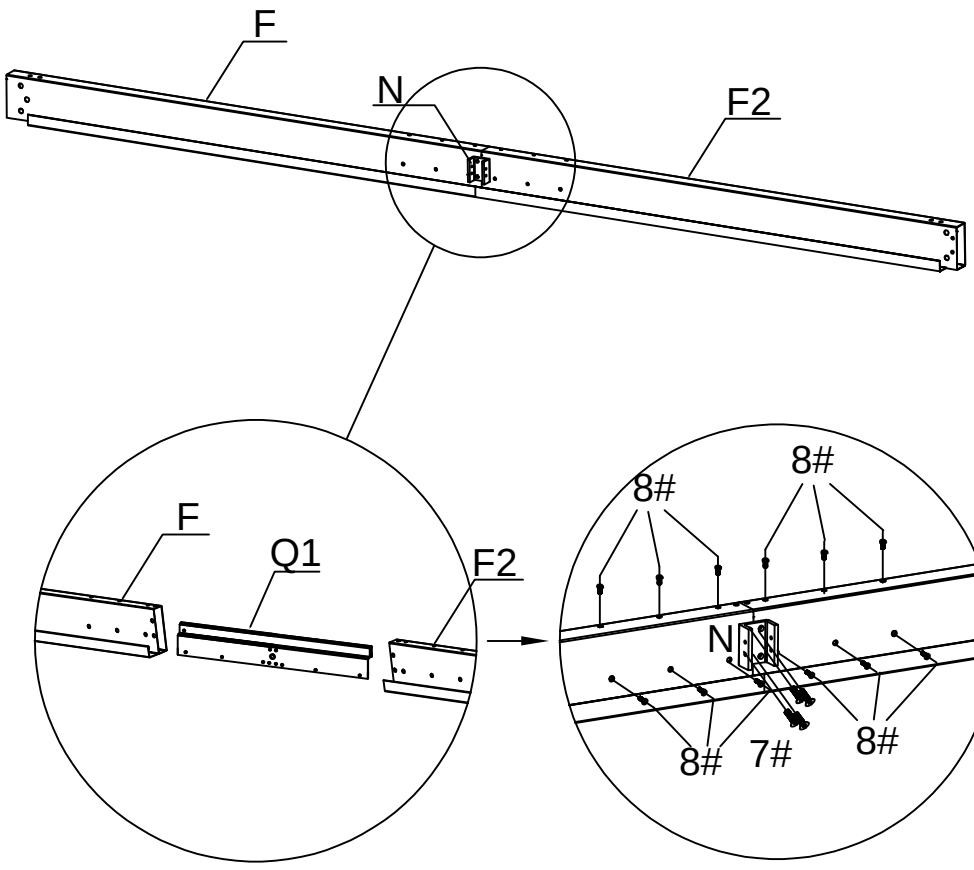

ASSEMBLY STEP 7



F1 x1



F3 x1




Q1 x1




N x1



7# x4



8# x12

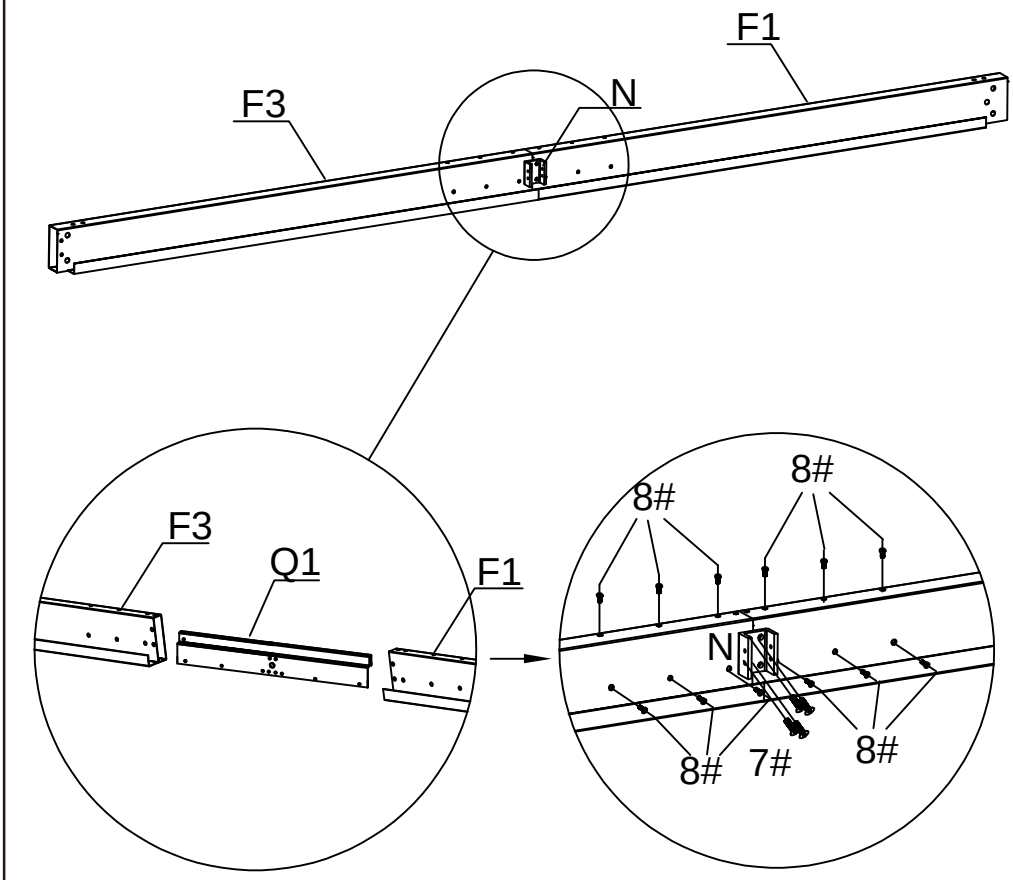

ASSEMBLY STEP 8




D x2




D1 x2




P x4



Q x2



8# x56

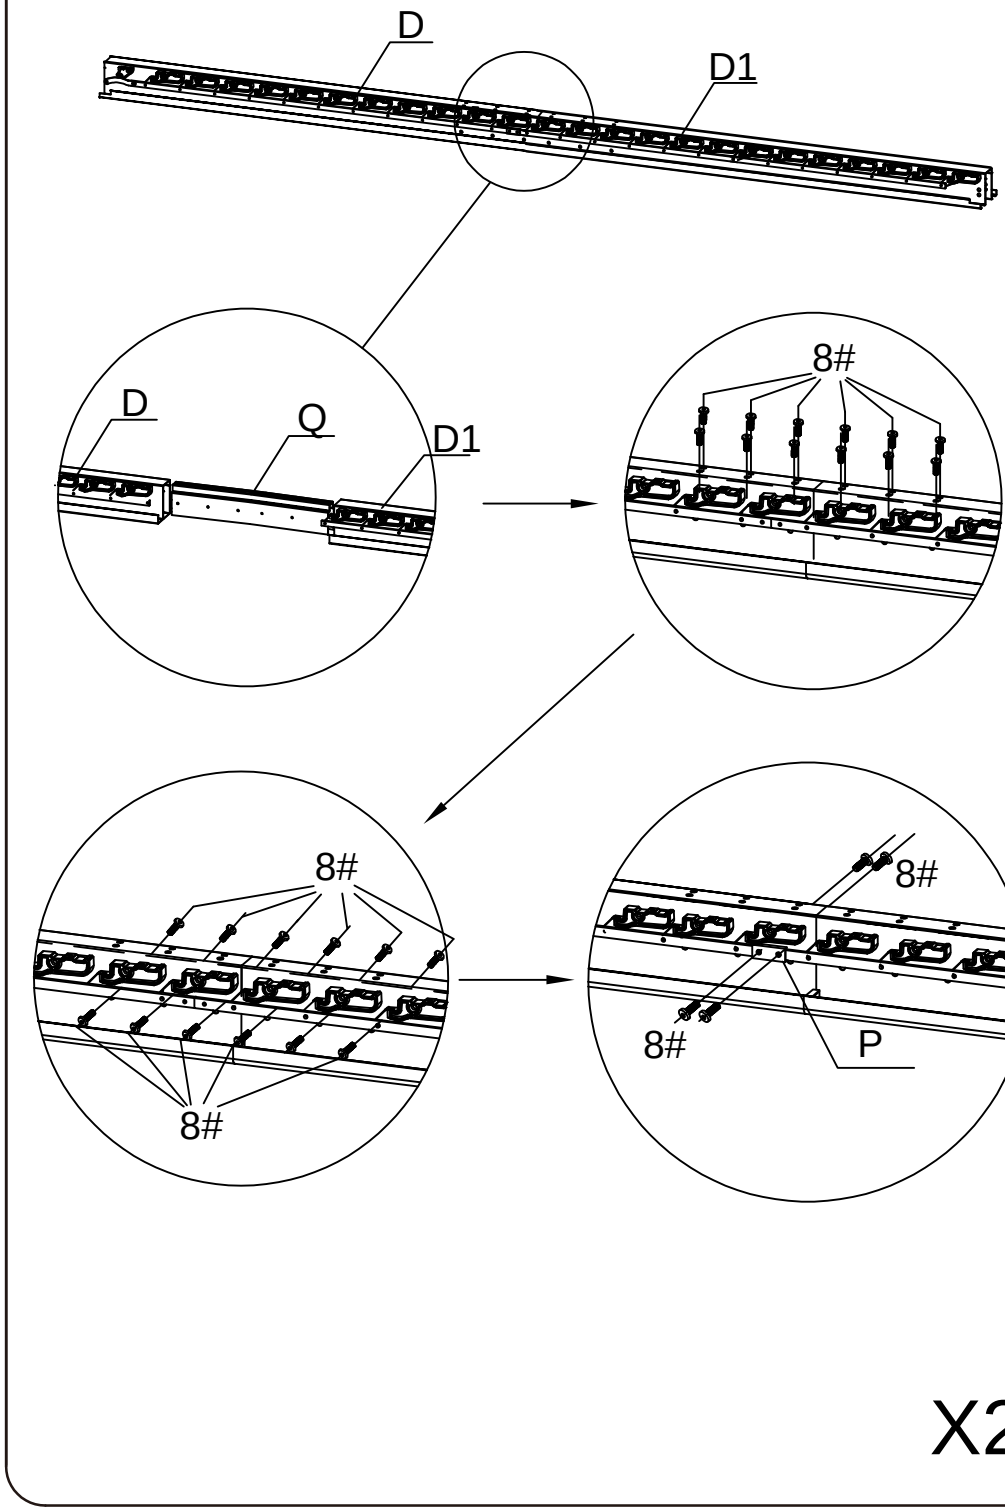

ASSEMBLY STEP 9




D2 x1



D3 x1




P x2




Q x1




8# x28

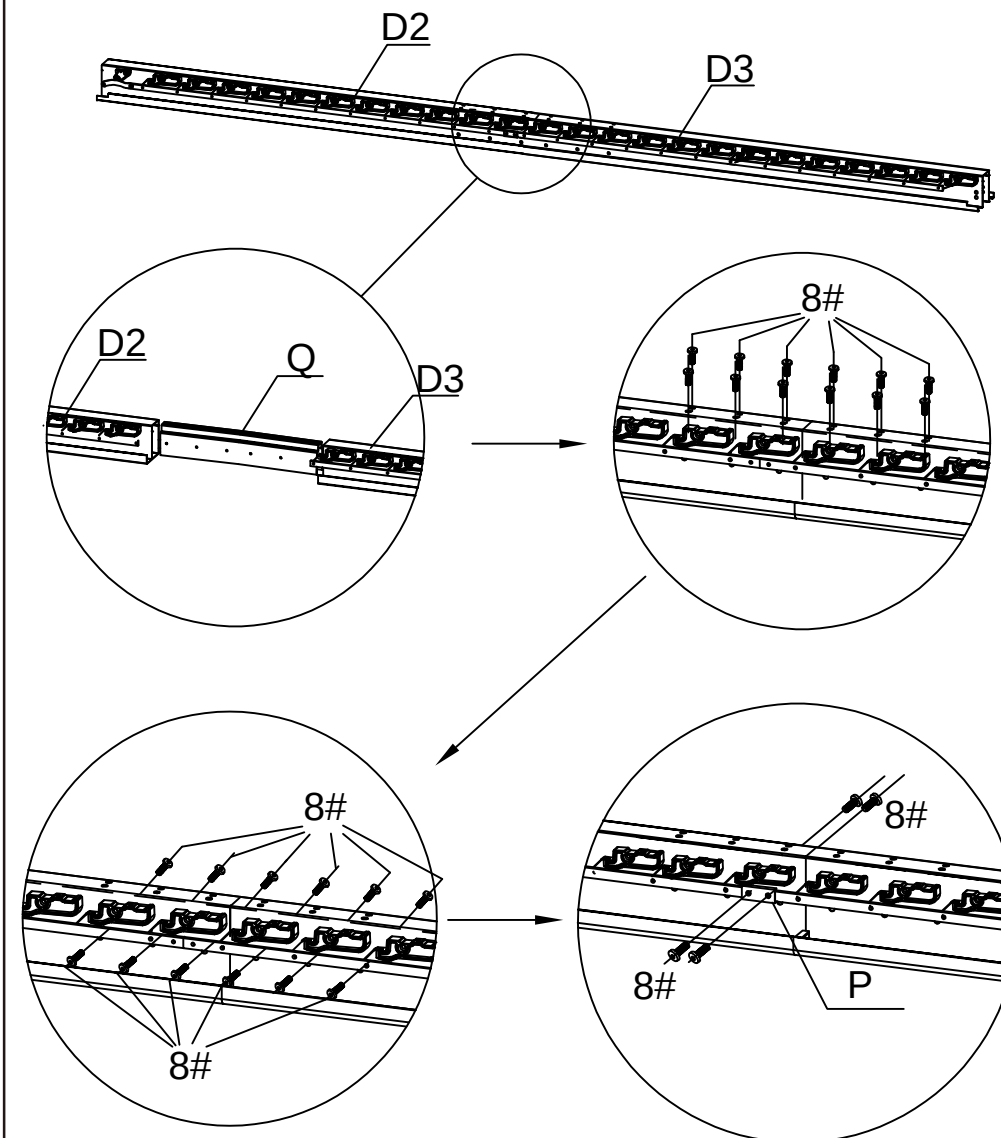


ASSEMBLY STEP 10




2# x4

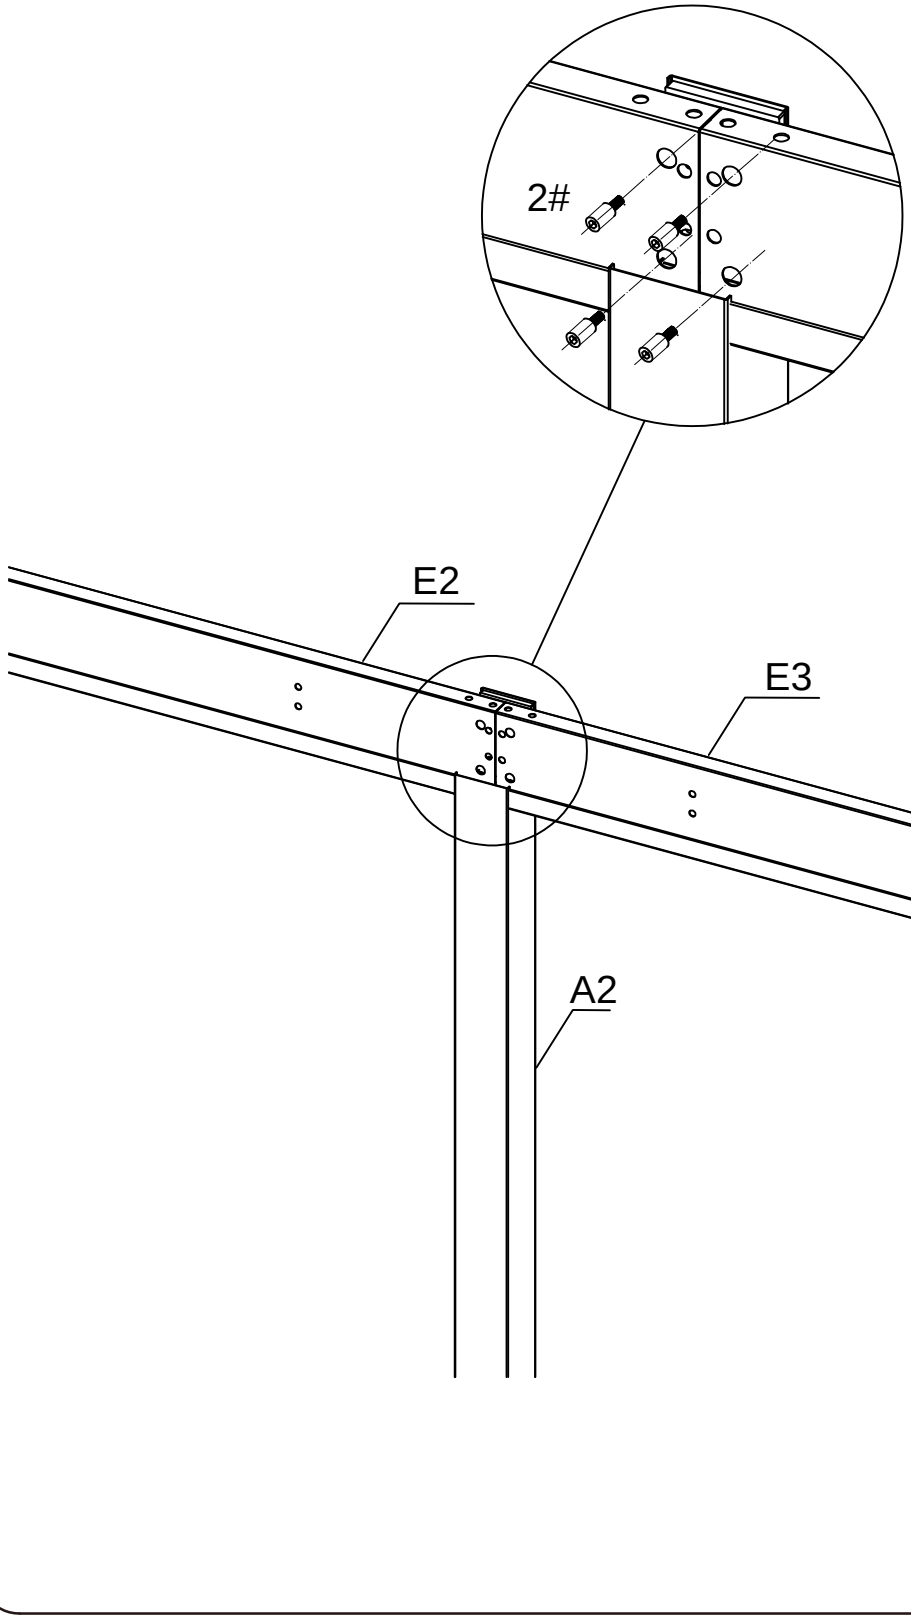


ASSEMBLY STEP 11



2# x4

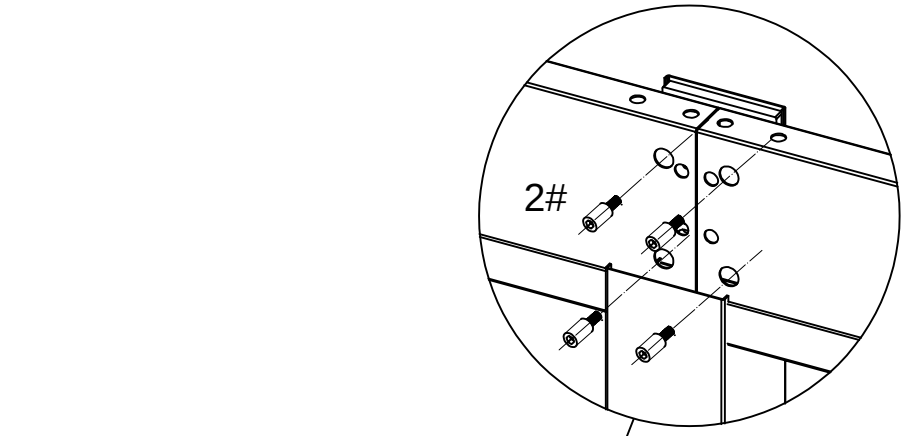


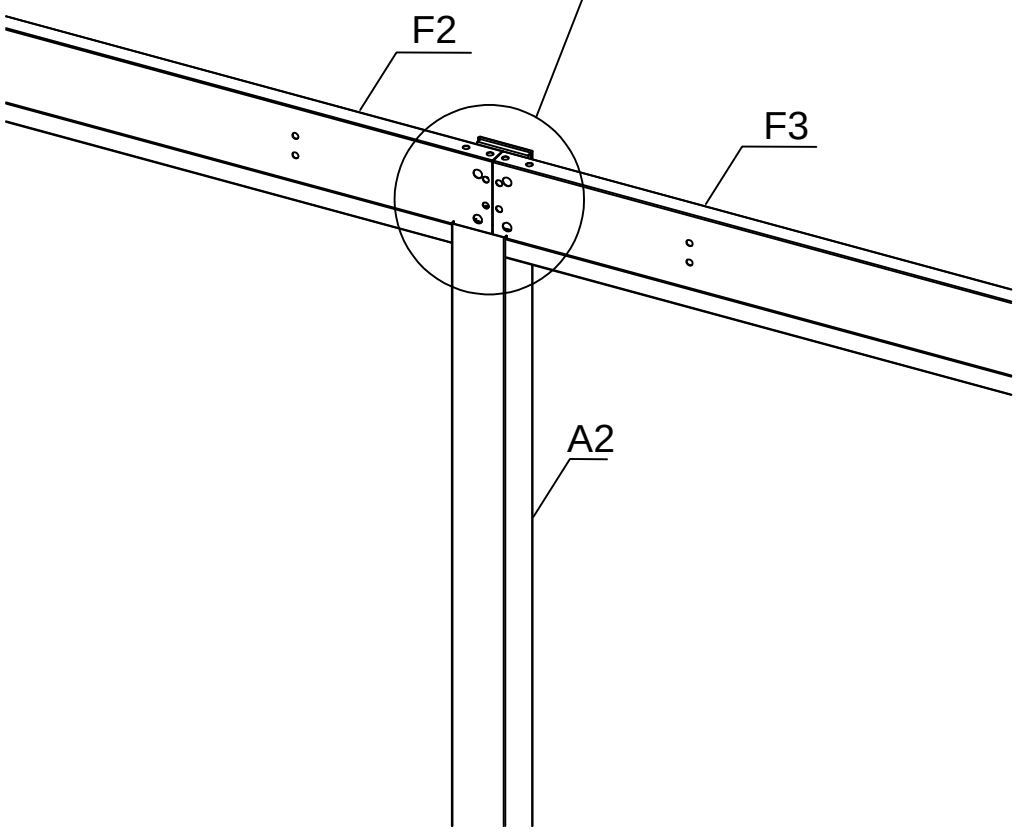

ASSEMBLY STEP 12




N x2




2# x12




7# x8

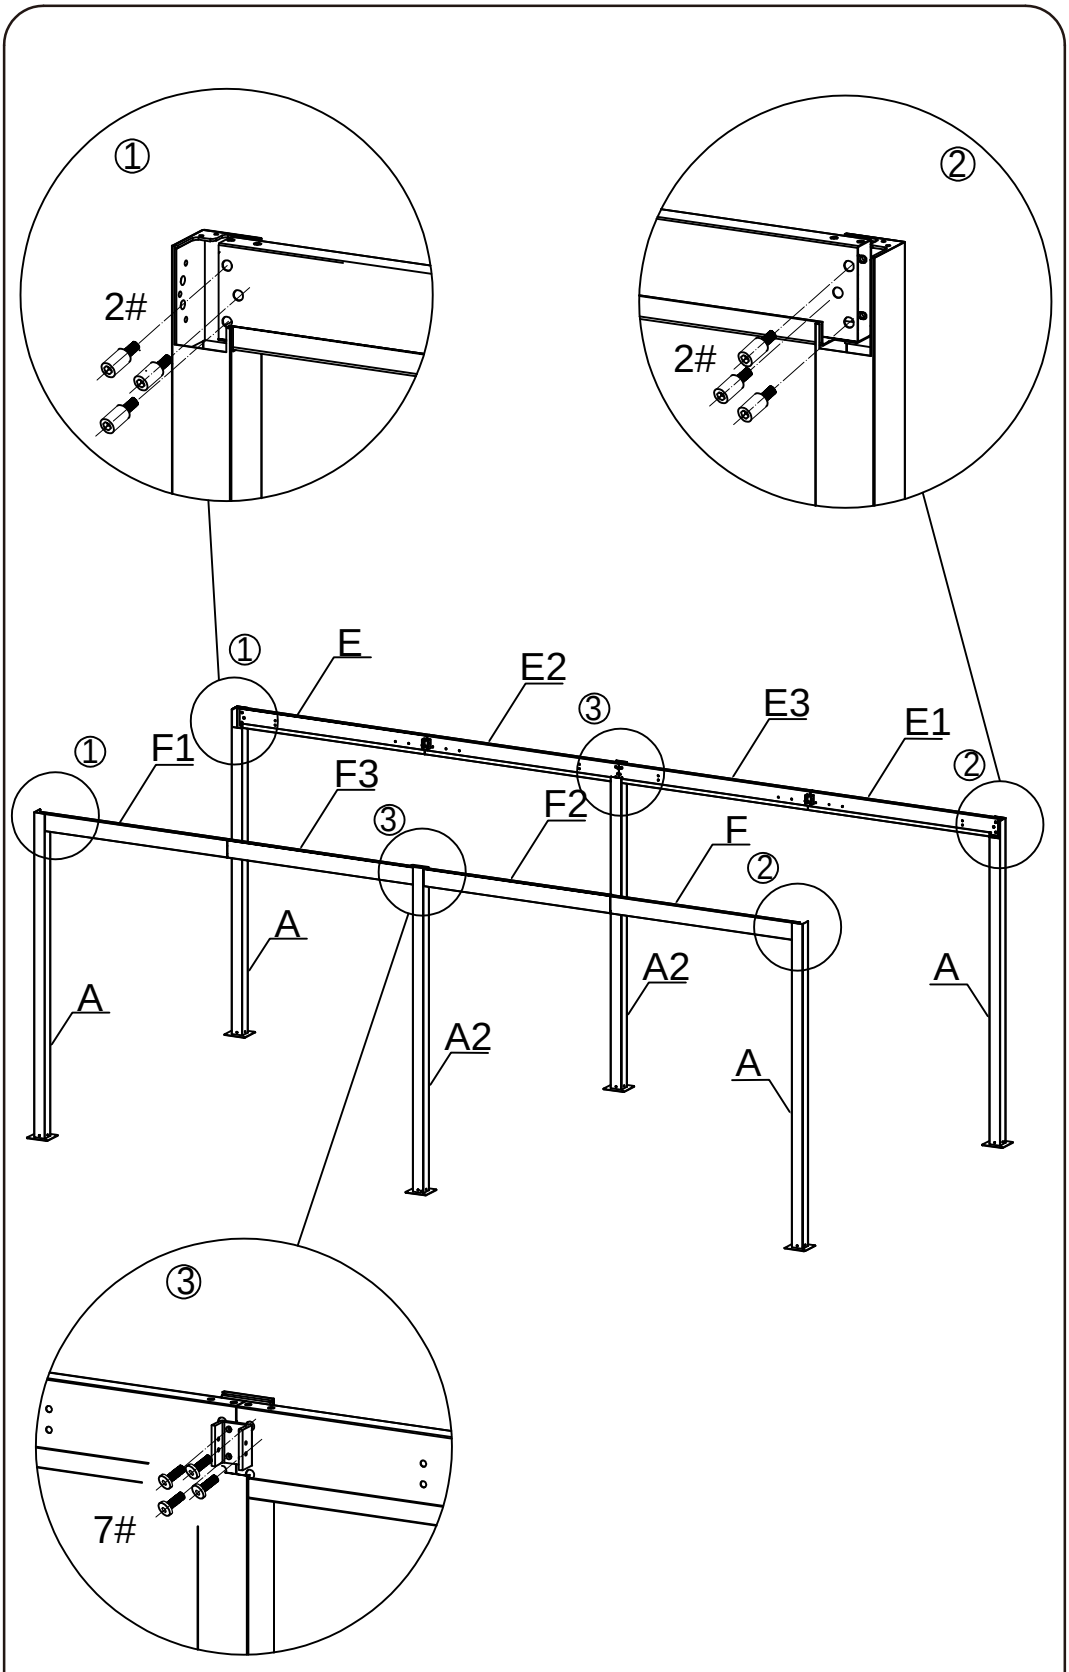


ASSEMBLY STEP 13




2# x12

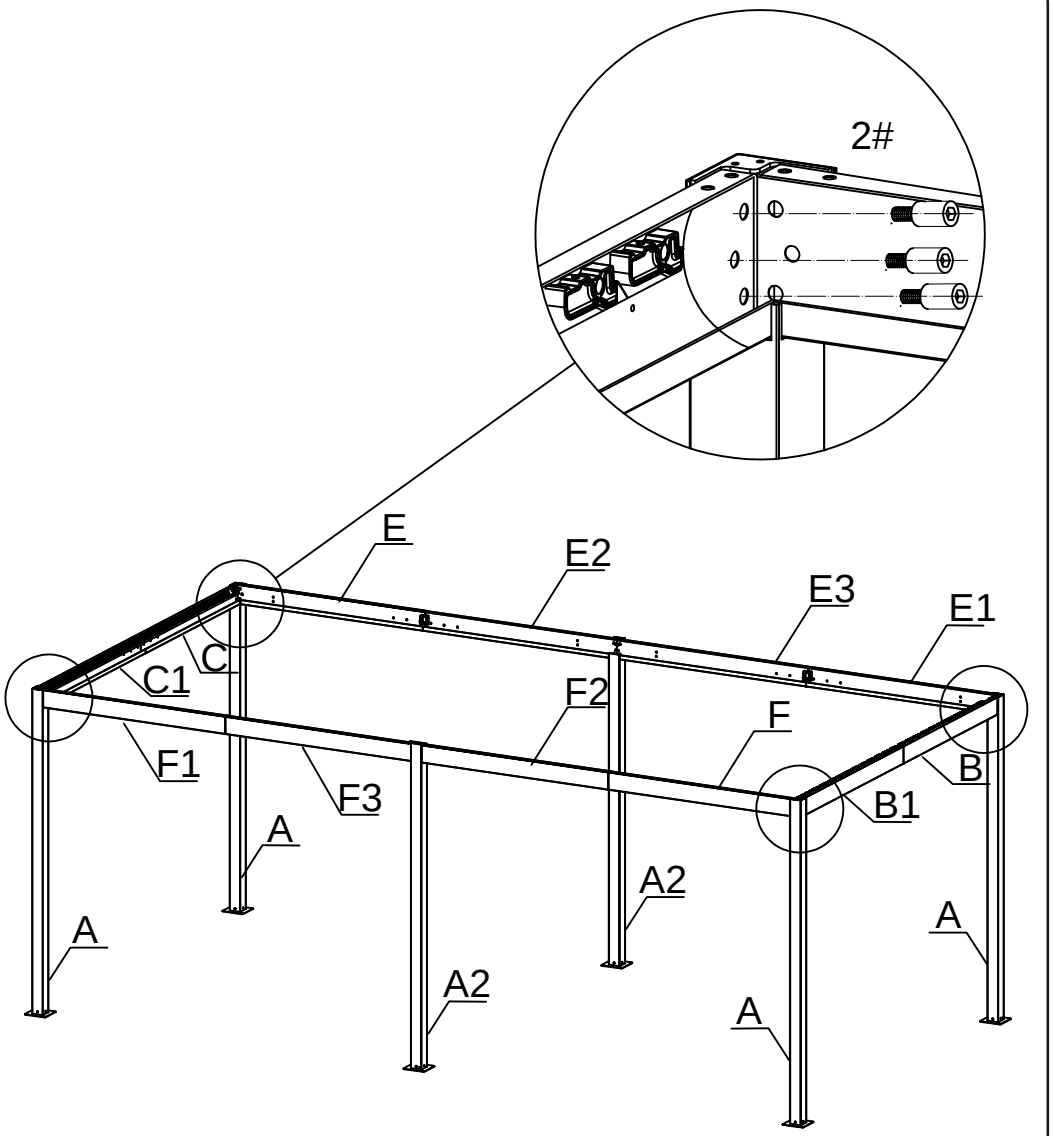

ASSEMBLY STEP 14




R x1

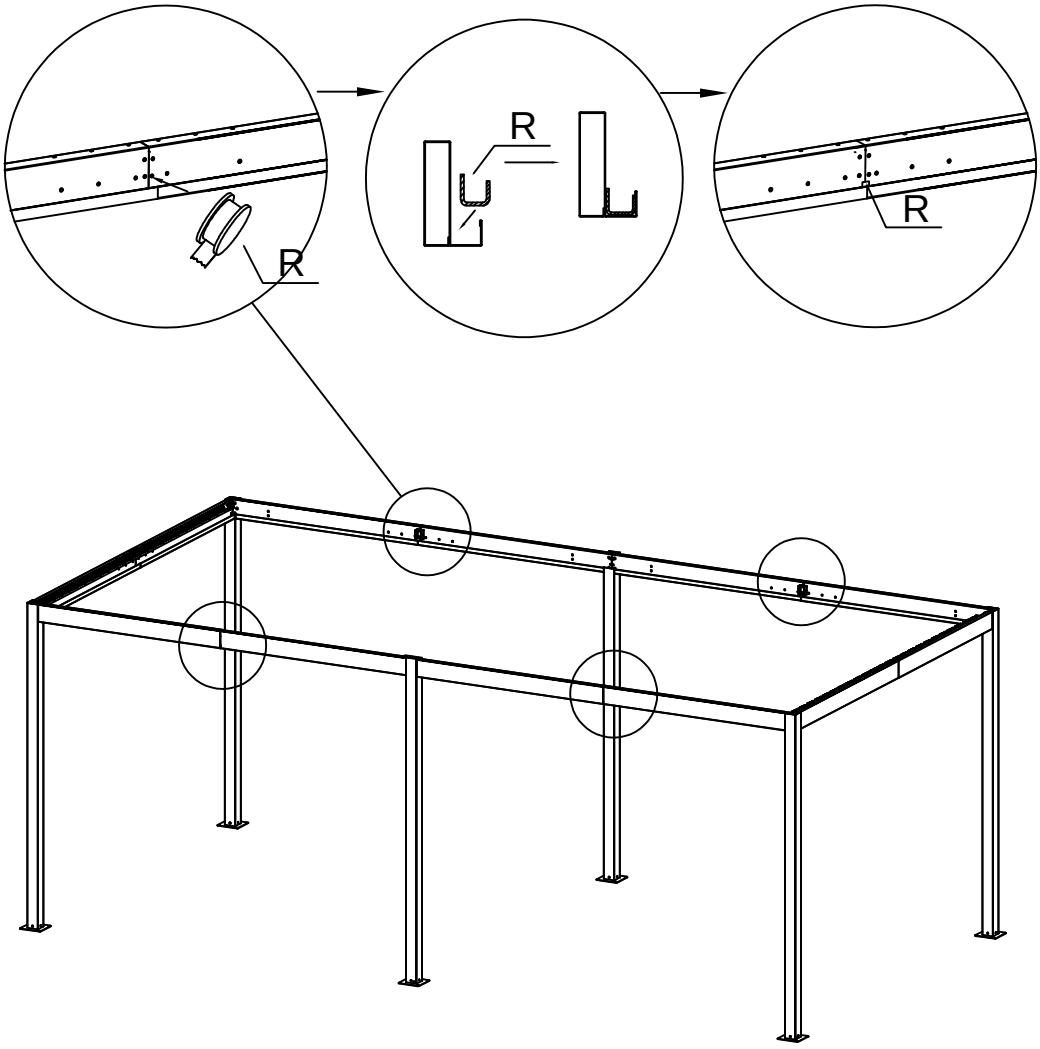


Tips：Apply waterproof tape along the groove seams of the cross beam connectors to prevent leaks, being careful not to cover the screw holes.

ASSEMBLY STEP 15



1# x24

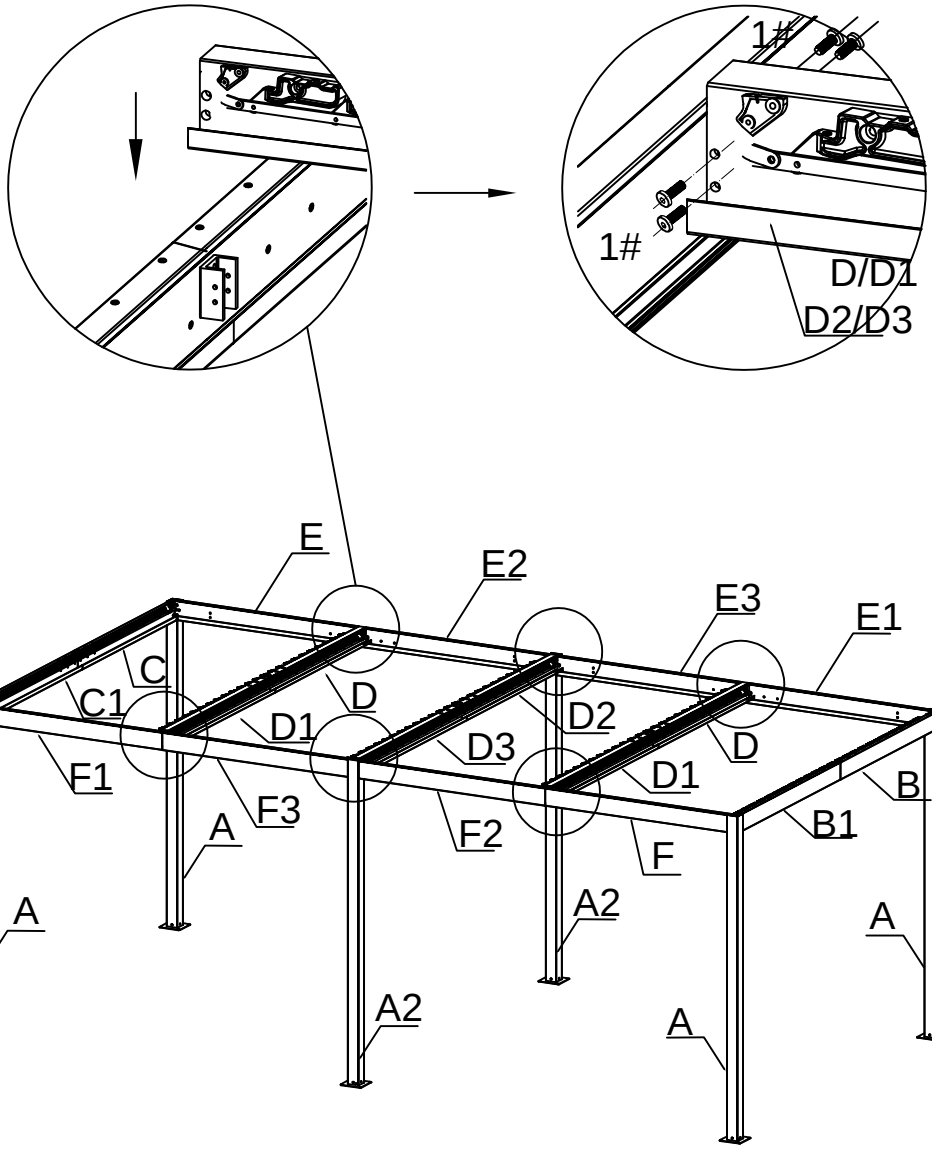

ASSEMBLY STEP 16




N1 x4




N2 x2




1# x32

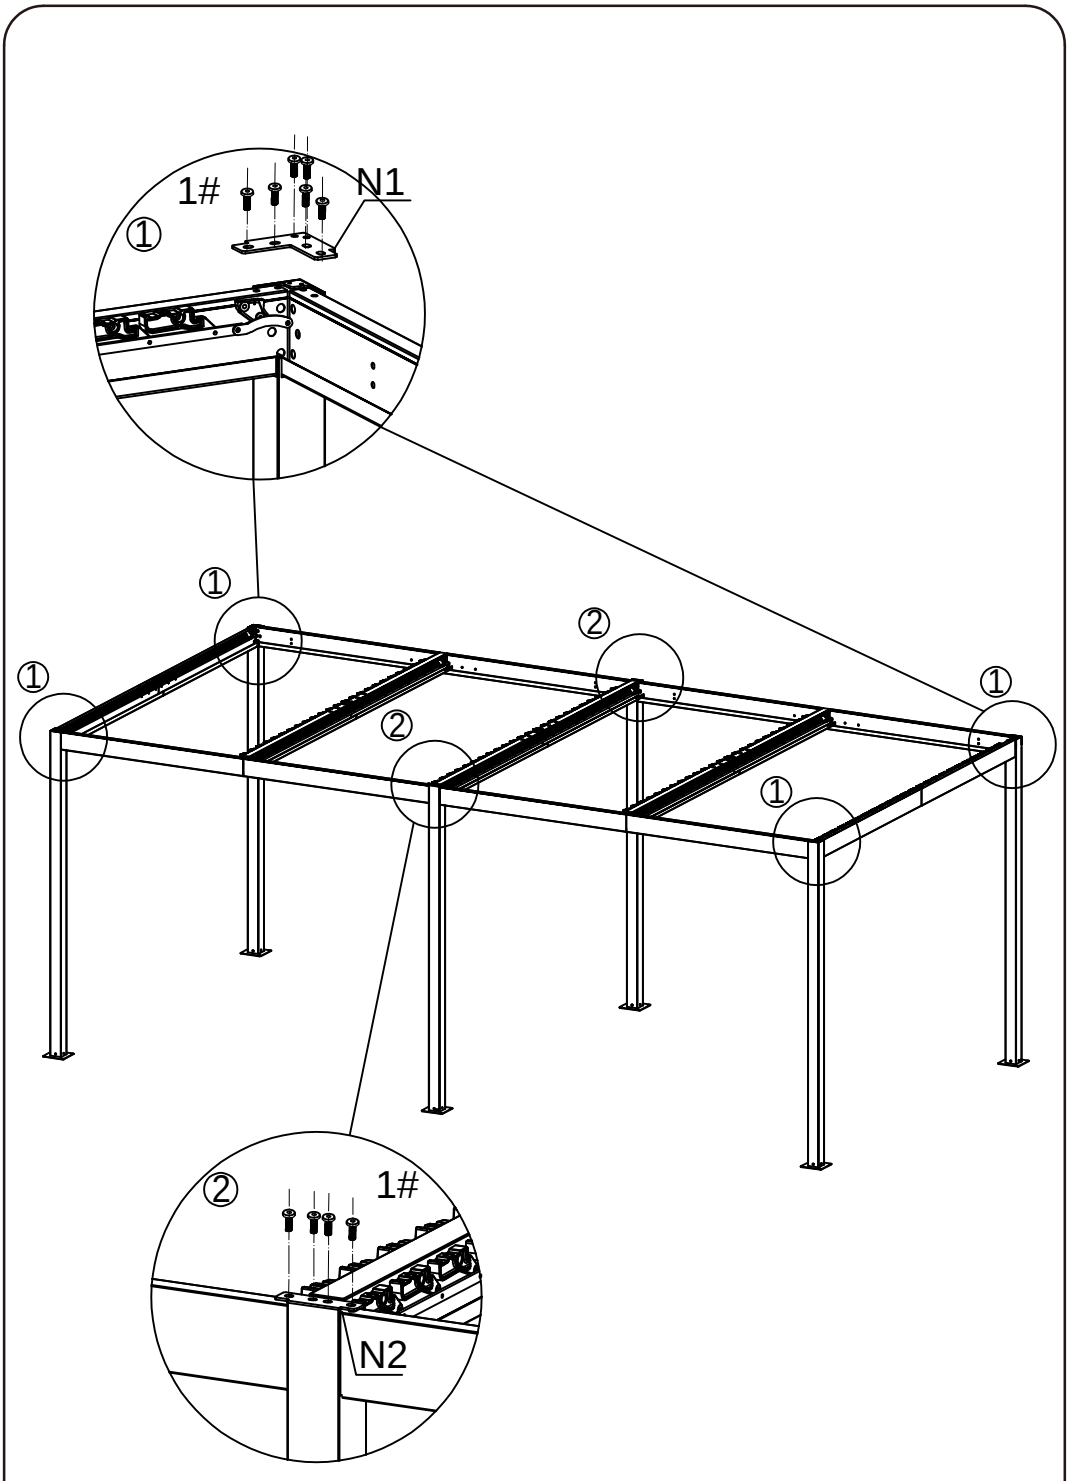

ASSEMBLY STEP 17




R x1

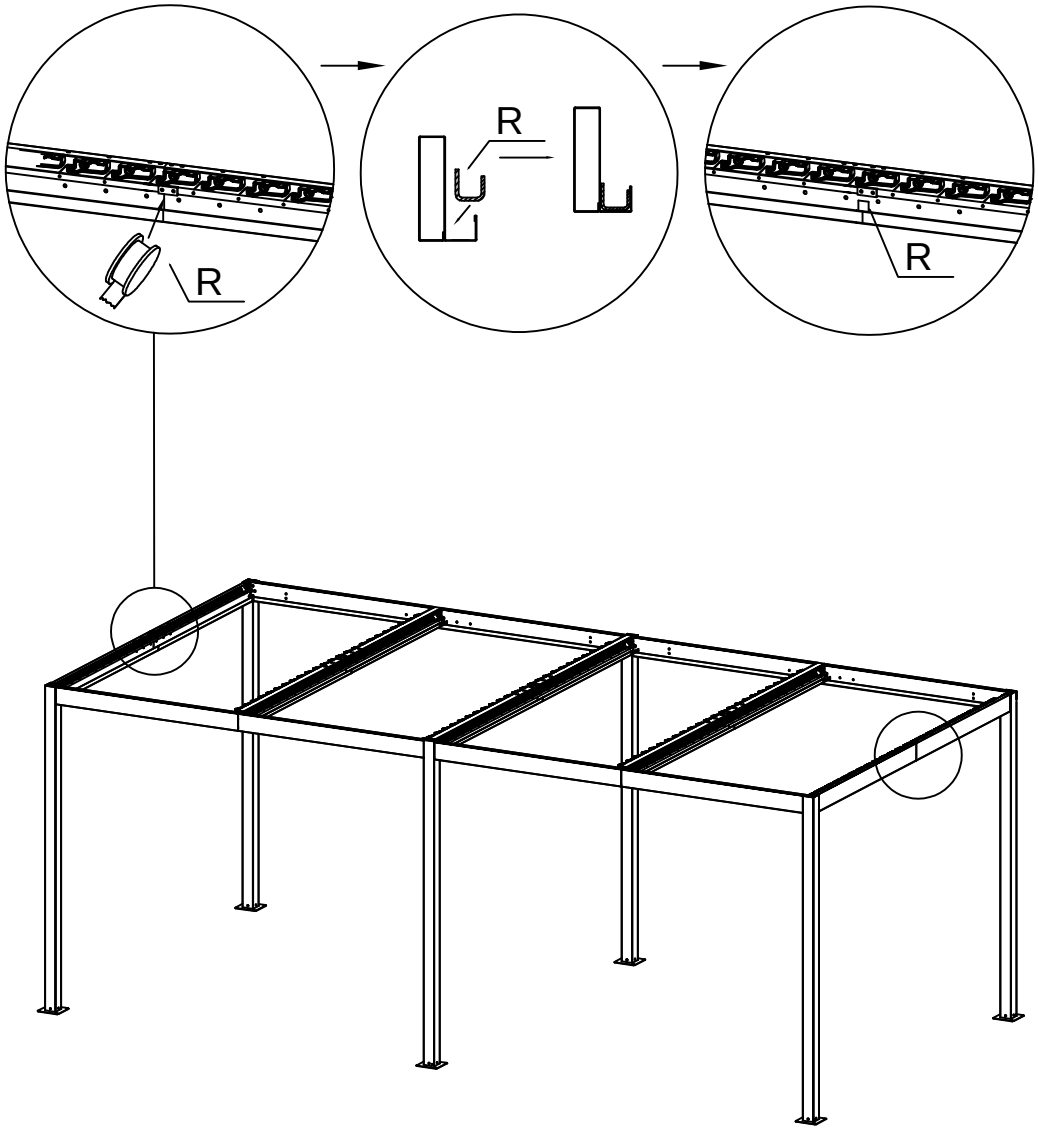

Tips：Apply waterproof tape along the groove seams of the cross beam connectors to prevent leaks, being careful not to cover the screw holes.

ASSEMBLY STEP 18




R x1



R1 x3



R2 x3

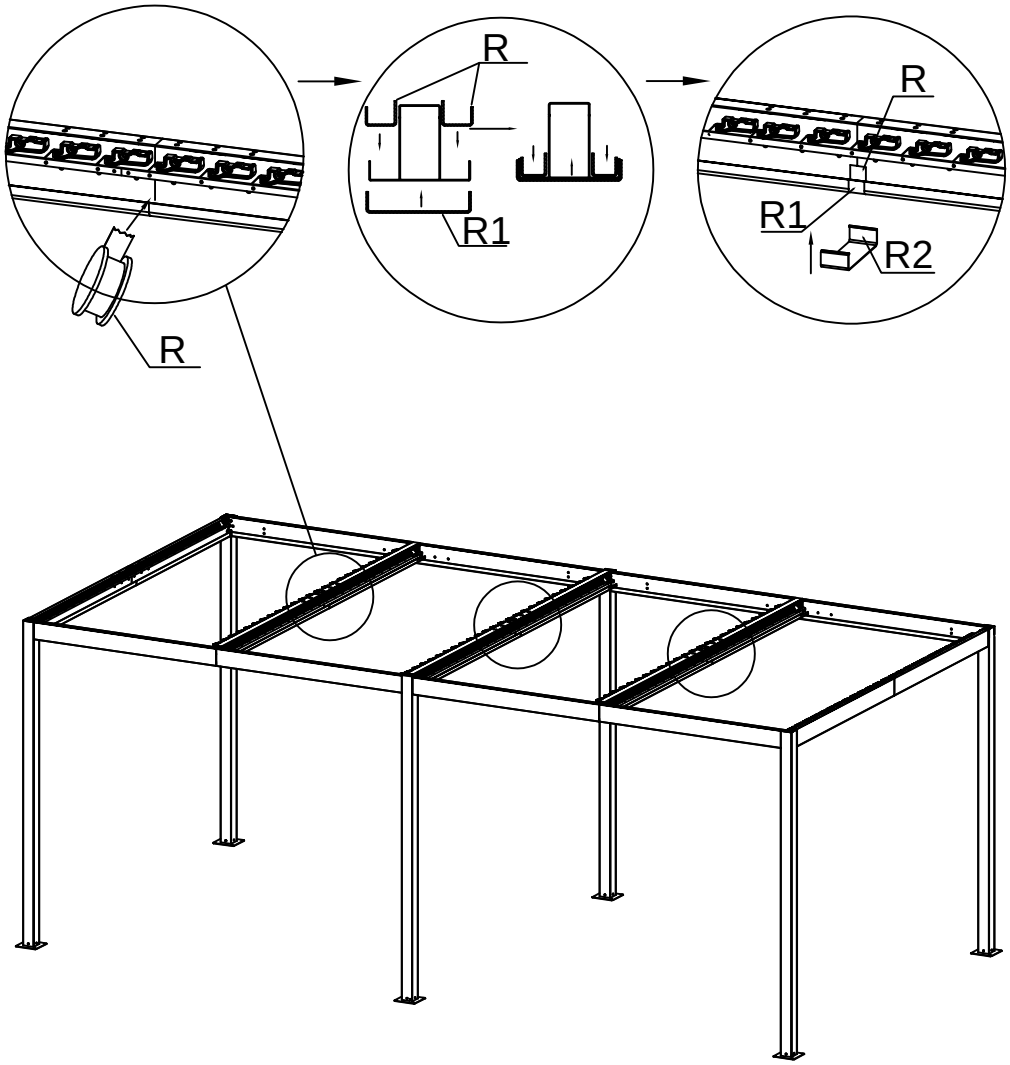


Tips：Apply waterproof tape along the groove seams of the cross beam connectors to prevent leaks, being careful not to cover the screw holes.


ASSEMBLY STEP 19



V x2



1# x16

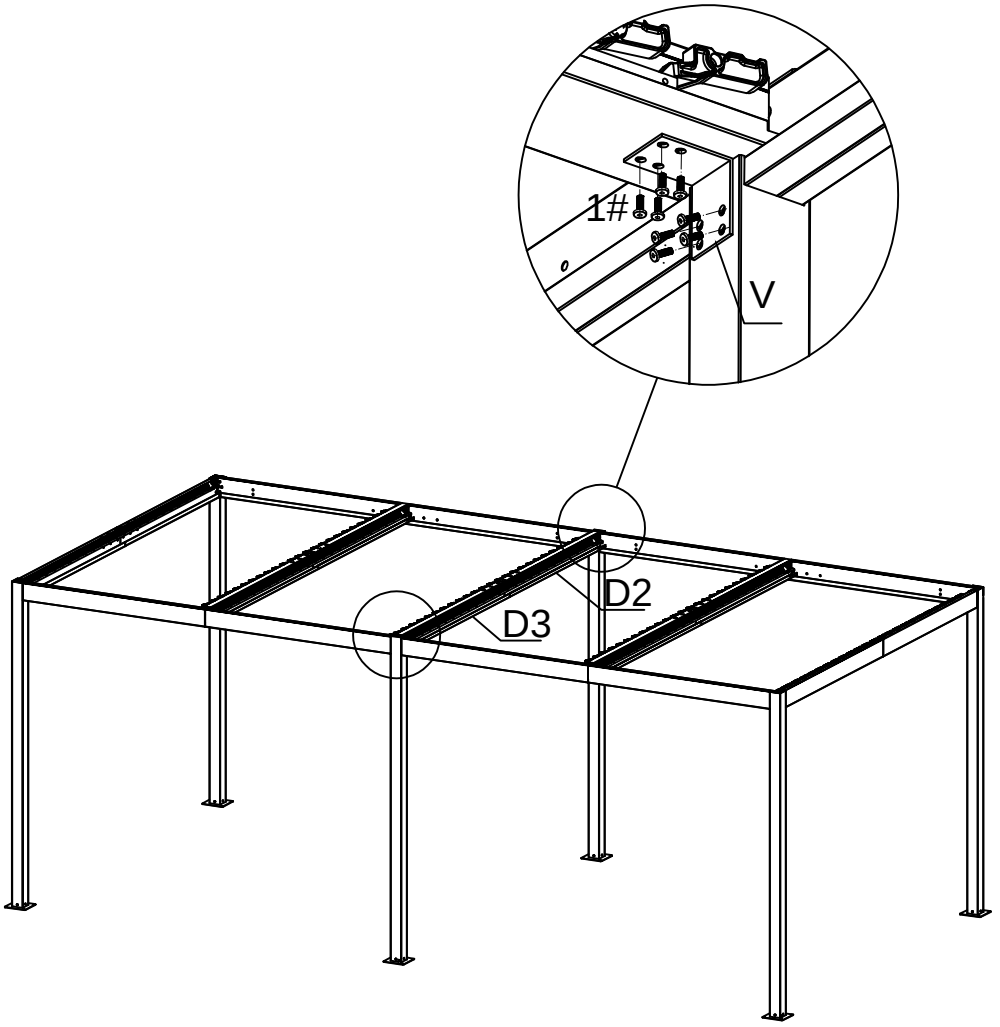


ASSEMBLY STEP 20



M1 x4




M2 x4




K x4



L x4



I-1 x4




I-2 x4




5# x8




6# x8

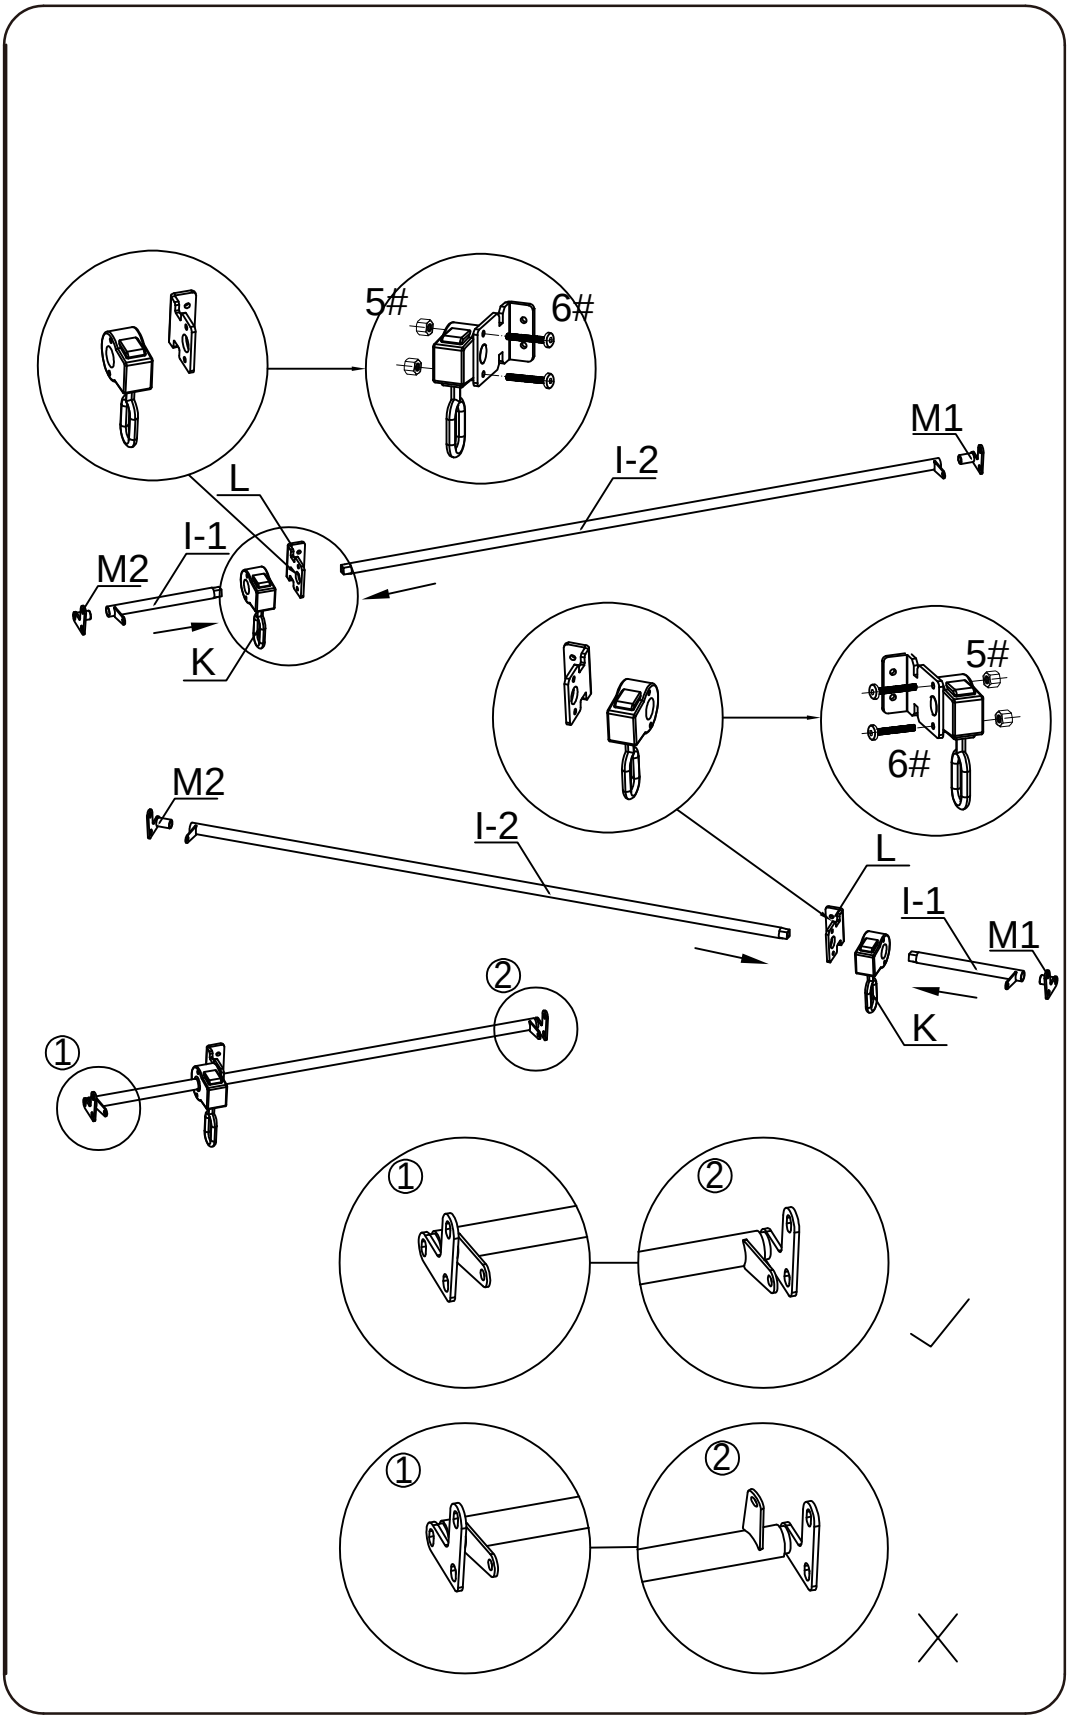

ASSEMBLY STEP 21



1# x8

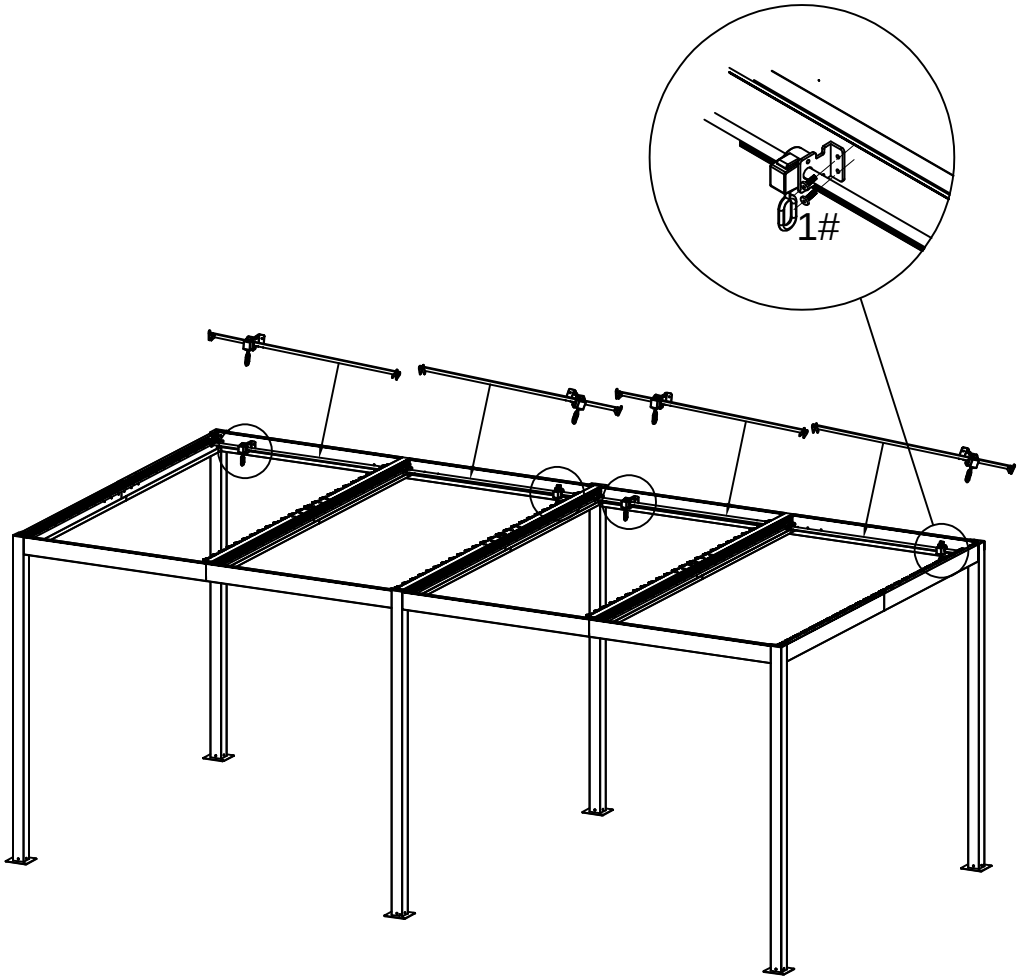


ASSEMBLY STEP 22



7# x24




5# x8

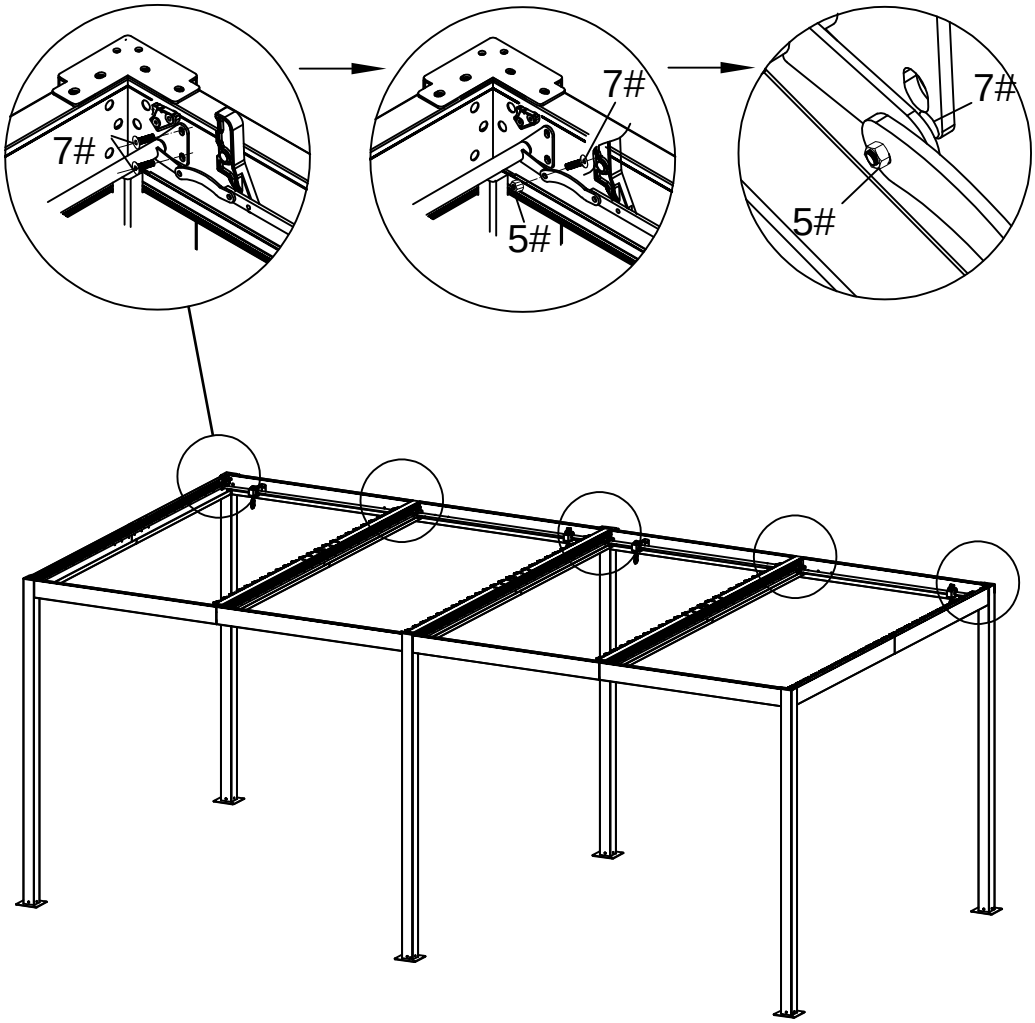

ASSEMBLY STEP 23




H x120




J x2



3# x480

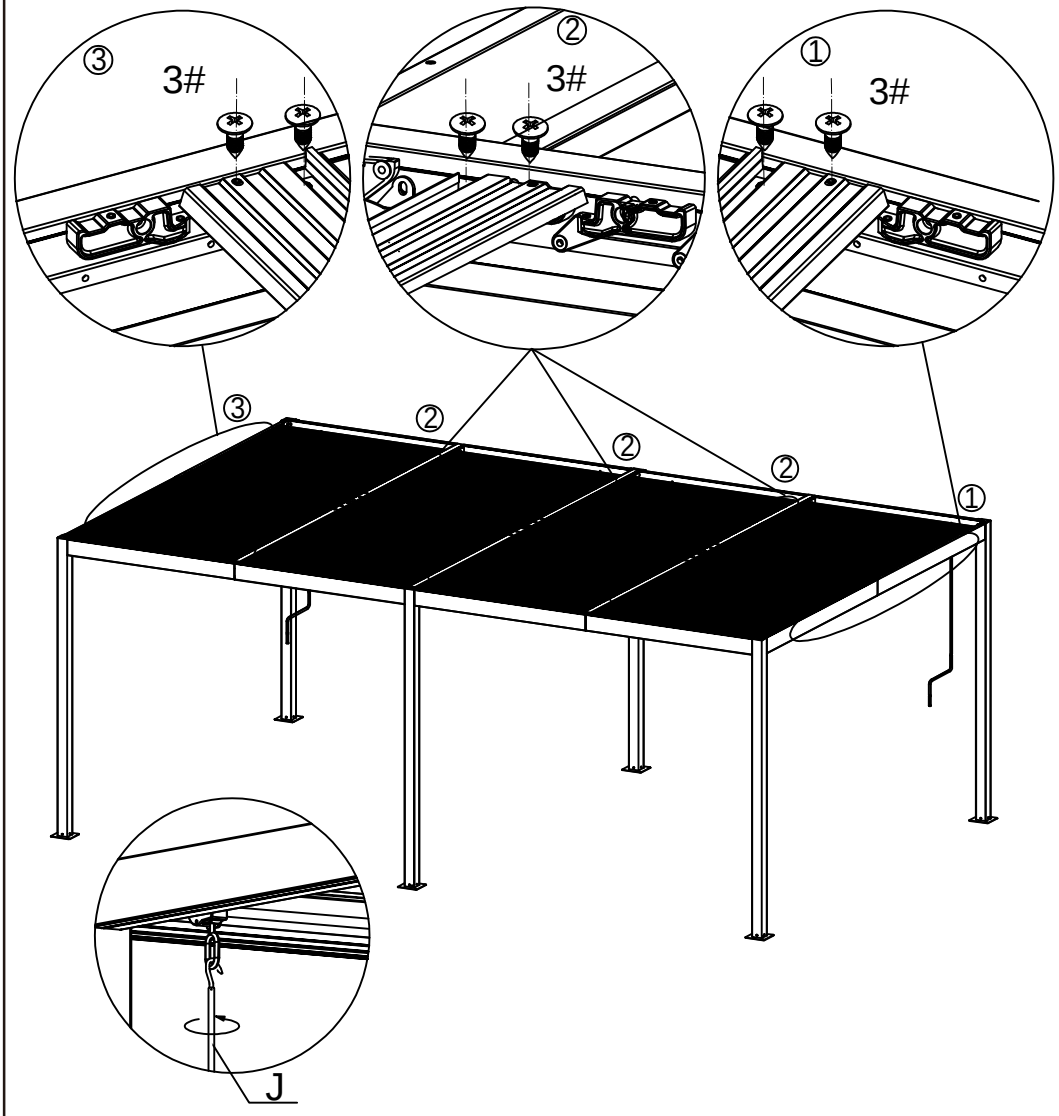


ASSEMBLY STEP 24




G x4



4# x8




9# x24

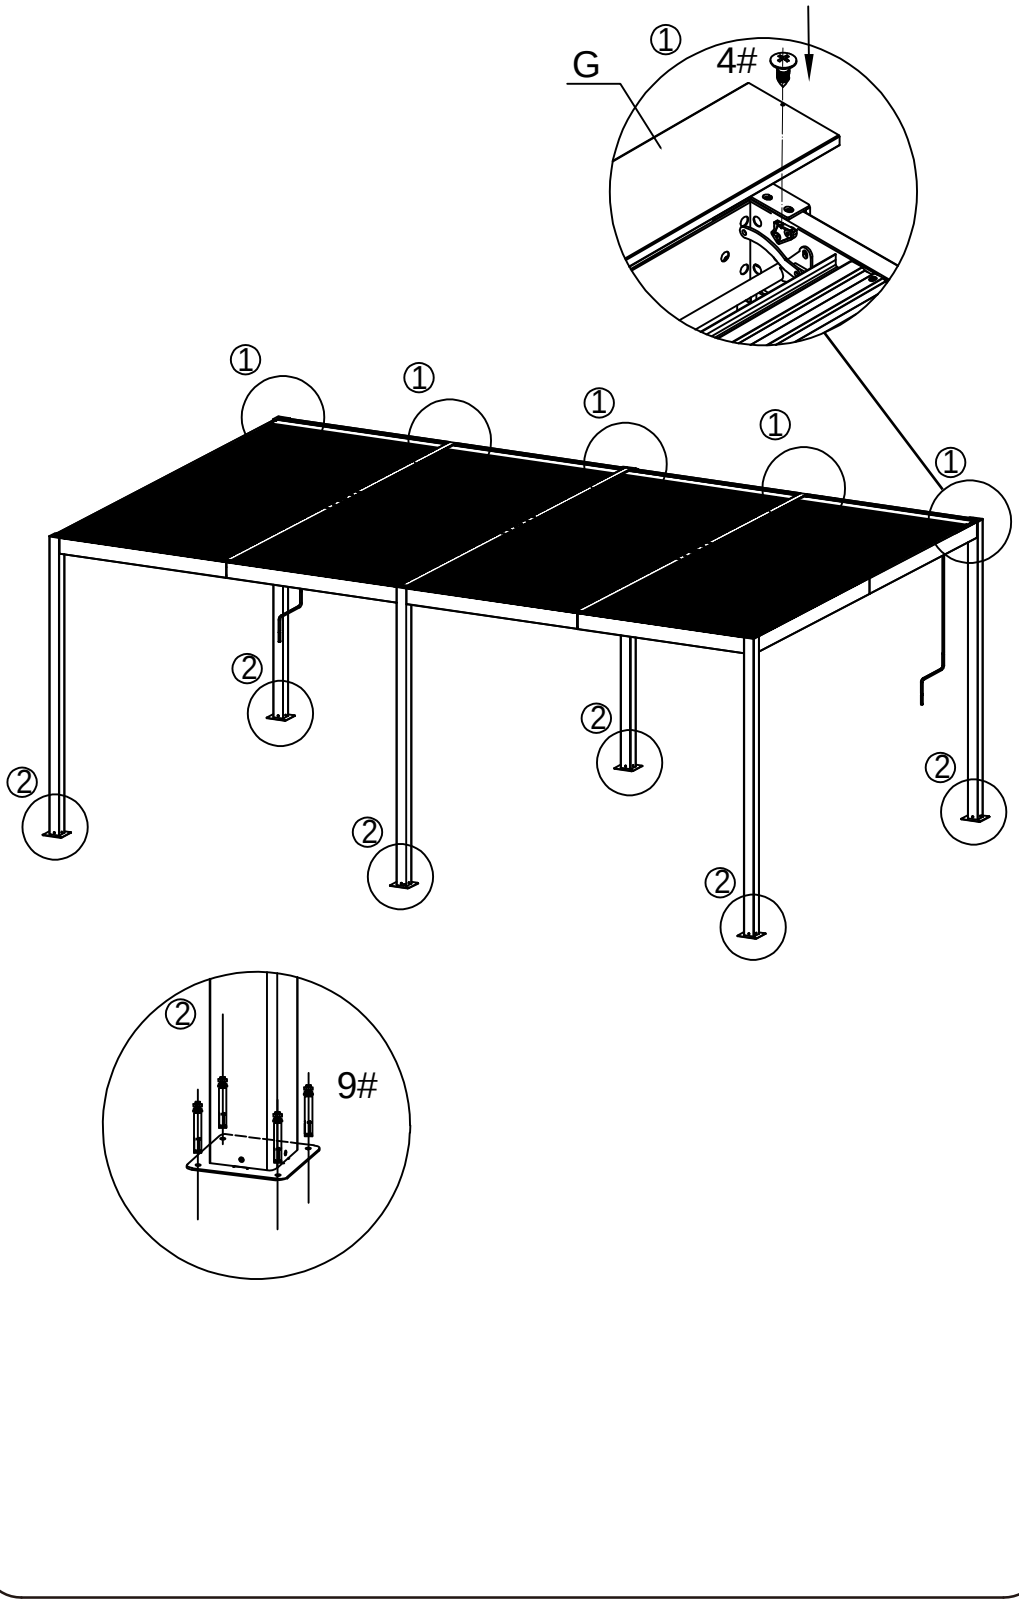


ASSEMBLY STEP 25





T x144





T1 x12

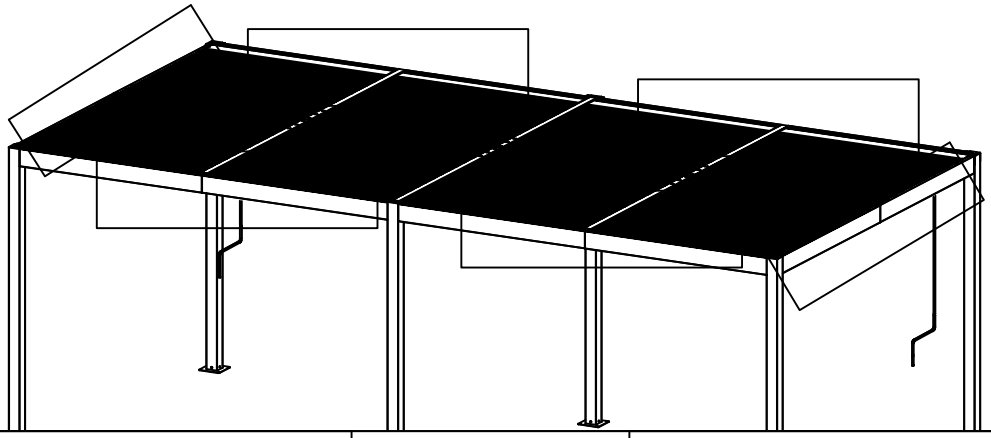

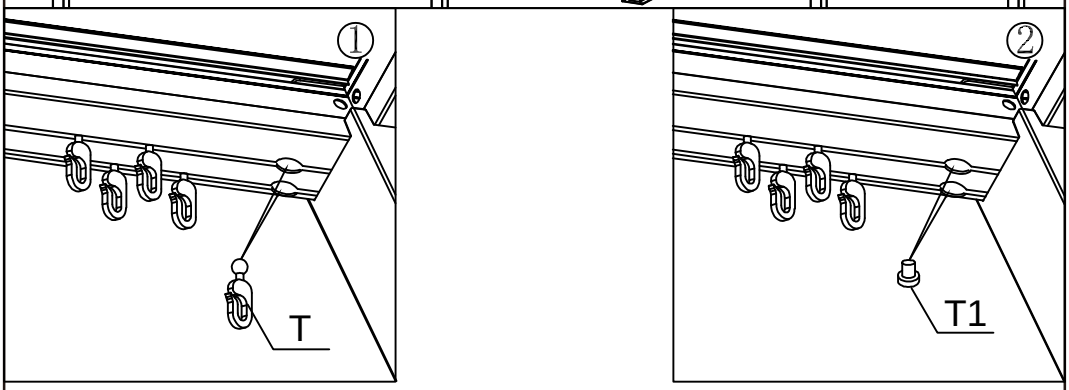


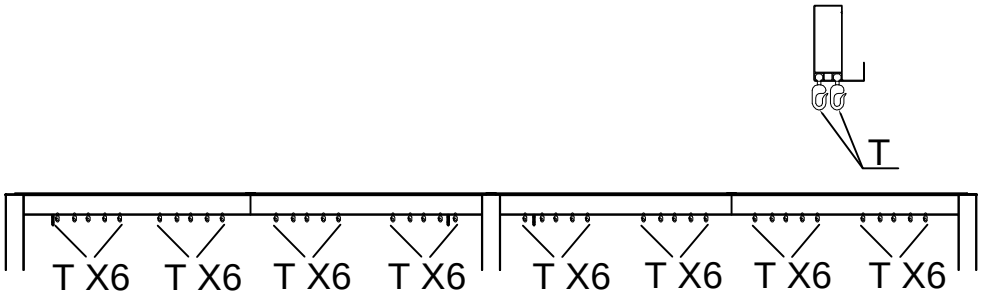

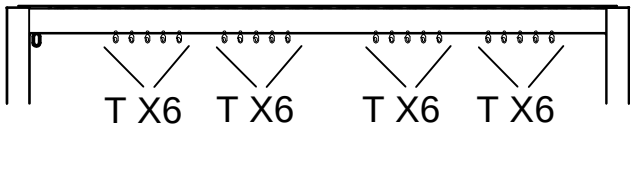





ASSEMBLY STEP 26




S x4




Y x4





S1 x2




Y1 x2

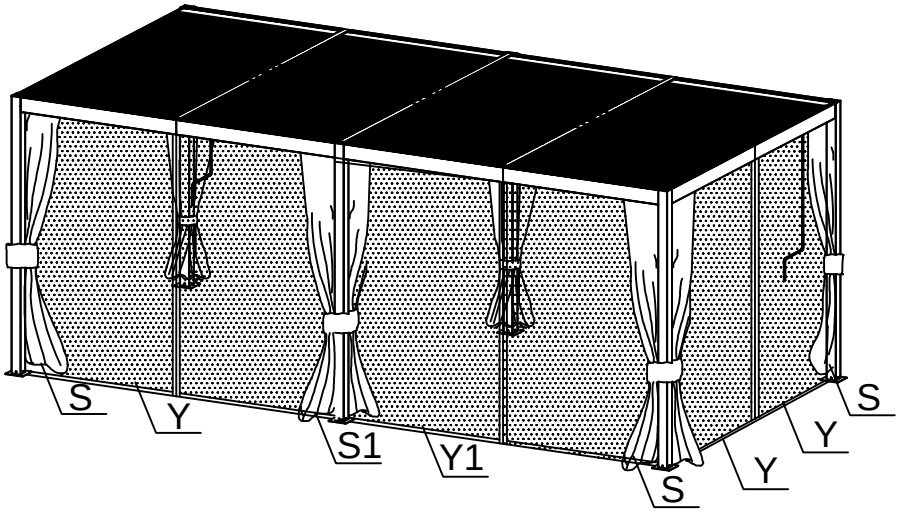

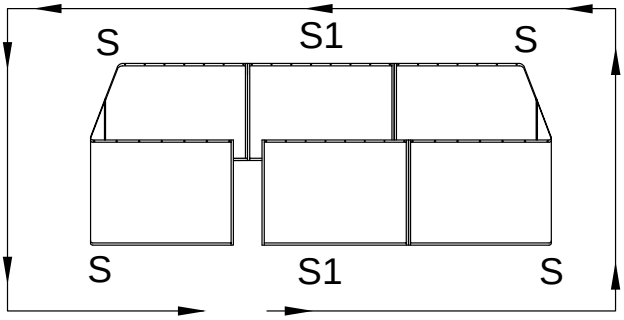

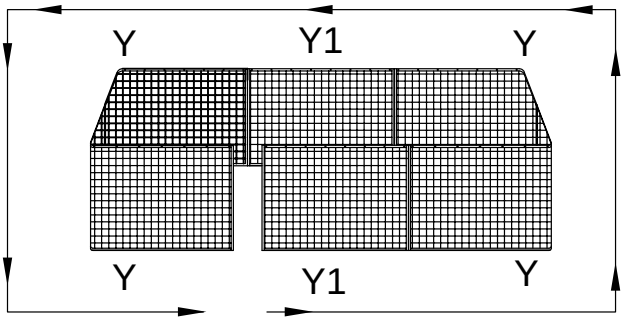

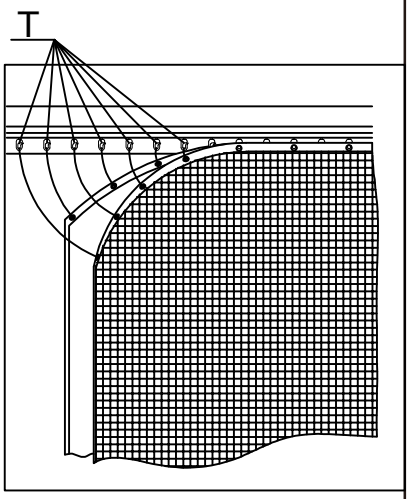

Unzip only one zipper ! Do not unzip all four zippers !

INSTALLATION SUCCESSFUL

