

Step 1: Prepare all the tools and materials you need.

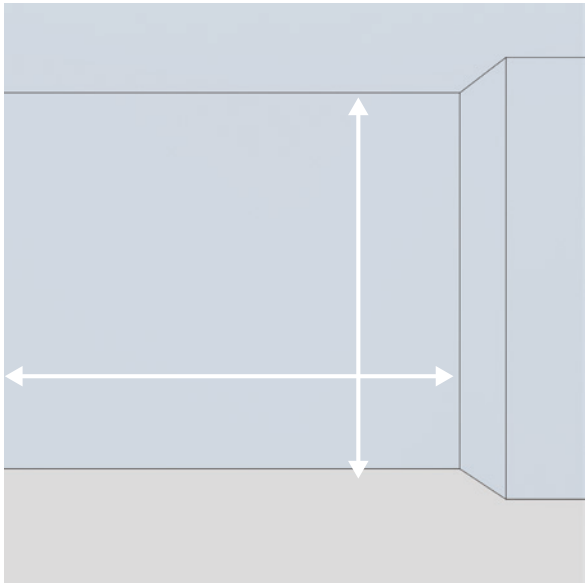

Step 2: Measure the height of the wall.

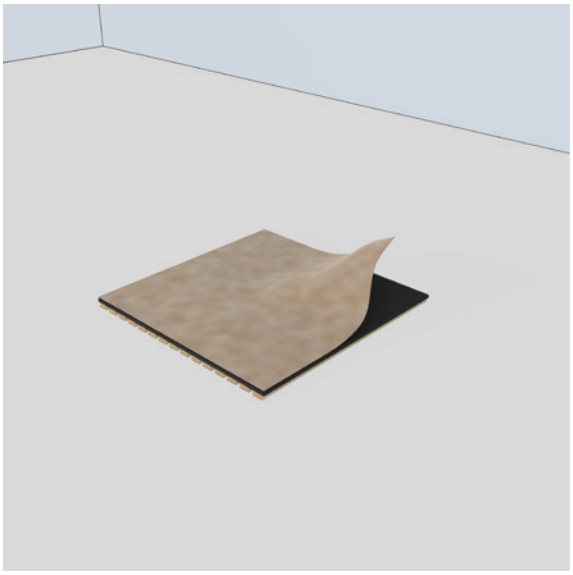

Step 3: Peel off the adhesive backing of the wall panel.

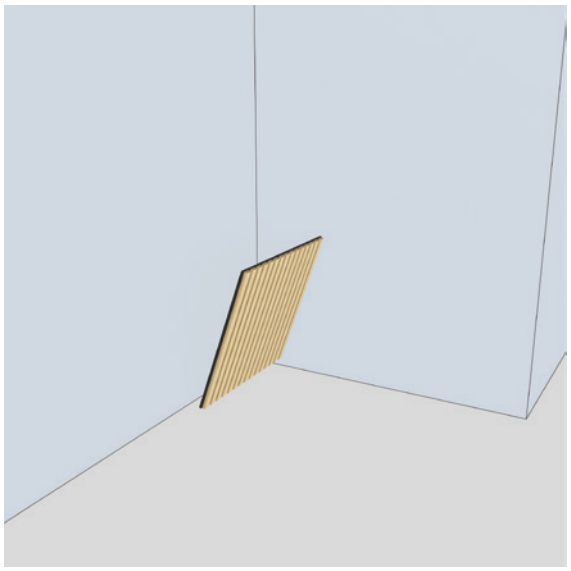

Step 4:Stick the wall panel onto the wall surface。

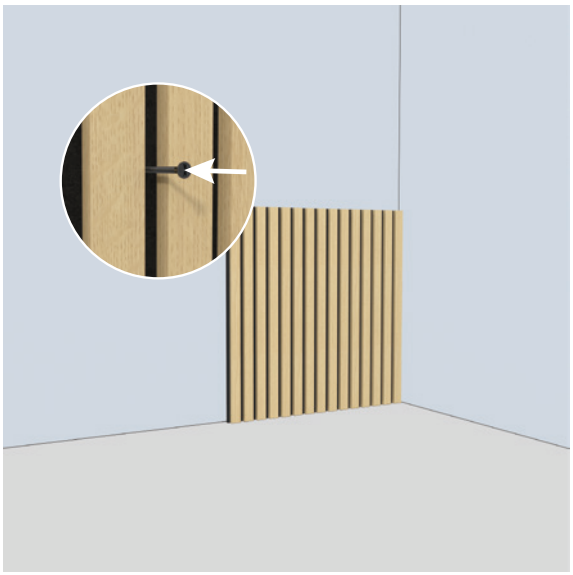

Step 5: Nail the wall panel.

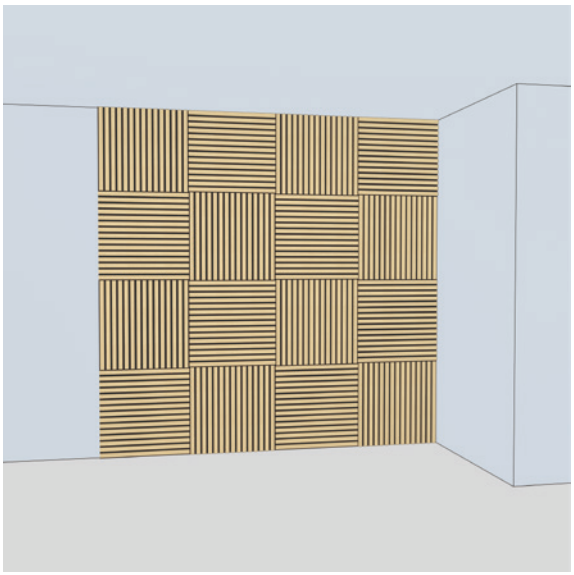

Step 6: Complete the installation