


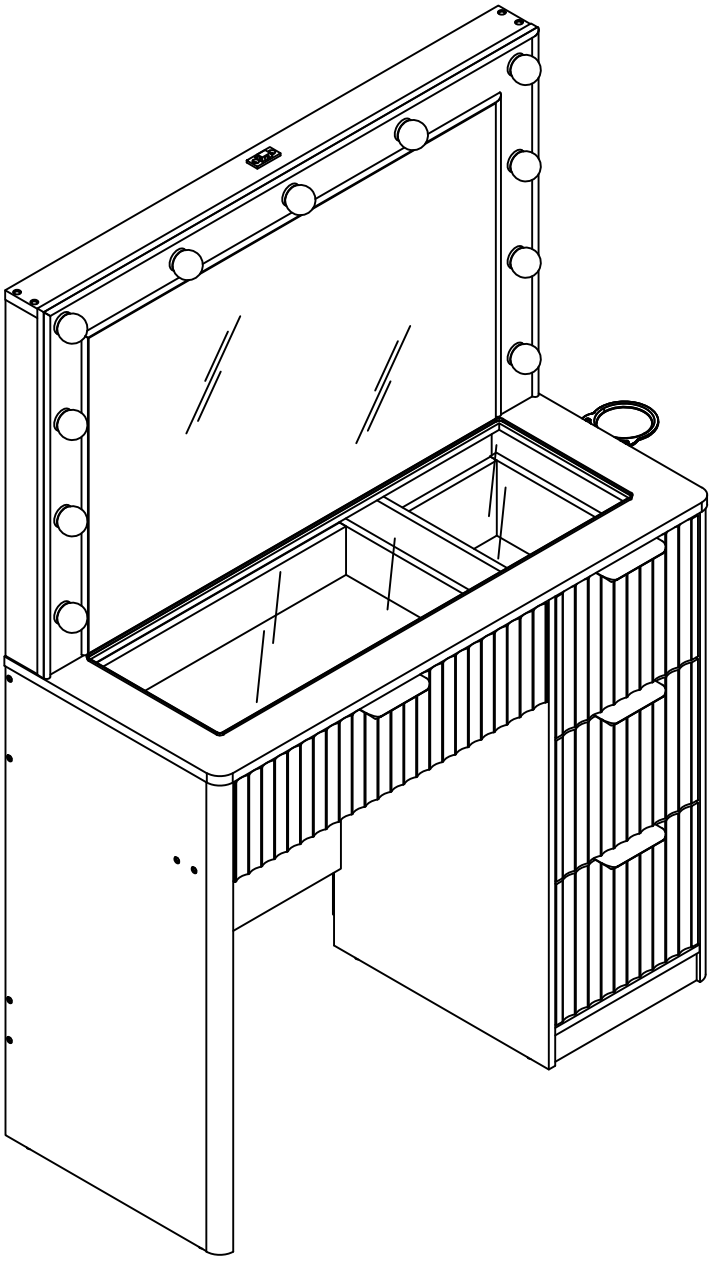


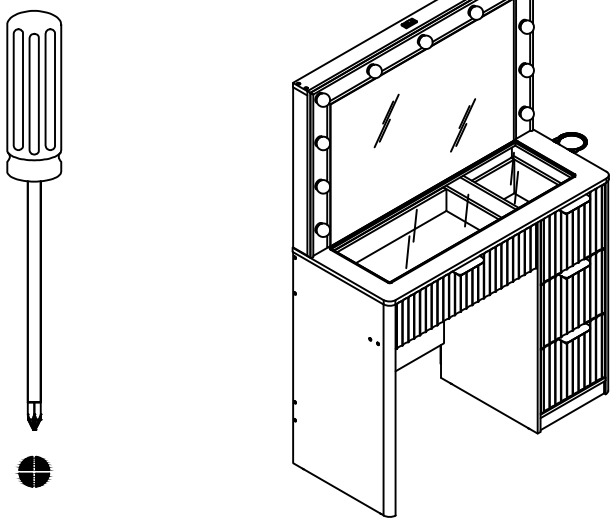

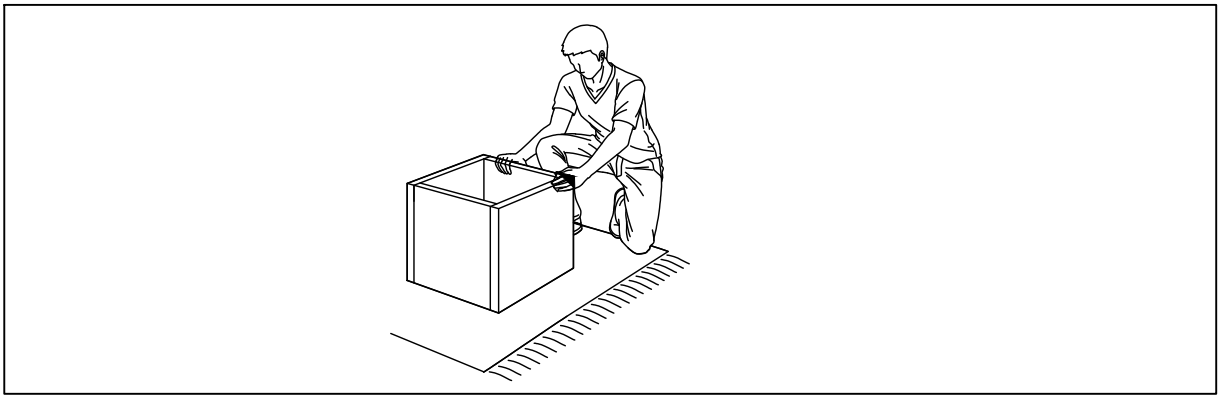


Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

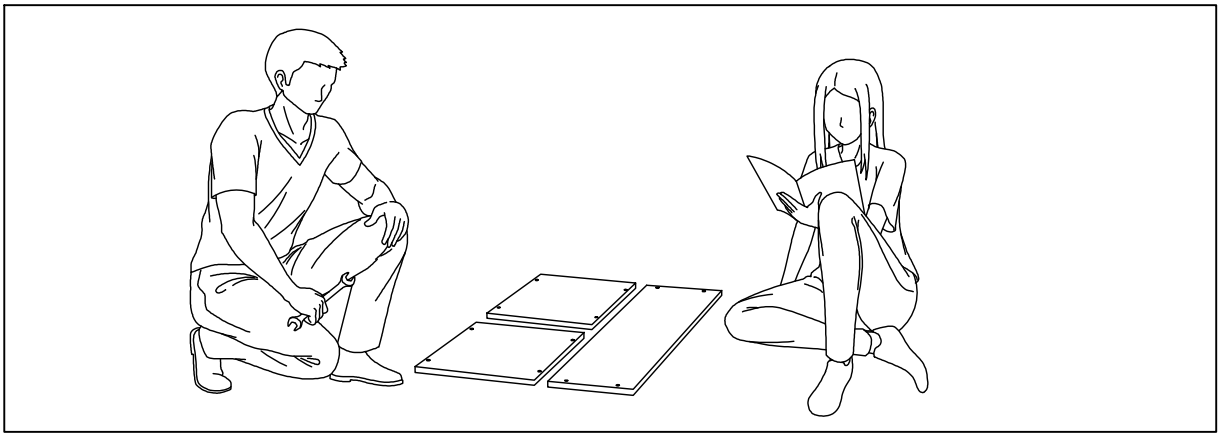


This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.


BOARD IDENTIFICATION

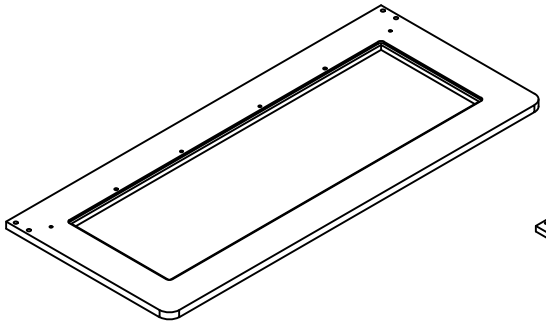


① (91.9X40X1.5cm) X1

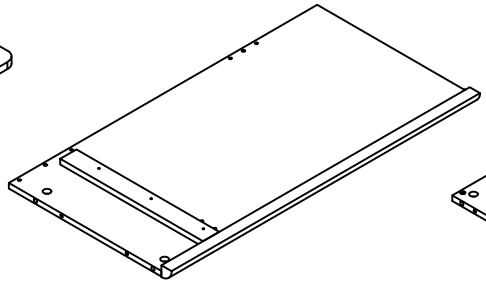


② (75.6X39.9X2.5cm) X1

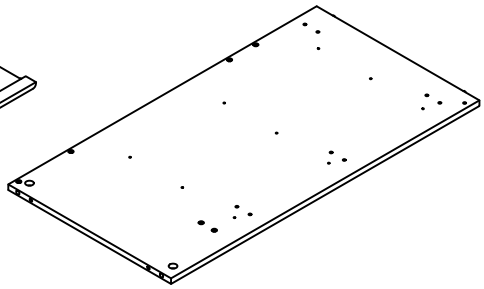


③ (75.6X39.9X1.2cm) X1

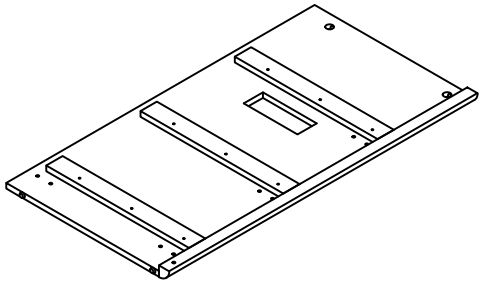


④ (75.6X39.9X2.5cm) X1

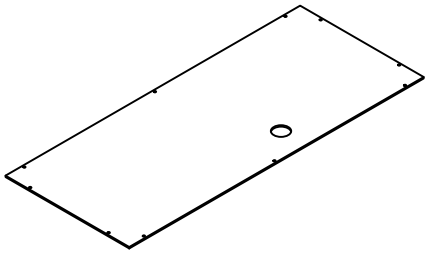


⑤(72.2X30.3X0.3cm) X1




⑥ (28.1X6X1.2cm) X2




⑦ (28.1X9.2X1.2cm) X1




⑧(26.9X4.8X1.2cm) X1




⑨ (28.1X8X1.2cm) X1

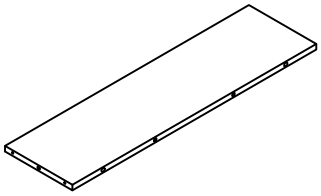

⑩ (59.8X16.5X1.2cm) X1

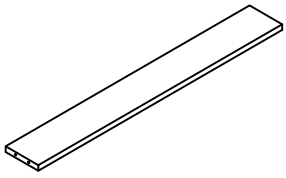


⑪ (59.8X8X1.2cm) X1

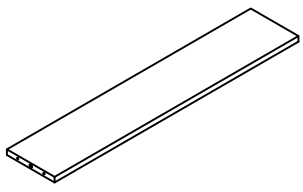


⑫ (59.8X11.7X1.2cm) X1


BOARD IDENTIFICATION

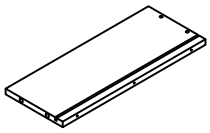


⑬ (35X14X1.2cm) X3

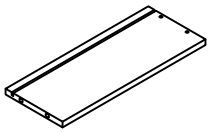


⑭ (35X14X1.2cm) X3

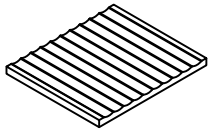


⑮ (22.7X26.3X1.5cm) X3




⑯(22X14X1.2cm) X3

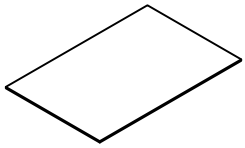


⑰ (23X34.7X0.3cm) X3

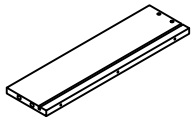


⑱ (35X9.7X1.2cm) X1

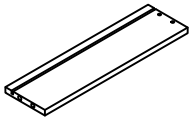


⑲(35X9.7X1.2cm) X1

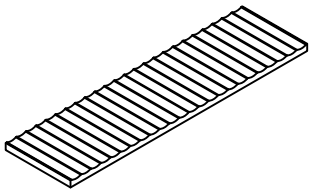


⑳ (15.9X58X1.5cm) X1

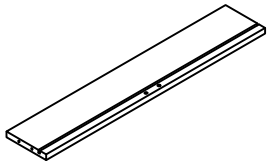


㉑ (53.7X9.7X1.2cm) X1

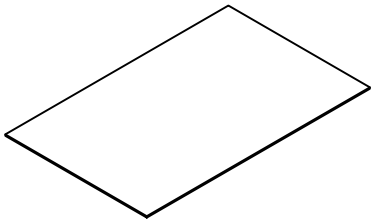

㉒(54.7X34.7X0.3cm) X1




㉓ (33.7X6X1.2cm) X1

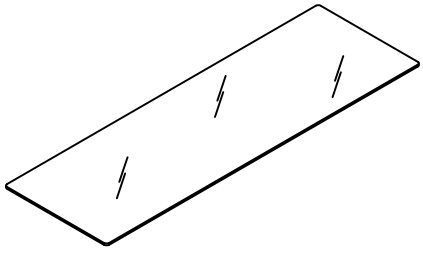


㉔ (76.9X25X0.4cm) X1


BOARD IDENTIFICATION

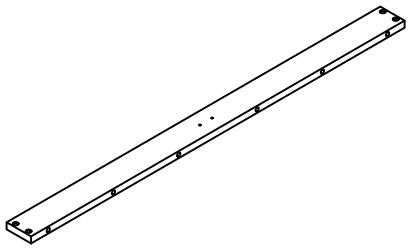

㉕ (91.6X6X1.5cm) X1

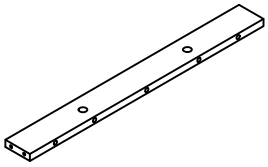


㉖ (57.3X6X1.5cm) X2

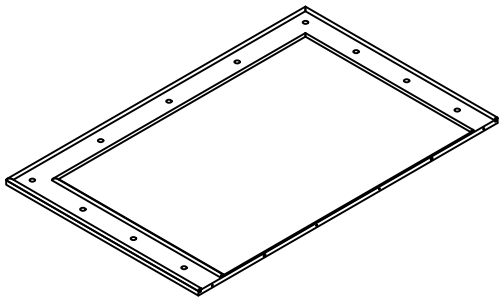


㉗ (58.9X91.7X1.7cm) X1

BOARD IDENTIFICATION

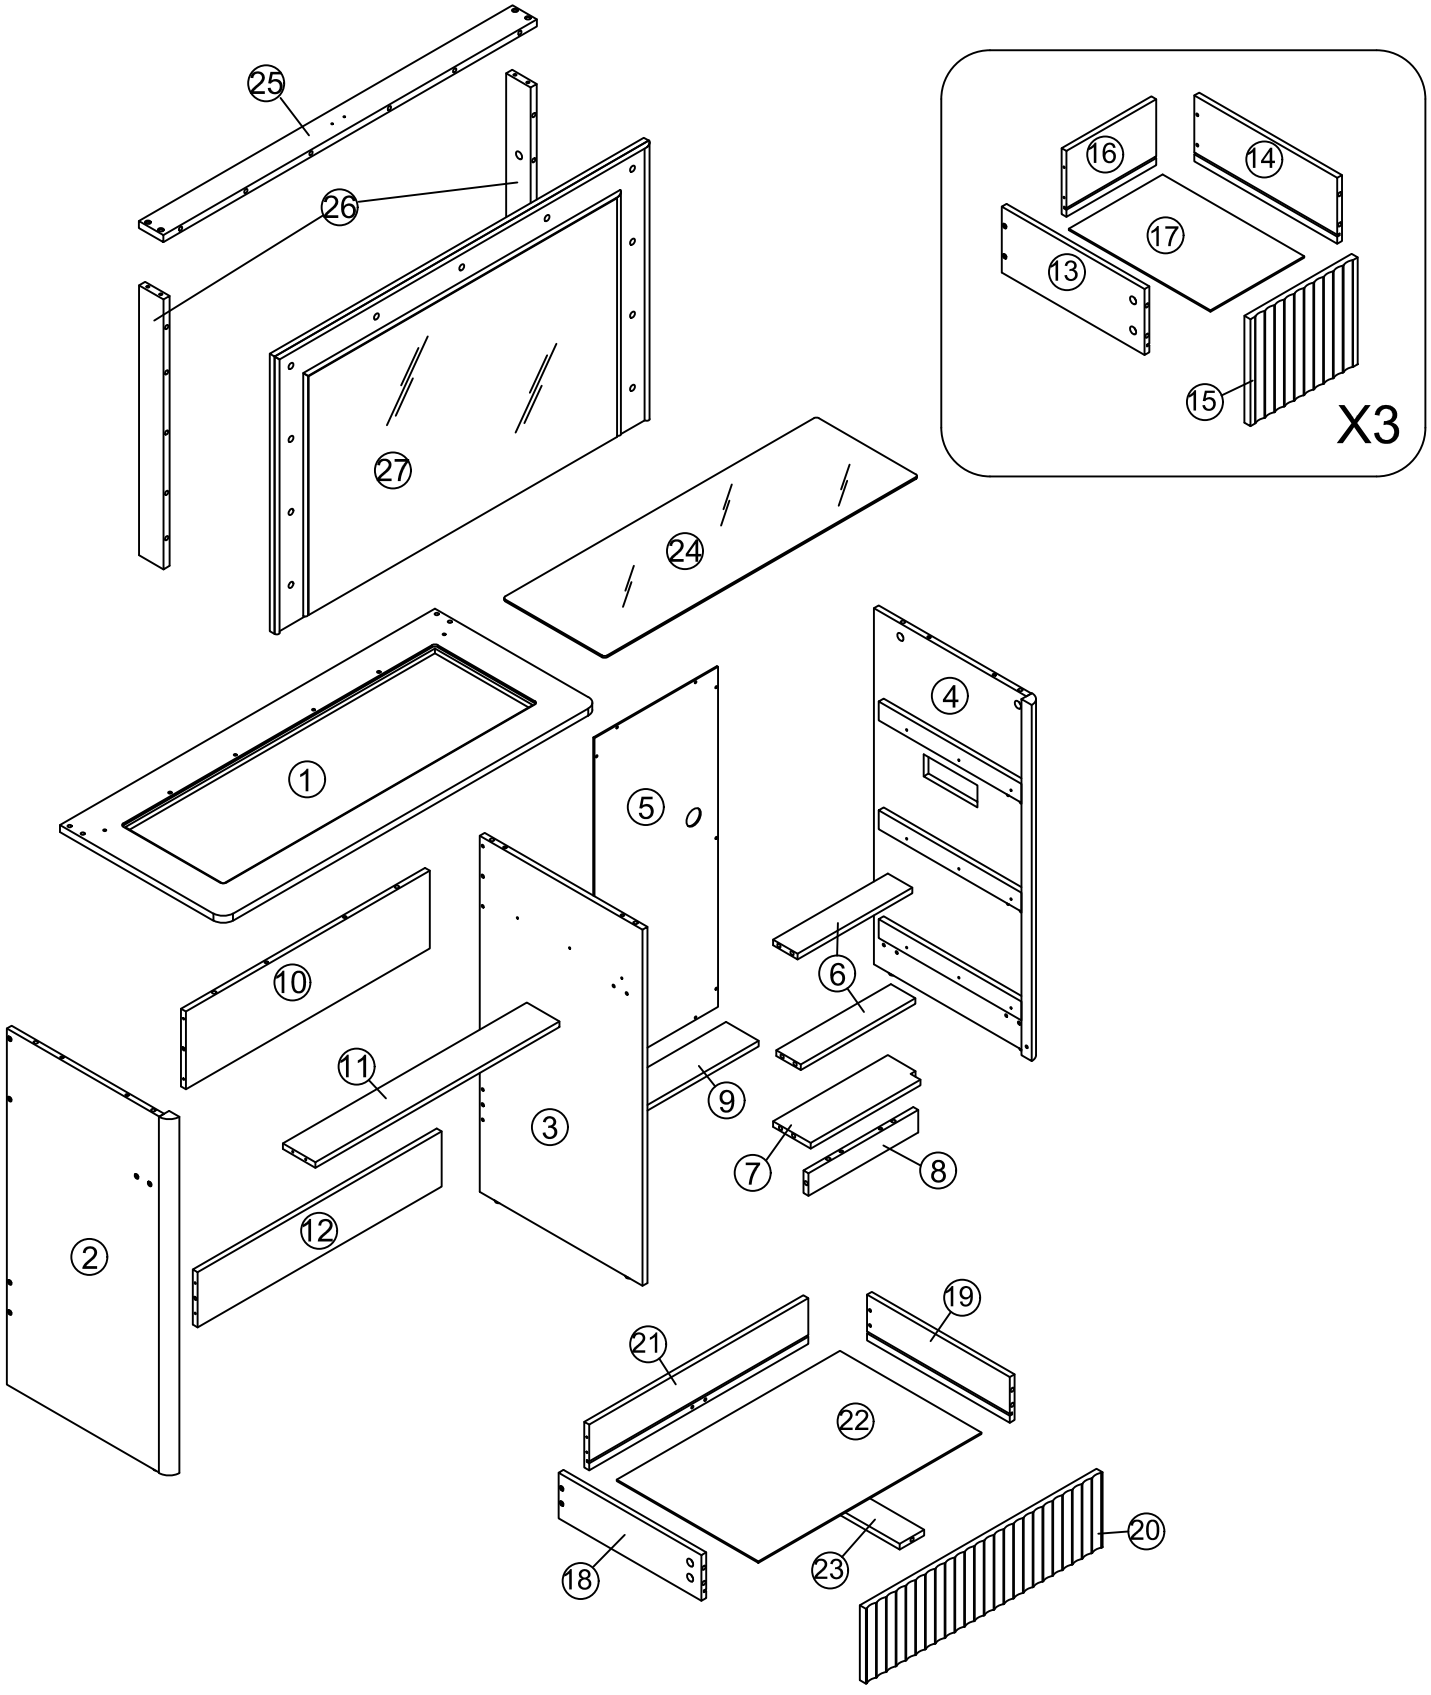


HARDWARE PART LIST


Ⓐ	X53+3
	
ϕ15*9.5	


Ⓑ	X53+3
	
ϕ6.5*35	


Ⓒ	X8+1
	
ϕ8*30	

Ⓓ	X16+1
	
ϕ6*30	

Ⓔ	X56+3
	
ϕ3.5*12	


Ⓕ	X2+1
	
ϕ3*12	

Ⓖ	X34+2
	
ϕ4*35	

Ⓗ	X10+1
	
ϕ3*14	


Ⓘ	X2+1
	
ϕ4*12	


Ⓙ	X8+1
	
ϕ6.3*50	


Ⓚ	X4
	
120*38*17	

Ⓛ	X16+1
	
ϕ21	


Ⓜ	X1
	
109*99*38.5	

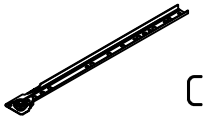Ⓝ	X4
 CL	
L=350	

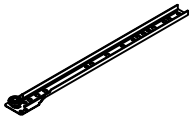
Ⓝ	X4
 CR	
L=350	

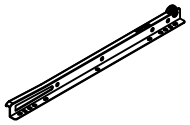
Ⓝ	X4
 DL	
L=350	

HARDWARE PART LIST

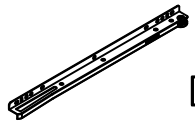Ⓝ	X4
 DR	
L=350	

Ⓞ	X1
	
145*55*45	

Ⓟ	X1
	
70*30*5	

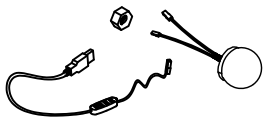
Ⓠ	X11
	
ø50mm	

Ⓡ	X1set
	


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

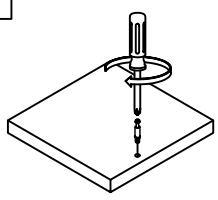

2

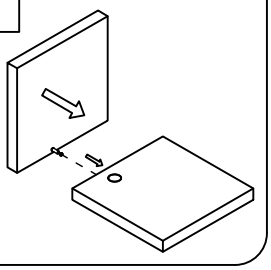


3

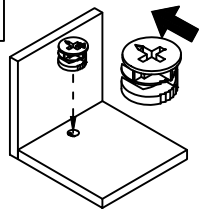



The opening must point toward the edge of the board


4

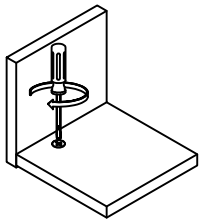



STEP 1

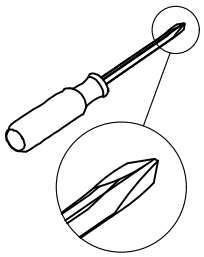


Ⓔ	X12
	
ø3.5*12	

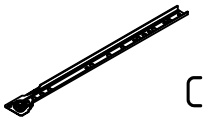
Ⓝ	X1
 CL	
L=350	

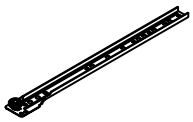
Ⓝ	X3
 CR	
L=350	

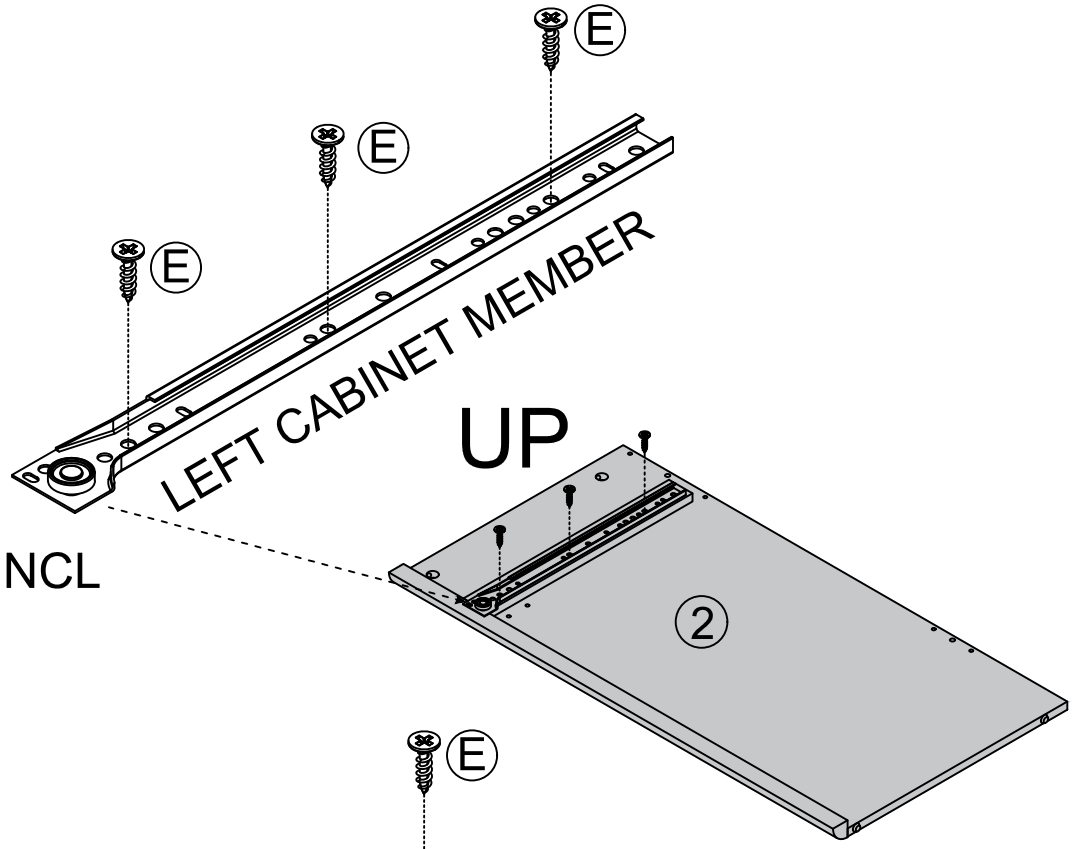


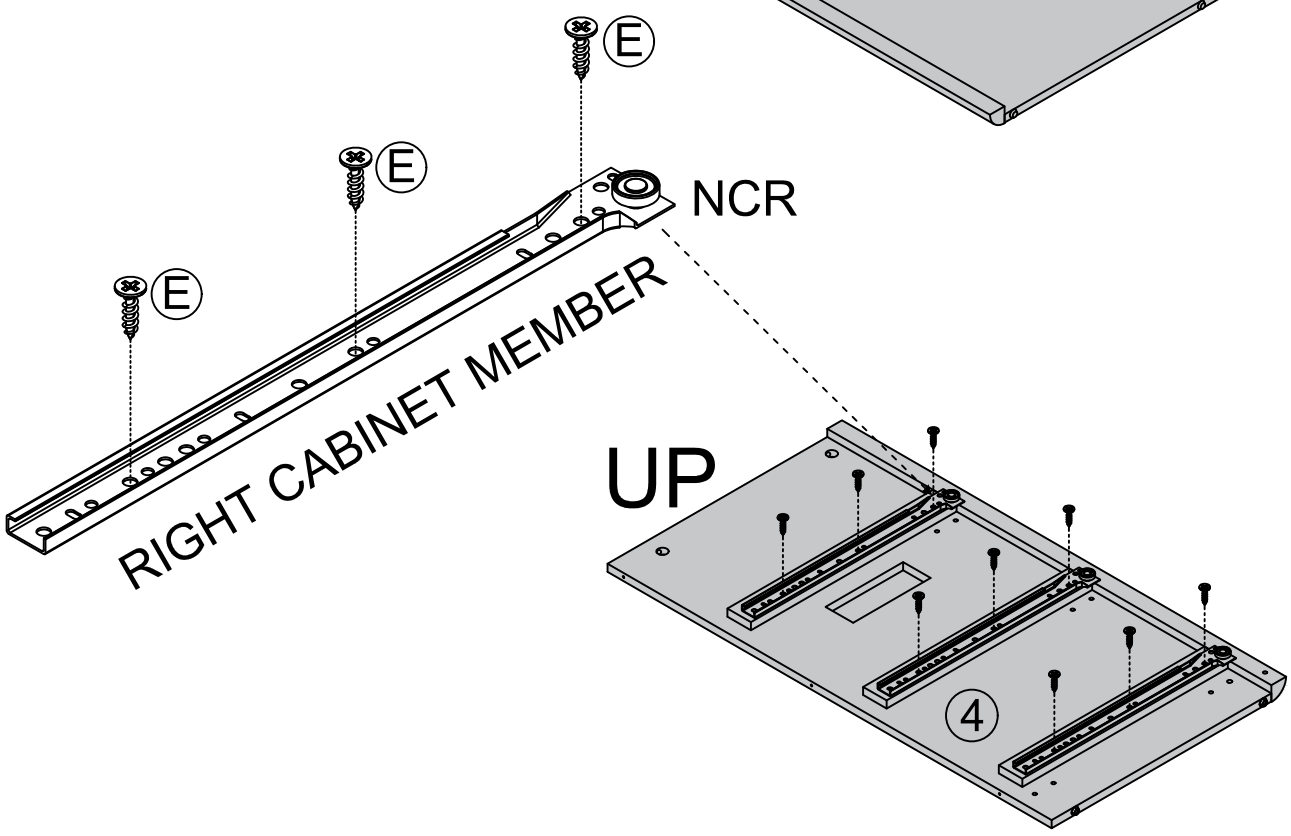



STEP 2

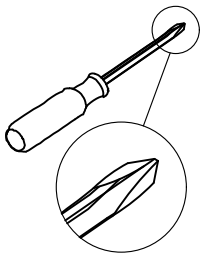


Ⓔ	X12
	
ϕ3.5*12	

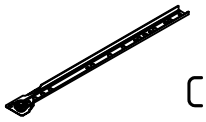
Ⓝ	X3
 CL	
L=350	


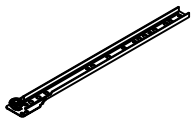
Ⓝ	X1
 CR	
L=350	

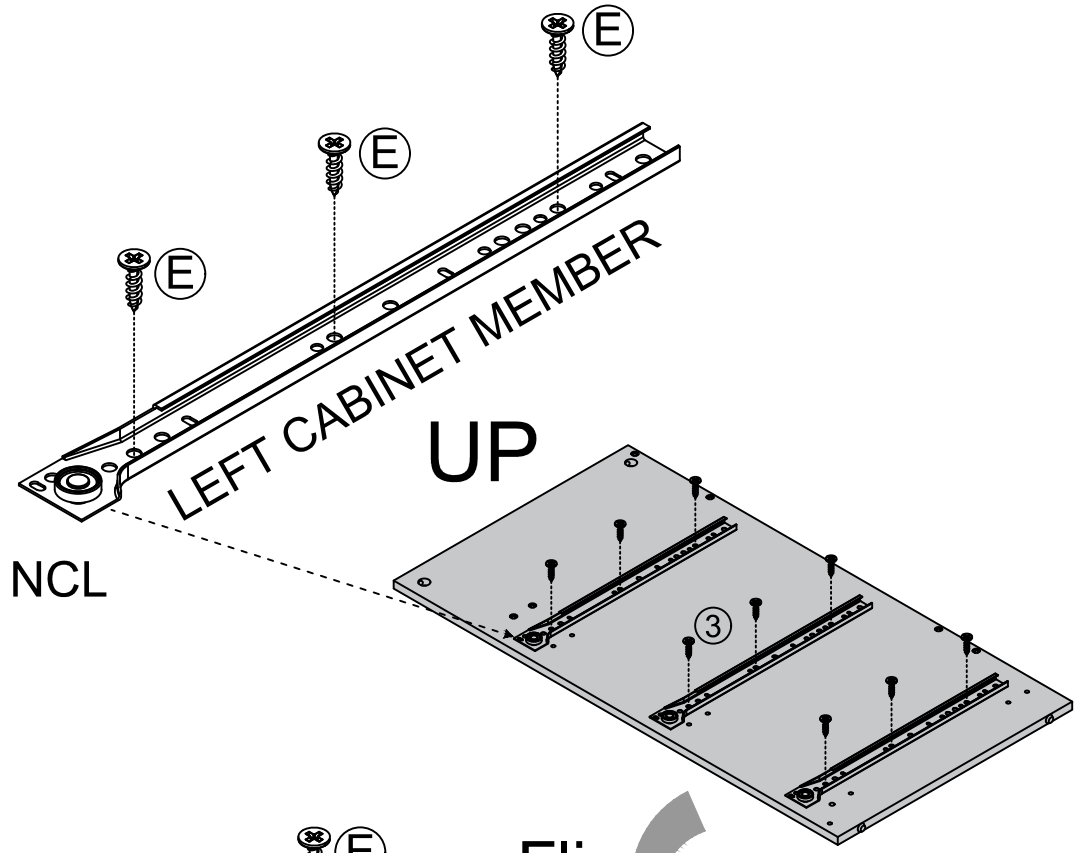


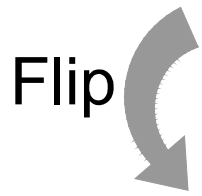



STEP 3

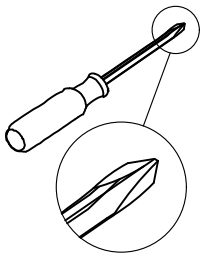


Ⓑ	X9	Ⓓ	X4	Ⓖ	X12	Ⓛ	X6
							
ϕ6.5*35		ϕ6*30		ϕ4*35		ϕ21	

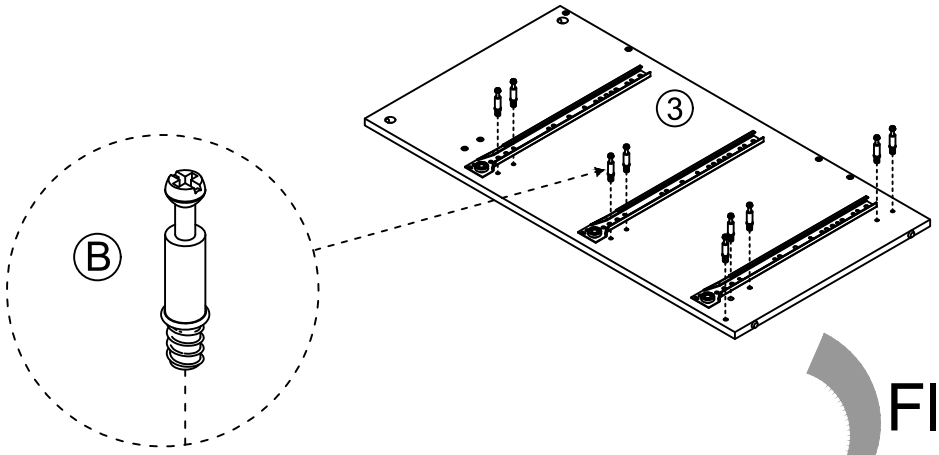

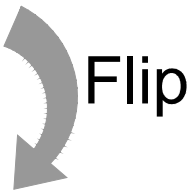


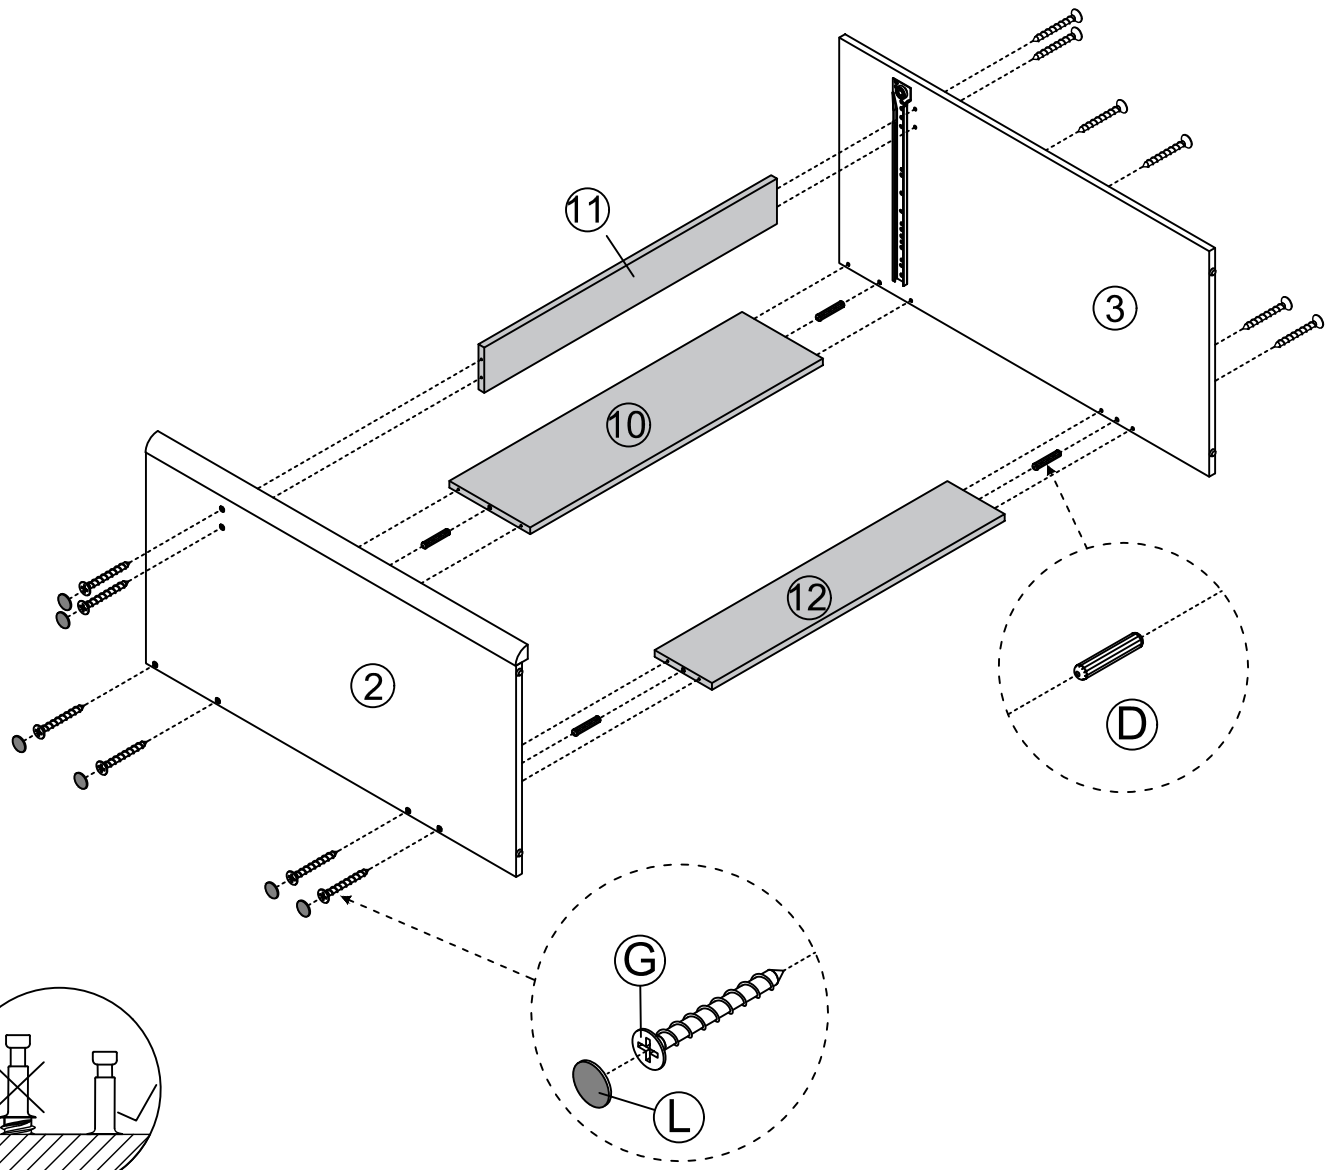



STEP 4

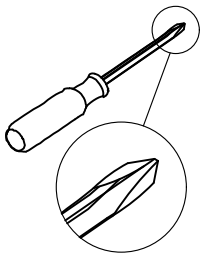



A	X2
	
ϕ15*9.5	

B	X2
	
ϕ6.5*35	


D	X2
	
ϕ6*30	

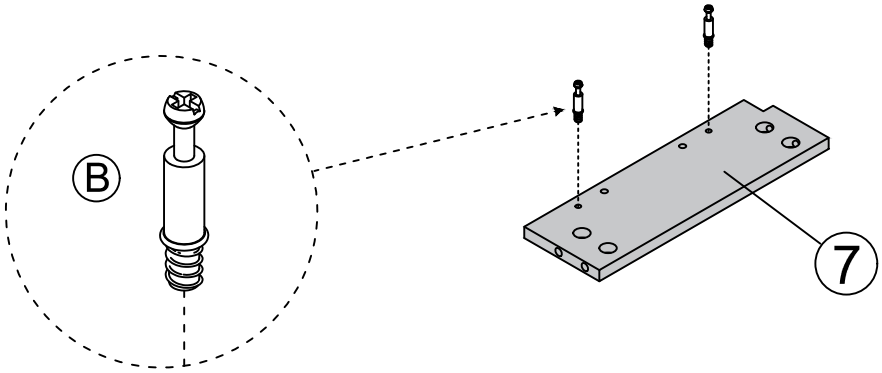

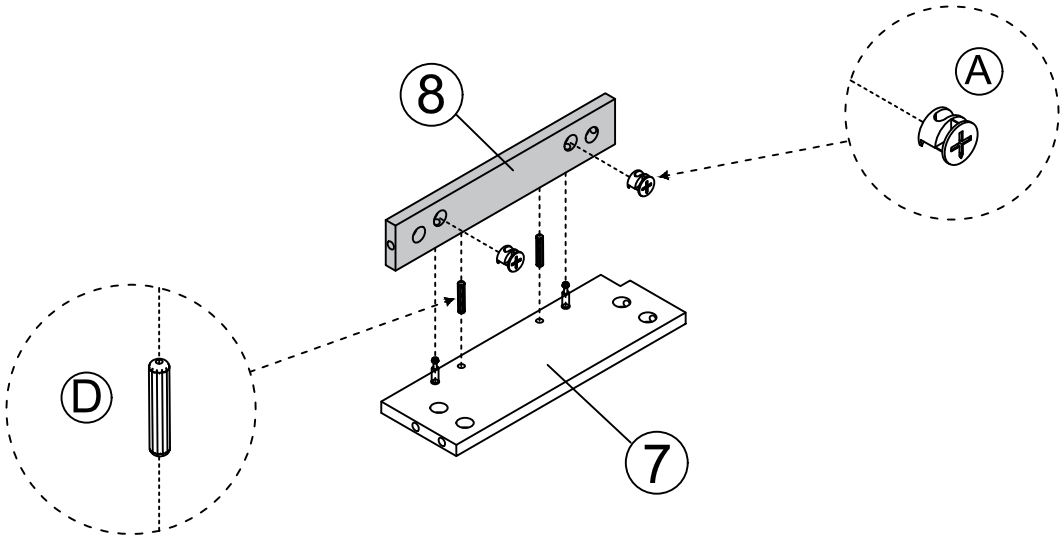

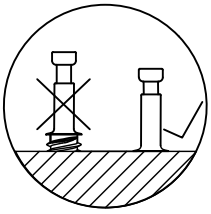


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

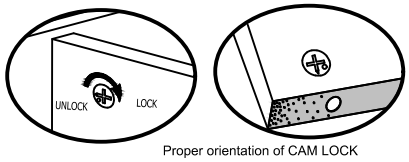



Proper orientation of CAM LOCK


STEP 5

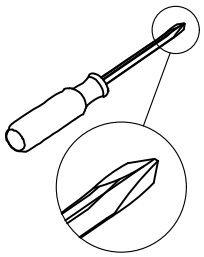


A	X9
	
ϕ15*9.5	


B	X9
	
ϕ6.5*35	

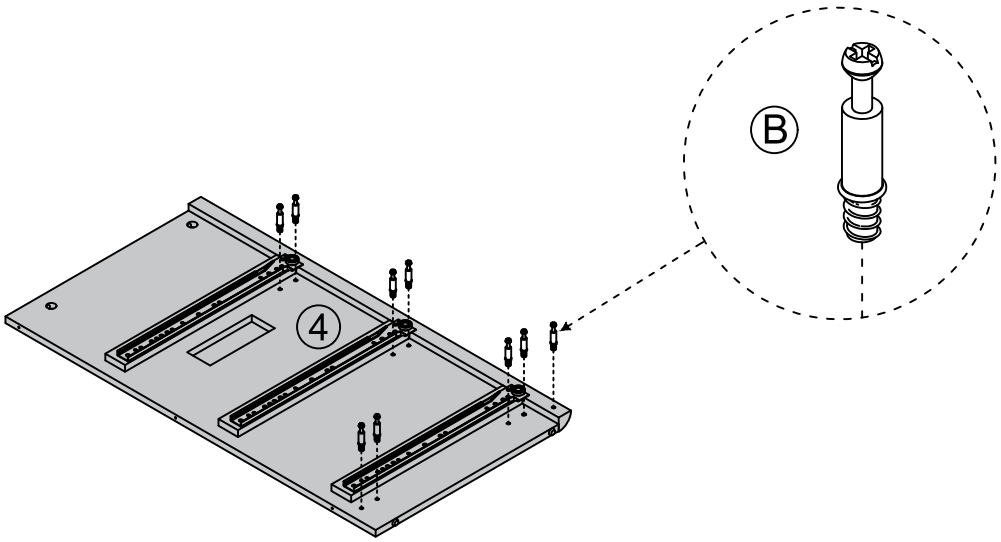

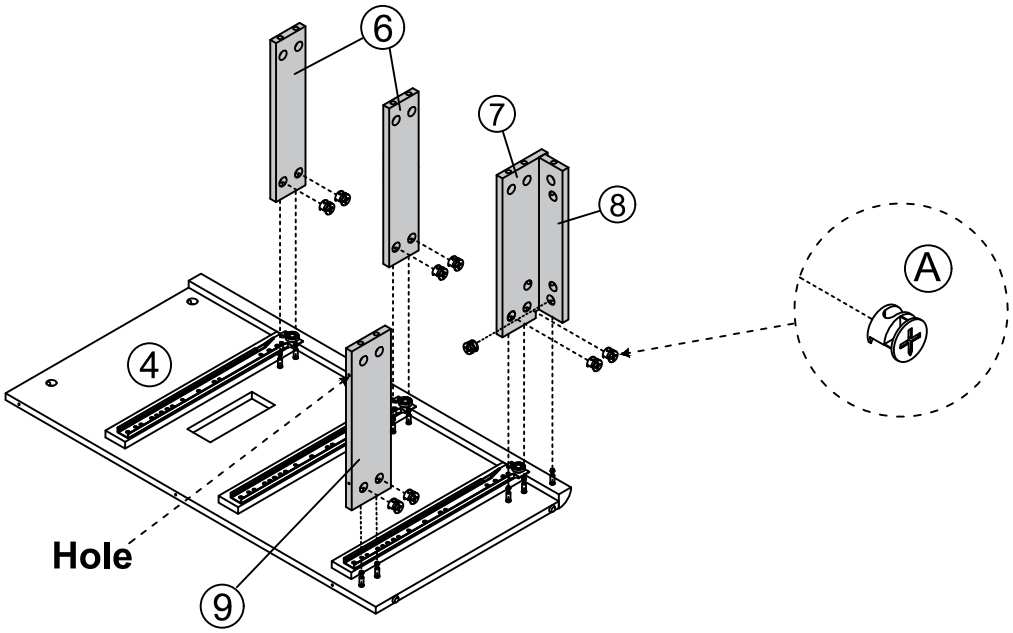

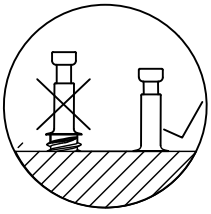


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

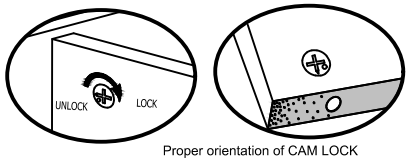


Proper orientation of CAM LOCK


STEP 6

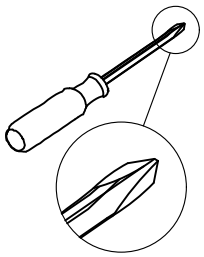

Ⓐ	X9
	
ϕ15*9.5	

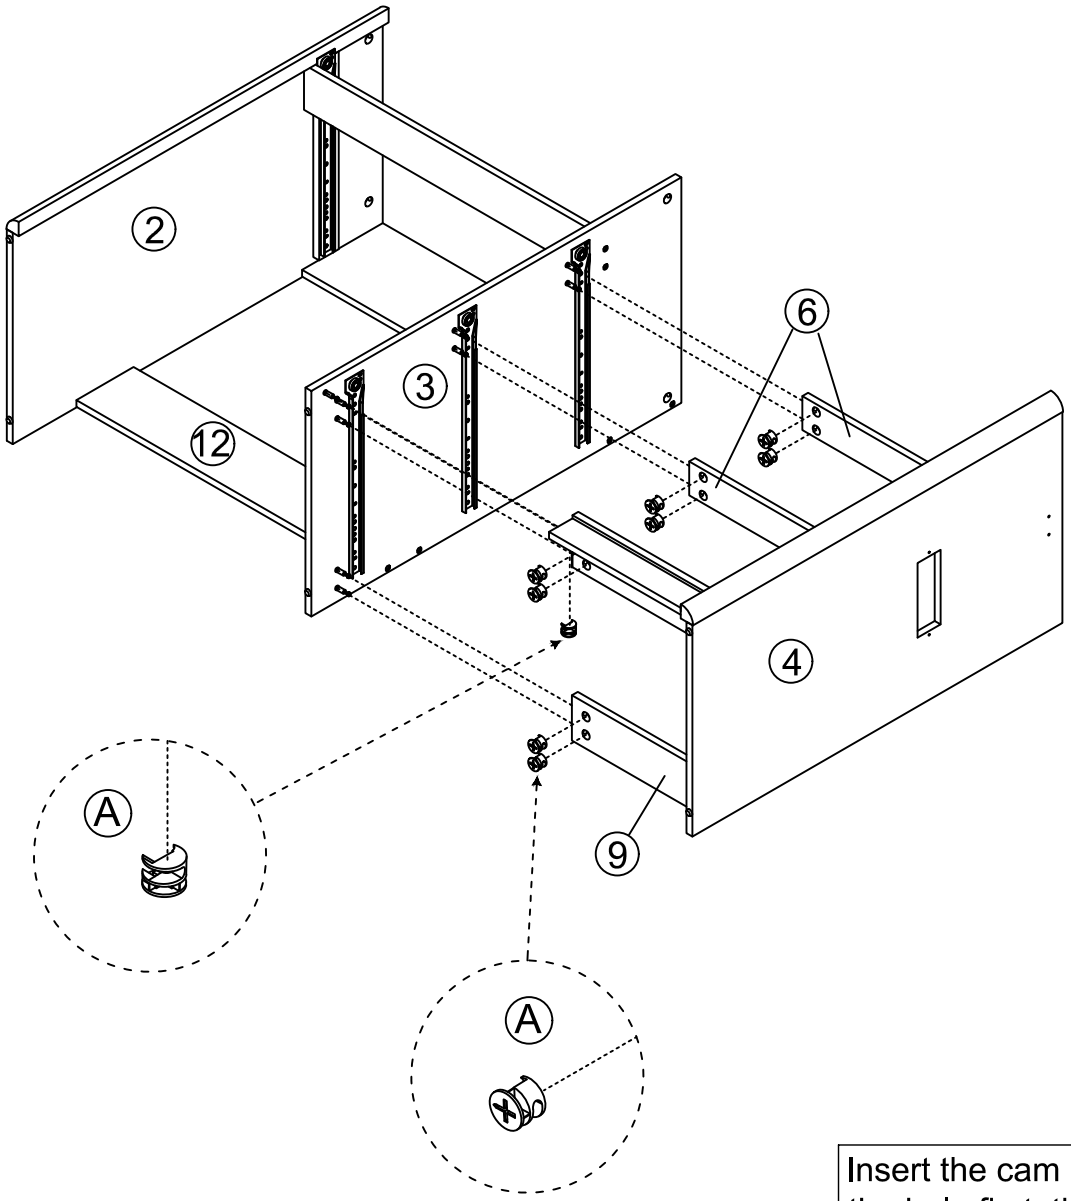



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

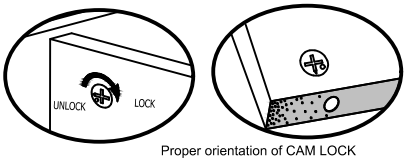



Proper orientation of CAM LOCK


STEP 7

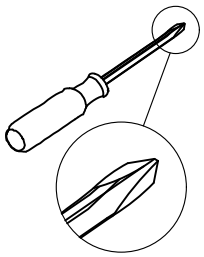


A	X4	B	X8	C	X6
					
ϕ15*9.5		ϕ6.5*35		ϕ8*30	

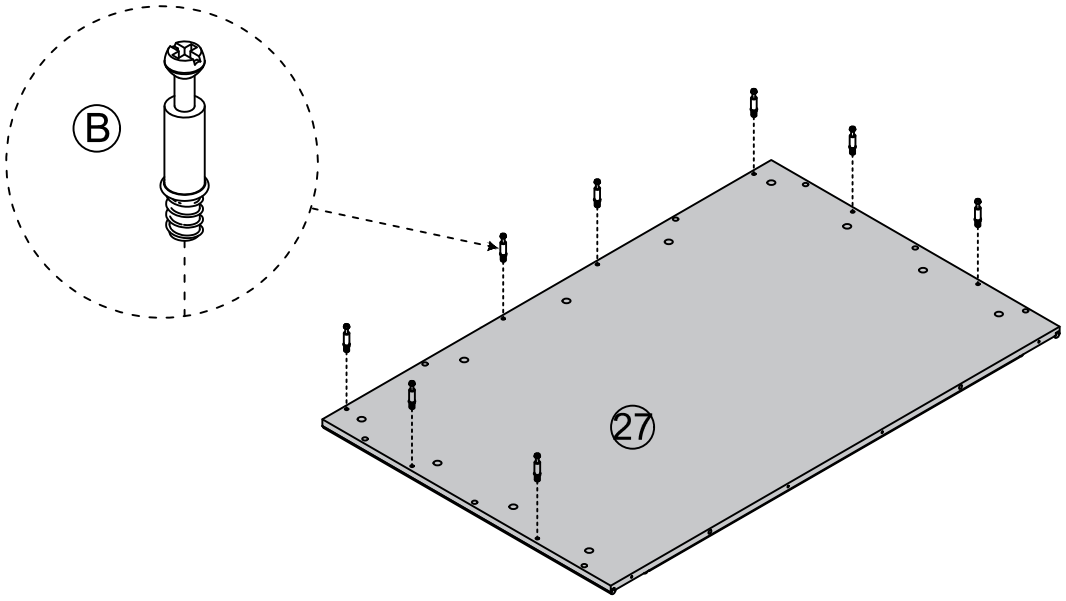

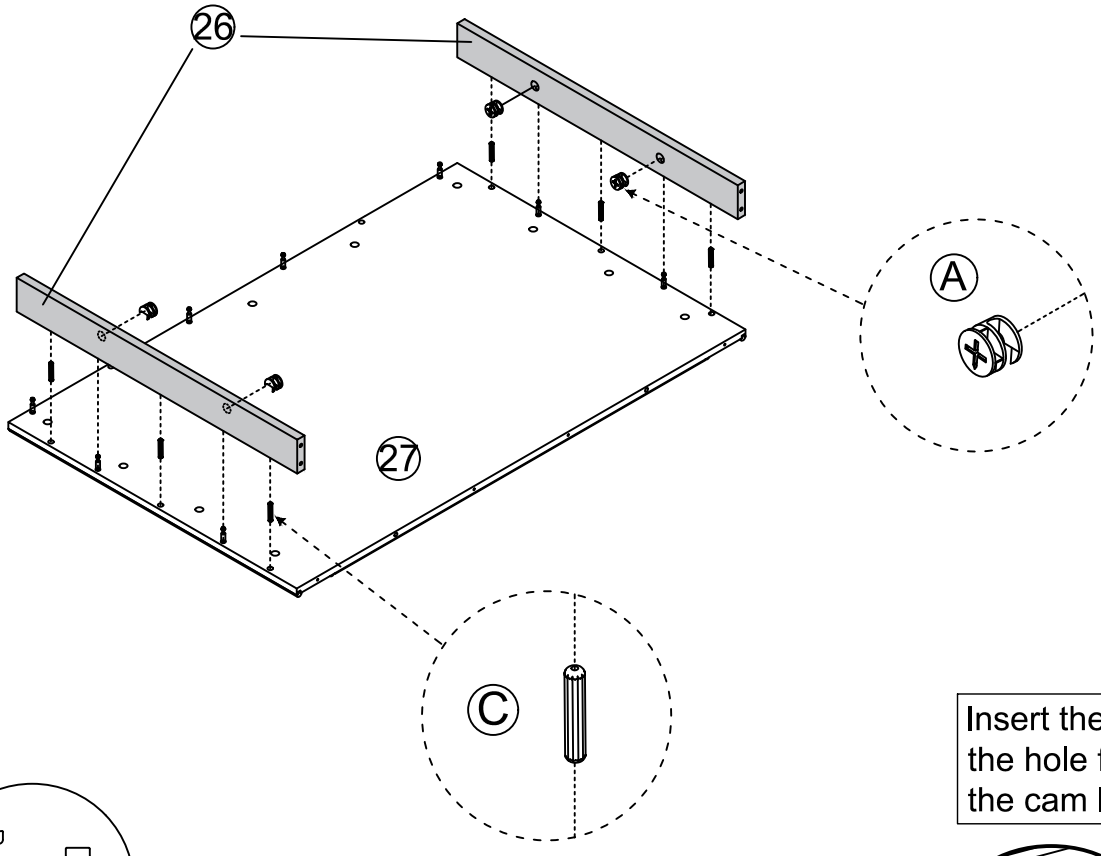

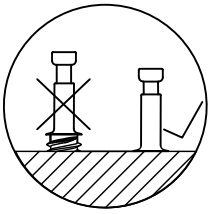


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

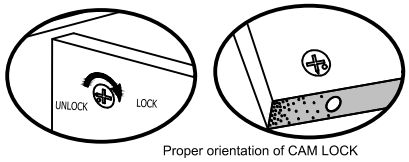


Proper orientation of CAM LOCK

STEP 8

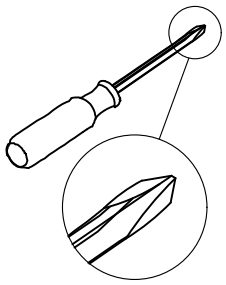


Ⓐ	X4
	
ϕ15*9.5	

Ⓒ	X2
	
ϕ8*30	

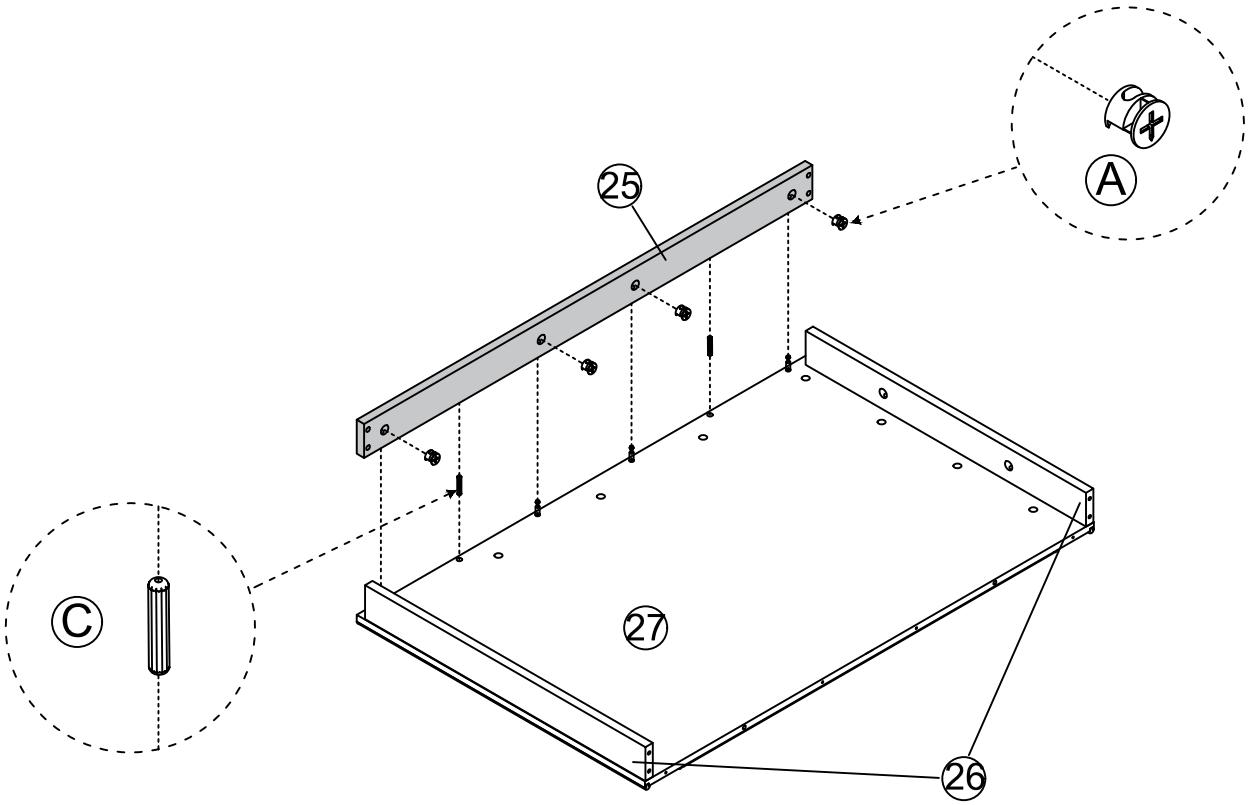



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

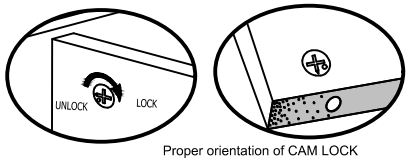



Proper orientation of CAM LOCK


STEP 9

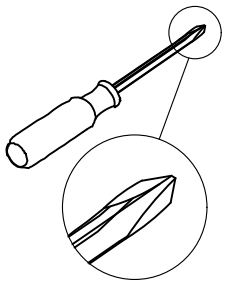


B	X8	J	X4	L	X4
					
ϕ6.5*35		ϕ6.3*50		ϕ21	

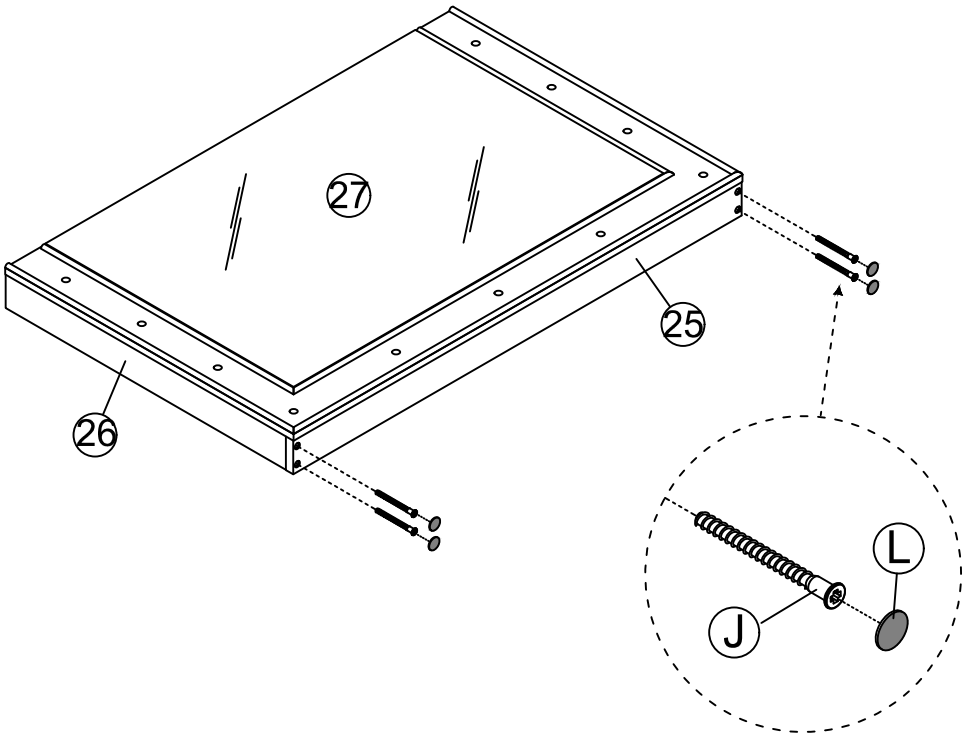


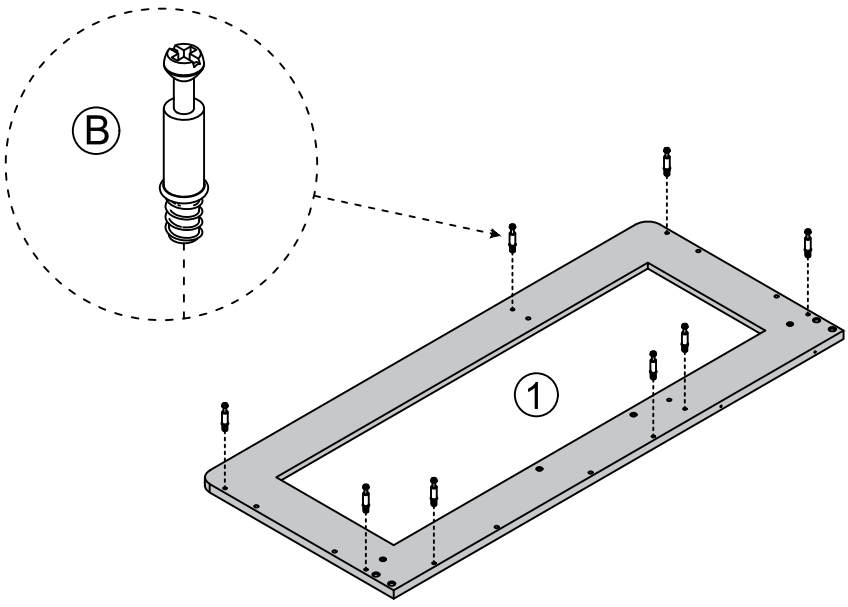

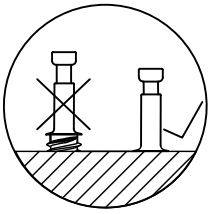


STEP 10

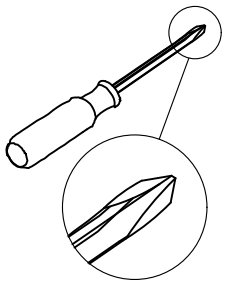

G	X4
	
ϕ4*35	


J	X4
	
ϕ6.3*50	

D	X2
	
ϕ6*30	

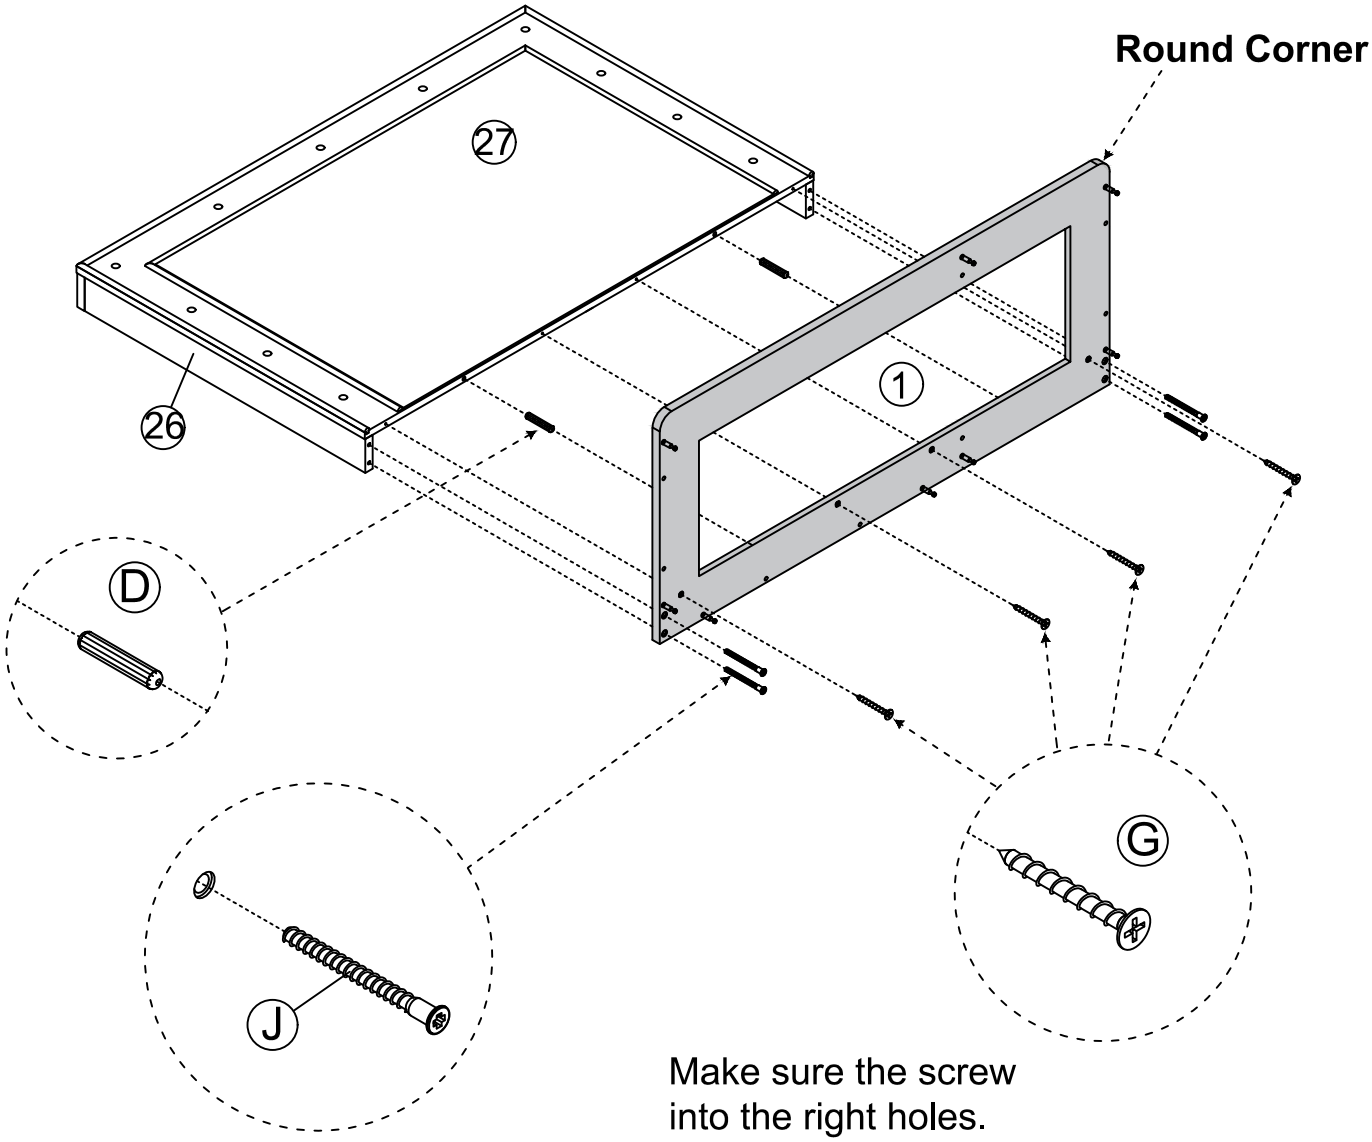


Make sure the screw into the right holes.


STEP 11

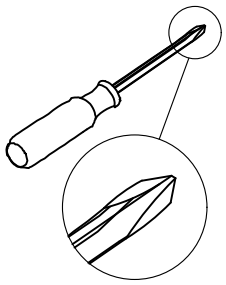

Ⓓ	X8
	
ϕ6*30	

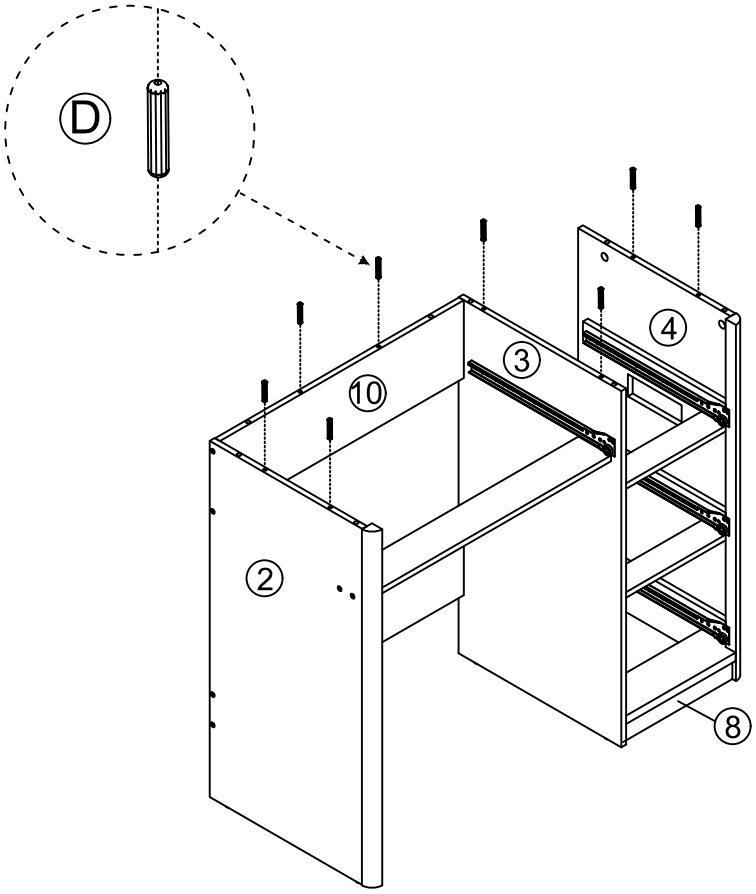


STEP 12

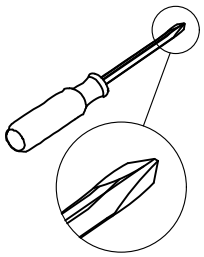


Ⓐ	X6
	
ϕ15*9.5	

Ⓛ	X6
	
ϕ21	

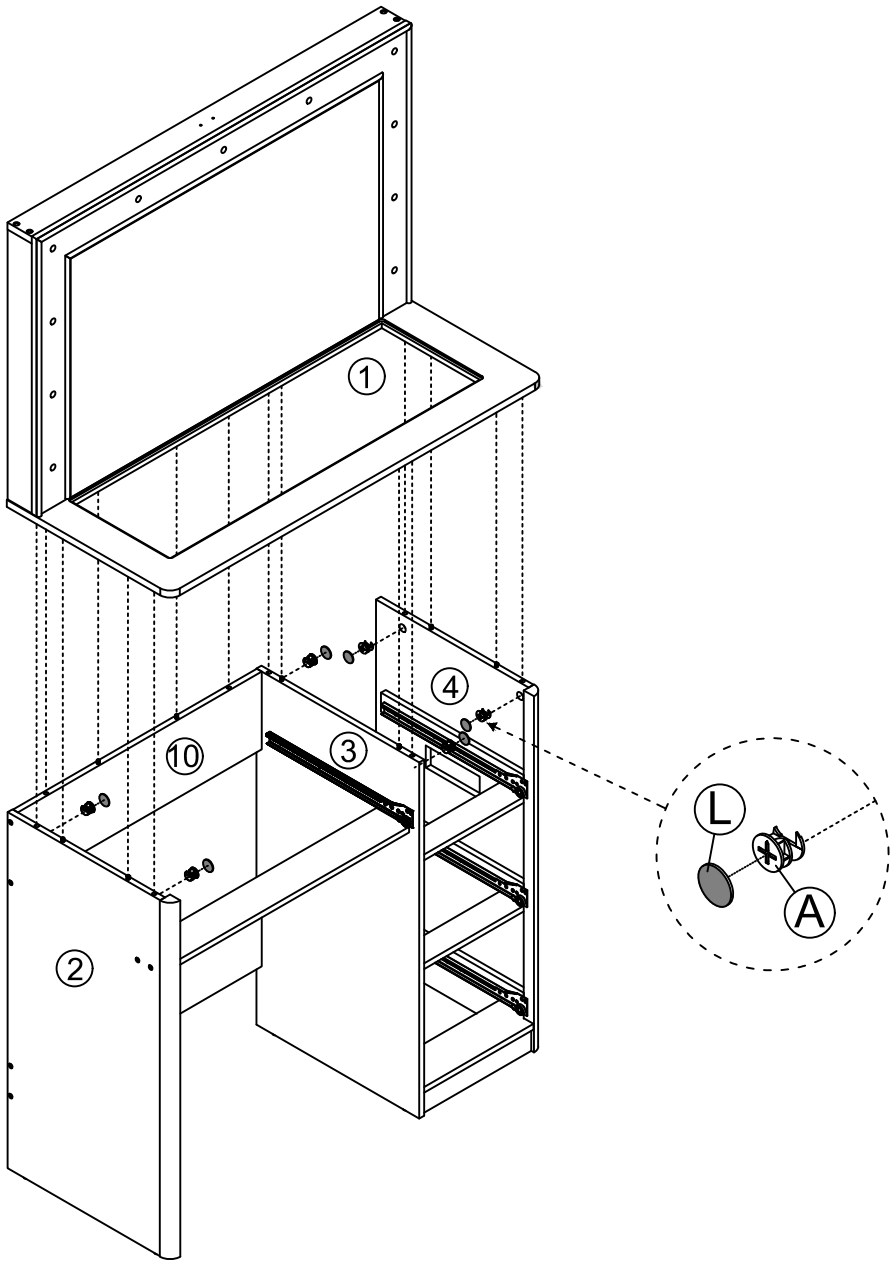


For this step,you need one helper.

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

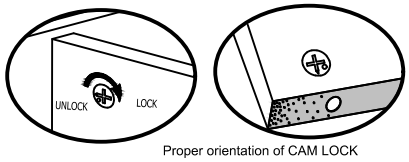


Proper orientation of CAM LOCK


STEP 13

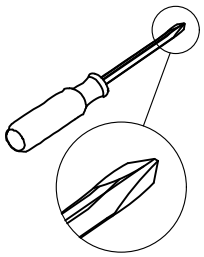


Ⓐ	X2
	
ϕ15*9.5	

Ⓗ	X10
	
ϕ3*14	


Ⓡ	X1set
	

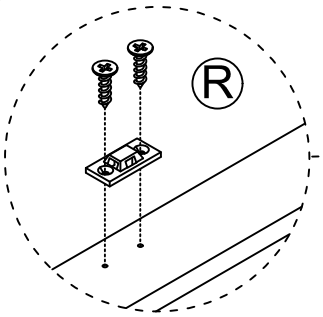

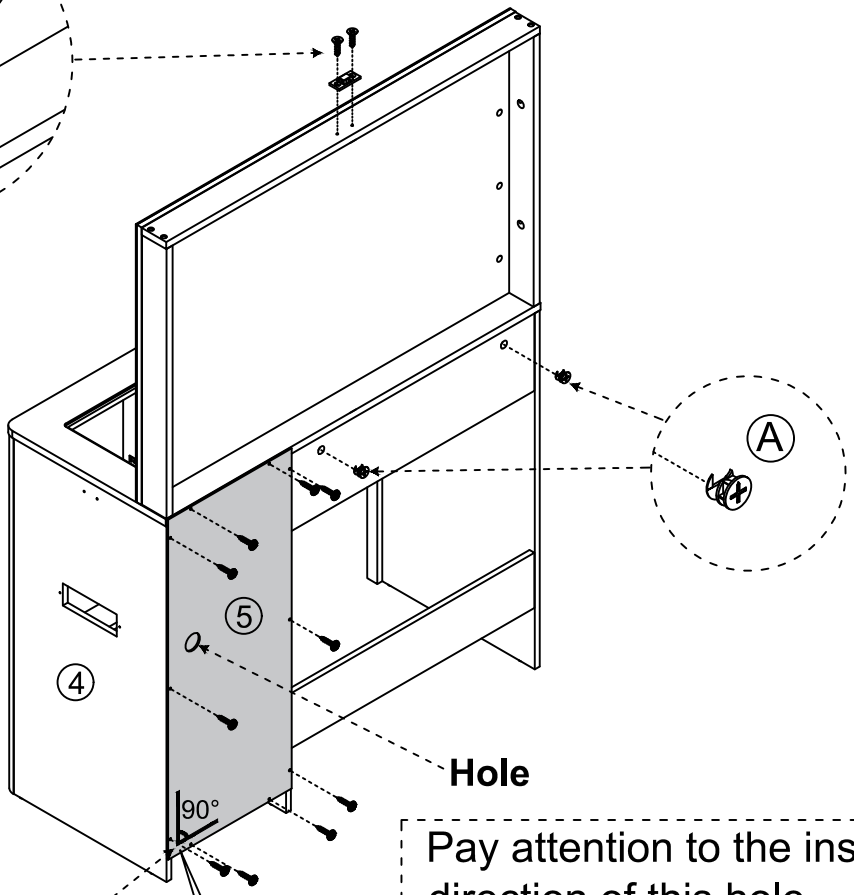


Hole

Pay attention to the installation direction of this hole.

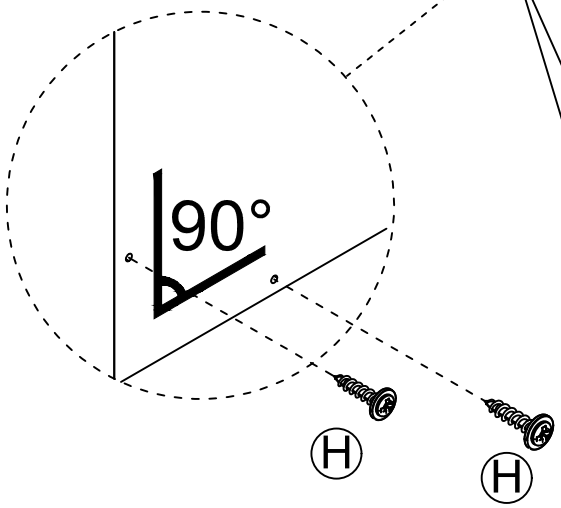


Before attaching the back panel, be sure that the unit is at 90°.

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

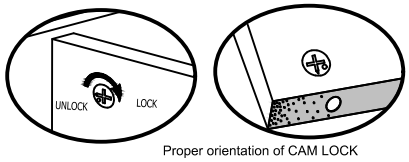


Proper orientation of CAM LOCK


STEP 14



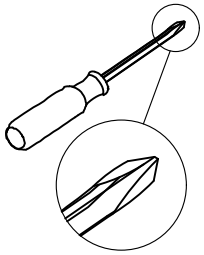



Ⓕ	X2	Ⓘ	X2	Ⓞ	X1	Ⓜ	X1
							
ϕ3*12		ϕ4*12		145*55*45		109*99*38.5	

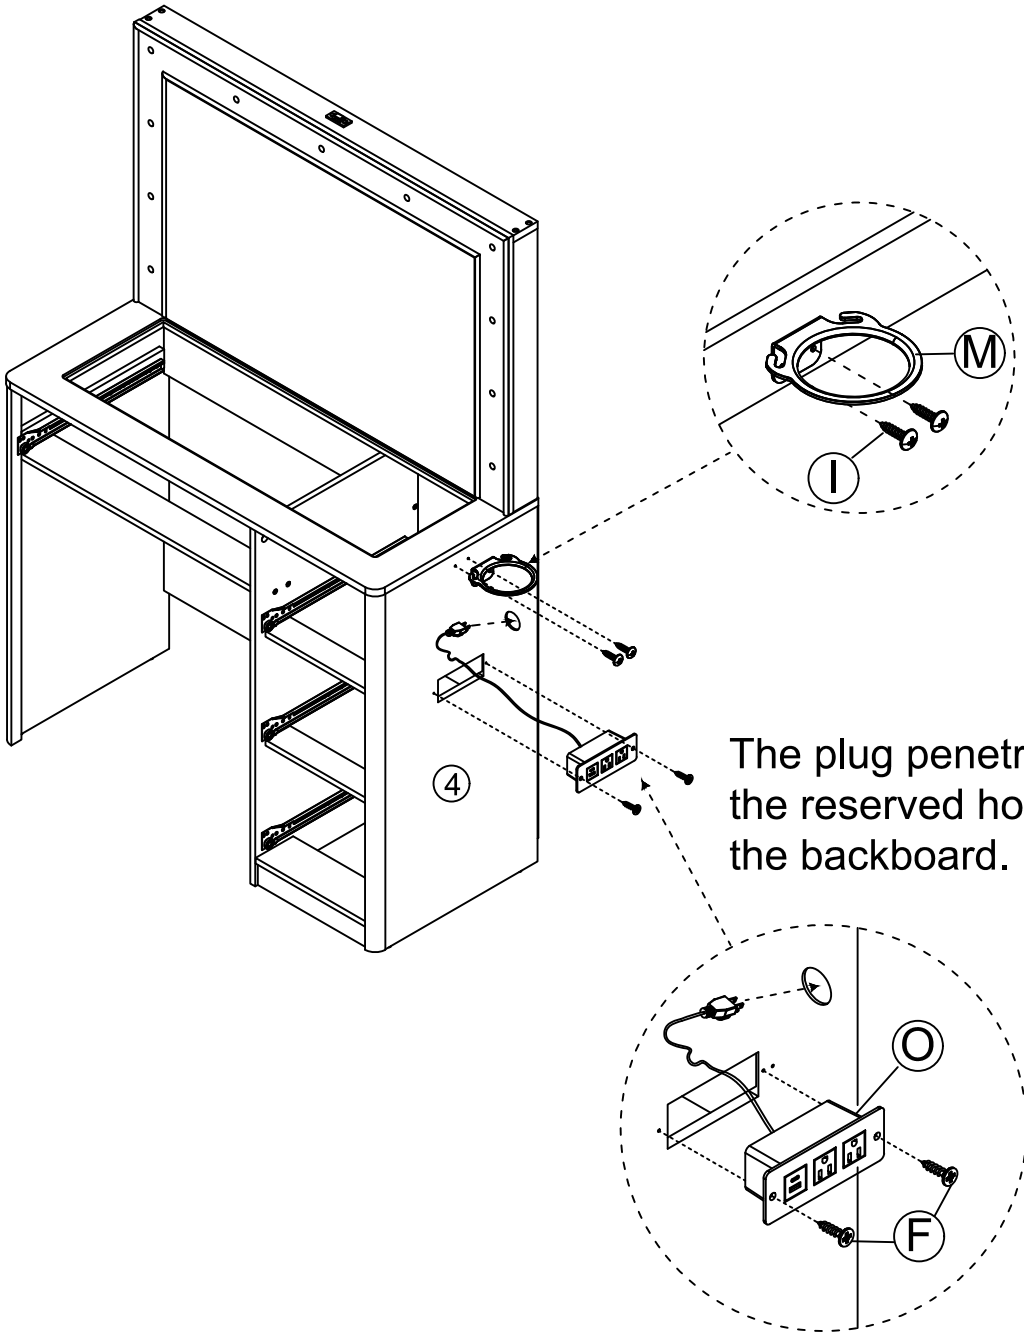


STEP 15

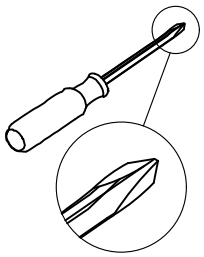


A	X12	B	X12	E	X6	G	X12
							
ϕ15*9.5		ϕ6.5*35		ϕ3.5*12		ϕ4*35	

K	X3
	
120*38*17	

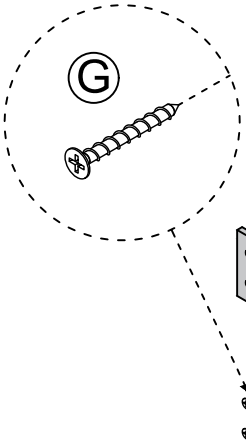



Step 1

Step 2

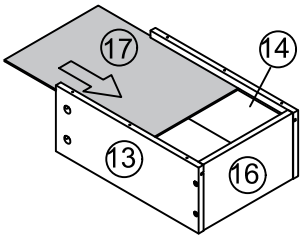


Step 3

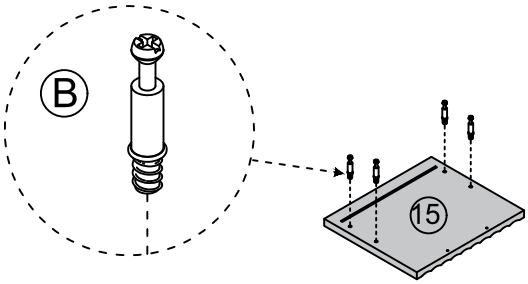


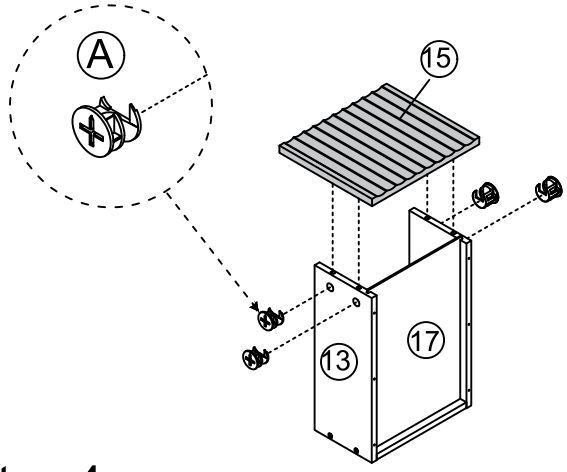

Step 4


Step 5

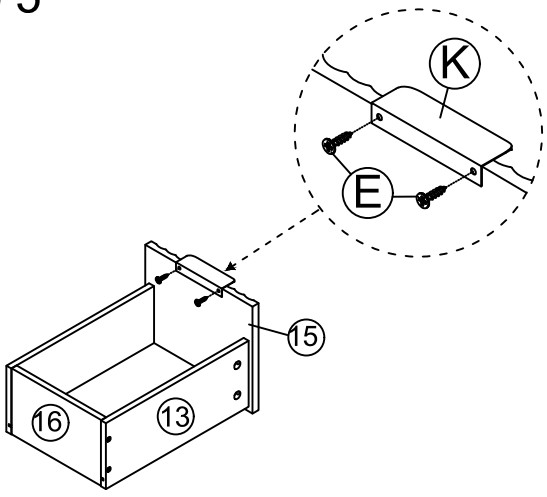

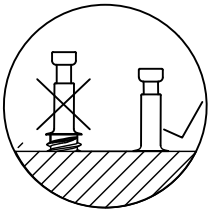


X3


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

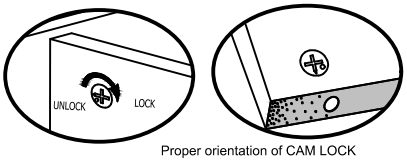



Proper orientation of CAM LOCK


STEP 16

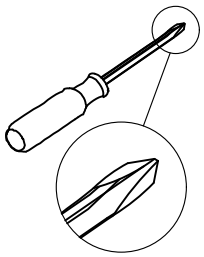

Ⓔ	X18
	
ø3.5*12	

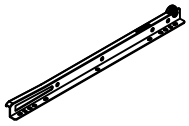
Ⓝ	X3
 DL	
L=350	



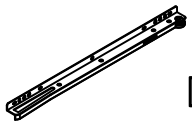
Ⓝ	X3
 DR	
L=350	

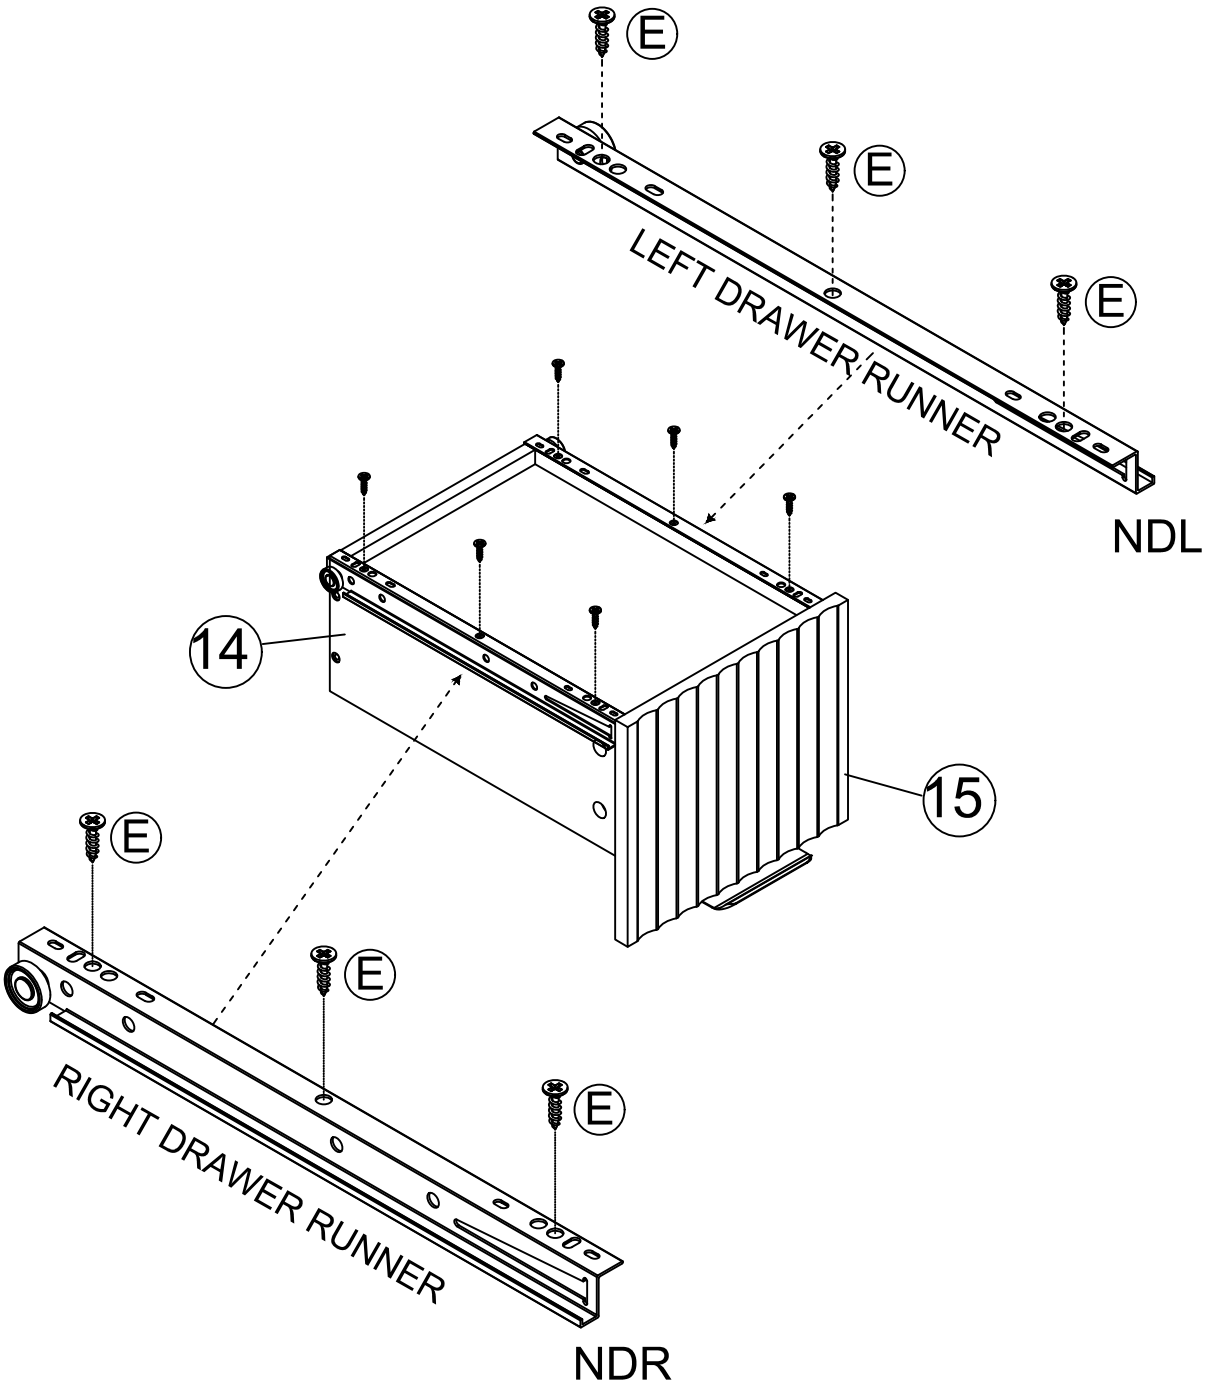



X3


STEP 17

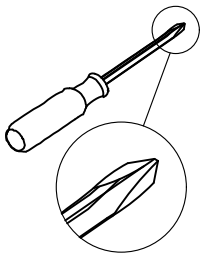

A	X5	B	X5	E	X2	G	X6
							
ϕ15*9.5		ϕ6.5*35		ϕ3.5*12		ϕ4*35	


K	X1
	
120*38*17	

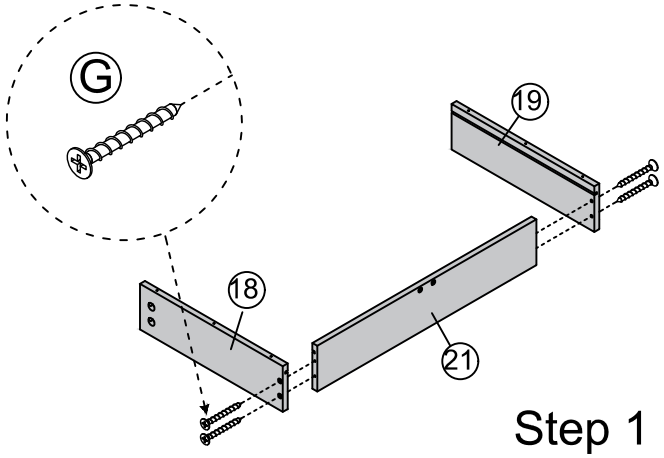


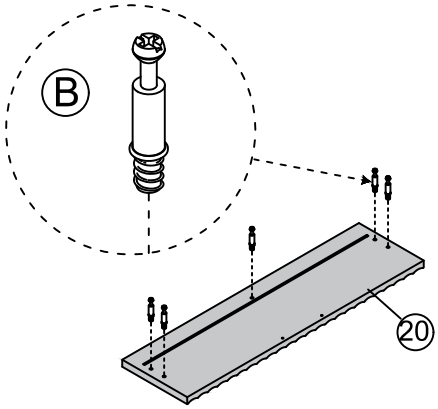



Step 1


Step 2

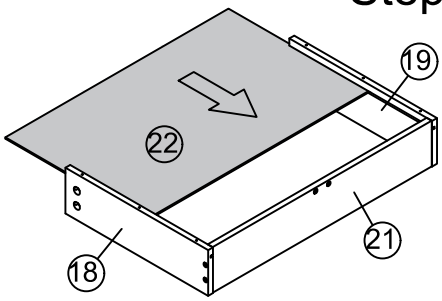

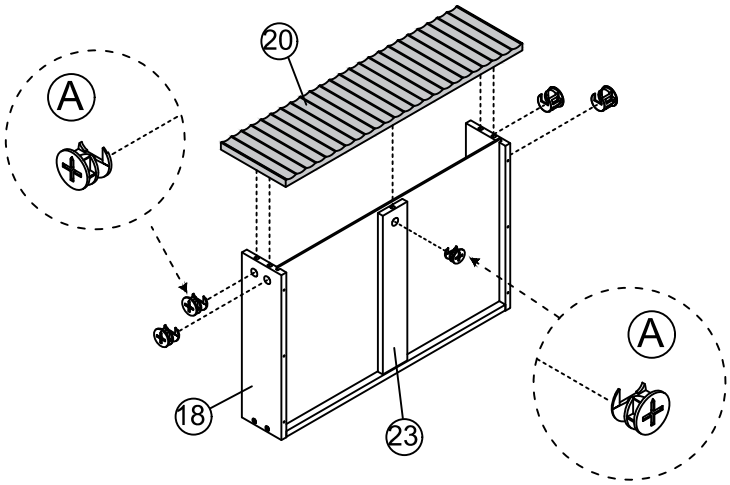


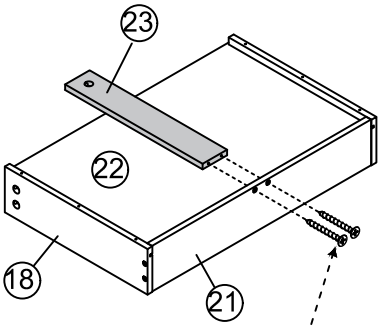


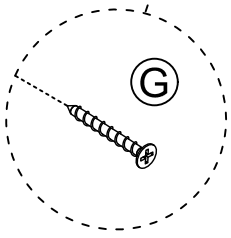

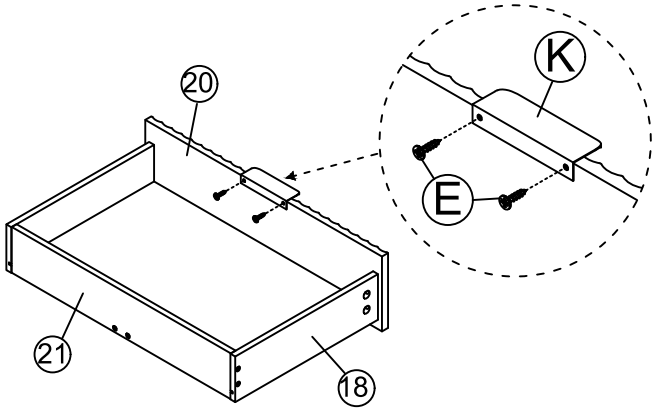


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

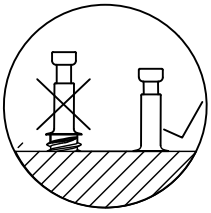


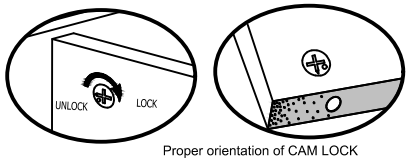



Proper orientation of CAM LOCK


STEP 18

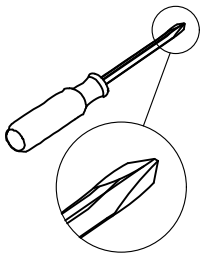


Ⓔ	X6
	
⌀3.5*12	

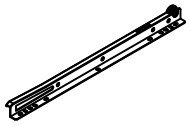
Ⓝ	X1
 DL	
L=350	

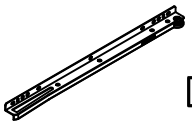Ⓝ	X1
 DR	
L=350	

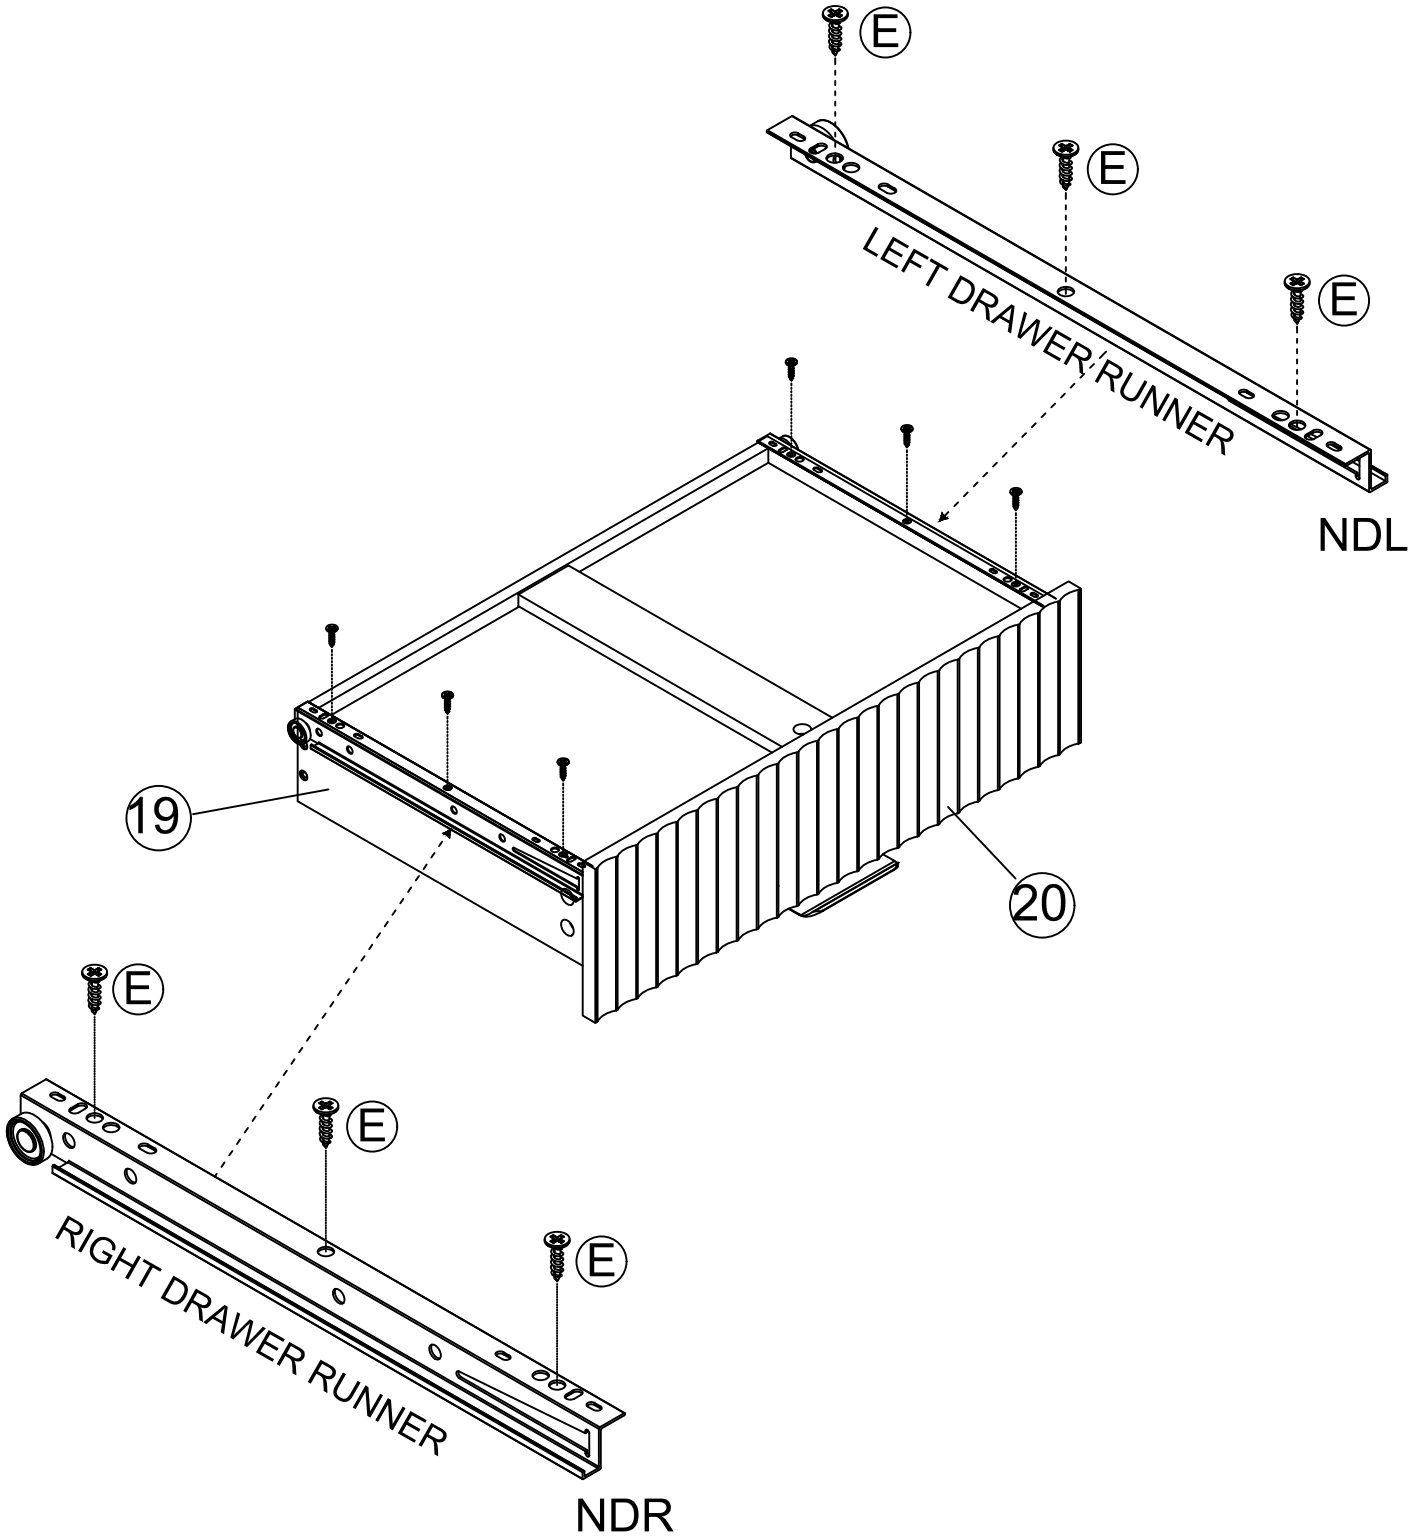



STEP 19

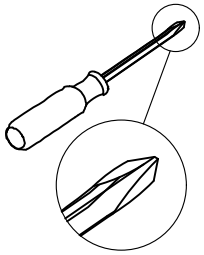

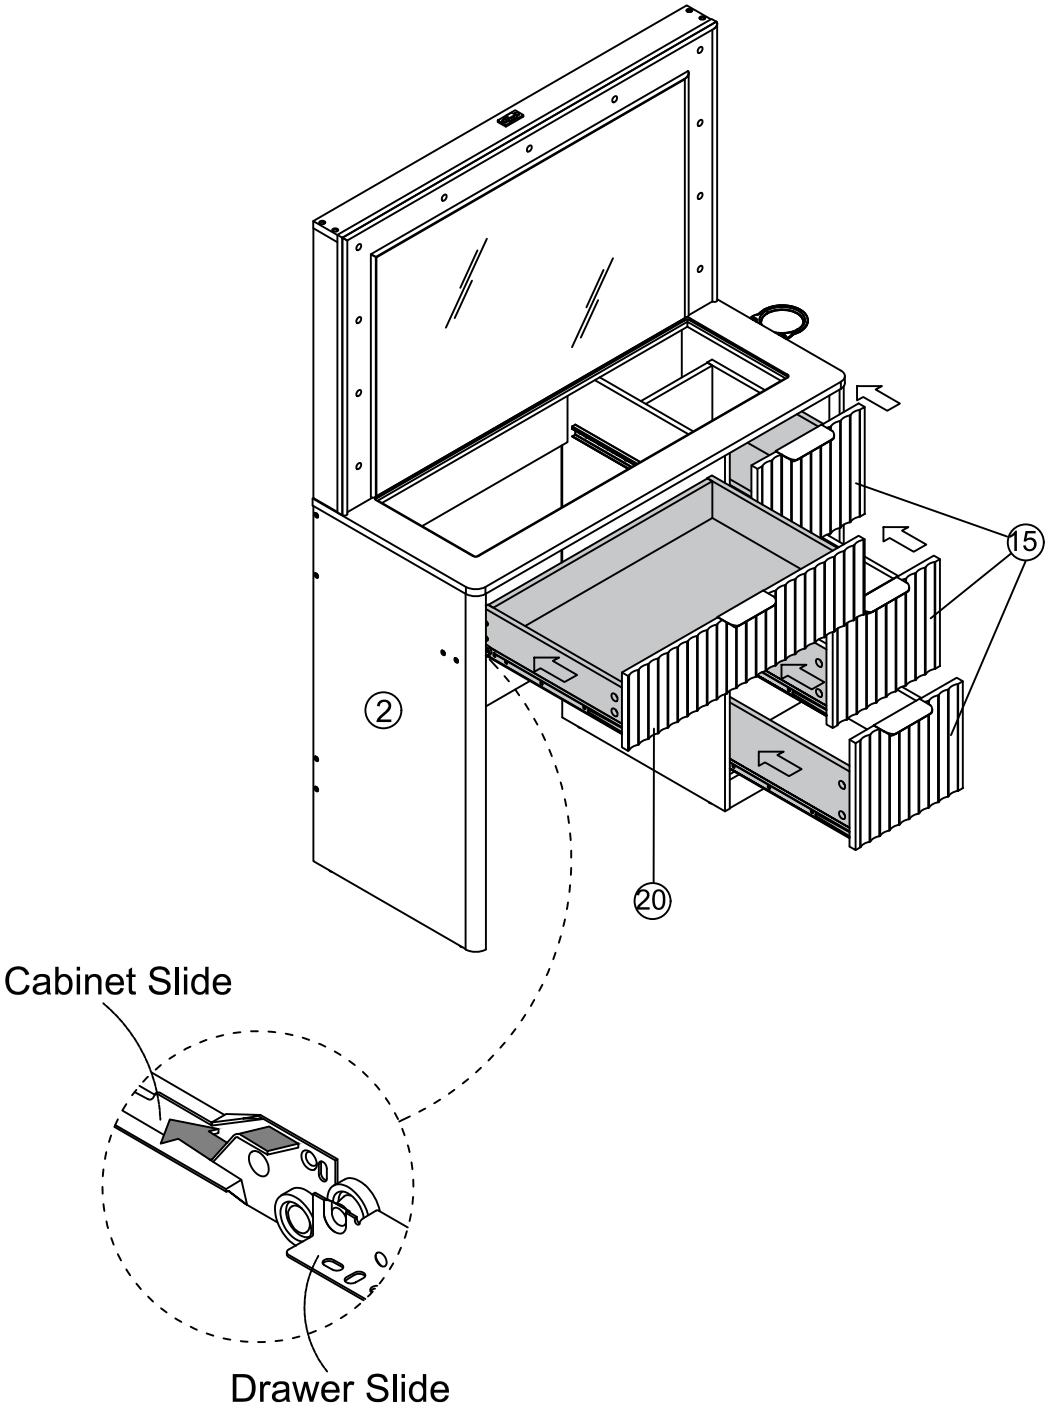


STEP 20

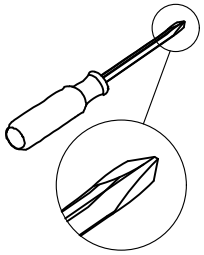


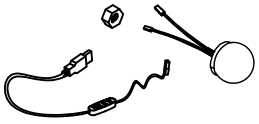Q	X11
	
ϕ50mm	


Pass the bulb wire through the pre punched plate.

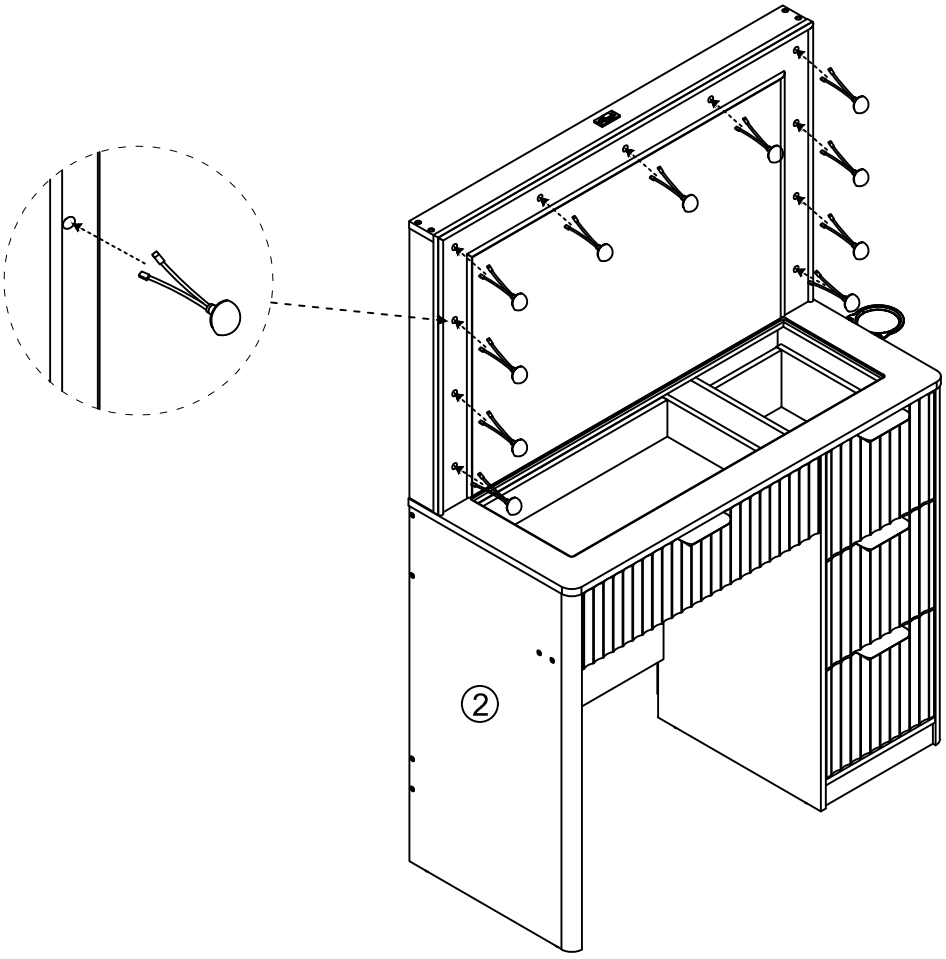


STEP 21

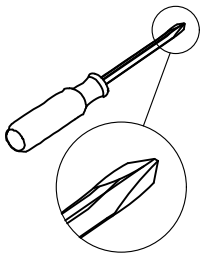


Pass the bulb wire through the pre punched plate,Fix It,and then connect the adjacent bulbs successively through the wire head slot on the opposite side（corresponding to the line of the same color）.

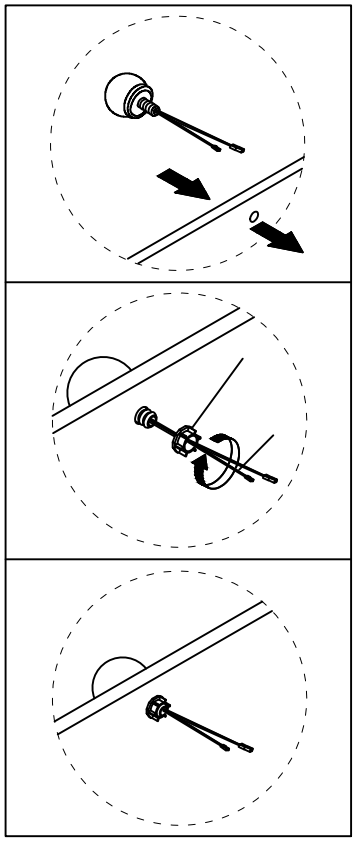


same color correspond

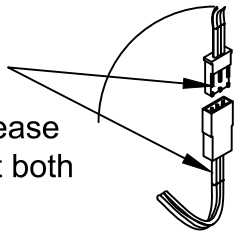


When connecting the interface,please note that the colors of the wires at both ends correspond one by one.

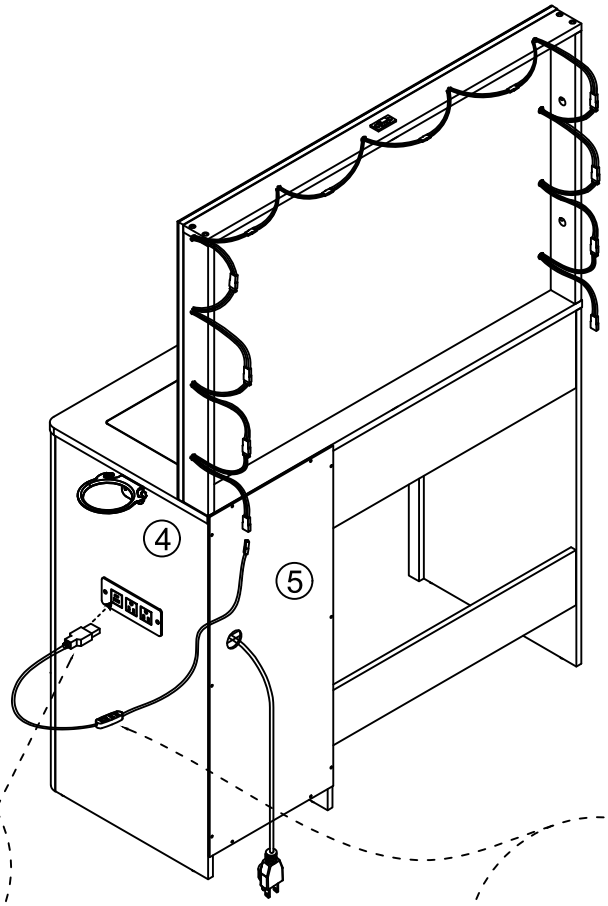

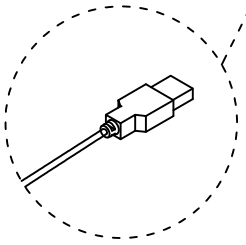


USB

The USB plug is plugged into the socket of the Q Board.

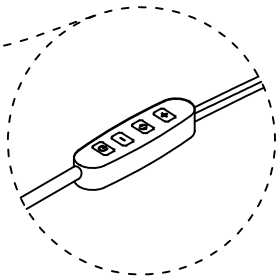


Switch regulator


STEP 22

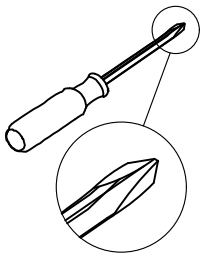


Put the Glass "㉔" in the slot reserved for the panel;
"㉔" must be sloped into the interior of and then flat.

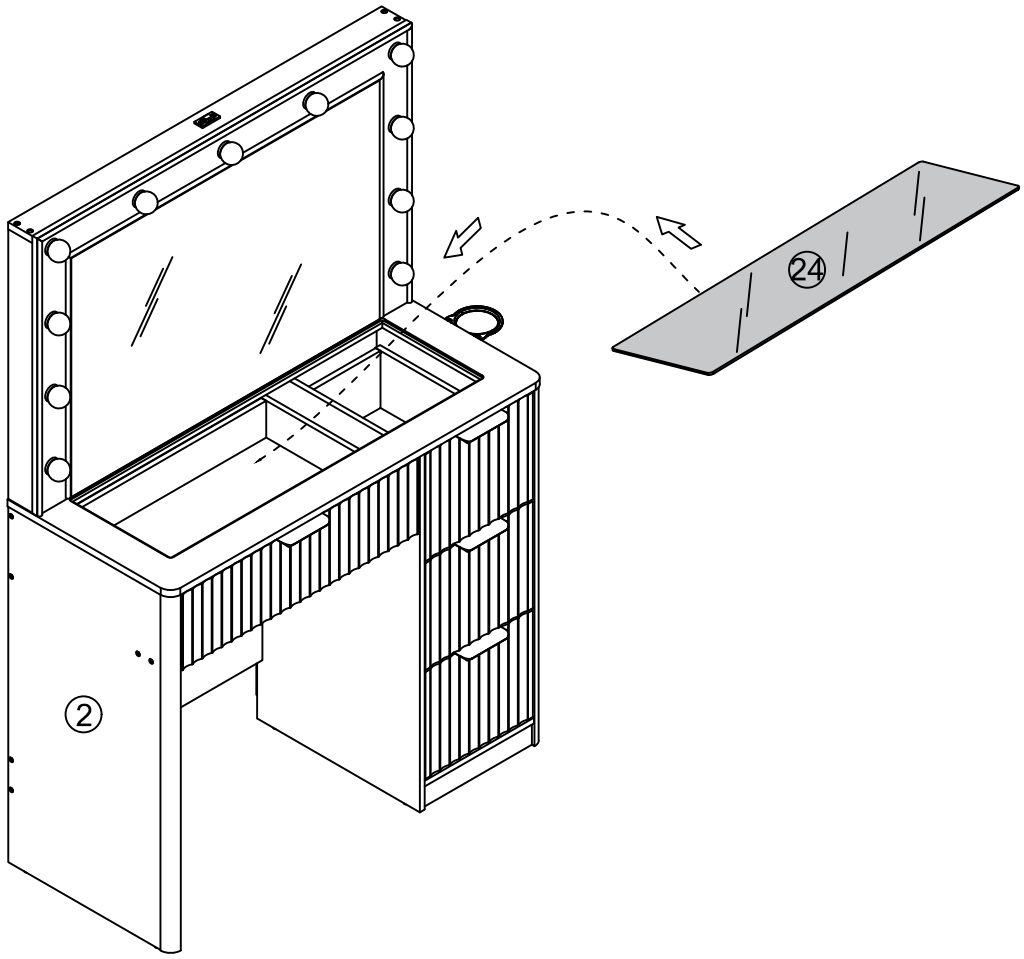

STEP 23

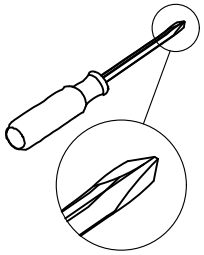

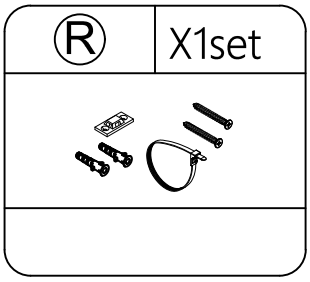

⚠WARNING






Childrern have died from furuiture tipover. To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand , climb or hang on drawers , doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove !


Install the tipping restraint hard ware

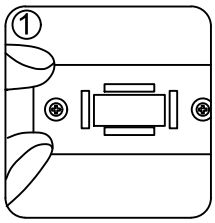


1.make mark on the wall

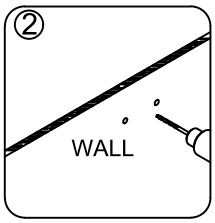


2.drill two Ø6 holes on the wall

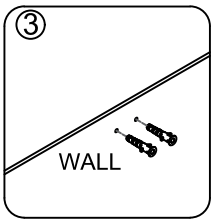

3.put two anchors in the holes

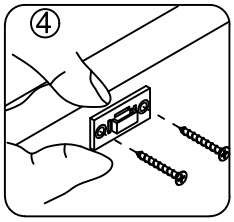

4.fix the device on the wall by the long screws

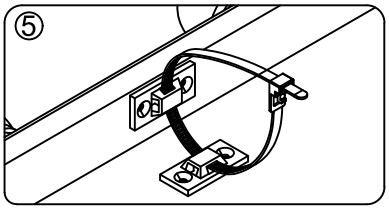

5.Push the cabinet close to the wall so that the two bases are close to each other, and then nylon tie to tighten it.

