


DJ0247-280CM

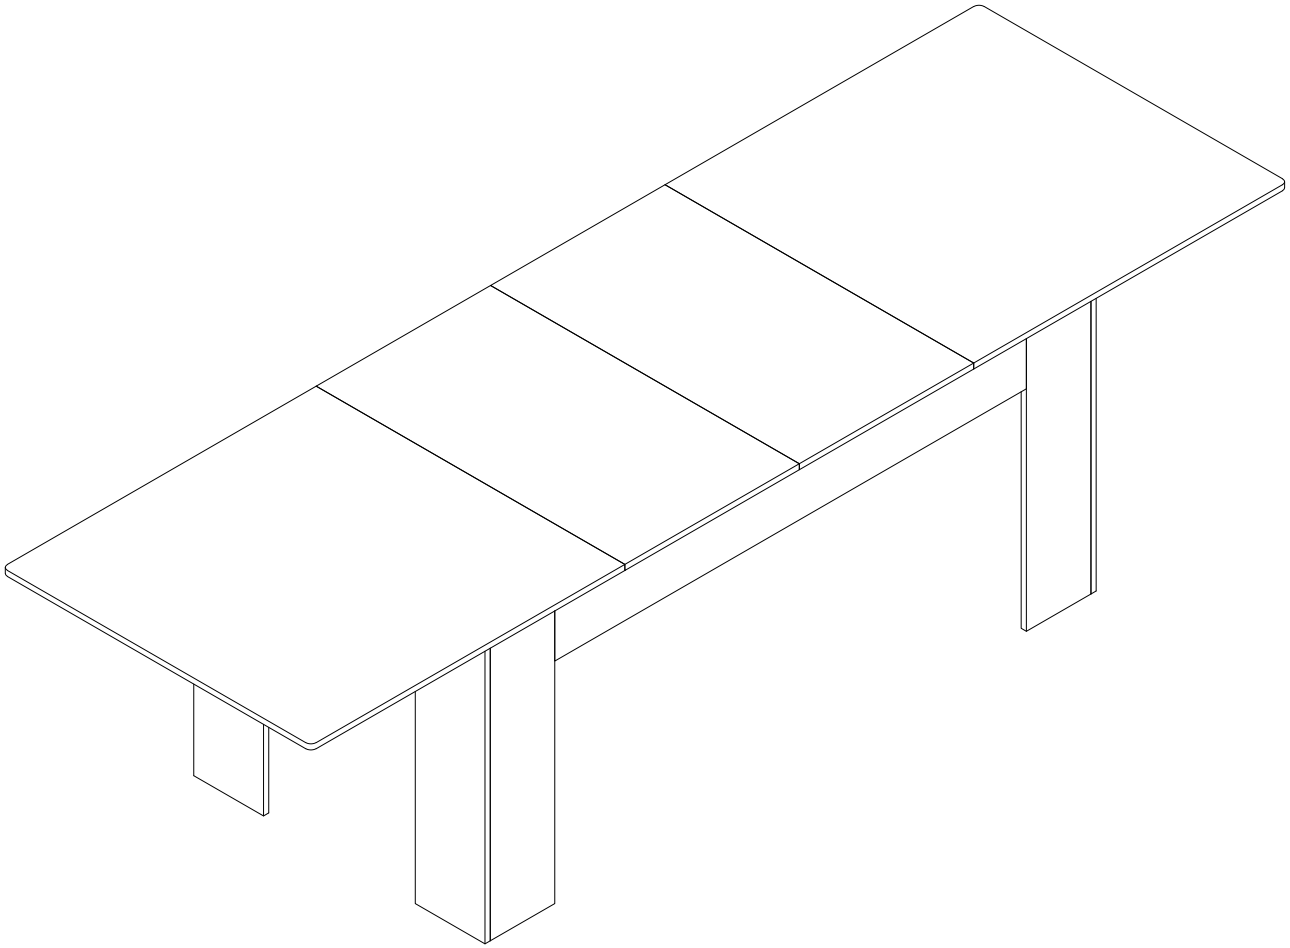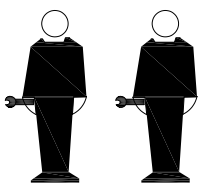


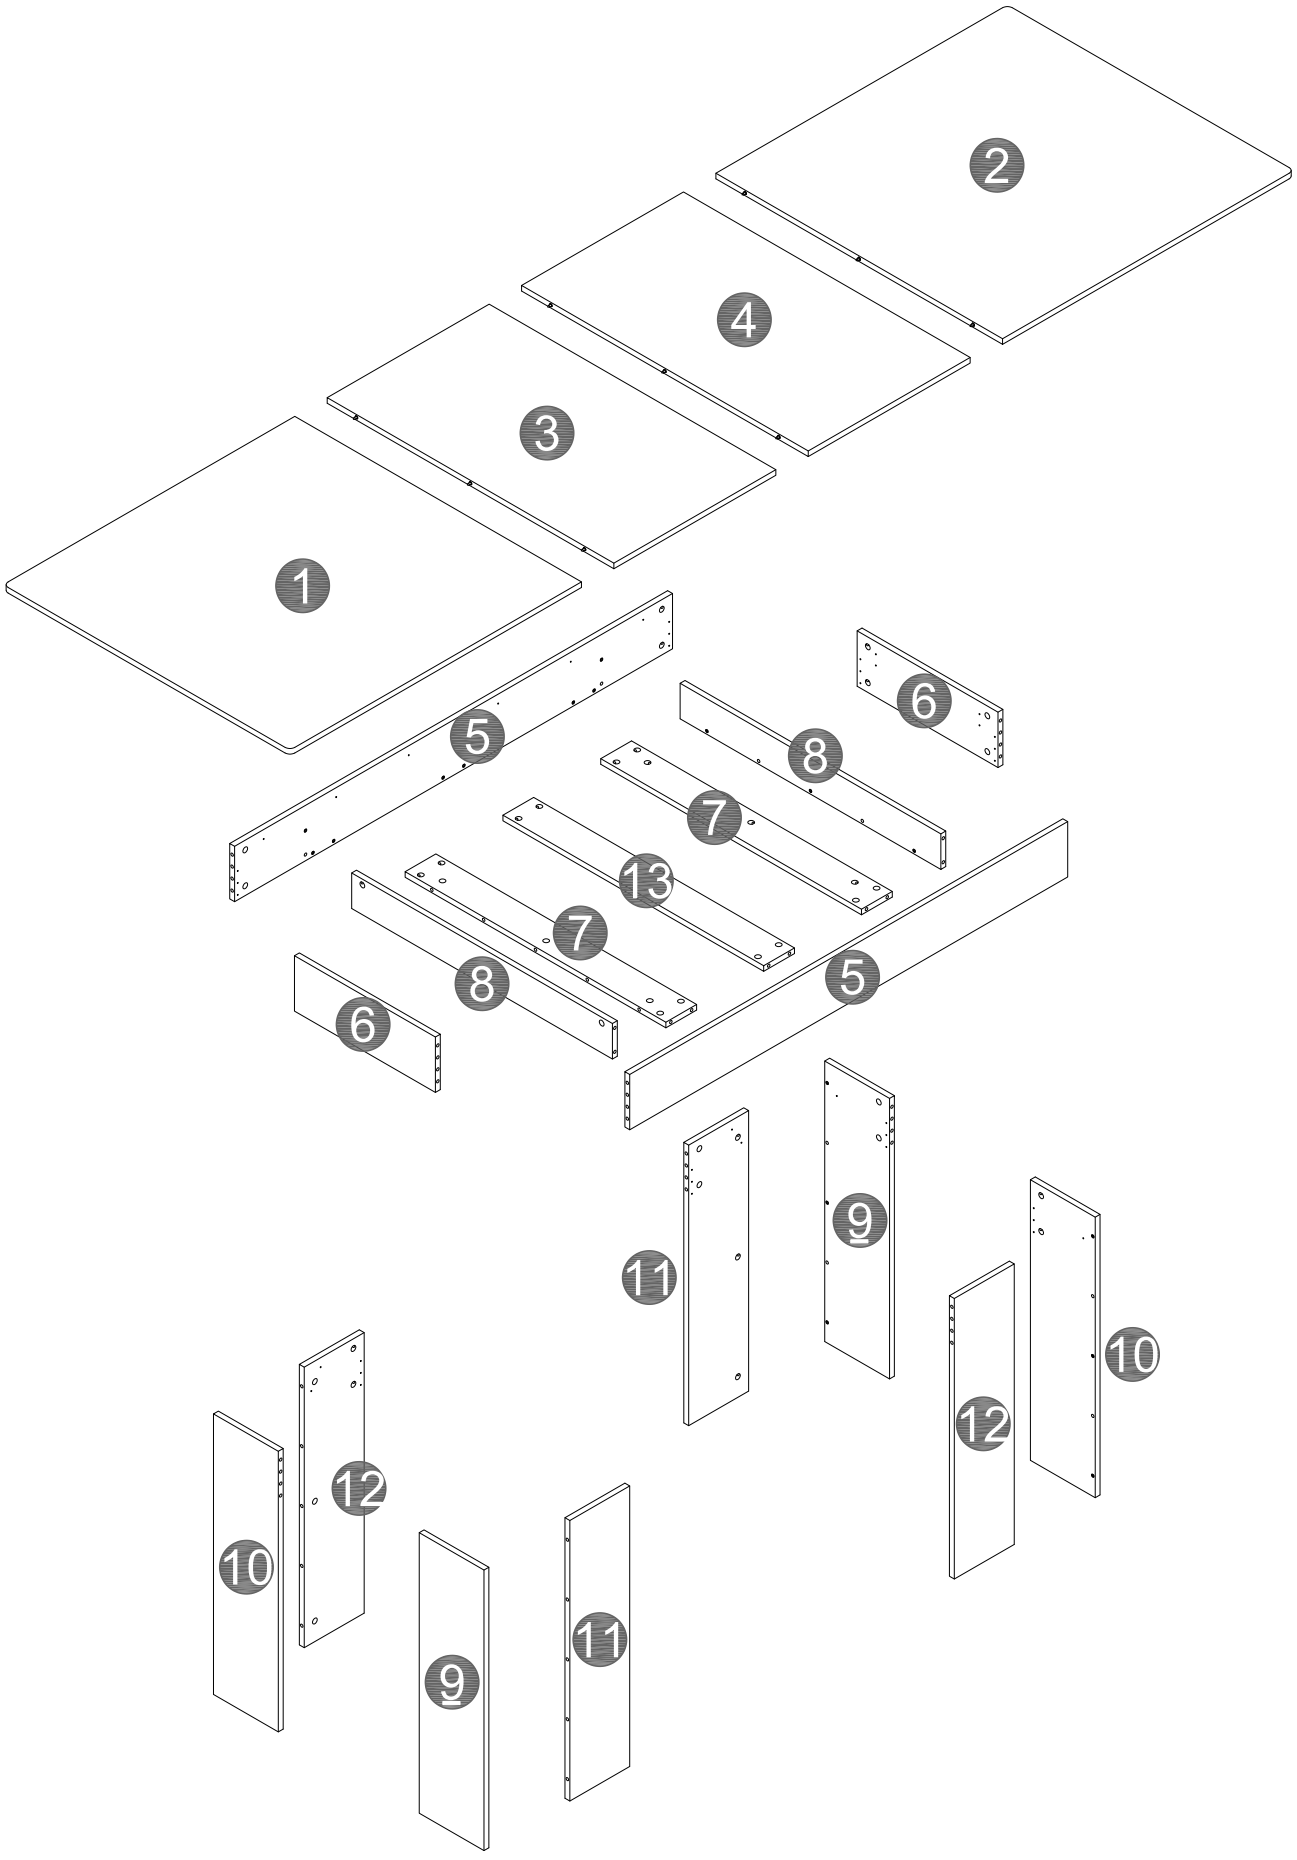


For convenienceand safety, werecommend twopeople to assemble.
If you have any questions, please contact our customer service.


2
4
3
1
5
6
8
7
13
7
8
6
5
11
9
10
12
12
10
9
11


PARTS LIST

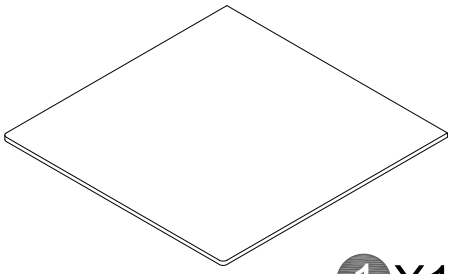


1 X1

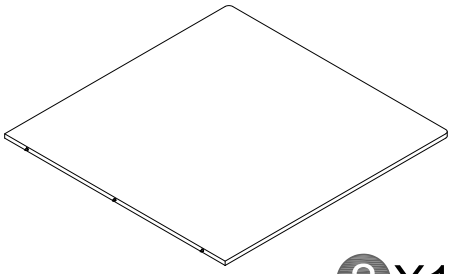


2 X1

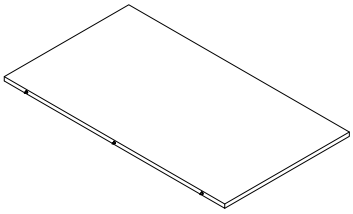


3 X1

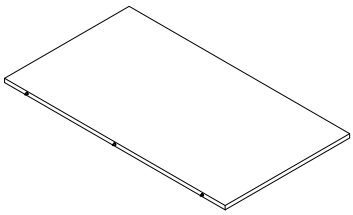


4 X1

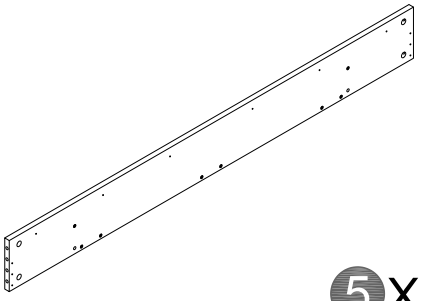


5 X2

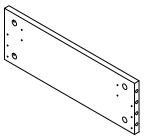


6 X2

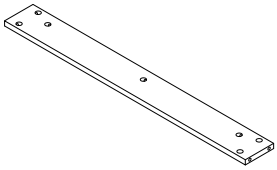


7 X2

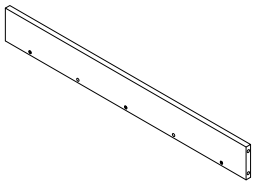


8 X2




9 X2




10 X2




11 X2













12 X2

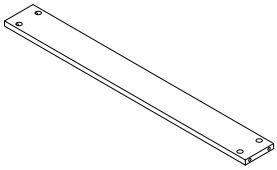

13 X1

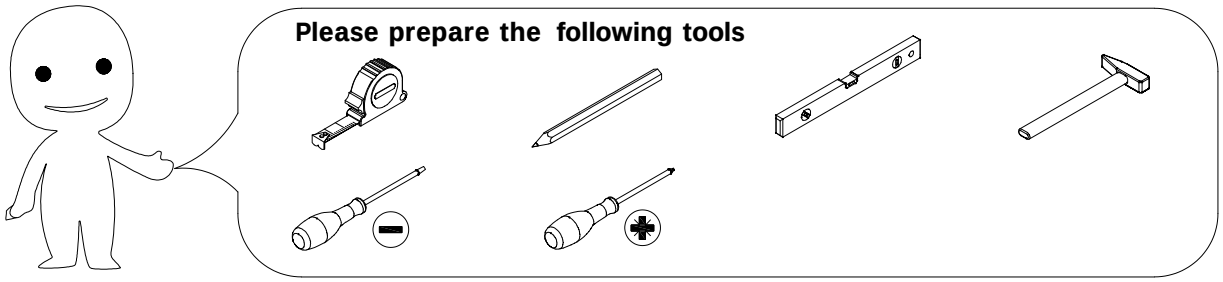

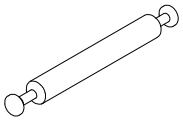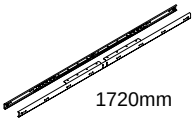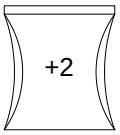A 66+2 PCS  Ø15 x 9.5 mm	B 34+2 PCS 	B_2 16+2 PCS 	C 66+2 PCS 	D 32+2 PCS  Ø8 x30 mm
$F_{1.2}$ 16+2 PCS  M6 x 12	L 1 set  1720mm	N 80+2 PCS  Ø3.5 x 12	N_1 24+2 PCS  Ø3 x 12	T 4 PCS 
T_1 8 PCS  80*40*2mm	U 4 PCS 	W 6 PCS  W1 W2	Z 1 PC  4mm	 +2 SPARE BAG

⚠ Tips: The number after "+" represents the spare hardware.

IMPORTANT NOTES:

The item you are purchasing is a large furniture product that requires a large number of components to assemble.

Please take all parts boxes out of the packaging and place them in order. So that you can follow the steps in the installation manual to find the corresponding parts box and quantity of need when installing. Please do not take too many parts to prevent the parts from scattering.


Please be patient and follow the instructions step by step for installation. If you have any problems during the installation process, you can ask our customer service to help you solve them!

SAFETY TIPS:

Static charge may cause dust on foam – clean with a dry or damp cloth. Small foam strands may be present – handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines.


Cam Lock/Dowel Placement Supplement

CORRECT 1

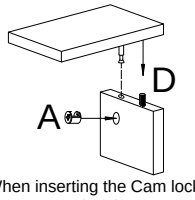


When inserting the Cam lock, make sure that the open End of the cam Lock faces the Cam Screw Entry. The Dowel will be inserted in the hole NEXT to the Cam Lock/Cam Screw hole.

INCORRECT 2

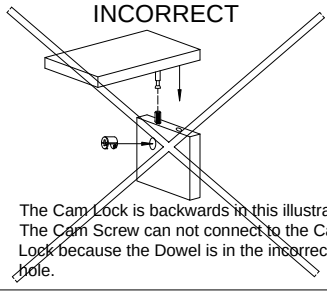


The Cam Lock is backwards in this illustration. The Cam Screw can not connect to the Cam Lock because the Dowel is in the incorrect hole.


3




To tighten, turn the Cam Lock CLOCKWISE until the arrow or "△" signs point AWAY from the connected board.




***NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN**.

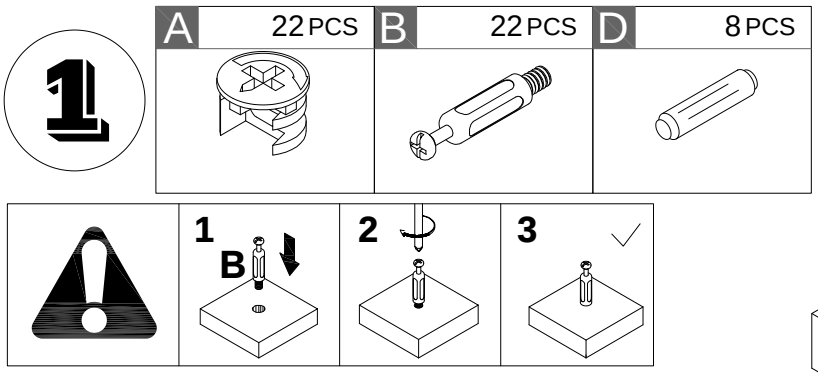

A 22 PCS
B 22 PCS
D 8 PCS
1
B
2
3

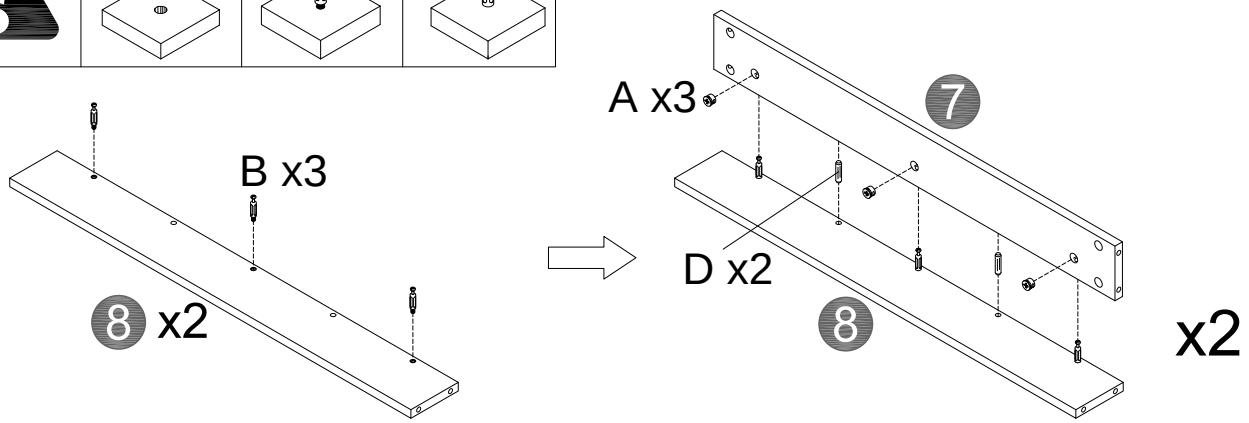

A x3
7
B x3
D x2
8 x2
8
x2

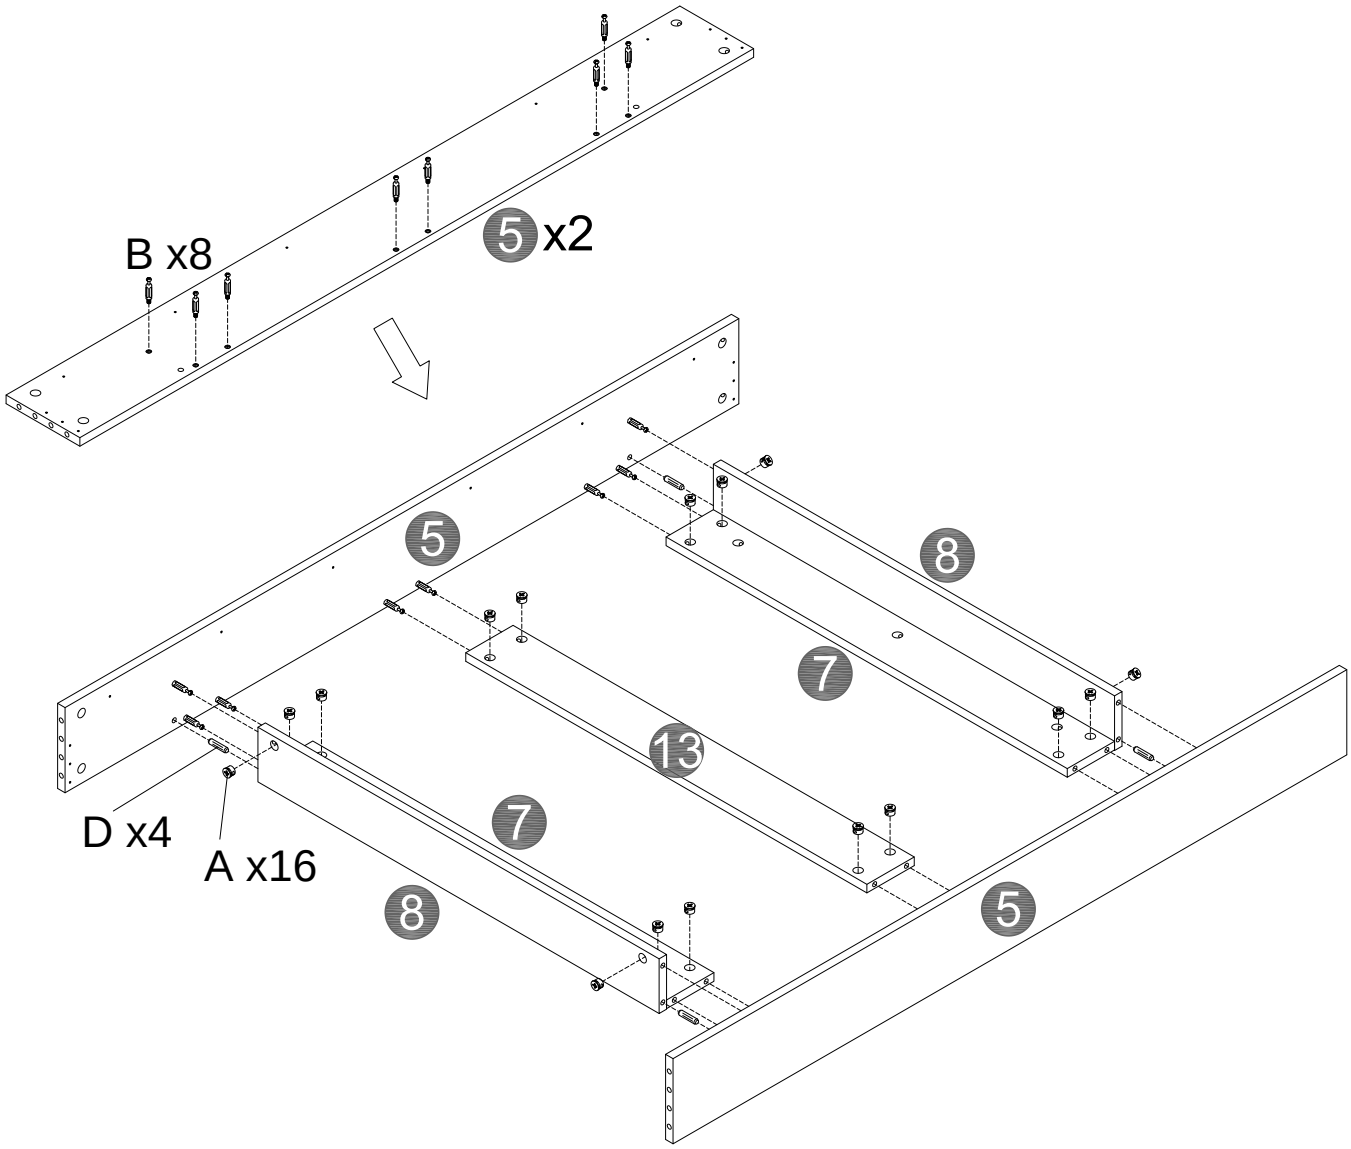

B x8
5 x2
5
8
7
13
D x4
A x16
7
8
5


2

A 12 PCS	B 12 PCS	D 8 PCS
		

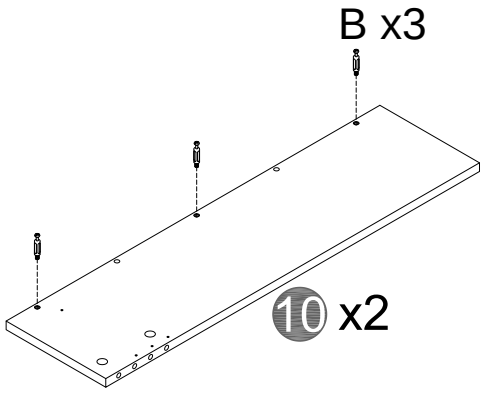

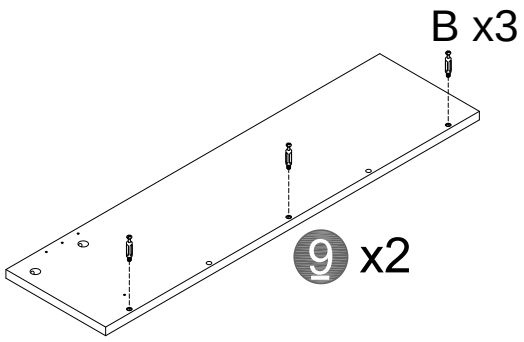


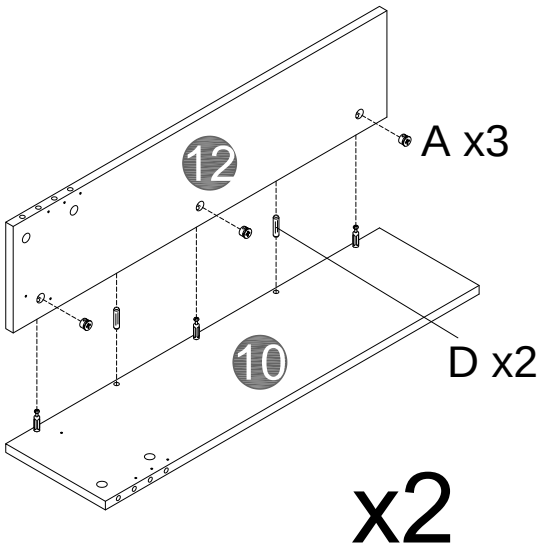


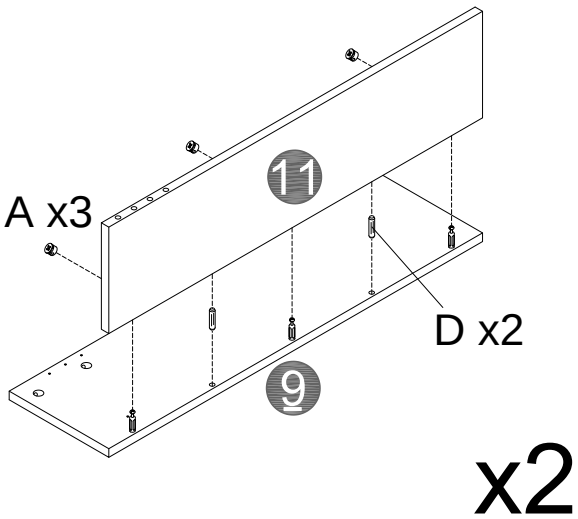


3



A	B2	D	N	T	T1
16 PCS	8 PCS	8 PCS	32 PCS	4 PCS	4 PCS

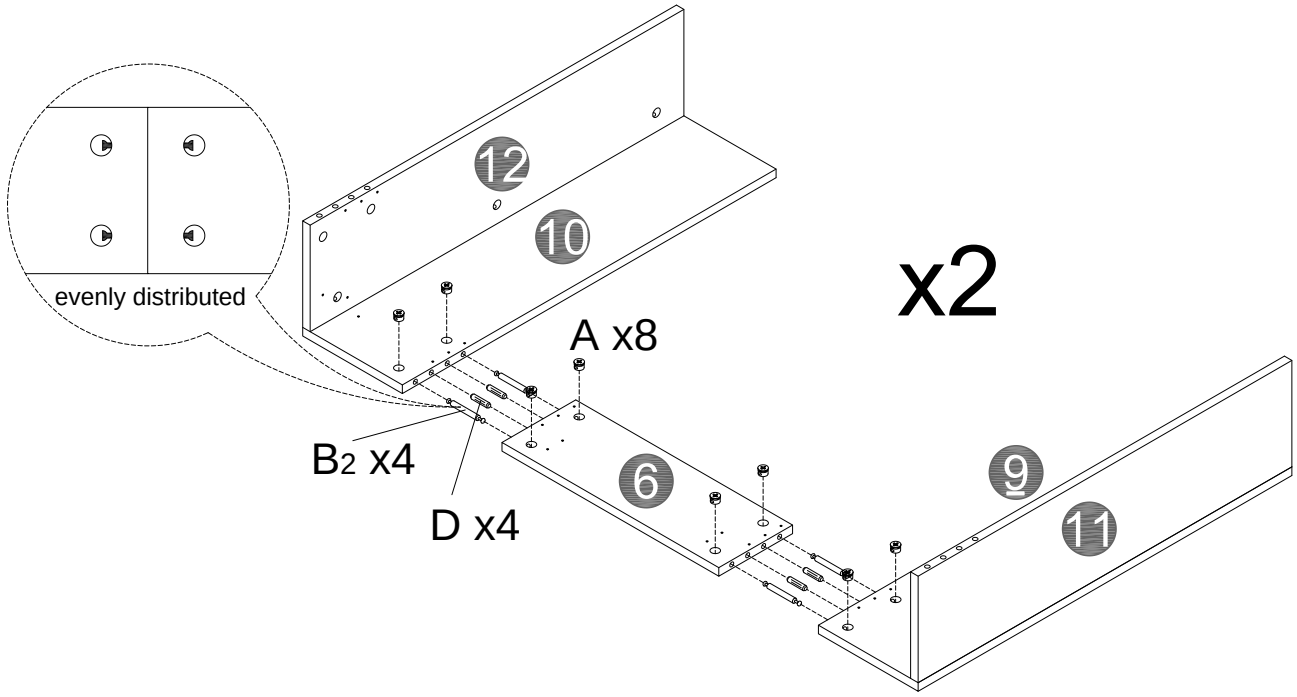


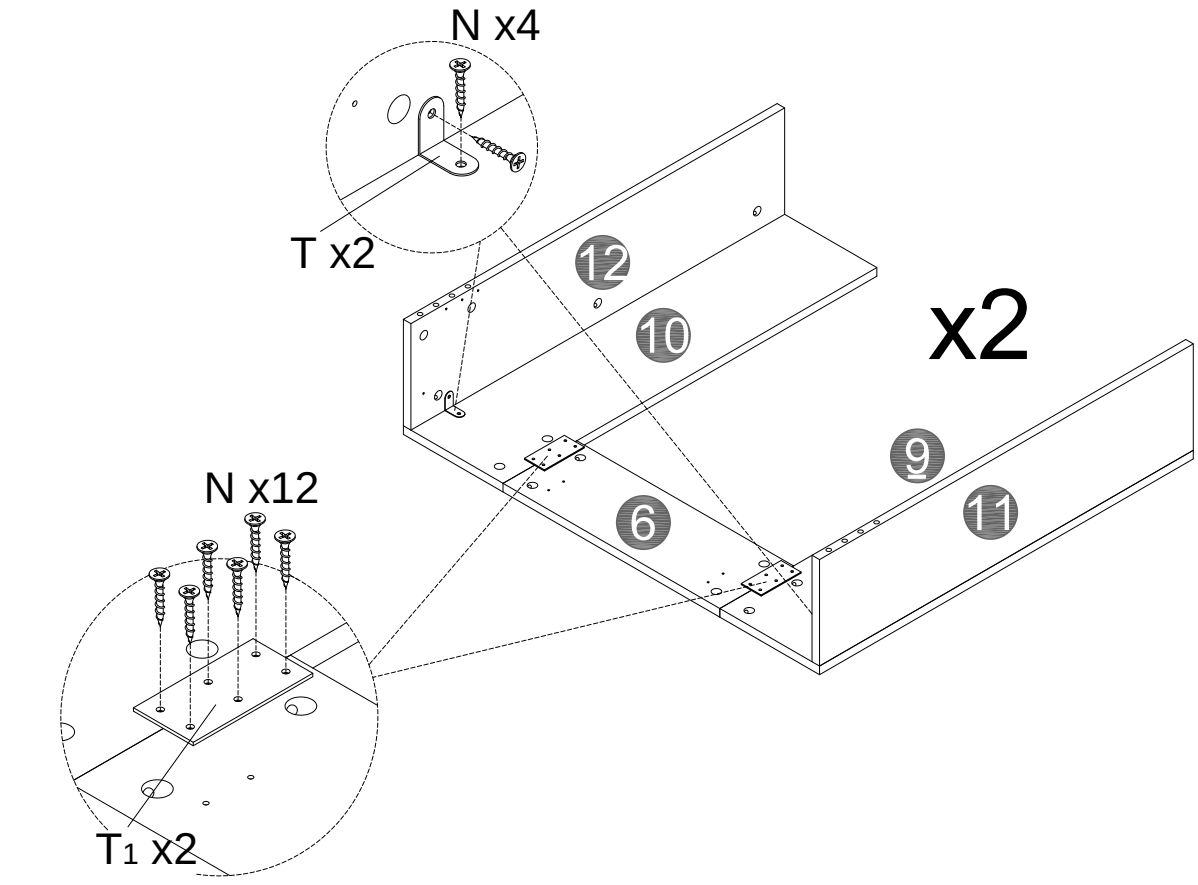


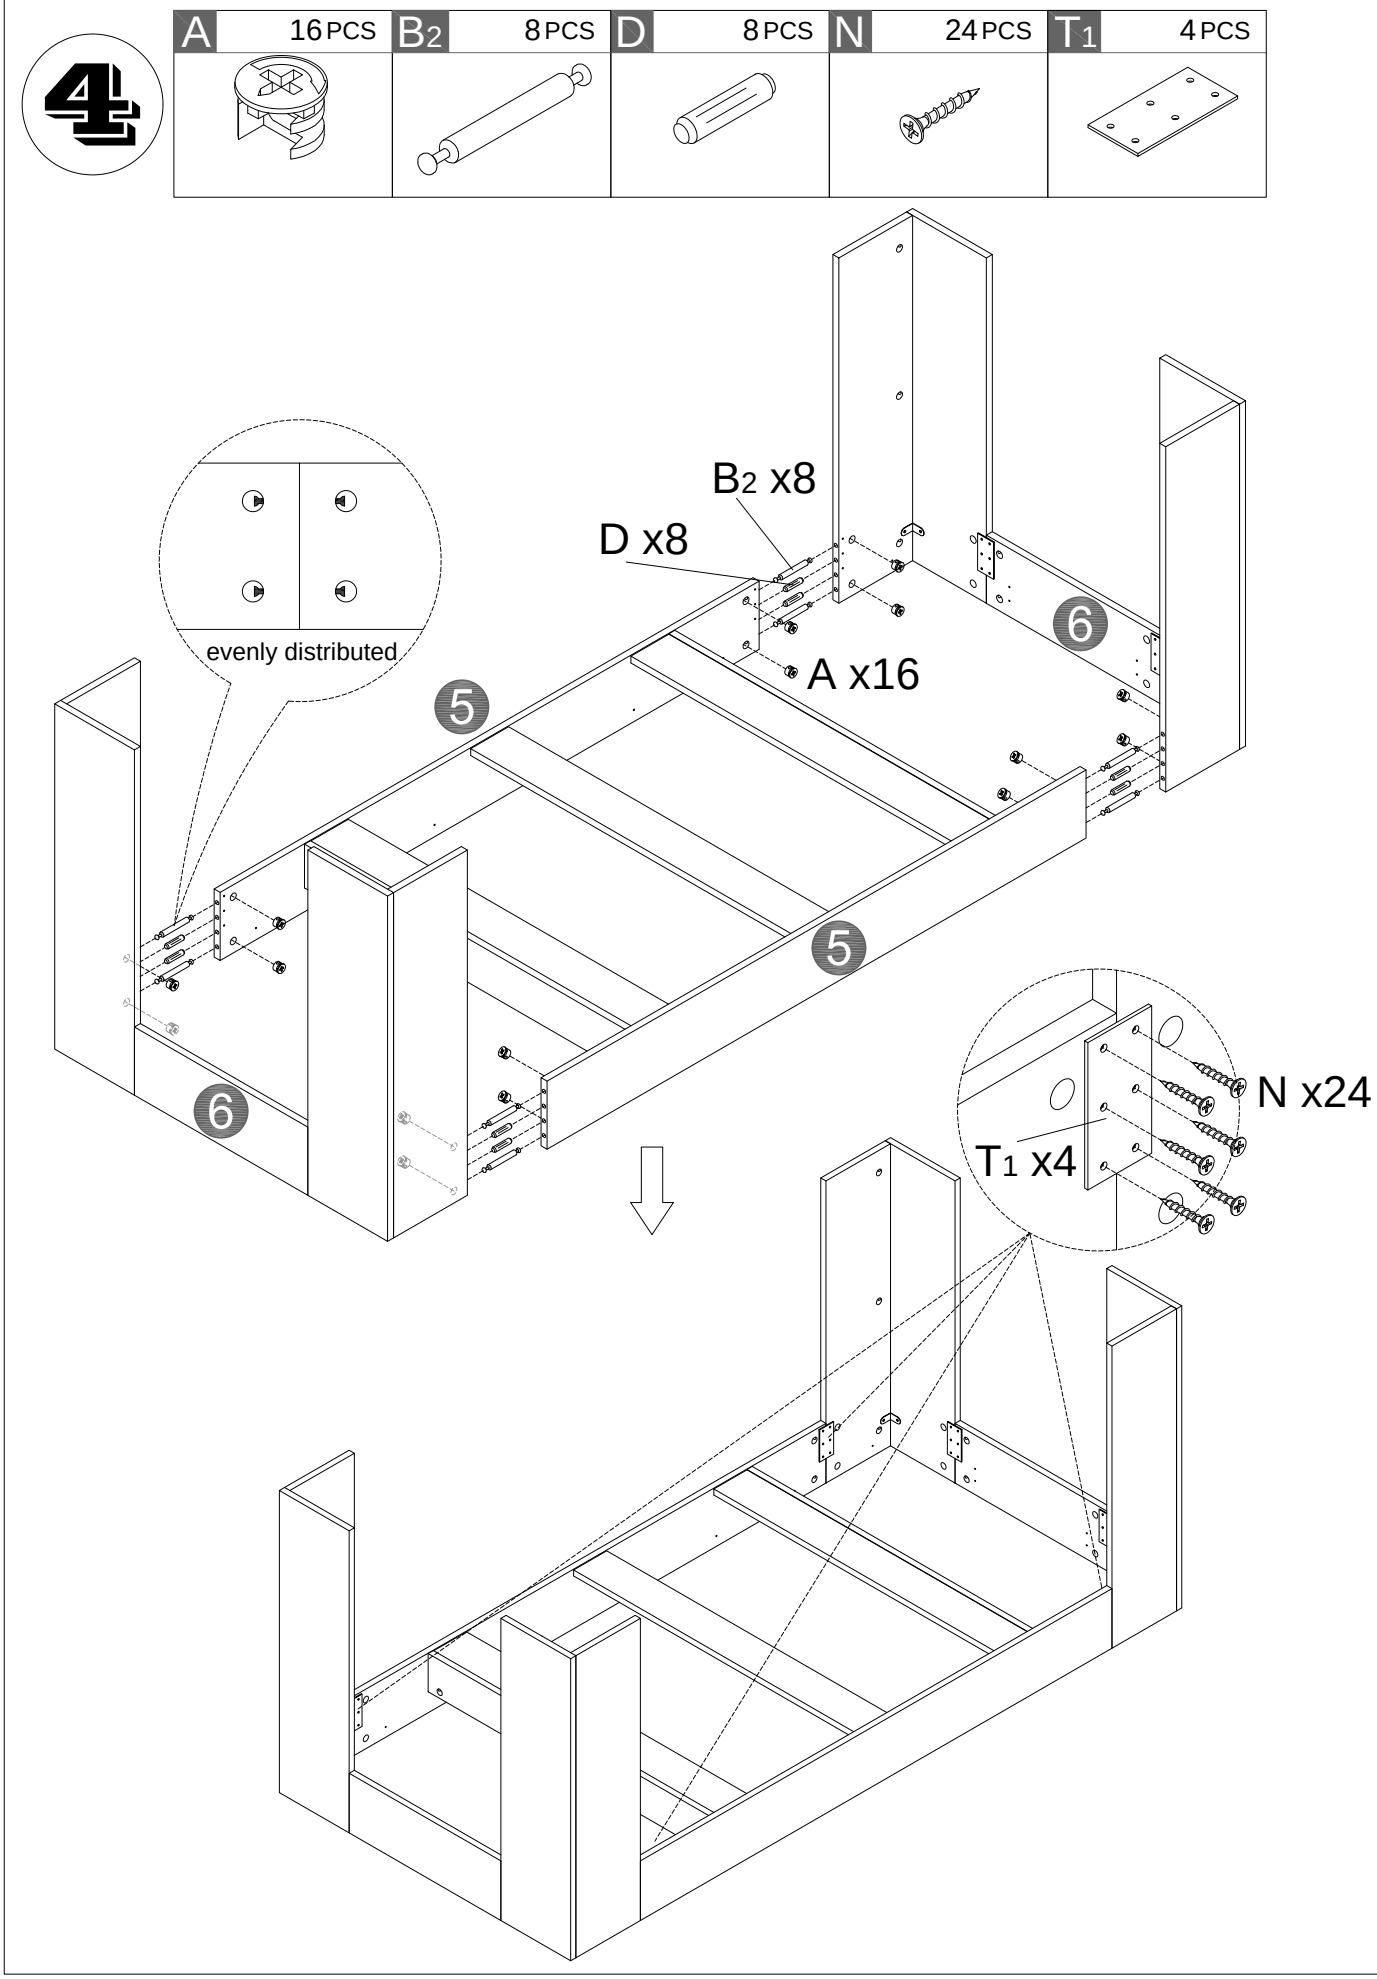
4
A 16 PCS
B2 8 PCS
D 8 PCS
N 24 PCS
T1 4 PCS
B2 x8
D x8
A x16
evenly distributed
5
5
6
6
N x24
T1 x4

5

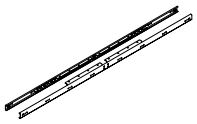L	N	N1	W	U
1 set	24 PCS	24 PCS	6 PCS	4 PCS
			 W1 W2	

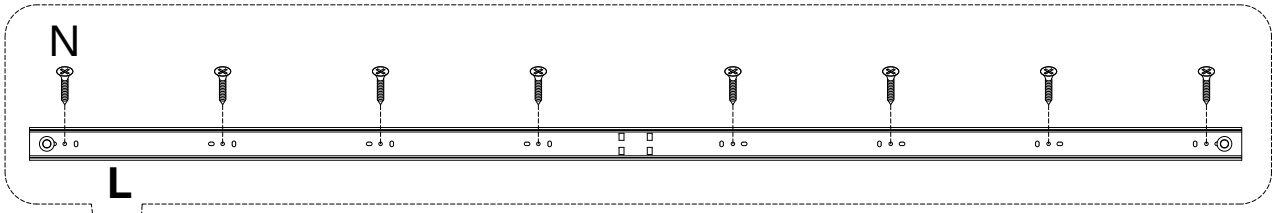


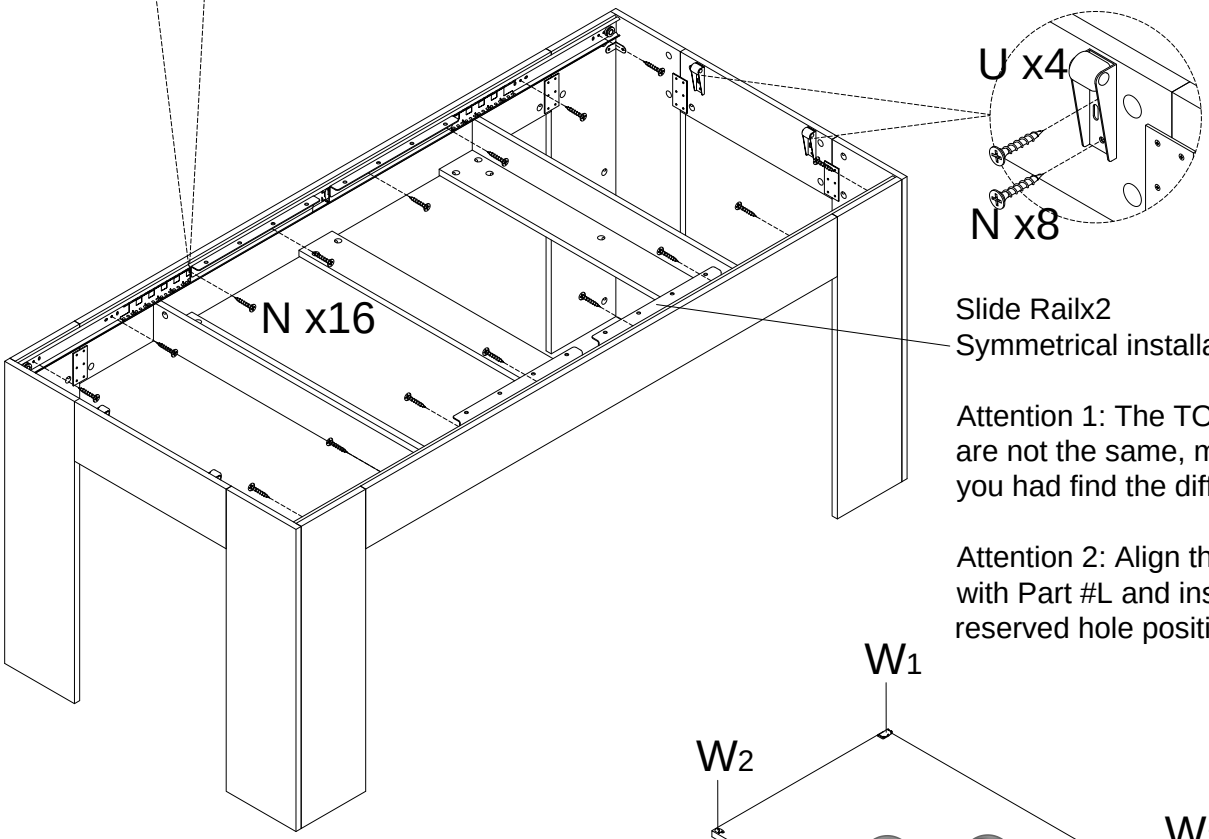

Slide Railx2
Symmetrical installation

Attention 1: The TOP & Bottom are not the same, make sure you had find the difference

Attention 2: Align the slide rail with Part #L and install it at the reserved hole position

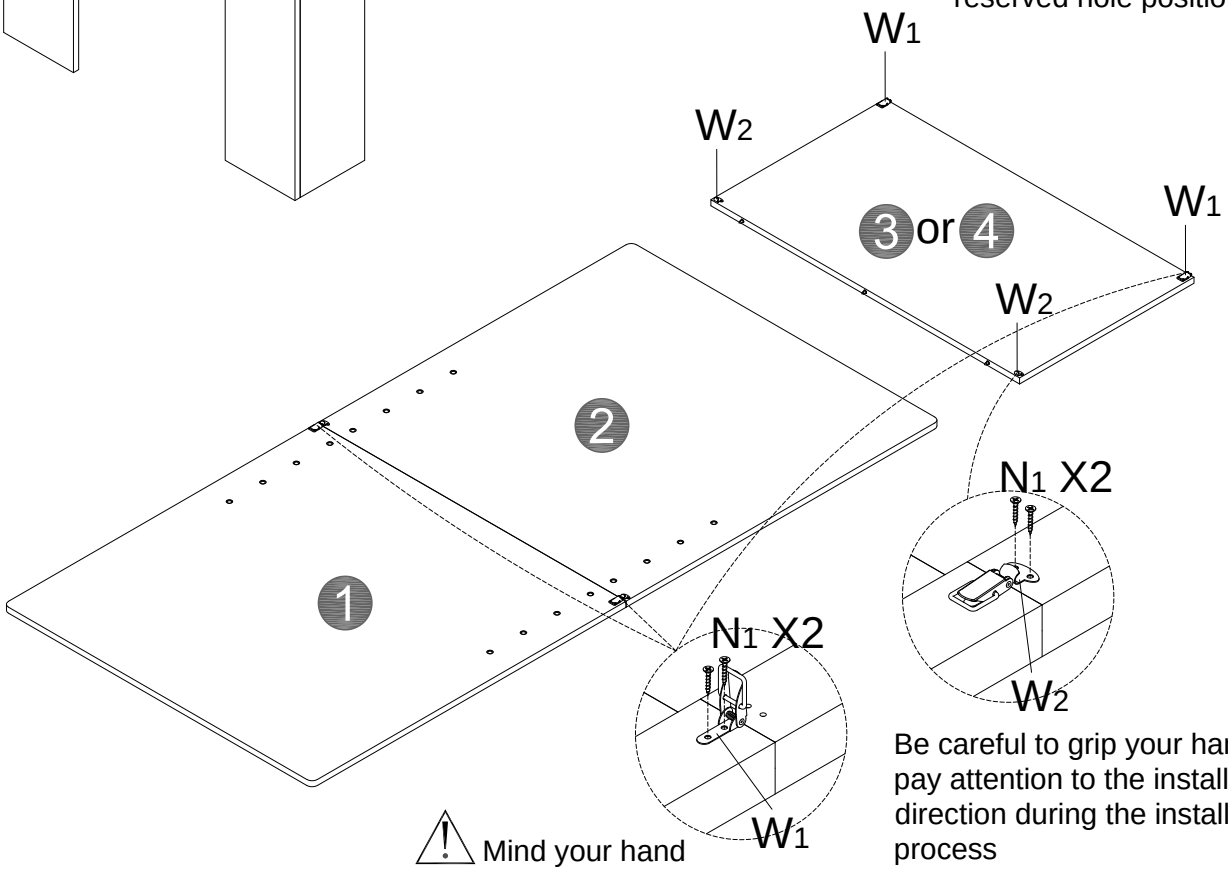


Mind your hand


Be careful to grip your hands and pay attention to the installavtion direction during the installation process

6

F1.2 16 PCS

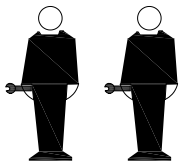



This step requires two people to complete

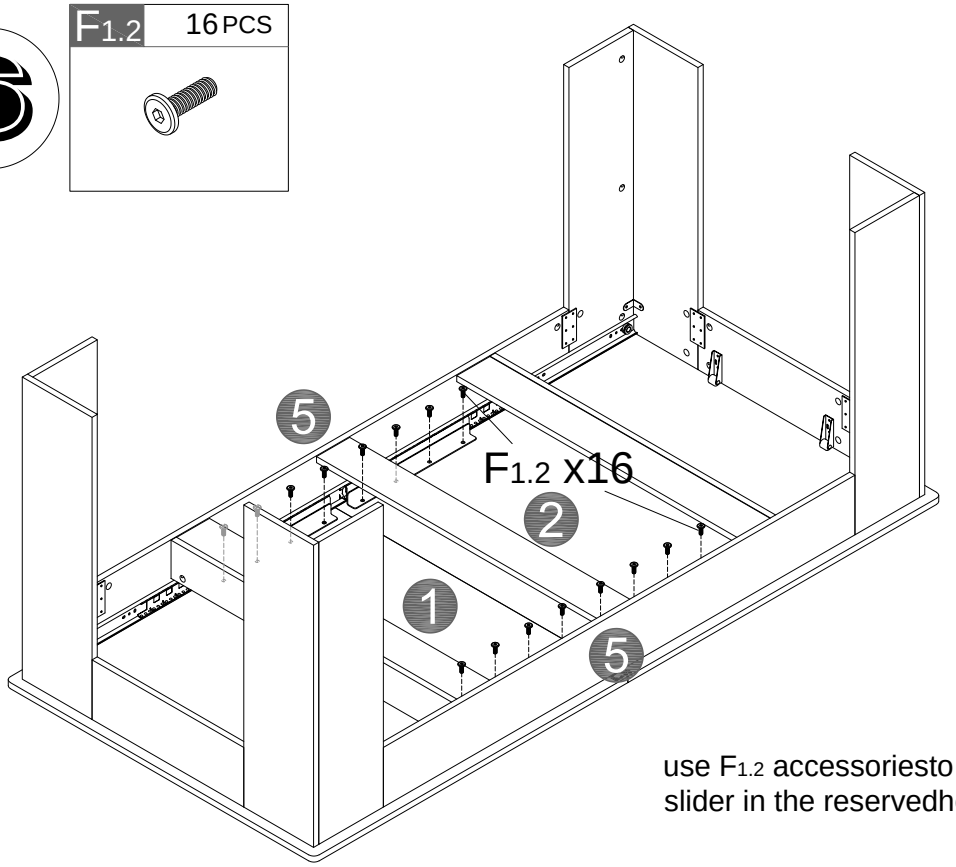

use F1.2 accessoriesto install the slider in the reservedholes


F1.2



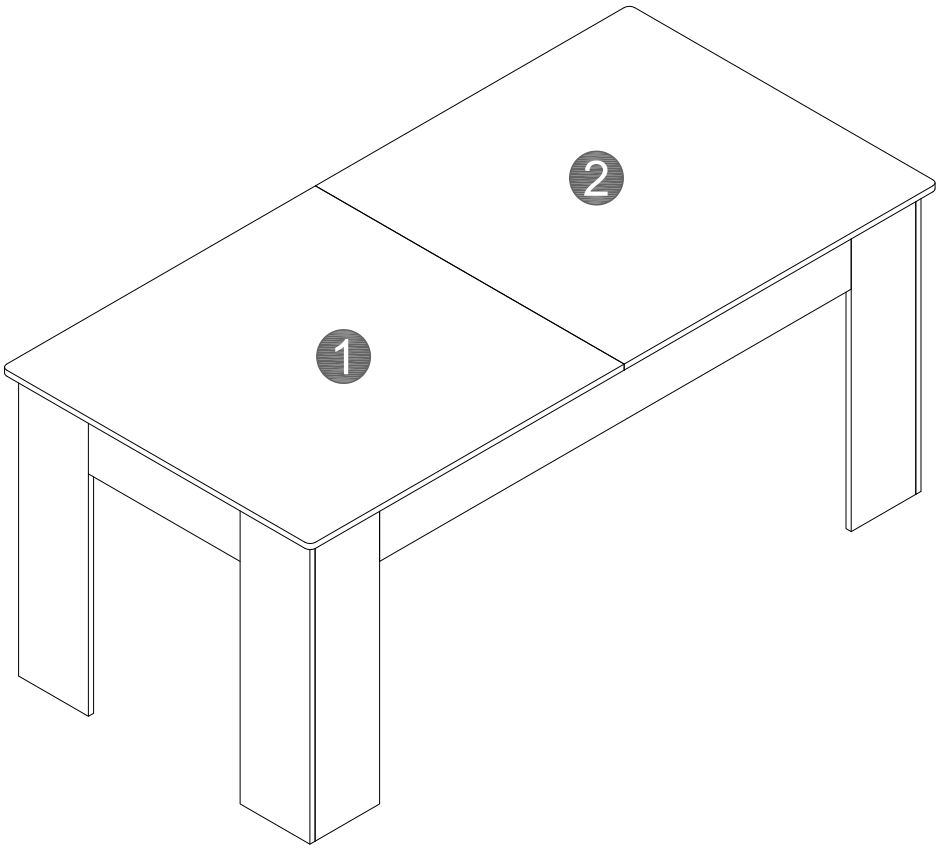


7


First tilt one side of board 3 4, and then place it inward

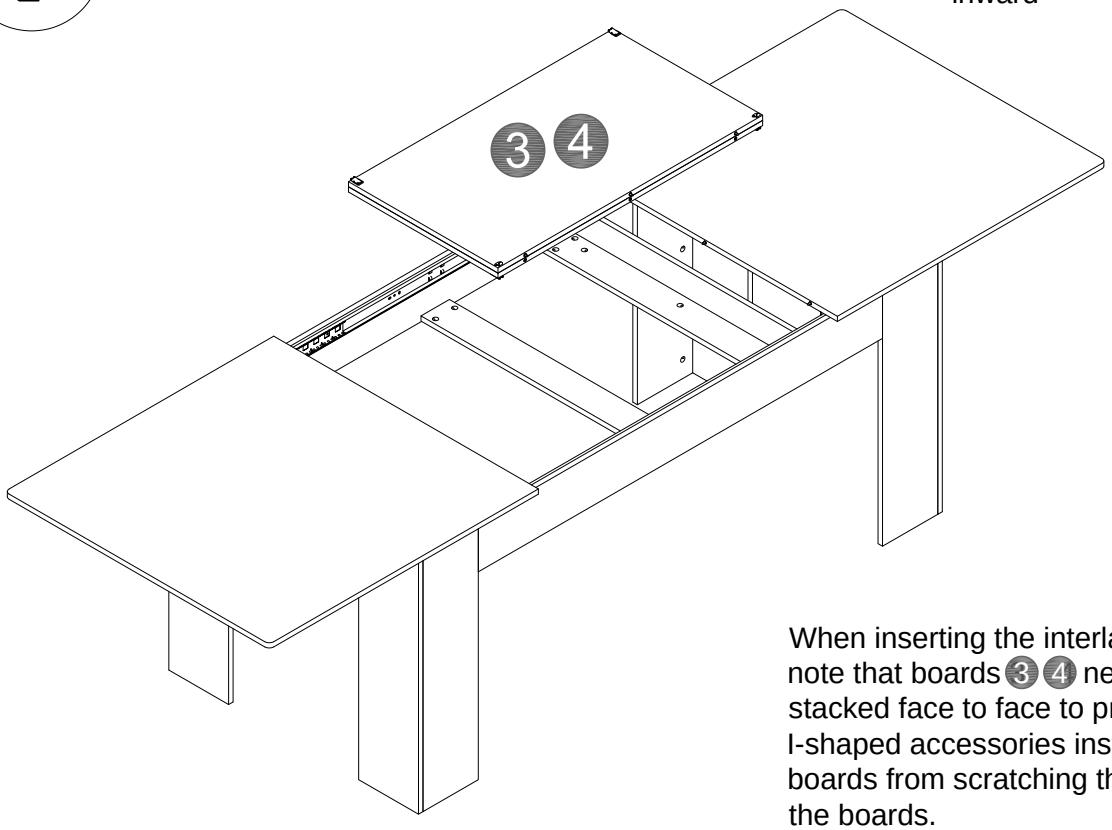


When inserting the interlayer, please note that boards 3 4 need to be stacked face to face to prevent the I-shaped accessories installed on the boards from scratching the surface of the boards.

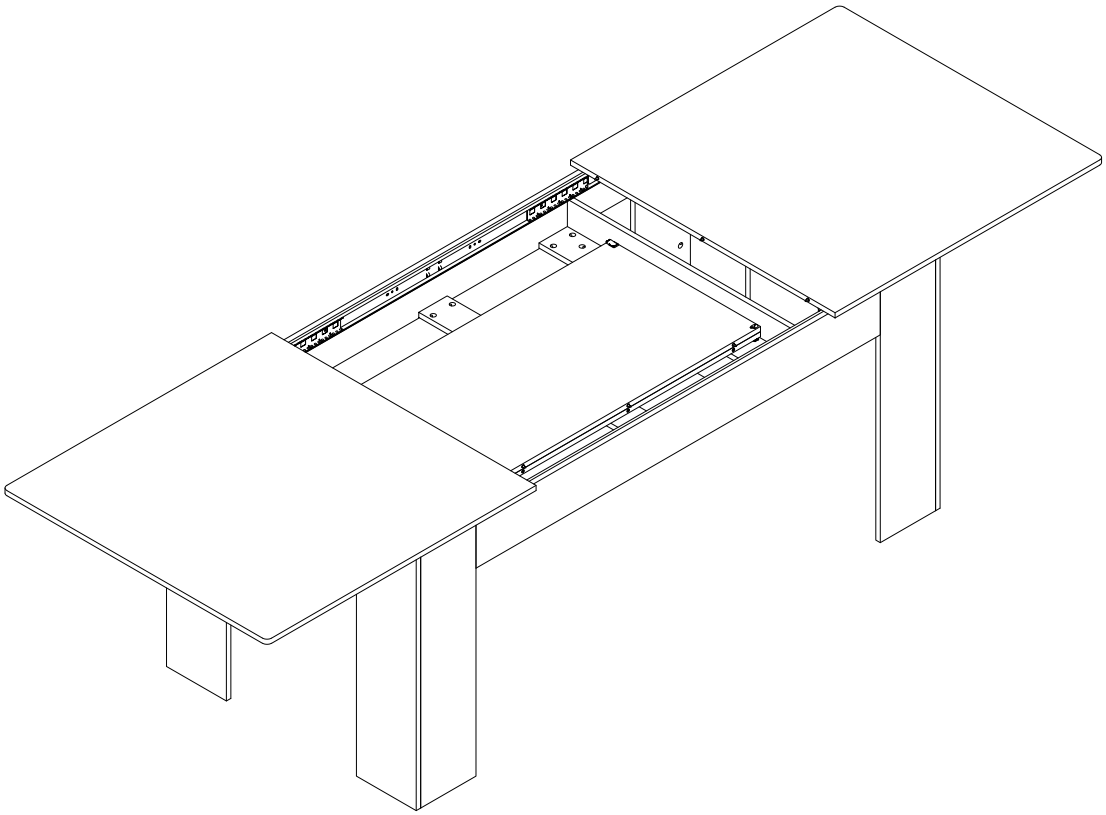

8

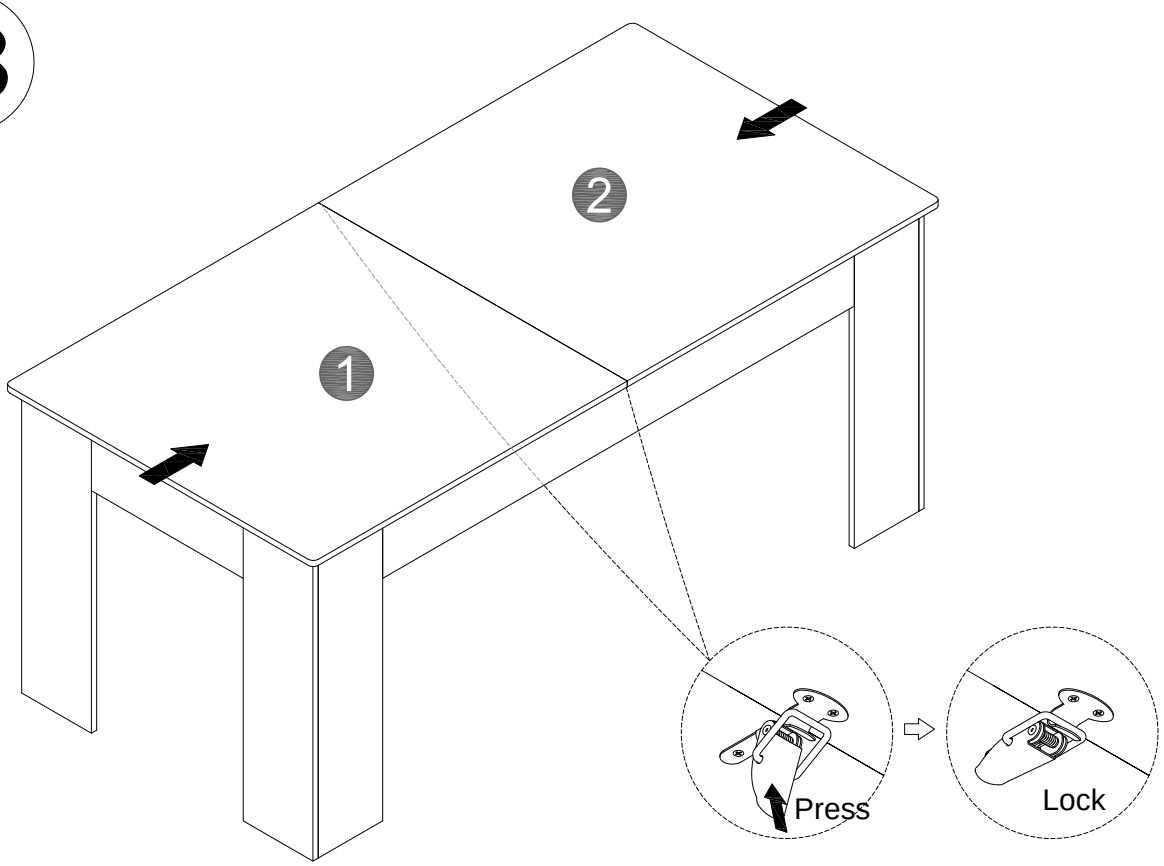



The first size installation is complete.

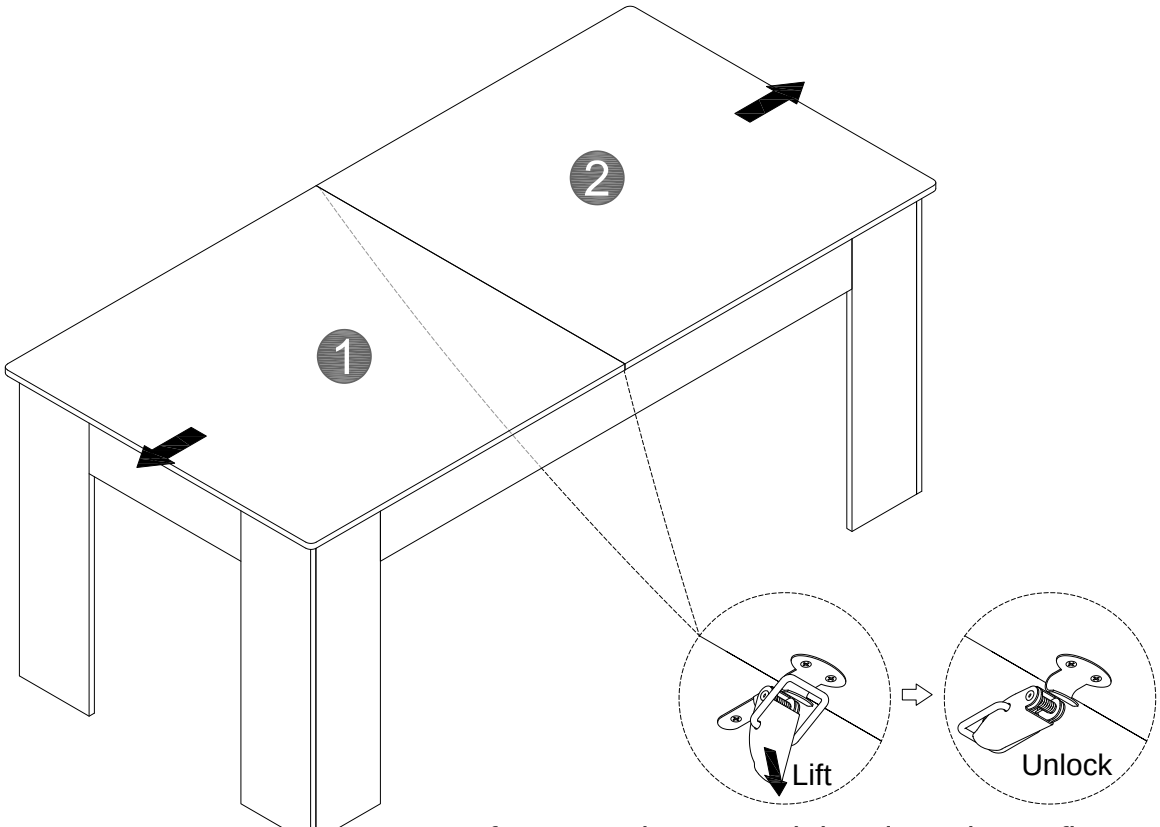


If you need to extend the size, please first open the buckle and take out the required board.

9 Installation method of Extended Size 1

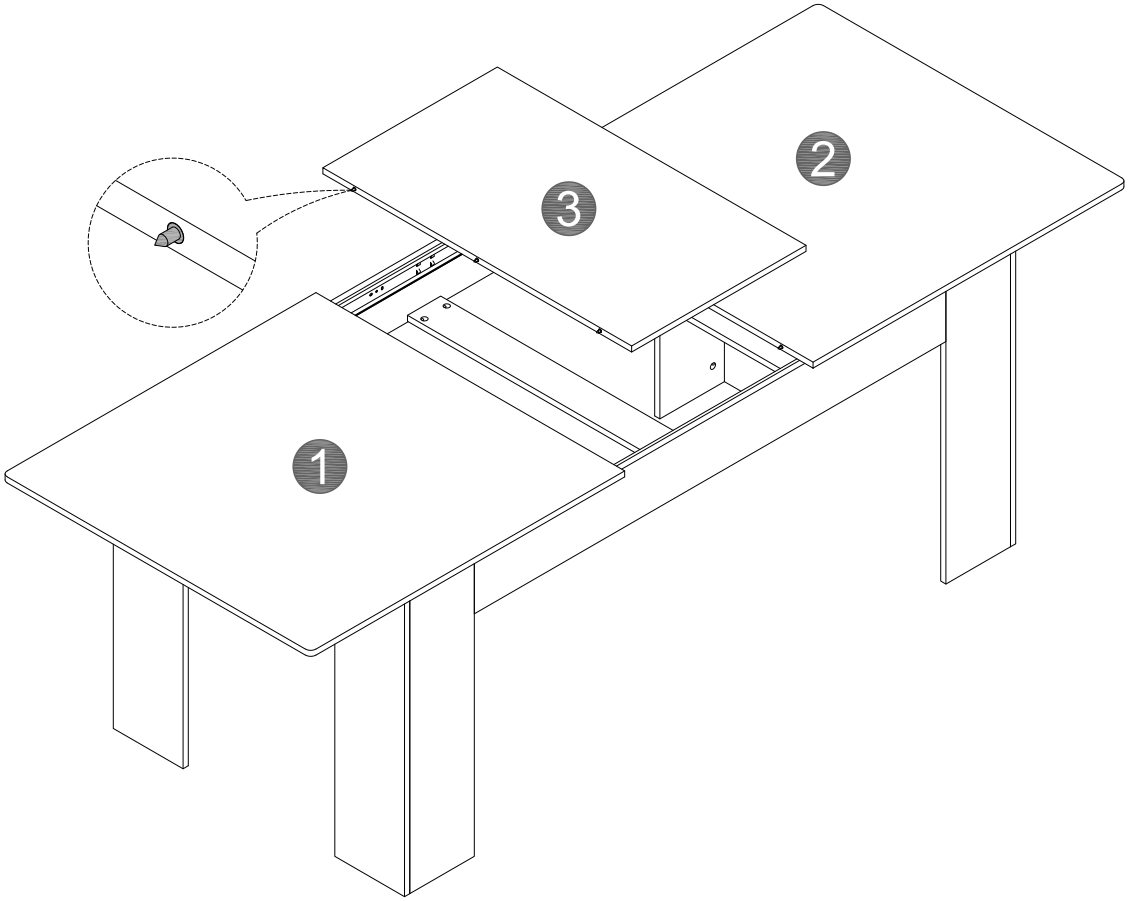

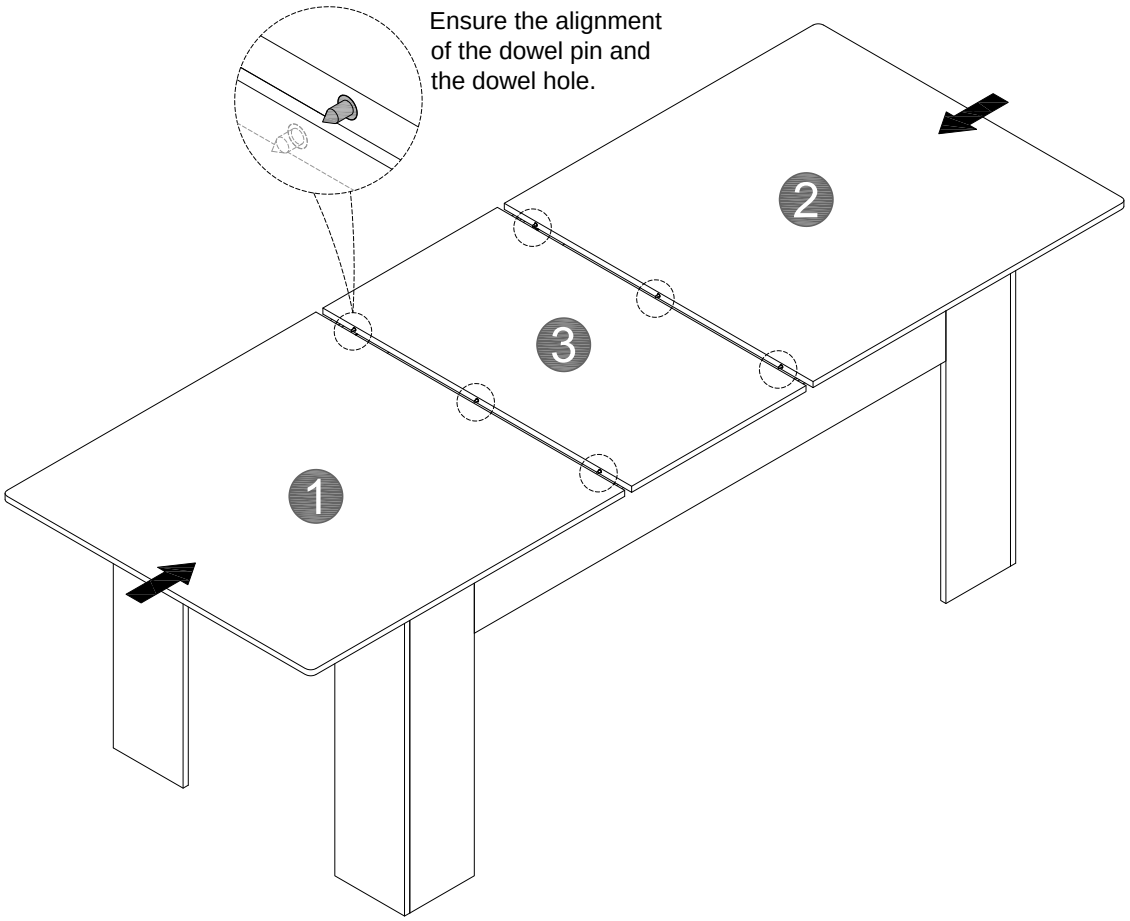


10

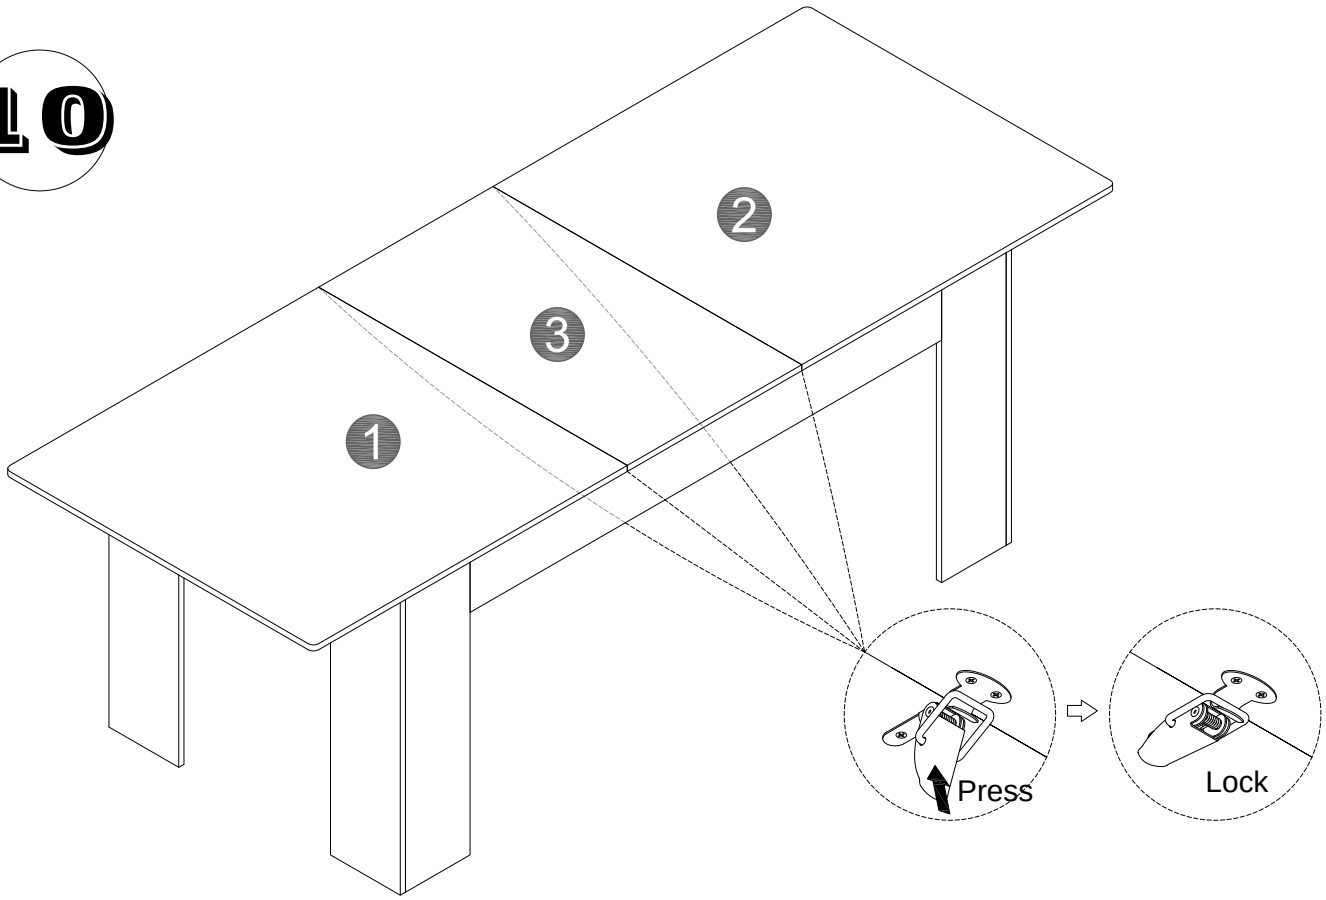



Extended Size 1 installation completed

Installation method of Extended Size 2

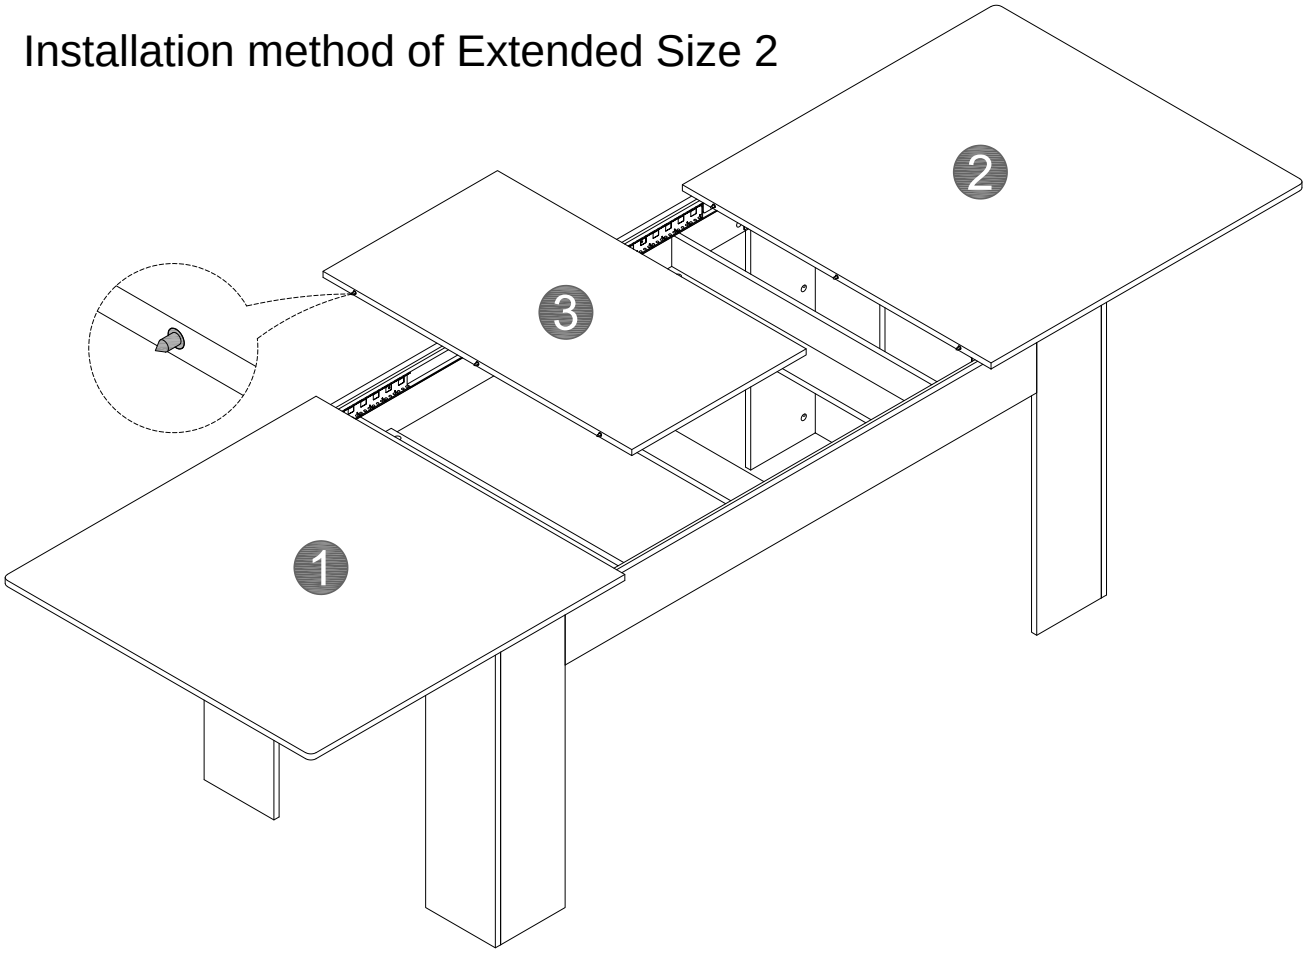



11

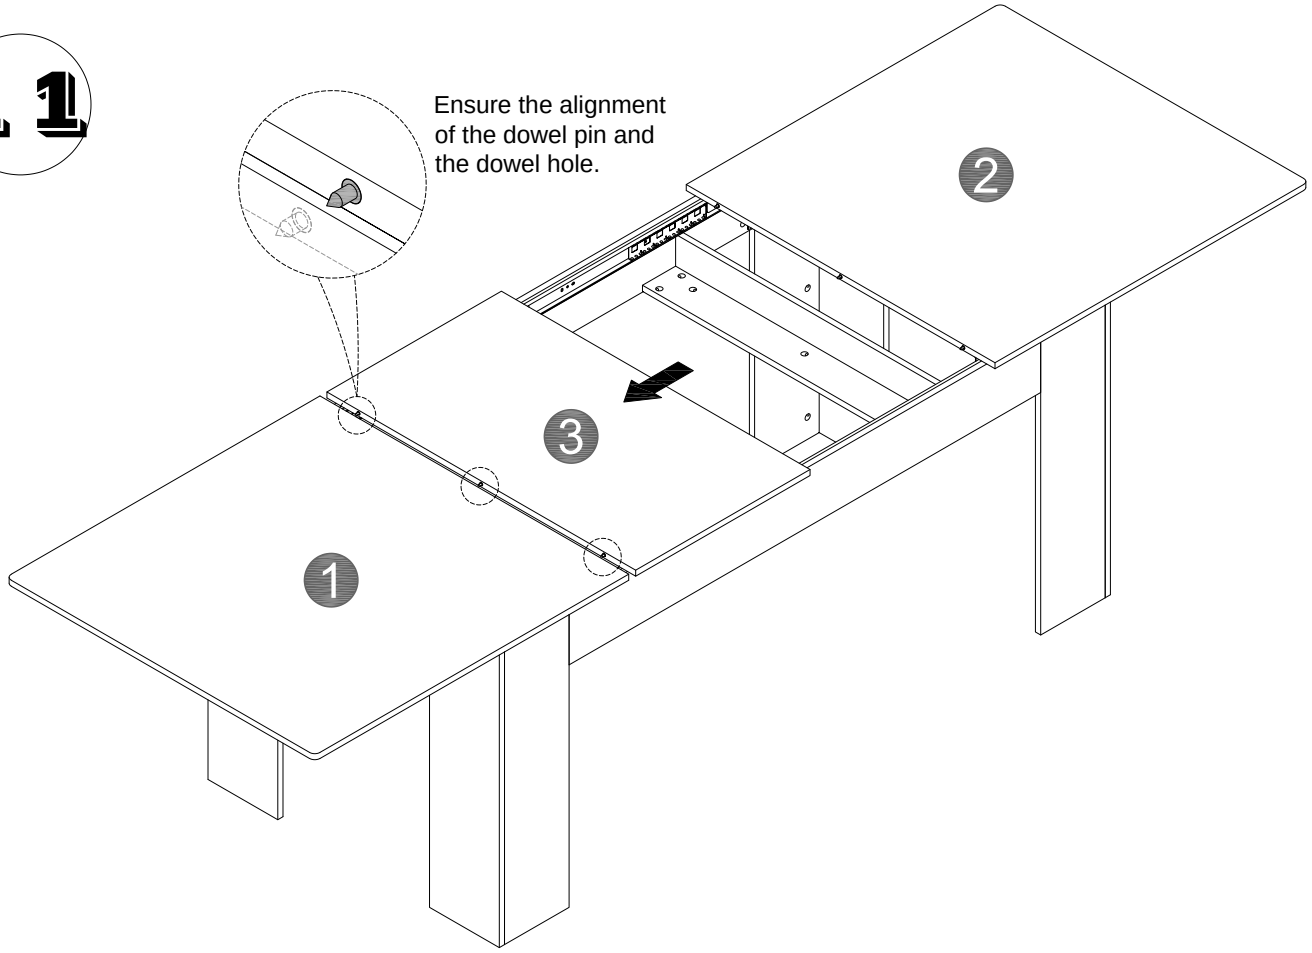
Ensure the alignment
of the dowel pin and
the dowel hole.
1
2
3

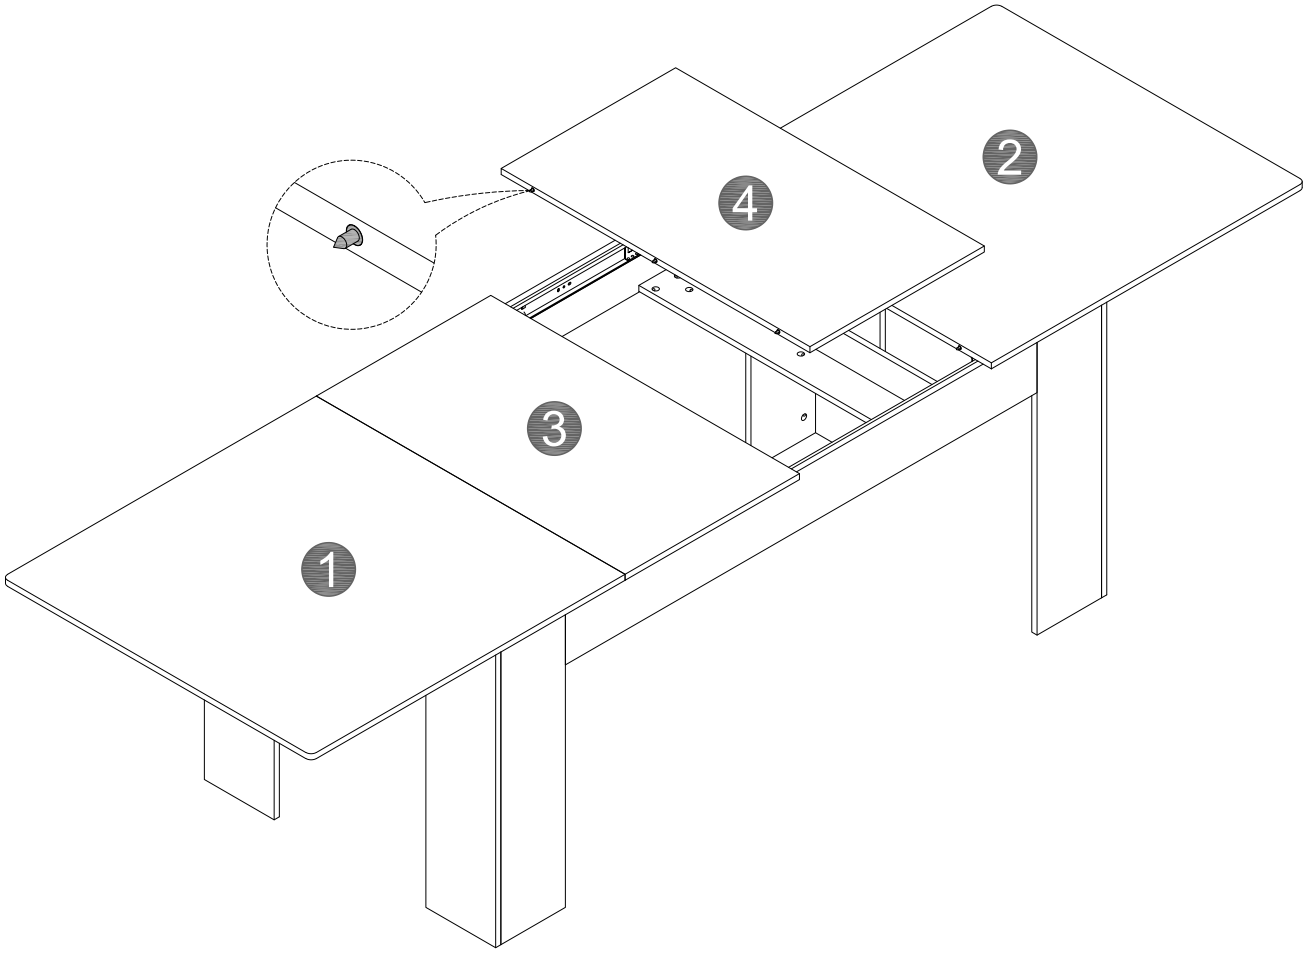
1
2
3
4

12

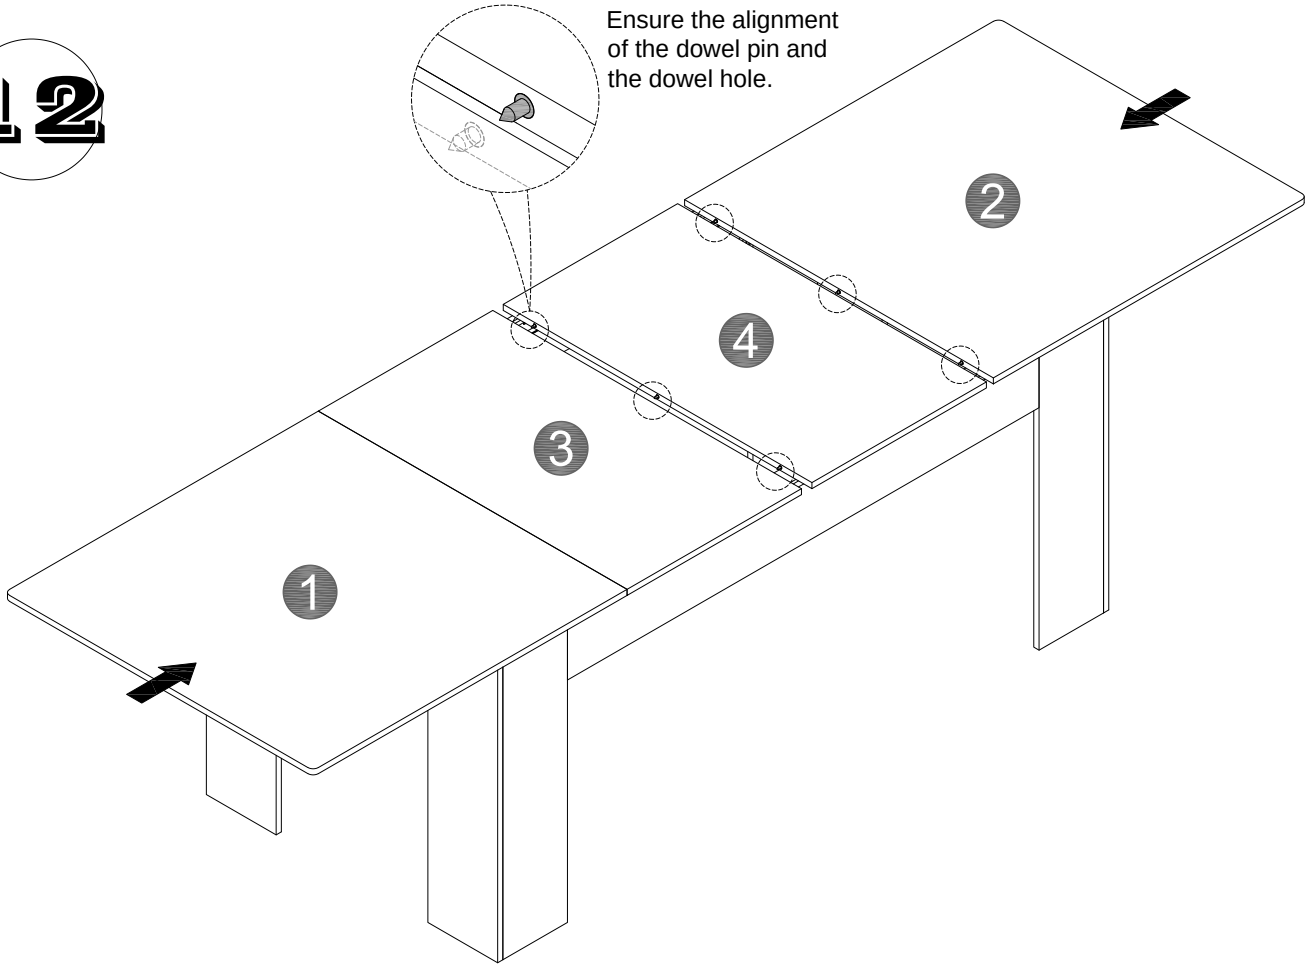

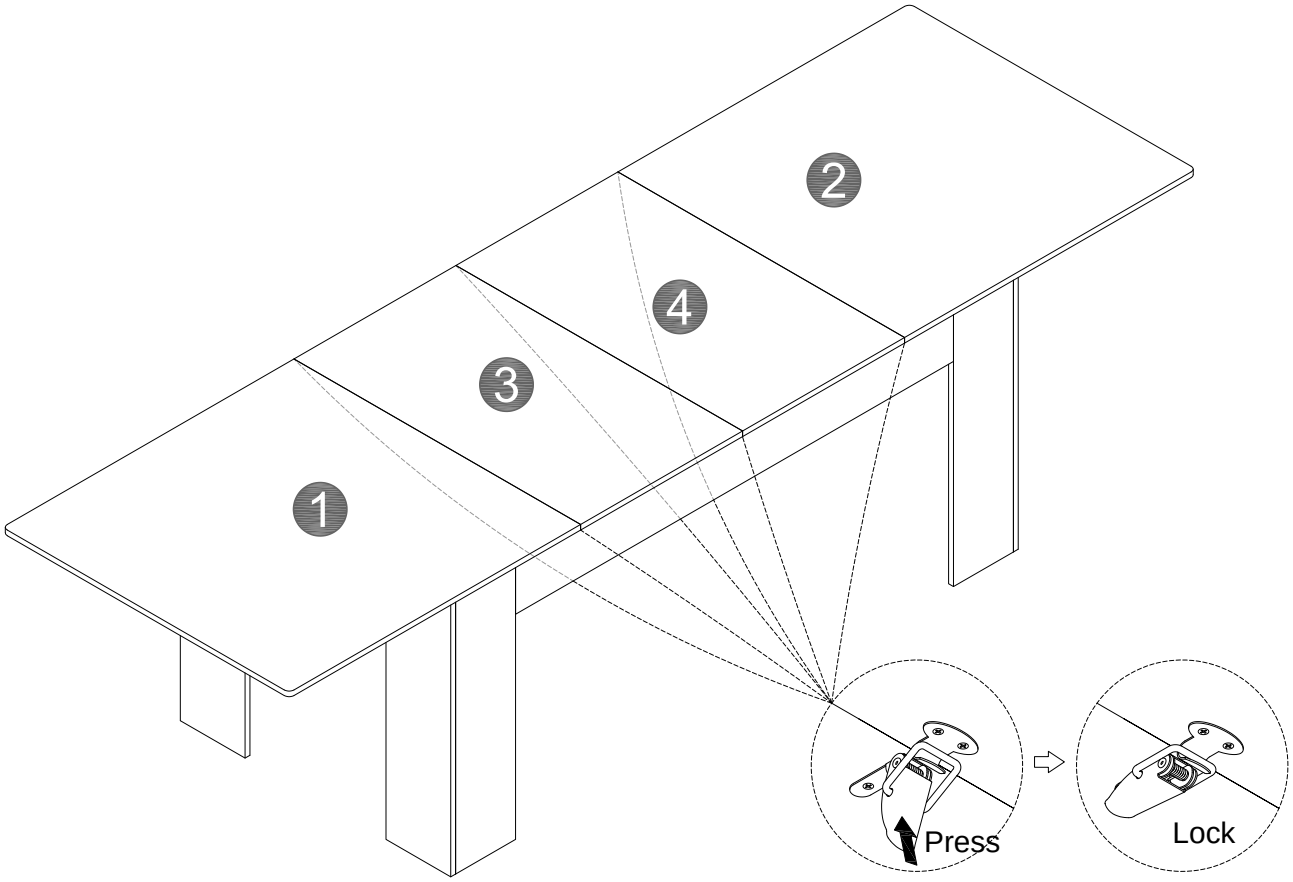

Extended Size 2 installation completed