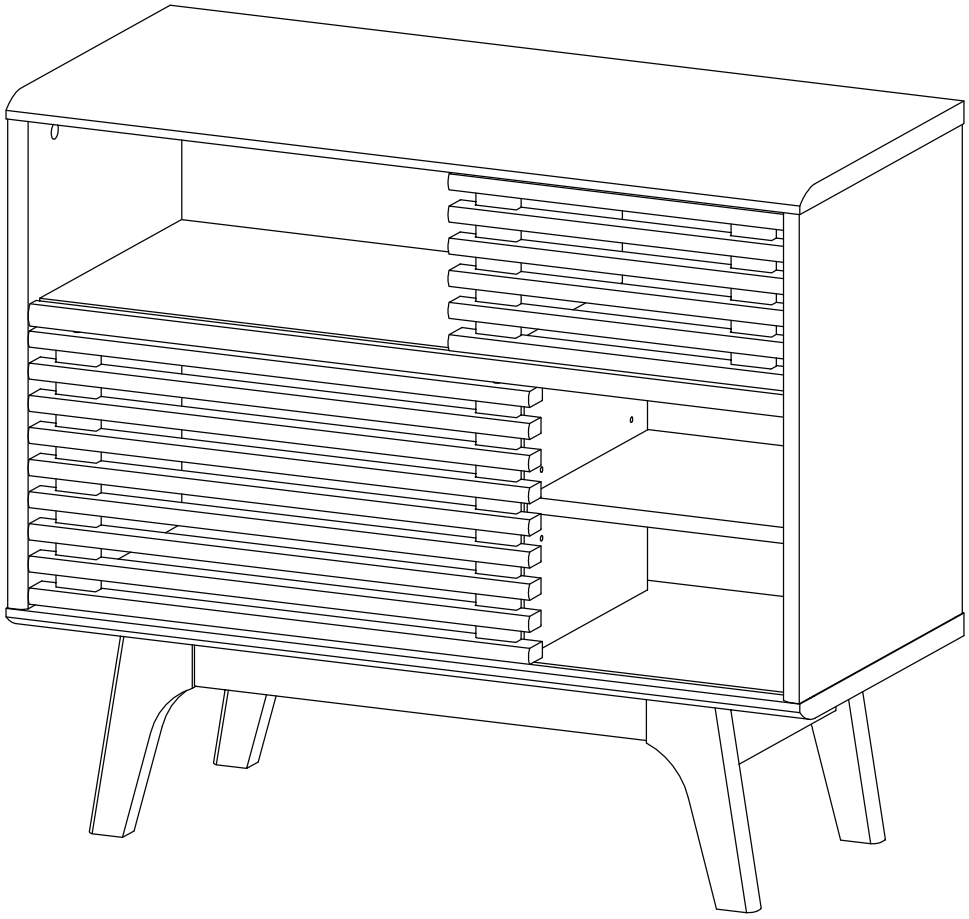


ASSEMBLY INSTRUCTIONS

Cabinet

EEI-2542 / V2.08.24.26

modway

Questions? Contact us!
609.256.9000
cs@modway.com

Welcome.
Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes.** Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.







Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care instructions are listed in the last step of this manual.


WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!

HARDWARE INCLUDED IN THE BOX:

A		**Cam Bolt Ø6 x 35 mm**	**x12**
B		**Cam Lock Ø15 mm**	**x12**
C		**Wood Dowel Ø8 x 30 mm**	**x40**
D		**Screw 5.5 x 45 mm**	**x4**
E		**Screw 5.5 x 35 mm**	**x4**
F		**Screw Cap Ø15 mm Short**	**x4**
G		**Shelf Pin**	**x4**
H		**Wedge**	**x8**
I		**Screw M 3.5 x 15.5 mm**	**x8**
J		**Screw Cap Ø15 mm Long**	**x4**
K		**Silicon Bumper**	**x4**
L		**Floor Protector**	**x4**
M		**Pin Sliding Top**	**x4**
N		**Pin Sliding Bottom**	**x4**


WHAT YOU NEED:



Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

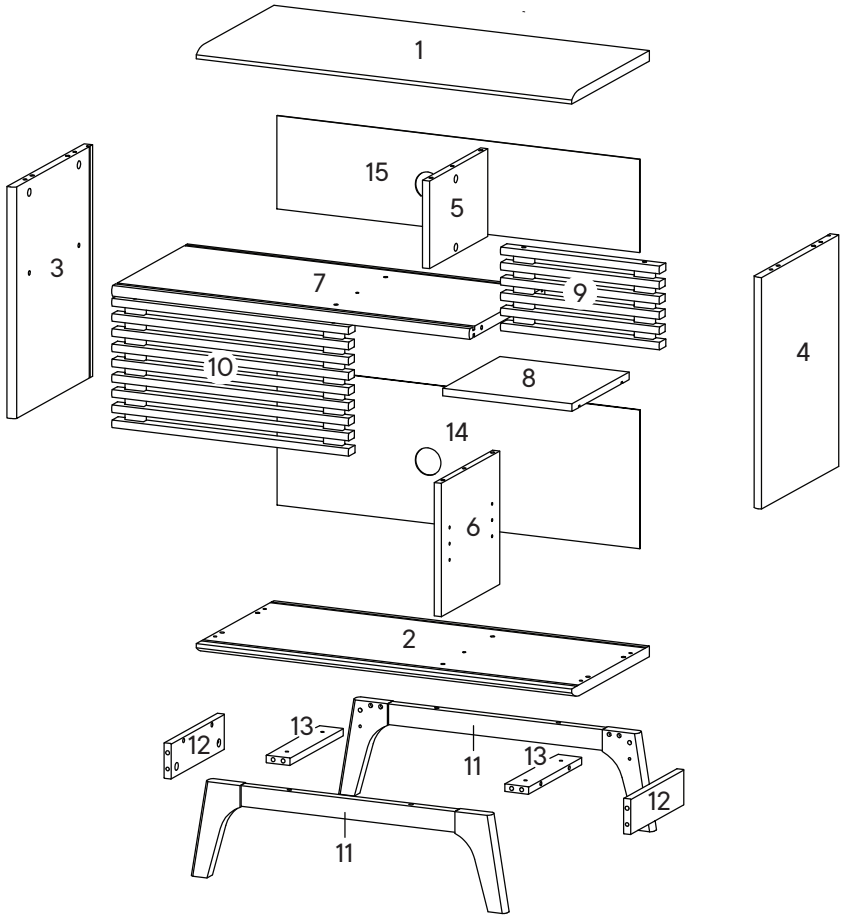

1	Top Board	x1	7	Fixed Shelf	x1	13	Support Board 2	x2
2	Bottom Board	x1	8	Adjustable Shelf	x1	14	Back Board Big	x1
3	Side Board Left	x1	9	Sliding Door Small	x1	15	Back Board Small	x1
4	Side Board Right	x1	10	Sliding Door Big	x1			
5	Center Board Small	x1	11	Leg	x2			
6	Center Board Big	x1	12	Support Board 1	x2			

STEP 01

HARDWARE


A	Cam Bolt Ø6 x 35 mm	x5
C	Wood Dowel Ø8 x 30 mm	x16

COMPONENTS

1	Top Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
5	Center Board Small	x1
6	Center Board Big	x1

1.1 Insert Cam Bolt Ø6 x 35 mm (A) into Top Board (1), then tighten using screwdriver.

1.2 Insert Wood Dowel Ø8 x 30 mm (C) into Side Board Left (3), Side Board Right (4), Center Board Small (5) and Center Board Big (6). Position as shown in the picture.

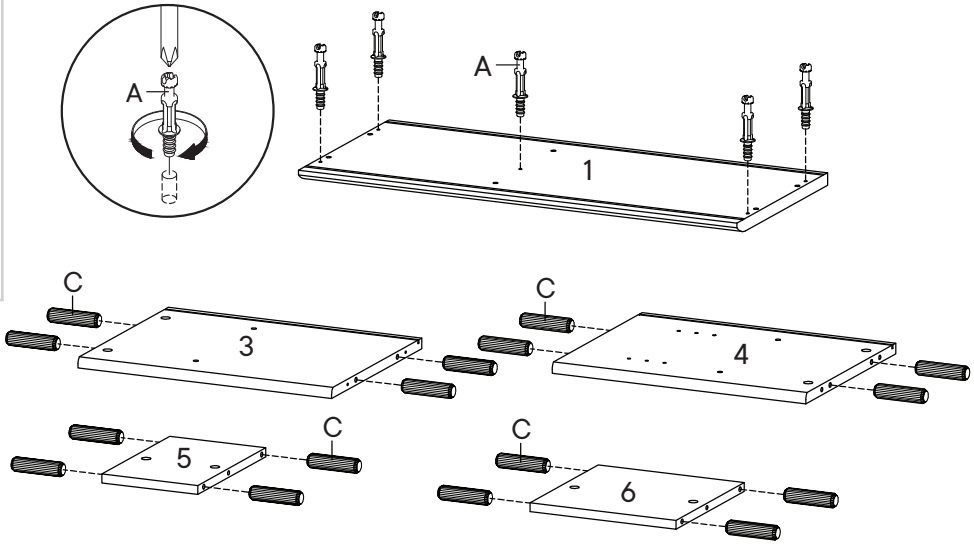

STEP 02

HARDWARE


A	Cam Bolt Ø6 x 35 mm	x2
C	Wood Dowel Ø8 x 30 mm	x4


COMPONENTS

2	Bottom Board	x1
7	Fixed Shelf	x1

2.1 Insert Cam Bolt Ø6 x 35 mm (A) into Bottom Board (2), then tighten using screwdriver.

2.2 Insert Cam Bolt Ø6 x 35 mm (A) into Fixed Shelf (7), then tighten using screwdriver. Then insert Wood Dowel Ø8 x 30 mm (C). Ensure the position correct below detail.

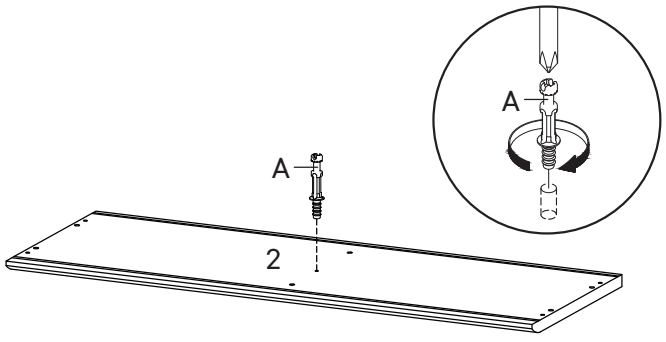

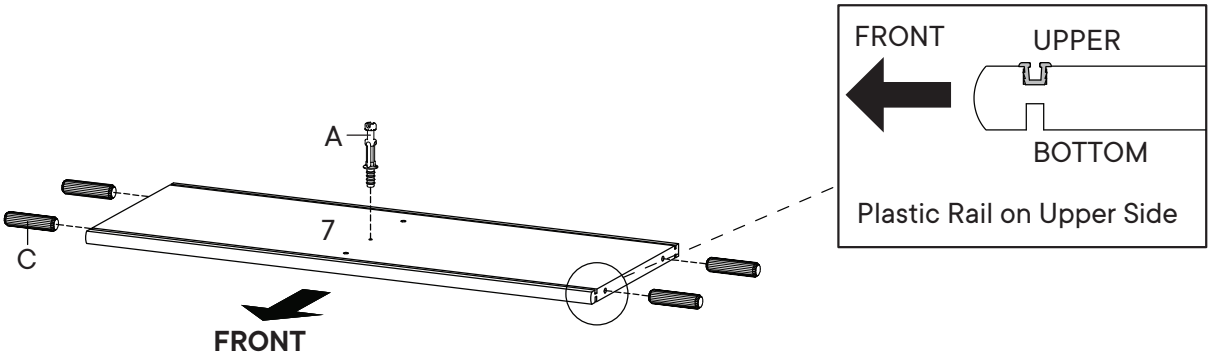


HARDWARE


B	Cam Lock Ø15 mm	x5
F	Screw Cap Ø15 mm Short	x1
J	Screw Cap Ø15 mm Long	x4

COMPONENTS

1	Top Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
5	Center Board Small	x1

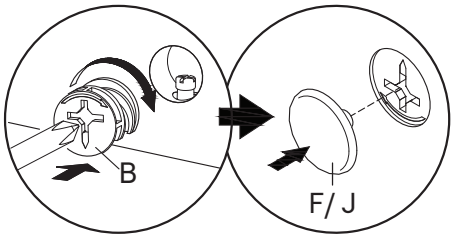

3.1 Attach Side Board Left (3), Side Board Right (4) and Center Board Small (5) to Top Board (1), secure with Cam Lock Ø15 mm (B) then tighten using screwdriver, then put Screw Cap Ø15 mm Short (F) to Cam Lock on Center Board Small and Screw Cap Ø15 mm Long (J) on Side Boards. Position as shown in the figure.

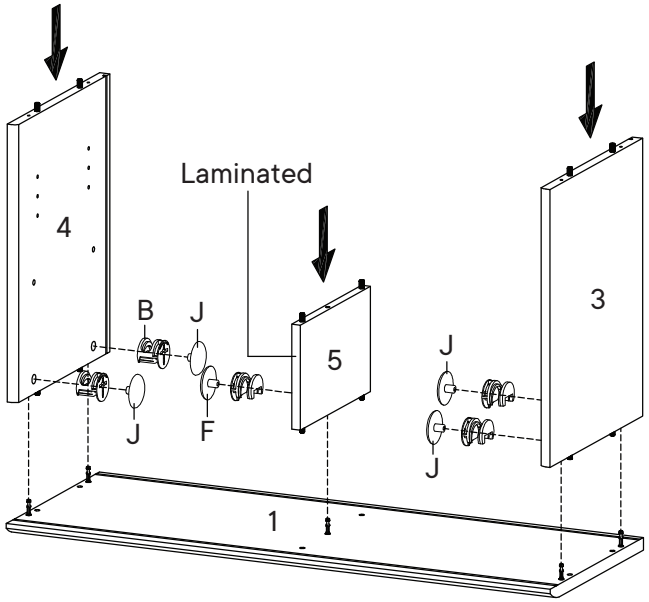


STEP 04

COMPONENTS

15	Back Board Small	x1

4.1 Insert Back Board Small (15) into Top Board. Position as shown in the figure.

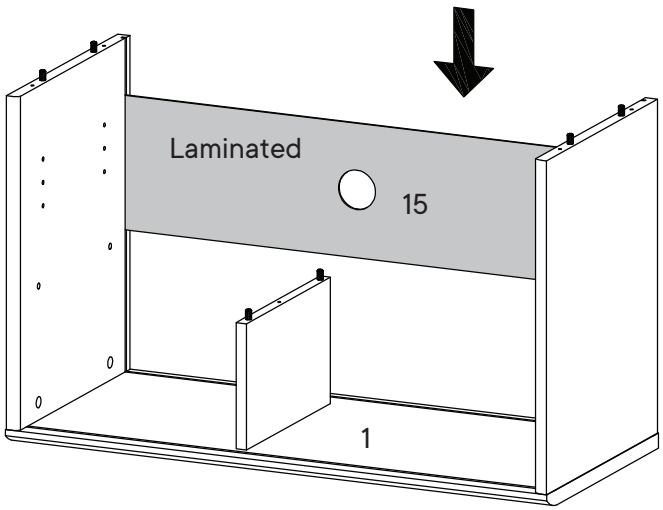


HARDWARE


- B **Cam Lock Ø15 mm** x1
- F **Screw Cap Ø15 mm Short** x1

COMPONENTS

- 7 **Fixed Shelf** x1

5.1 Attach Fixed Shelf (7) to Center Board Small , secure with Cam Lock Ø15 mm (B) then tighten using screwdriver, then put Screw Cap Ø15 mm Short (F) to Cam Lock on Center Board Small. Position as shown in the figure.

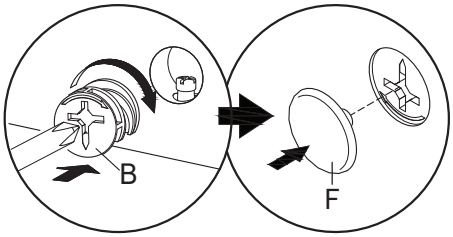

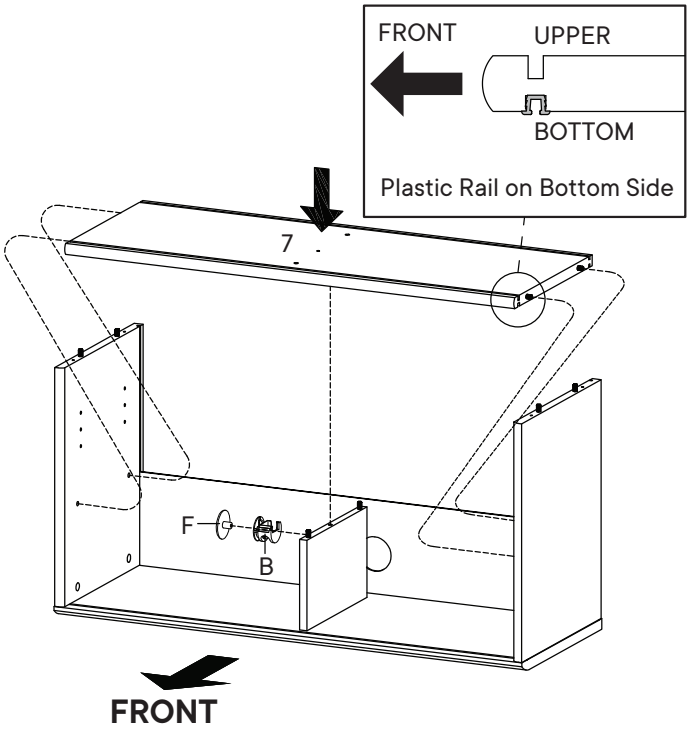

HARDWARE


- A **Cam Bolt Ø6 x 35 mm** x1
- B **Cam Lock Ø15 mm** x1
- F **Screw Cap Ø15 mm Short** x1


COMPONENTS


- 6 **Center Board Big** x1

6.1 Insert Cam Bolt Ø6 x 35 mm (A) into Fixed Shelf (7), then tighten using screwdriver. Position as shown in the picture.

6.2 Attach Center Board Big (6) to Fixed Shelf, secure with Cam Lock Ø15 mm (B) then tighten using screwdriver, then put Screw Cap Ø15 mm Short (F) to Cam Lock on Center Board Big. Position as shown in the figure.

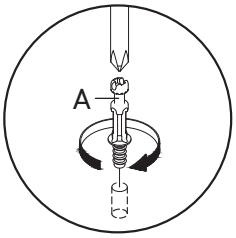

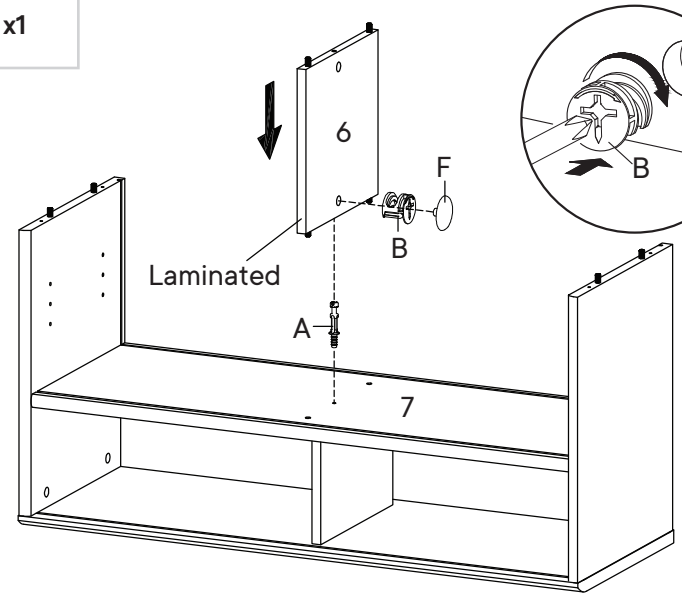

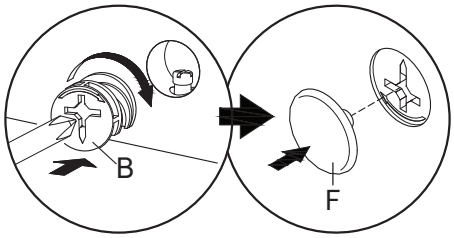


HARDWARE


B	Cam Lock Ø15 mm	x1
D	Screw 5.5 x 45 mm	x4
F	Screw Cap Ø15 mm Short	x1

COMPONENTS

2	Bottom Board	x1
14	Back Board Big	x1

7.1 Insert the Back Board Big (14) into Fixed Shelf. Attached the Bottom Board (2), secure with Cam Lock Ø15 mm (B) and Screw 5.5 x 45mm (D) tighten using Screw Driver.
Then put Screw Cap Ø15 mm Short (F) to Cam Lock on Center Board Big. Position as shown in the figure.

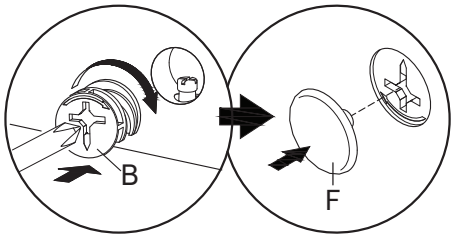

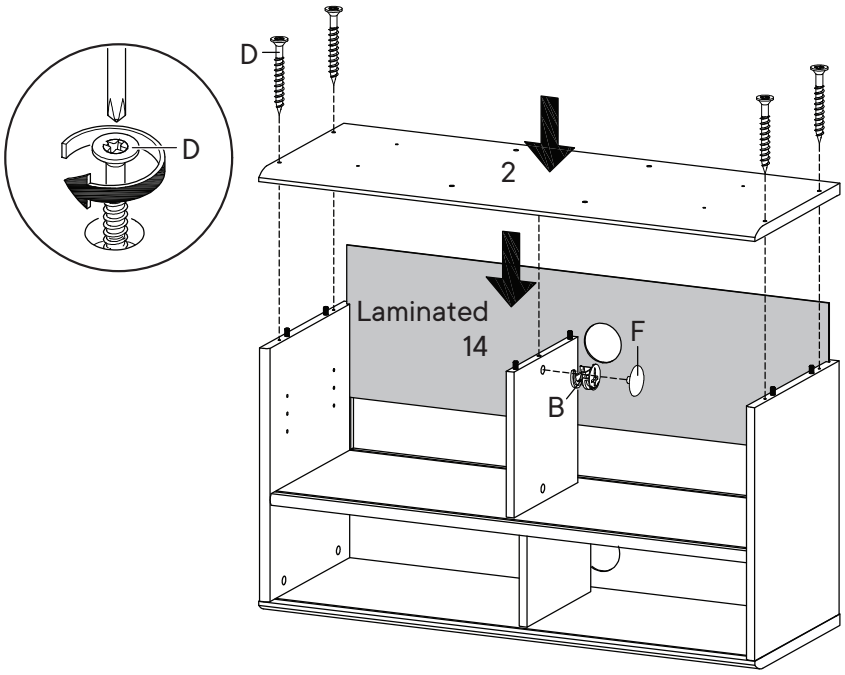

STEP 08

HARDWARE


A	Cam Bolt Ø6 x 35 mm	x4
C	Wood Dowel Ø8 x 30 mm	x16


COMPONENTS

11	Leg	x2
12	Support Board 1	x2
13	Support Board 2	x2

8.1 Insert Cam Bolt Ø6 x 35 mm (A) into Leg (11), then tighten using screwdriver. Position as shown in the figure.

8.2 Insert Wood Dowel Ø8 x 30 mm (C) into Support Board 1 (12) and Support Board 2 (13). Position as shown in the figure.

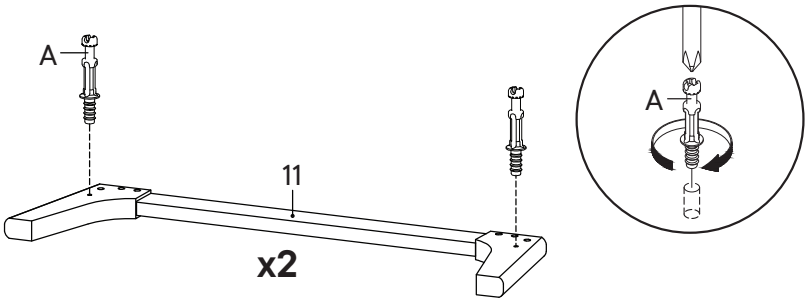

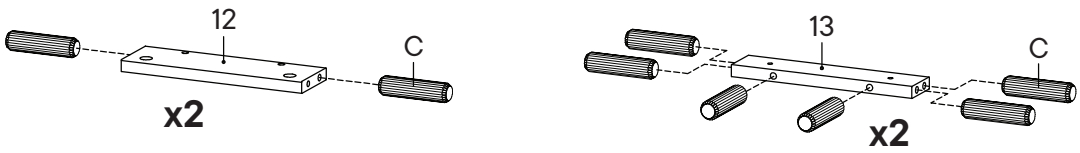


HARDWARE

B	**Cam Lock Ø15 mm**	**x2**


COMPONENTS

11	**Leg**	**x1**
12	**Support Board 1**	**x2**
13	**Support Board 2**	**x2**

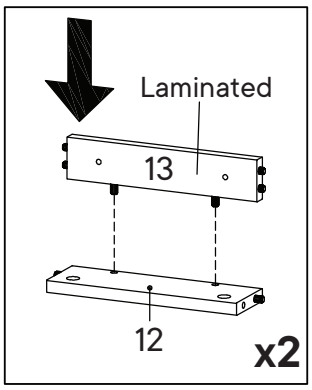

9.1 Before assembly to leg, firstly combine Support Board 1 (12) and Support Board 2 (13).

9.2 Combine assembly of Support Board to Leg (11), secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown in the figure.

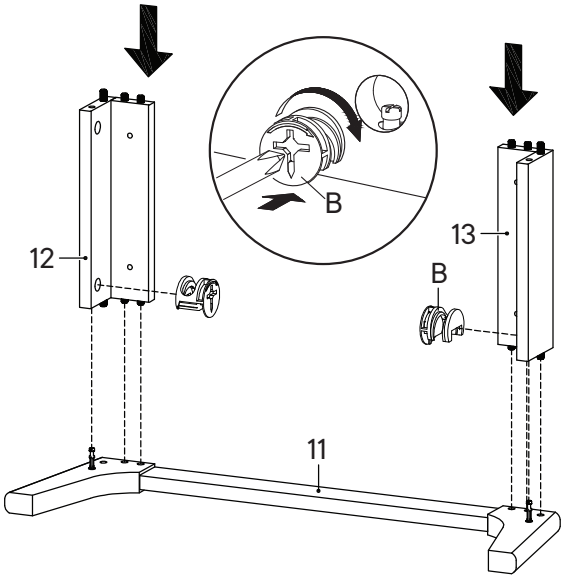

STEP 10


HARDWARE

B	**Cam Lock Ø15 mm**	**x2**

COMPONENTS

11	**Leg**	**x1**


10.1 Attach Leg (11) to pre-assembly component, secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown in the figure.

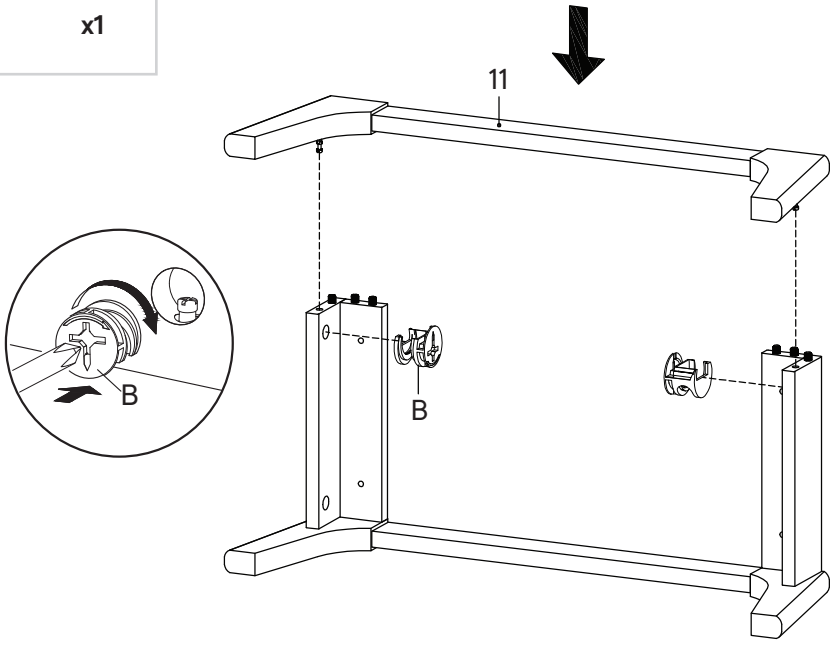

HARDWARE

C	**Wood Dowel Ø8 x 30 mm**	**x4**

11.1 Insert Wood Dowel Ø8 x 30 mm (C) into pre-assembly of leg. Position as shown in the figure.

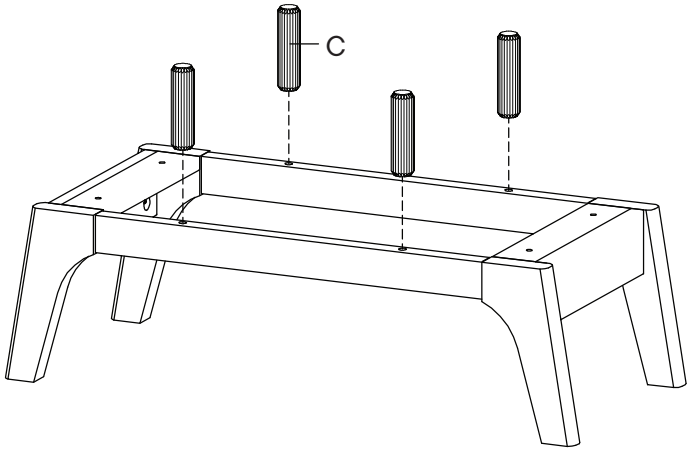


STEP 12


HARDWARE


E	**Screw 5.5 x 35 mm**	**x4**
L	**Floor Protector**	**x4**

12.1 Attach Assembly Leg from previous step to Bottom Board, secure with Screw M 5.5 x 35 mm (E), then tighten screws using screwdriver. Position as shown in the figure.

12.2 Peel off the paper from the Floor Protector (L) and stick it onto the Assembly Leg. Position as shown in the figure.

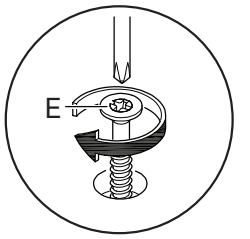

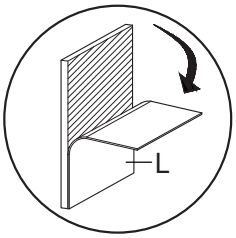

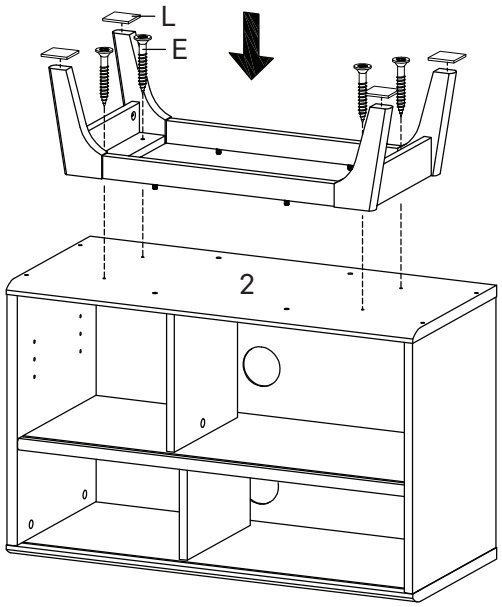


HARDWARE


G	**Shelf Pin**	**x4**

COMPONENTS

8	**Adjustable Shelf**	**x1**

13.1 Insert Shelf Pin (G) into the holes on the Side Board Right and Center Board Big at the desired level. Then, place the Adjustable Shelf (8) by aligning its hole with the Shelf Pin (G) and inserting it securely.

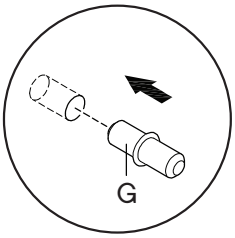

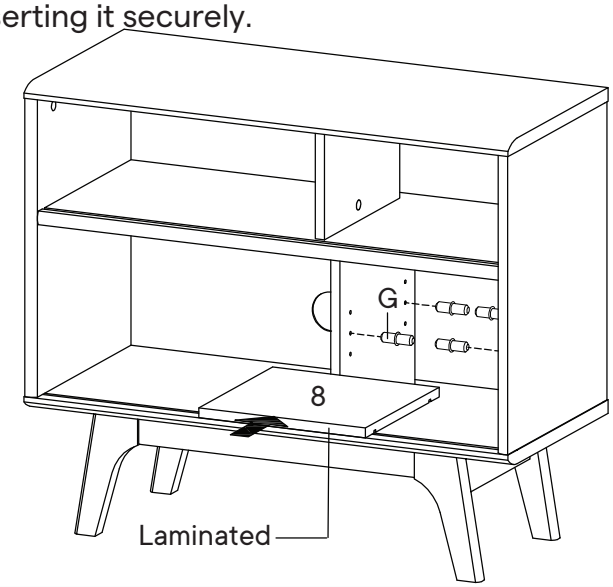

STEP 14

HARDWARE


M	**Pin Sliding Top**	**x4**
N	**Pin Sliding Bottom**	**x4**

COMPONENTS


9	**Sliding Door Small**	**x1**
10	**Sliding Door Big**	**x1**


14.1 Insert Pin Sliding Top (M) and Pin Sliding Bottom (N) into Sliding Door Small (9) and Sliding Door Big (10). Position as shown in the figure.


UPPER SIDE

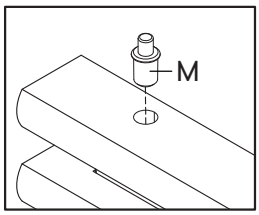

BOTTOM SIDE

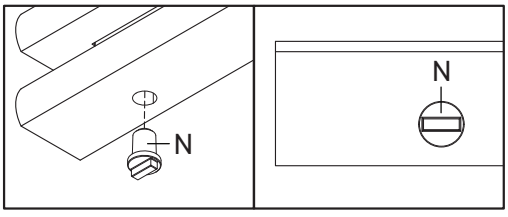

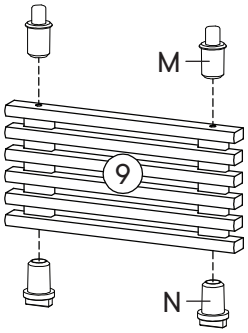

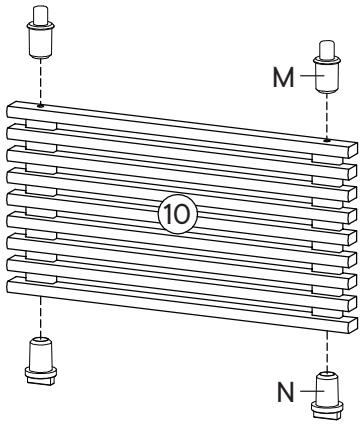

HARDWARE


K	**Silicon Bumper**	**x4**


COMPONENTS

9	**Sliding Door Small**	**x1**
10	**Sliding Door Big**	**x1**

15.1 Insert Sliding Door Small (9) and Sliding Door Big (10) panel's top sliding pin to the groove underneath the top table board. While holding its position, insert the bottom sliding pin to the groove at the bottom board and Fixed Shelf. When all pins are in the right position completely, release the Frame Door.

15.2 Peel off the paper from the Silicon Bumper (K) and stick it to side of one of the Sliding door panel with the position at the tip of the top slat, as shown in the figure.

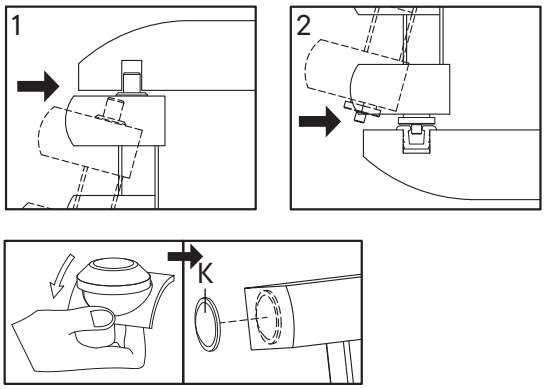

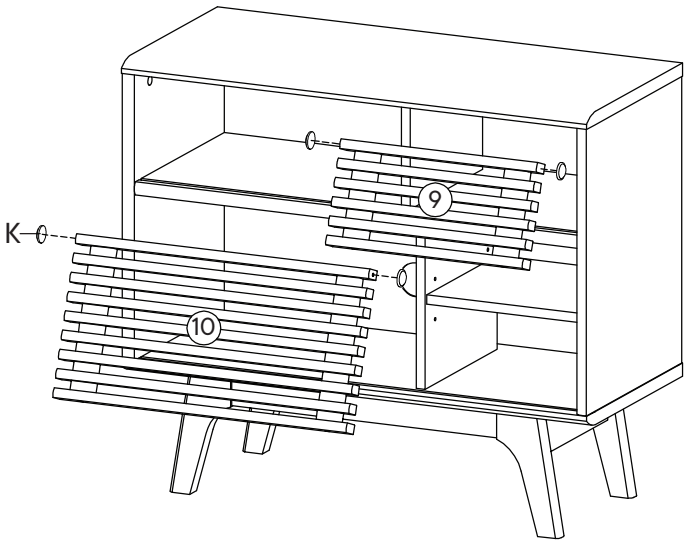



STEP 16

HARDWARE

H	**Wedge**	**x8**
I	**Screw M 3.5 x 15.5 mm**	**x8**


16.1 Use the Wedge (H) and Screw M 3.5 x 15.5 mm (I) to tighten the back of the Cabinet using screwdriver. Before securing the wedges (H), ensure that the top board and bottom board are aligned at a 90° angle against the Cabinet.

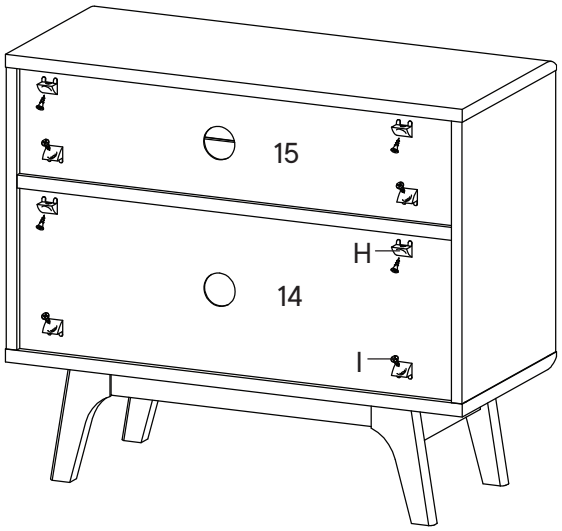

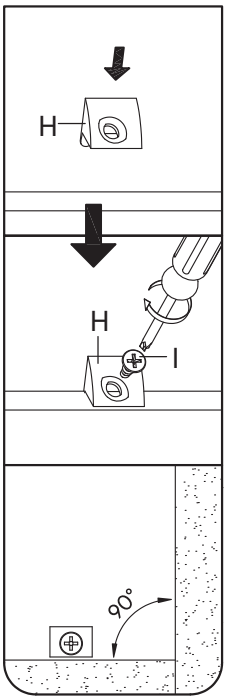

Great job!

Cabinet assembly is complete

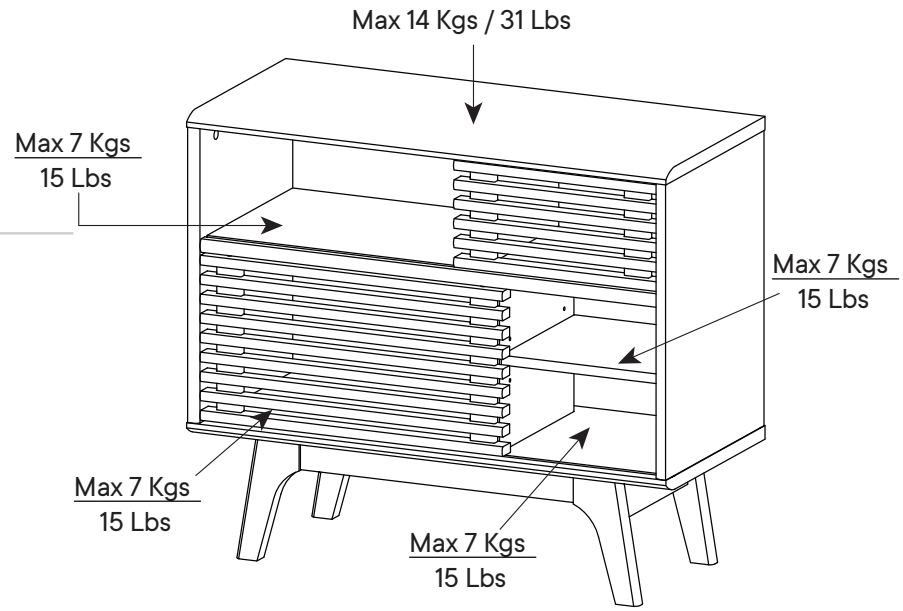

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!

Tag us **@modway.furniture** and **#MyModwayHome** for a chance to be featured.

modway


Questions? Contact us!


609.256.9000


cs@modway.com

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE


Different wall materials require unique wall fasteners.
The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.
Please consult your local hardware store to ensure you are using the correct hardware for you wall type.



AA1 x 2



AA2 x 4



AA3 x 4



AA4 x 4

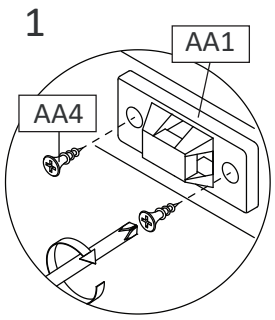


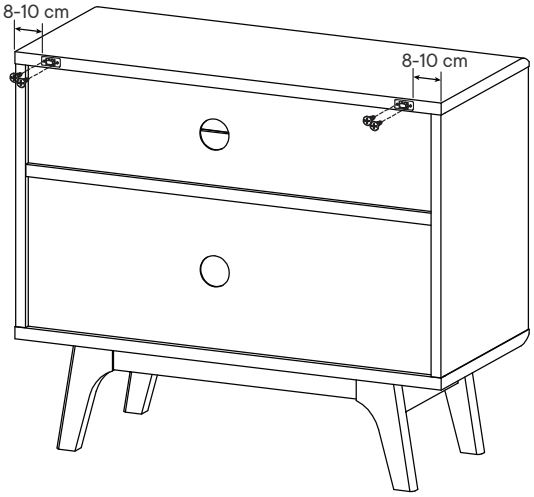

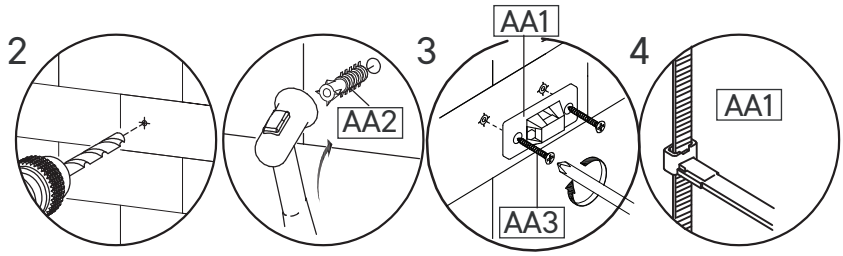

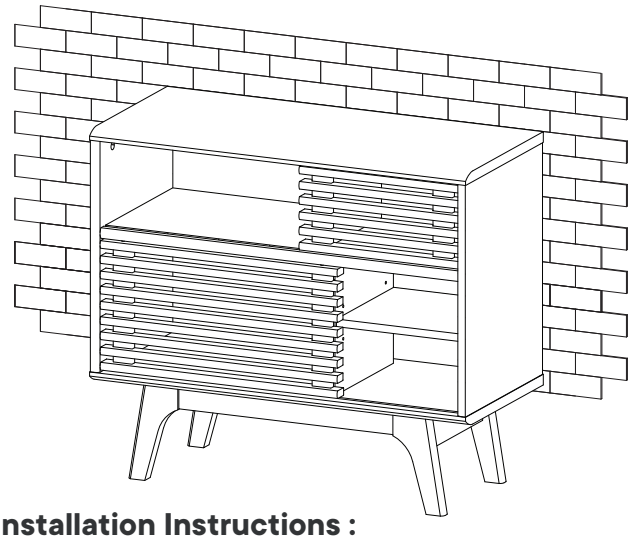

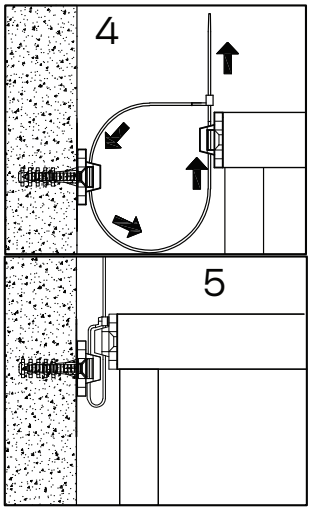

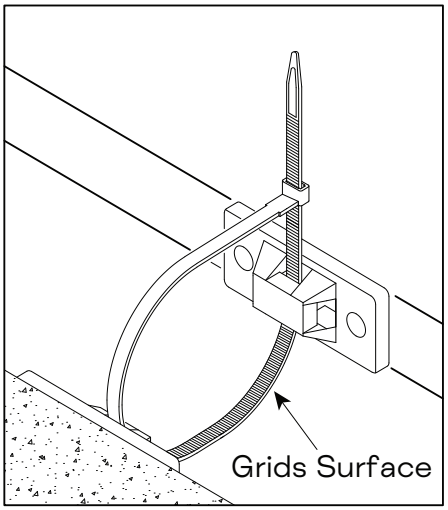

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.