
ASSEMBLY GUIDE

MODERN LED WALL SCONCE – 2 PIECE SET

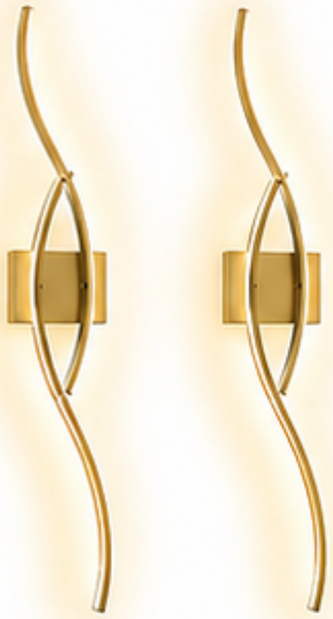


PARTS INCLUDED




Lamp (x2)




Remote (x1)

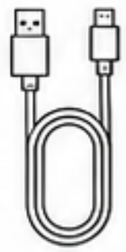


USB Cable (x1)

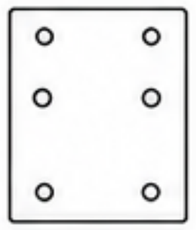

Mounting Plate (x1)

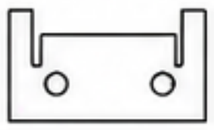


Bracket (x1)

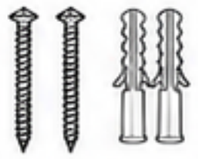


Screws & Anchors (x4)


1 Remove the mounting plate from the lamp base.

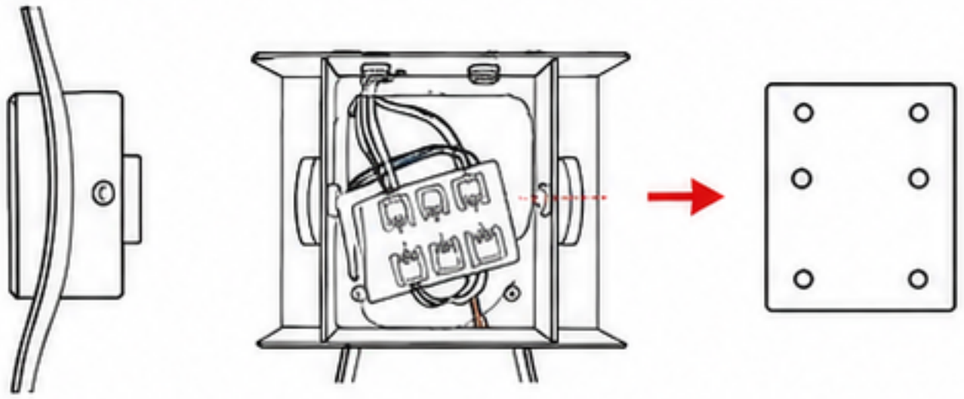


2 Fix the bracket to the wall with anchors and screws.

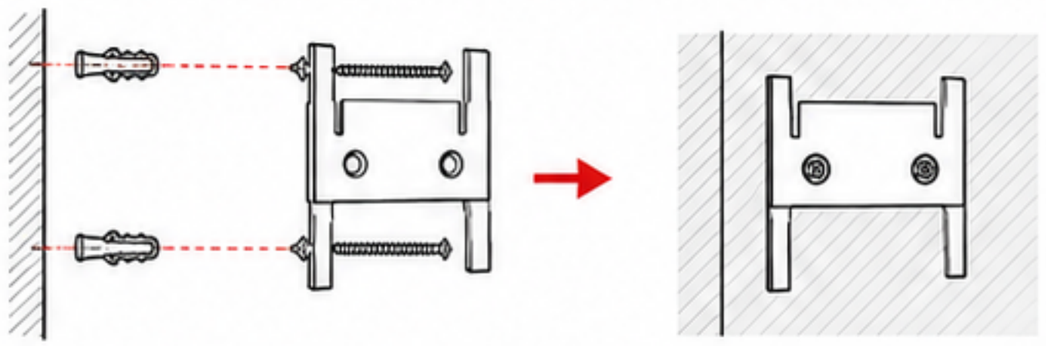


3 Connect the wires to the terminal block as shown.

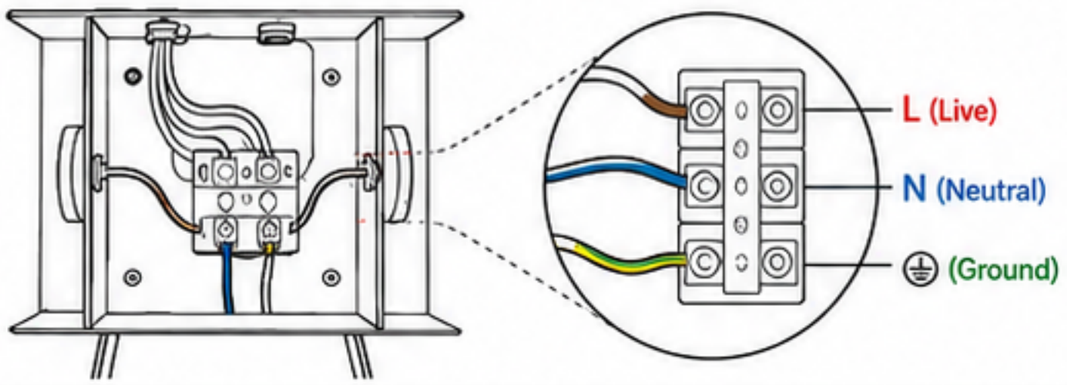


4 Tuck the wires into the base and close the housing.

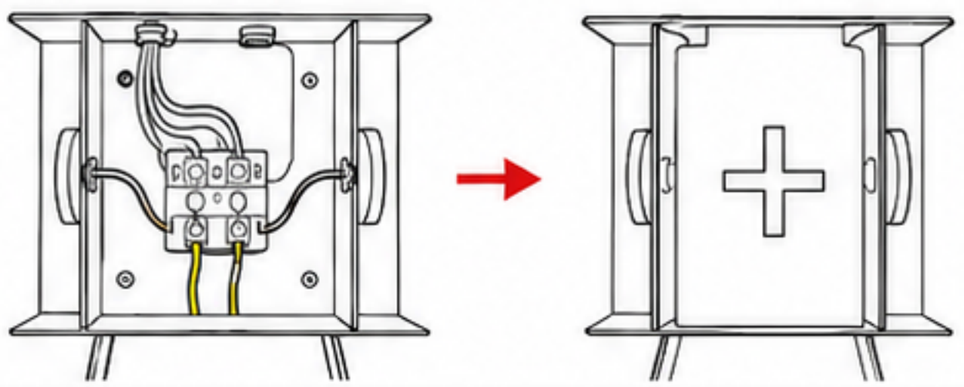

5 Tighten the fixing screw to secure the plate.

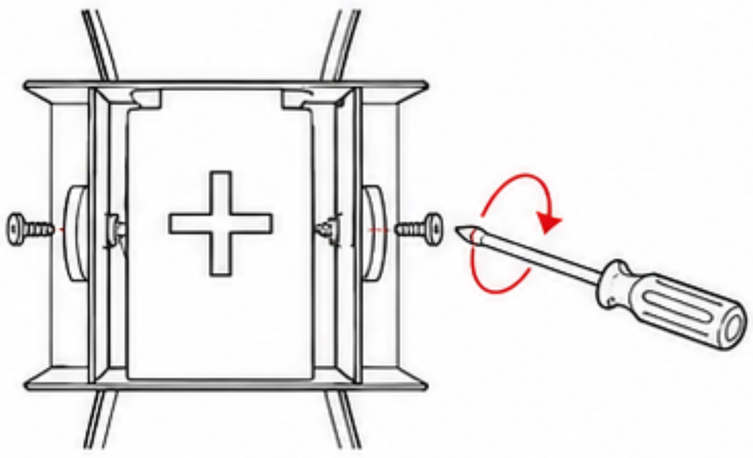

6 Align the lamp with the bracket and slide it down to lock.

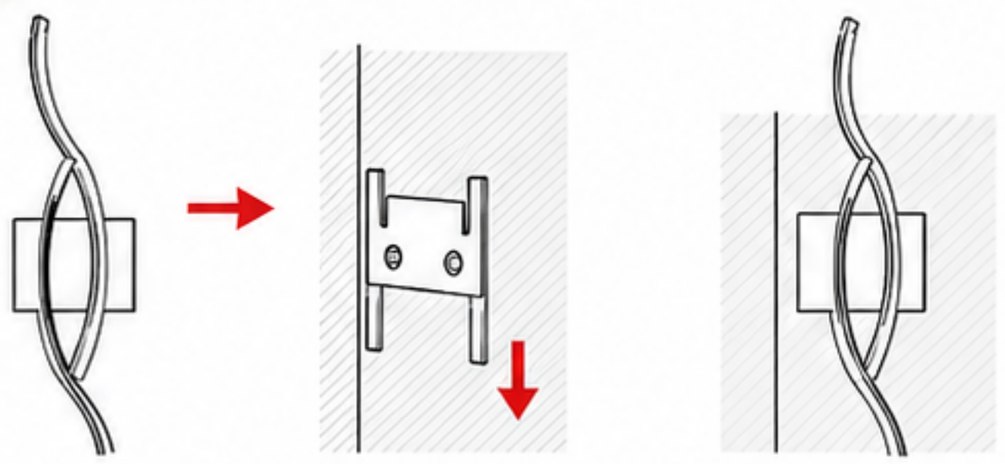

ⓘ Repeat the same steps for the second lamp.