ASSEMBLY INSTRUCTION
64#

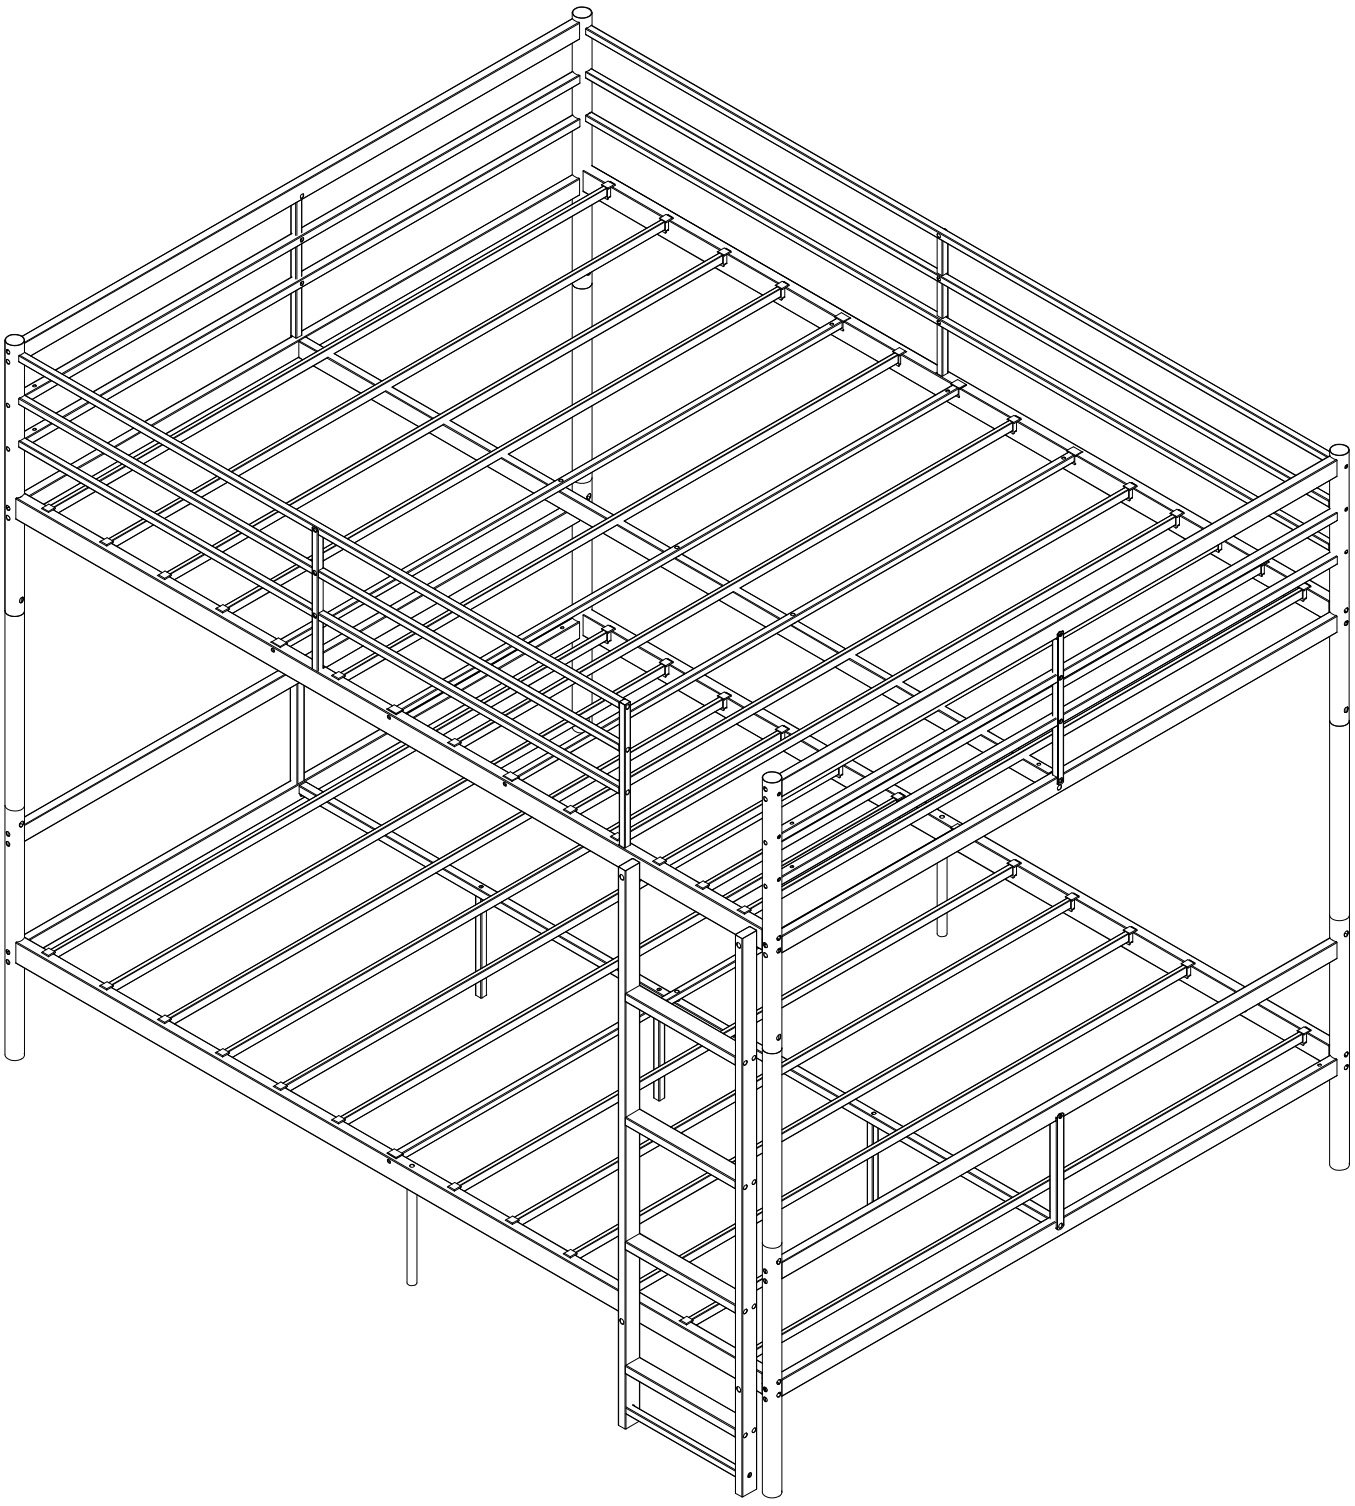

IMPORTANT NOTE

1.Please check that all parts are complete before installation.
2.Please strictly follow the installation steps to install.
3.Please install the bed on a clean and smooth surface to prevent any damage
4.Please do not use the power tools to assemble the bed.
5.Please periodically check all the fittings and re-tighten as necessary.
6. Please do not use the bed unless all bolts and screw are firmly secured.
7.When assembling the bed, first secure the screws loosely, then tighten them all at the end after all parts are assembled.

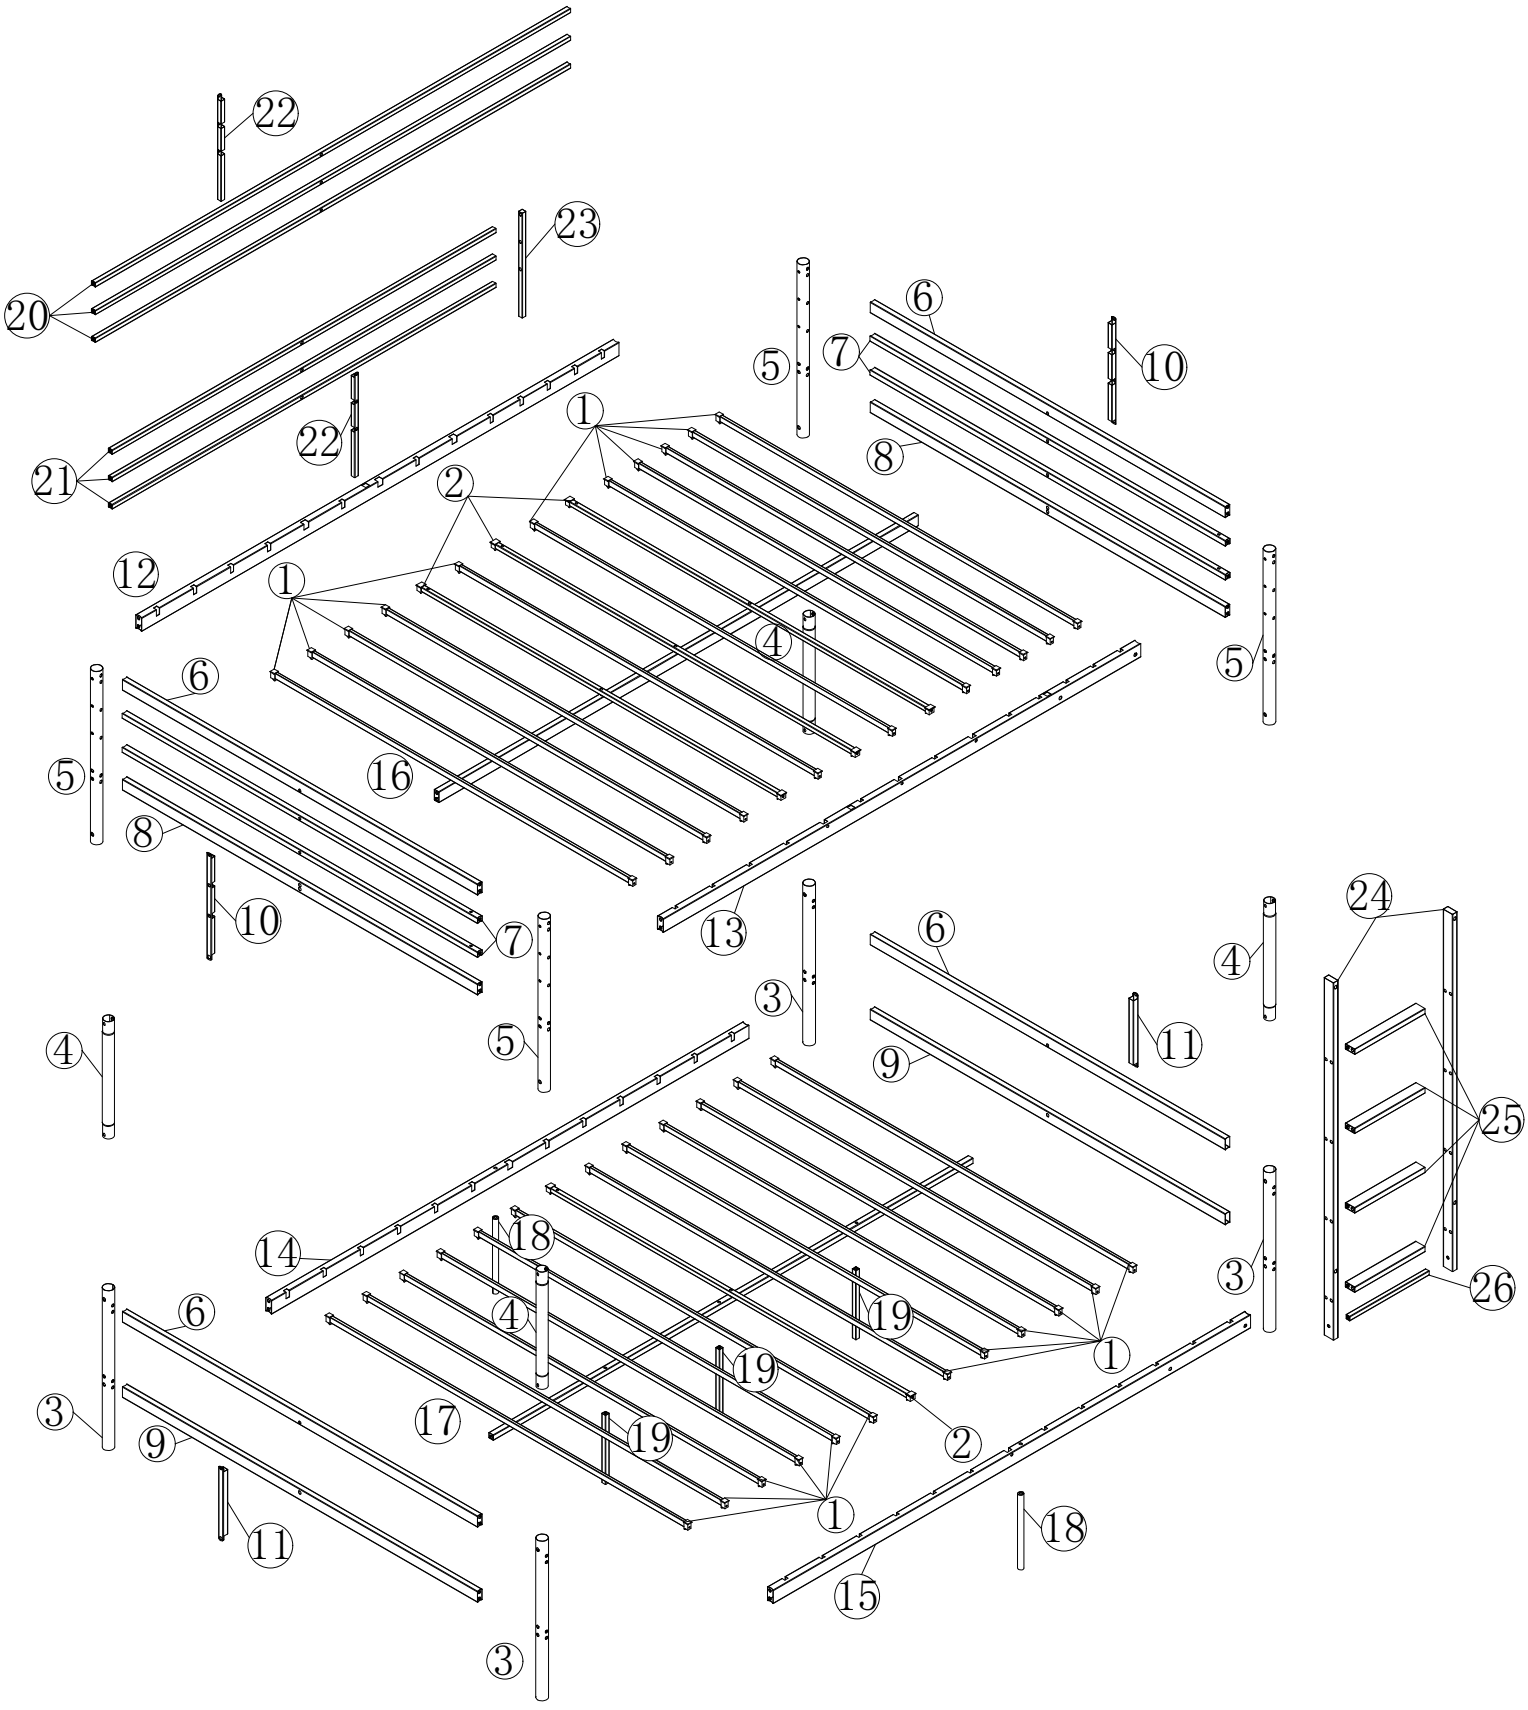
22
23
20
21
22
12
1
2
1
5
6
7
10
8
4
5
6
5
16
8
10
7
13
5
3
6
4
24
4
11
9
25
14
18
4
19
1
3
26
6
3
9
17
19
19
2
1
11
18
15
3

Components List

① x23 	② x4 
③ x4 	④ x4 
⑤ x4 	⑥ x4 
⑦ x4 	⑧ x2 
⑨ x2 	⑩ x2 
⑪ x2 	⑫ x1 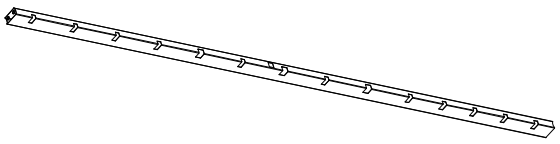
⑬ x1 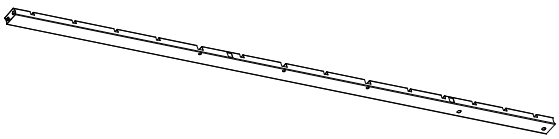	⑭ x1 
⑮ x1 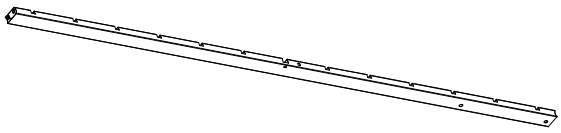	⑯ x1 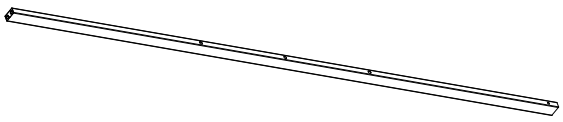
⑰ x1 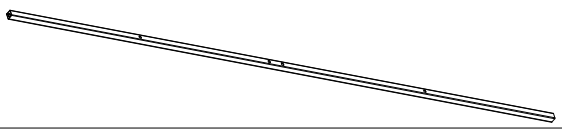	⑱ x2 
⑲ x3 	⑳ x3 
㉑ x3 	㉒ x2 
㉓ x1 	㉔ x2 
㉕ x4 	㉖ x1 

Hardwares List

Item	Description	Qty
A	 M8x60	48
B	 M8x50	4
C	 M8x40	24
D	 M8x30	8
Y	 M8x16	2
E	 M8x25	12
F	 M6x60	17
G	 M6x50	3
H	 M6x40	11
X	 M6x30	1
I	 M6x20	6
J	 M6x16	4
K	 M6x12	10

Item	Description	Qty
L	 M6 x12	18
M	 SMALL	73
N	 BIG	8
P	 (10*20)	46
Q	 (16*16)	8
R	 M6 Allen key	2
S	 M8 Allen key	2
T	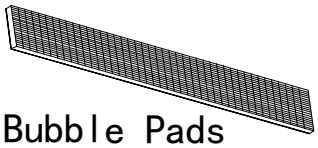 Bubble Pads	5
U	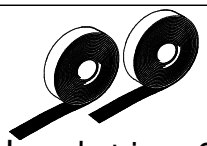 Sound Insulation Cotton	2
V	 16x16	1
W		6
Z	 Ø38mm	8

STEP1

A	M8x60	32	F	M6x60	8	J	M6x16	4	K	M6x12	4
L	M6 x12	8	M	SMALL	40						

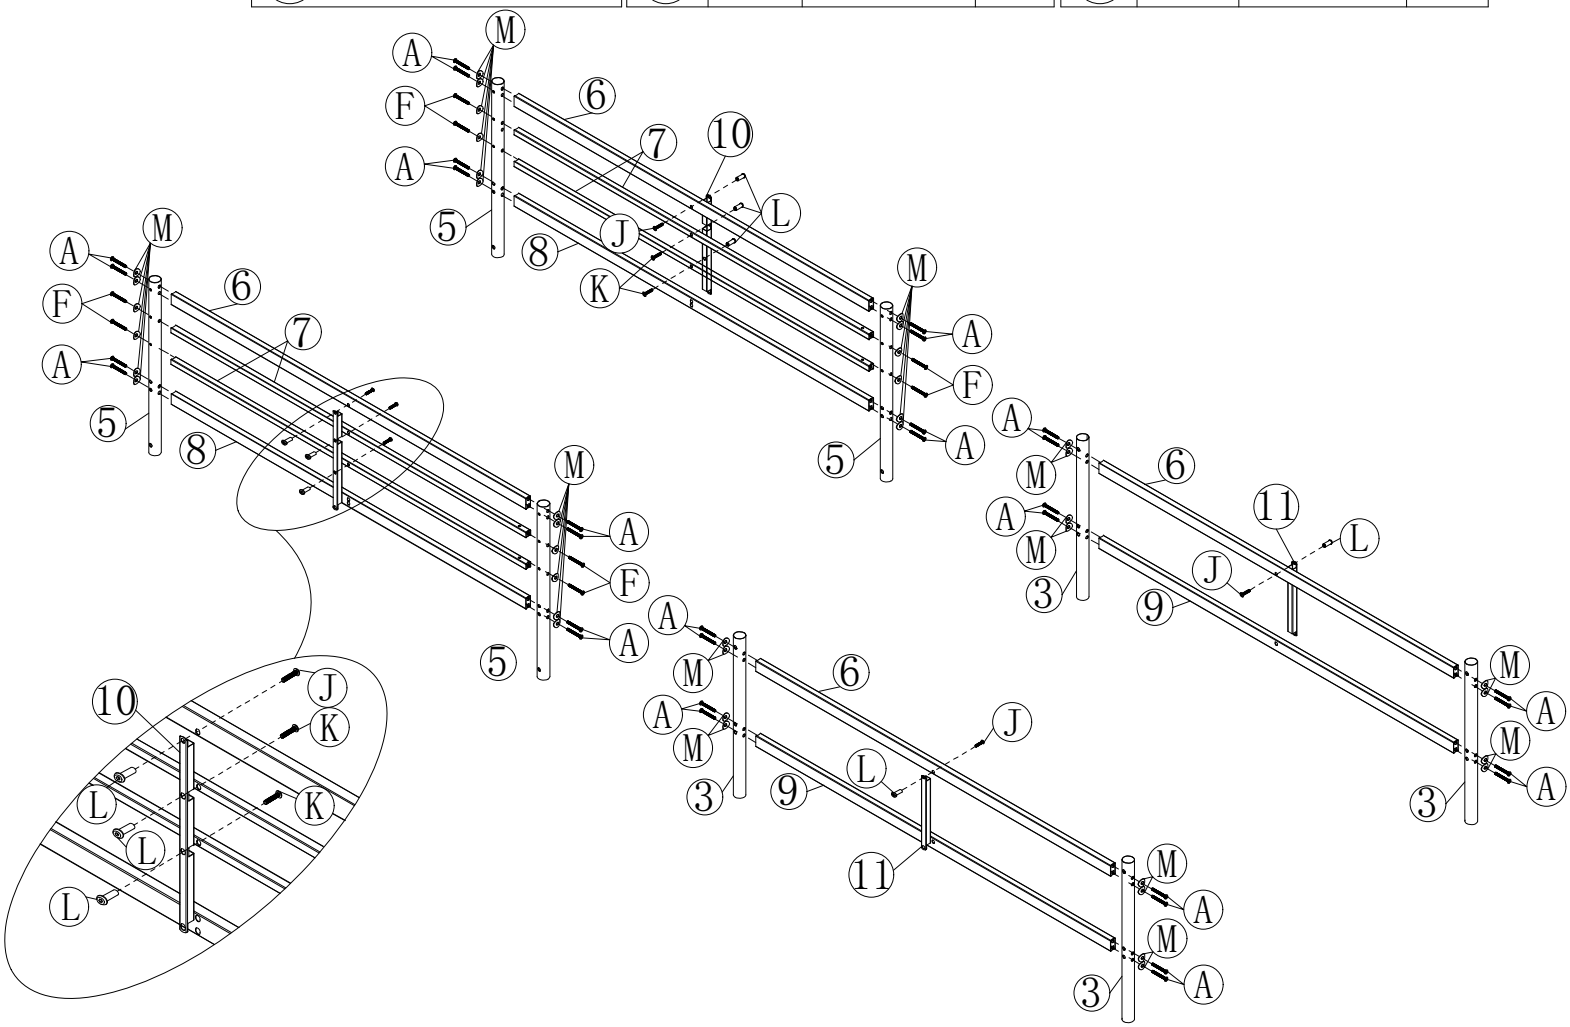

STEP2

A	M8x60	16	C	M8x40	6	I	M6x20	3	M	SMALL	16
Y	M8x16	2									

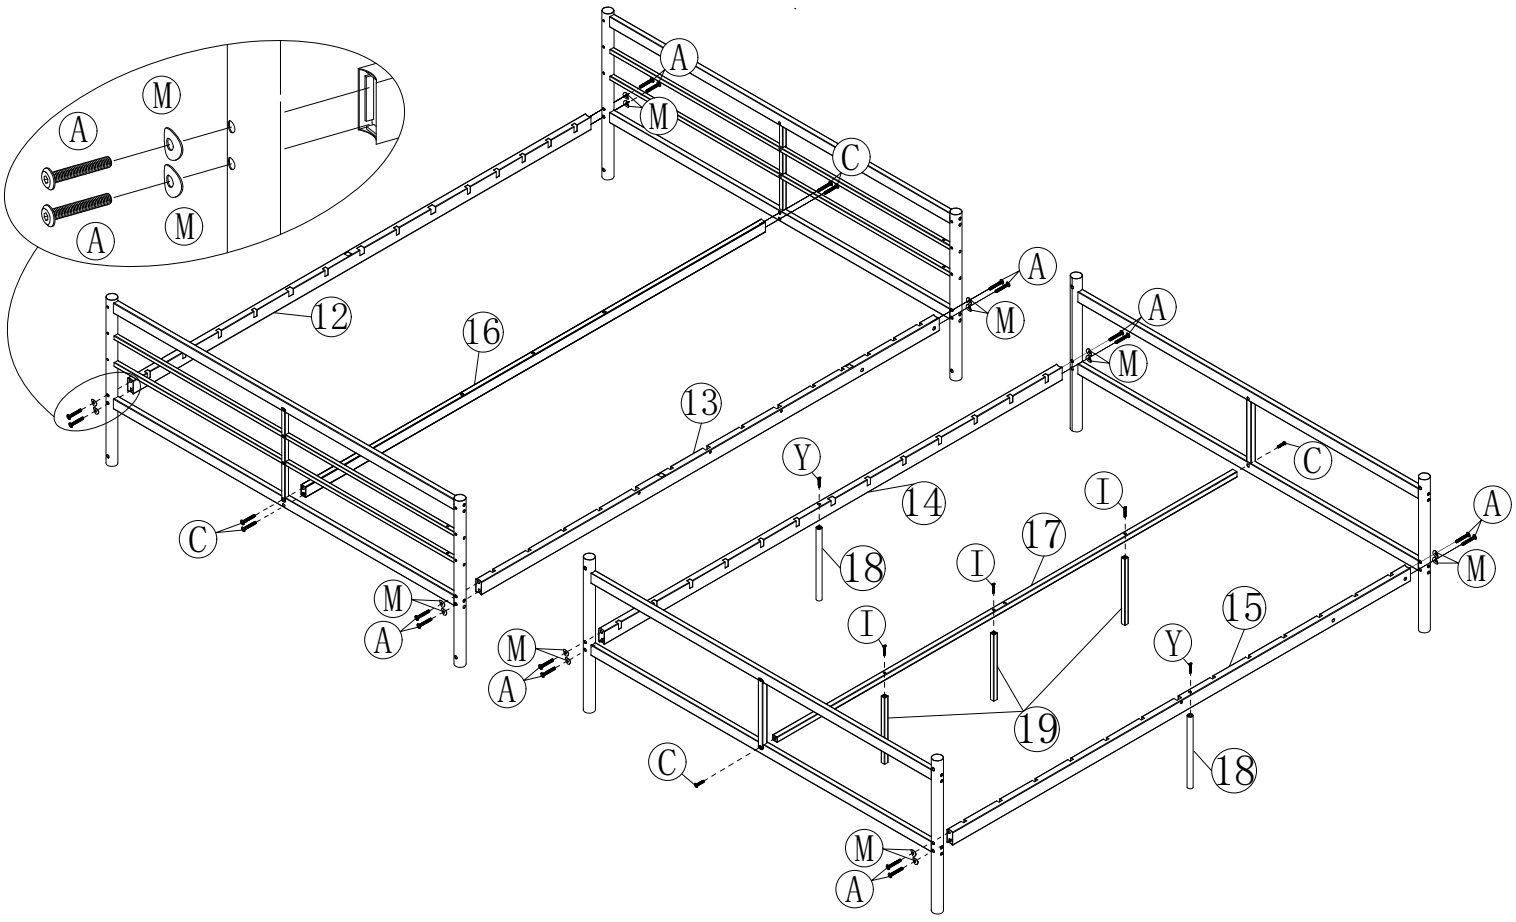

STEP3

G		M6x50	3	H		M6x40	8	L		M6 x12	4
P		(10x20)	46	Q		(16x16)	8	U		Sound Insulation Cotton	2
X		M6x30	1								

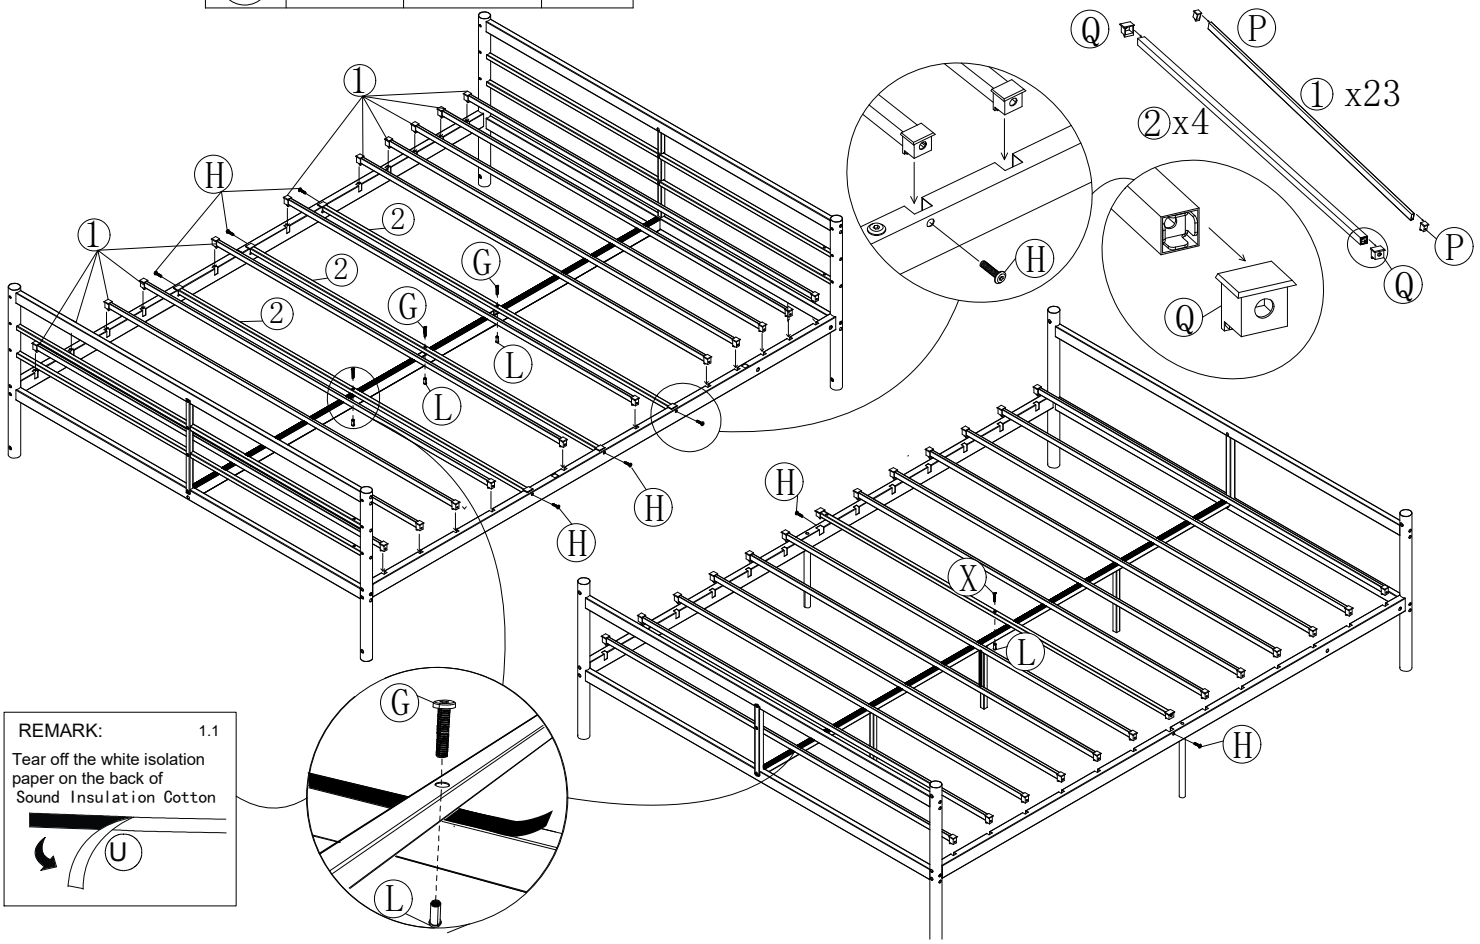

REMARK: 1.1

Tear off the white isolation paper on the back of Sound Insulation Cotton

STEP4

F		M6x60	9	H		M6x40	3	I		M6x20	3
K		M6x12	6	L		M6 x12	6	M		SMALL	9
V		16x16	1	W			6				

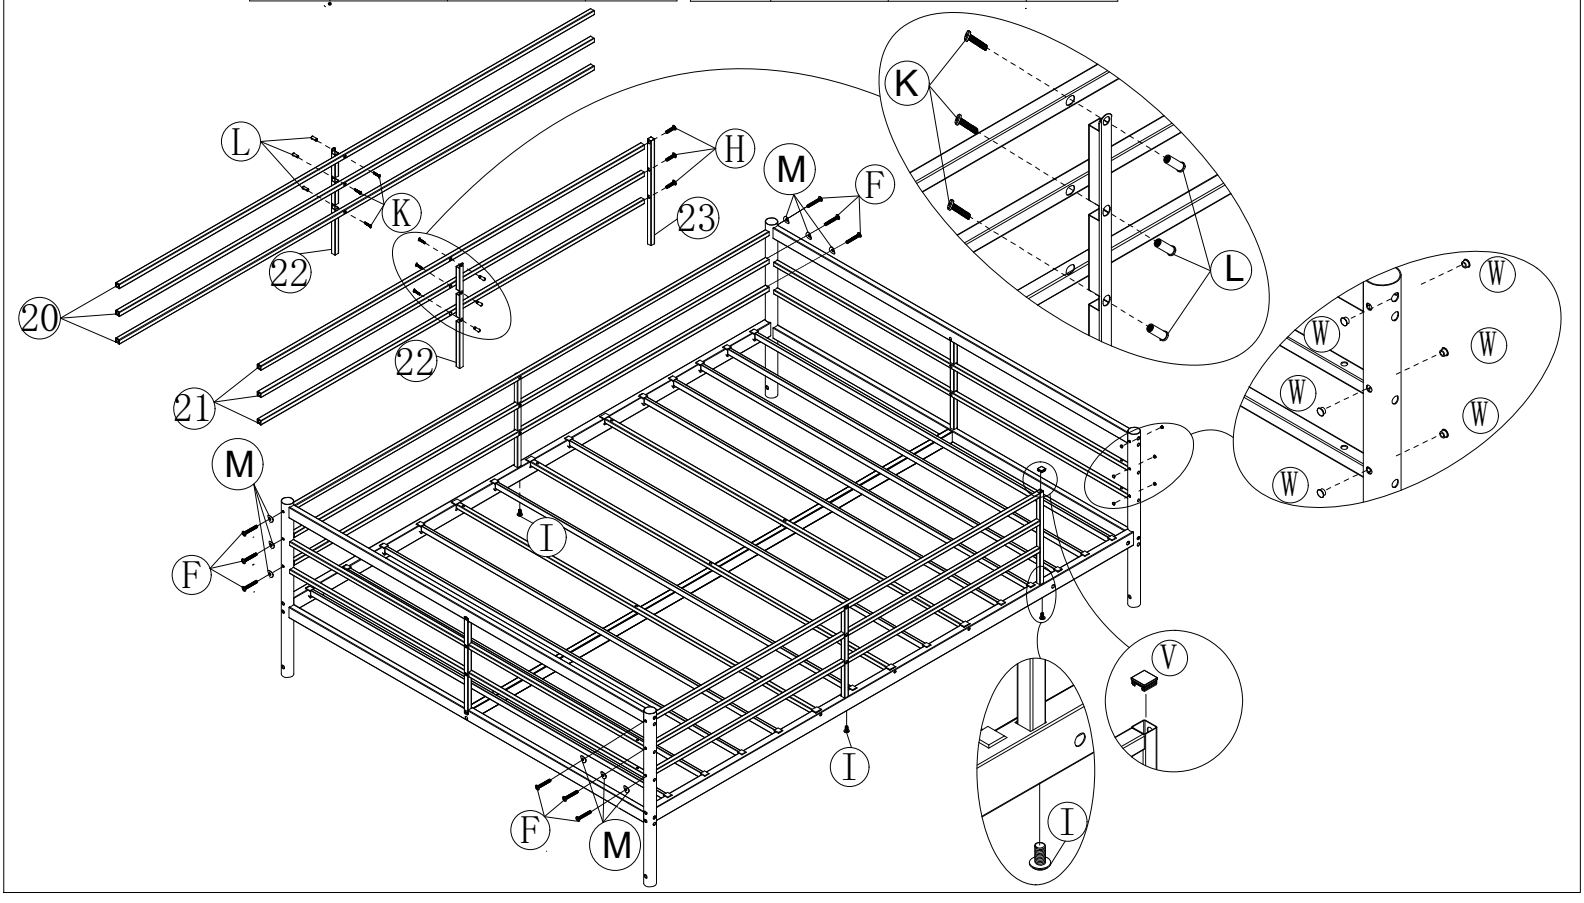

STEP5

D	M8x30	8	
E	M8 x25	8	
M	SMALL	8	
N	BIG	8	

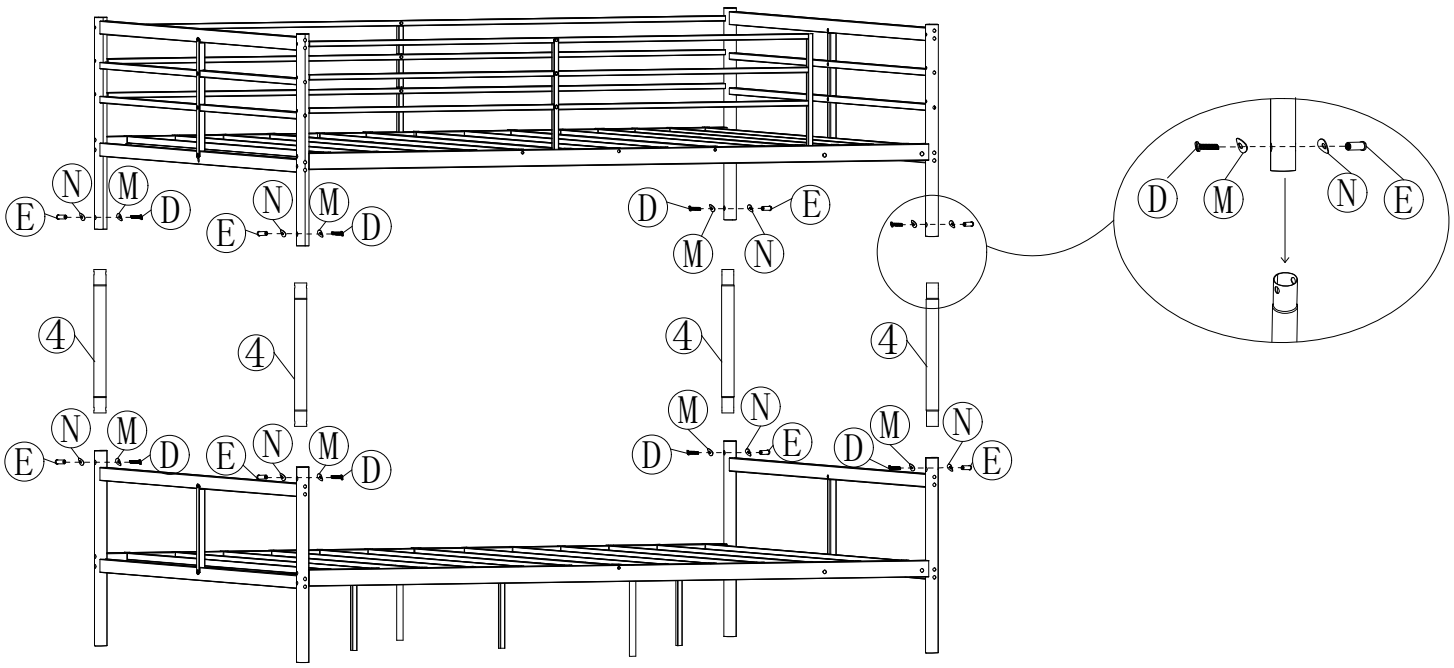

STEP6

B	M8x50	4	
C	M8x40	18	
E	M8 x25	4	
T	Bubble Pads	5	

