5/8” DRAPERY ROD INSTALLATION INSTRUCTIONS - 86-128” ROD SET

Care Instructions: Clean with a soft cloth. Do not use abrasive cleaning agents, solvents or polishes.

SET INCLUDES:

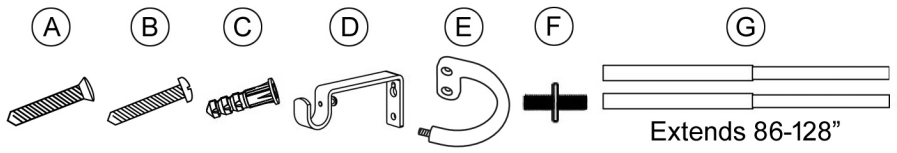

YOU WILL NEED:

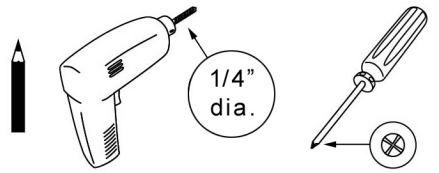

1

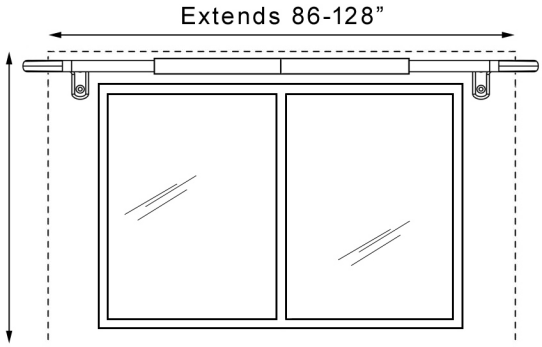

Before installation, measure windows to determine appropriate drapery rod length.

2

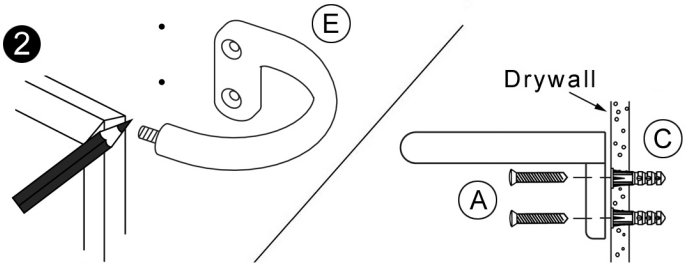

Use bracket (E) as a guide to mark location for mounting screws (A). Drill pilot holes into wall with 1/4” drill bit (not included). Insert wall anchors (C) and attach bracket (E) using mounting screws (A).
Wall anchors may not be necessary if drilling into studs.

3

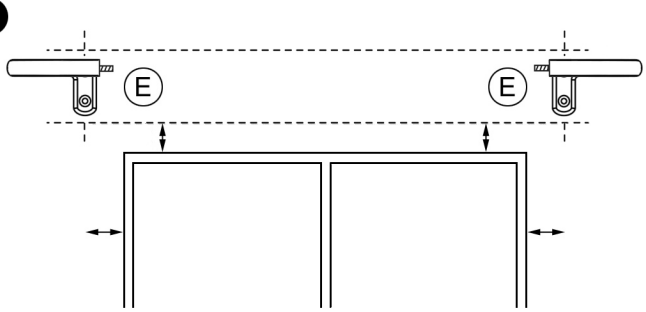

Repeat step 2 for additional bracket.
Use level if necessary.

4

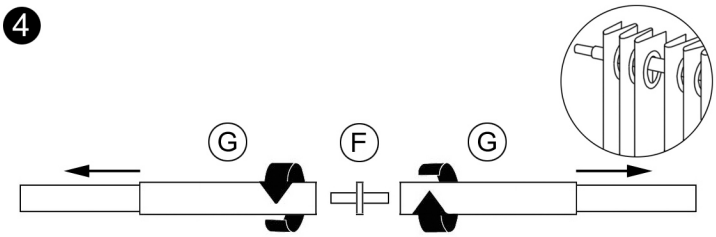

Assemble drapery rod (G) by connecting the two larger diam. rods with the threaded connector (F). Place drapery panels (not included) on the larger diam. rod. Extend the smaller diam. rods that are nestled in the larger diam. rods at each end.

5

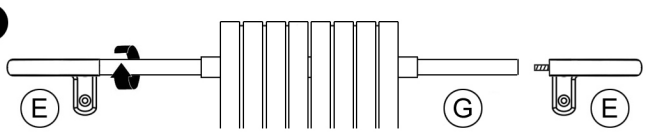

Screw rod into one end bracket.



Gather drapery panels to this end. Extend rod to desired length and screw into other end bracket.



Separate panels to each end of rod.

6

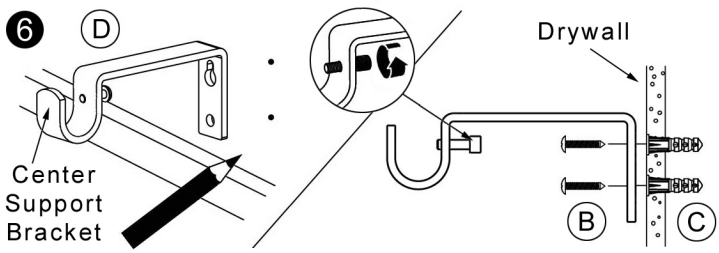

Use bracket (D) as a guide to mark location for mounting screws (B). Drill pilot holes into wll with 1/4” drill bit (not included). Insert wall anchors (C) and attach bracket (D) using mounting screws (B).
Wall anchors may not be necessary if drilling into studs.
Tighten set screw to secure rod in place.