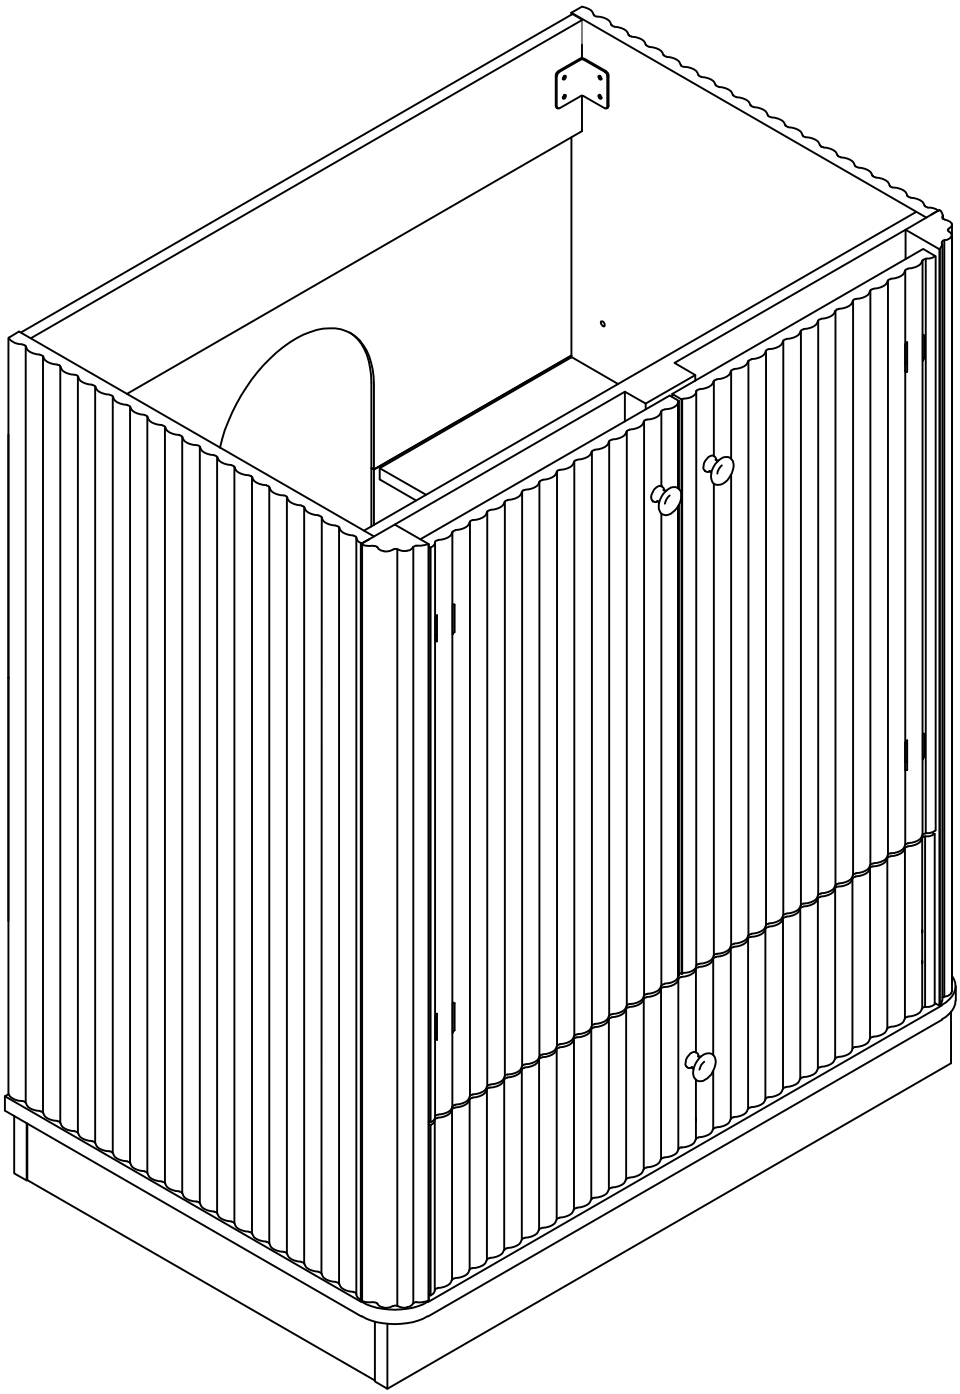


1.

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support,please feel free to contact our customer support team.

PRECAUTIONS

1.There are many components and accessories in the package.Each component and accessory is labeled with a letter or a number,check carefully before using any of them. Keep them away from children to prevent accidents.

2.Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.

3.The main components ofthe product are relatively heavy. Please pay attention to safety during installation.


4.The product is not stable during installation. Please do not move it randomly before it is completely installed.

5.This product requires two people to install.


6.If you have any questions during installation, please contact our customer service in time.

*PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.


*IF YOU NEED FURTHER ASSISTANCE,PLEASE CONTACT OUR CUSTOMER SERVICE ONLINE.

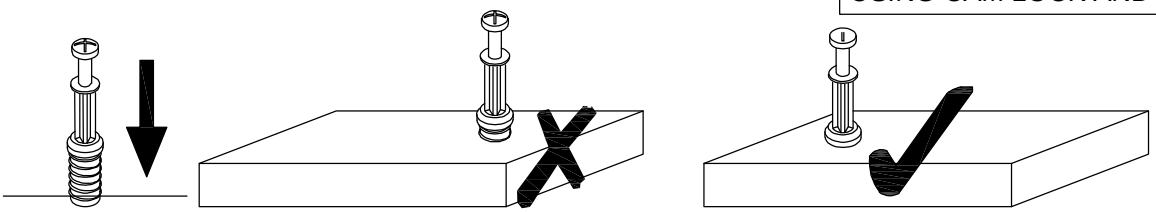


EN_QUICKFIT:Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.
FR_RACCORD RAPIDE:Faites serrer le raccord rapide jusqu'a ce que l'epaulement soit parfaitement encstre dans le panneau.Il ne faut ni trop serrer ni insuffisamment serrer.
ES_QUICKFIT:Apriete quickfit hasta que el hombre se descargue con el panel.NO lo sobreapriete ni lo apriete poco.
DE_QUICKFIT:Ziehen Sie den quickfit fest,bis die Schulter mit der Platte bundig ist. Bitte nicht zu fest oder zu schwach anziehen.
IT_MONTAGGIO RAPIDO:Stringere il montaggio rapido fino aquando la spalla e a filo con il pannello,non stringere troppo o troppo poco.

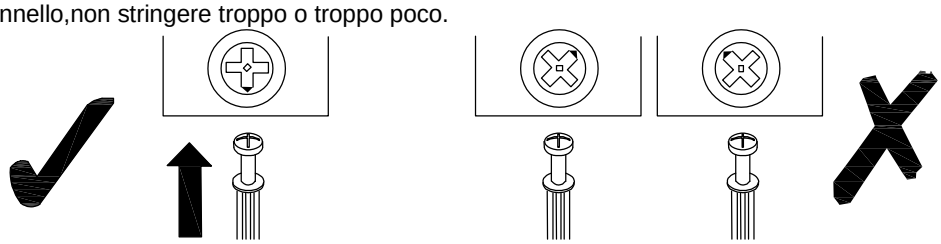

EN_CAM LOCK:When fitting cam lock,ensure starting position is correct before you insert connecting quickfit.
FR_SERRURE BATTEUSE:Avant d'inserer la serrure batteuse,veillez a la bonne orientation avant d'inserer le raccord rapide,
ES_CIERRE DE LA CAMARA:Cuando instale el cierre de la camara,asegurese de que la posicion de inicio es correcta antes de que inserte el quickfit conector,
De_CAM-LOCK:Achten Sie bei der Montage des Cam-locks auf die richtige Ausgangsposition,bevor Sie den Quickfit einsetzen.
IT_BLOCCAGGIO A CAMMA:Quando si monta il bloccaggio a camma,assicurarsi che la possizione iniziale sia corretta prima di inserire il montaggio rapido di collegamento.

















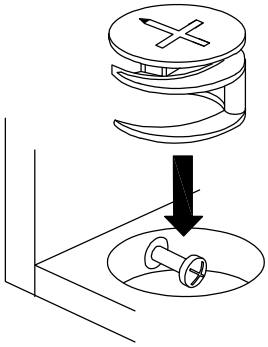


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.
FR_Lorsque les deux panneaux sont assembles,la tete du raccord rapide doit reposer au centre de la serrure batteuse.
Il faut inserer la serrure batteuse avant le raccord rapide.
ES_EL cabezal del quickfit debe estar en el centro del cierre de la camara cuando se unan los dos paneles.
Se debe insertar el cierre de la camara antes que el quickfit.
DE_Der Quickfit-Kopf sollte sich in der Mitte des Cam-locks befinden,wenn die beiden Platten zusammengefugt sind.
Der Cam-lock sollte vor dem Quickfit eingesetzt werden.
IT_La testa del montaggio rapido deve trova rsi al centro del bloccaggio a camma quando i due pannelli sono uniti.
Il Bloccaggio a Camma deve essere inserito prima del montaggio rapido.



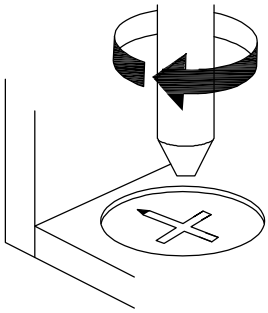


EN_Turn cam lock clockwise to tighten.
FR_Faites tourner la serrure batteuse dans le sens des aiguilles d'une montre pour la resserrer.
ES_Gire el cierre de la camara en sentido horario para apretarlo.
DE_Drehen Sie den Cam-Lock im Uhrzeigersinn,um ihn festzuziehen.
IT_Rutotare il bloccaggio a camma in senso oragio per stringere.











PARTS LIST

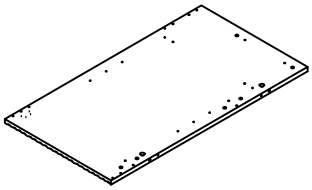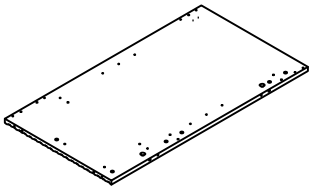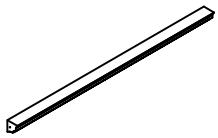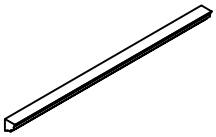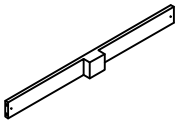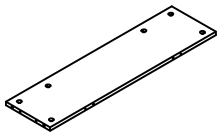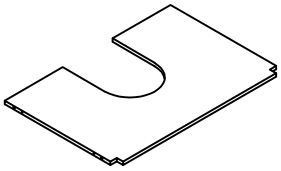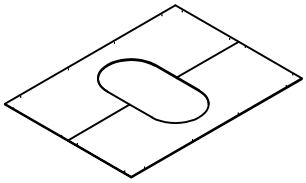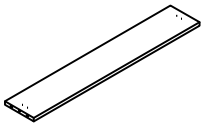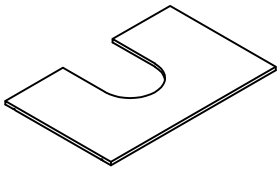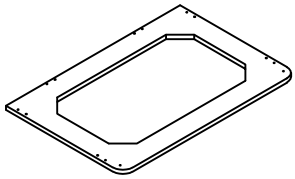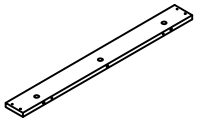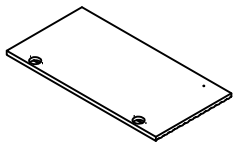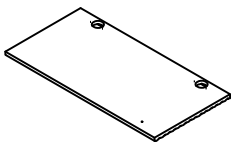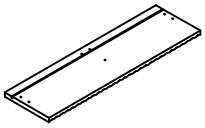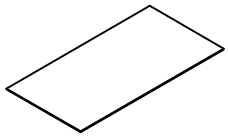
1 x1PC 	2 x1PC 	3 x4PCS 	4 x2PCS 
5 x1PC 	6 x1PC 	7 x1PC 	8 x1PC 
9 x1PC 	10 x1PC 	11 x1PC 	12 x1PC 
13 x1PC 	14 x2PCS 	15 x2PCS 	16 x1PC 
17 x1PC 	18 x1PC 	19 x1PC 	20 x1PC 

PARTS LIST

21 x1PC 	22 x1PC 	23 x1PC 

HARDWARE LIST

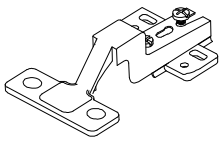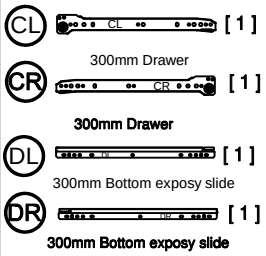A  40+2PCS	B  40+2PCS	C  Ø6x30mm 42+2PCS	D  4PCS	E  M3.5x12mm 20+1PCS
F  2PCS	G  4PCS	H  Recessed hinge 4PCS	I  M6*30mm 12PCS	J  M4*20mm 2PCS
K  3PCS	L  M3.5x35mm 8+1PCS	M  M5x40mm 8PCS	N  M3 1PC	O  [1] 300mm Drawer [1] 300mm Drawer [1] 300mm Bottom exposy slide [1] 300mm Bottom exposy slide
P  M4 1PC	Q  M3.5x14mm 24+1PCS	R  M3x16mm 16+1PCS	S  M4x18mm 1PC	T  Ø10mm 1PC

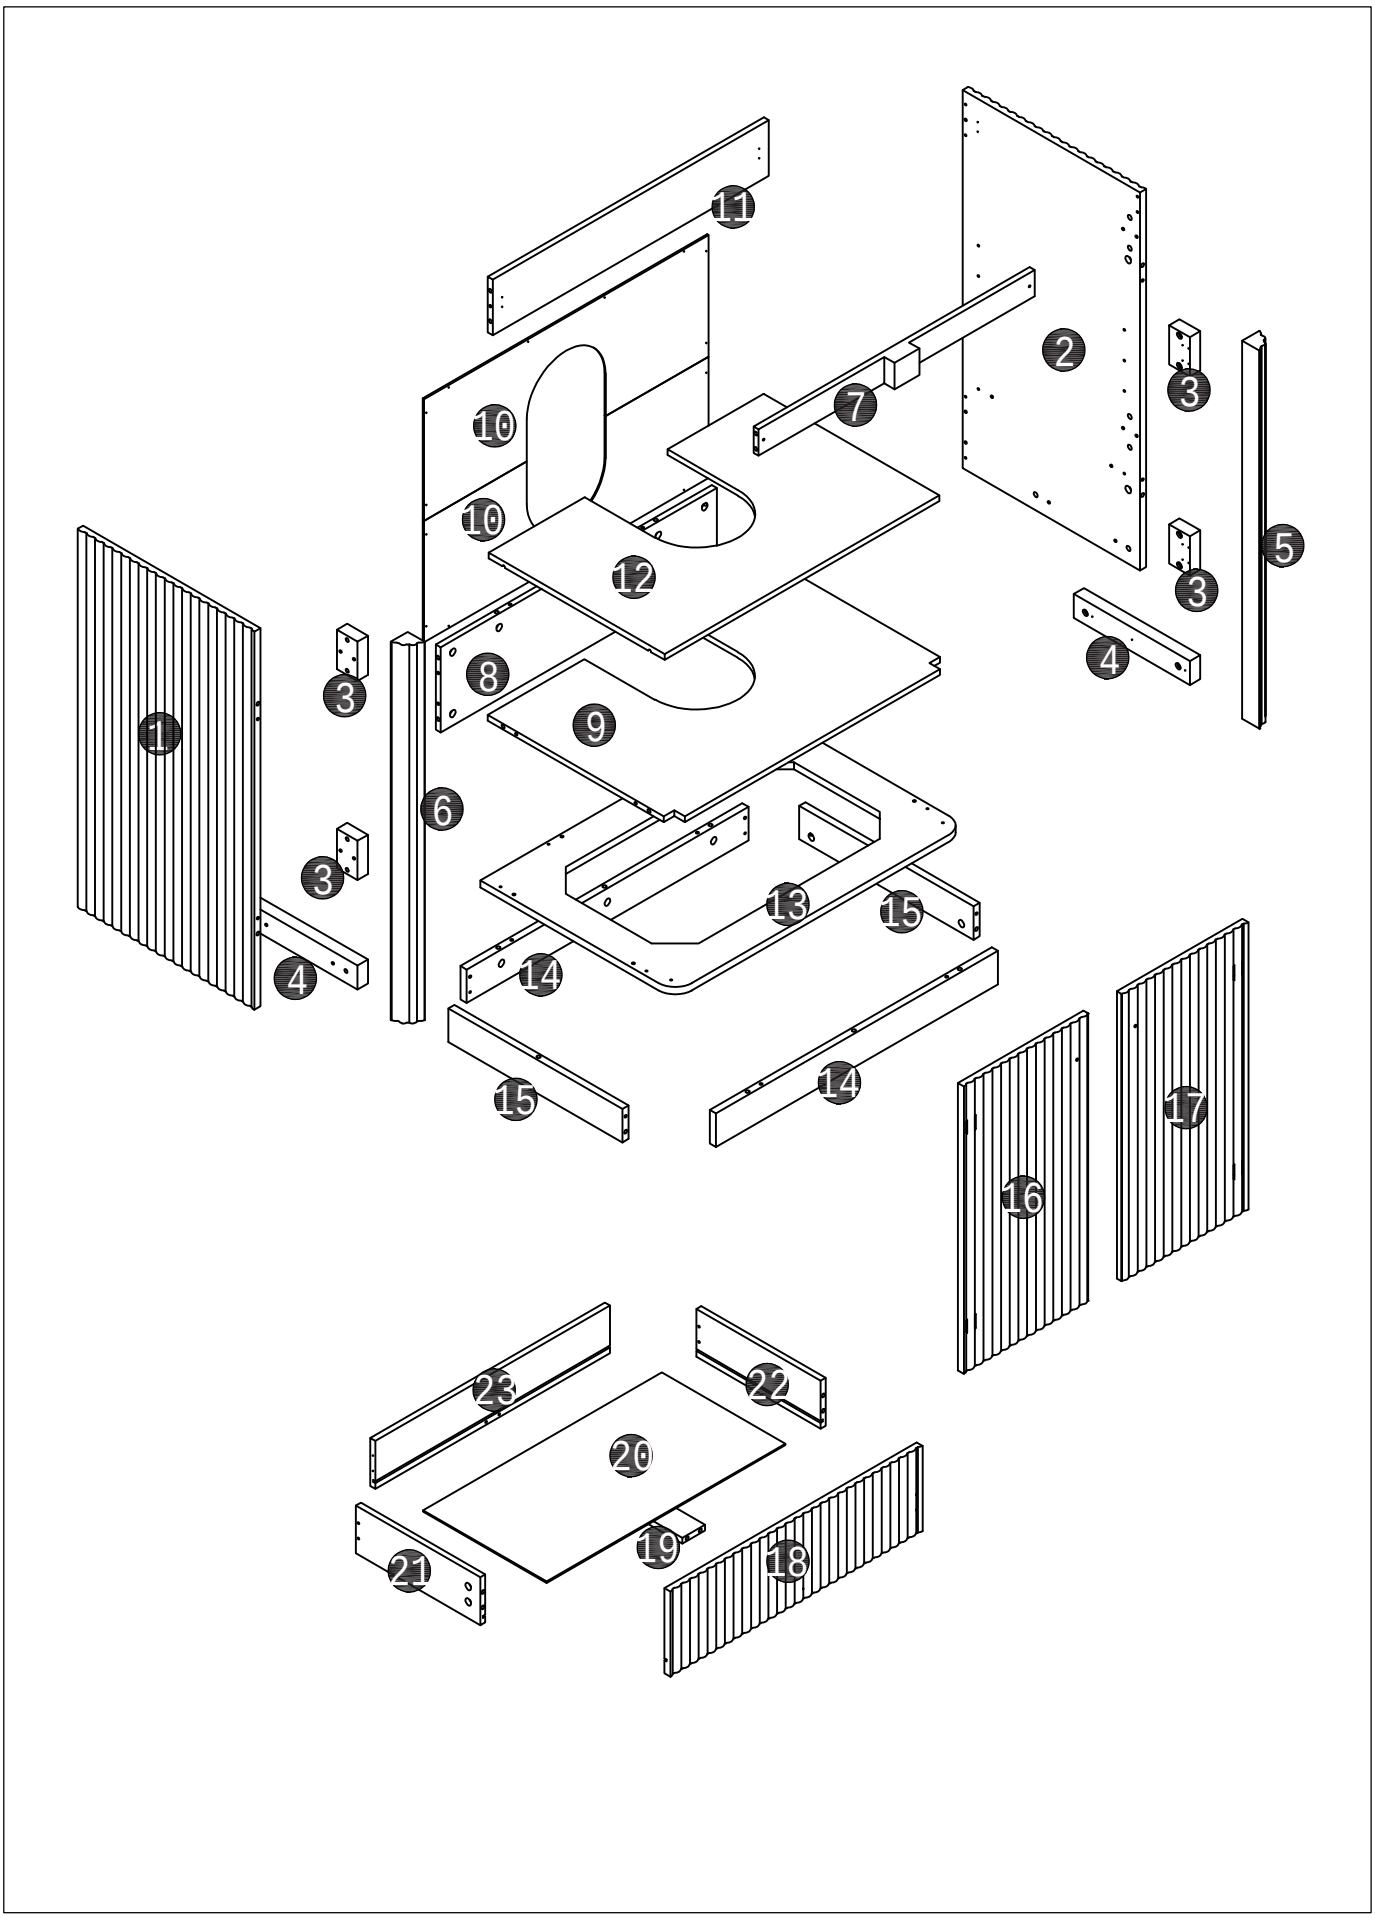
11
2
3
7
10
10
5
12
3
4
8
3
1
9
6
3
13
15
4
14
14
15
17
16
23
22
20
19
18
21

Step 1.

I


6PCS

C

6PCS

P

1PC

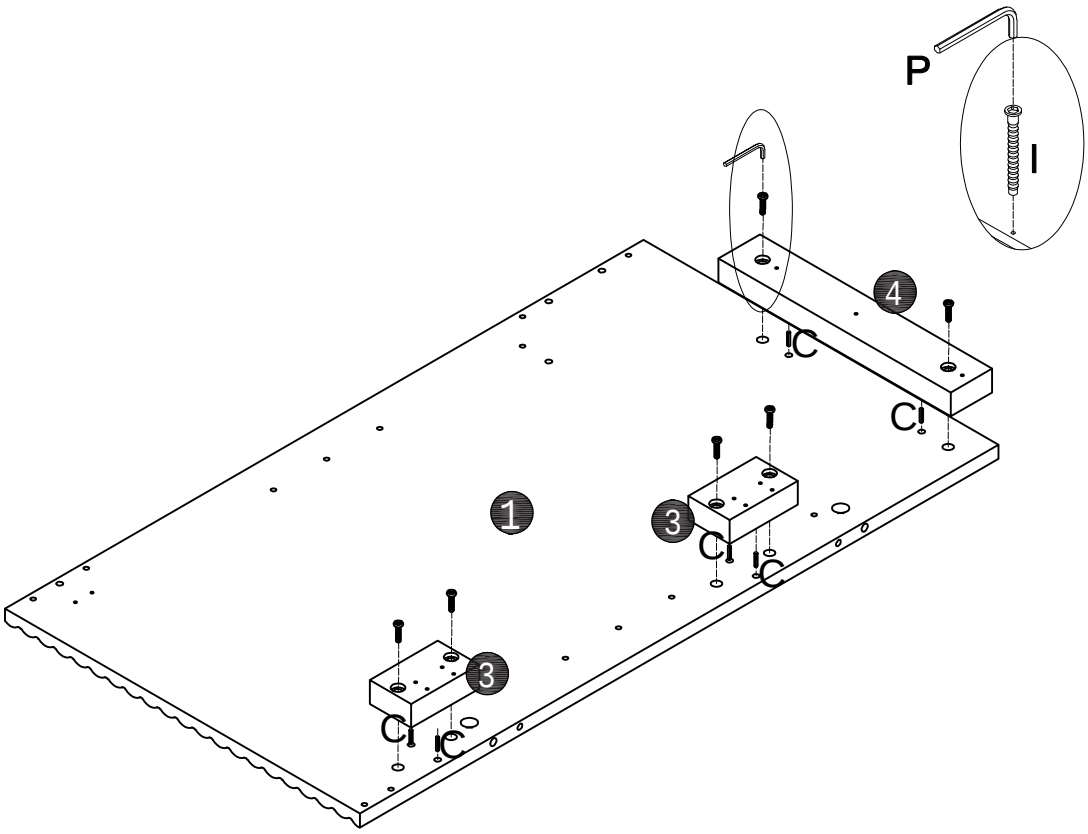

Step 2.

A

2PCS

B

2PCS

C

2PCS

Step 3.

I


6PCS

C

6PCS

P

1PC

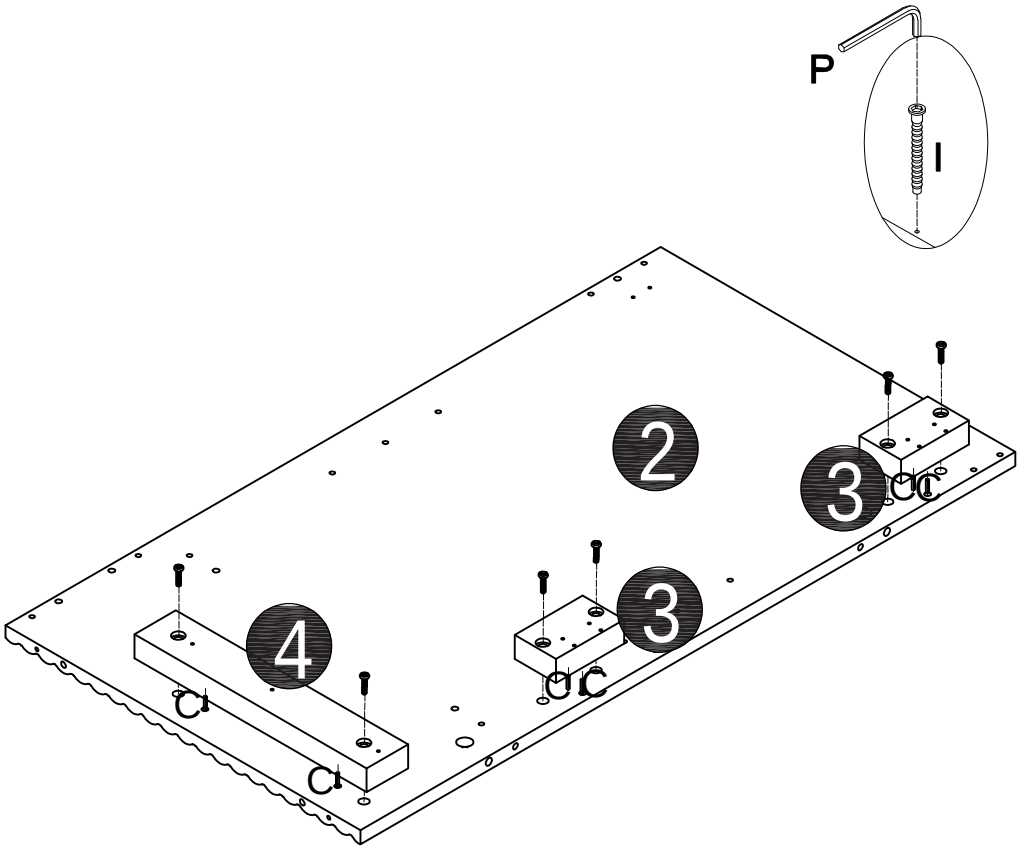

Step 4.

A


2PCS

B

2PCS

C

2PCS

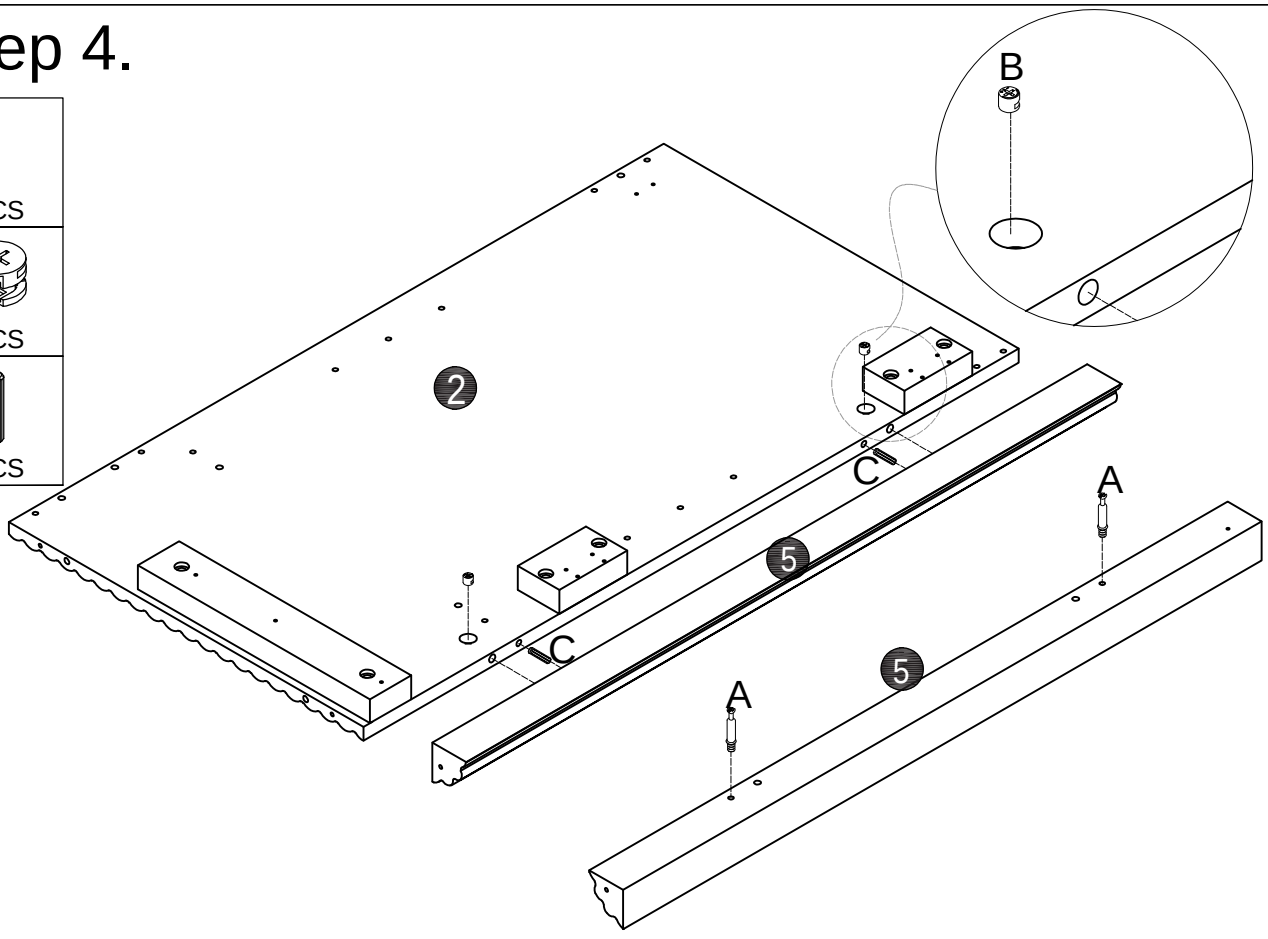


Step 5.

O

1PCS


E

3PCS

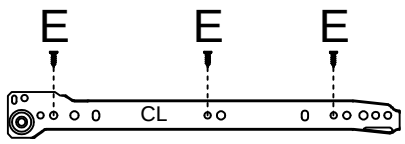

CL

O 300mm Drawer

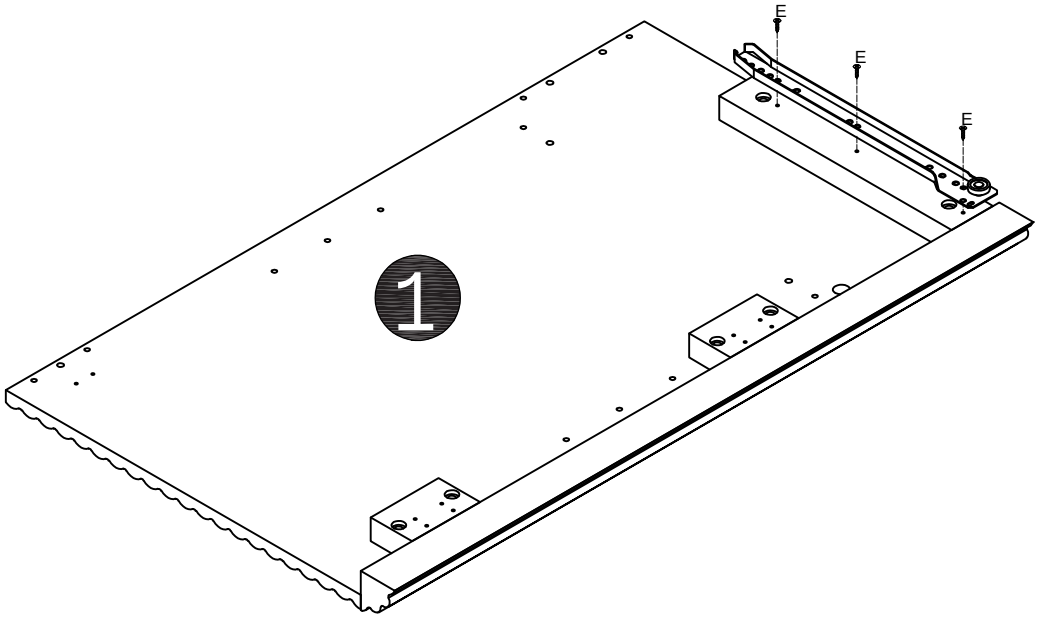


Step 6.

O

1PC


E

3PCS

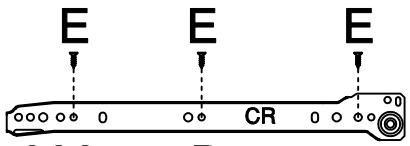

CR


O 300mm Drawer

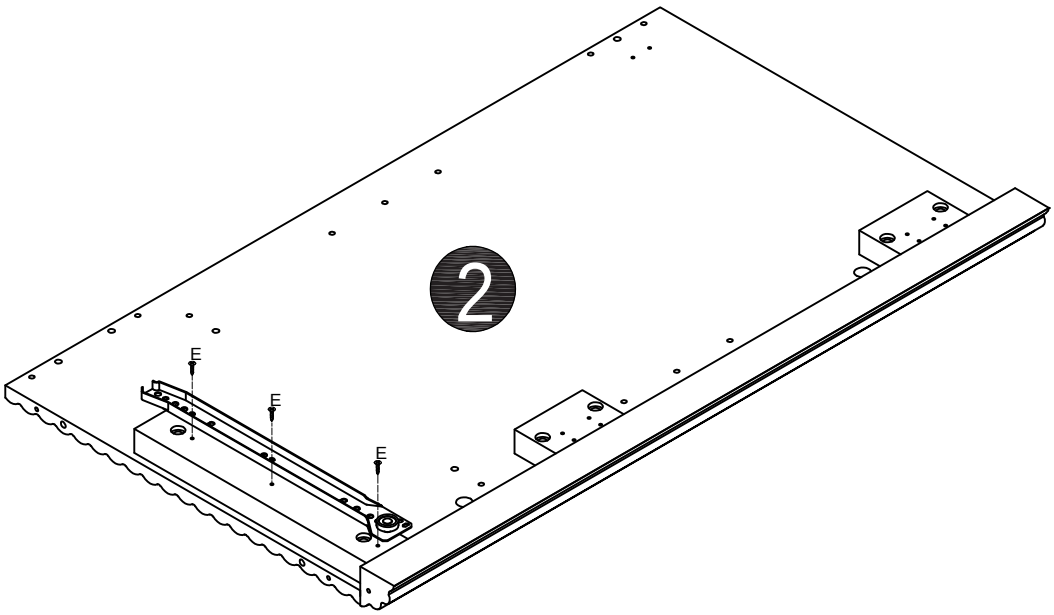

Step 7.

A


8PCS

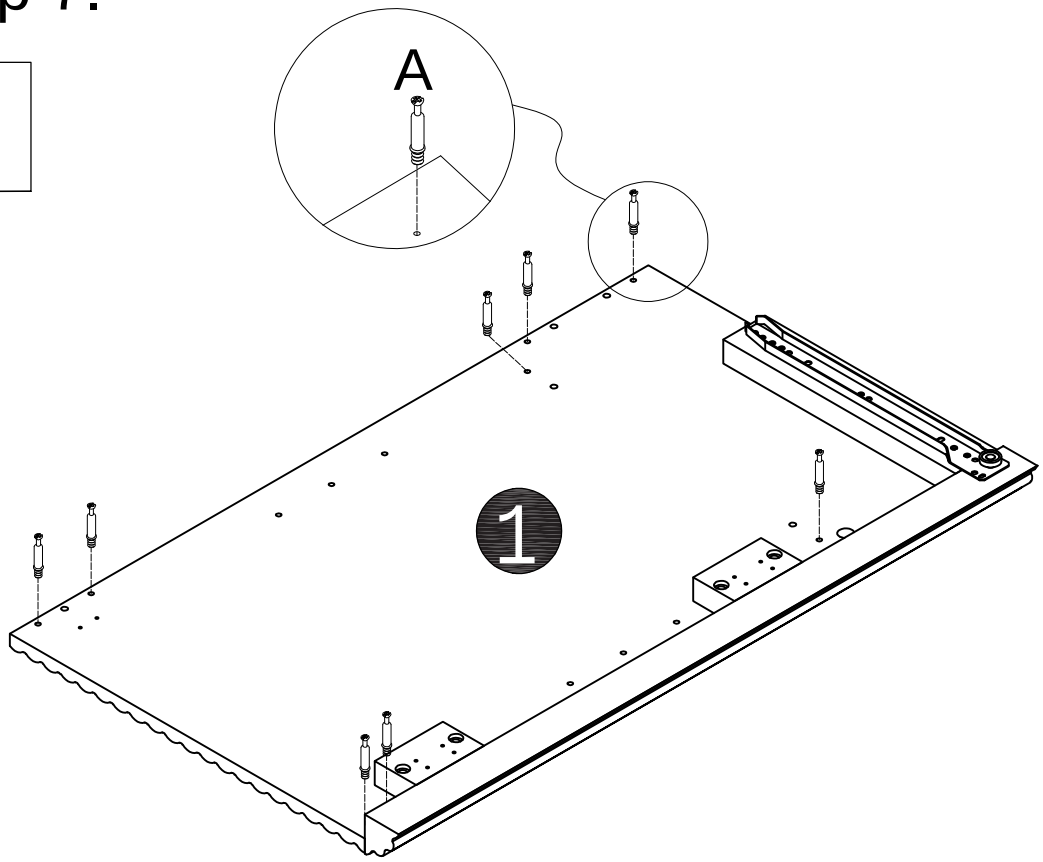

Step 8.

A

8PCS

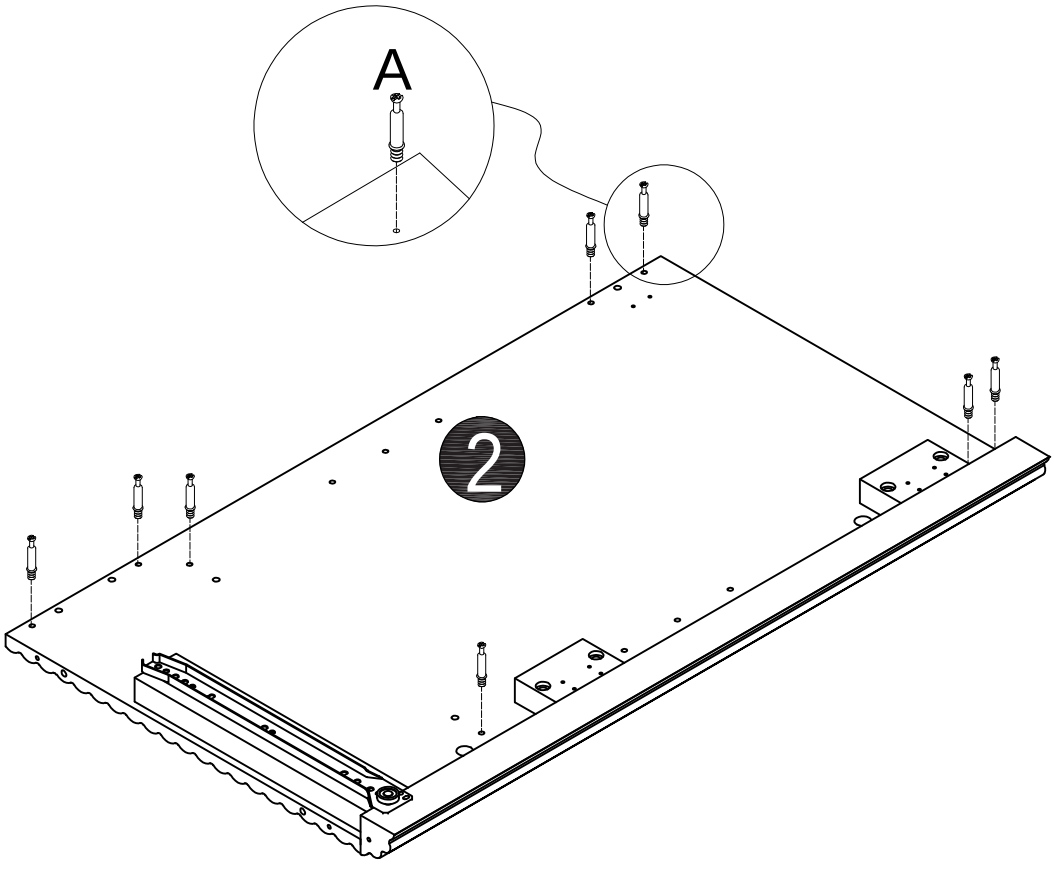


Step 9.

A



2PCS

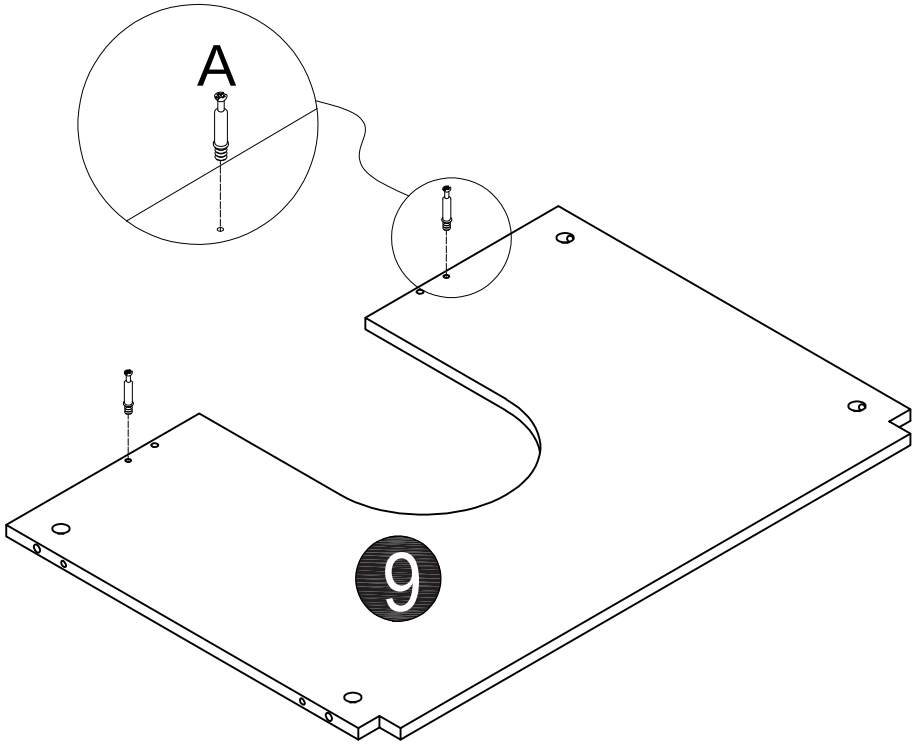

Step 10.

B




2PCS

C



2PCS

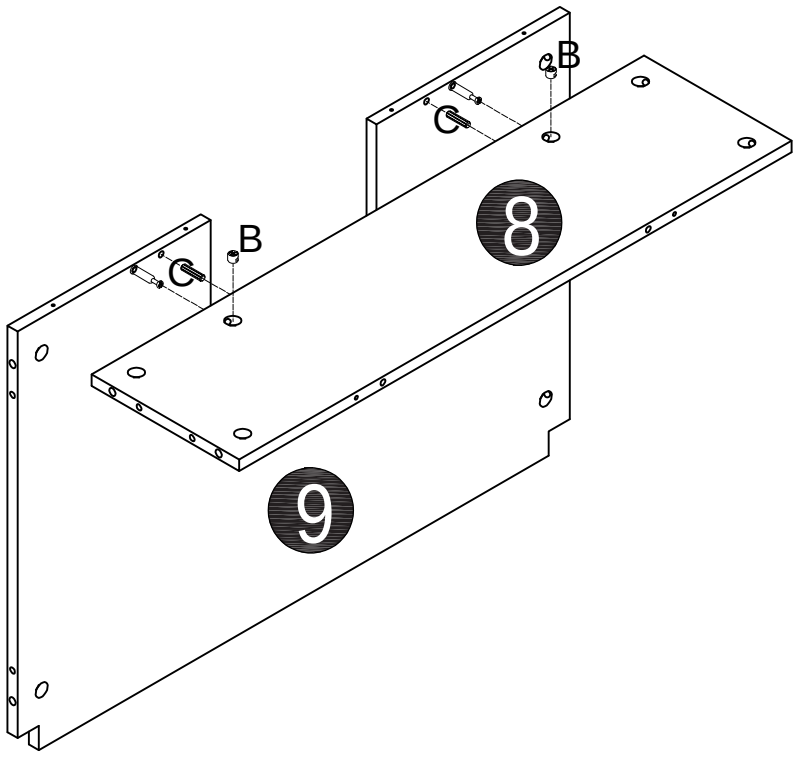

Step 11.

B




8PCS

C



5PCS

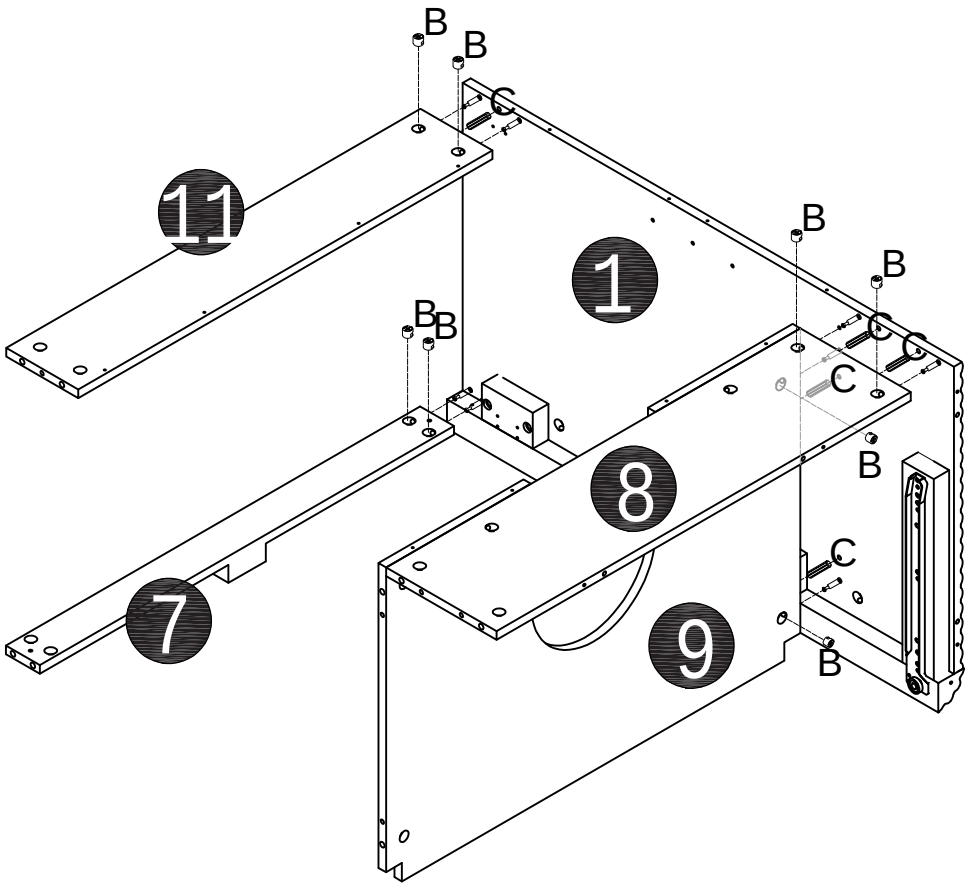

Step 12.

B




8PCS

C




5PCS

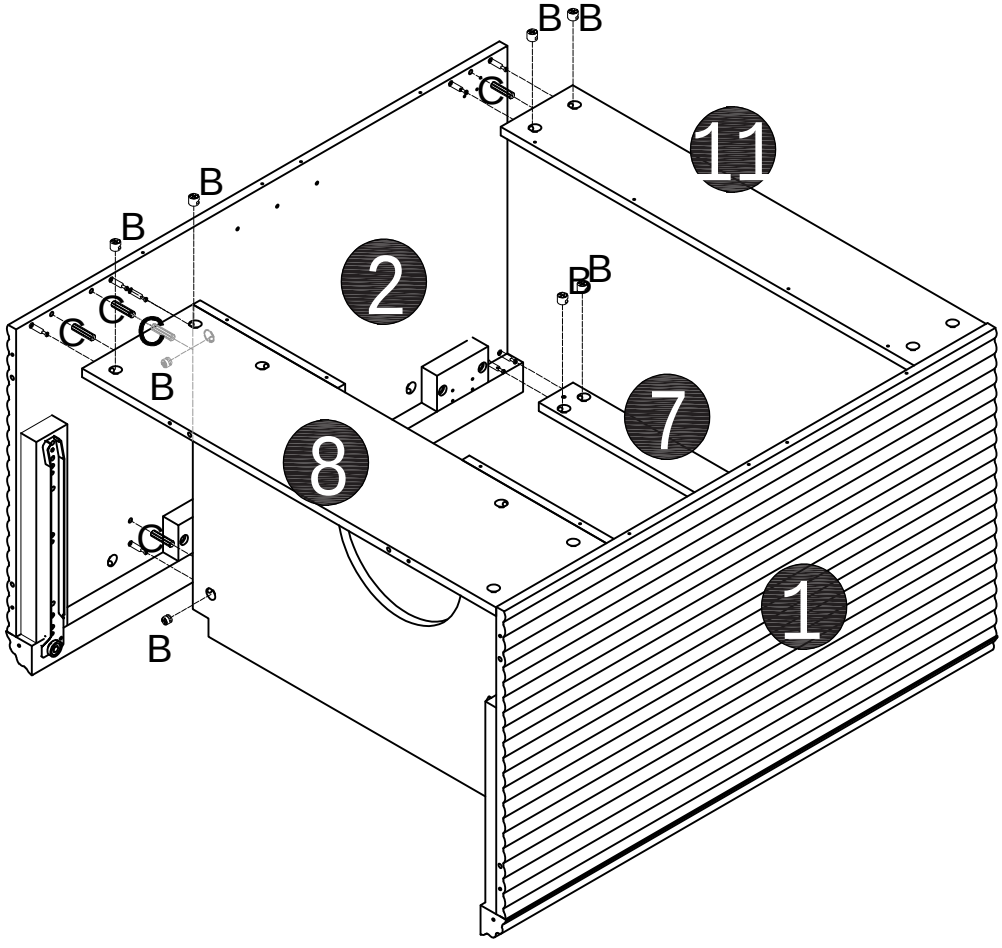


Step 13.

R




16PCS

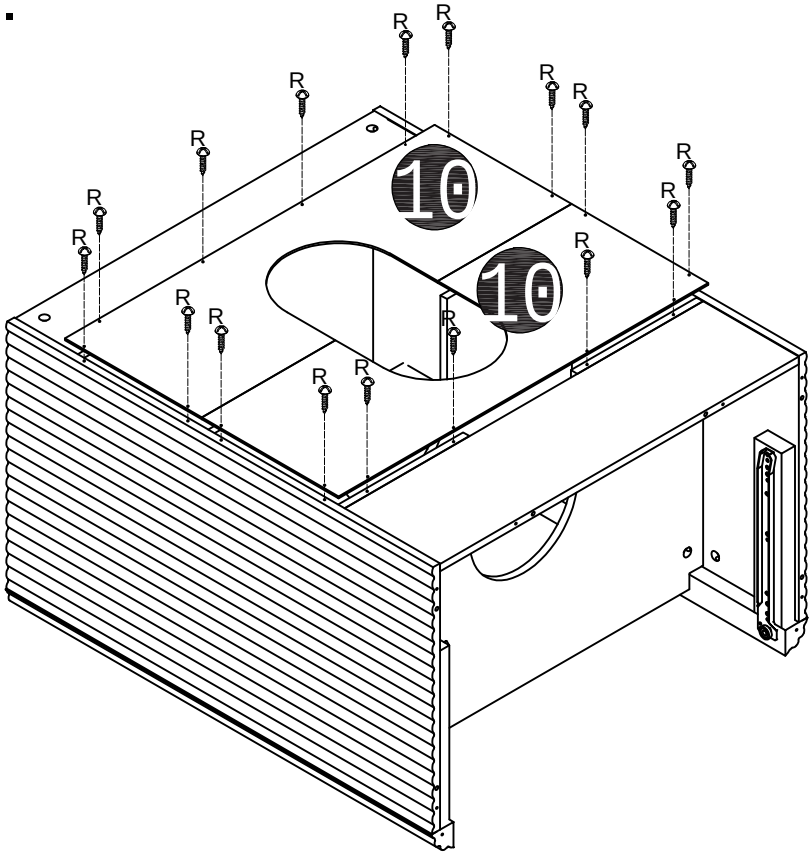

Step 14.

C




6PCS

M




8PCS

N




1PCS

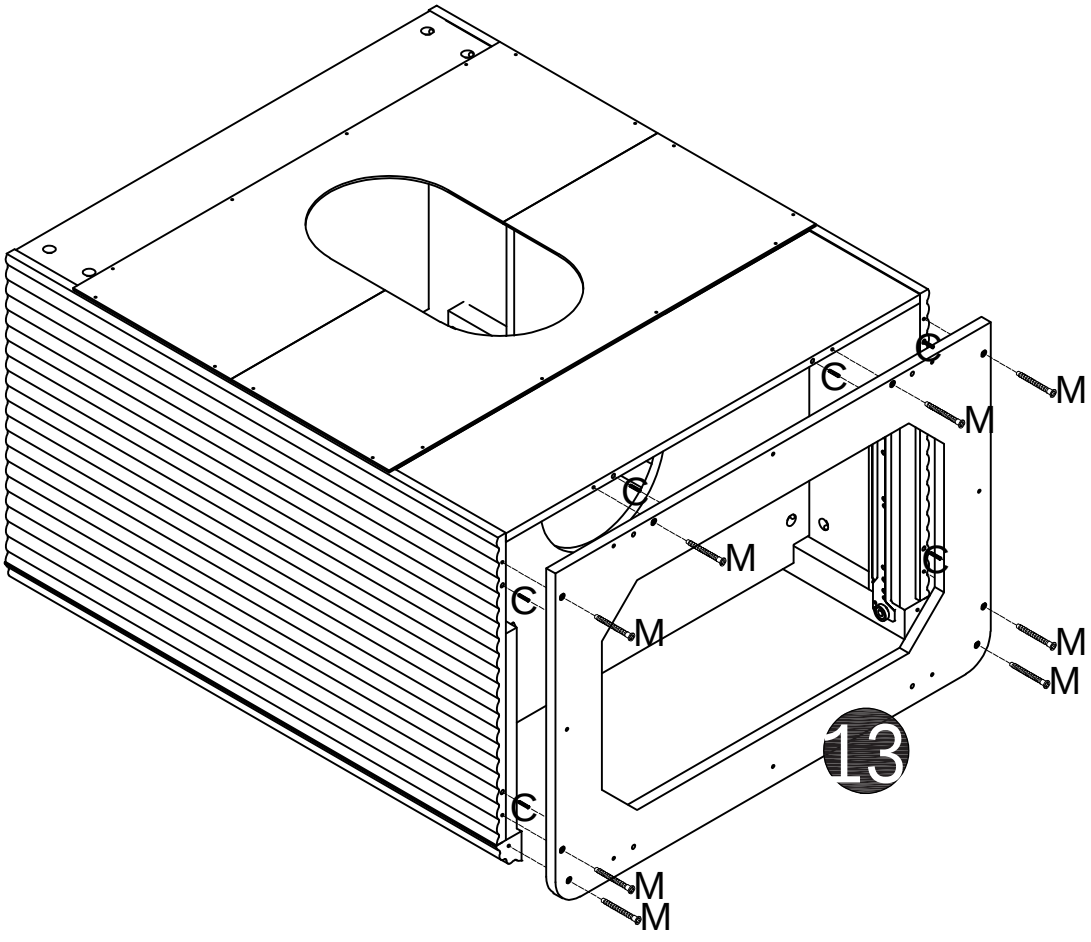


Step 15.

A




8PCS

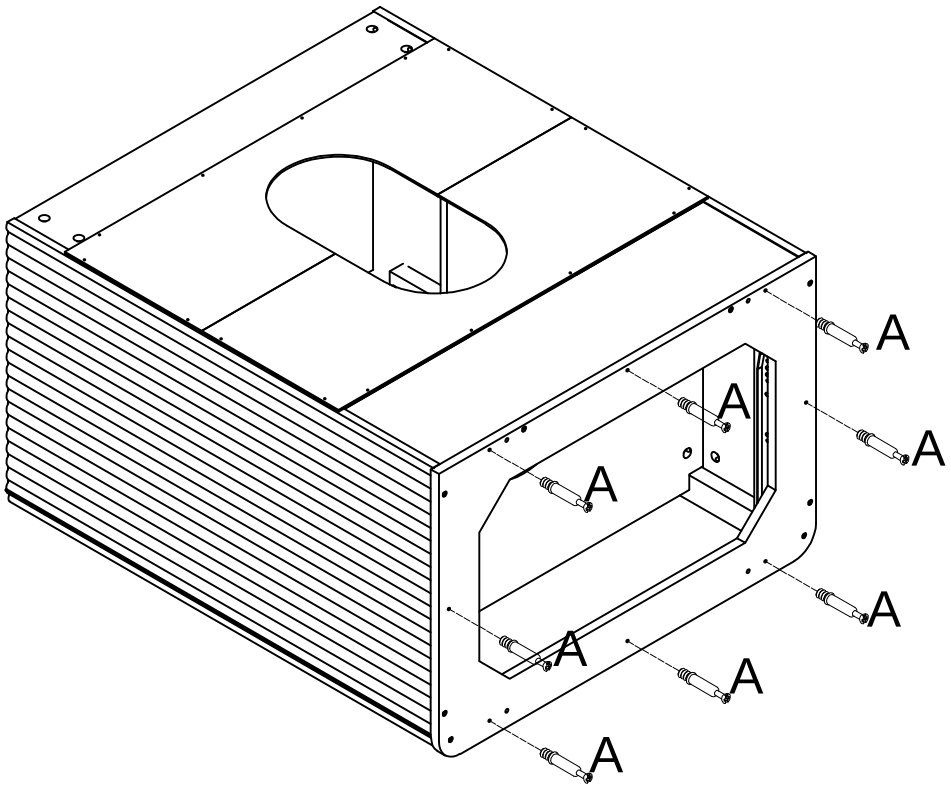

Step 16.

A



4PCS

B




4PCS

C



4PCS

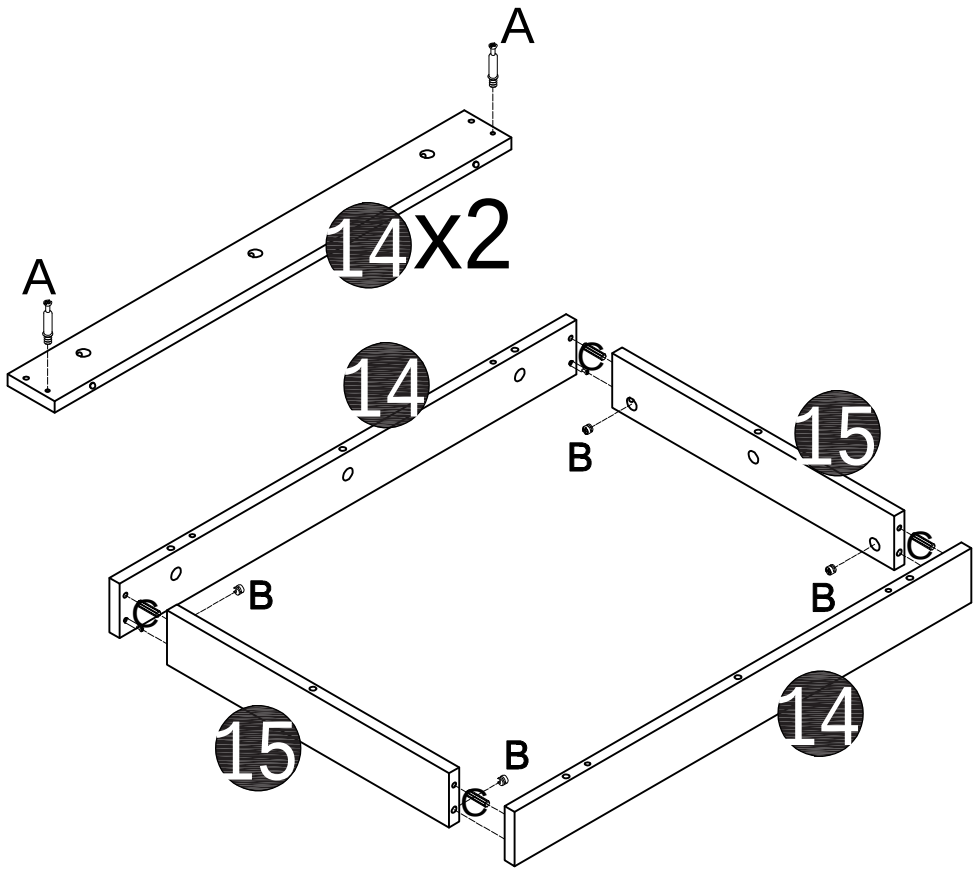

Step 17.

B




8PCS

C



4PCS

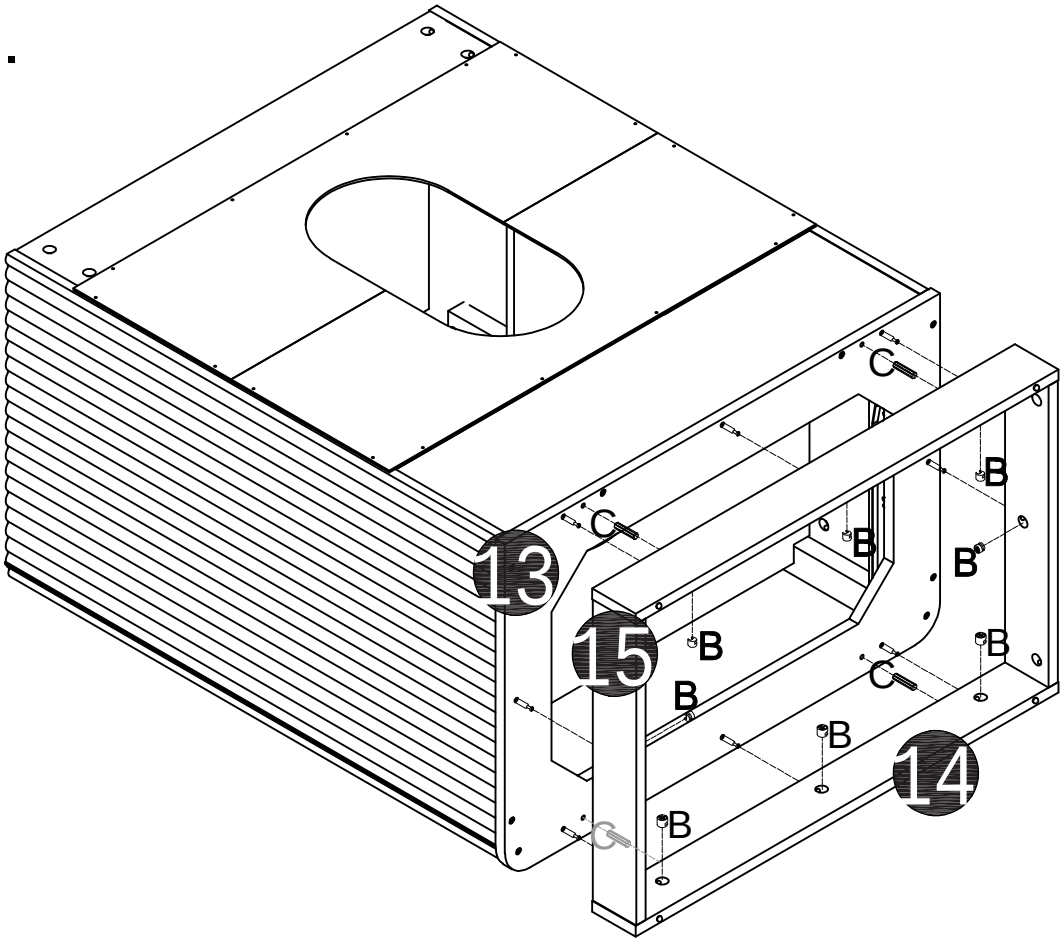


Step 18.


L



2PCS

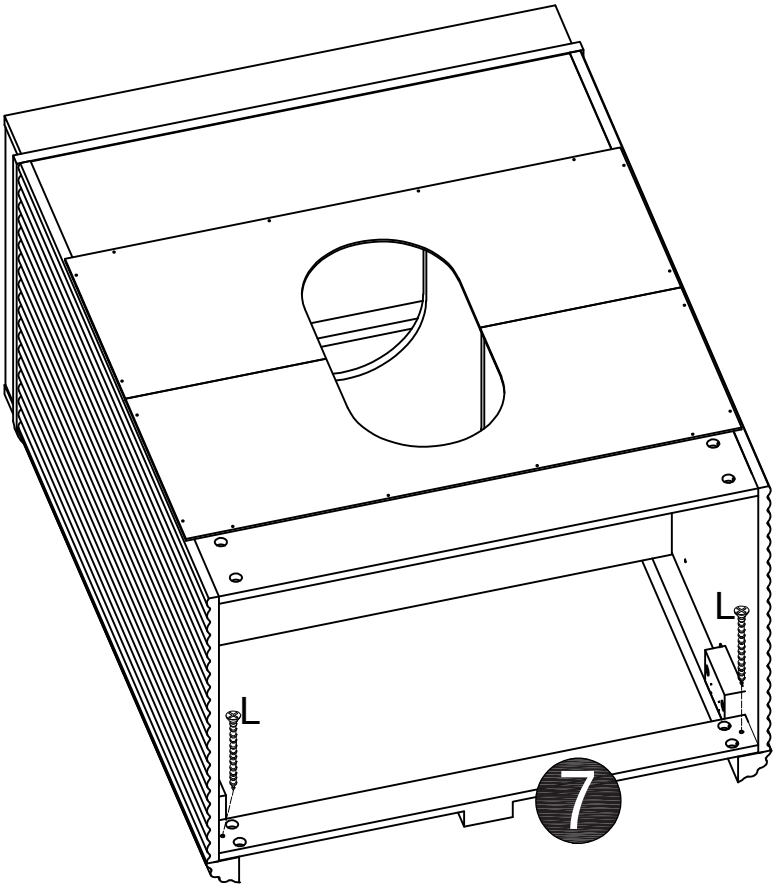


Step 19.

F

2PCS

E

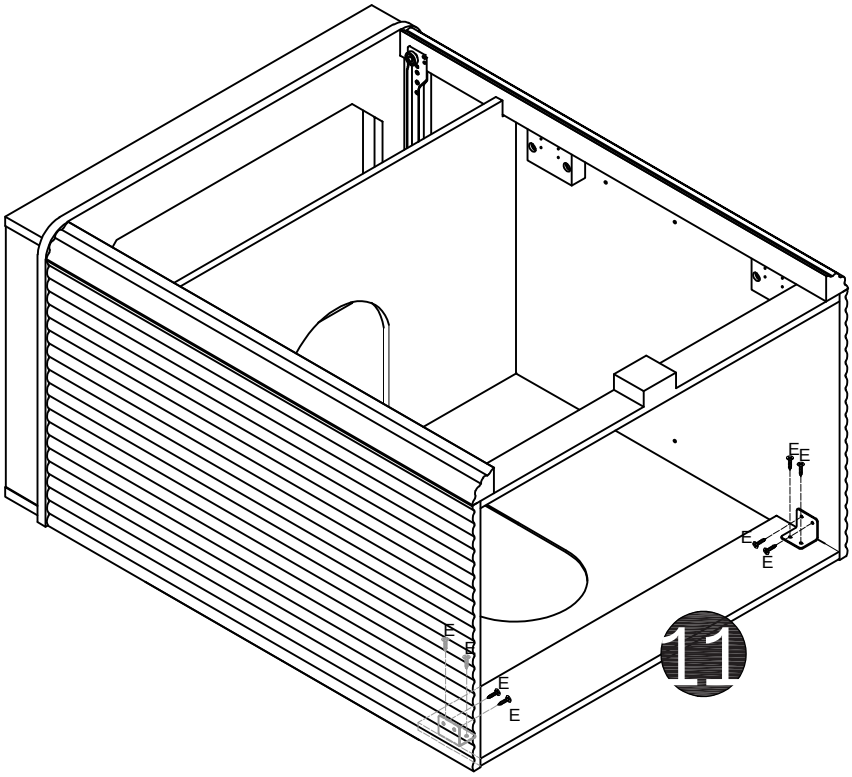8PCS



Step 20.

A

6PCS

K


1PC


S

1PC

T


1PC

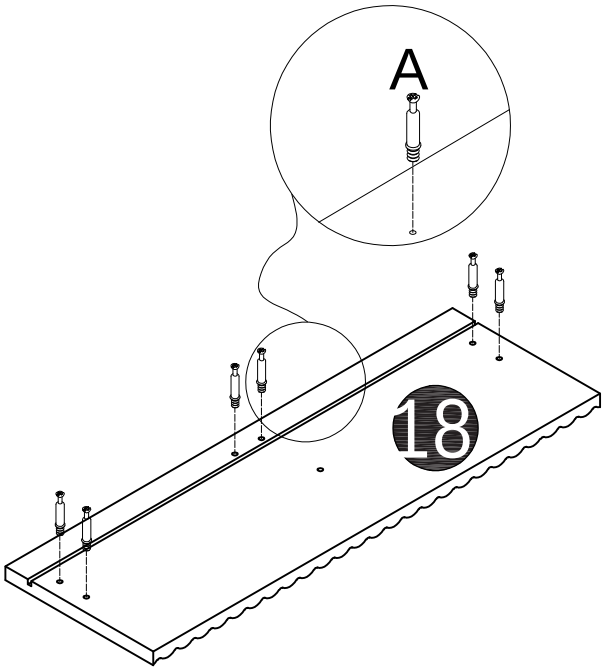

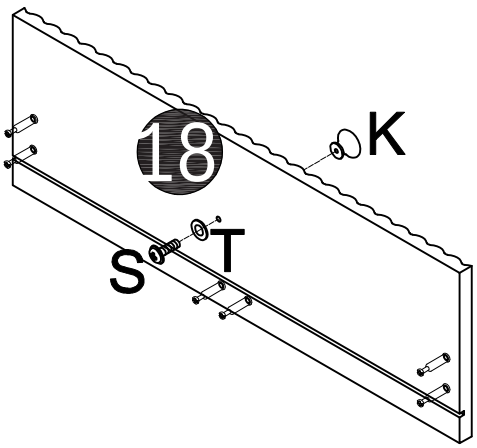


Step 21.



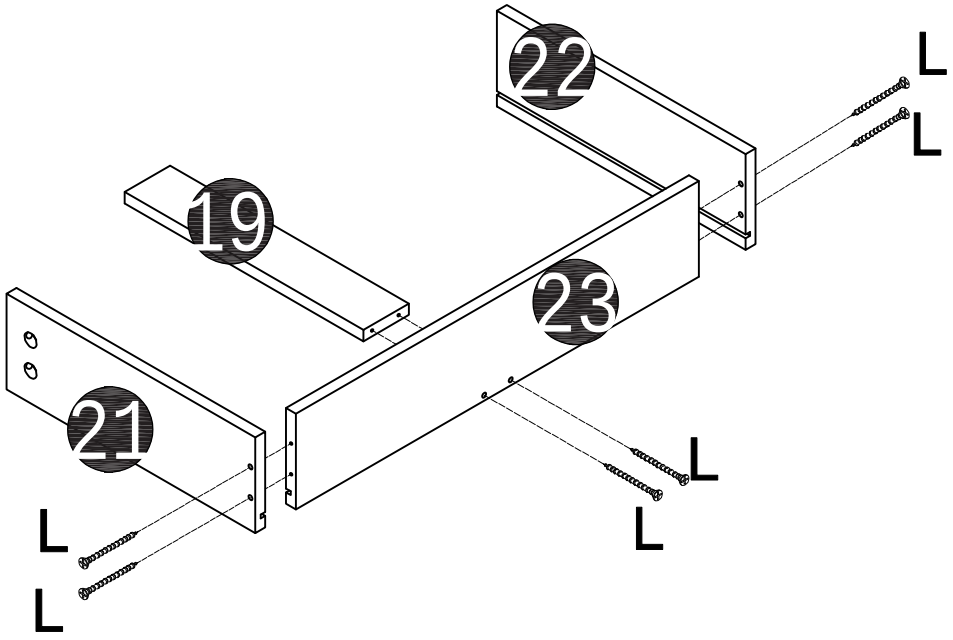

Step 22.

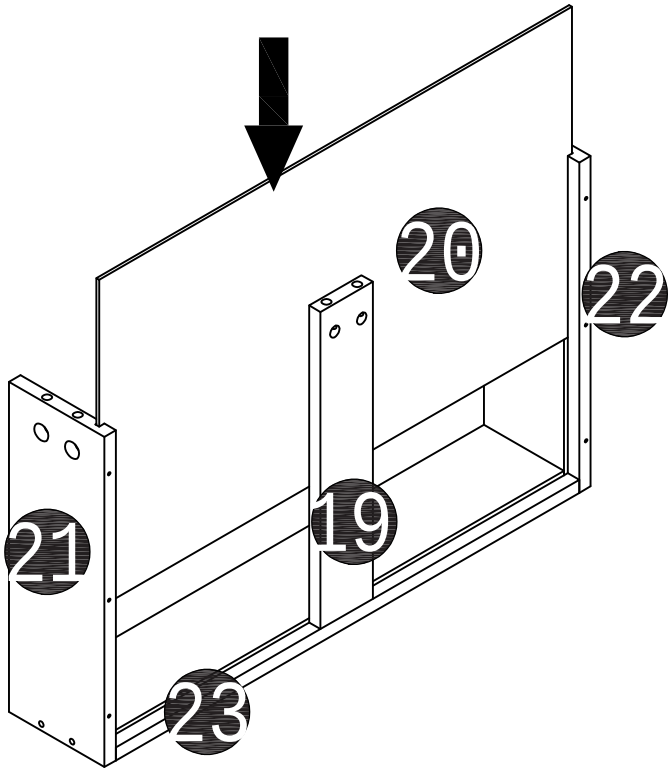

Step 23.

B




6PCS

D



4PCS

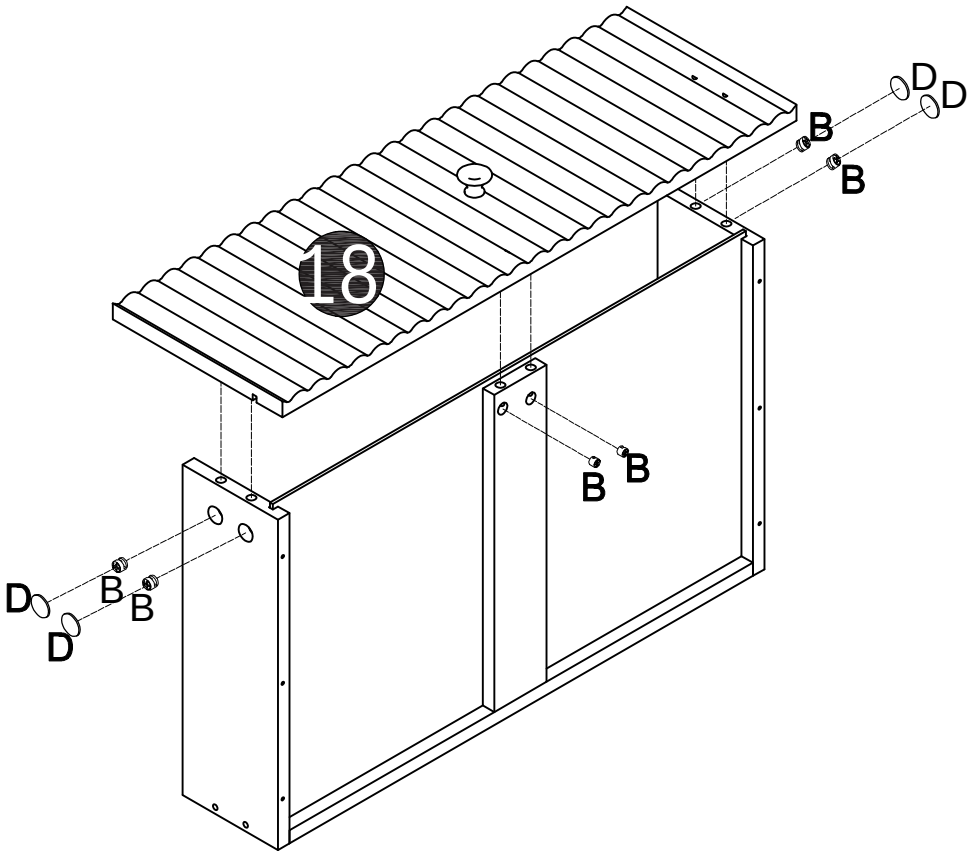

Step 24.

P




1PCS

E



6PCS


DL

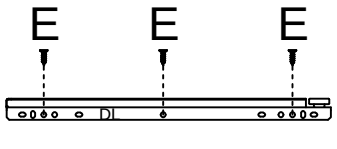

[1]


300mm Bottom exposy slide

DR

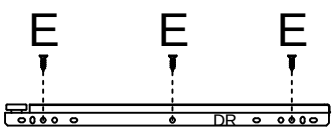

[1]

300mm Bottom exposy slide

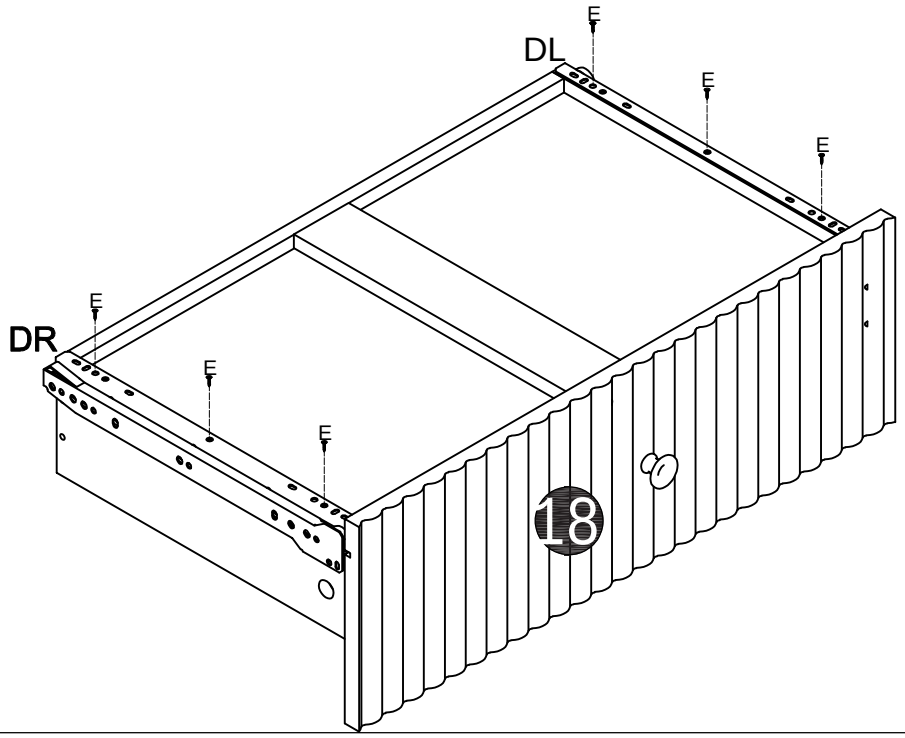


Step 25.


G




4PCS

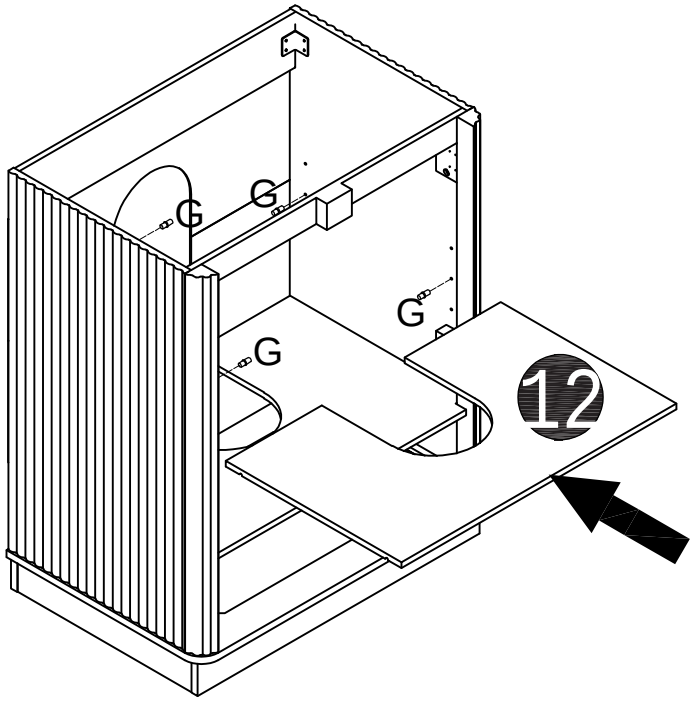

Step 26.

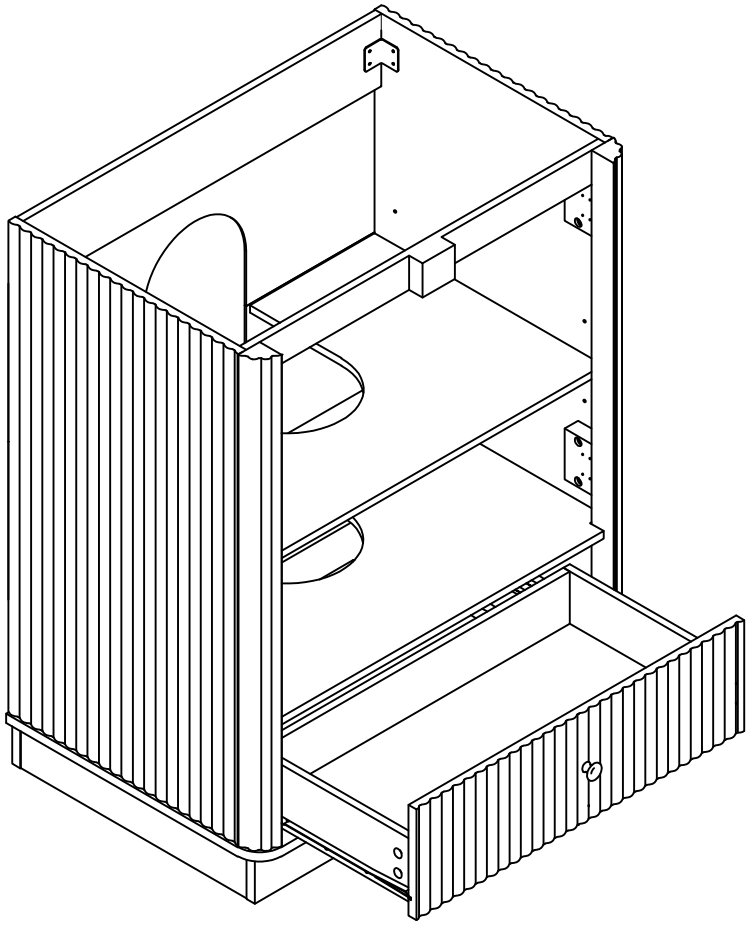

Please note that the drawers must be installed as indicated by the arrows.

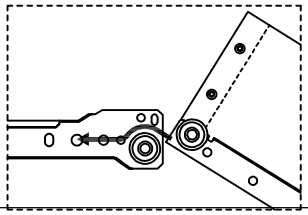

Step 27.

H

4PCS

Q

8PCS


Step 28.

J

2PC

K

2PC

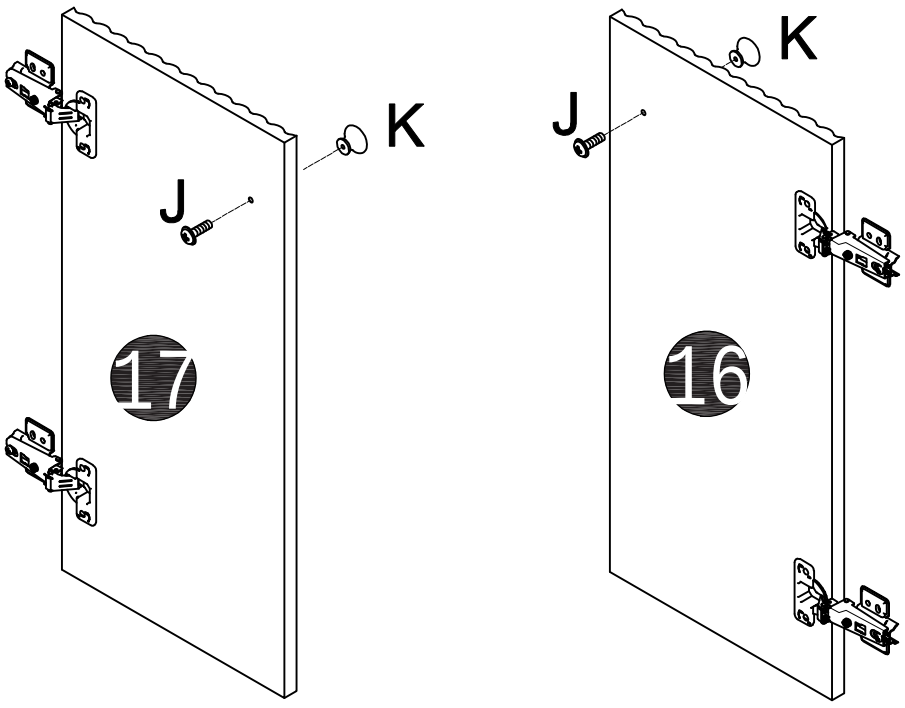


Step 29.

Q



8PCS

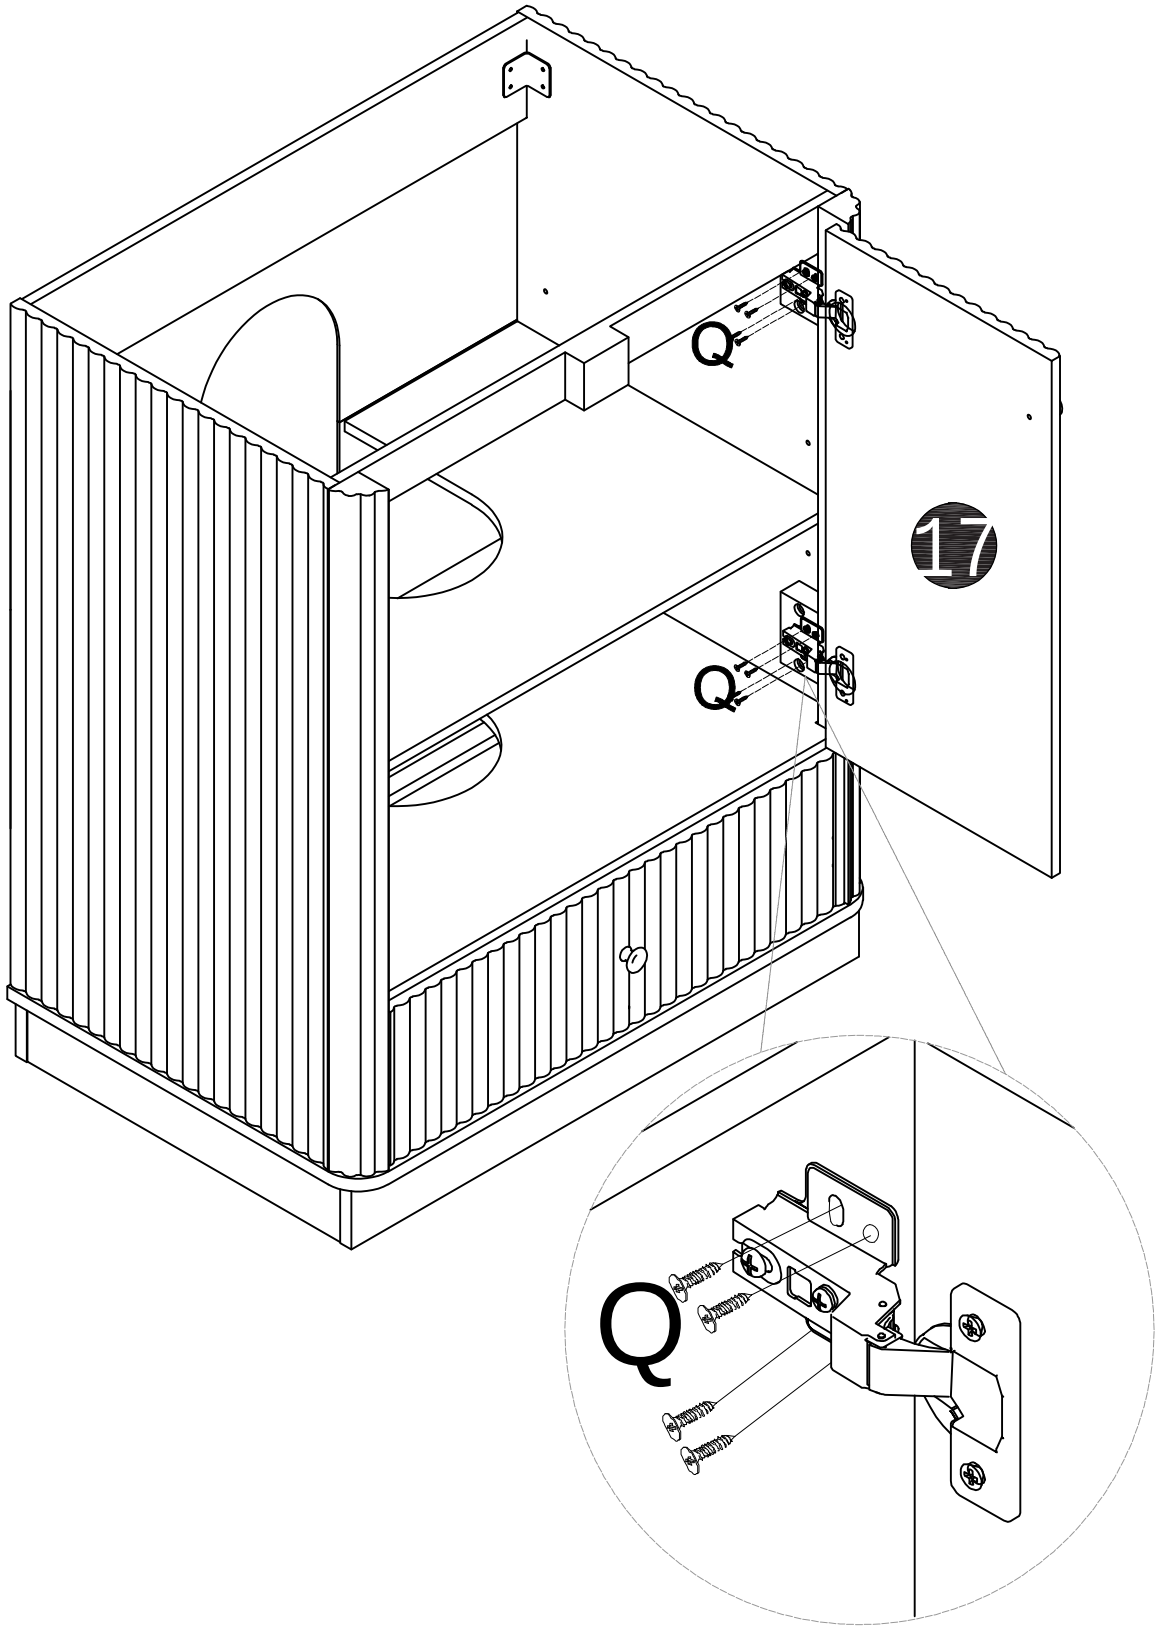

Step 30.



Step 31.

Concealed hinges are three-way adjustable

