
DA0576

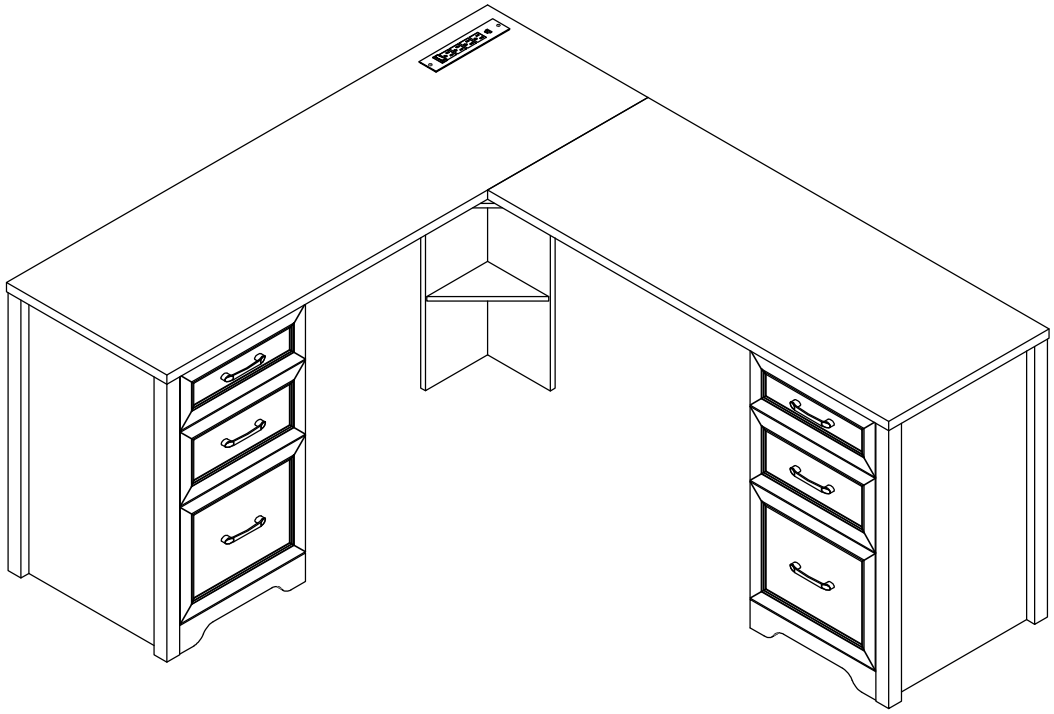


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

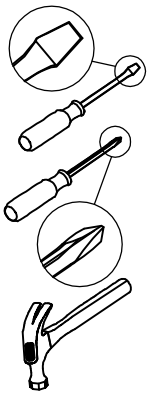

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.

- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.



-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

Board Identification


Not actual size

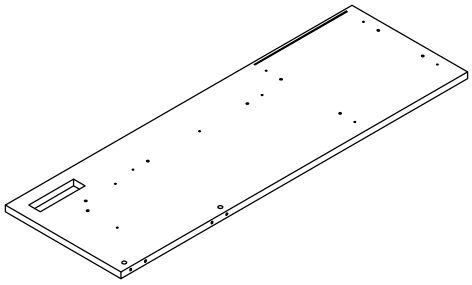


① DESK TOP

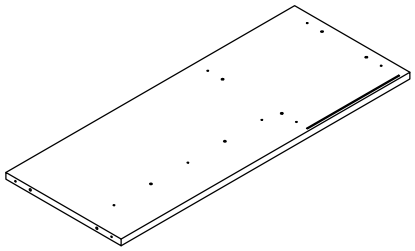


② DESK TOP

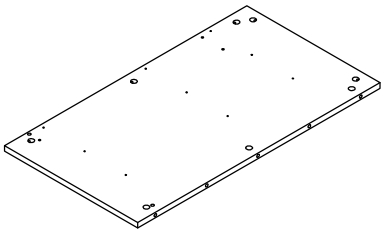


③ LEFT SIDE PANEL

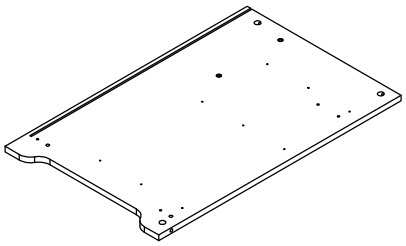


④ PARTITION PANEL

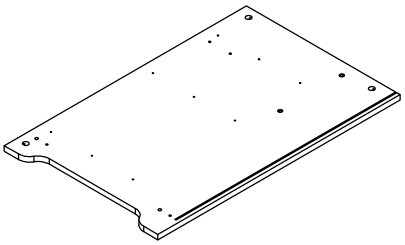


⑤ PARTITION PANEL

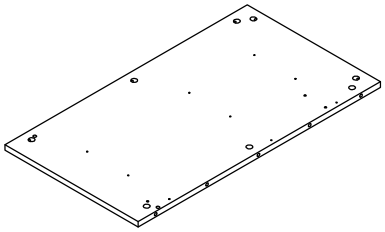


⑥ RIGHT SIDE PANEL

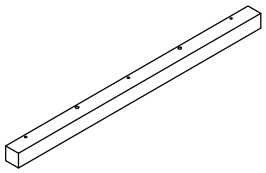

⑦ LEG

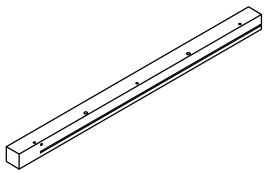


⑧ LEG

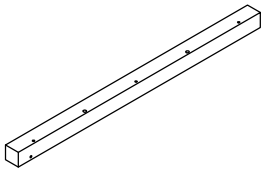


⑨ LEG

Board Identification


Not actual size

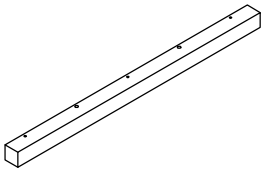


⑩
LEG

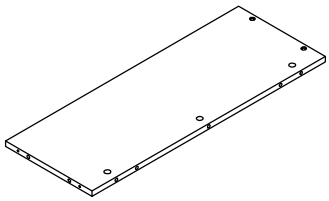


⑪
BACK SLAT

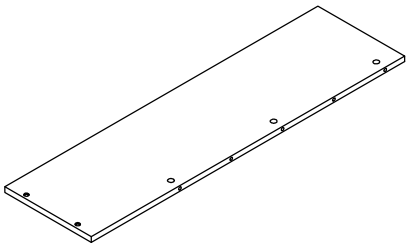


⑫
BACK SLAT

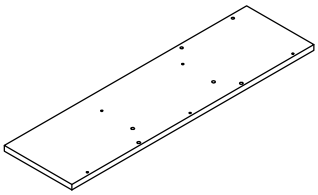


⑬
LEG

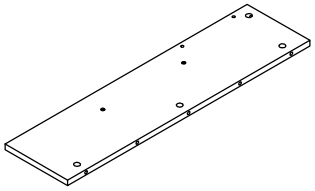


⑭
LEG




⑮
FIXED SHELF
Qty:2



⑯
FRONT SLAT
Qty:2




⑰
FRONT SLAT
Qty:2




⑱
BACK SLAT
Qty:2

Board Identification


Not actual size




⑲
RAIL




⑳
RAIL

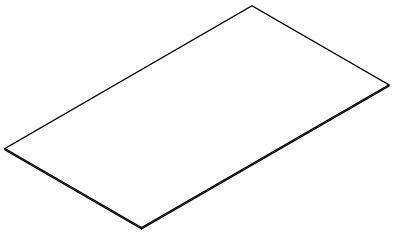


㉑
BACK PANEL
Qty:2

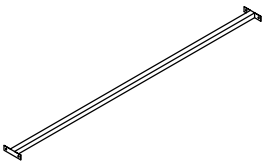


㉒
UPPER RAIL

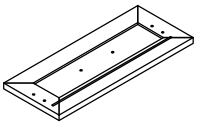


㉓
DRAWER FRONT PANEL

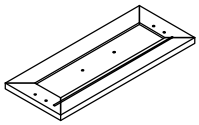


㉔
DRAWER FRONT PANEL

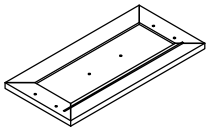

㉕
DRAWER FRONT PANEL

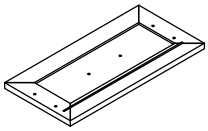


㉖
DRAWER FRONT PANEL

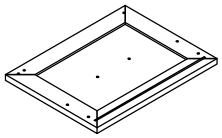

㉗
DRAWER FRONT PANEL


Board Identification

Not actual size

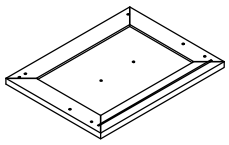


28

DRAWER FRONT PANEL




29

DRAWER LEFT SIDE PANEL
Qty:4




30

DRAWER RIGHT SIDE PANEL
Qty:4




31

DRAWER LEFT SIDE PANEL
Qty:2




32

DRAWER RIGHT SIDE PANEL
Qty:2




33

DRAWER BACK PANEL
Qty:4

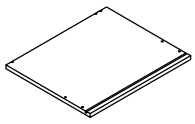

34

DRAWER BACK PANEL
Qty:2




35


DRAWER BOTTOM PANEL
Qty:6

Board Identification

Not actual size

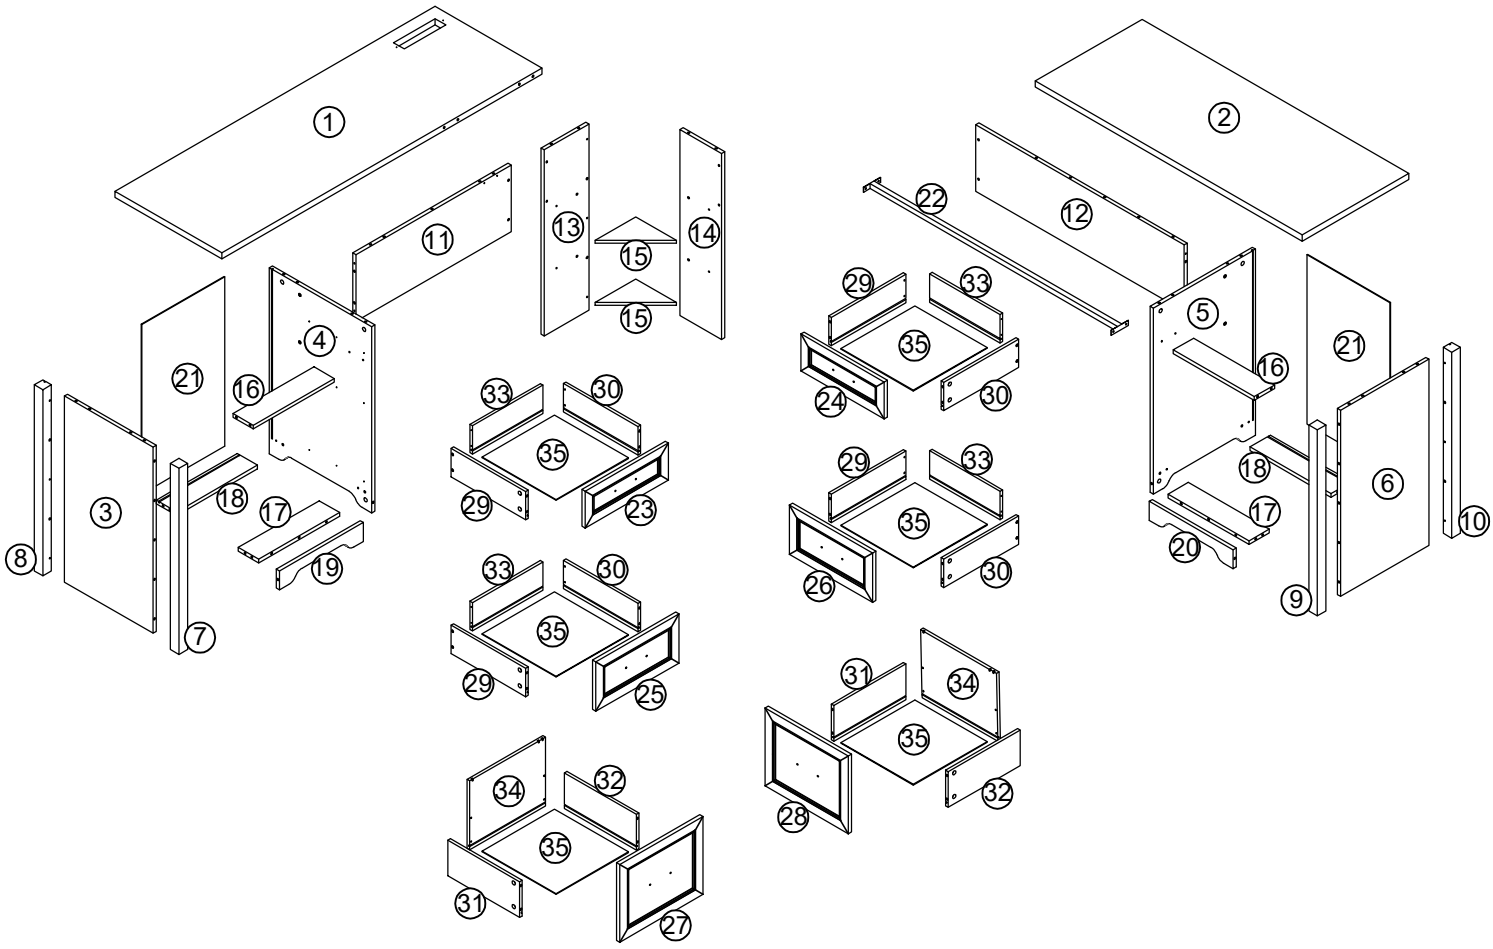


Part List

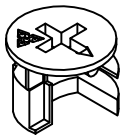

Ø15X9mm

A	X79

CAM LOCK
spare: 3



ϕ6.5X35mm

B	X79


CAM BOLT
spare: 3



ϕ6X30mm

C	X46


WOOD DOWEL
spare: 3



ϕ4X35mm

D	X28


SCREW
spare: 2



Ø3.5X14mm

E	X72


SCREW
spare: 5



ϕ4X45mm

F	X4


SCREW
spare: 1



M6X30mm

G	X4


SCREW
spare: 1



Ø4X14mm

H	X4

SCREW
spare: 1

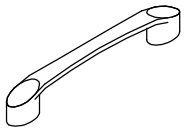

I	X6


HANDLE



Ø4X6mm


J	X12

SCREW
spare: 1

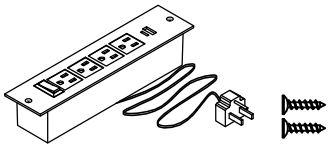

K	X1


PLUG BOARD

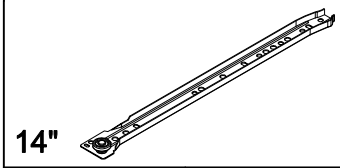

14"

L-CL	X6


LEFT CABINET MEMBER

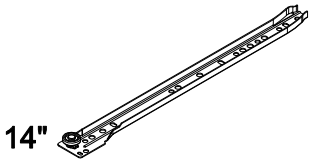

14"

L-CR	X6


RIGHT CABINET MEMBER

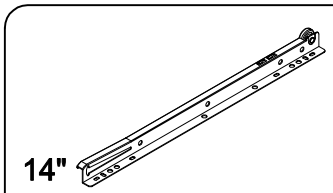

14"

L-DL	X6


LEFT DRAWER RUNNER

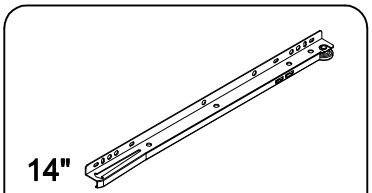

14"


L-DR	X6

RIGHT DRAWER RUNNER

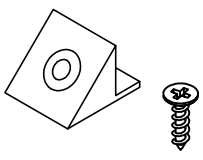

M	X12


Part List



Ø5x346

N	X2set

SCREW



38x38

O	X4

PERFECT
spare: 1




Ø20mm

P	X24


SCAM LOCK COVER
spare: 1


Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

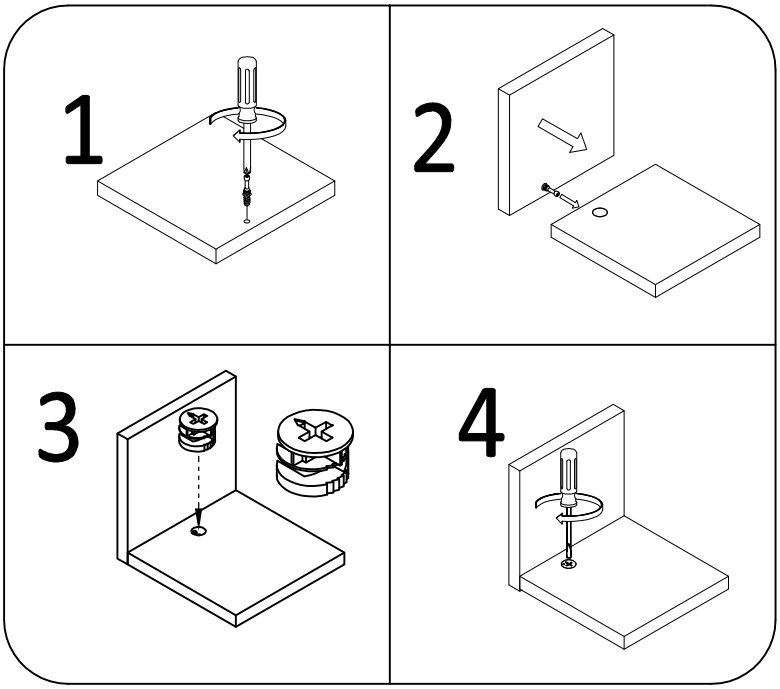


STEP1

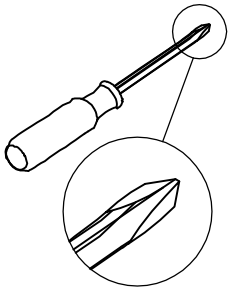

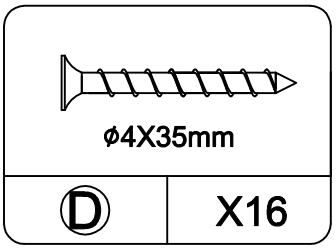


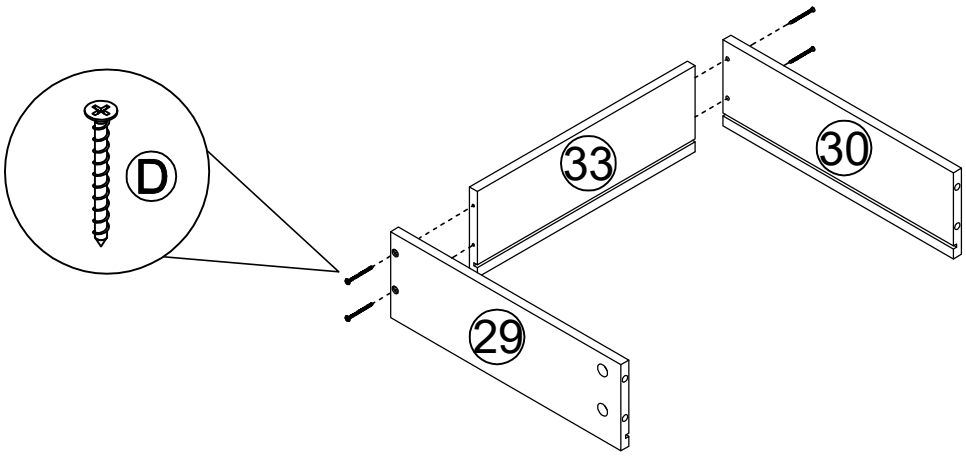


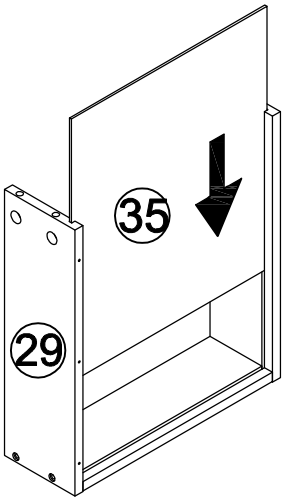



X4


STEP2

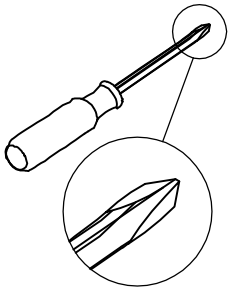


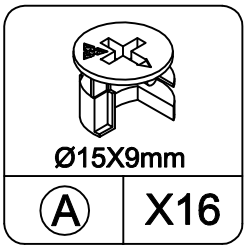


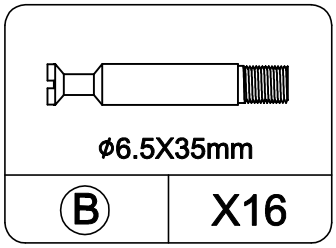


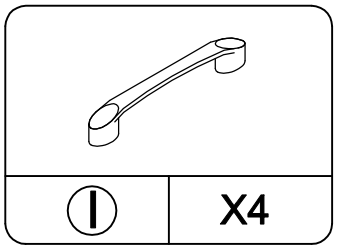

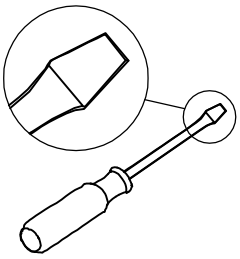


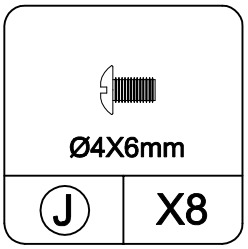


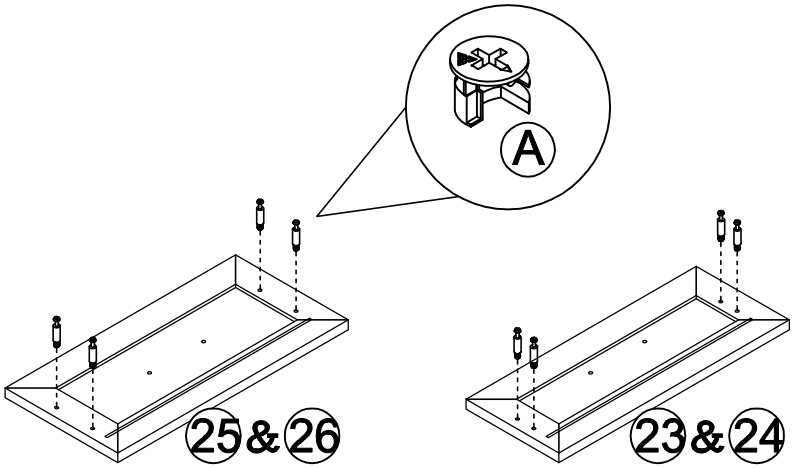


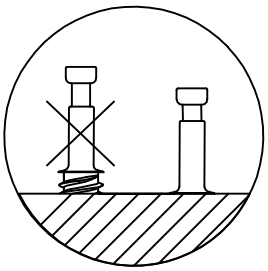



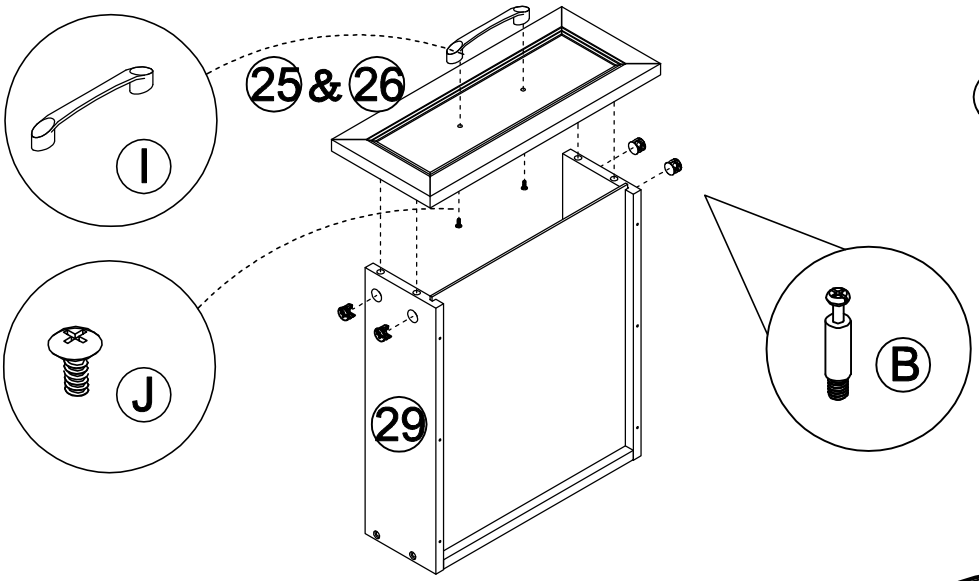


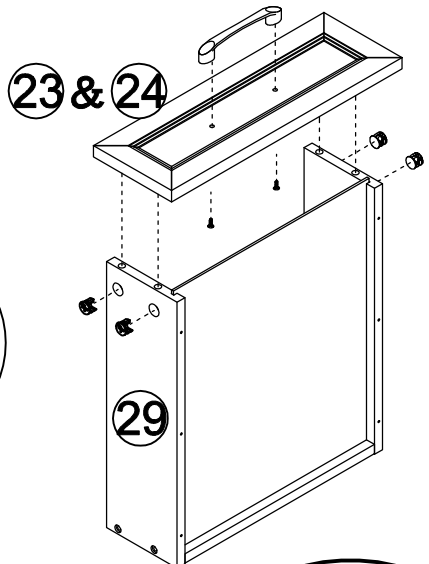


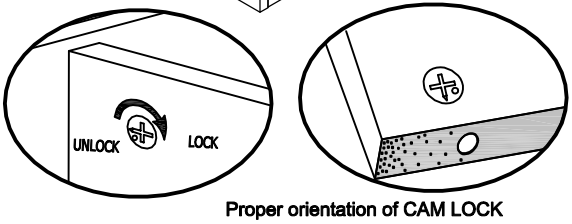



Proper orientation of CAM LOCK

STEP3

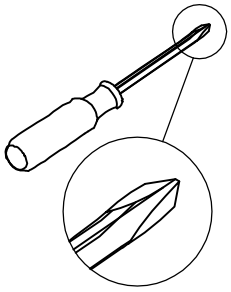

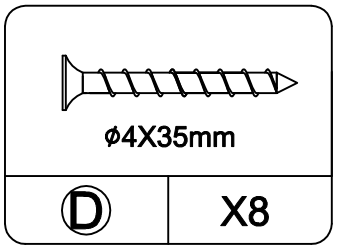


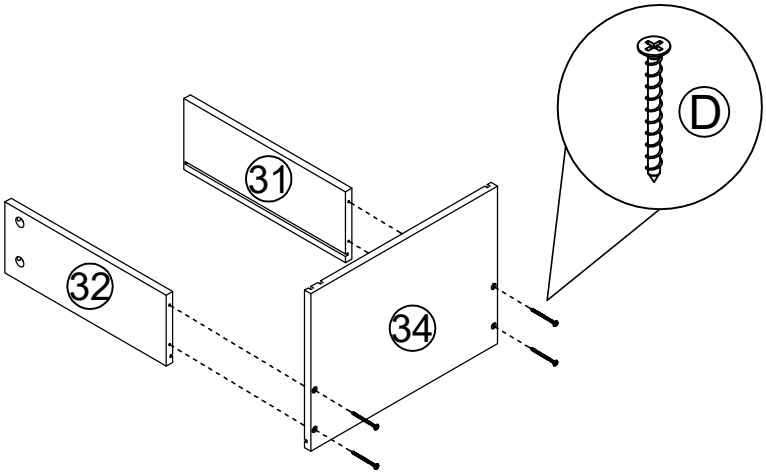


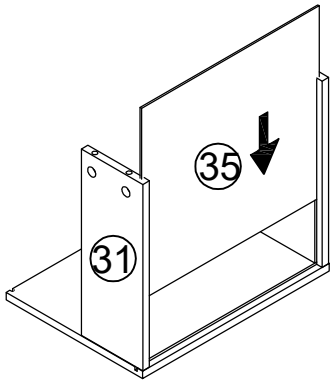



X2


STEP4

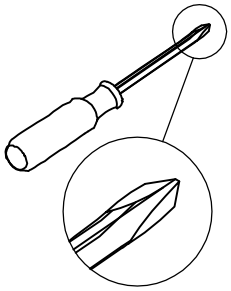


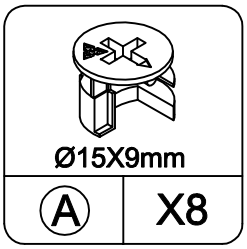


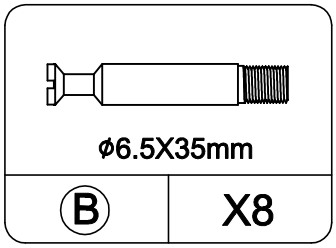


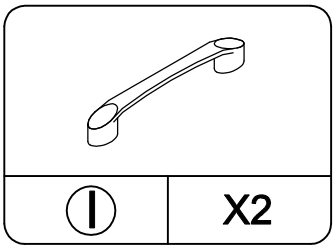


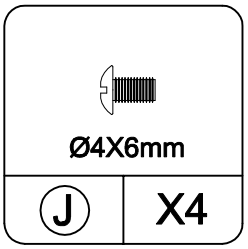


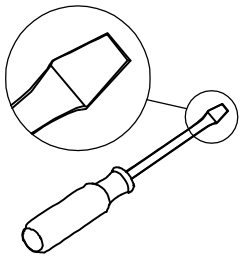

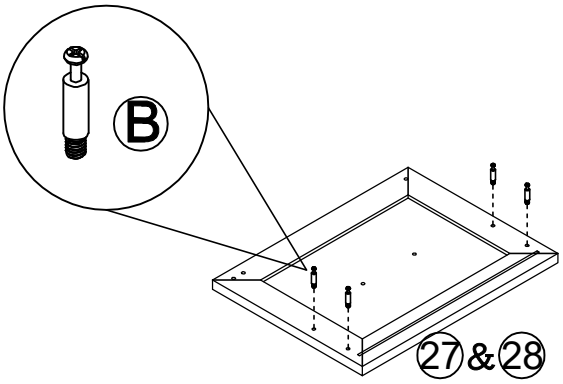

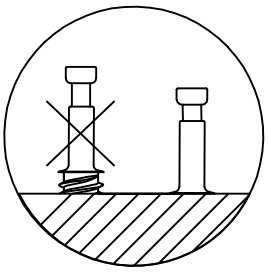


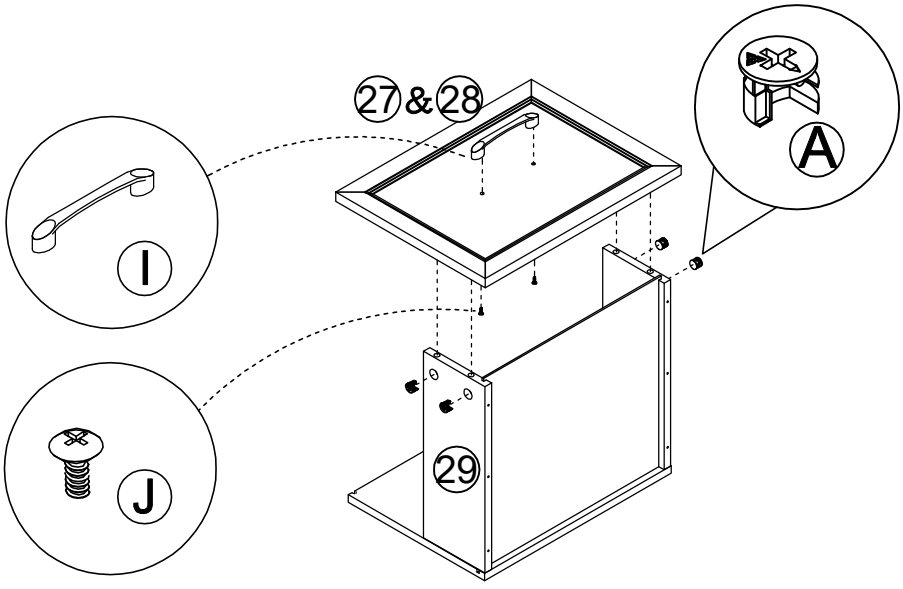

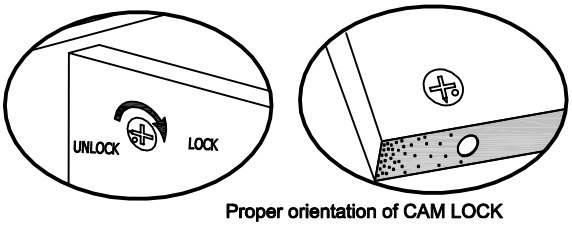


Proper orientation of CAM LOCK


STEP5

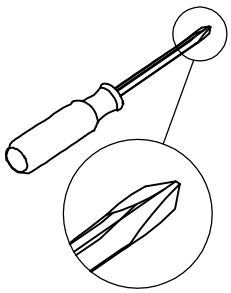


Ø3.5X14mm	
E	X36

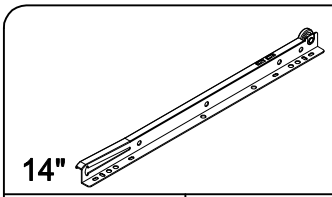


14"	
L-DL	X6

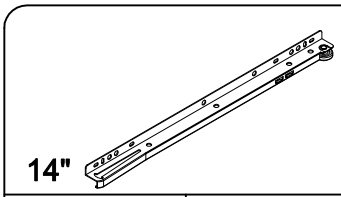



14"	
L-DR	X6

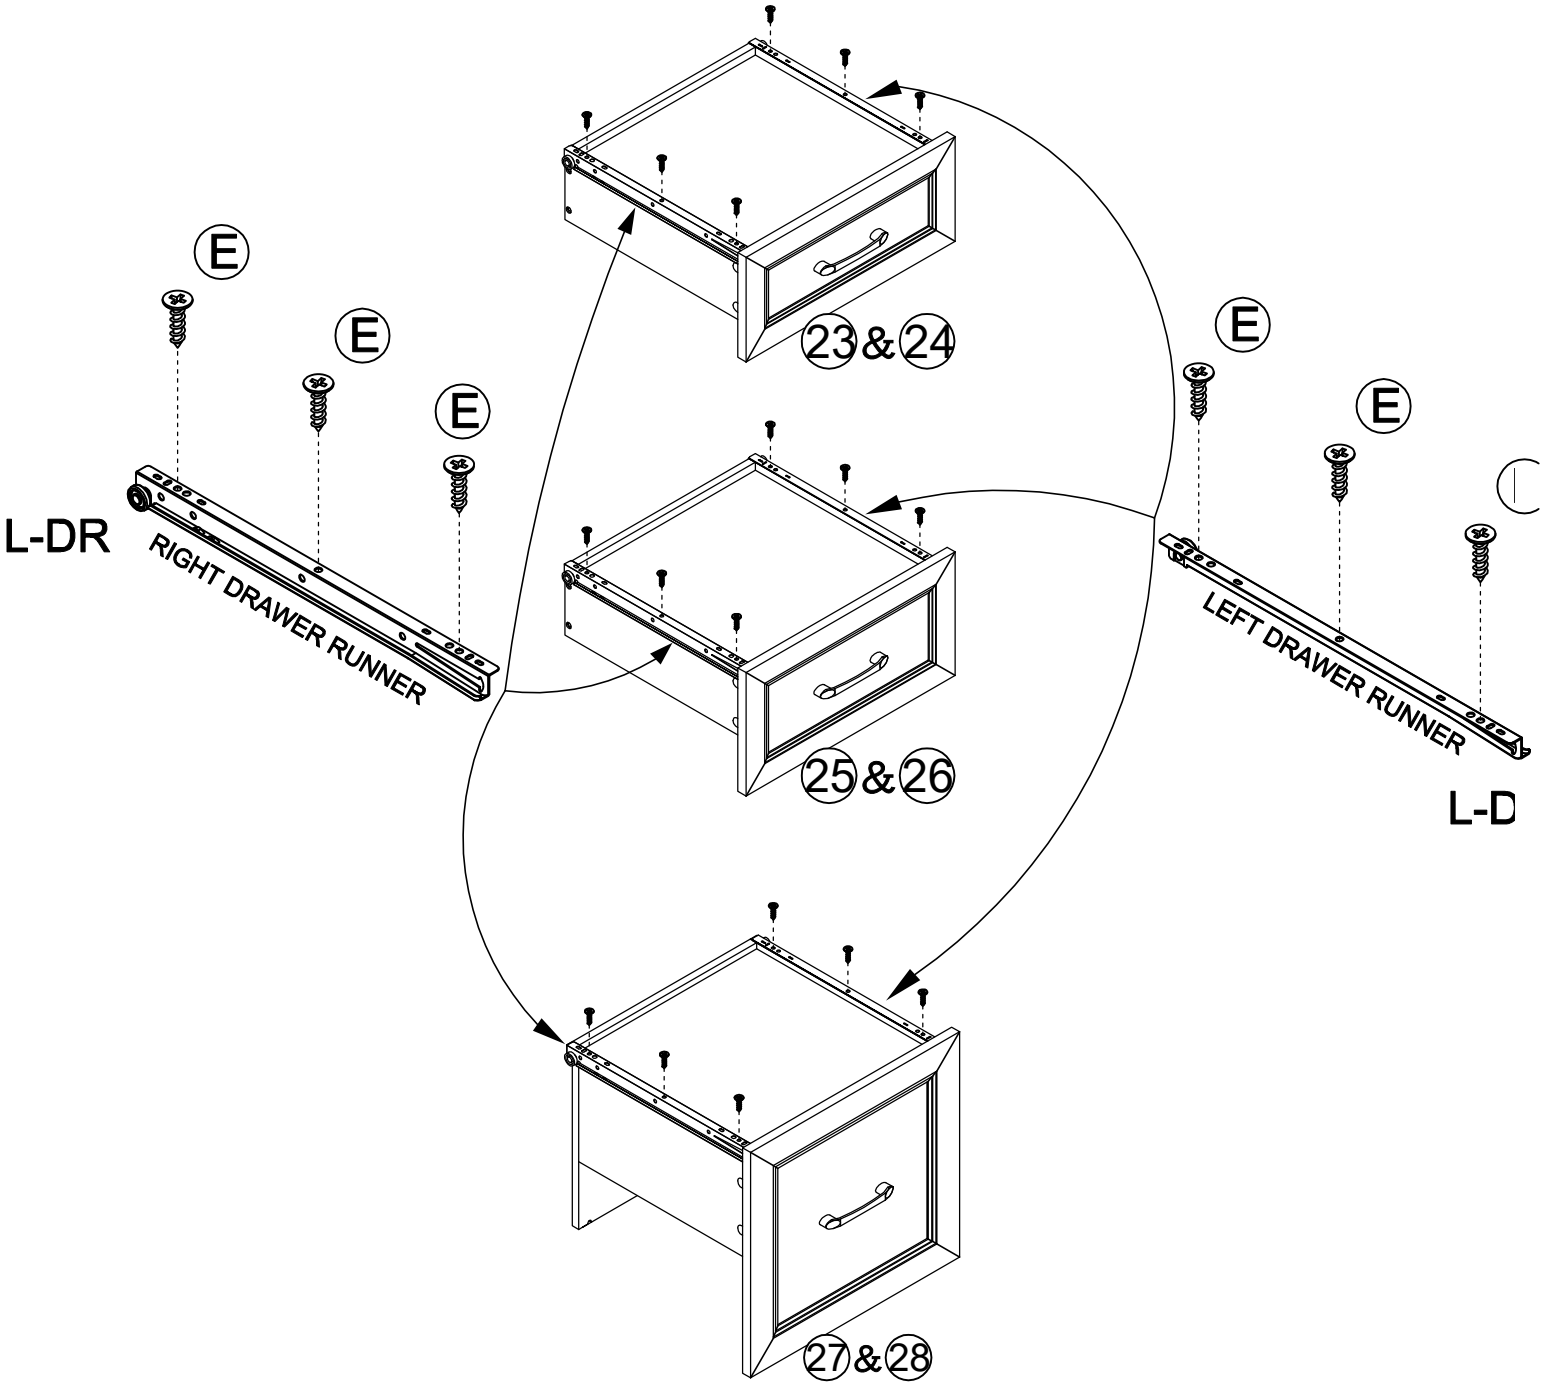



STEP6

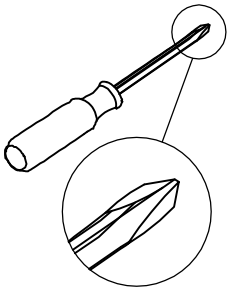

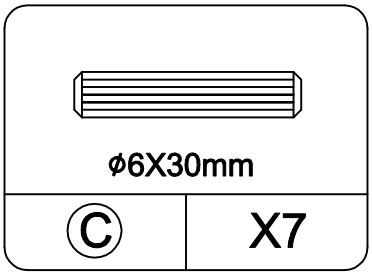


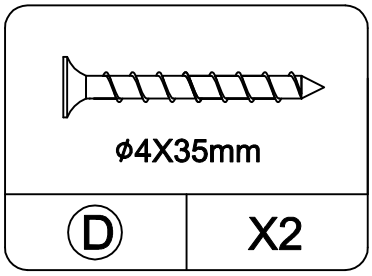


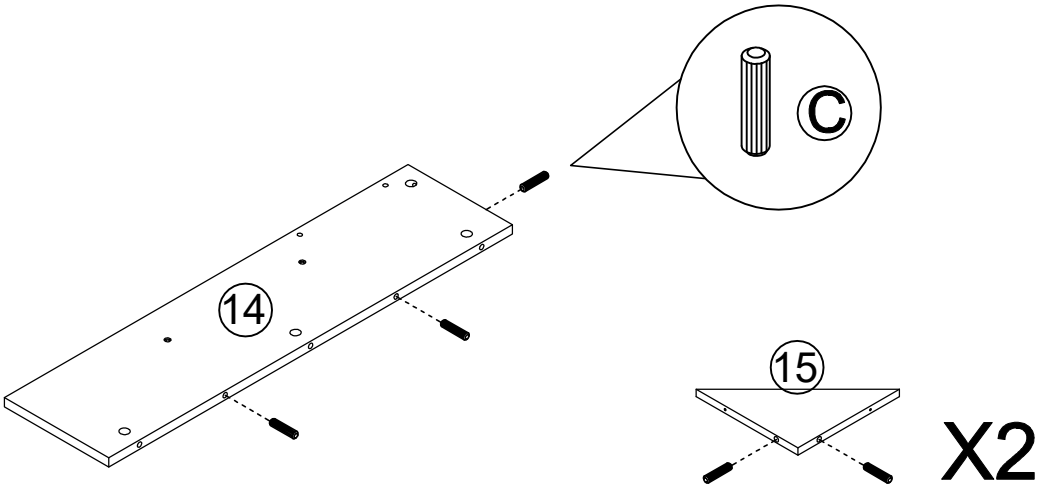


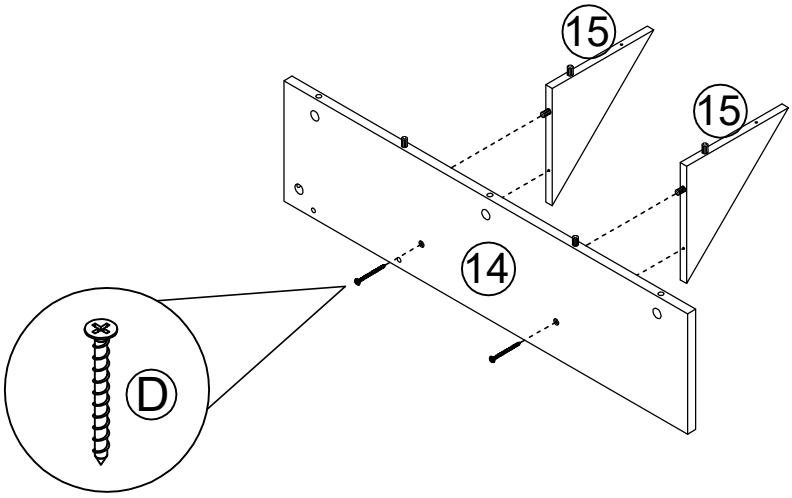



STEP7

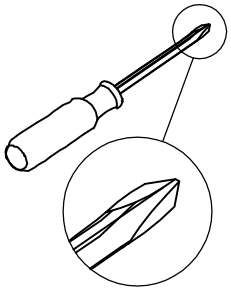


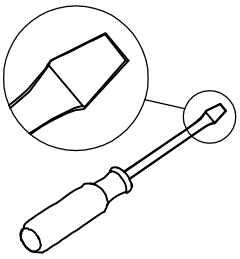


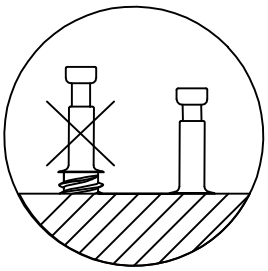


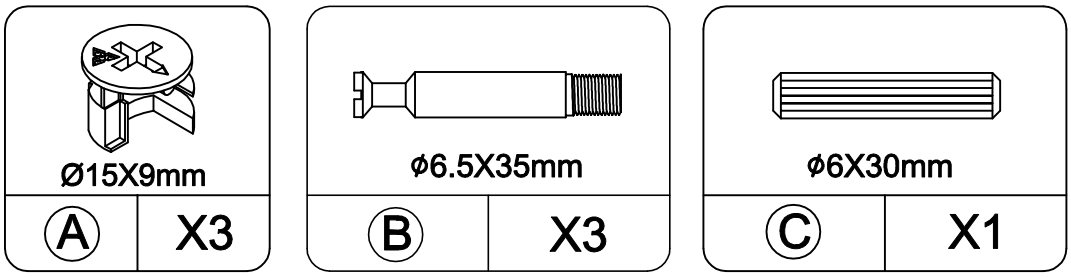

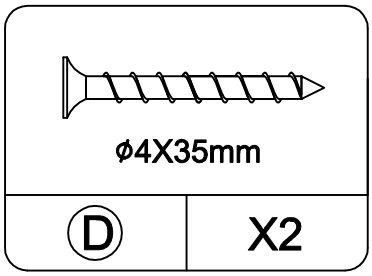

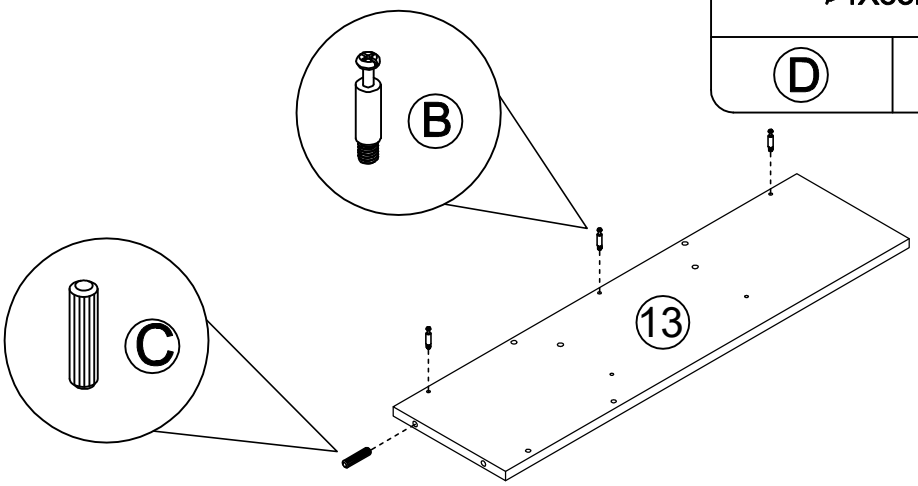


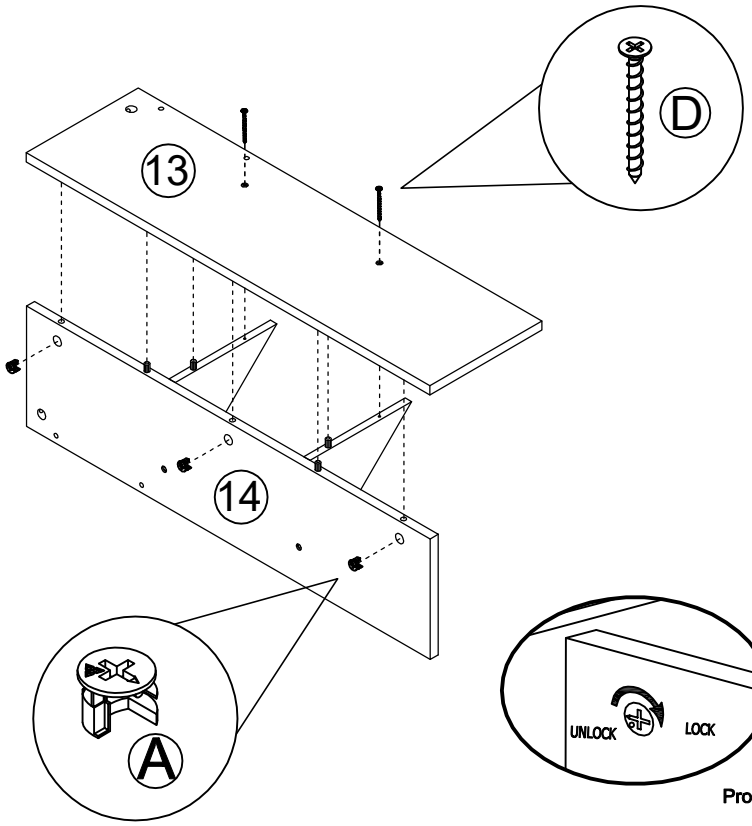


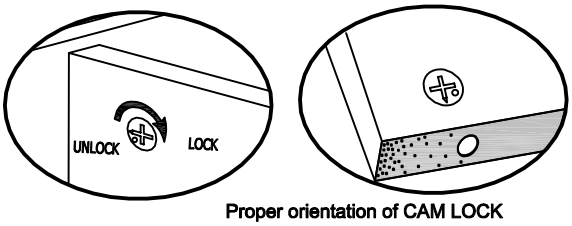



Proper orientation of CAM LOCK


STEP8

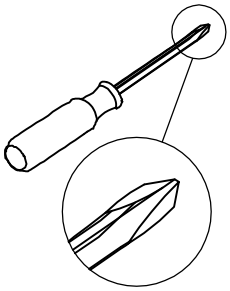


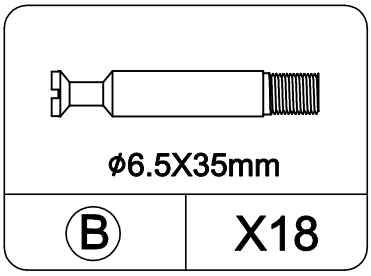


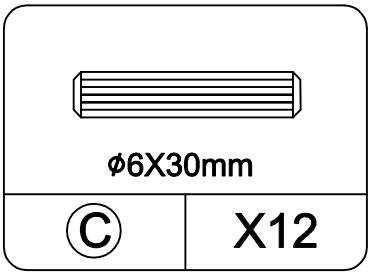


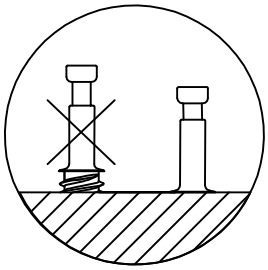


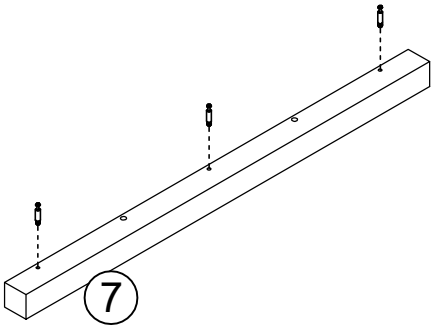


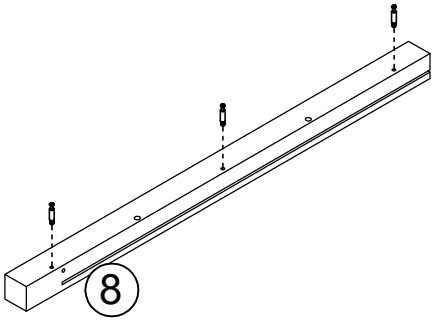

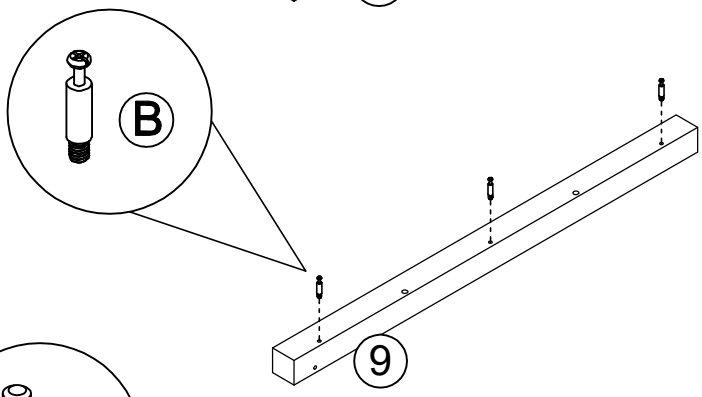


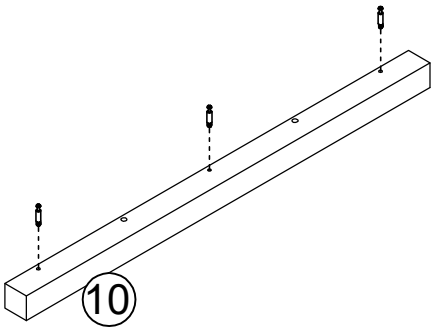


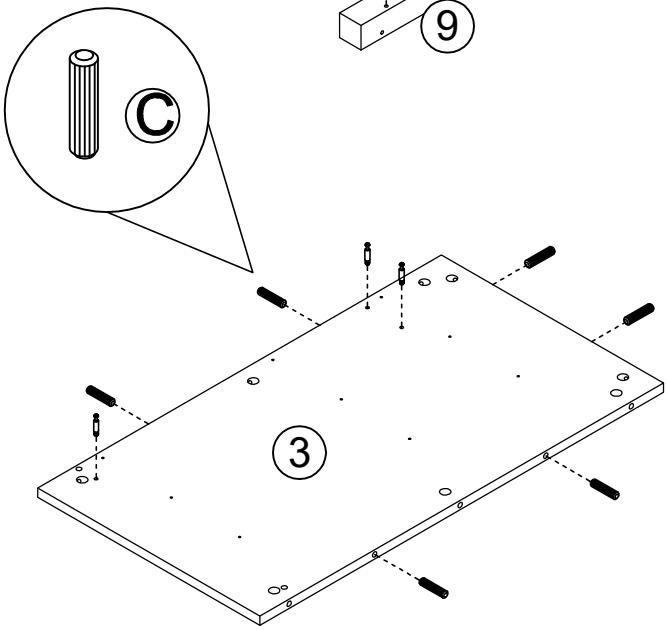


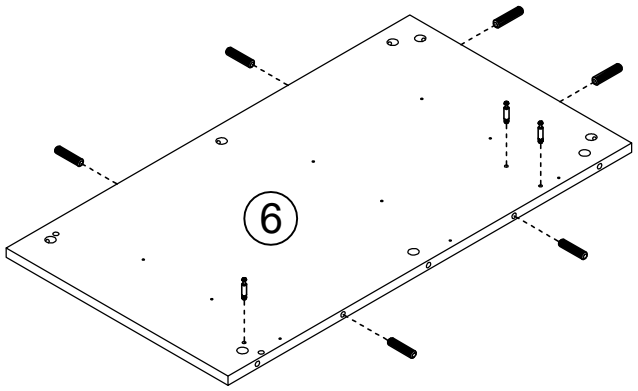

STEP9

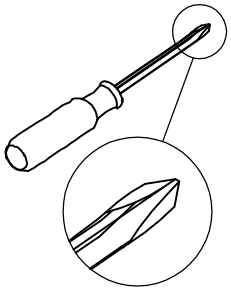

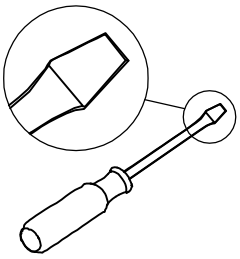


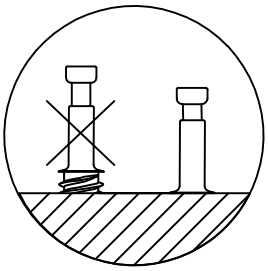

Ø15X9mm	
A	X12


ϕ6.5X35mm	
B	X4

38x38	
O	X4

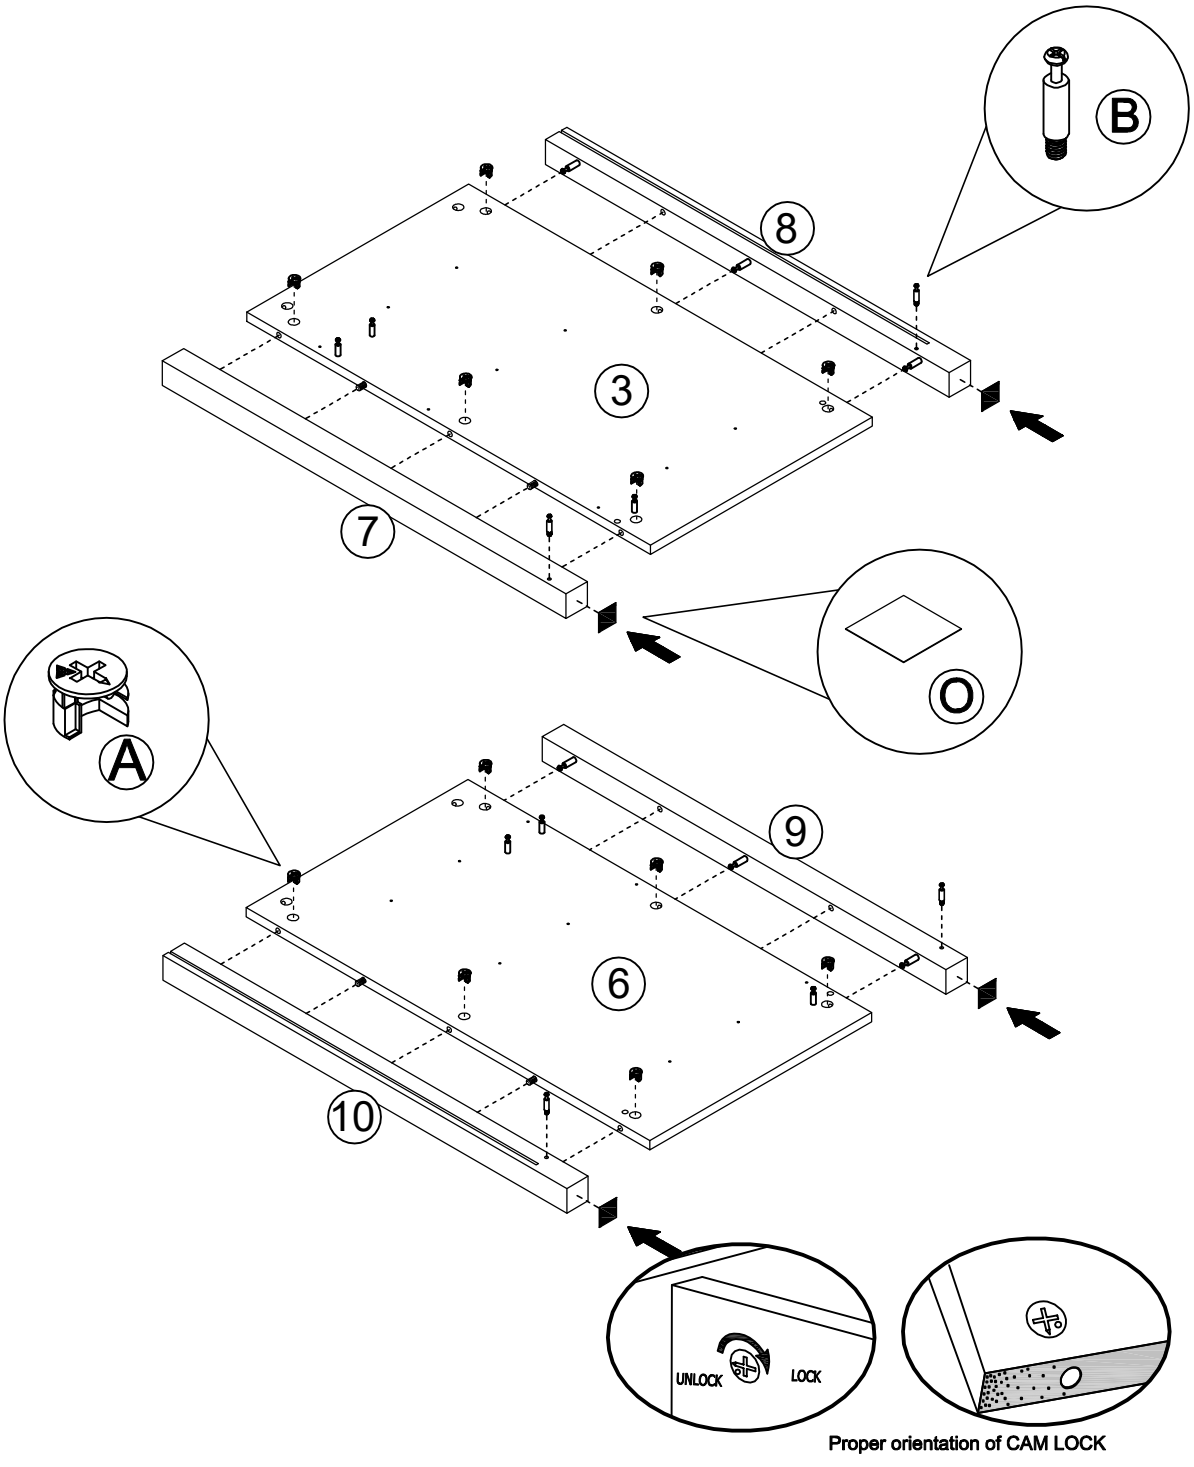

Proper orientation of CAM LOCK


STEP10

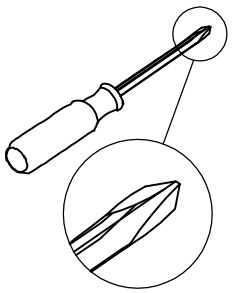

Ø3.5X14mm	
E	X18


14"	
L-CL	X3


14"	
L-CR	X3

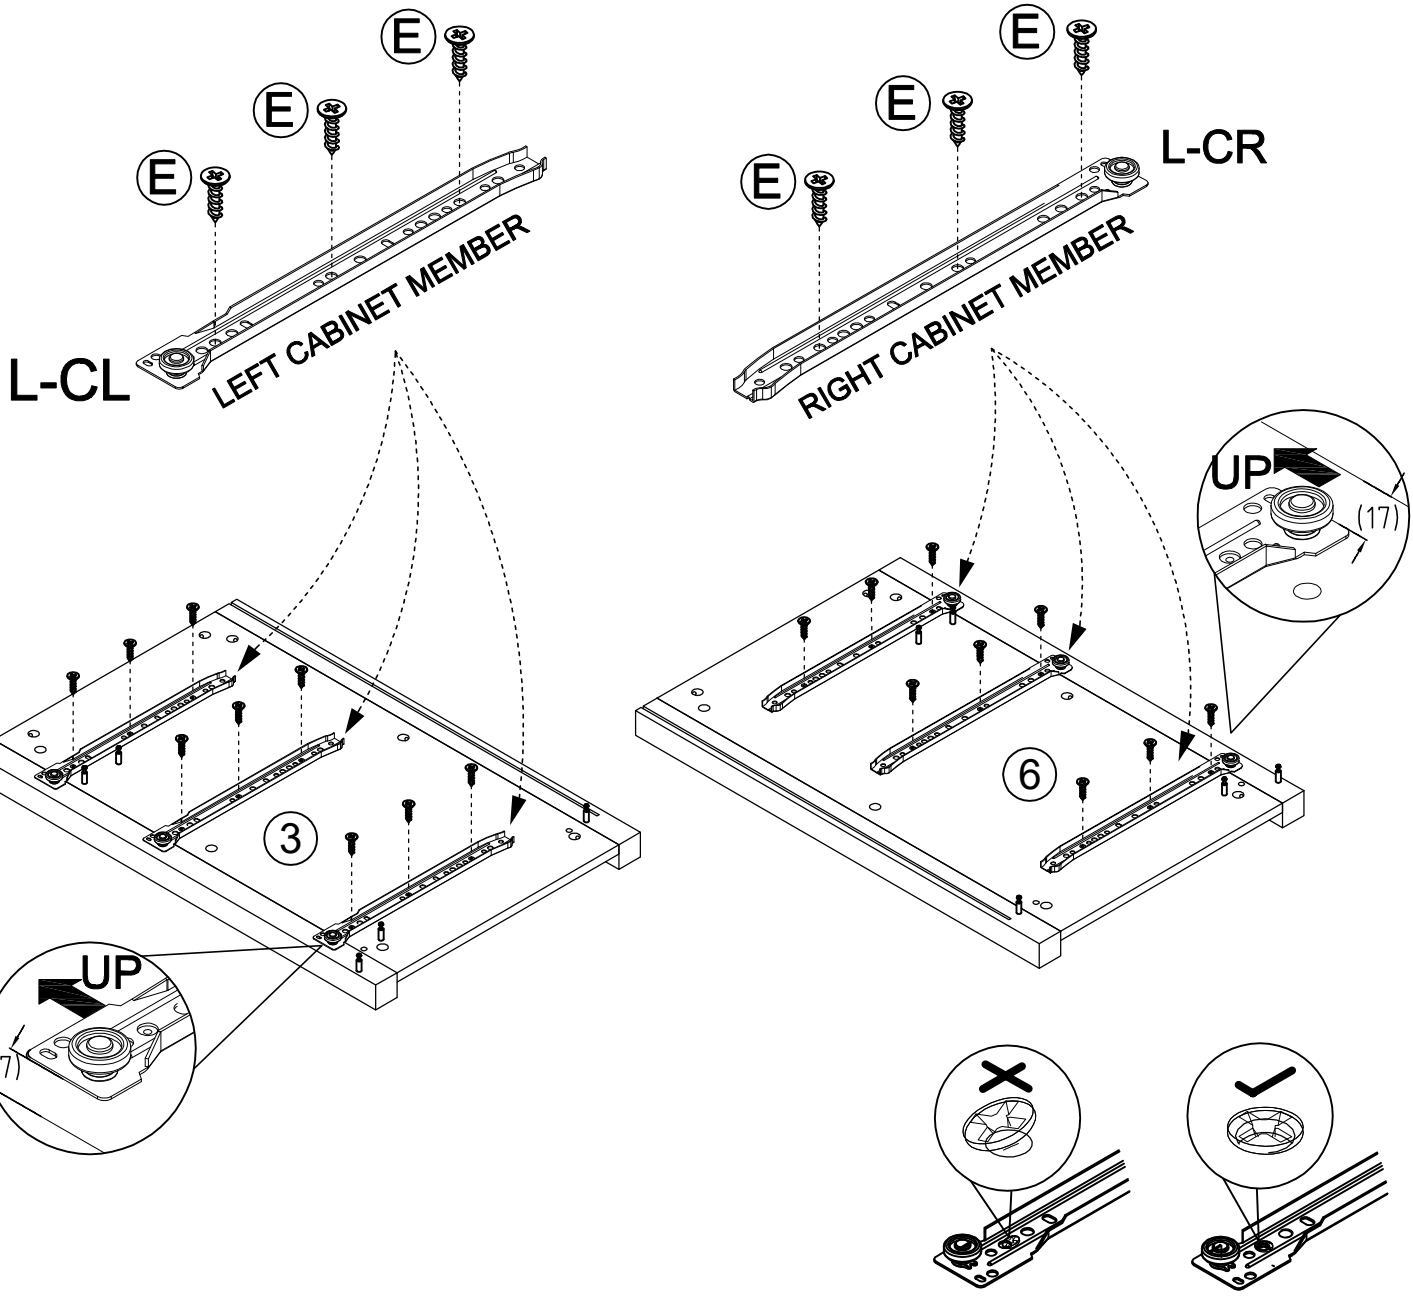



Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.


STEP11

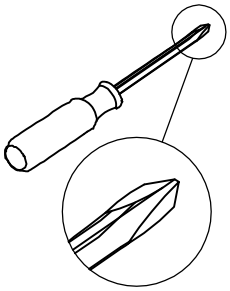


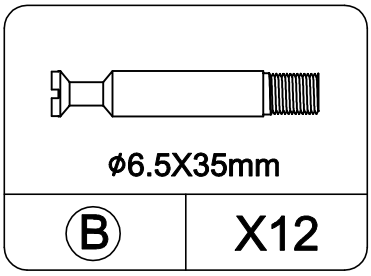


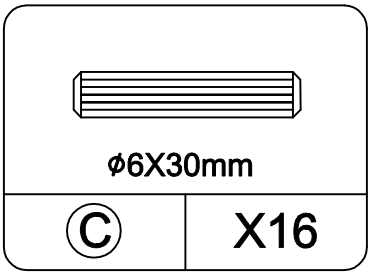


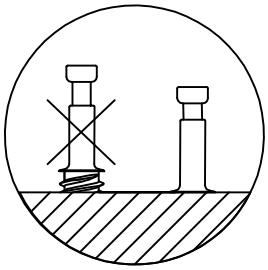


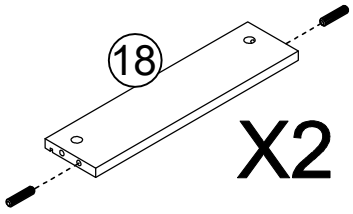

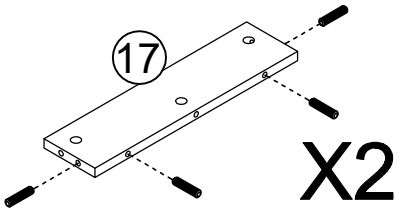


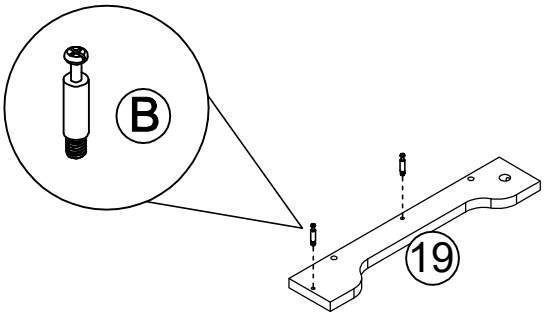

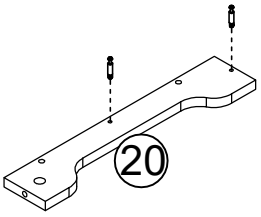


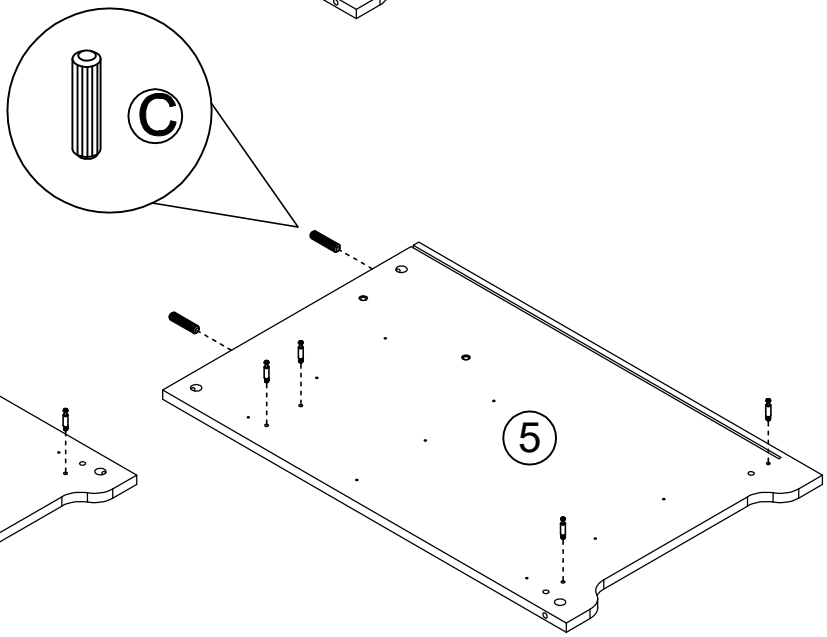


STEP12

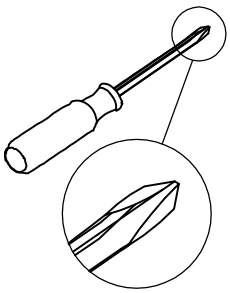


Ø3.5X14mm	
E	X18

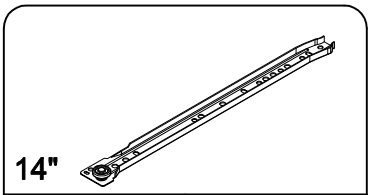



14"	
L-CL	X3

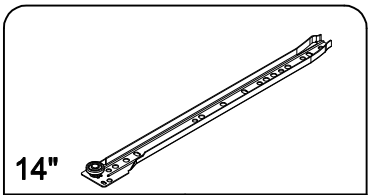

14"	
L-CR	X3

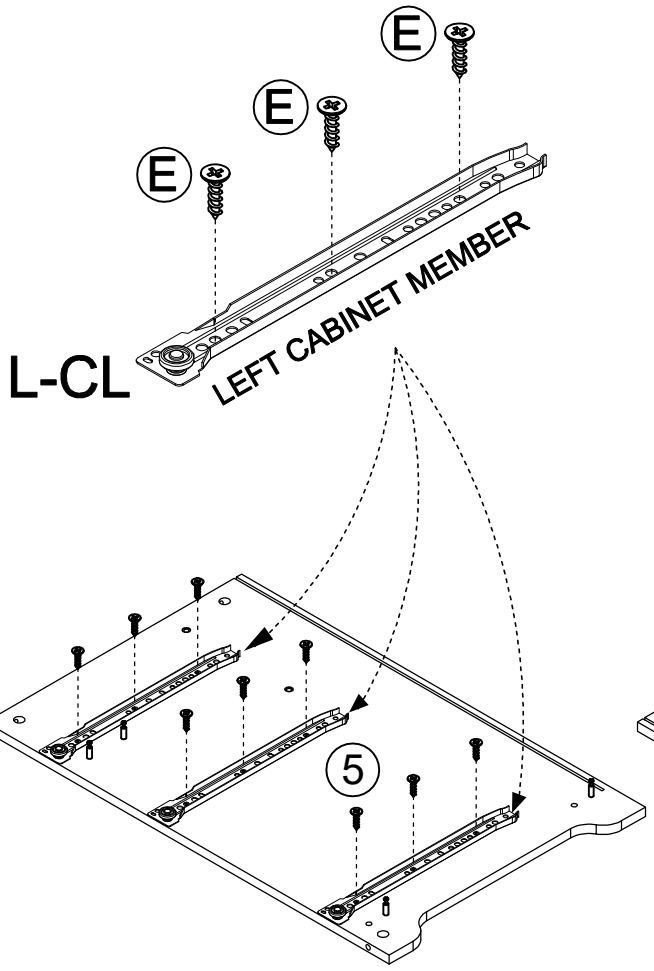


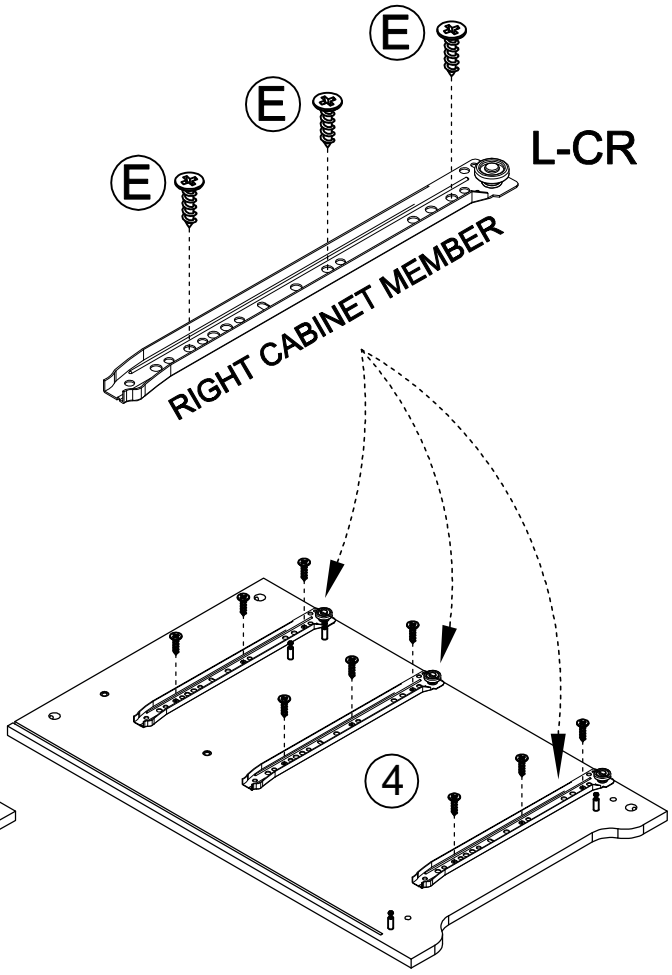


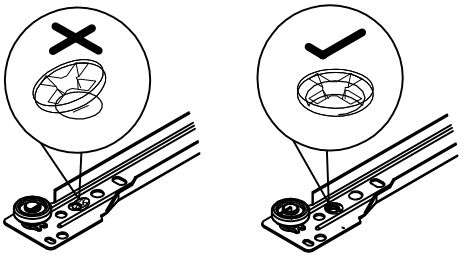



Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.


STEP13

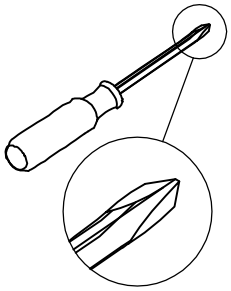


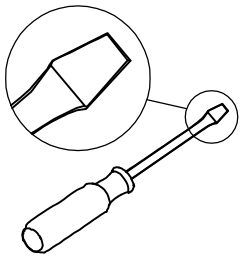

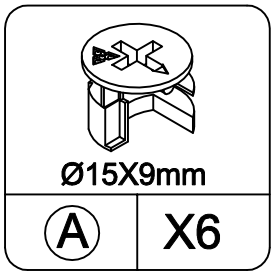

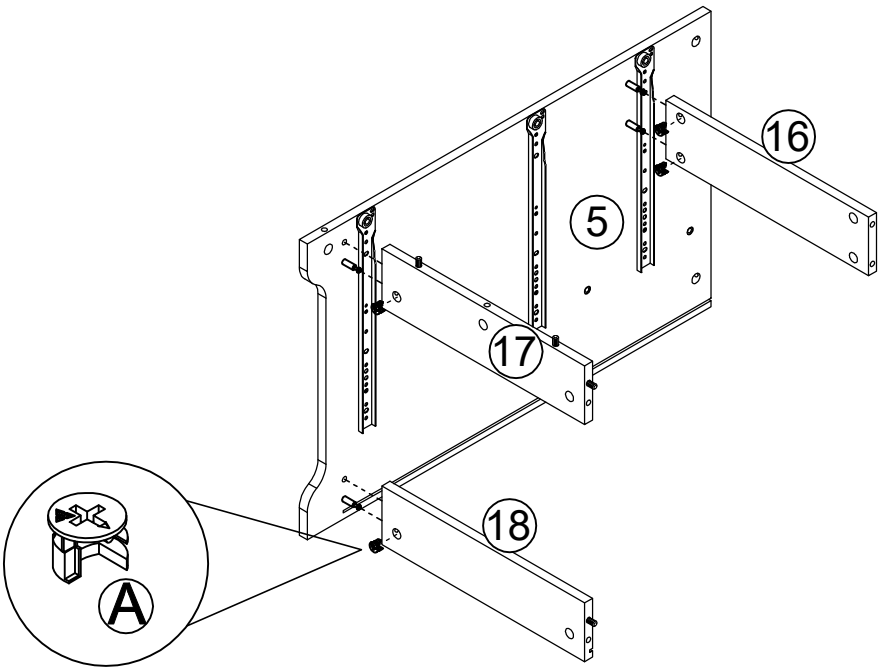


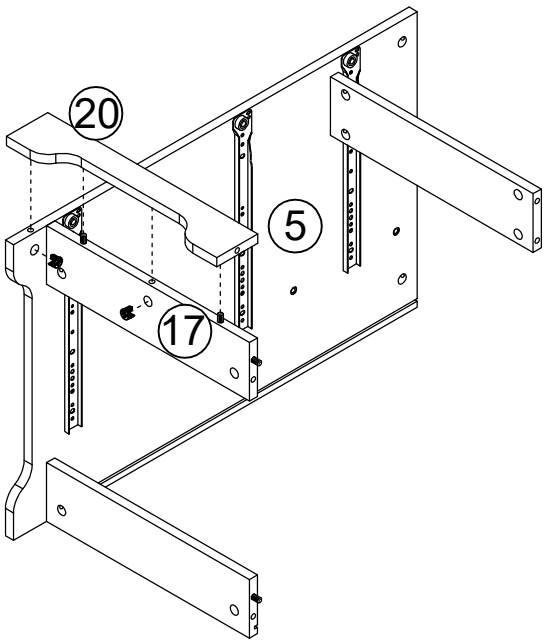


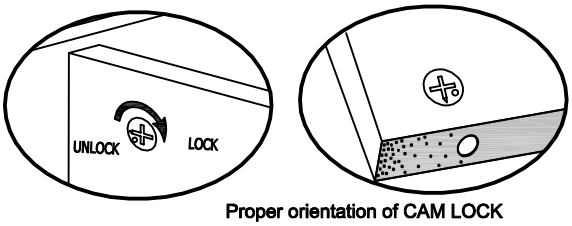



Proper orientation of CAM LOCK


STEP14

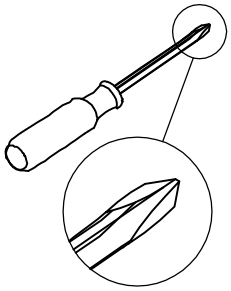

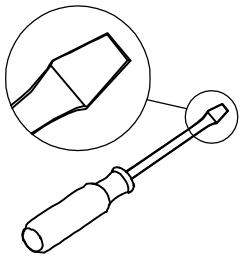

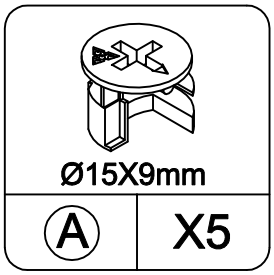


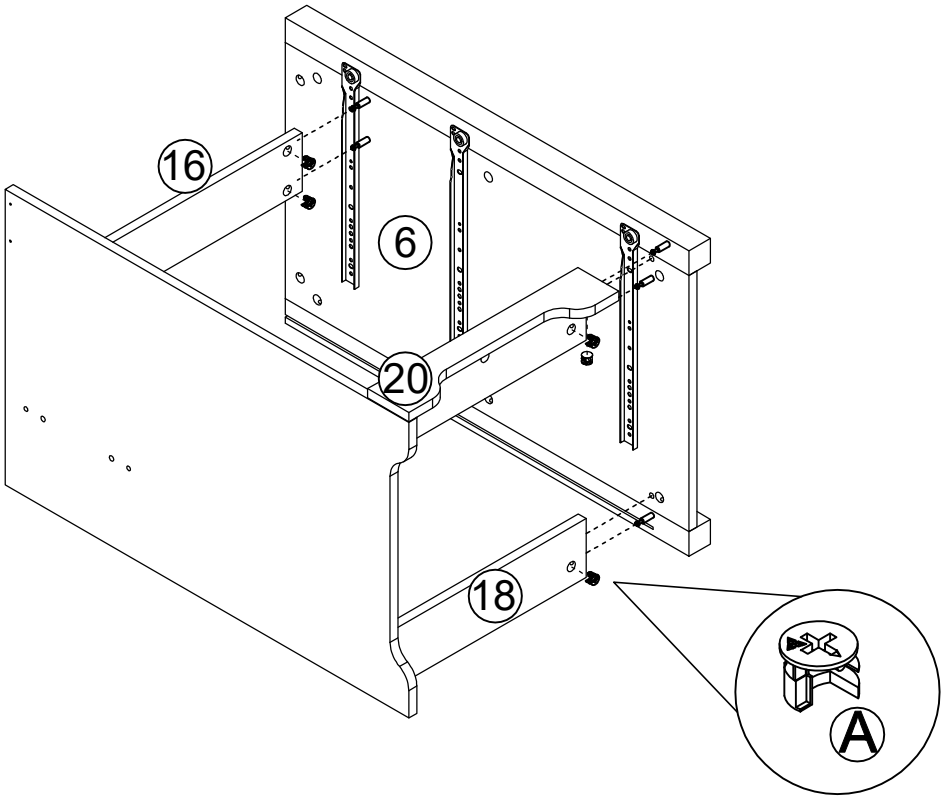


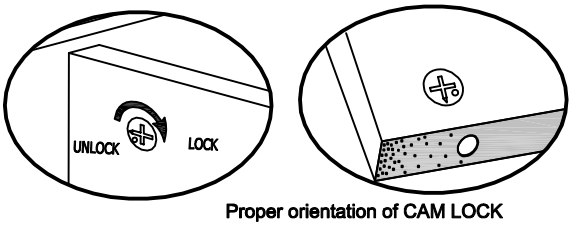



Proper orientation of CAM LOCK


STEP15

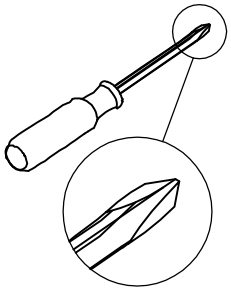


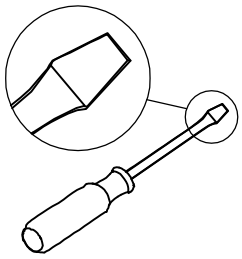

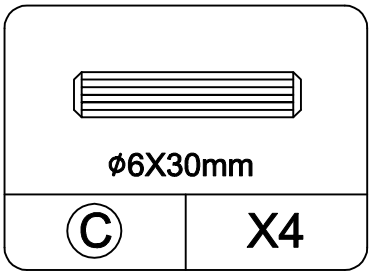


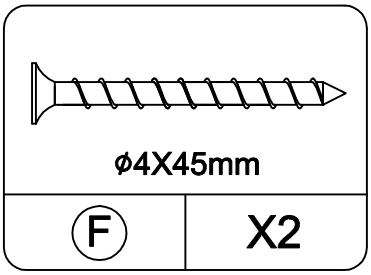

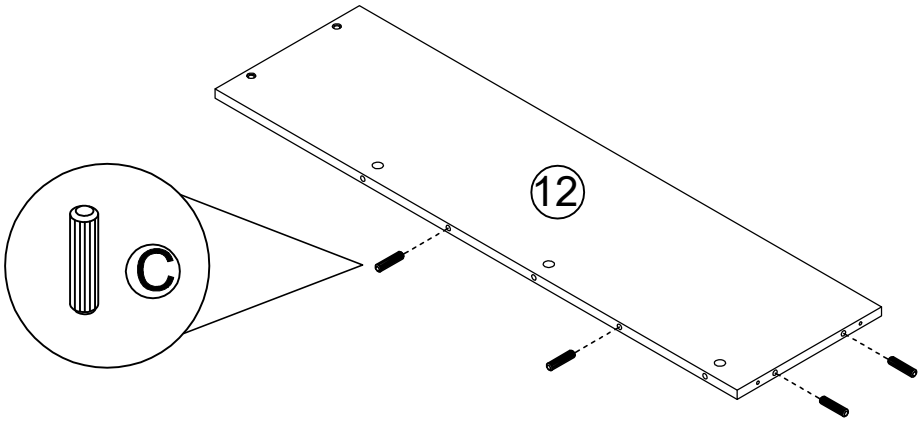


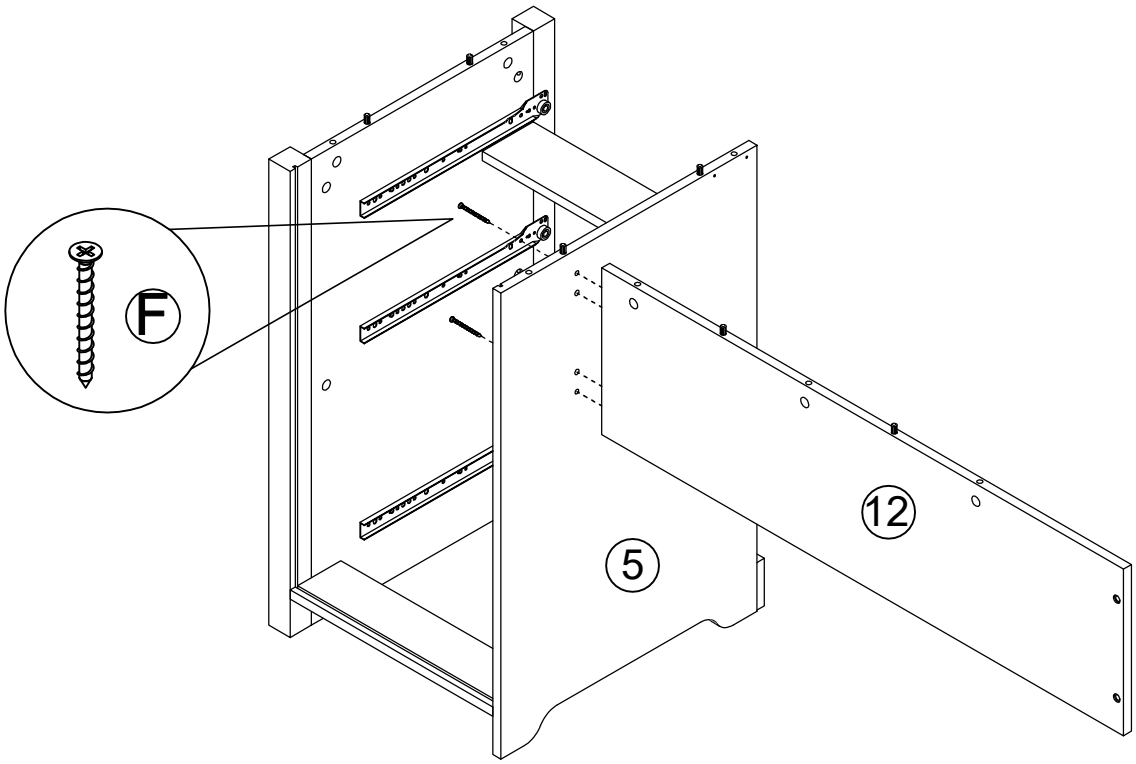



STEP16

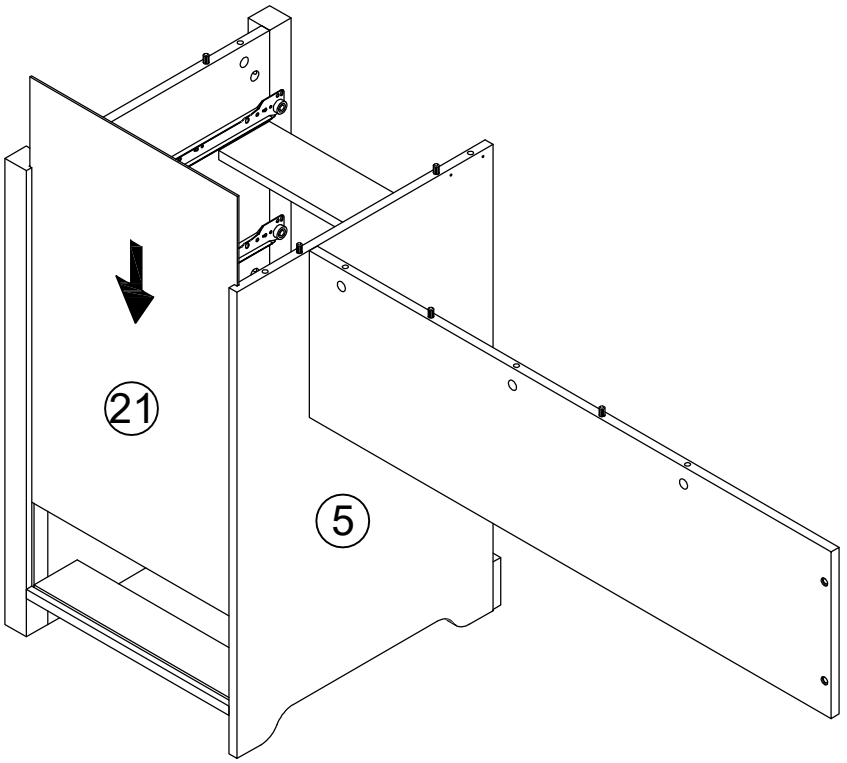



STEP17

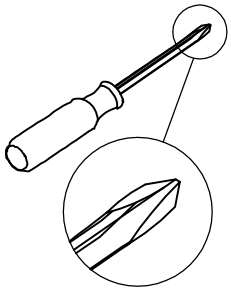


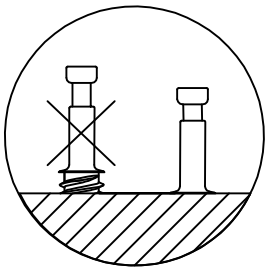

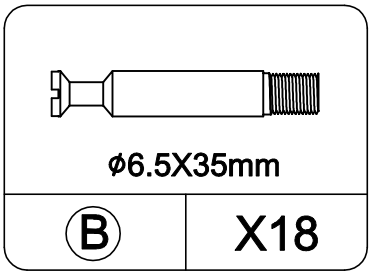


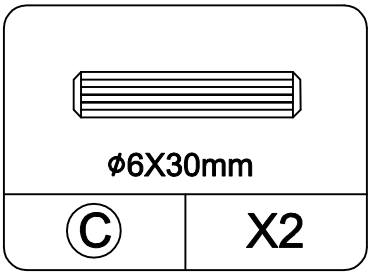


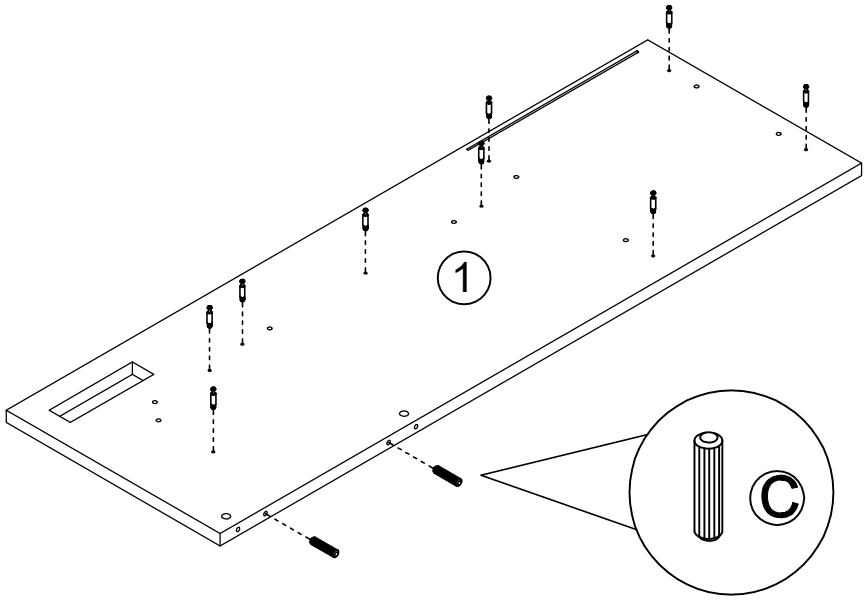


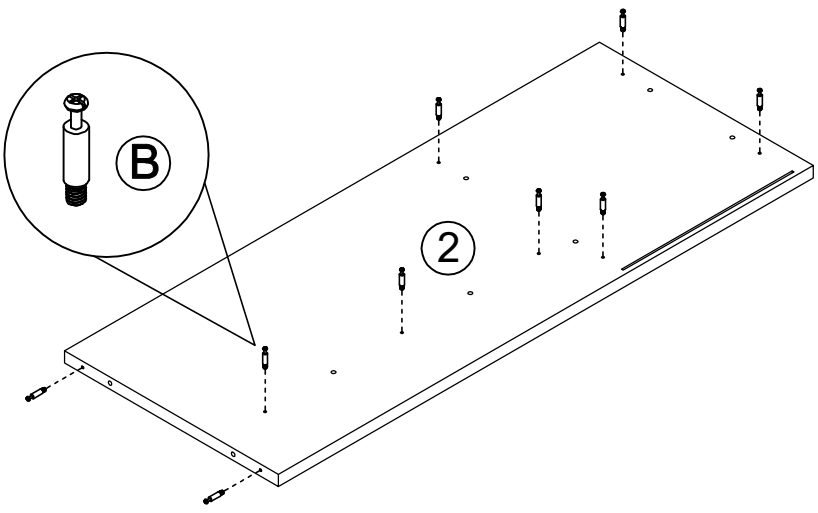



STEP18

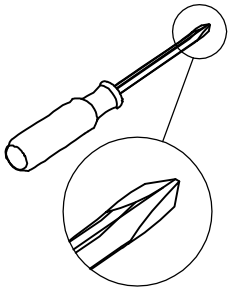

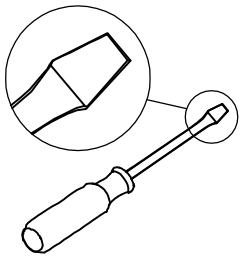

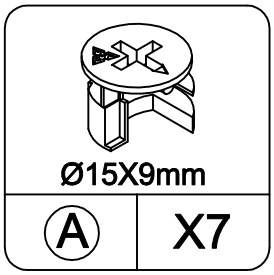


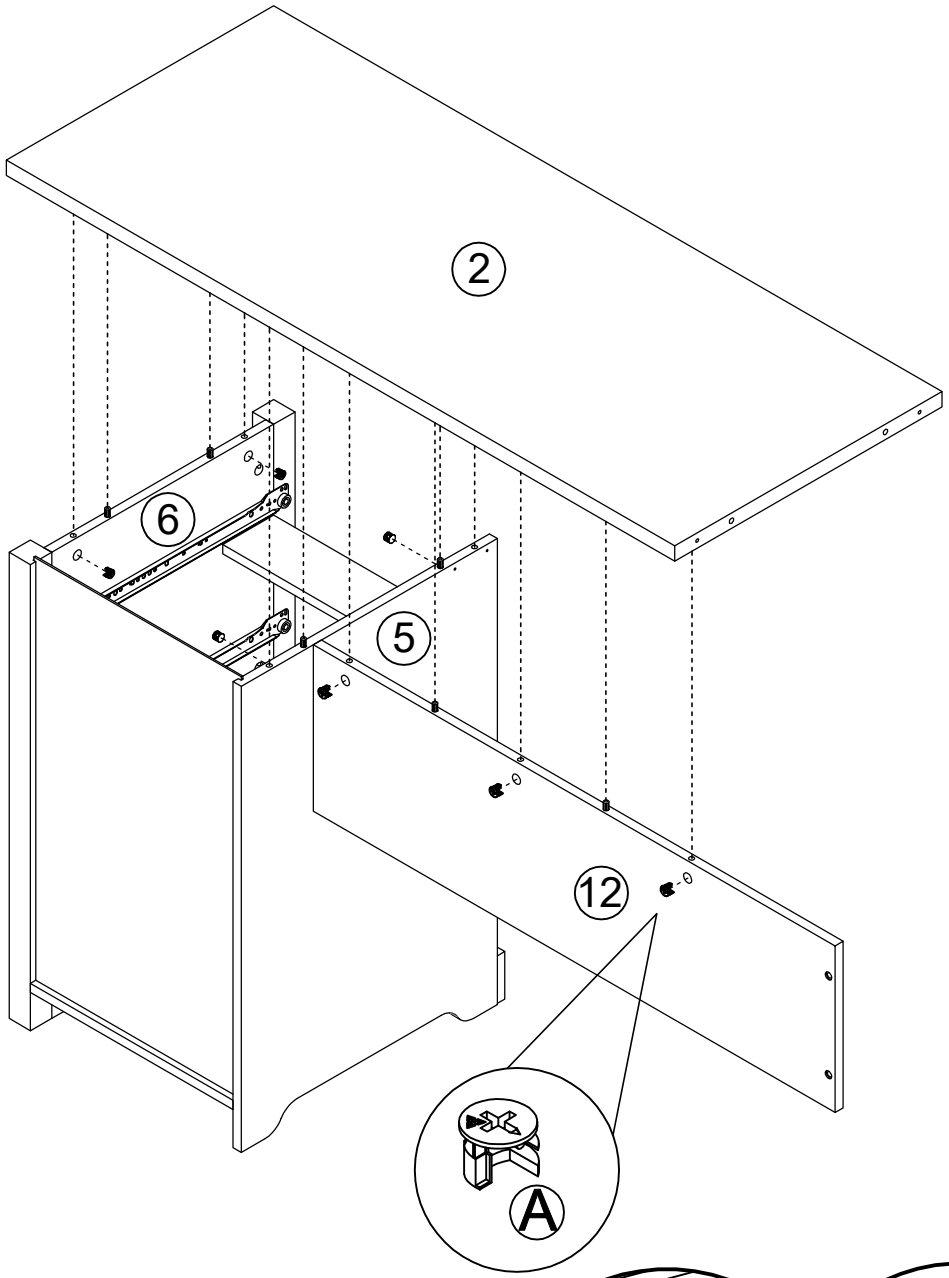


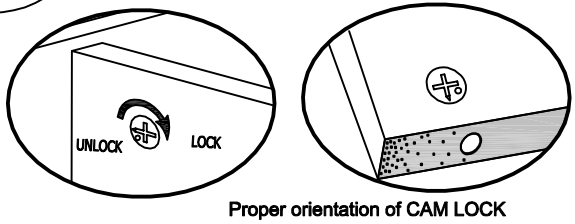



Proper orientation of CAM LOCK


STEP19

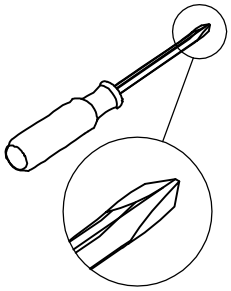


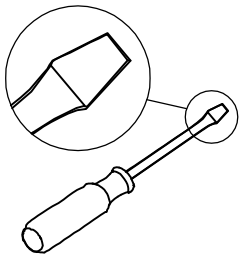

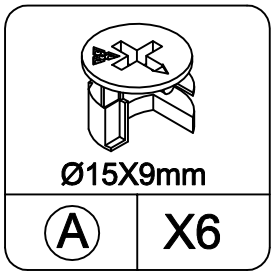

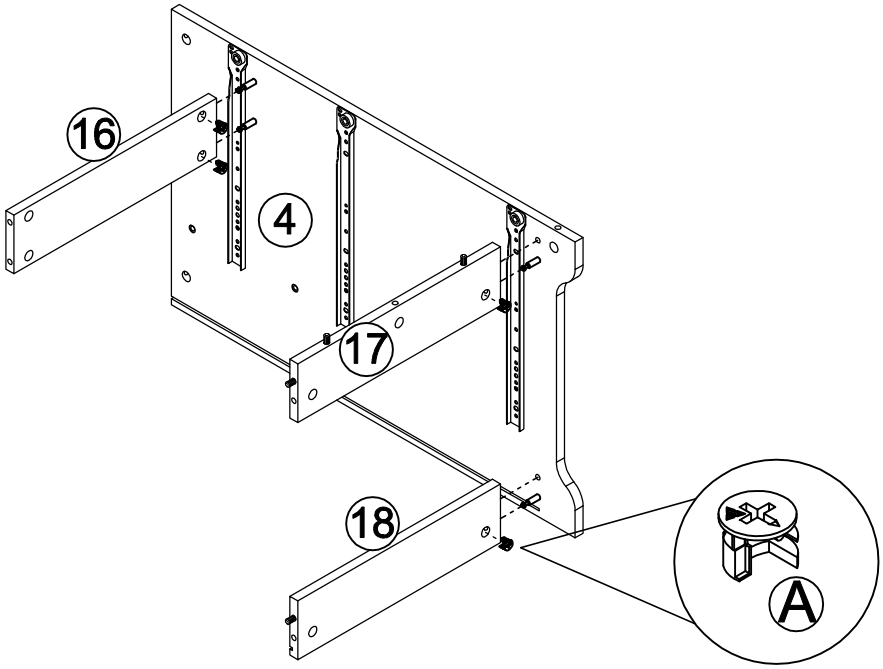


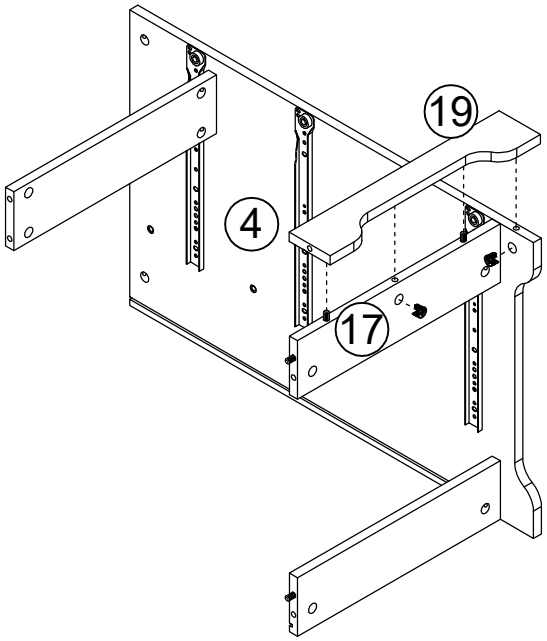


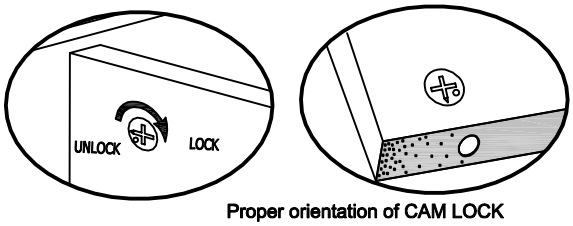



Proper orientation of CAM LOCK


STEP20

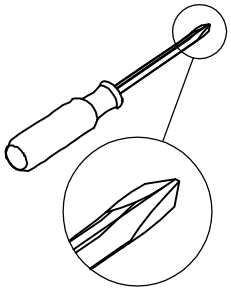

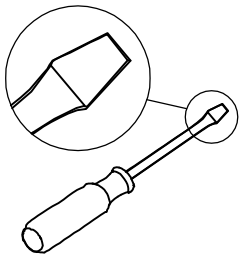

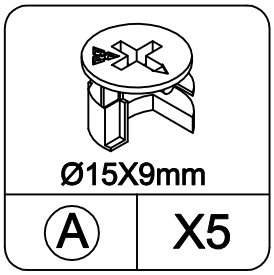


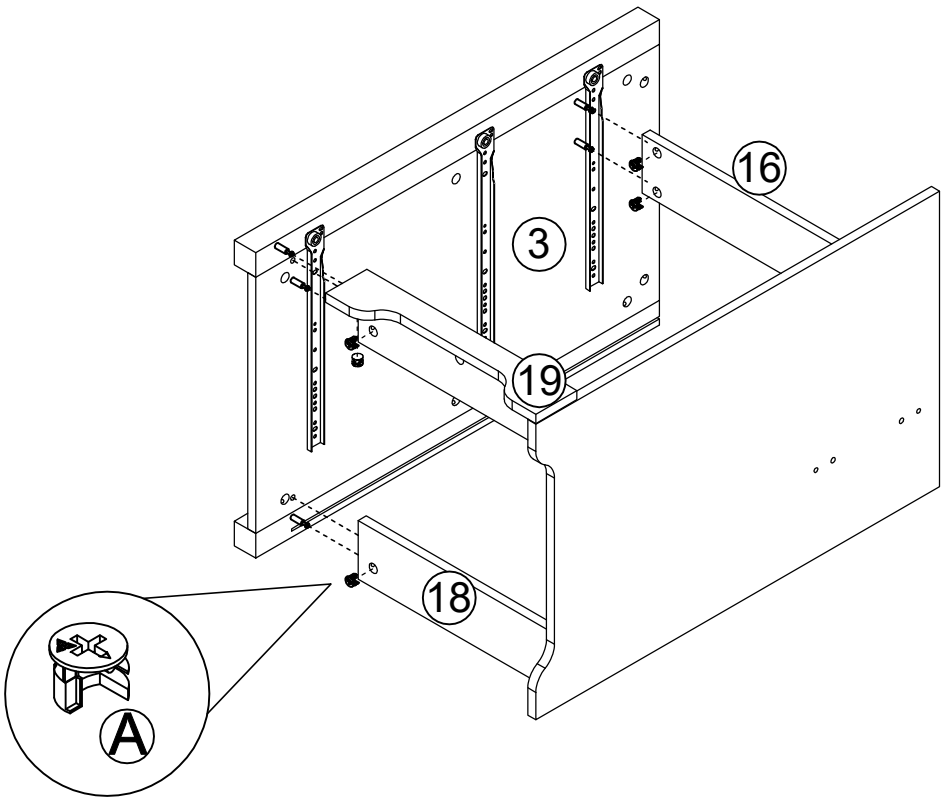


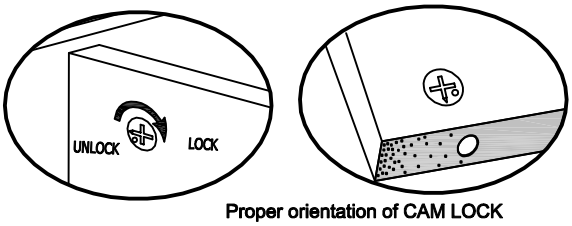

Proper orientation of CAM LOCK


STEP21

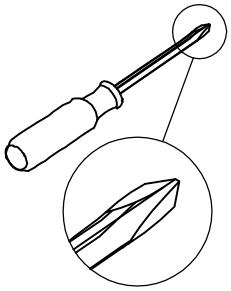

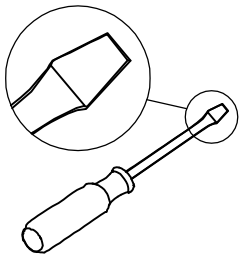



ϕ6X30mm	
C	X4


ϕ4X45mm	
F	X2

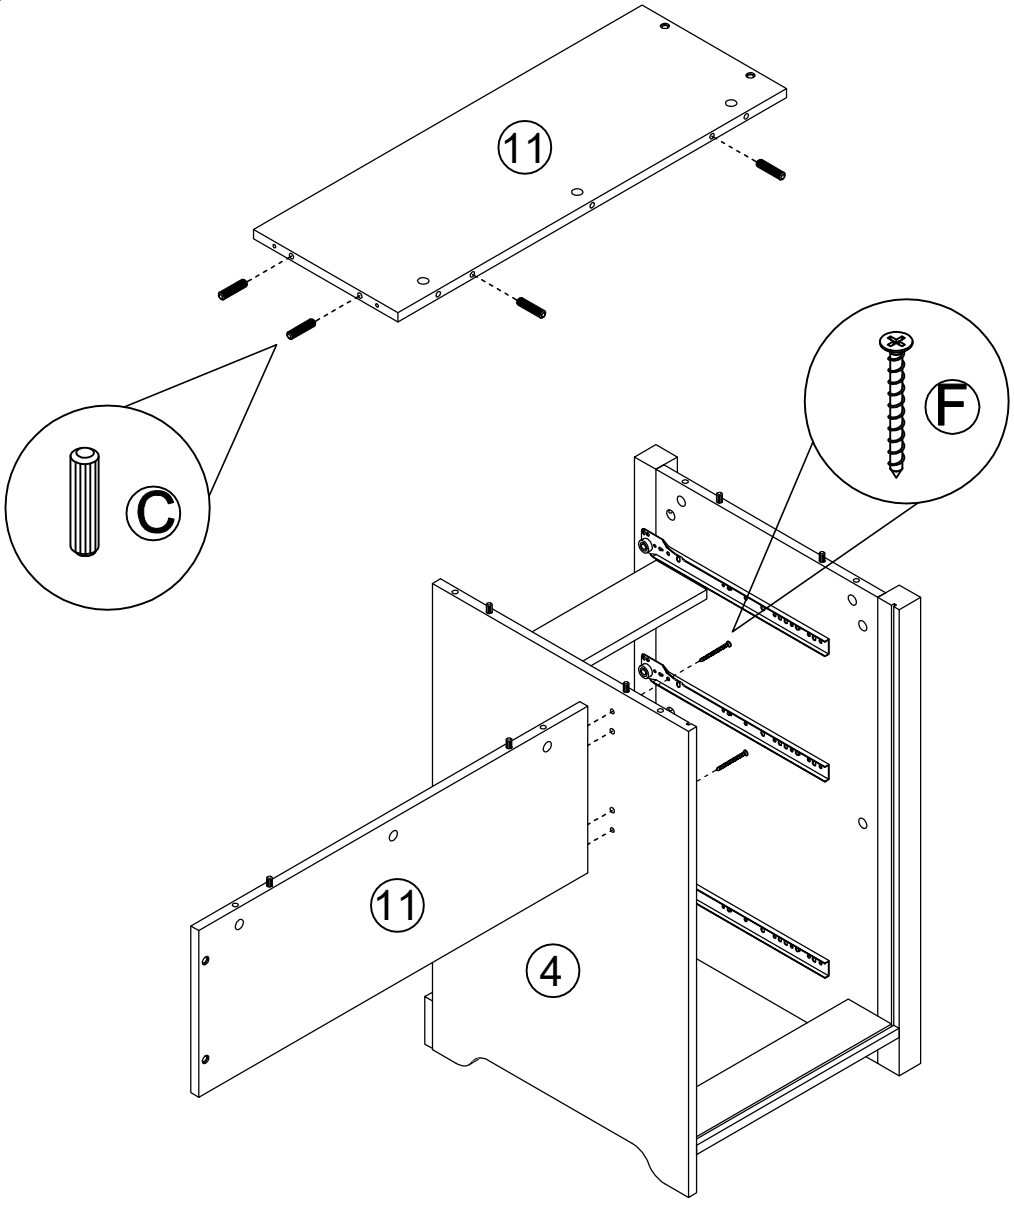


STEP22

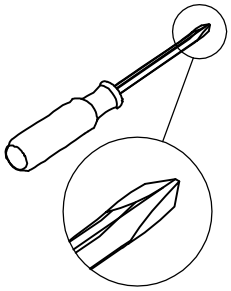

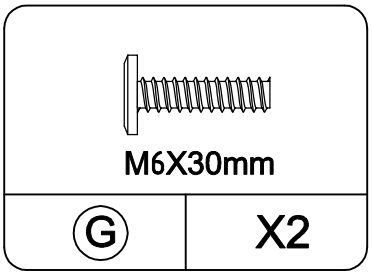


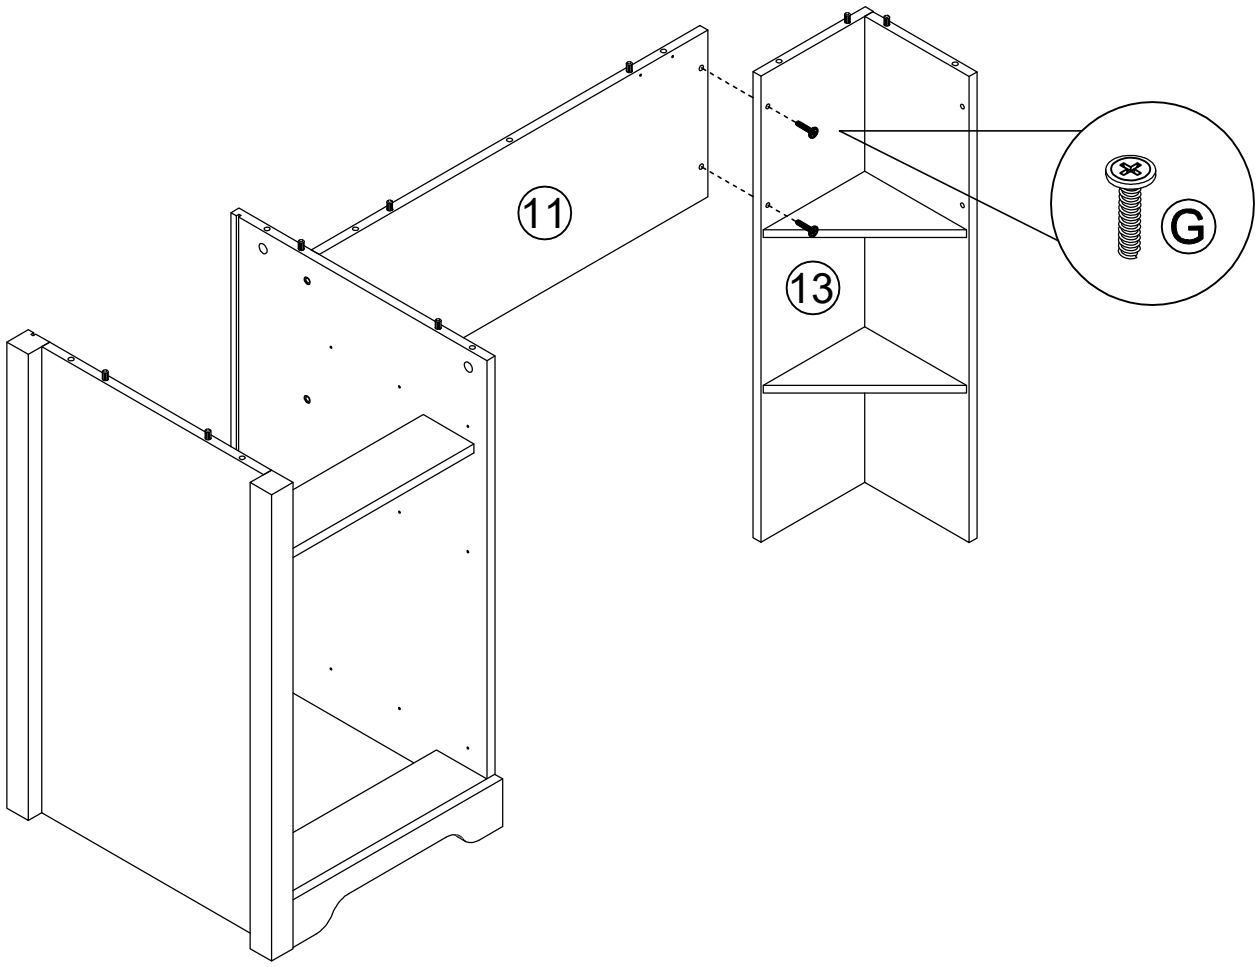



STEP23

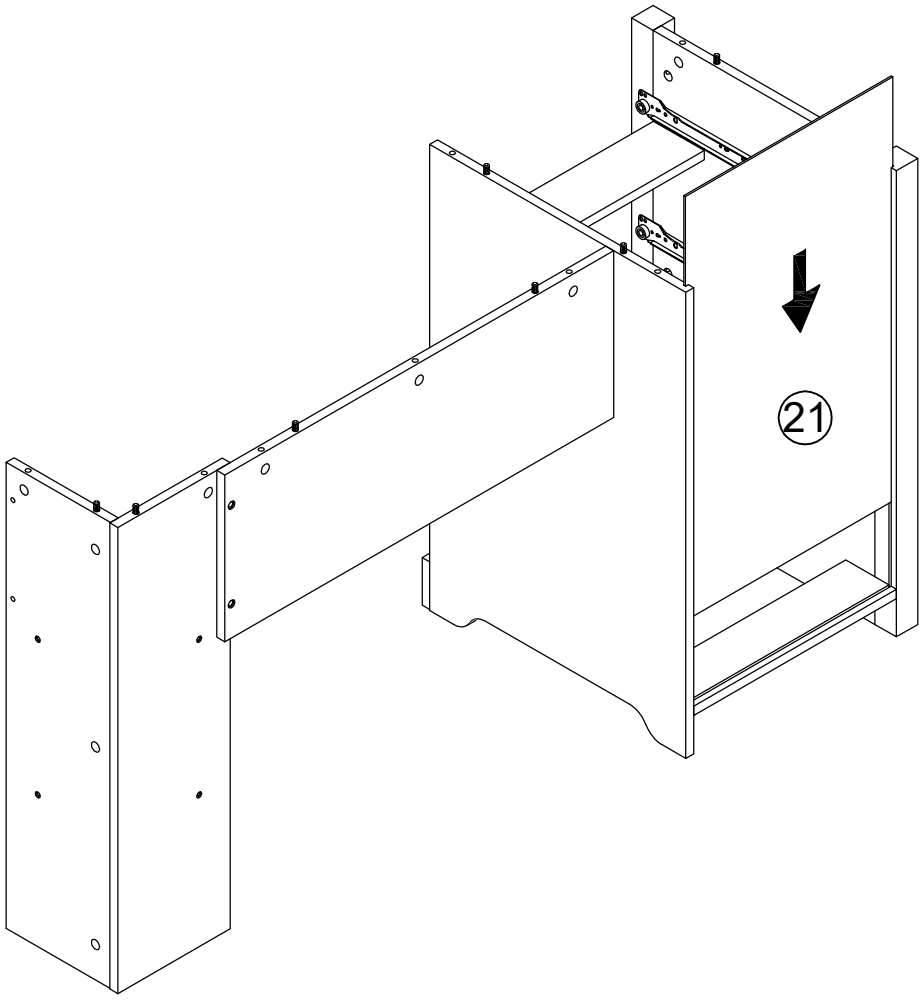


STEP24

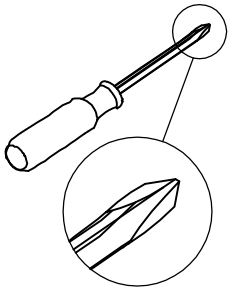

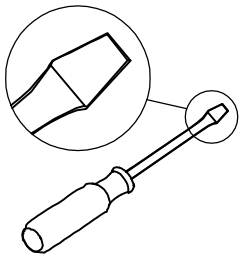


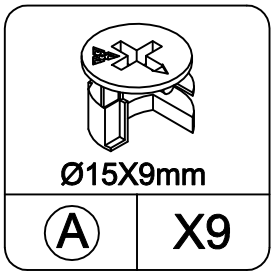


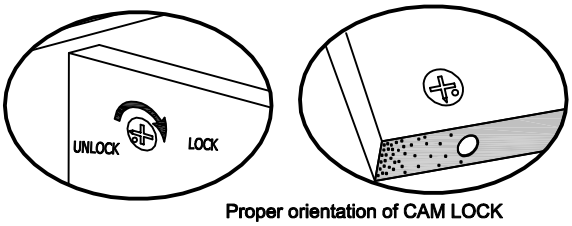



Proper orientation of CAM LOCK


STEP25

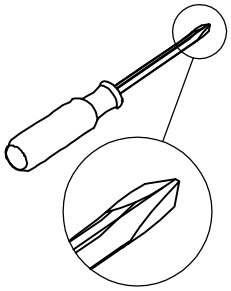

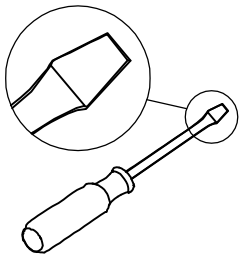

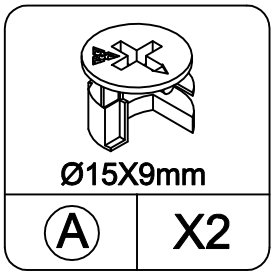


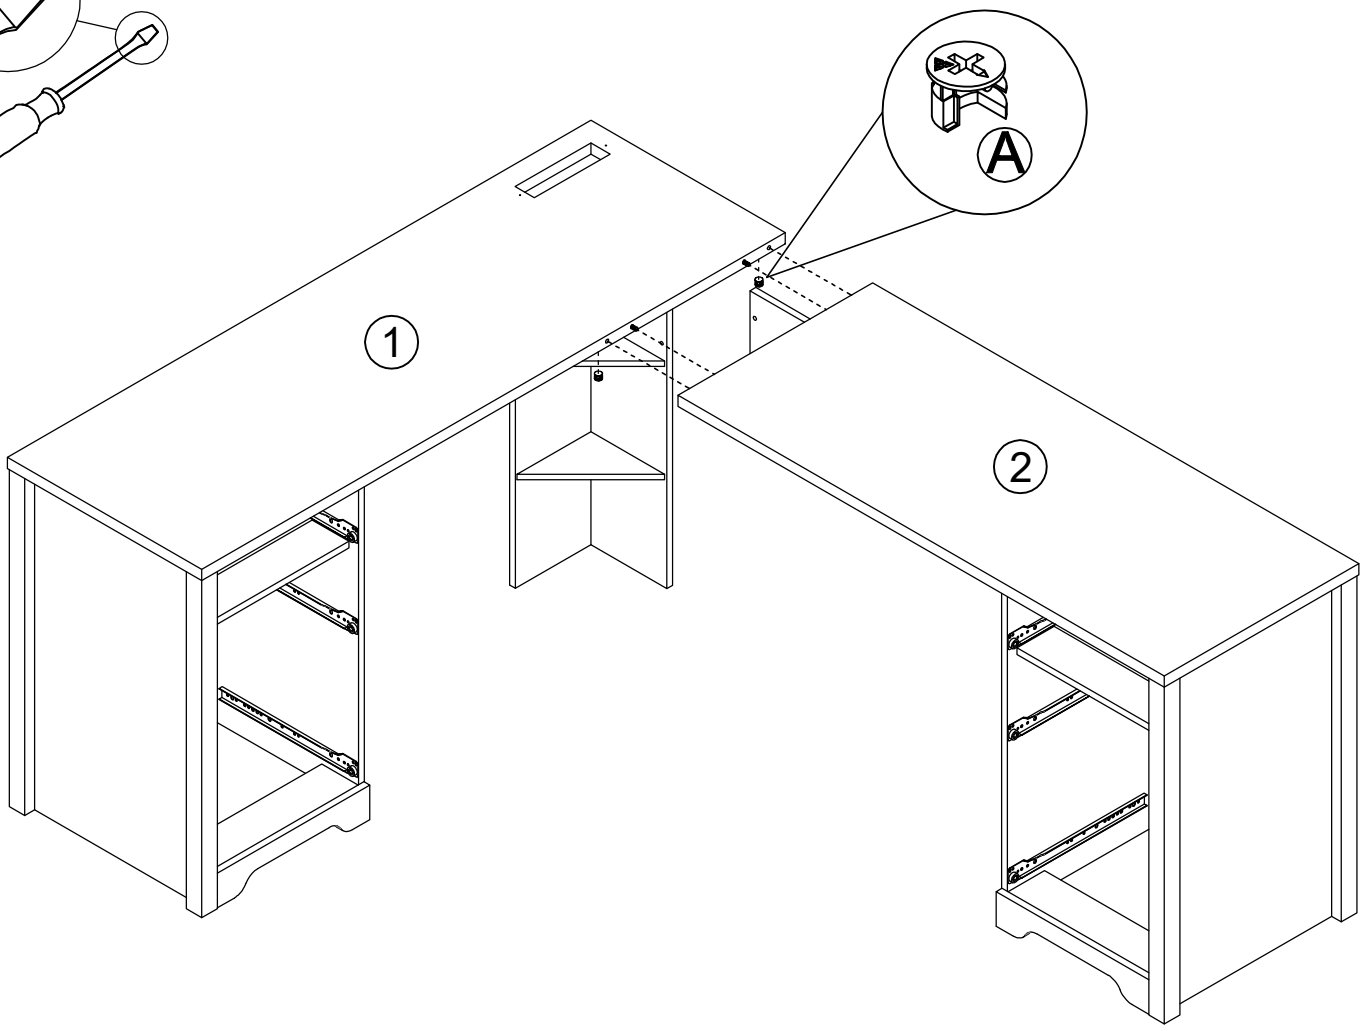

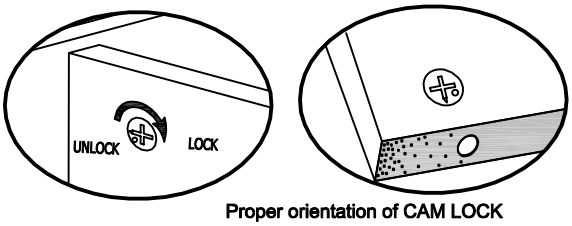



Proper orientation of CAM LOCK

STEP26

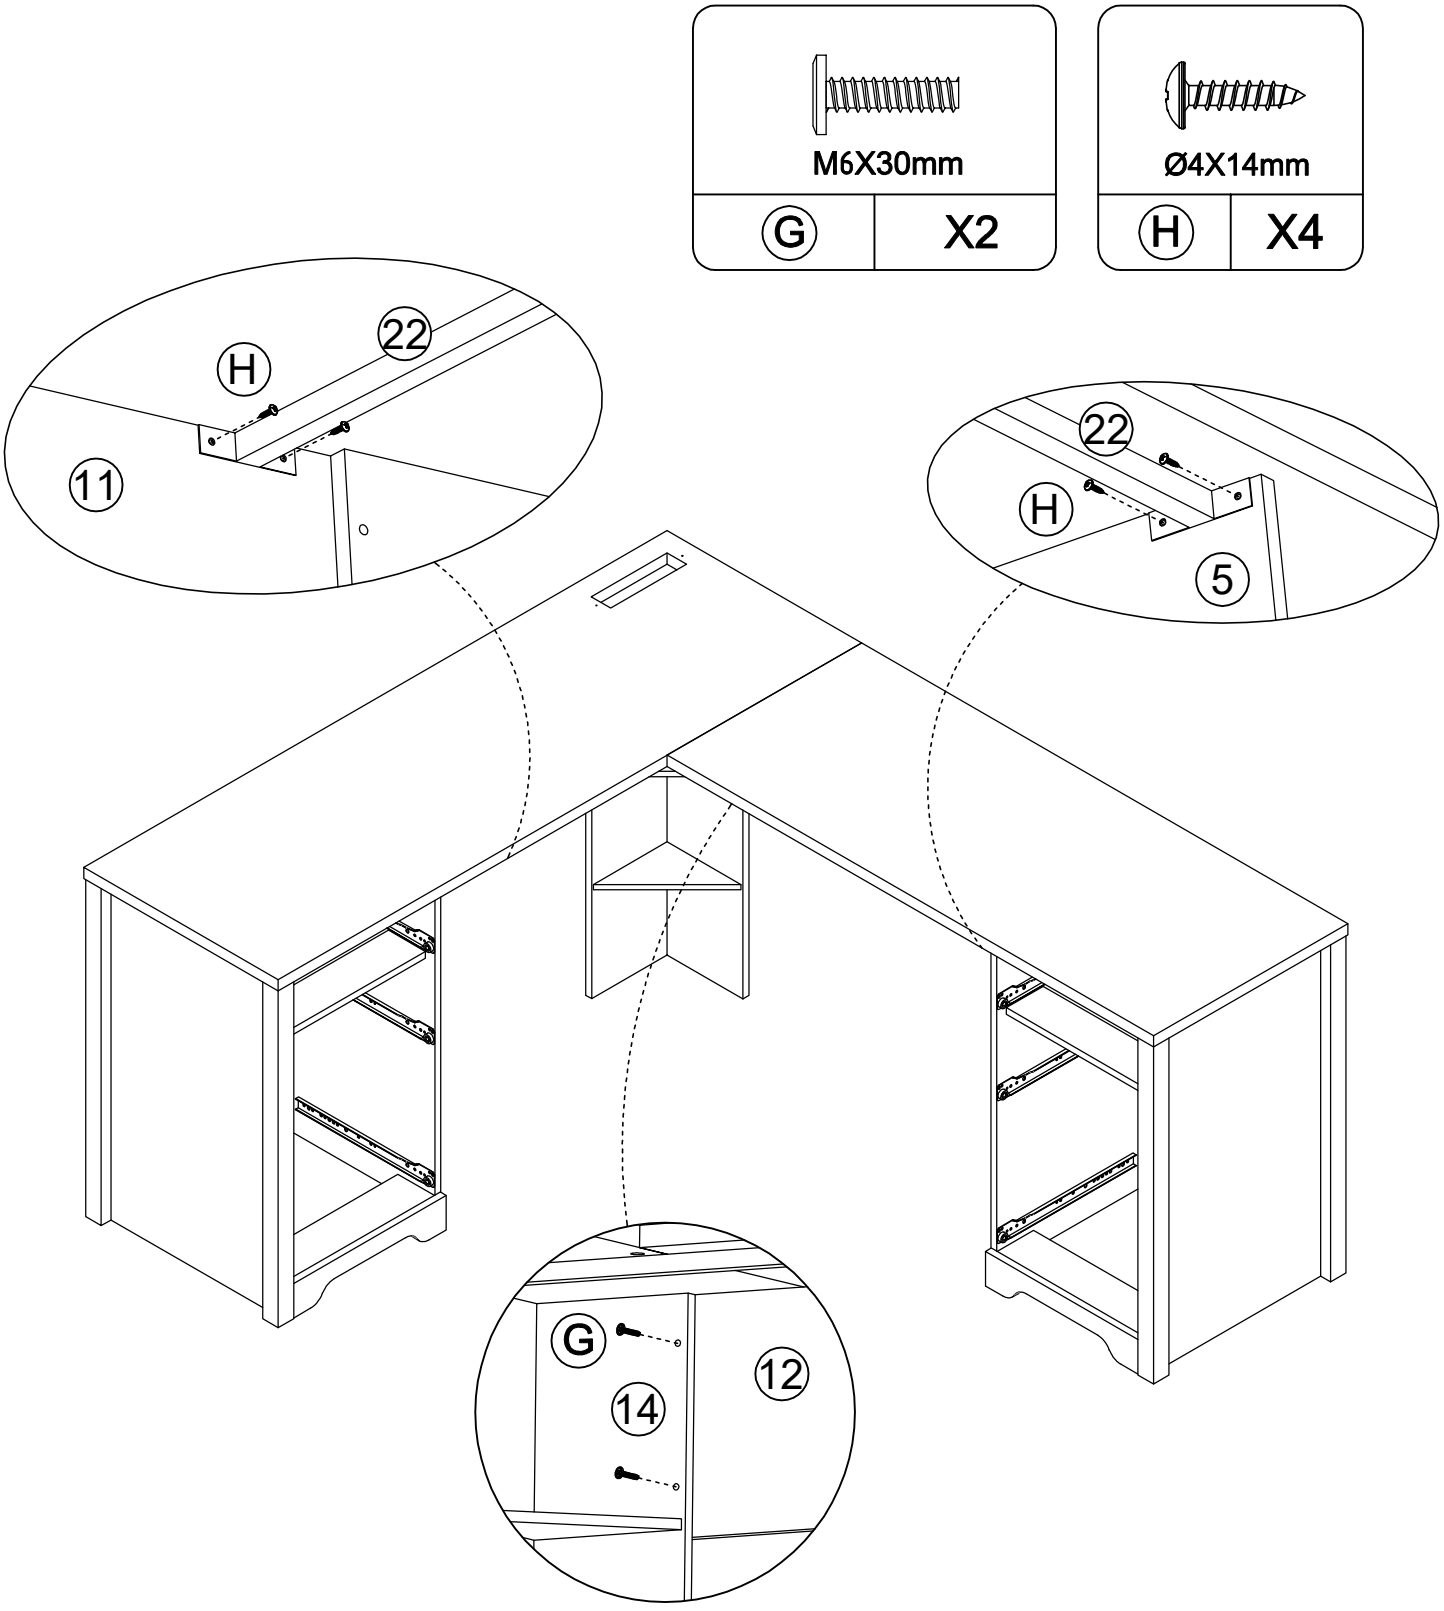

STEP27

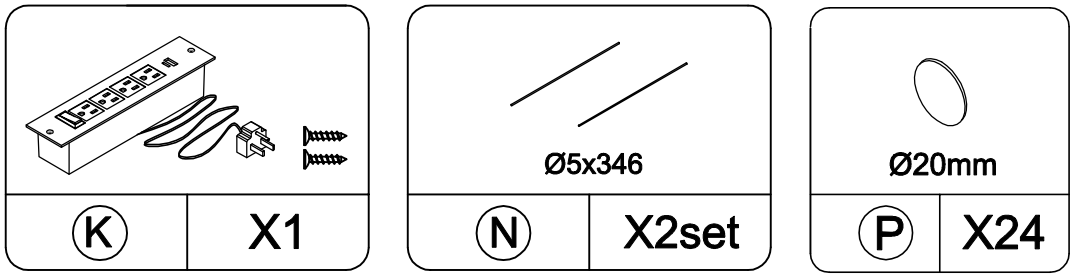
Ø5x346
Ø20mm
K
X1
N
X2set
P
X24

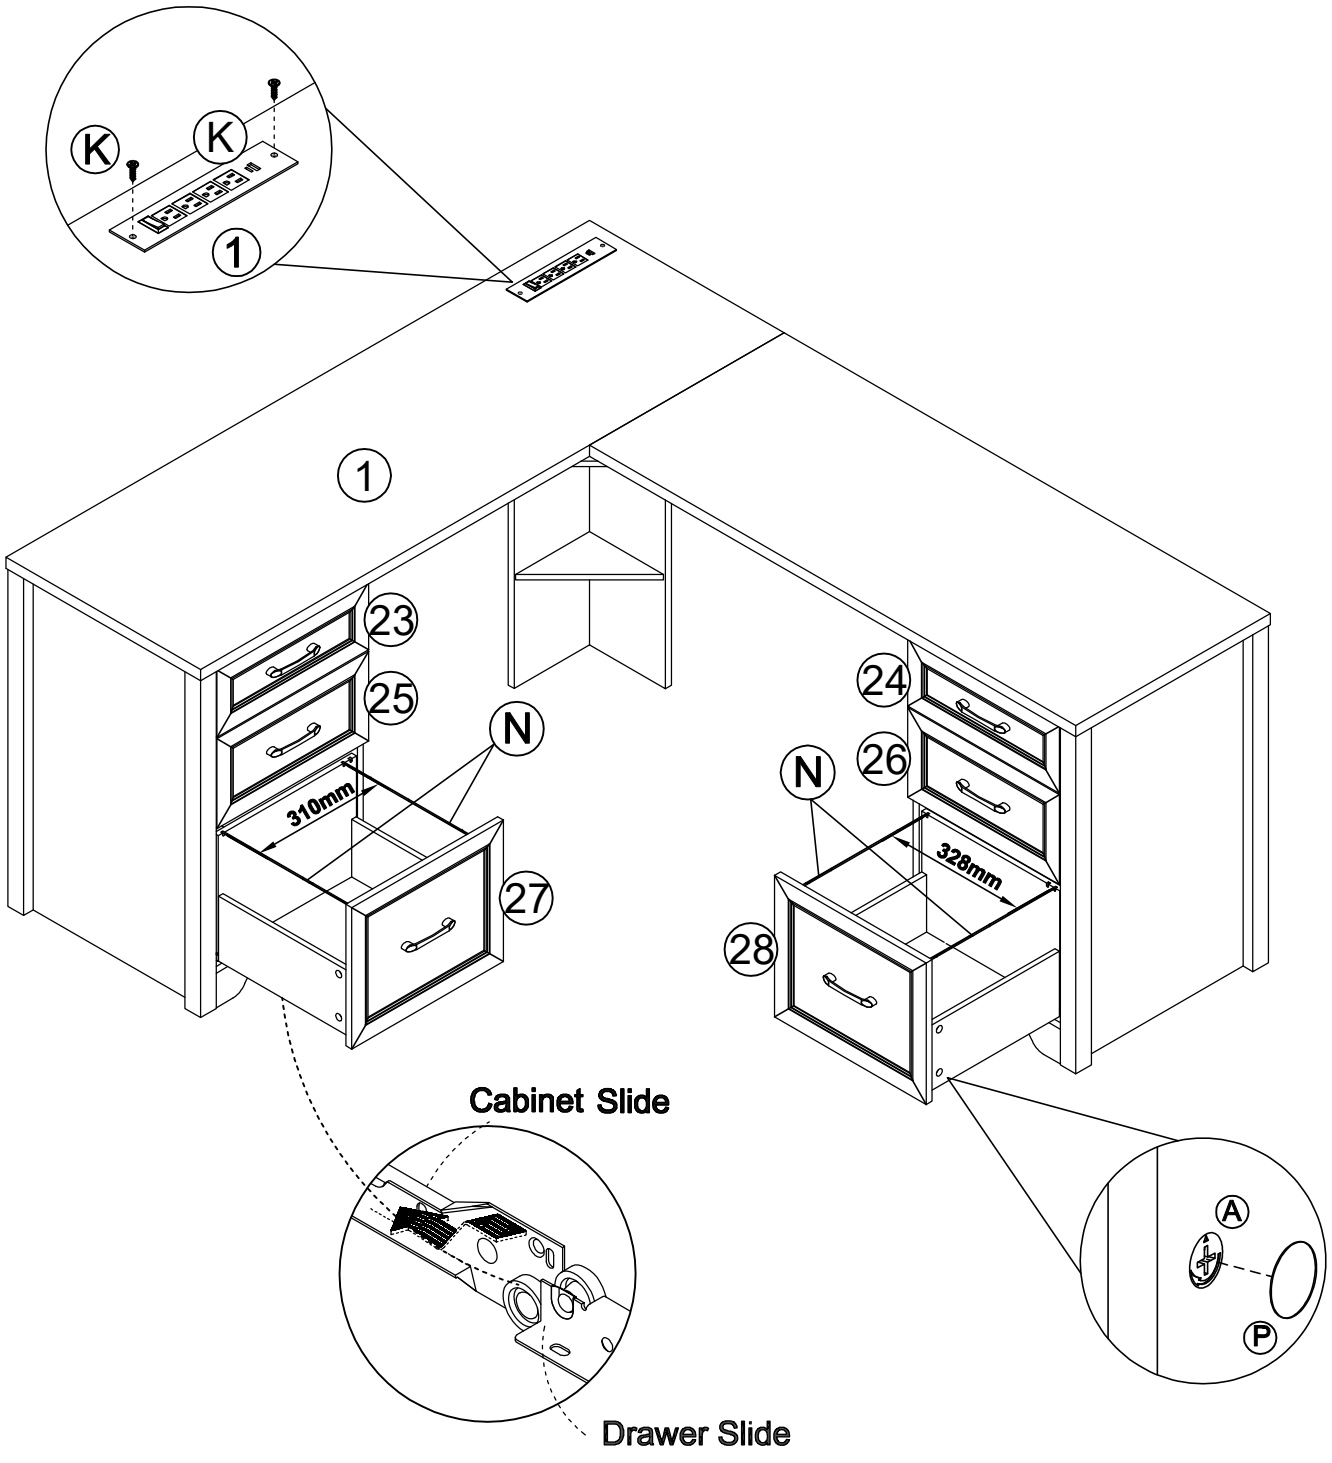
K
K
1
1
23
25
N
310mm
27
24
26
N
328mm
28
Cabinet Slide
A
P
Drawer Slide

STEP28

