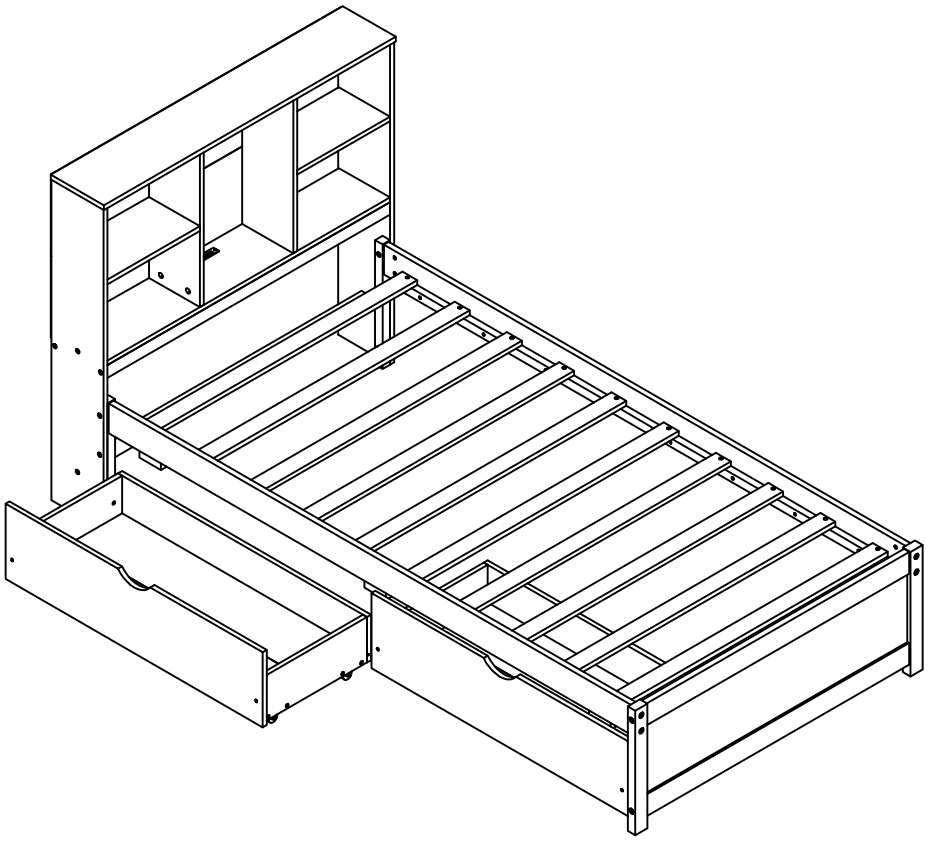
ASSEMBLY INSTRUCTIONS


TWIN BED WITH STORAGE HEADBOARD AND TWO DRAWERS





















YX5556

W697P544058/W697P544059/W697P544060






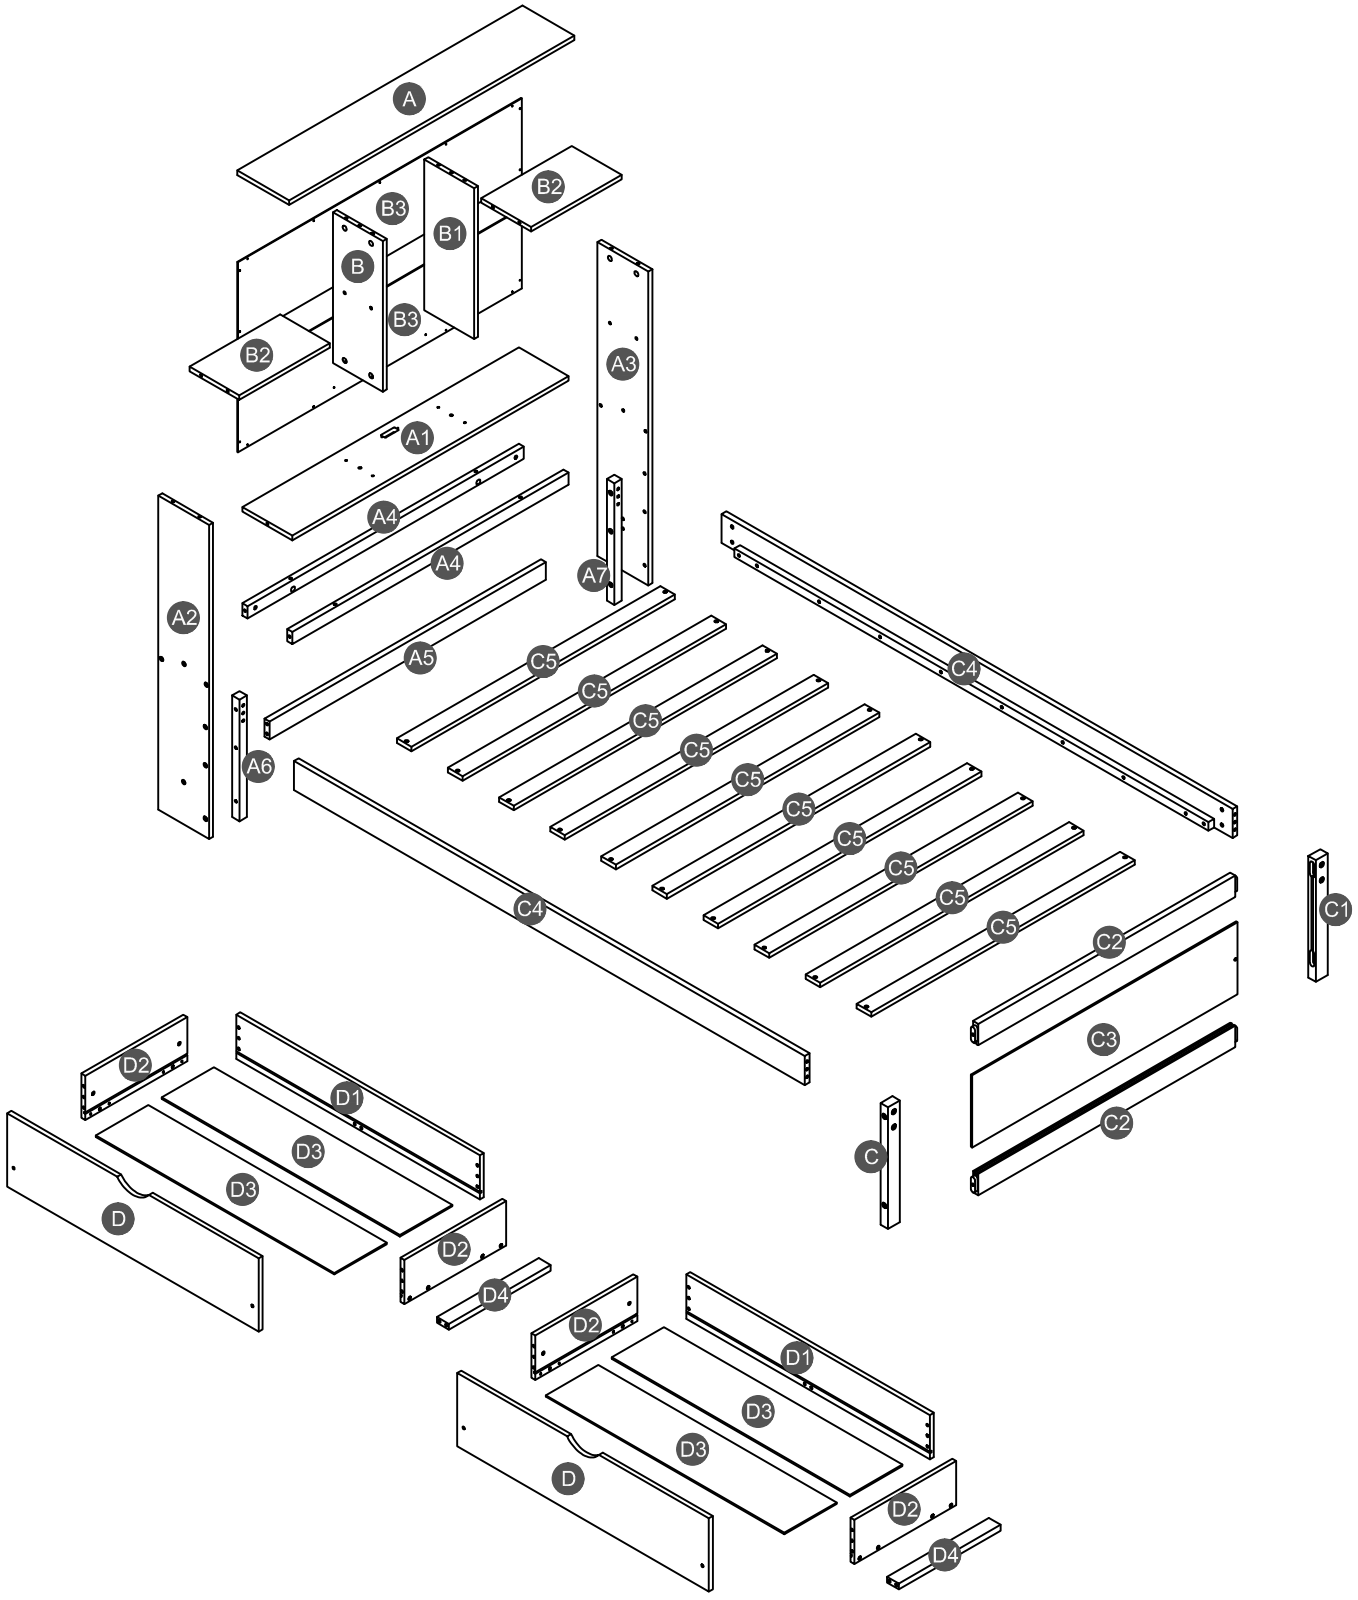
Detail View


A
B2
B3
B1
B
B3
B2
A3
A1
A4
A4
A7
A2
A5
C5
C5
C5
C5
C5
C5
C5
C5
C5
C5
C4
C4
A6
C1
C2
C3
C2
C
D2
D1
D3
D3
D
D2
D4
D2
D1
D3
D3
D
D2
D4




Part List

A  Top panel HB - 1pc	**A1**  Bottom panel HB - 1pc	**A2**  Side panel HB (left) - 1pc
A3  Side panel HB (right) - 1pc	**A4**  Horizontal bar HB - 2pcs	**A5**  Lower horizontal bar HB - 1pc
A6  Support bar HB (left) - 1pc	**A7**  Support bar HB (right) - 1pc	**B**  Divider panel HB (left) - 1pc
B1  Divider panel HB (right) - 1pc	**B2**  Shelf panel HB - 2pcs	**B3**  Back panel HB - 2pcs
C  Leg FB (left) - 1pc	**C1**  Leg FB (right) - 1pc	**C2**  Horizontal bar FB - 2pcs
C3  Side panel FB - 1pc	**C4**  Side rail - 2pcs	**C5**  Slats - 10pcs
D  Front drawer panel - 2pcs	**D1**  Back drawer panel - 2pcs	**D2**  Left / right drawer panel - 4pcs
D3  Drawer bottom - 4pcs	**D4**  Support rail of drawer - 2pcs	

Hardware List


1  Ø8*30mm	**2**  Ø10*20mm	**3**  (Ø15)1/4"*80mm
Wood dowel (42pcs)	Wood dowel (8pcs)	Hex-Head bolts (12pcs)
4  (Ø12)1/4"*60mm	**5**  (Ø12)1/4"*40mm	**6**  1/4"*15 (9.5mm)
Hex-Head bolts (16pcs)	Hex-Head bolts (6pcs)	Horizontal-Hole bolts(28pcs)
7  Ø7"*35mm	**8**  Ø14*9mm	**9**  Ø4*30mm
Cam lock (16pcs)	Cam lock (16pcs)	Wood screws (42pcs)
10  Ø3*12mm	**11**  80*40*19 mm	**12** 
Wood screws (28pcs)	Drawer stopper (3pcs)	USB port (1pc)
13  100*52*20 mm	**14**  (1/4")4.5*58mm	
Wheels (8pcs)	Allen key (1pc)	

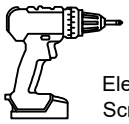OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)





Electric Screwdriver

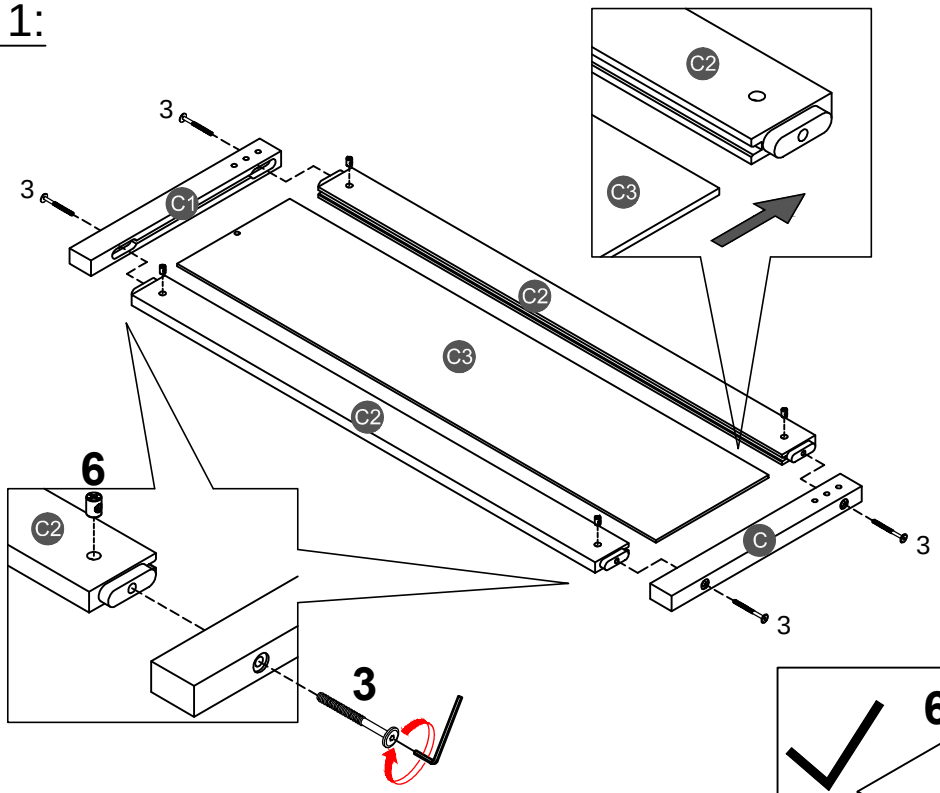PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

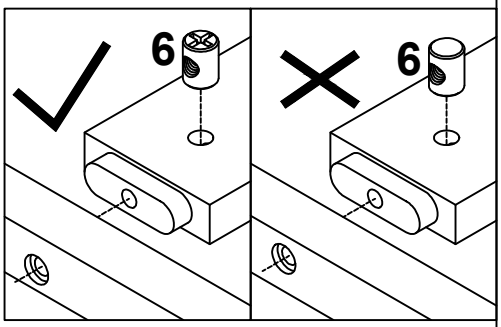STEP 1:




3	6
4PCS	4PCS



Note:Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened.

STEP 2:

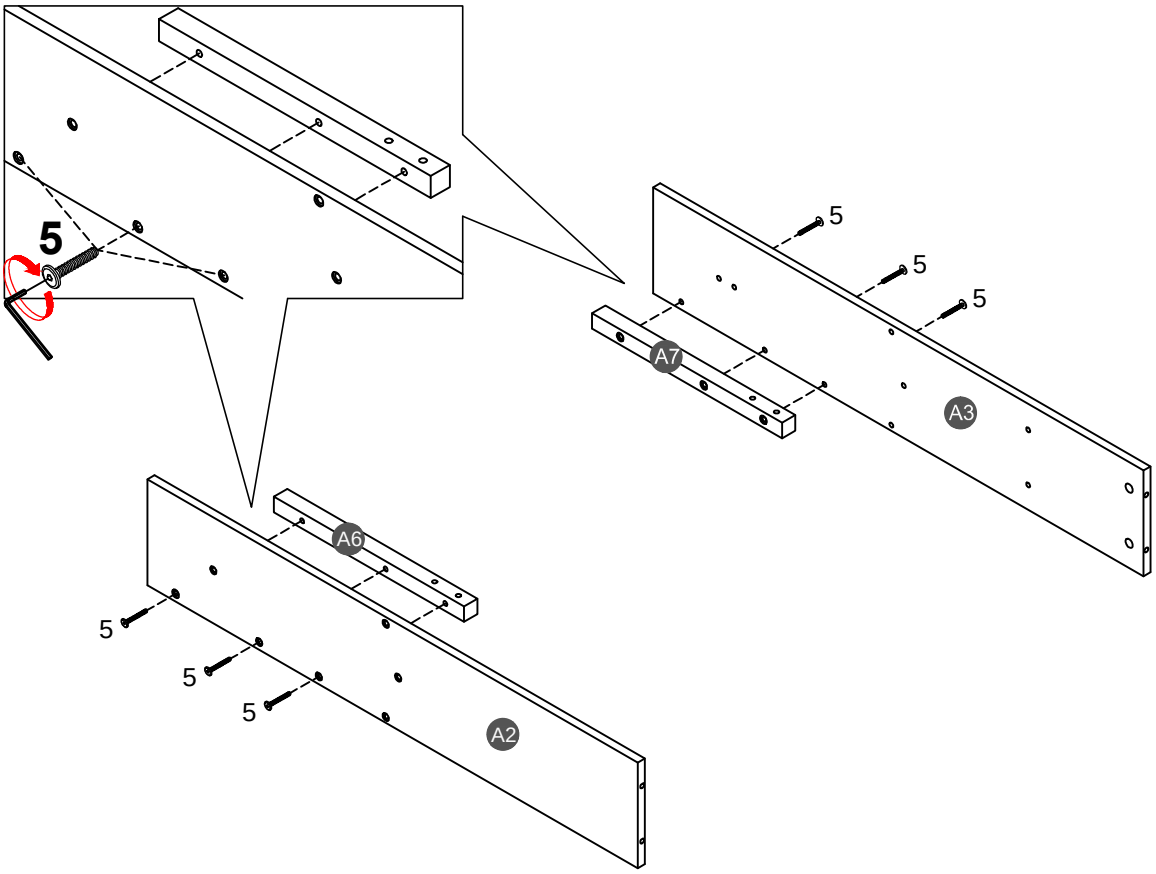
5
6PCS



STEP 3:

7

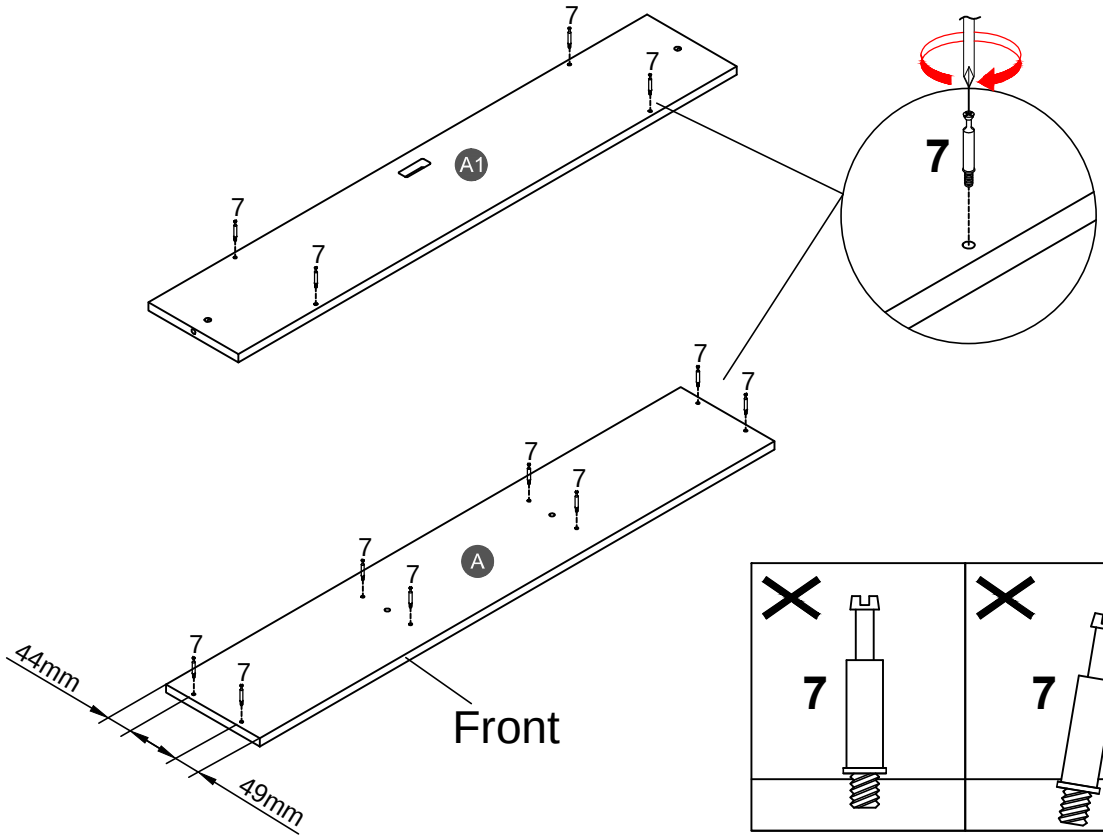
12PCS




STEP 4:

8

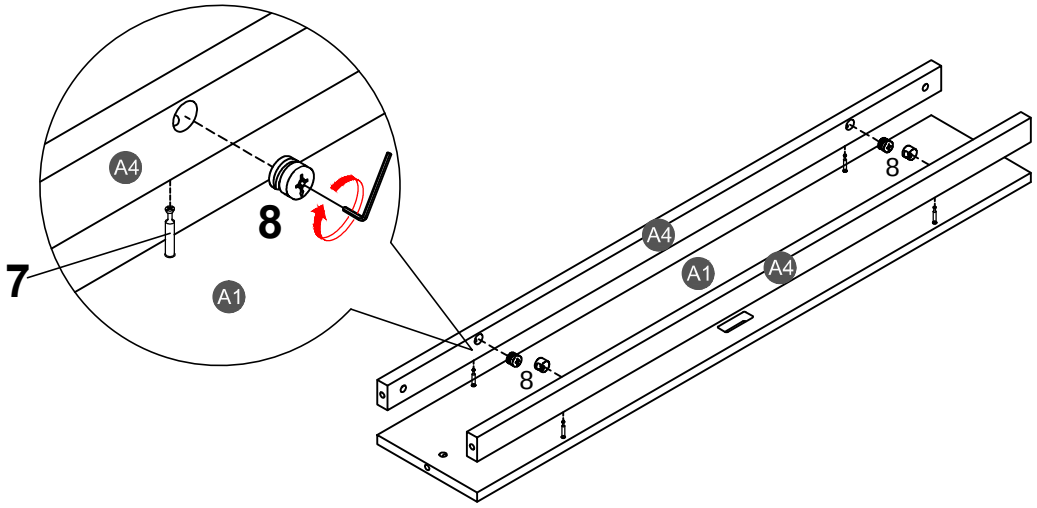
4PCS




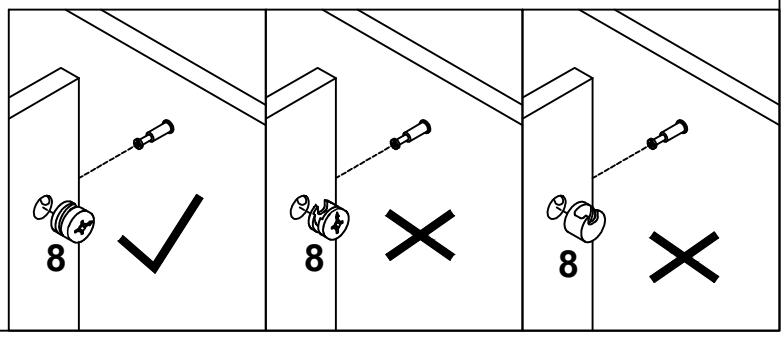Note: Place hardware #8 with the "X" face outward, and make sure that the arrowhead is upward. Then, place hardware #8 into the hole of hardware #7 and tighten it clockwise with a hand screwdriver.
(Please do NOT use an electric screwdriver.)




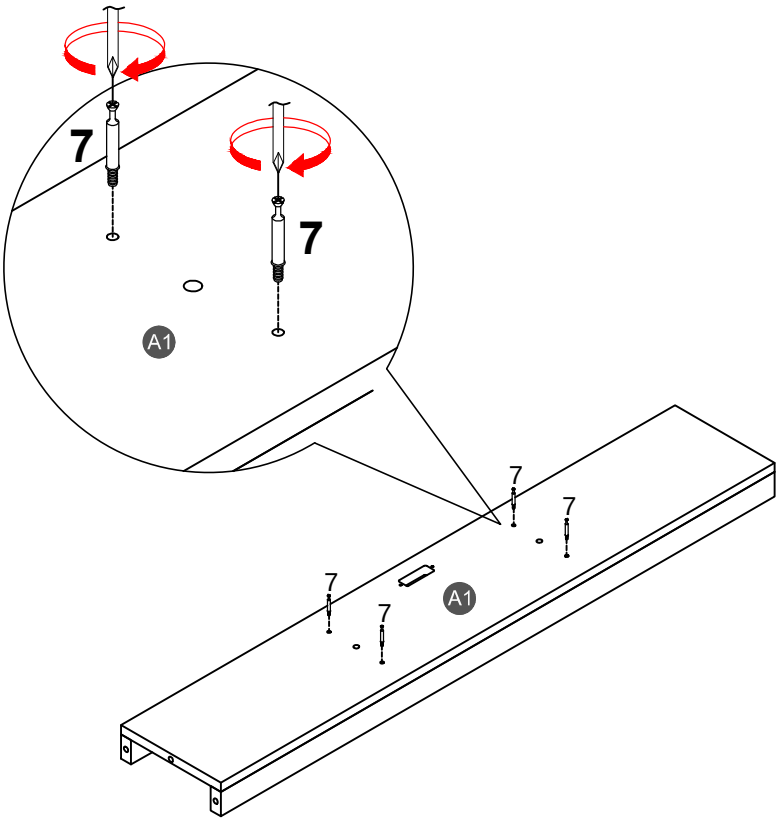STEP 5:




7

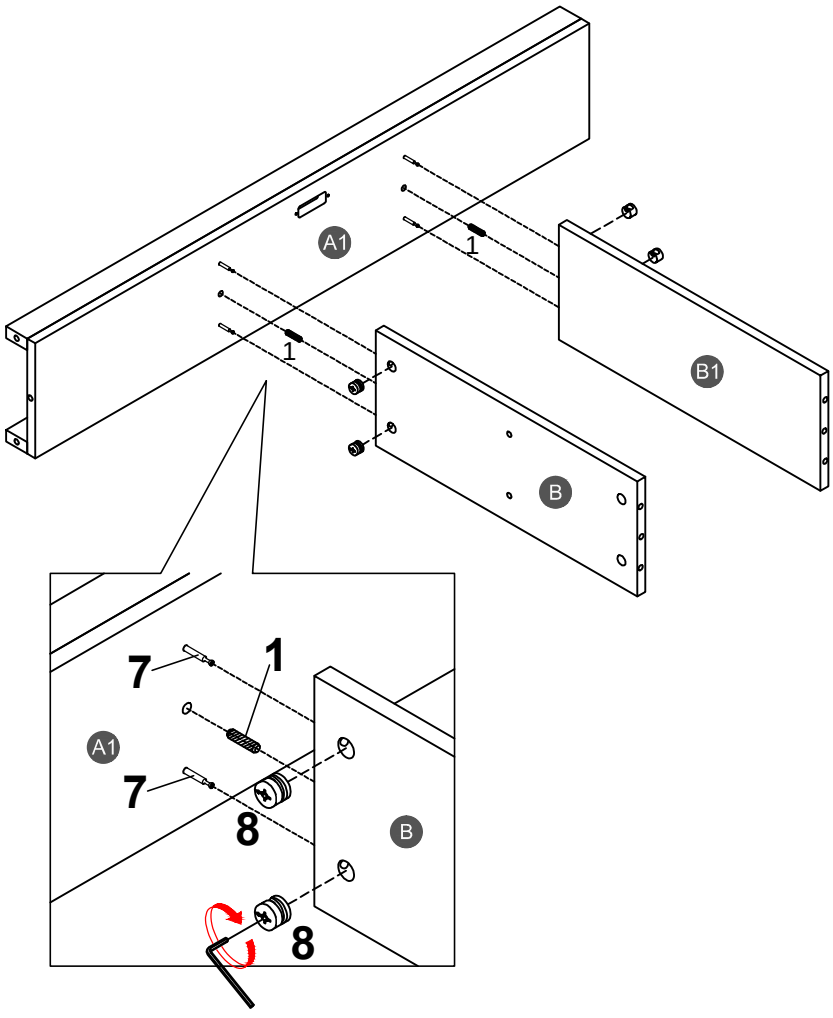4PCS

STEP 6:




1	8
	
2PCS	4PCS

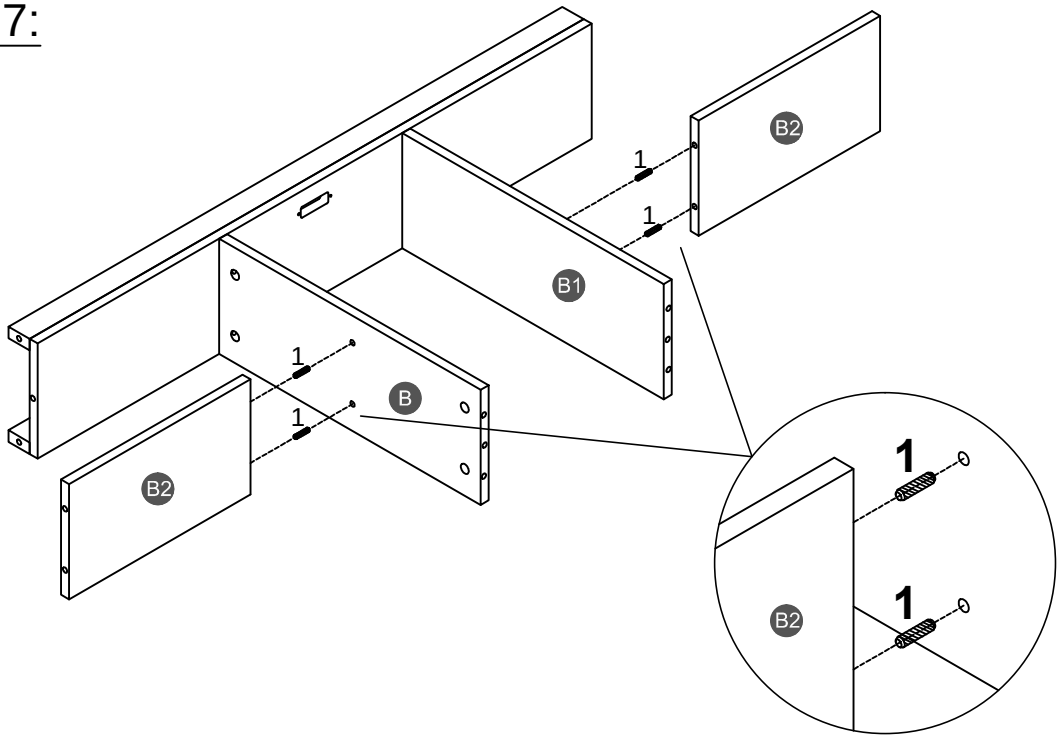STEP 7:



1
4PCS

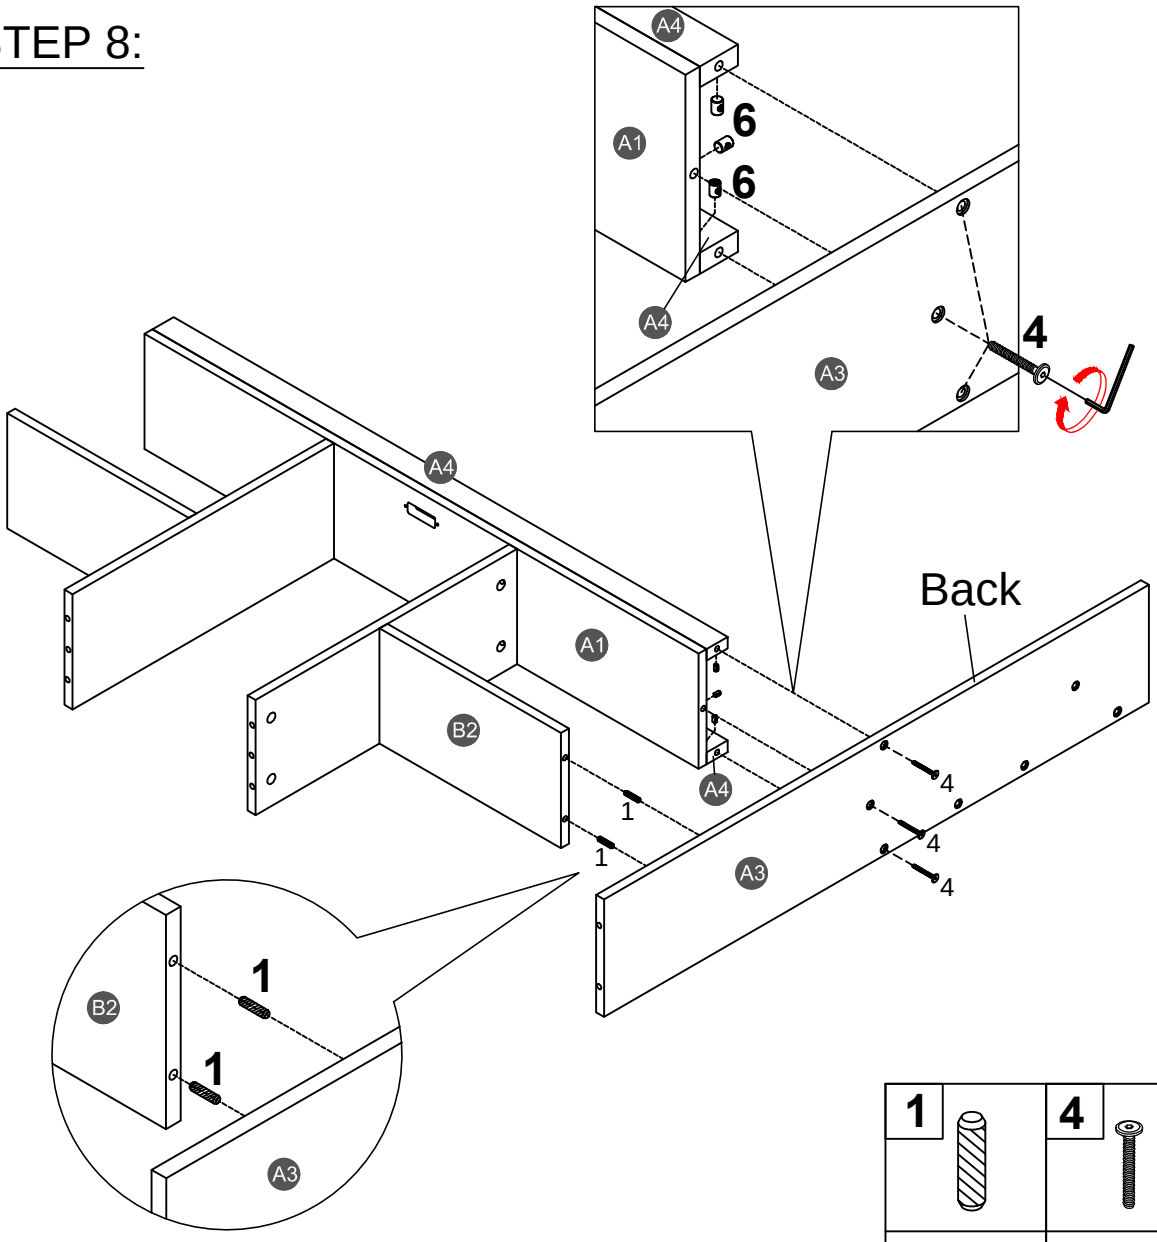
STEP 8:



1	4	6
2PCS	3PCS	3PCS


STEP 9:

1	4	6
4PCS	5PCS	5PCS

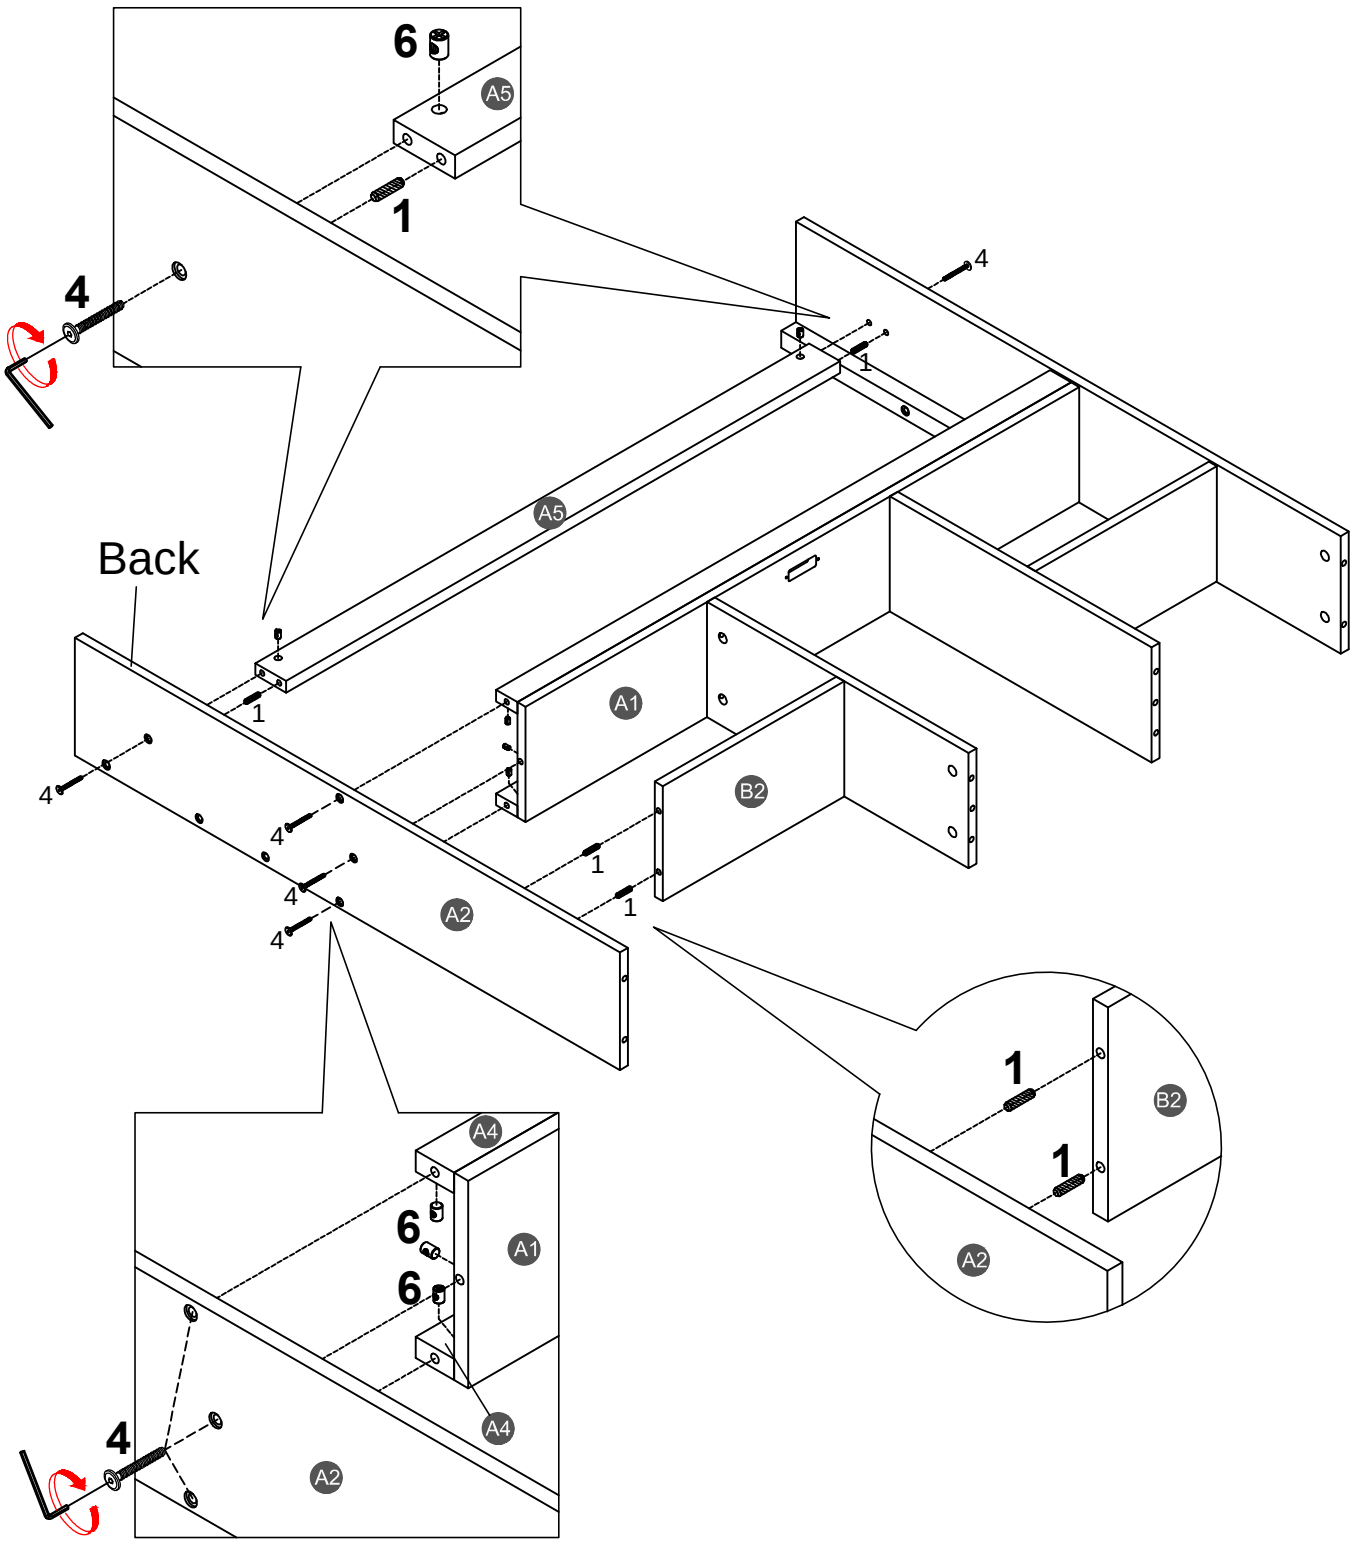


STEP 10:

1	8
2PCS	8PCS

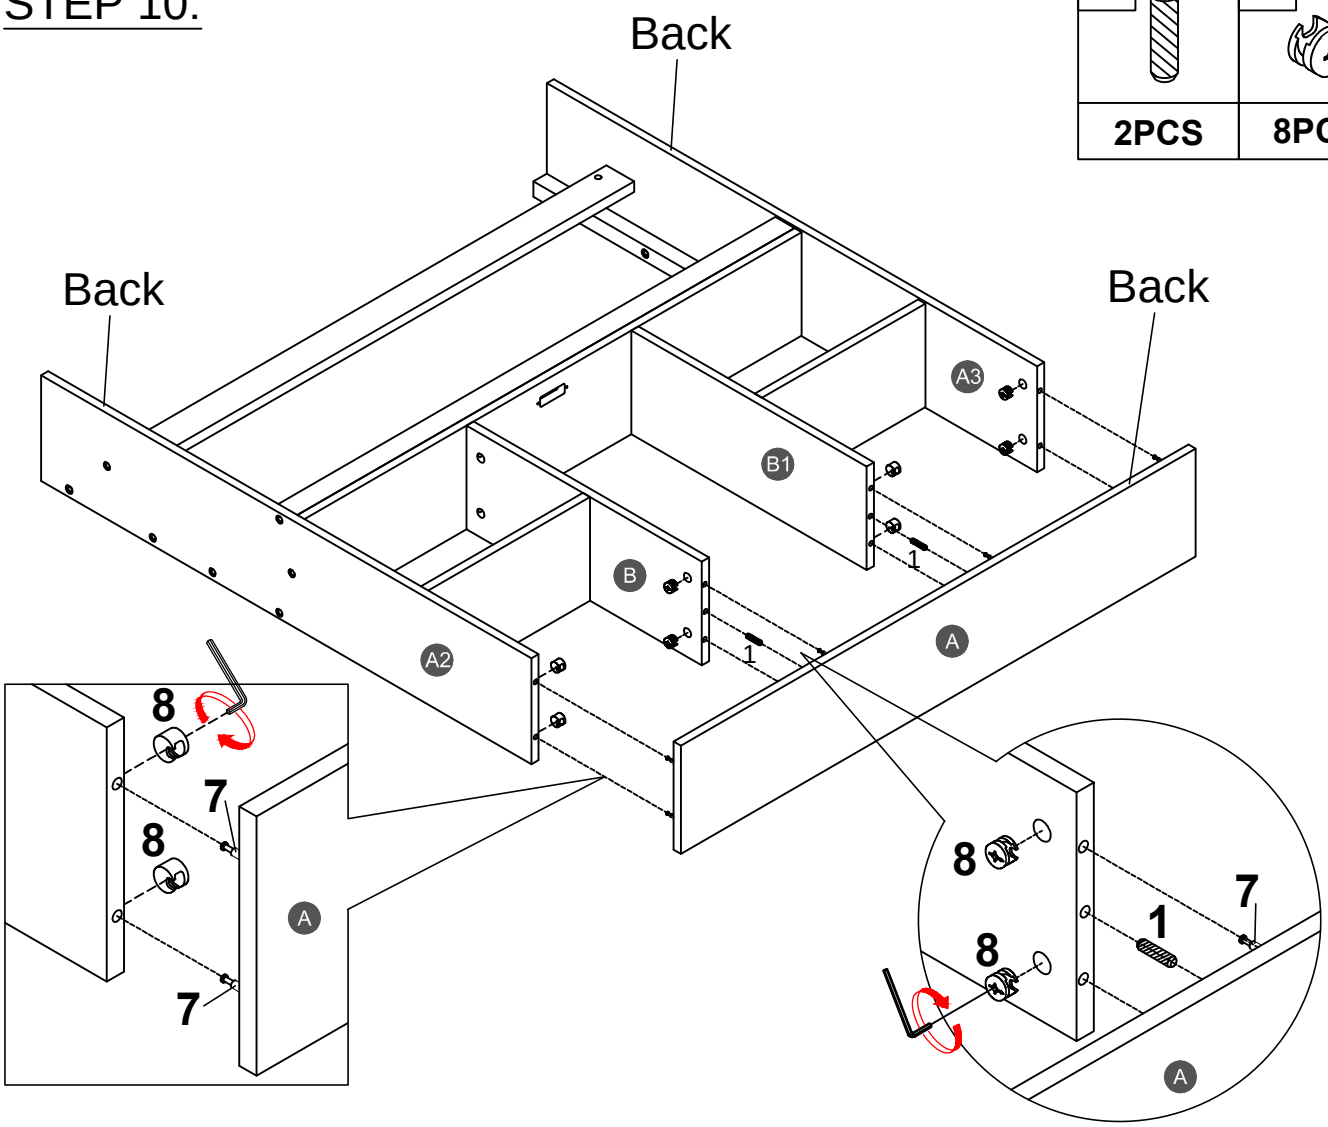

STEP 11:


9	11
6PCS	3PCS

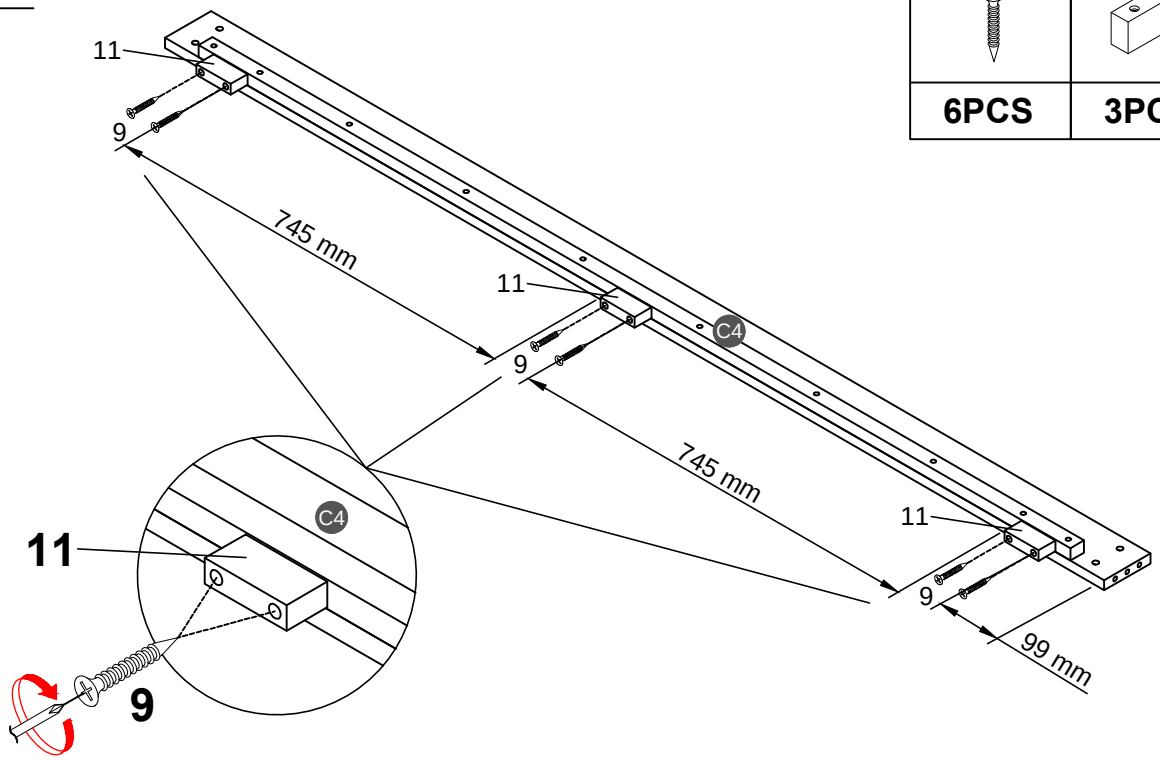

Drawer stopper (11) with lower side rail front (C4) by using screw (9).


STEP 12:

1	3	6
4PCS	8PCS	8PCS

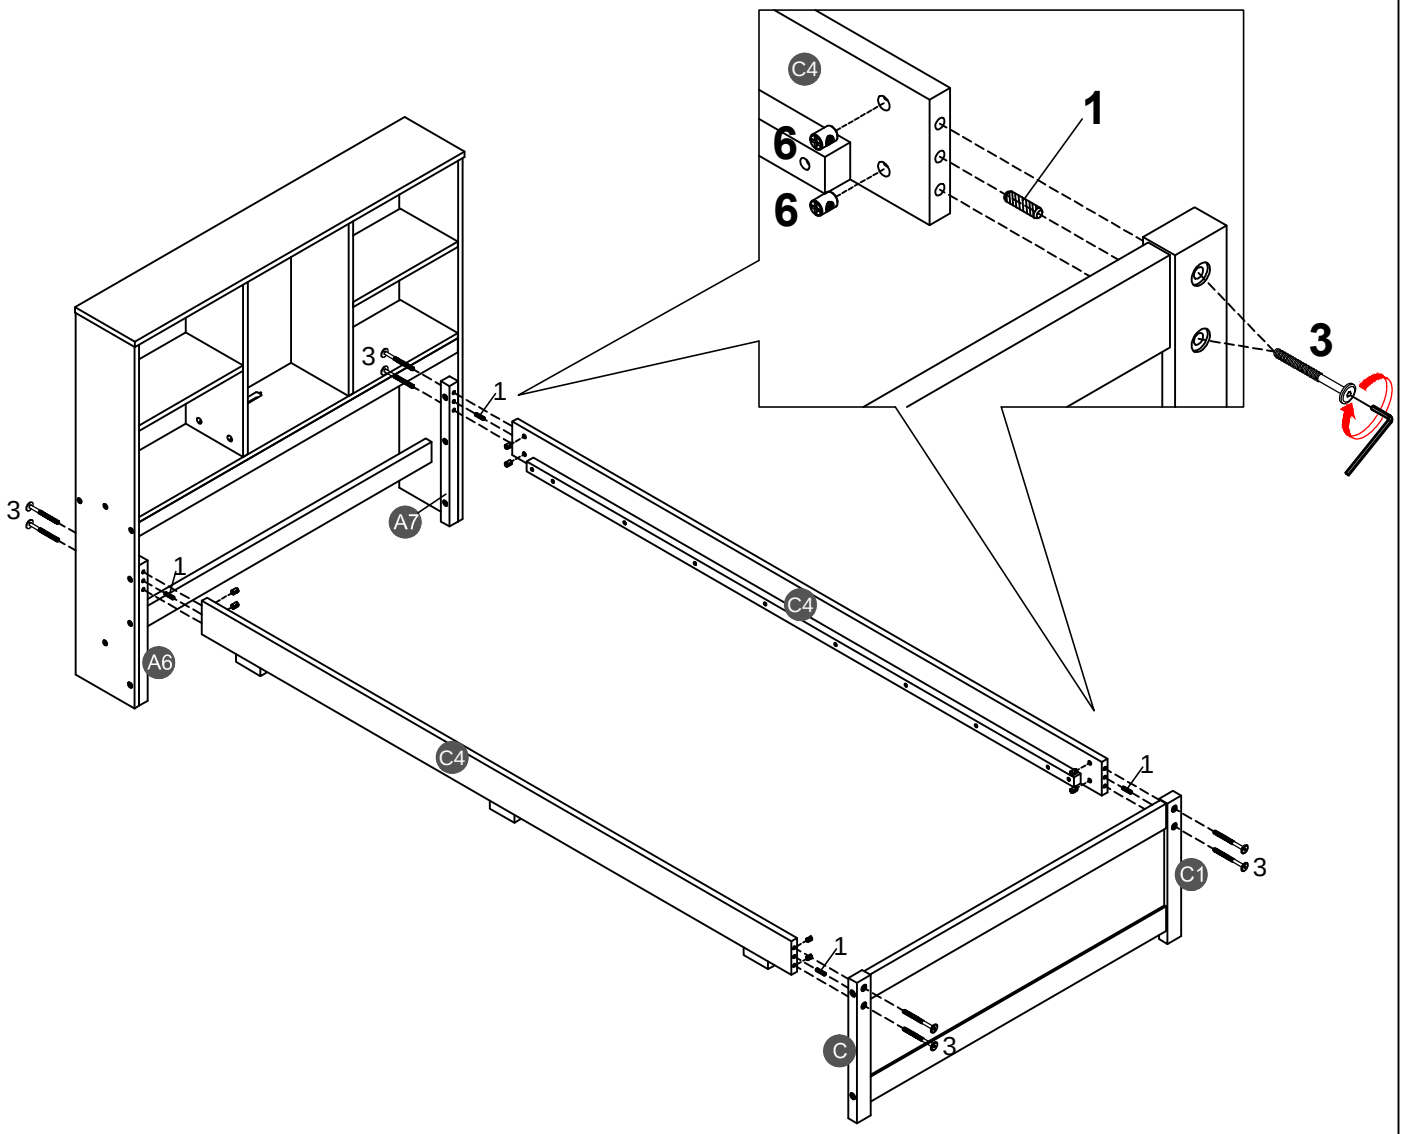

STEP 13:


10	12
	
2PCS	1PC

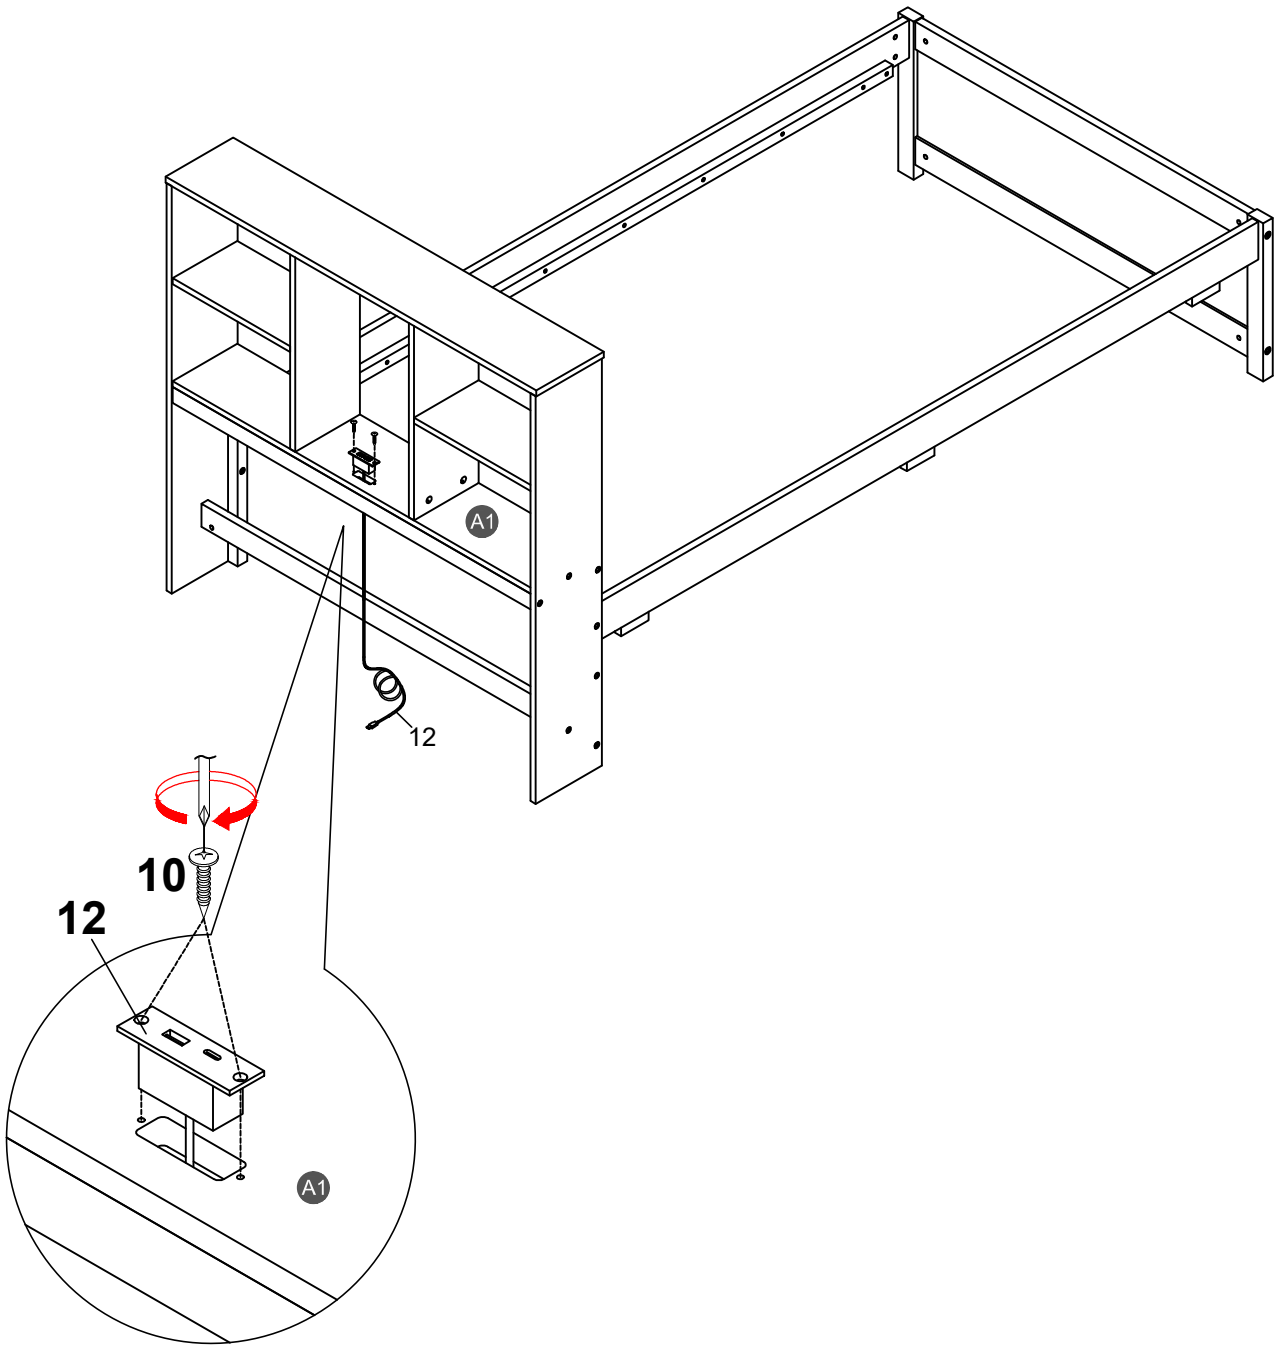


STEP 14:


10

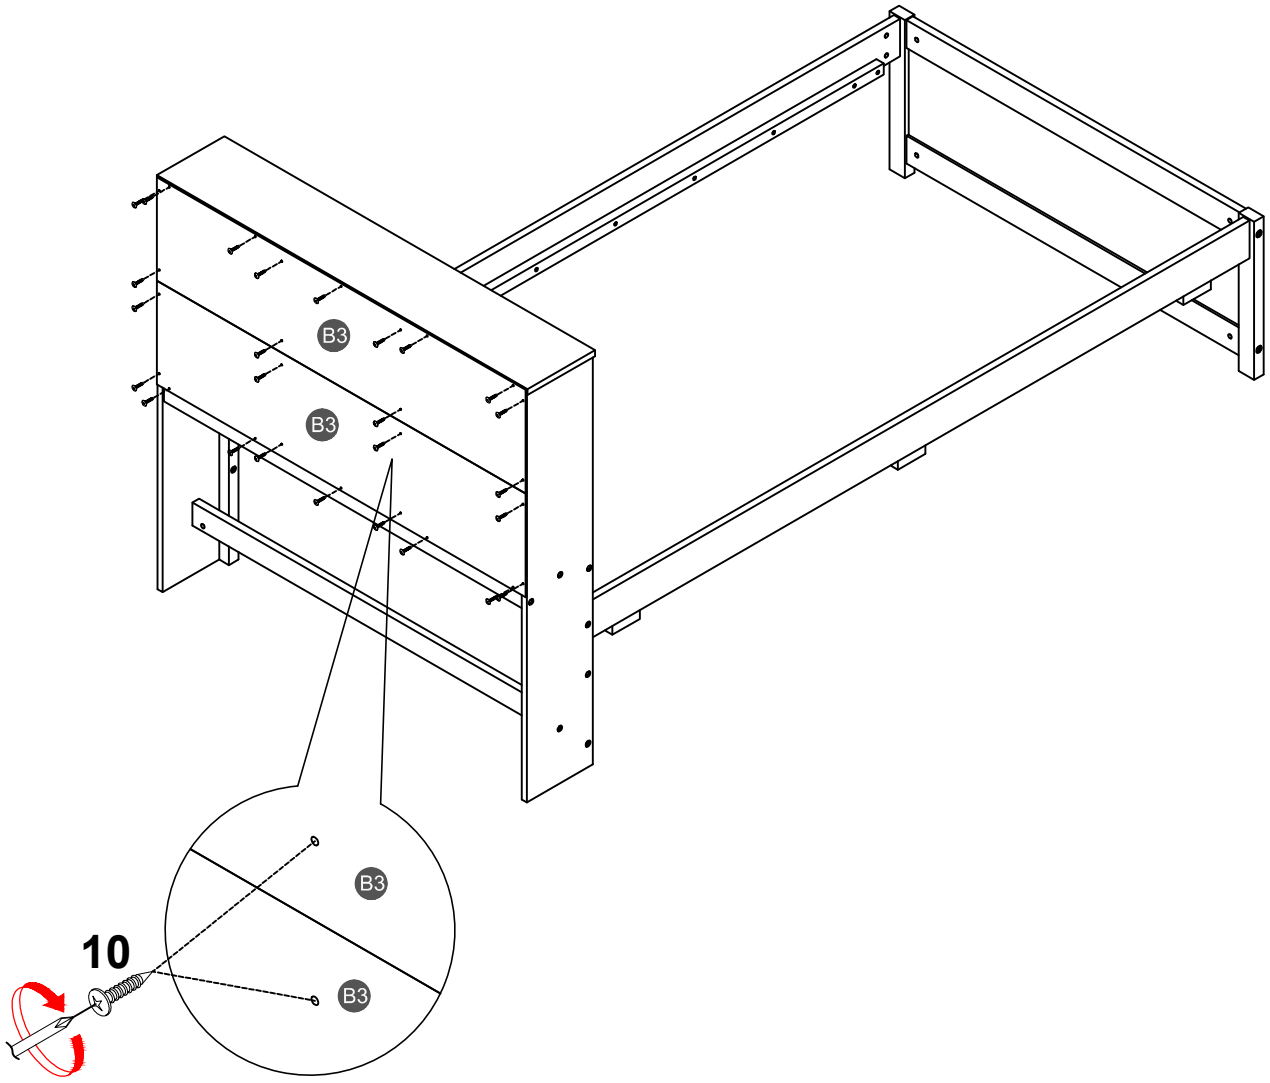
26PCS



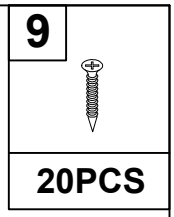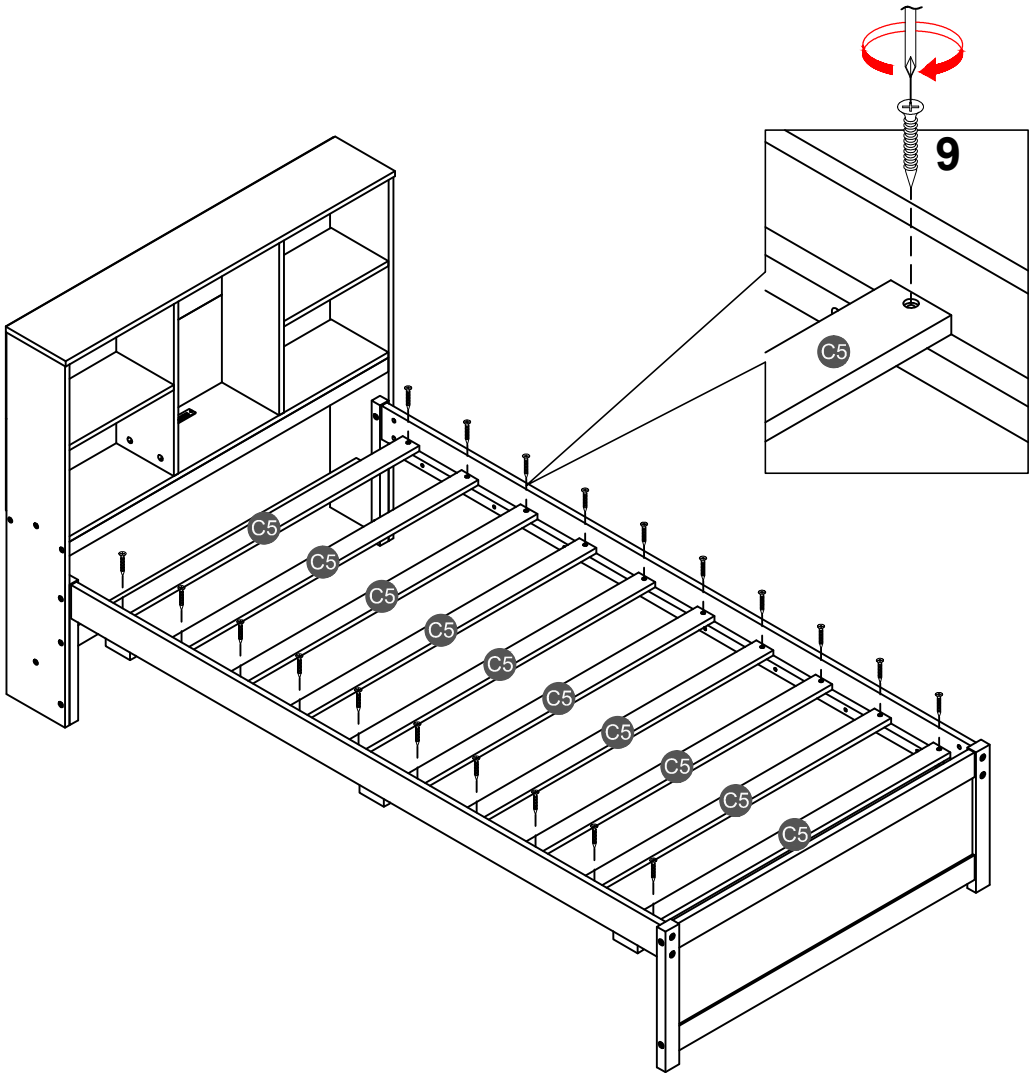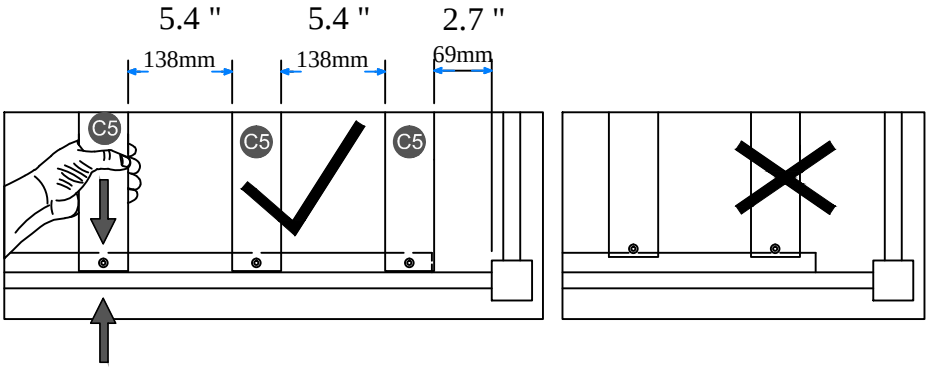STEP 15:








NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

STEP 16:


1	4	6
8PCS	4PCS	4PCS

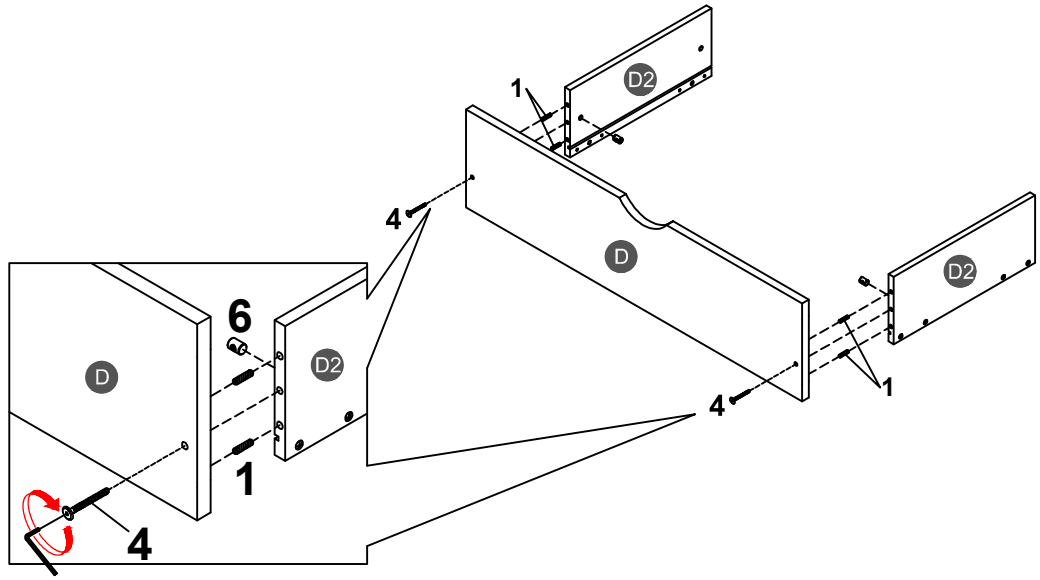

2pcs


STEP 17:

1	4	6
16PCS	4PCS	4PCS

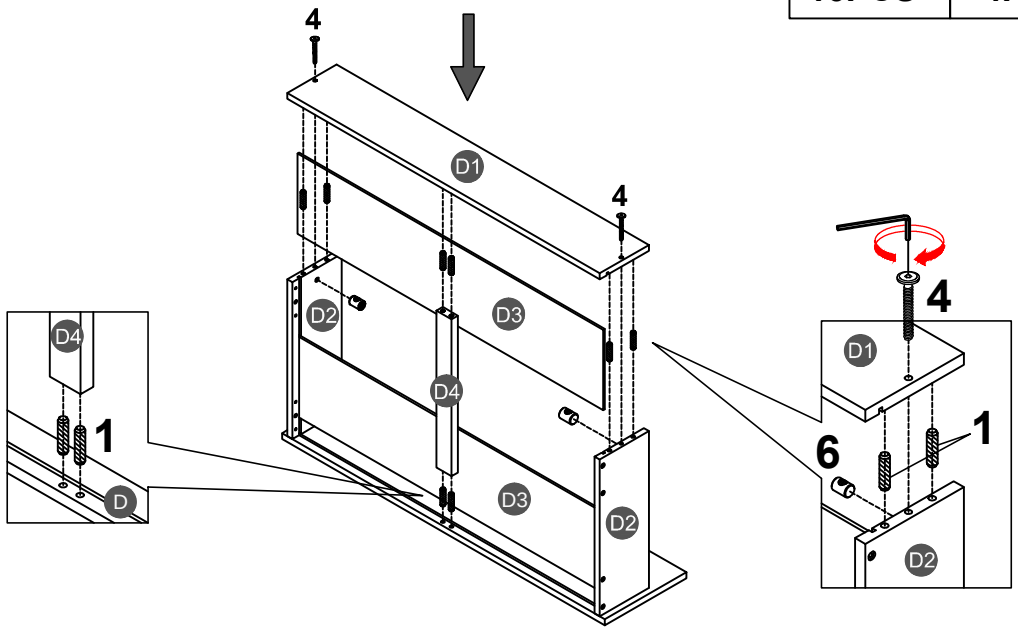


2pcs

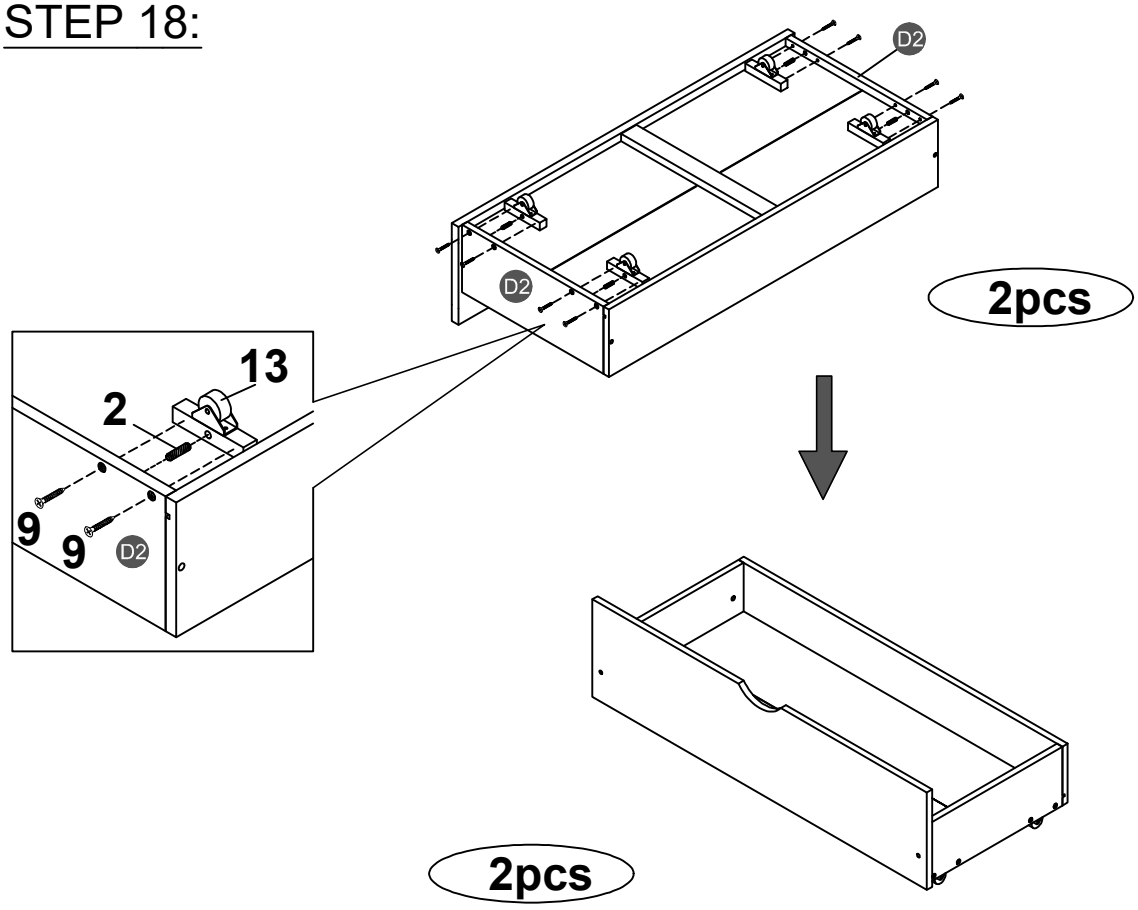STEP 18:



2	8PCS
9	16PCS
13	8PCS

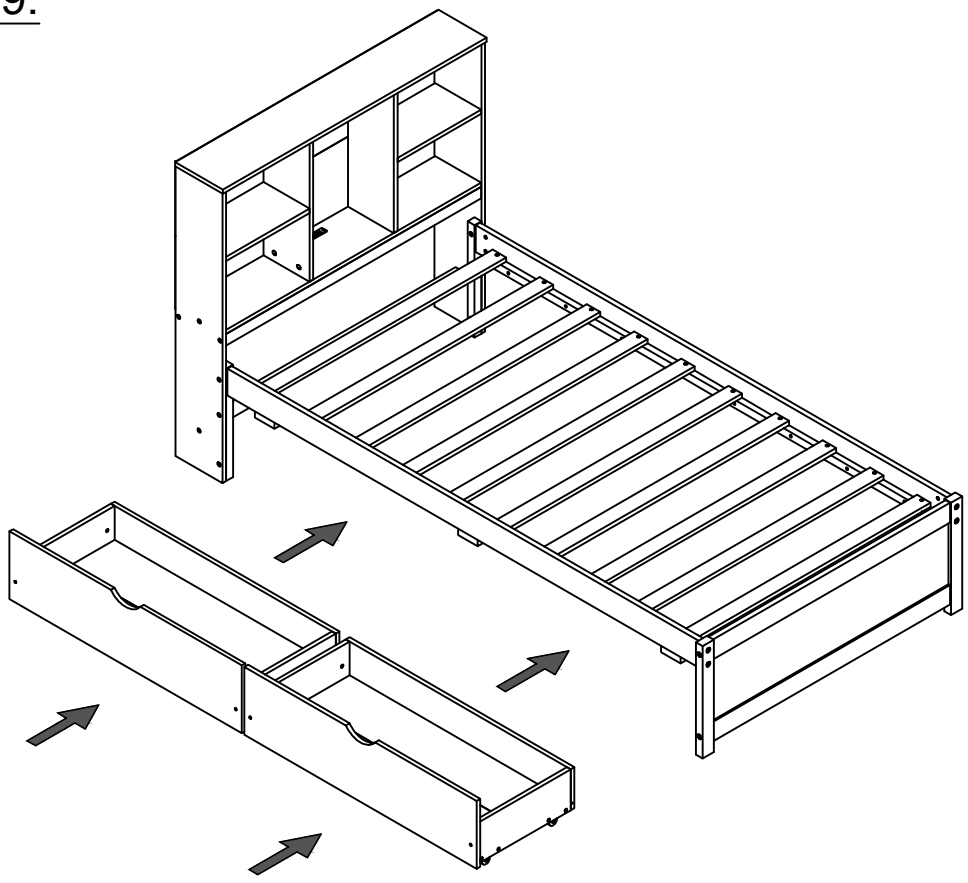STEP 19:



Push drawer under the bottom of Bed.

