ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DPC03	NAME: Vilko Pendant
MATERIAL TYPE: Iron, Alabaster	FINISH: English Bronze/White
SOCKET TYPE: Integrated LED	SOCKET QTY: 1
BULB WATTAGE: 4W LED/3000K	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 10LBS

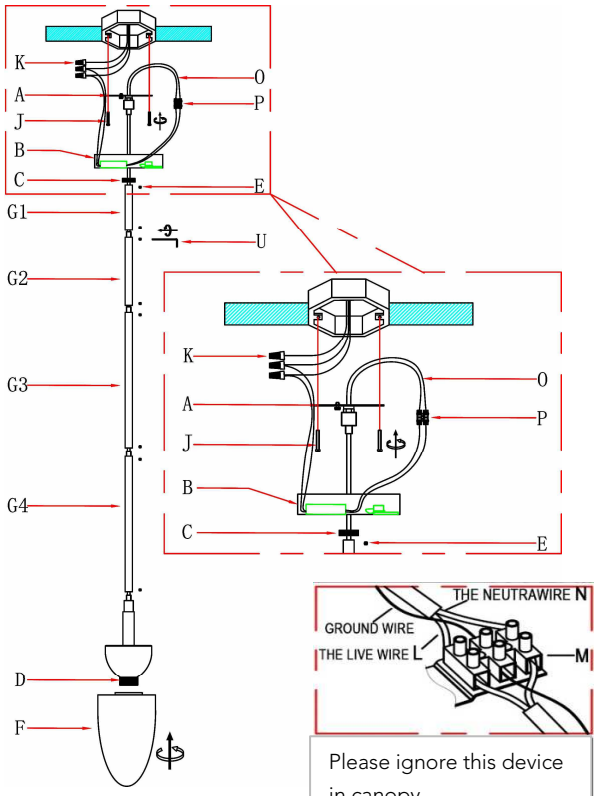

Please ignore this device in canopy

PARTS INCLUDED:

A MOUNTING PLATE	1PC	F ALABASTER SHADE	1PC
B CANOPY	1PC	G1,G2,G3,G4 ROD	4 PCS
C COLLAR LOOP	1 PC	P 2-WIRE TERMINAL	1 PC
D LAMP BODY	1PC	O POWER WIRE	1 PC
E HEX SCREW	8 PCS		

HARDWARE INCLUDED:

J Mounting Screws	S Allen Wrench
K Plastic Wire Connector	Green Ground Screw

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Pass the power wire(o) through the rod (g4),(g3),(g2)&(g1),screw the rod(g4) to lamp body(d) till tight, repeat the same operation on the rod(g3),(g2) vand rod(g1).when you connect the rods, loosen the small hex screws(e) in the side hole first then tighten with Allen wrench(u) after all rods are connected. Be sure all the hexangular screws are tight enough.
4. Put the collar loop(c) and canopy(b) into the rod (g1) in turn, then pass the power wire(l) through the mounting plate(a). Screw the rod(g1) to the nipple of mounting plate(a) till tight.
5. Pull the electrical cord of "j box" through the exit hole of the mounting plate(a).
6. Please pay special attention that you do not need to connect the wire connect device(m). It is used for the wire connection for euro-market.
7. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare wire is the grounded wire.
8. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
9. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (k) and wrap the connection with electrical tape. Be sure no strands are exposed.
10. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
11. Connect the lamp power wires(o) together with 2-wire terminal(p). Connecting the black wire to the positive electrodes and the white wire to the negative electrodes of the 2-wire terminal (p).
12. Gently tuck the wire connections(k) neatly into the junction box.
13. Attach the mounting plate (a) with nipple to the ceiling outlet box using the enclosed mounting screws (j).and tighten screws with a screwdriver.
14. Push collar loop (c) in canopy (b) and thread onto the nipple in mounting plate (a) by turning in a clockwise direction.
15. Screw the shade) to the lamp body(d) in a clockwise direction till tight
16. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.