# Assembly Instructions

## Storage Cabinets

| A | B | C1 | C2 | D | E1 | E2 | F1 |
|---|---|---|---|---|---|---|---|
|  |  |  |  |  |  |  | |
| x8 | x2 | x2 | x3 | x1 | Long<br>x6 | Long<br>x6 | Short<br>x9 |

| F2 | F3 | G | H | J | K | L | I |
|---|---|---|---|---|---|---|---|
| | | | | | | | |
| Short<br>x6 | Short<br>x6 | x2 | x6 | x18 | x66 | x24 | 4mm<br>x2 |

| II | III | N | | | | | |
|---|---|---|---|---|---|---|---|
|  |  | | | | | | |
| 5mm<br>x1 | x1 | x1 | | | | | |

| ① | ② | ③ | ④ | ⑤ | ⑥ | ⑦ | ⑧ | ⑨ |
|---|---|---|---|---|---|---|---|---|
|  |  | | | | | | | |
| x4 | x3 | x9 | x4 | M5*12<br>x24 | x2 | M4*25<br>x12 | M4*13<br>x4 | M3*30<br>x4 |

### Step 1

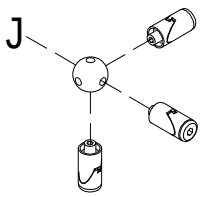


Note: Do not tighten the screws in this step

Kx3
x12

### Step 2

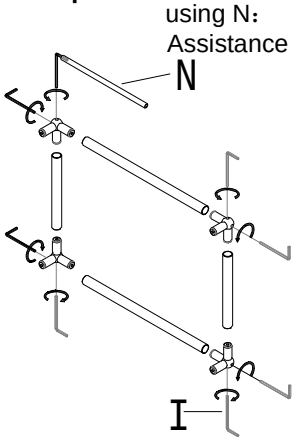


Rotate counterclockwise using I：4mm

F1x2
F3x2
x2

### Step 3

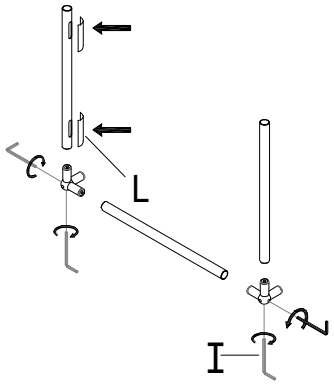


Attention: The hole position faces inward 80 °；Then use transparent film to cover the hole position

F1x1
F2x2
x2

### Step 4

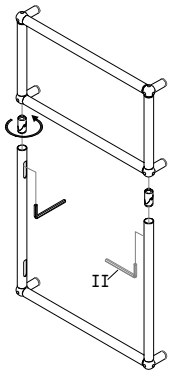


Rotate clockwise using II：5mm

Kx2
x2

## Step 5

Attention: The hole position of E is slightly below the horizontal line.
To lock the screws M5*12

Note: Be sure to tighten the screws here to make a seamless connection with the pipe.

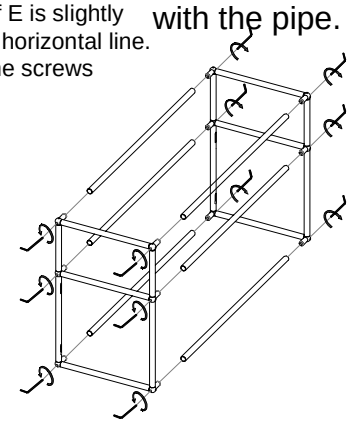

E1x6

## Step 6

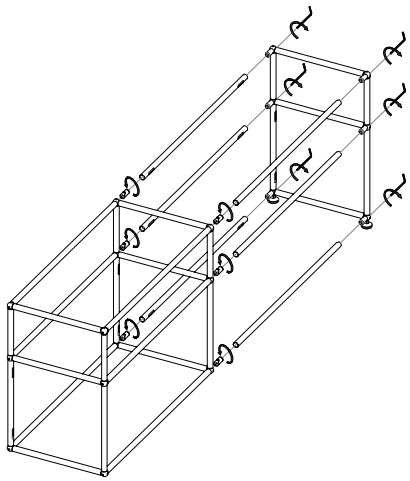

E2x6
Kx6

## Step 7

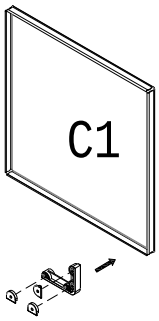


Only 3*③ are needed here
The remaining hole position is spare

②x1
③x3

## Step 8

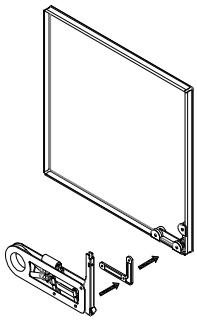

Align hole positions

①x1
④x1

## Step 9

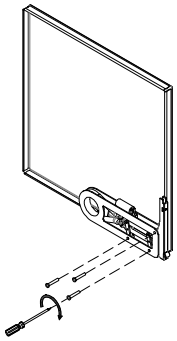

Only 3*⑦ are needed here

⑦x3

## Step 10

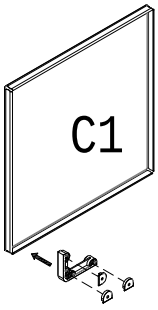


Same as the step 6
Pay attention to distinguishing left and right

②x1
③x3

## Step 11

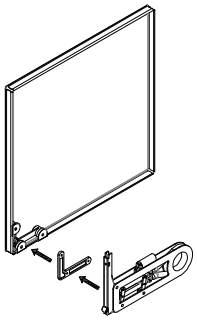

Same as the step 7

①x1
④x1

## Step12

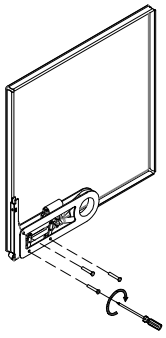

Same as the step 8

⑦x3

## Step 13

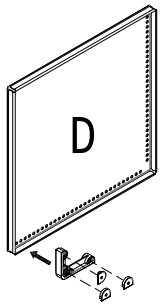


Same as the step 6
Pay attention to
distinguishing left and right

②x1
③x3

## Step 14

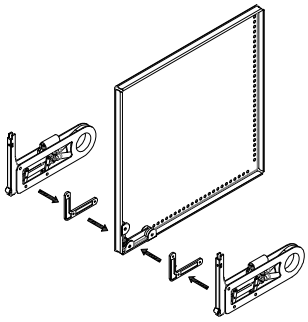

Same as the step 7

①x2
④x2

## Step 15

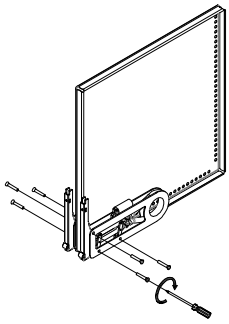

Same as the step 8

⑦x6

## Step 16

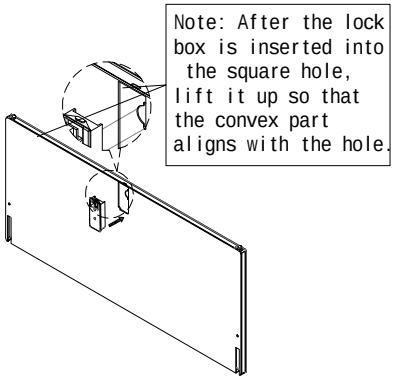


⑥x1
x2

## Step 17

keep the keyhole like "——"
Then screw on the screws

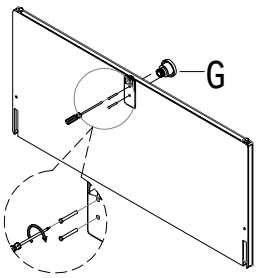


⑨x2
x2

## Step 18

Using transparent film
to cover the hole position

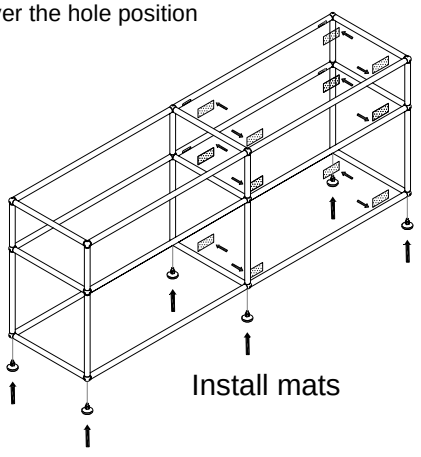


Hx6

## Step 19

Align the four corners
from top to bottom and
forcefully tap in and lock
the screws M5*12

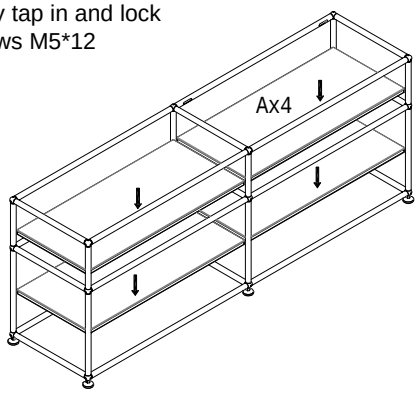

## Step 20

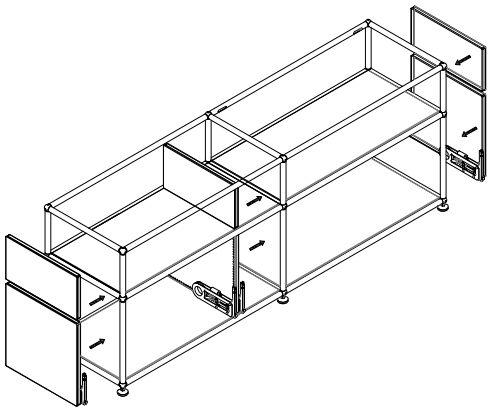

## Step 21

Align the four corners
from top to bottom and
forcefully tap in and lock
the screws M5*12

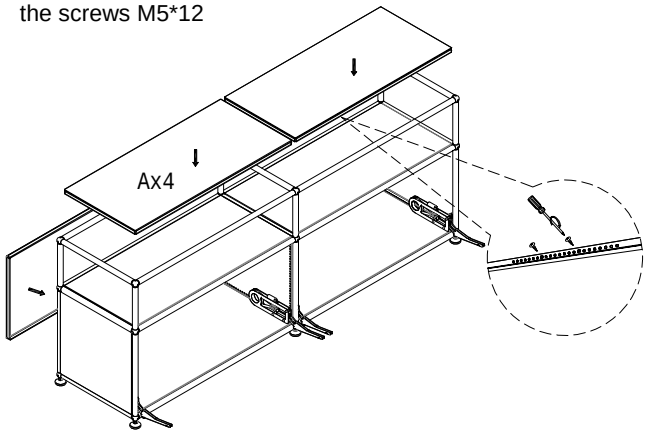


⑤ x24

## Step 22

Insert door panel and lock
the screws M4*14

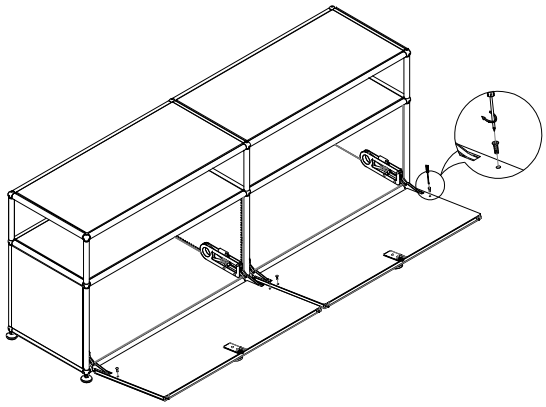

⑧ x4
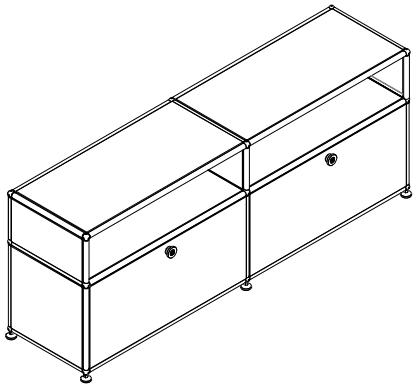
## Finish