Assembly

✉ sale_services@outlook.com

Label	Picture	Description
A1	x1	Ottoman cushion
A2	x1	Chair Back Rest
B1	x1	Chair Base
B2	x1	Chair Seat
C1	x1	Metal Leg
D1	x1 Left	Steel Bracket
D2	x1 Right	Steel Bracket
E	x1	Chair Base
F	x1	Metal Leg
O+H	x1 x1	Screws -M8*16mm +ChairWasher
I	x1 x1	Hardware mats
G1	x1 Left	Chair Arm Rest
G2	x1 Right	Chair Arm Rest
M	x1	Fastener
O+R	x8 x1	Screws -M8*16mm +Allen Kye
P+T	x4 x4	Screw -M6*25mm +ChairWasher
Q	x4	Screw -M6*25mm

01
Assemble accessory M(Fastener) into part F(FIVE FOOT BASE).



02
Insert accessory E(Base hold) into the base of part F-M. Press until fully engaged.



03
Flip accessories E-F over.Use parts O(M8*16)and H to securely fasten F and E together.



04
Connect the E-F component with part B2(Seat part).Flip B2 and align it with the screw holes,then find the short and long sides of the seat back.

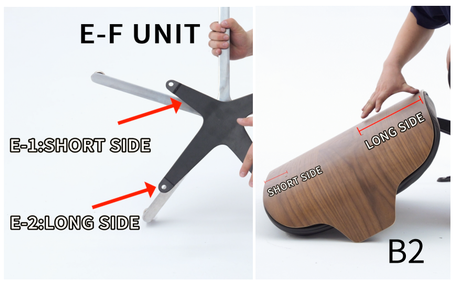

05
Put T(Washer)above each screw hole. Use screw P(M6*25)to secure the E-F metal foot in place.

*Remark :Short to short,Long to Long



06
Use screw O(M8*16) to attach A2 and armrest brackets D1&D2. Connect part A2 with part D2.

*Remark :Keep D1/D2 hold enoughdon’t tightened in this stage

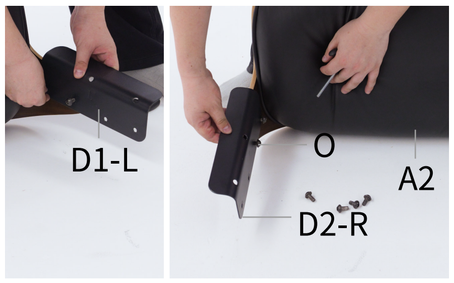

07
Attach the A2-D component to the assembled B2-E-F unit.

*Remark：keep A2&B2-E-F hold enough don't tightened in this stage

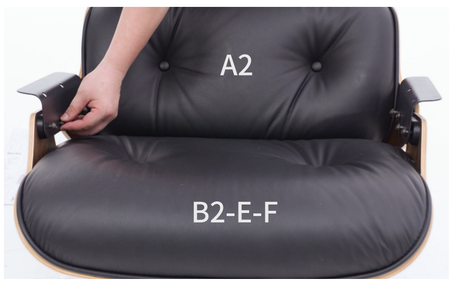

08
Lift A2 upward and sequentially tighten the screws to secure it in place.

*Remark：Maintain the upright position of the backrest



09
Fasten G1&G2 using Q (M6*25).

*Distinguish the left and right armrests by orienting them with thestitching facing downwards



10
Press B&C until fully engaged.



11
Assemble the B-C unit componentand secure it with the A1 part.Put T above each screw hole.Use screw P to secure the BC with A1 metal foot in place.



12
If the seat wobbles,adjust the J or Kfoot glides by rotating them until a stable position is achieved.



Note

