EXAMPLE

SHELF SHOWN WITH FRONT ONLY RAIL KIT
(01TRADGR36FR-1)

BEFORE

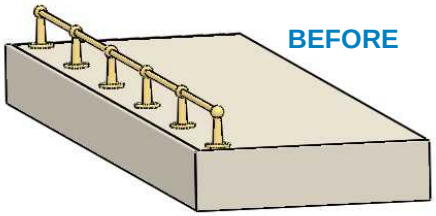

SHELF SHOWN AFTER ADDING 12" DEPTH SHELF KIT TO THE FRONT ONLY KIT
(01TRADGR36FR-1) & (01SHELFSIDE12-1)

AFTER

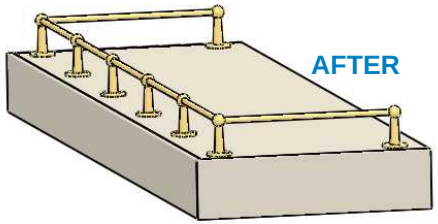

USE THIS KIT IN CONJUNCTION WITH THE FRONT RAIL ONLY KITS.

1. REPLACE THE ENDS FROM THE FRONT RAIL KIT WITH THE TWO CORNER PIECES FROM THIS KIT

2. MOVE THE END PIECES FROM THE FRONT ONLY KIT TO THE BACK CORNERS OF THE SHELF USING THE 2 INCLUDED RODS TO FINISH THE ENDS OF THE SHELF.

SHOWING ONLY WHAT IS IN THIS KIT.

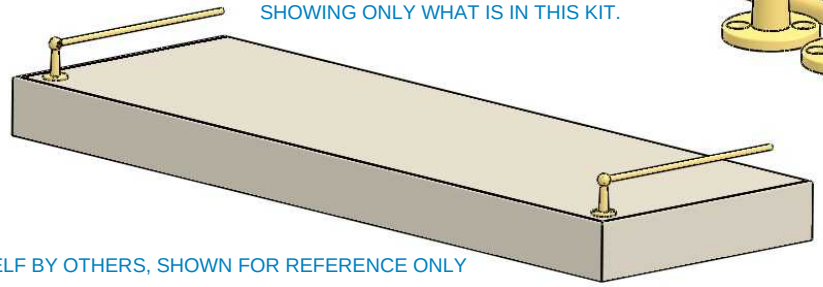

SHELF BY OTHERS, SHOWN FOR REFERENCE ONLY

IN THIS KIT:
(01SHLFSIDE12-1)
2) CORNERS (01HC9002-1)
2) RODS (01HC900012-12)
SCREWS

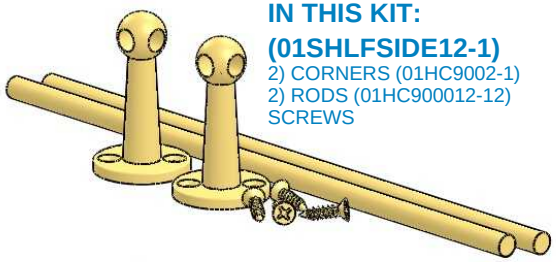

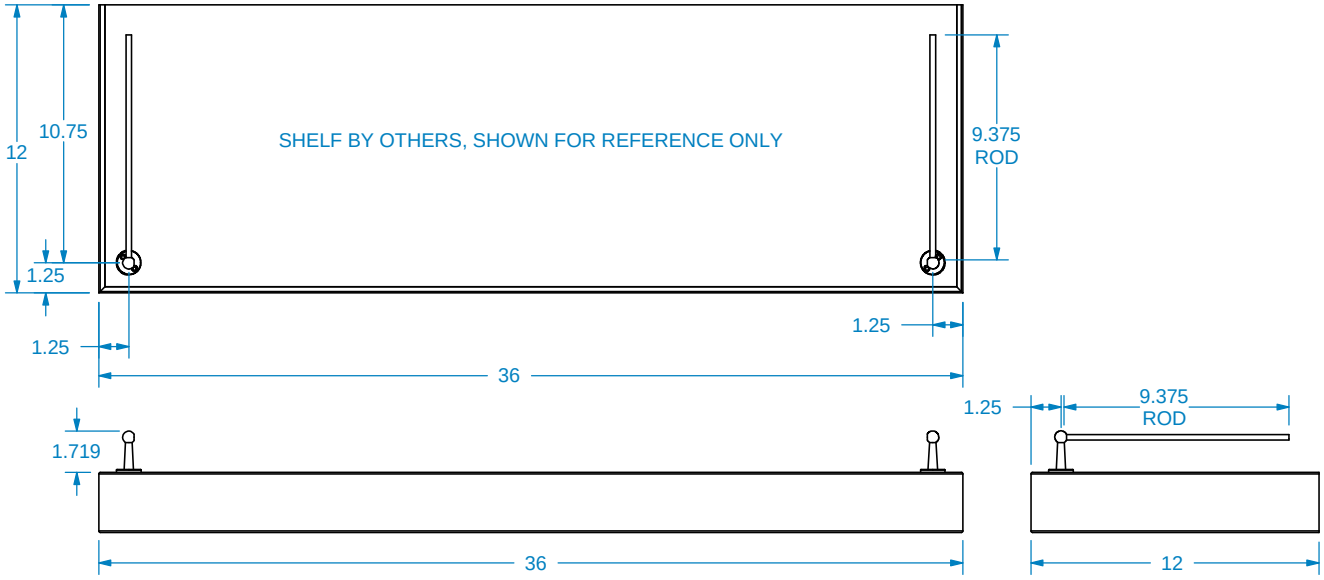

REVISION HISTORY		
REV	REV DATE	DESCRIPTION

TOLERANCES	
WIDTH	± .03125"
THICKNESS	± .03125"
LENGTH	± .0625"
ANGULAR	± x.x°
PROFILE	± x.xxx"

Use General Tolerances Unless Noted

MATERIALS AND FINISHES

PLEASE VISIT OUR WEBSITE FOR A COMPLETE LIST.
www.brownwoodinc.com
1-800-328-5858

NOTES:

Do not scale. Use dimensions only. All dimensions are in inches unless noted

TITLE: 12" DEPTH SHELF KIT

NOMINAL SIZE

DWG #: **01SHLFSIDE12-1** REV:

DATE: 5/4/2026 SCALE: 1:1.5

PROPRIETARY AND CONFIDENTIAL THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF BROWN WOOD INC. AND ARE ISSUED IN STRICT CONFIDENCE AND SHALL NOT BE REPRODUCED OR COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS WITHOUT PRIOR WRITTEN PERMISSION.