STEP3 Align and install the backrest onto the insert plates as shown in the figure.

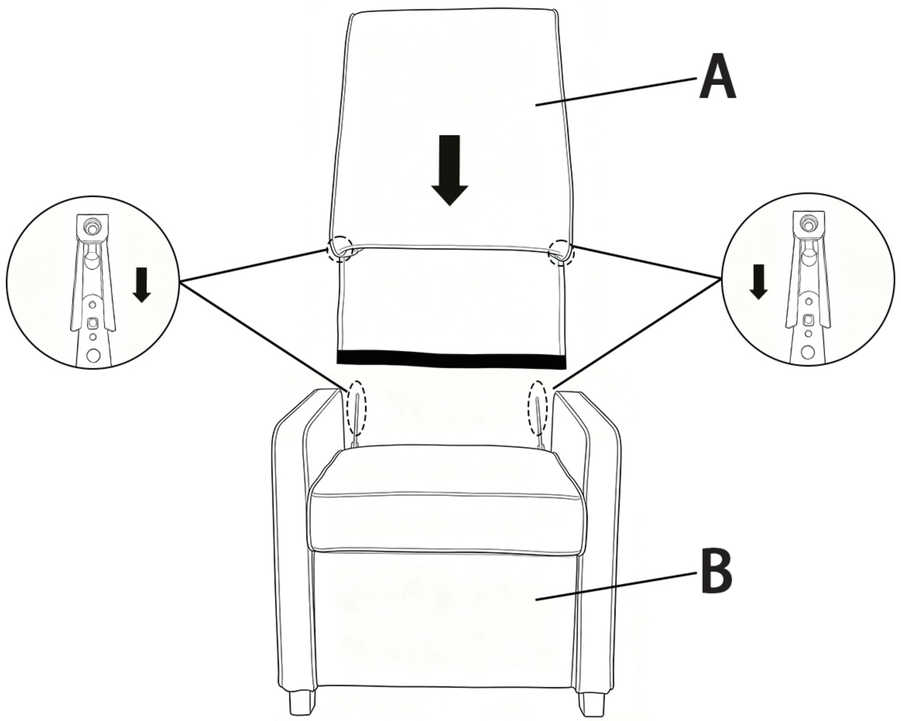

STEP4 As shown in the figure, sit on the assembled chair and lean back firmly to unfold the chair.

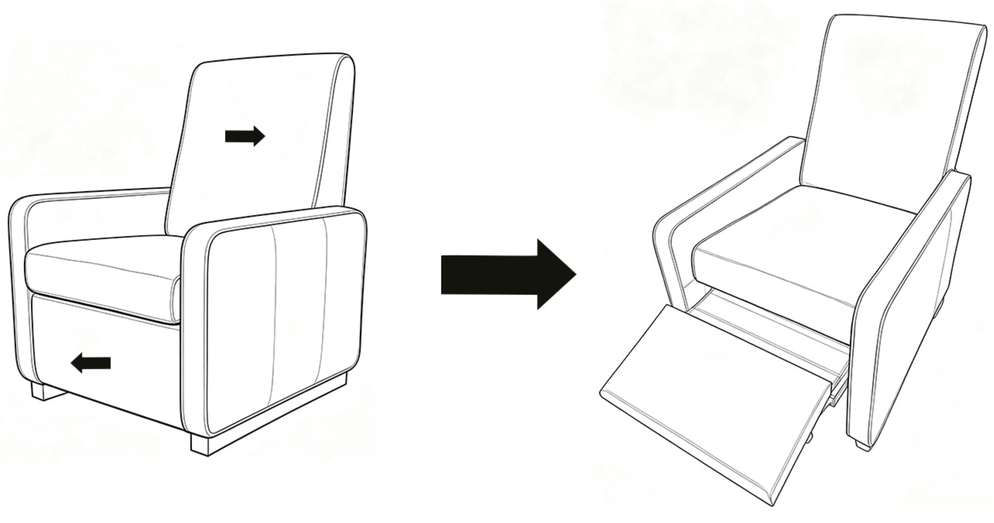

Push Back Recliner

Friendly Reminders:

1. Patience with cushions – The cushions are vacuum-sealed and may arrive wrinkled. Smooth creases with an iron, or fluff up seat & back cushions by gentle tapping.

2.Please check all parts first before unpacking & assembly. Verify complete & undamaged accessories prior to installation.

3. Need help? – If any parts are missing or damaged (please take photos for reference), feel free to contact us. Our support team will assist you promptly!

Thank you for choosing us – your comfort zone starts here!

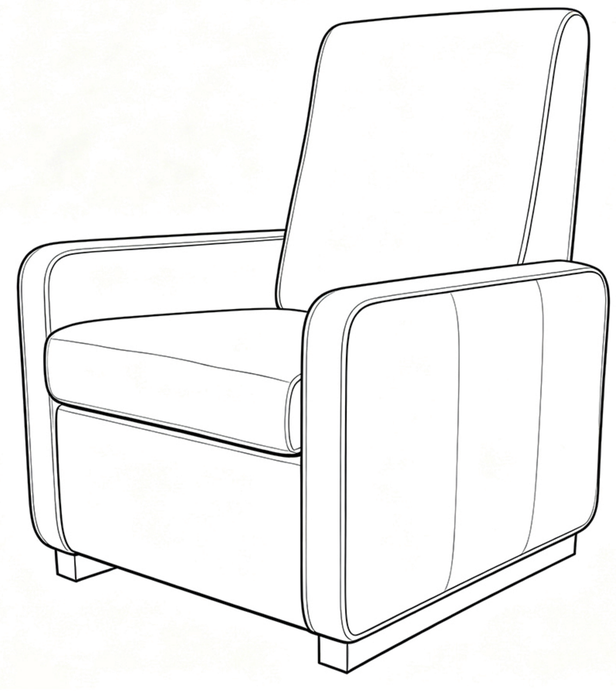

PARTSLIST

Backrest  **AX1pc**	**Frame Base**  **BX1pc**	**Wooden Legs**  **CX2pc**	

HARDWARE

Screws M6*50mm  **DX4pc**	**washer D10*22*1.5**  **EX4pc**	**Allen Key**  **FX1pc**	**Floor Pads**  **GX4pc**

STEP 1 Turn over Seat Frame B, then install the wooden legs as shown in the figure.

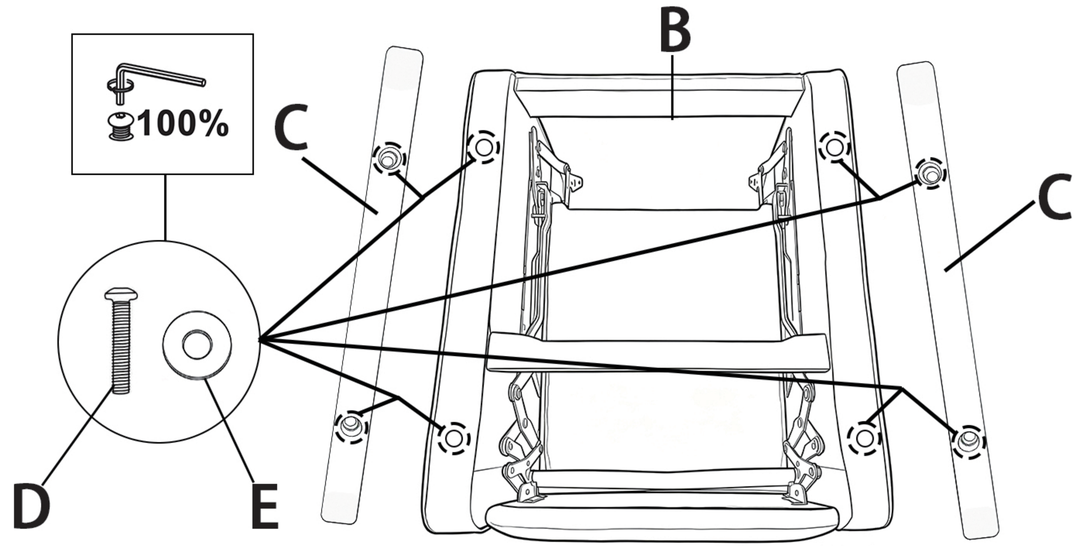

STEP 2 Attach four foot pads as shown in the figure.

