3. Part List (Loveseat 6034M1)

● Notice

• Use MCombo parts only for all replacements.

BOX 1

A1 Left Base x 1

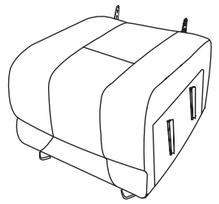

BOX 2

A2 Right Base x 1

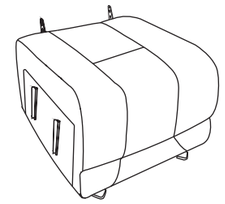

Box 3

C1 Left Backrest x 1

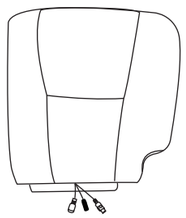

C2 Right Backrest x 1

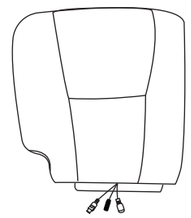

(Part box 1)

D Massage Remote x2
6160-RC-MA



E Seat Iron Sheet x 2



F Wrench x1



G1 Bolt & Washer & Nut x 8



H Power Adapter x 2
6160-DD-APA



I Base Feet x4



BOX DR

B1 left Armrest x 1

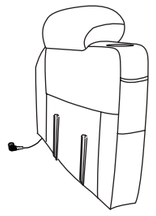

B2 Right Armrest x 1

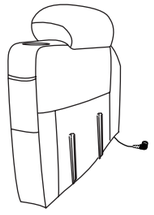

4. Assembly Steps (Loveseat) 6034M1

Package Quantity	4	6160-6034-1
		6160-6034-2
		6160-6034-3
		6160-6034-DR

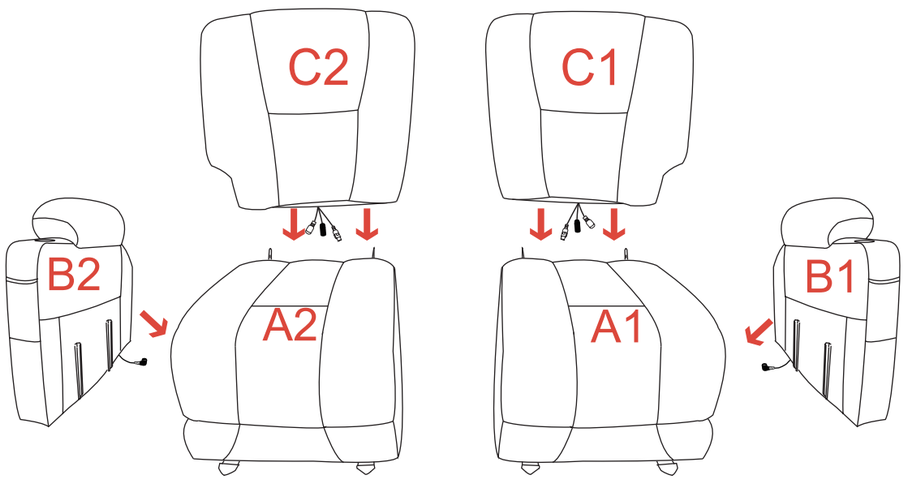

D	E	F	G1	H	I
x2	x2	x1	x8	x2	x4

Step1 - Bases Assembly

1. Please use seat iron sheets (Part #E) to connect the seat bases (Part #A1, and #A2) .
2. **Do not tighten the bolts until all the bases are connected and properly adjusted.**

Note: **Please connect the left base first.**

1

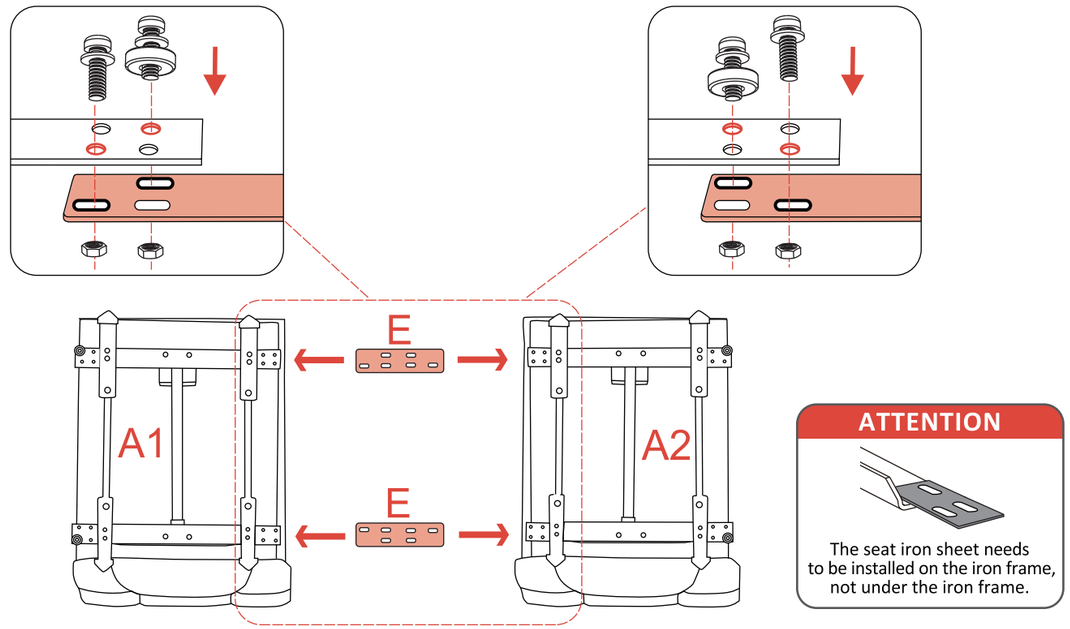

ATTENTION

The seat iron sheet needs to be installed on the iron frame, not under the iron frame.

G1 X 8 X 4 X 4

I X 4

2

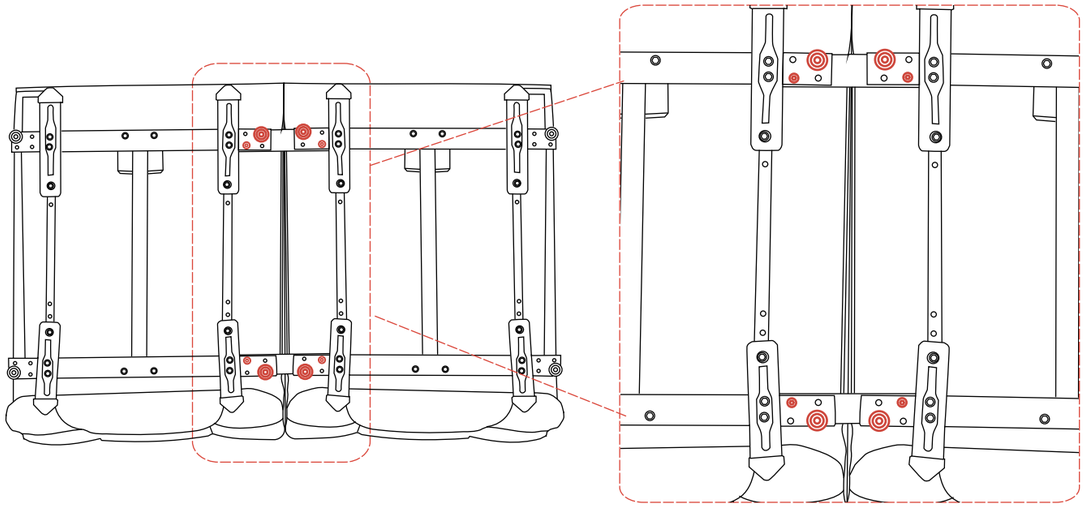

Step2 - Armrests Assembly

1. Align the brackets of armrest at the clips of the base (Figure).
2. Push firmly the brackets into the the base. Listen for a “click" on each side to ensure the armrest is locked in properly.

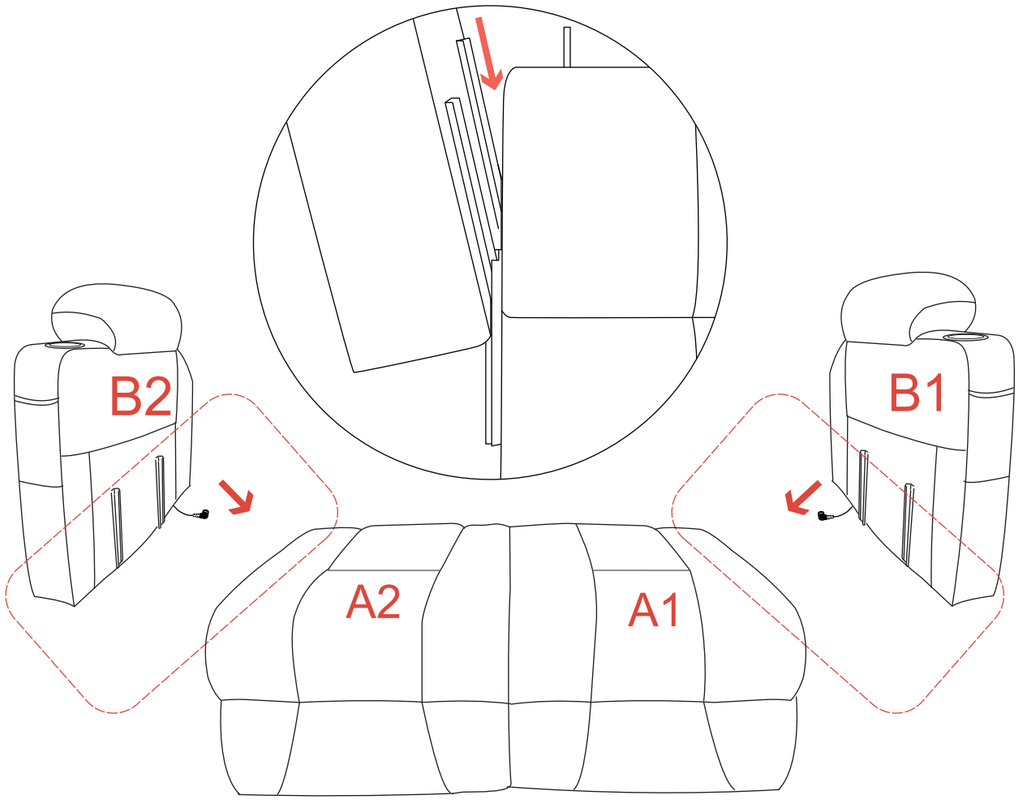

Step3 - Backrests Assembly

1. Align the brackets of the backrest at the clips of seat-back (Figure).
2. Push firmly the brackets into the seat-back. Listen for a “click” on each side to ensure the backrest is locked in properly.

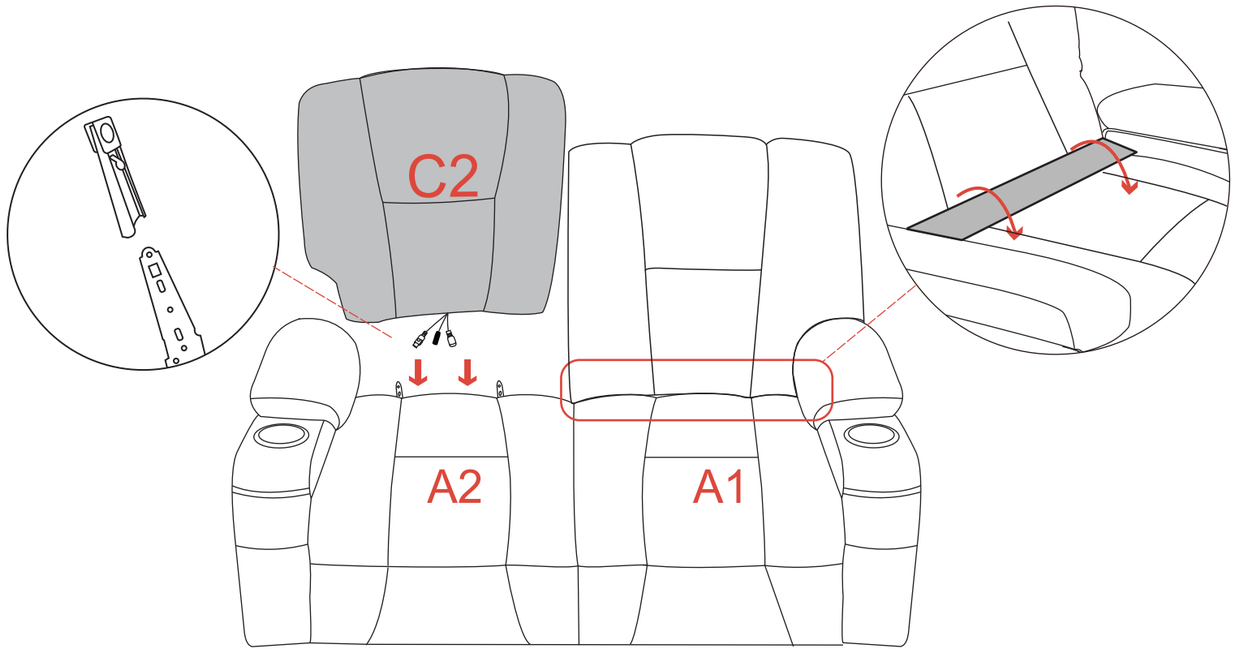

ATTENTION

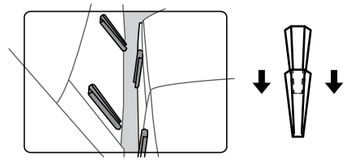

Ensure the two connections on each armrest are all inserted onto the seat tightly.

Paste Velcro

1.Place the chair in the reclined position.
2.Pull out the Velcro in the gap between the base and the backrest and paste it well.

ATTENTION

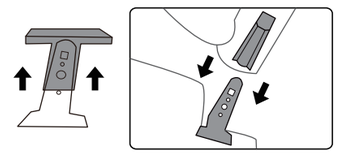

Remove the plastic cap before assembling backrest.

Step4 - Product Connections

1. No.① and No.②wires from the backrest and seat base with same color connect together.
2. No.③wire from the back connects to the massage remote.
3. The USB socket in the bottom of the recliner armrest.

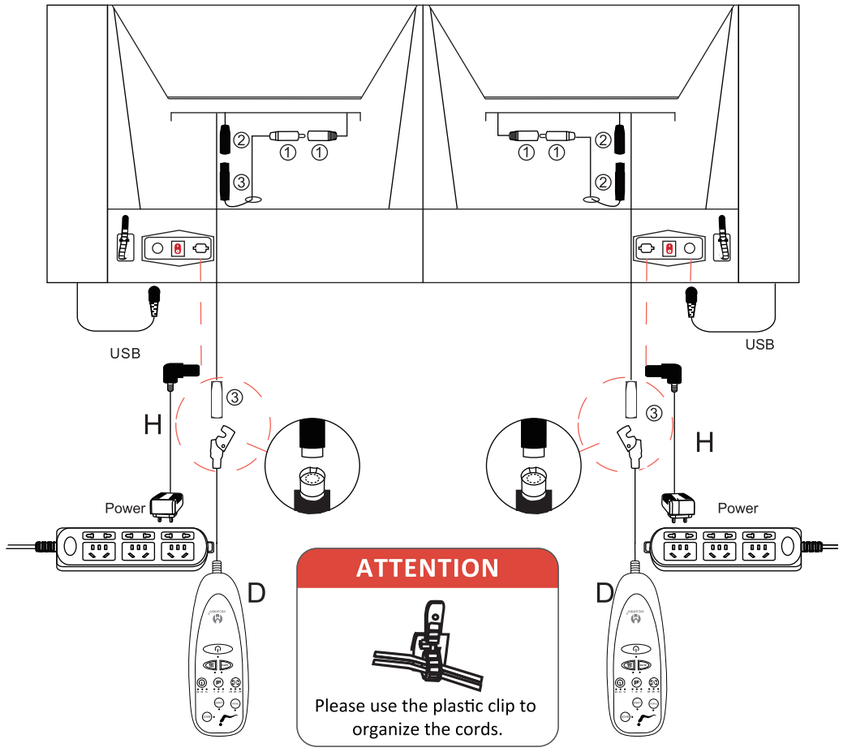

Step5 - Final Check

1. Make sure both metal brackets on each armrest are mounted on the base.
(There are two metal brackets on each side of the base, it looks like assembly is finished when you insert armrest into only one bracket instead of two, however all pressure will apply to one bracket, that is one likely reason that the armrest falls apart from the seat.)
2. Make sure the backrest inserts are locked to the base.
(Pull up the backrest to check if it is locked in place.)
3. Make sure all wires are connected tightly.
4. Make sure all wires are not placed at the bottom of the rack and will not be pressed by frame.
(If the wire is pressed by the frame, the wire will be broken by the frame and the sofa will stop working.)

5. Part List (Loveseat with Console) 6034M2

Notice

• Use MCombo parts only for all replacements.

BOX 1	BOX 2
A1 Left Base x 1 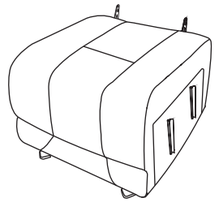	**A2** Right Base x 1 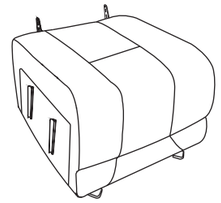

Box 3 (Part box 1)			
C1 Left Backrest x 1 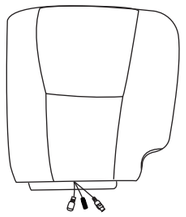	**C2** Right Backrest x 1 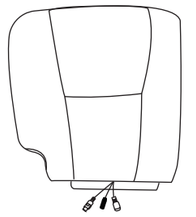	**D** Massage Remote x2 6160-RC-MA 	**E** Seat Iron Sheet x 2 
		F Wrench x1 	**G1** Bolt & Washer & Nut x 8 
		H Power Adapter x 2 6160-DD-APA 	**I** Base Feet x4 

BOX DR	
B1 left Armrest x 1 	**B2** Right Armrest x 1 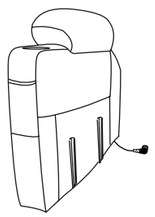

BOX CA

C3 Storage Console x 1



A3 Console Backrest x 1



J Seat Iron Sheet x 2



Part box 2

G2 Bolt & Washer x 4



I Base Feet x4



F Wrench x1



K Plastic Cover Screws x2



6. Assembly Steps(Loveseat with Console)6034M2

Package Quantity	5	6160-6034-1
		6160-6034-2
		6160-6034-3
		6160-6034-DR
		6160-6034-CA

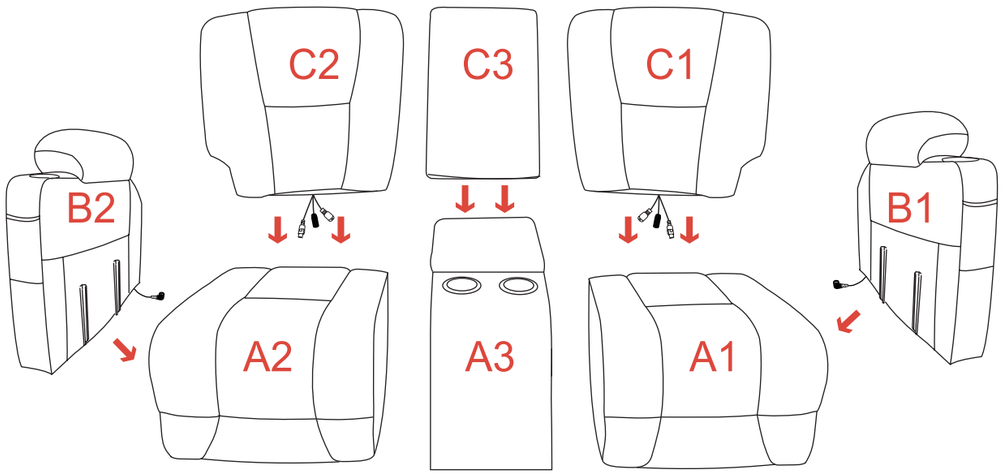

D	E	G1	H	I	J	G2	F	K
 x2	 x2	 x8	 x2	 x8	 x2	 x4	 x1	 x2

Step1 - Bases Assembly

1. Please use seat iron sheets (Part #E) to connect the seat bases (Part #A1, and #A2) .
2. **Do not tighten the bolts until all the bases are connected and properly adjusted.**

Note: **Please connect the left base first.**

1

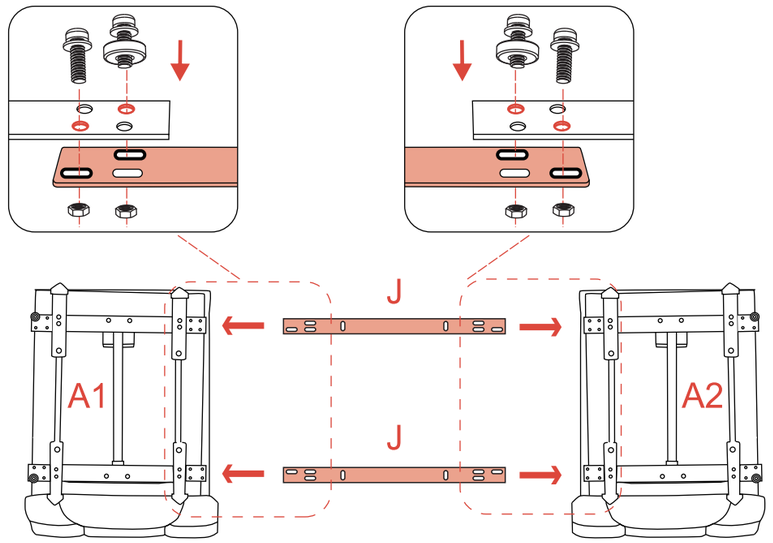

ATTENTION



The seat iron sheet
needs to be installed on the iron frame,
not under the iron frame.

G1 X 8

I X 4



2

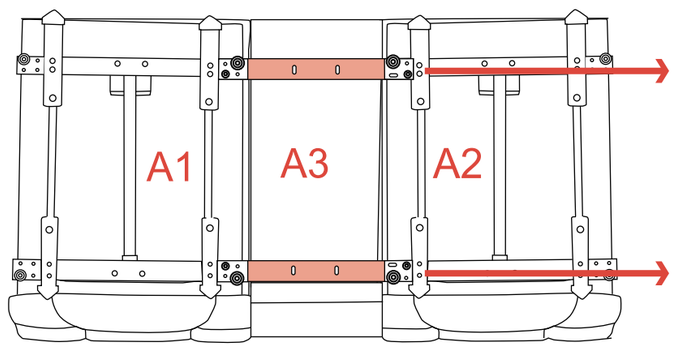

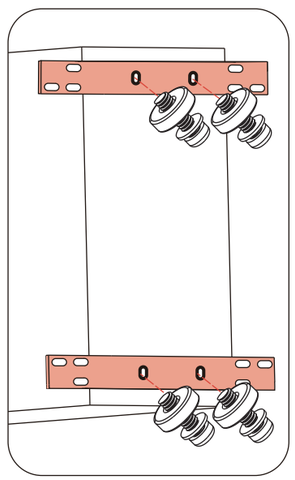

G2 X 4

I X 4



3

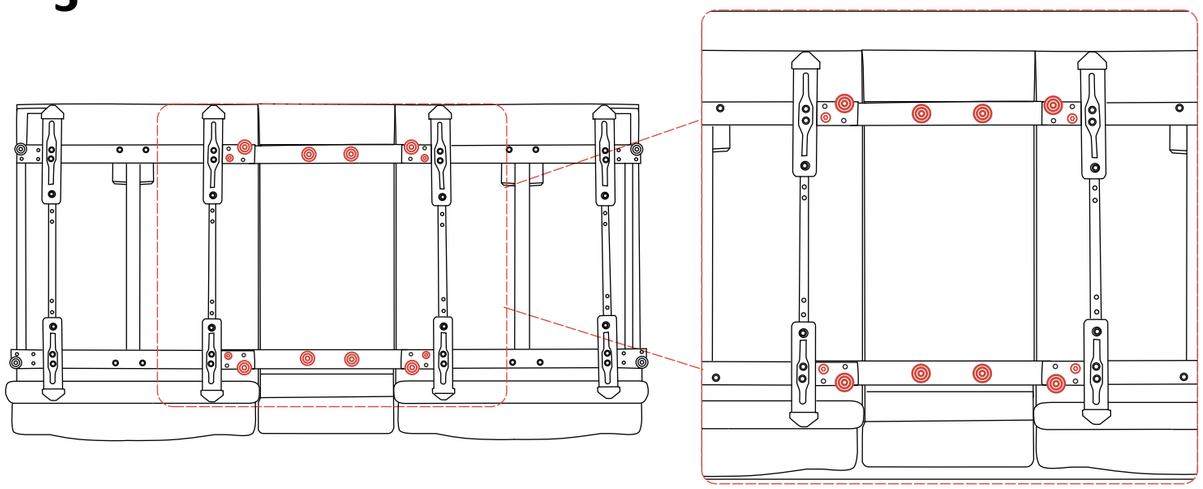

Step2 - Console Back Assembly

1. Please connect the storage console (Part #A3) to the console backrest (Part #B3)

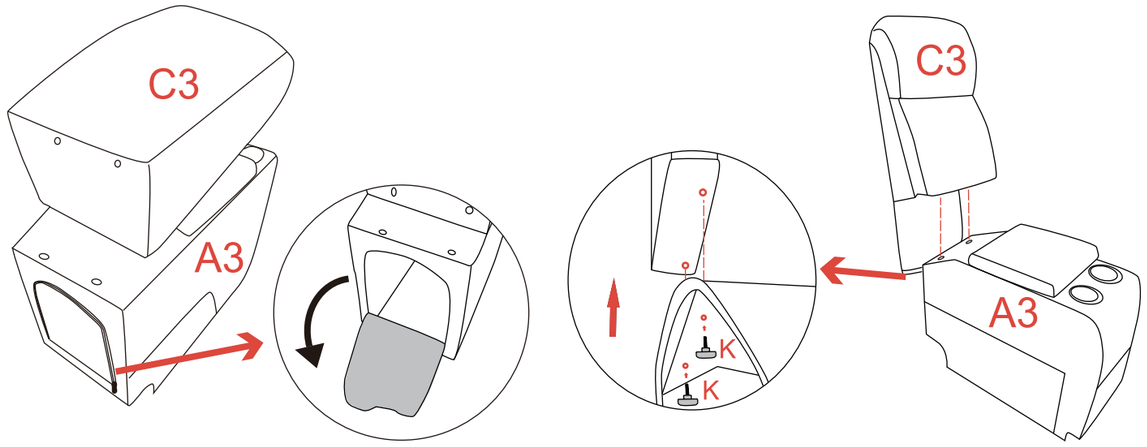

ATTENTION



Unzip the zipper behind the console, then put the console backrest on the console and align the holes.

ATTENTION

Fix them with two plastic cover screws. This step does not require tools, but you need to lighten the screws longer because the screw holes are relatively deep.

Step3 - Armrests Assembly

1. Align the brackets of armrest at the clips of the base (Figure).
2. Push firmly the brackets into the the base. Listen for a “click" on each side to ensure the armrest is locked in properly.

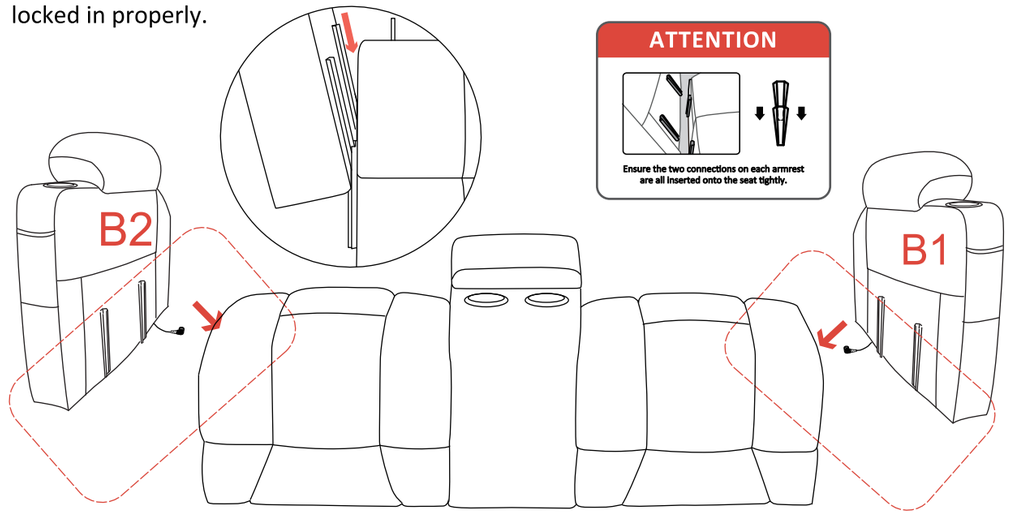

Step4 - Backrests Assembly

1. Align the brackets of the backrest at the clips of seat-back (Figure).
2. Push firmly the brackets into the seat-back. Listen for a “click” on each side to ensure the backrest is locked in properly.

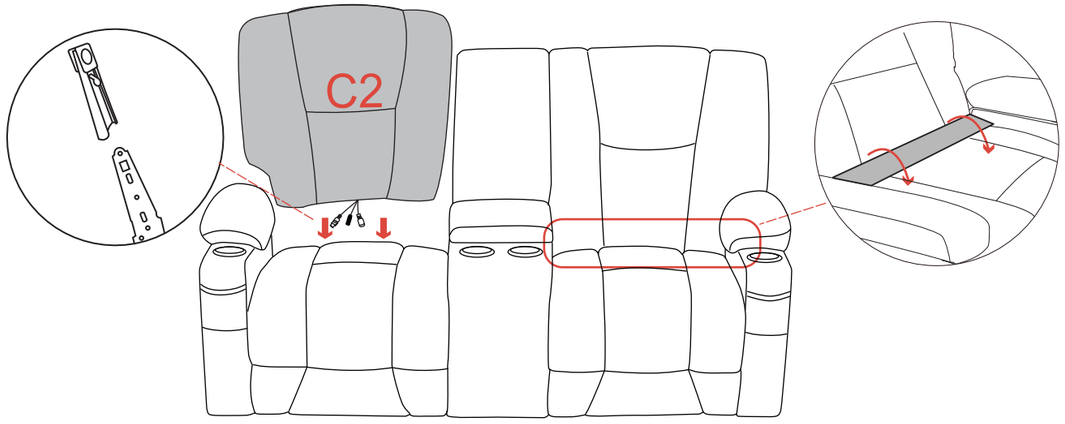

Paste Velcro

1.Place the chair in the reclined position.
2.Pull out the Velcro in the gap between the base and the backrest and paste it well.

ATTENTION

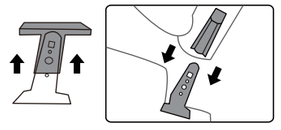

Remove the plastic cap before assembling backrest.

Step4 - Product Connections

1. No.① and No.②wires from the backrest and seat base with same color connect together.
2. No.③wire from the back connects to the massage remote.
3. The USB socket in the bottom of the recliner armrest.

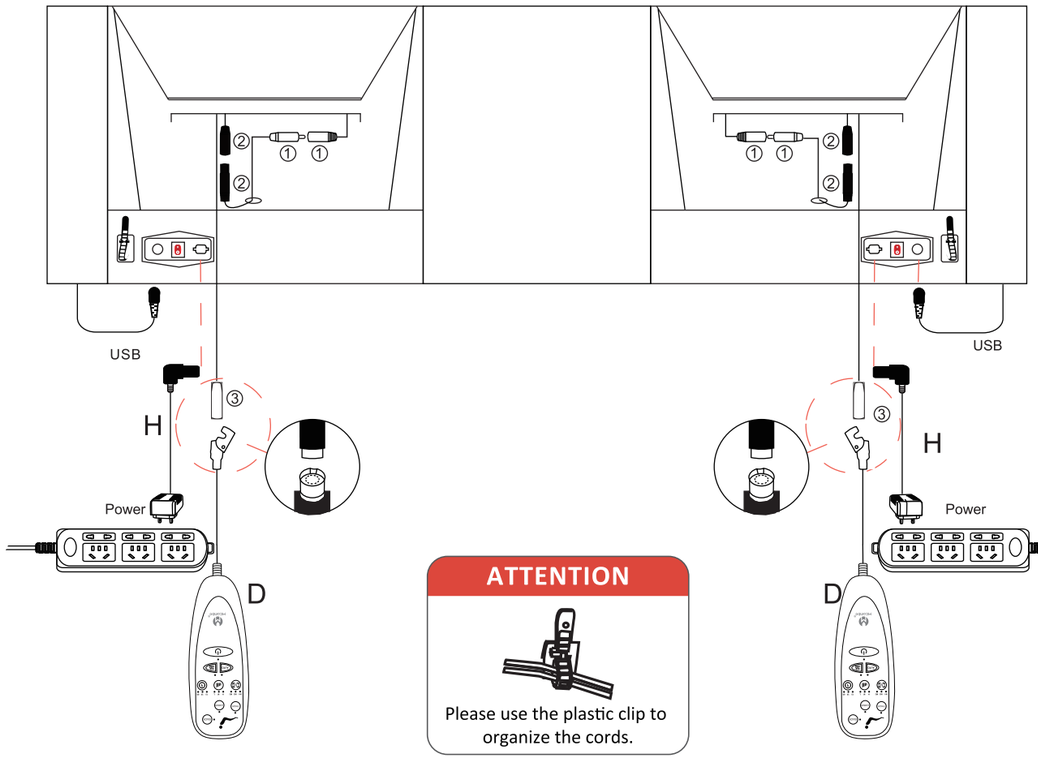

ATTENTION

Please use the plastic clip to organize the cords.

Step5 - Final Check

1. Make sure both metal brackets on each armrest are mounted on the base.
(There are two metal brackets on each side of the base, it looks like assembly is finished when you insert armrest into only one bracket instead of two, however all pressure will apply to one bracket, that is one likely reason that the armrest falls apart from the seat.)
2. Make sure the backrest inserts are locked to the base.
(Pull up the backrest to check if it is locked in place.)
3. Make sure all wires are connected tightly.
4. Make sure all wires are not placed at the bottom of the rack and will not be pressed by frame.
(If the wire is pressed by the frame, the wire will be broken by the frame and the sofa will stop working.)

7. Part List (3 Seater) 6034M3

Notice

• Use MCombo parts only for all replacements.

BOX 1

A1 Left Base x 1

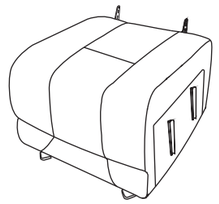

BOX 2

A2 Right Base x 1

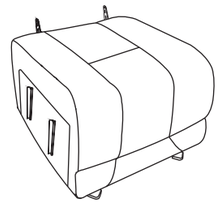

BOX MS

C4 Middle Base x1

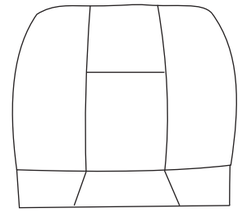

Box 3 (Part box 1)

C1 Left Backrest x 1

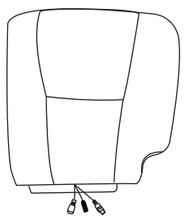

C2 Right Backrest x 1

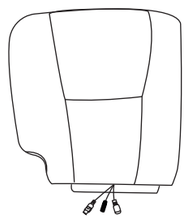

D Massage Remote x2
6160-RC-MA



E Seat Iron Sheet x 2



F Wrench x1



G1 Bolt & Washer & Nut x 8



H Power Adapter x 2
6160-DD-APA



I Base Feet x4



BOX BH

B1 left Armrest x 1



B2 Right Armrest x 1

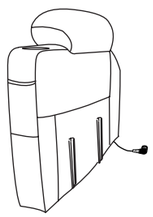

C4 Middle Backrest x 1

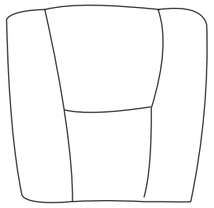

(Part box 2)			
E Seat Iron Sheet x 2	**F** Wrench x1	**G2** Bolt & Washer x 8	**I** Base Feet x4
			

8. Assembly Step (3 Seater) 6034M3

Package Quantity	5	6160-6034-1
		6160-6034-2
		6160-6034-3
		6160-6034-BH
		6160-6034-MS

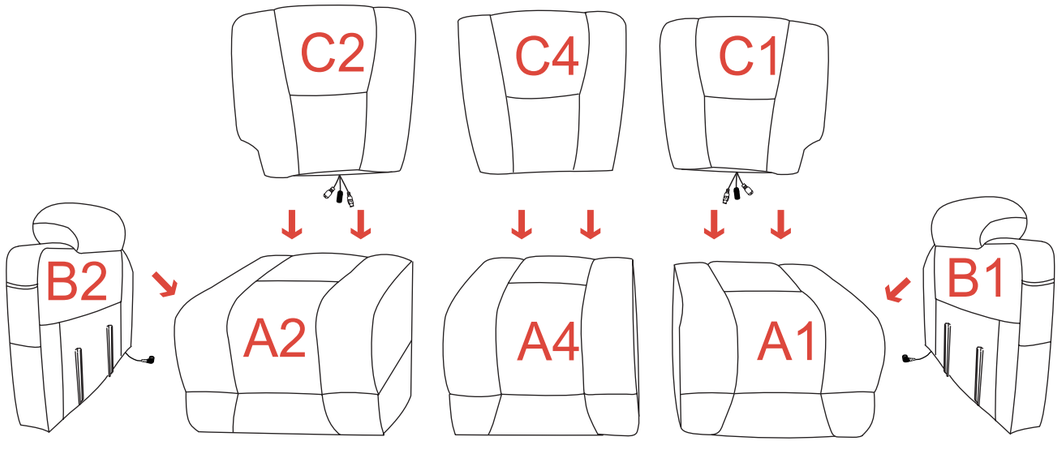

D	E	G1	H	I	G2	F
 x2	 x4	 x8	 x2	 x8	 x8	 x1

Step1 - Bases Assembly

1. Please use seat iron sheets (Part #E) to connect the seat bases (Part #A1, and #A2) .
2. **Do not tighten the bolts until all the bases are connected and properly adjusted.**

Note: **Please connect the left base first.**

1

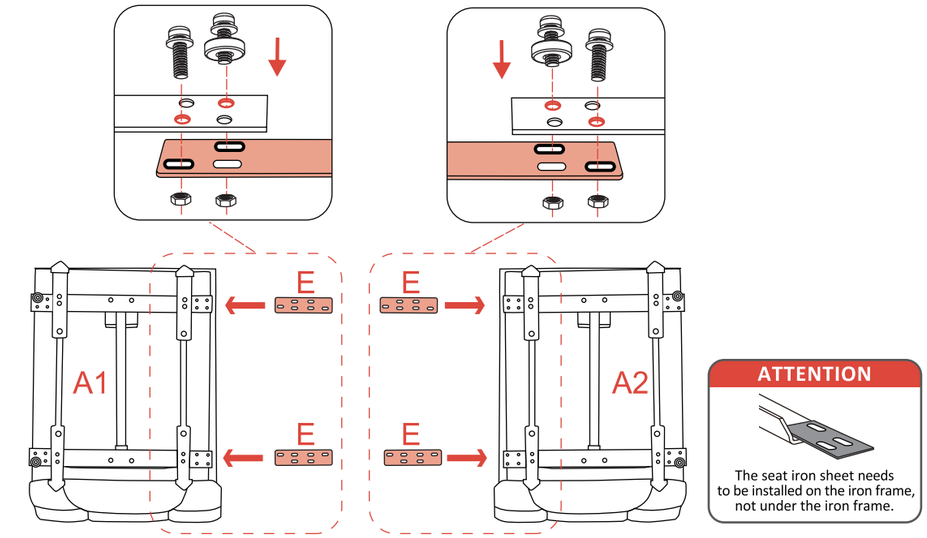



2

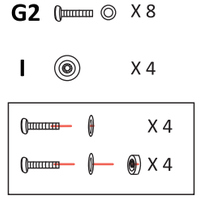

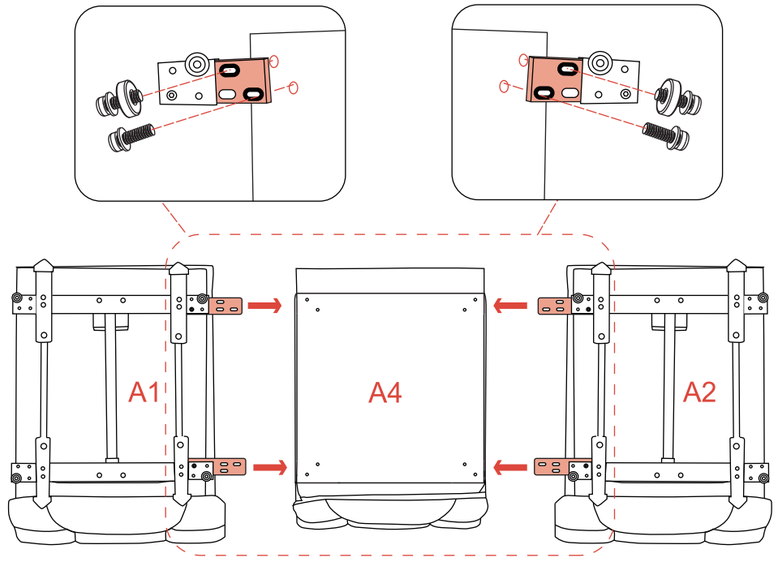

3

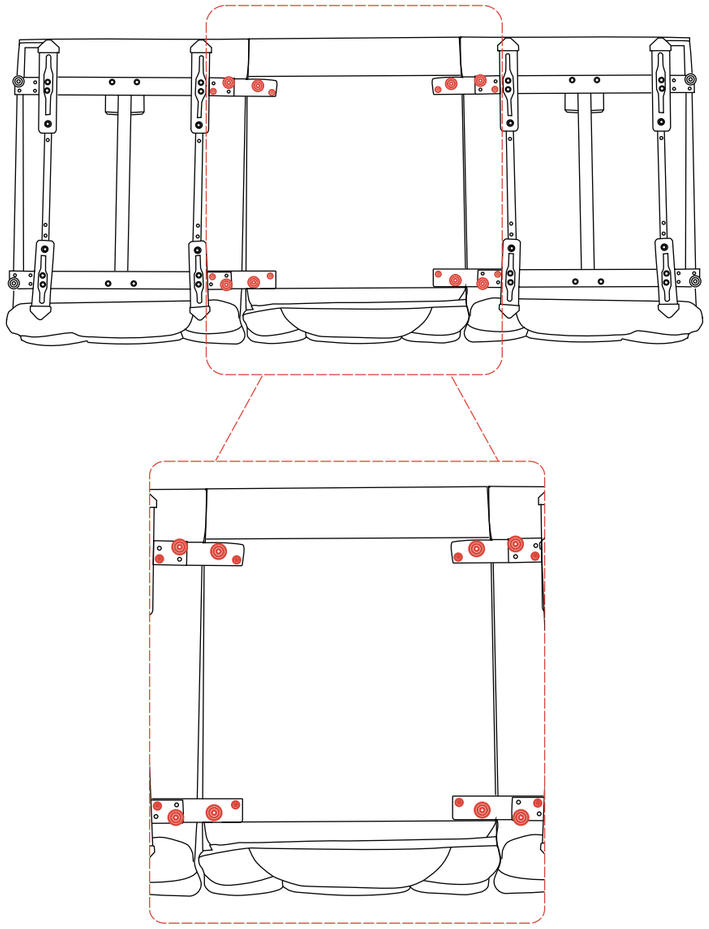

Step3 - Armrests Assembly

1. Align the brackets of armrest at the clips of the base (Figure).
2. Push firmly the brackets into the the base. Listen for a “click" on each side to ensure the armrest is locked in properly.

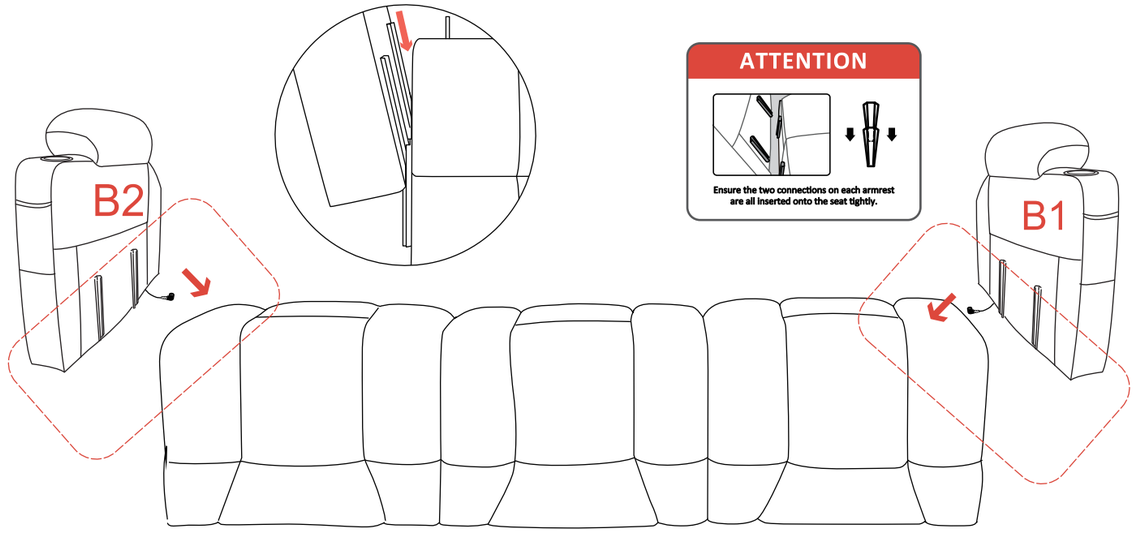

Step4 - Backrests Assembly

1. Align the brackets of the backrest at the clips of seat-back (Figure).
2. Push firmly the brackets into the seat-back. Listen for a “click” on each side to ensure the backrest is locked in properly.

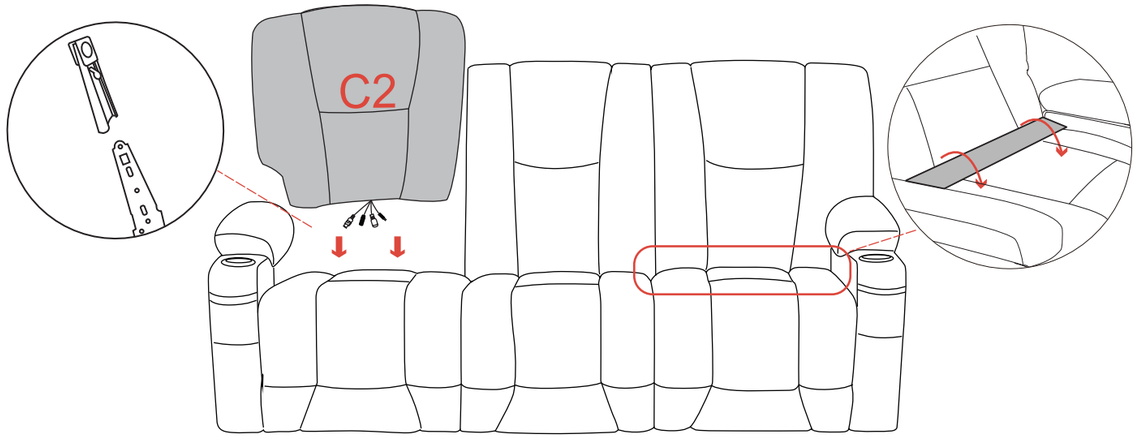

Paste Velcro

1.Place the chair in the reclined position.
2.Pull out the Velcro in the gap between the base and the backrest and paste it well.

ATTENTION

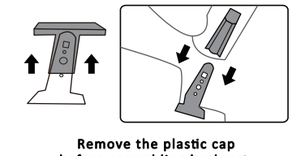

Remove the plastic cap before assembling backrest.

Step4 - Product Connections

1. No.①and No.②wires from the backrest and seat base with same color connect together.
2. No.③wire from the back connects to the massage remote.
3. The USB socket in the bottom of the recliner armrest.

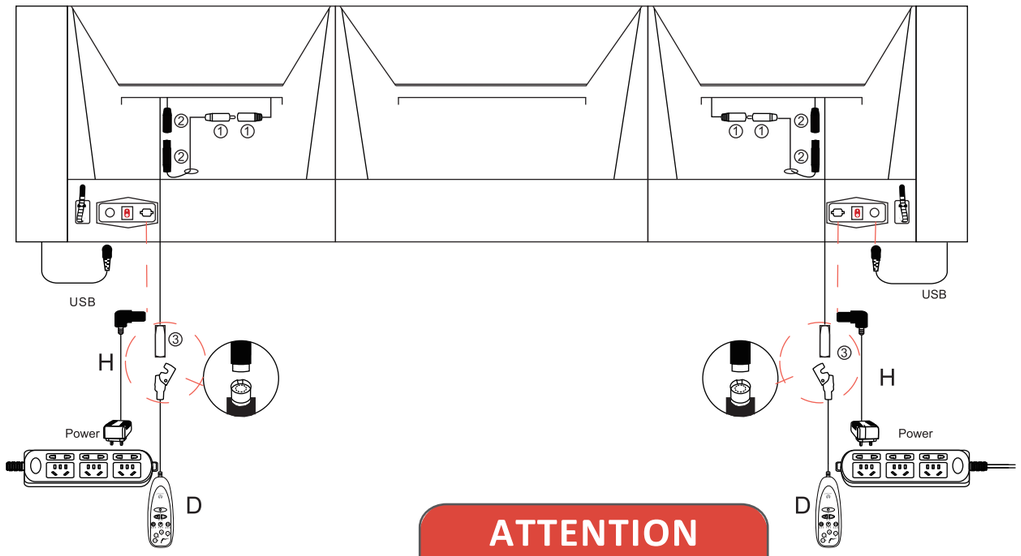

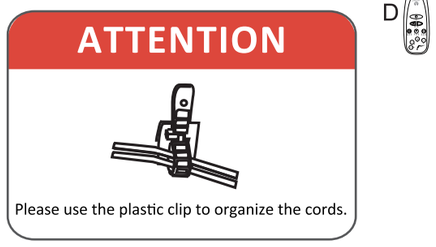

Step5 - Final Check

1. Make sure both metal brackets on each armrest are mounted on the base.
(There are two metal brackets on each side of the base, it looks like assembly is finished when you insert armrest into only one bracket instead of two, however all pressure will apply to one bracket, that is one likely reason that the armrest falls apart from the seat.)
2. Make sure the backrest inserts are locked to the base.
(Pull up the backrest to check if it is locked in place.)
3. Make sure all wires are connected tightly.
4. Make sure all wires are not placed at the bottom of the rack and will not be pressed by frame.
(If the wire is pressed by the frame, the wire will be broken by the frame and the sofa will stop working.)
5. Make sure all the screws are tightened.

9. Part List(3 Seater with Console)6034M4

Notice

• Use MCombo parts only for all replacements.

BOX 1	BOX 2	BOX MS
A1 Left Base x 1 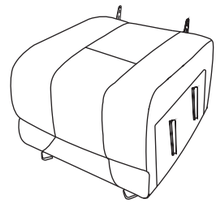	**A2** Right Base x 1 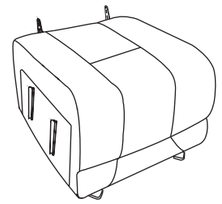	**A4** Middle Base x1 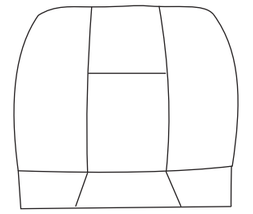

Box 3	(Part box 1)		
C1 Left Backrest x 1 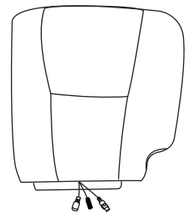	**C2** Right Backrest x 1 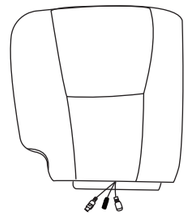	**D** Massage Remote x2 6160-RC-MA 	**E** Seat Iron Sheet x 2 
		F Wrench x1 	**G1** Bolt & Washer & Nut x 8 
		H Power Adapter x 2 6160-DD-APA 	**I** Base Feet x4 

BOX BH	(Part box 2)		
B1 left Armrest x 1 	**B2** Right Armrest x 1 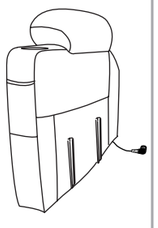	**C4** Middle Backrest x 1 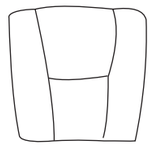	**F** Wrench x1 
			E Seat Iron Sheet x 2 
			G1 Bolt & Washer & Nut x 8 
			I Base Feet x4 

BOX CA

C3 Storage Console x 1



A3 Console Backrest x 1



J Seat Iron Sheet x 2



Part box 3

G2 Bolt & Washer x 4



I Base Feet x4



F Wrench x1



K Plastic Cover Screws x2



10. Assembly Steps (3 Seater with Console)6034M4

Package Quantity	6	6160-6034-1
		6160-6034-2
		6160-6034-3
		6160-6034-BH
		6160-6034-MS
		6160-6034-CA

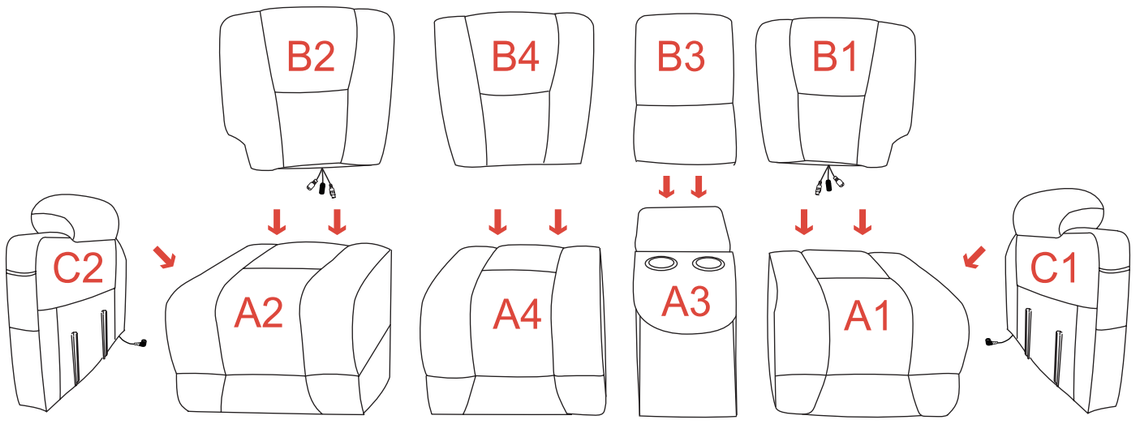

D	E	G1	H	I	J	G2	F	K
x2	x4	x8	x2	x12	x2	x12	x1	x2

Step1 - Bases Assembly

1. Please use seat iron sheets (Part #E) to connect the seat bases (Part #A1, and #A2) .
2. **Do not tighten the bolts until all the bases are connected and properly adjusted.**

Note: **Please connect the left base first.**

1

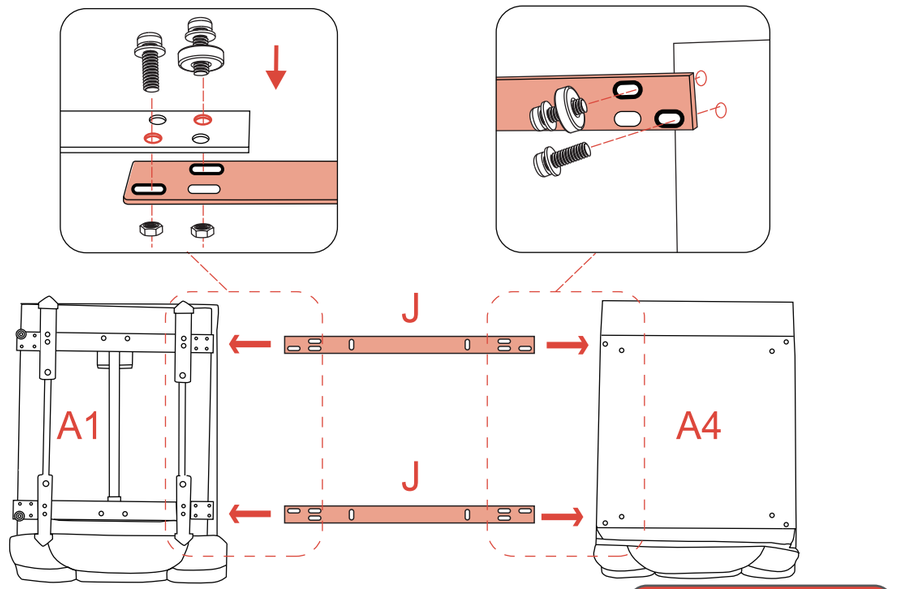

G1 X 4

G2 X 4

I X 4

A1 X 2 X 2

A4 X 2 X 2

ATTENTION



The seat iron sheet needs to be installed on the iron frame, not under the iron frame.

2

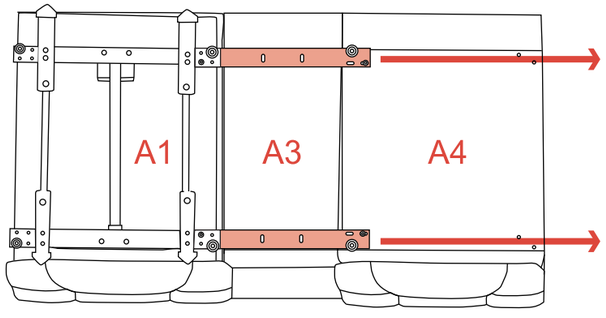

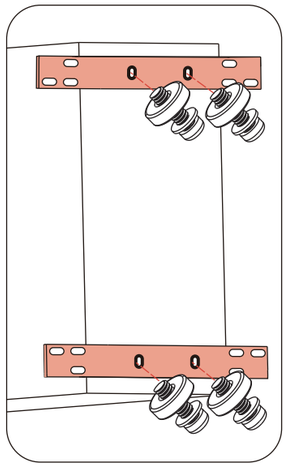

G2 X 4

I X 4

X 4

3

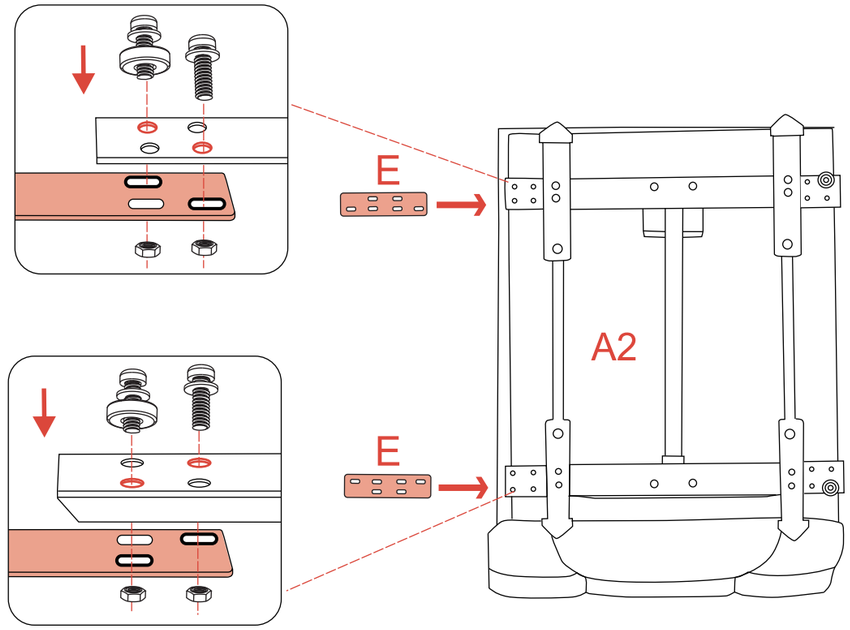

G1 X 4

I X 2



4

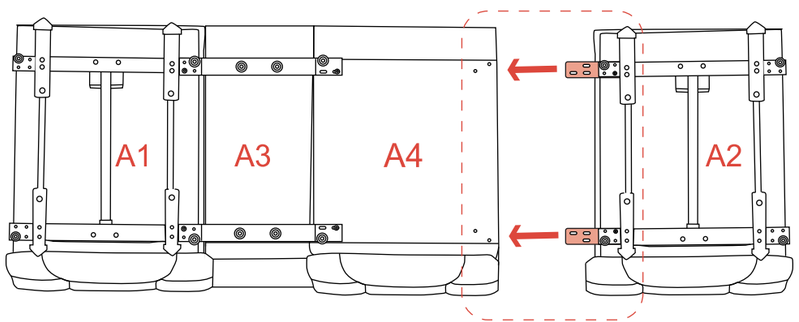

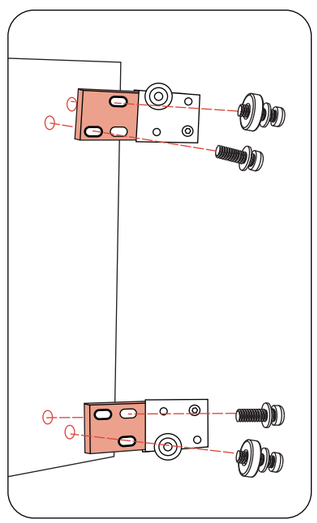

G2 X 4

I X 2



5

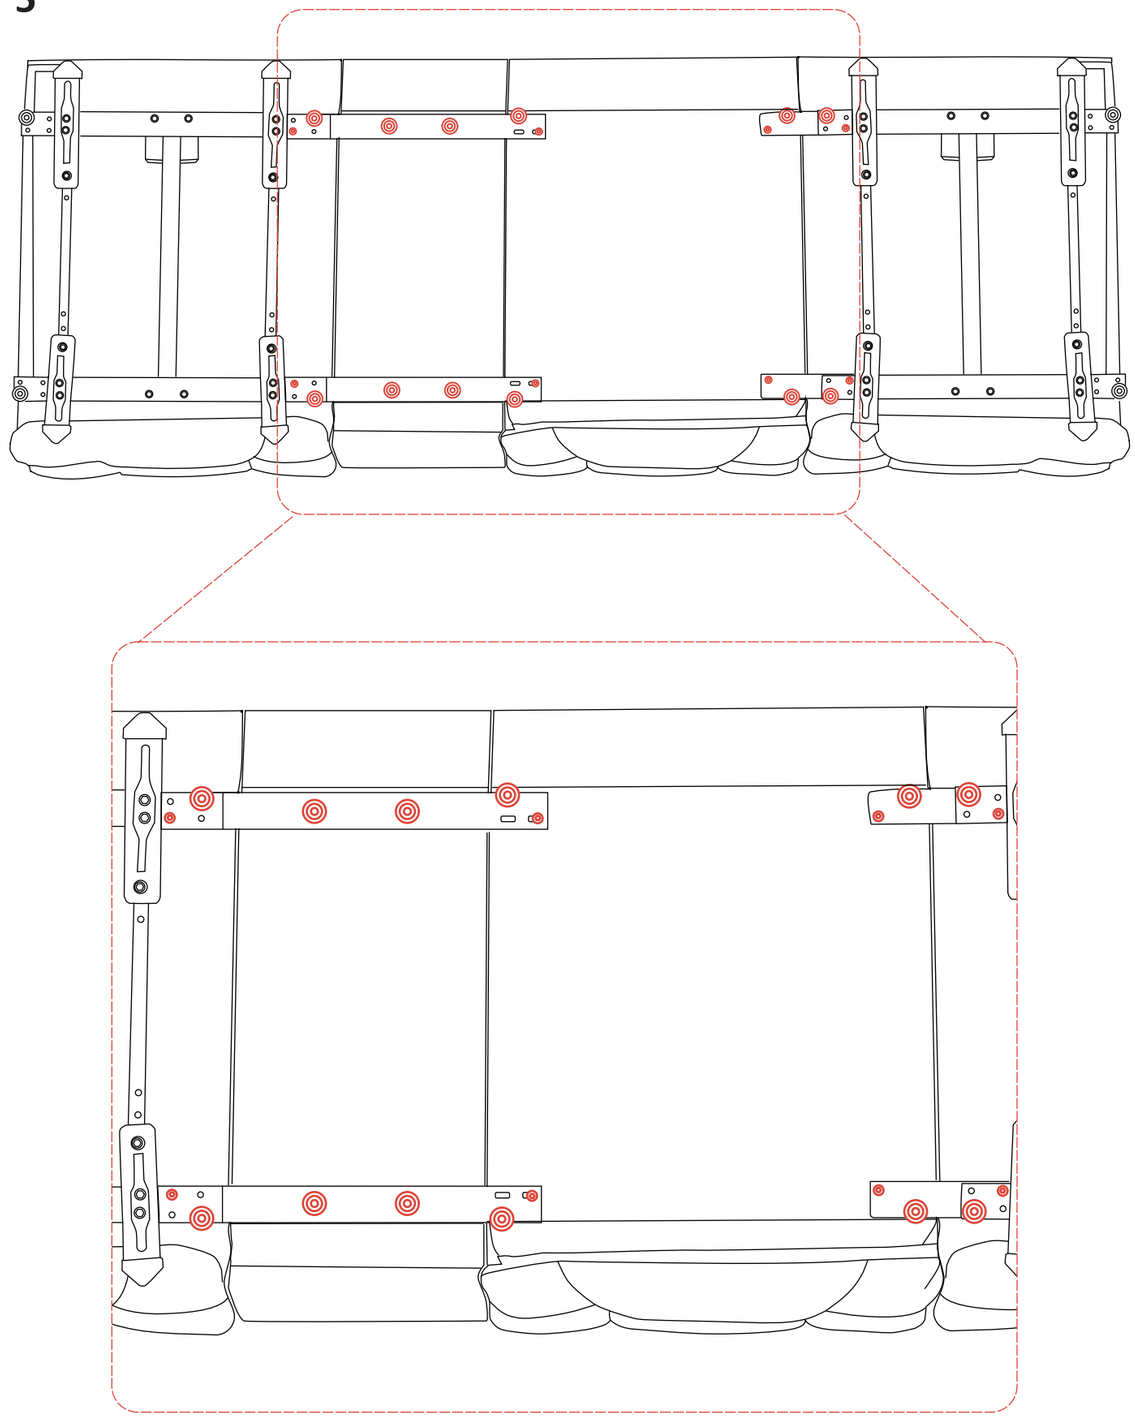

Step2 - Console Back Assembly

1. Please connect the storage console (Part #A3) to the console backrest. (Part #B3)

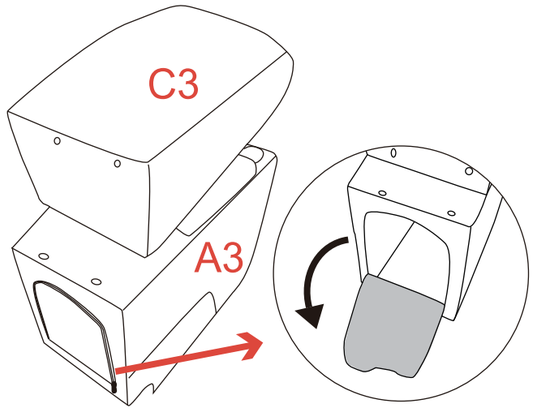

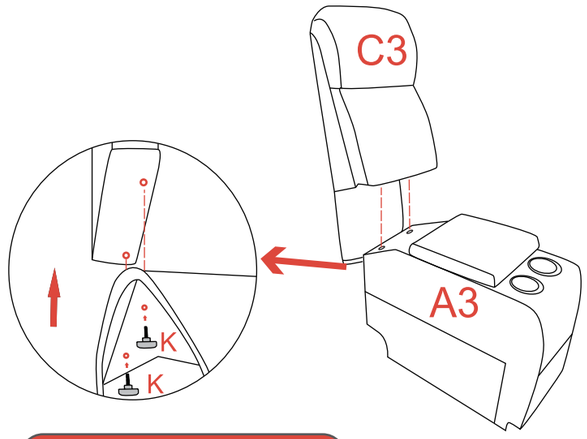

ATTENTION



Unzip the zipper behind the console,

ATTENTION

Fix them with two plastic cover screws.
This step does not require tools, but you need to lighten the screws longer because the screw holes are relatively deep.

Step3 - Armrests Assembly

1. Align the brackets of armrest at the clips of the base (Figure).
2. Push firmly the brackets into the the base. Listen for a “click" on each side to ensure the armrest is locked in properly.

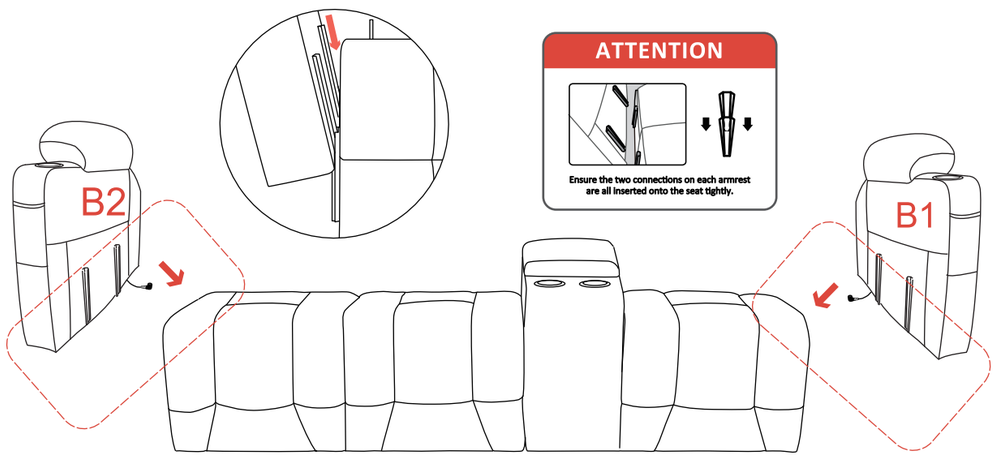

ATTENTION

Ensure the two connections on each armrest are all inserted onto the seat tightly.

Step4 - Backrests Assembly

1. Align the brackets of the backrest at the clips of seat-back (Figure).
2. Push firmly the brackets into the seat-back. Listen for a “click” on each side to ensure the backrest is locked in properly.

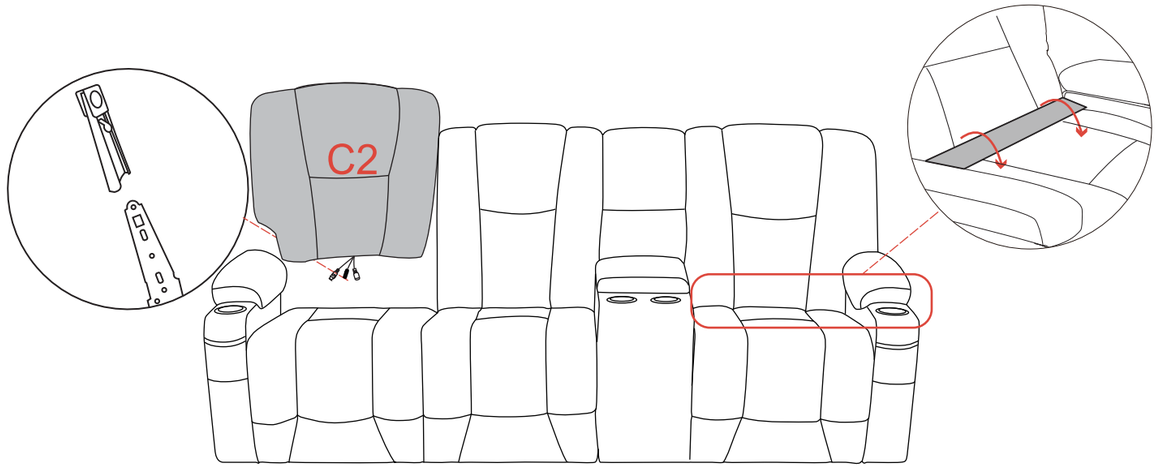

Step5 - Product Connections

1. No.① and No.②wires from the backrest and seat base with same color connect together.
2. No.③wire from the back connects to the massage remote.
3. The USB socket in the bottom of the recliner armrest.



ATTENTION



Please use the plastic clip to organize the cords.

Step6 - Final Check

1. Make sure both metal brackets on each armrest are mounted on the base.

(There are two metal brackets on each side of the base, it looks like assembly is finished when you insert armrest into only one bracket instead of two, however all pressure will apply to one bracket, that is one likely reason that the armrest falls apart from the seat.)

2. Make sure the backrest inserts are locked to the base.

(Pull up the backrest to check if it is locked in place.)

3. Make sure all wires are connected tightly.

4. Make sure all wires are not placed at the bottom of the rack and will not be pressed by frame.

(If the wire is pressed by the frame, the wire will be broken by the frame and the sofa will stop working.)

5. Make sure all the screws are tightened.

III. OPERATING INSTRUCTIONS

1.

- Do not use an extension cord.
- Do not exceed recommended weight limit.
- Do not use attachments not recommended by the manufacturer.
- Do not use outdoors. INDOOR USE ONLY.
- Keep dry. Do not operate in a wet or moist environment.
- Keep all cords away from heated surfaces and pinch points.
- Always leave the product in an upright and closed position when not in use.
- Periodically check the control and all power cords for visible damage.
- Do not use the footrest as a seat, or for purposes outside its intended use.
- Do not lean or apply downward force to the seat-back while in recline position.

NOTE:

If you discover a problem at any point during the setup and positioning of your power recliner sofa, stop and contact the MCombo Customer Support immediately. To avoid personal injury or product damage, do not plug the unit into the electrical outlet until the problem is corrected and do not attempt to fix electrical problems by yourself.

2. Operation Instruction

Side Seat Control

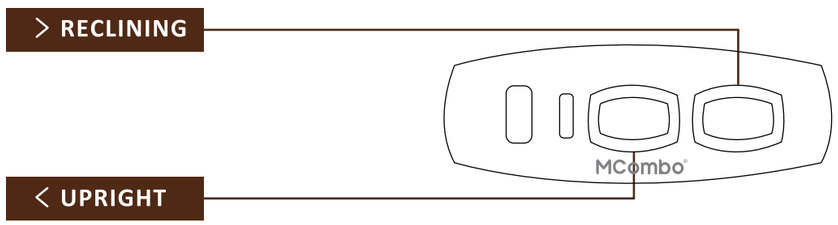

Seated

When you want to take a short break, there is no need to operate the sofa you will get a comfortable experience.

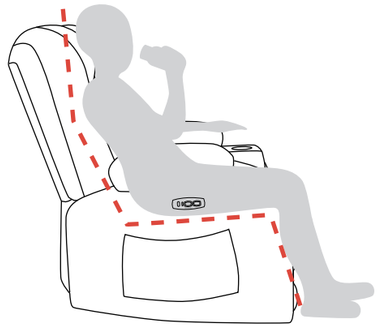

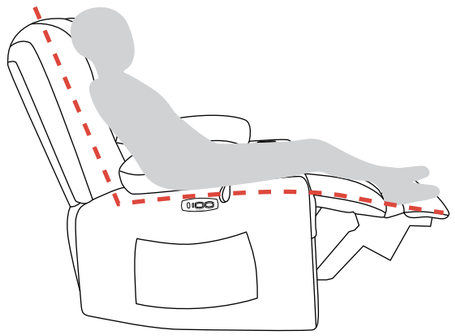

Relaxing

When you want to relax, adjust the footrest position.

Napping

When you want to take a nap, you can adjust the backrest to the right position while raising the footrest to relax.

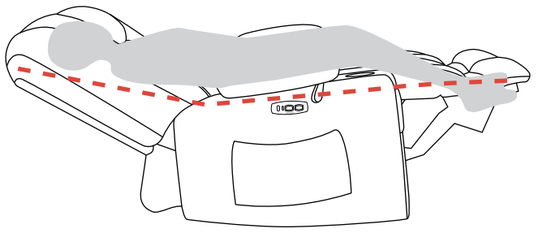

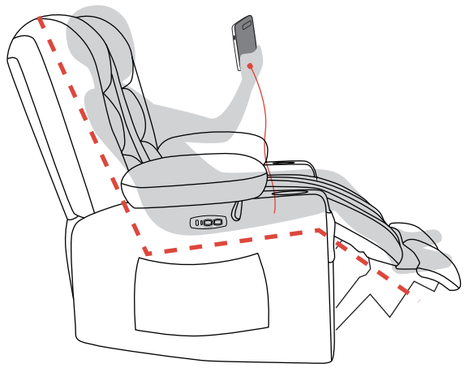

Reading

When you want to read in your spare time adjust your sofa and explore a whole new word.

Massage Remote Operation Instruction

POINTS:	Control massage points (BACK, LUMBAR, THIGH, LEG)
MODES:	Press to select 3 different massage modes
INTENSITY:	Press to adjust massage intensity from low to high
TIMER:	The timer can be set in fixed time 15 / 30 / 60 minutes
HEAT:	Turn on/off heating function of the seat/backrest
POWER:	Turn on/off remote control

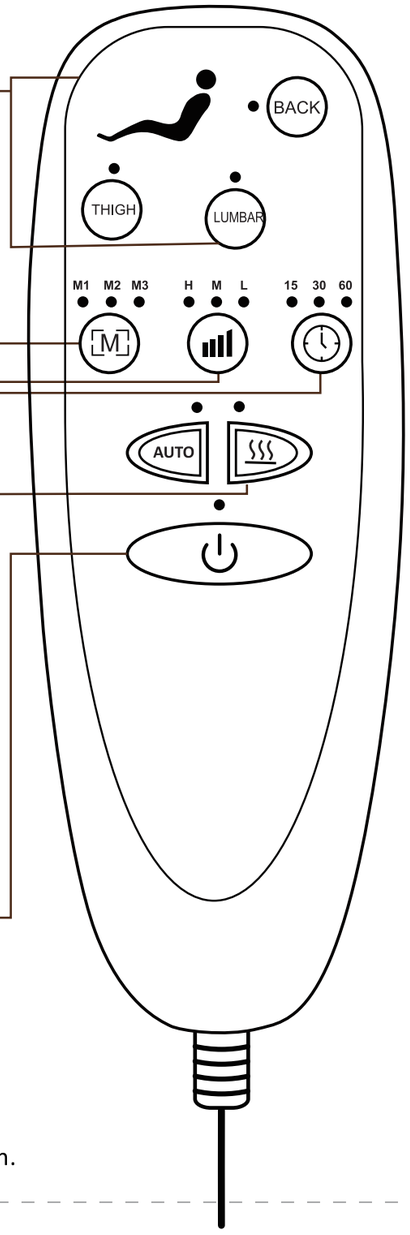

NOTE: Use the heated only:
Turn off the POWER button, turn on the HEAT button.
(Heating function works with vibration separately.)