
INSTALLATION AND CARE GUIDE

SMART TOILET:T8001

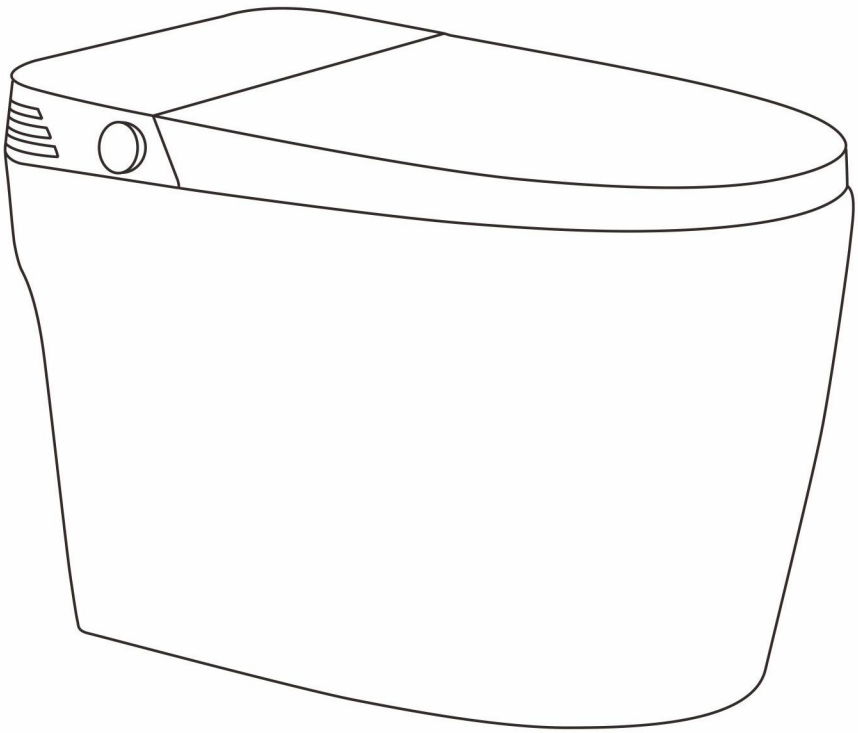

Please give us a chance to make it right and do better!

Contactourfriendlycustomer service department for help first.
Replacementsformissingor damaged parts will be shipped ASAP!

HZKJservice@gmail.com

BEFORE UNPACKING THE PRODUCT, READ ALL INSTRUCTIONS CAREFULLY.

INSTRUCTIONS THAT, IF IGNORED COULD RESULT IN DEATH OR SERIOUS INJURY CAUSED BY INCORRECT HANDLING OR INSTALLATION OF THE PRODUCT. THESE INSTRUCTIONS MUST BE OBSERVED FOR SAFE INSTALLATION.

CAUION! TWO PERSON LIFT REQUIRED

I2 PEOPLE ARE REQUIRED TO LIFT AND DURING ENTIRE INSTALLATION OF THIS PRODUCT

INSTALLATION OF THIS PRODUCTS BY AN INEXPERIENCED INSTALLER MAY RESULT PERSONAL INJURY OR DEATH!

We reserves the right to change, update, modify, alter, redesign this manual/product or its policies without prior notice!

We shall not be liable for any injuries or property damages in connection with this product during installation or use of this product!

Failure to follow these instructions may result in death or serious injury due to incorrect handling or installation of the product. Ensure that at least two people are available to lift the product during installation. The installation of this product by an inexperienced installer may result in personal injury or death.

Please note that we reserve the right to change, update, modify, alter, or redesign this manual/product or its policies without prior notice. We shall not be liable for any injuries or property damages in connection with the installation or use of this product.


This product must be installed by a fully insured and licensed plumber only. Installation by anyone other than a fully insured and licensed plumber shall void thelimited warranty. We recommend that the licensed plumber have experience in installing our products.

Please note that the limited warranty is void for any commercial installation. We are not responsible for local code compliance for this product. Building and plumbing codes may vary from state to state, so it is the customer's responsibility to ensure compliance. We are not responsible for providing any compliance certifications.

Under no circumstances shall we be liable for any incidental damages sustained in connection with this product. Neither the manufacturer, distributor, nor retailer Is responsible for water damage or flooding caused due to the use of this product. Under no circumstances shall we be liable for any fees, costs of installation/reinstallation/removal, subsequent damage, or transportation in case of product defects.

TOILET COMPONENTS

Before installation, carefully inspect the product for any damages or missing parts. Do not attempt to install or operate the product if it is damaged.

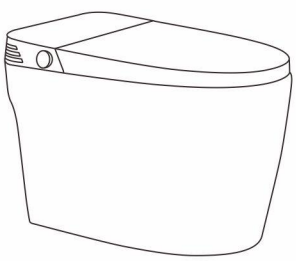

Main Unit



Sealing Flange



Remote controller components



Installation Cardboard

TOOLS REQUIRED FOR INSTALLATION



Soft Cloth or Blanket



Silicone



Silicone/ Caulk Gun



Tape Measure



Pencil Marker




Safety Glass



Knife



Adjustable Wrench



Channel Lock Pliers



Adjustable Socket Extension



Philips Screwdriver



Level



Putty Knife

OTHER TOOLS MAY BE REQUIRE

IMPORTANT SAFEGUARDS

When using electrical products, especially in the presence of children, always follow basic safety precautions, including the following:

1.Do not use the appliance if you have reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless you have been given supervision or instruction.
2.Ensure that children are supervised and do not play with the appliance.
3.This appliance can be used by children aged 8 years and above, as well as persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the safe use of the appliance and understand the ha zards involved.
4.Children should not play with the appliance.
5.Cleaning and user maintenance should not be carried out by children without supervision.

READ ALL INSTRUCTIONS BEFORE USING

DANGER –To reduce the risk of electrocution:

1.Do not use the product while bathing.
2.Do not place or store the product where it can fall or be pulled into a tub or sink.
3.Do not place the product in or drop it into water or other liquid.
4.If the product falls into water, unplug it immediately and do not touch it until it has been examined and repaired by a qualified service center.
5.Do not wash the main unit or electrical plug with water or detergent.
6.Do not handle the electrical plug with wet hands.
7.Do not put your hand or any other object over the outlet of the air dryer or block the outlet of the air dryer.
8.Never disassemble, repair, or modify this product.
9.During installation, disassembly, repair, and maintenance of the product, the power plug must be switched off and the water supply shut off.

WARNING –To reduce the risk of burns, electrocution, fire, or injury to persons.

1.Close supervision is necessary when this product is used by, on, or near children or individuals with disabilities.
2.Use this product only for its intended purpose, as described in this manual. Do not use attachments that are not recommended by the manufacturer.
3.Do not operate this product if it has a damaged cord or plug, is not working correctly, has been dropped or damaged, or has been dropped into water. Return the product to a service center for examination and repair.
4.Keep the cord away from heated surfaces.
5.Never use the product while sleeping or drowsy.
6.Never drop or insert any object into any opening or hose.
7.Do not use this product outdoors or operate it where aerosol (spray) products are being used or where oxygen is being administered.
8.Connect this product to a properly grounded outlet only. See Grounding Instructions.
9.Do not throw cigarettes or other burning objects into the toilet, as it may cause a fire.
10.This product is an electrical appliance and must be placed far away from water. Do not allow urine or other liquids to come into contact with the product.
11.Do not lay the product on its side or upside down during the electrical circuit.
12.It is prohibited to use other electrical appliances in the same socket.
13.It is forbidden to use a power extension or an unstable, loose outlet.
14.The old, aging water supply hose cannot be used, as it may cause leakage, fire, or electrical shock. The installation of the bidet seat should include specified components and a new water supply hose.

CAUTION – Indicates that failure to follow the instruction may cause body injury or property damage.

1. Do not install or use the product in wet places as steam room etc.This product must be connected to properly grounded power outlet socket.
2. It is recommended to use a waterproof electrical outlet that should be installed in a place where it is not easily wet.
3. This product should only be used with AC 110V-220V, 50/60Hz electrical current and a load current of at least 15A. The power plug must be equipped with a ground fault circuit interrupter or ground fault elect rical leakage protector, or a similar high-sensitive, rapid-type leakage switch (rated sensitive current un der 10mA).
4. When there is thunder, it is strongly recommended to pull out the power plug.
5. Do not stand on the ceramic toilet.
6. The ceramic toilet must be installed with floor fixing bolts.
7. Do not stand on the product unit, seat, and cover.
8. Do not lean against the seat cover when using the product to avoid damage.
9. This product is equipped with a soft-closing seat cover. Heavy pressing or pushing may damage the soft-closing damper.
10. Do not use lacquer thinner, petrol, liquid medicine, detergent, insecticide, toilet cleanser, or scrubbing brush to clean the product.
11. Exposure to direct sunlight is prohibited.
12. Only use tap water or bottled water. Otherwise, it may cause chafing.
13. Do not connect the water supply to the heater outlet. Make sure the inlet water temperature is between 3~35°C.
14. When the room temperature is below zero degrees, please dry up the water tank to avoid freezing.
15. Raise the restroom temperature to prevent the toilet from being damaged due to freezing.
16. When moving the product from a cold or wet environment into a normal room temperature, wait for 2 hours until the condensation water is fully volatilized. Doing so can prevent the product from an electric short-circuit.
17. When not using the product for over three (3) days, drain the water out of the container and pull the elec trical plug from the wall outlet.
    ELECTRONIC BIDET TOILET
18. Stop using the product and shut off the power when the product malfunctions. Please contact the servi ce people for professional service.


GROUNDING INSTRUCTIONS


This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.


DANGER – Improper use of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stri pes is the grounding wire.
This product is factory-equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided — if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.


Main Unit	Rated voltage	AC 110V-120V,50/60Hz
	Rating power 1	1300W
	Water pressure range	Minimum water pressure 0.3MPa Maximum water pressure 0 . 7 MPa
	Wire length	1.5m
Toilet	Flush volume	6 L
	Flushing mode	Siphon
	Wall to outlet pipe distance	12 inches / 30 cm
	Outlet outside diameter	3.5 inches / 9 cm
	Drainage method	Vertical outlet
Cleaning device	Heating power	1200W
	Wat e r temperature	Four levels of adjustable
	Water volume	Four levels of adjustable
	Cleansing mode	Rear cleaning/Female cleaning/Massage cleaning
	Spray cleansing location	Three levels of adjustable
	Water pressure protector	Stable pressure, automatic pressure relief
	Anti fouling device	Quick flush, automatic cleaning nozzle, anti siphon, anti back flow, filter air and water
	Safety device	Temperature sensor,fail safe,thermostat, temperature fuse,ground protection, leakage protector
Drying device	Warm wind speed	Over 4 M/S
	Warm wind temperature	Four levels of adjustable
	Heating power	22 0W
	Safety device	Temperature sensor, thermostat,temperature fuse
Heated seat	Surface temperature	Four levels of adjustable
	Heating power	35W
	Open and close device	Quiet soft-closing device, automatic open and close the seat
	Heated burning protection	The seat temperature will automatically lower to 34℃ after 10 minutes. Automatic close the heated if temperature over 48 ℃
	Safety device	Seat sensor,Temperature sensor, Thermostat, Temperature fuse
Caring device	Night light assembly	Intelligent power saving. If nobody use toilet, the night light will automatically off. The screen will automatically turns off and the foot sensor automatically turns on.
	Automatic flushing	Toilet will automatically flush as user walks away from toilet
	Auto lid open/ close(optional)	Intelligent open/close the lid or by remote control

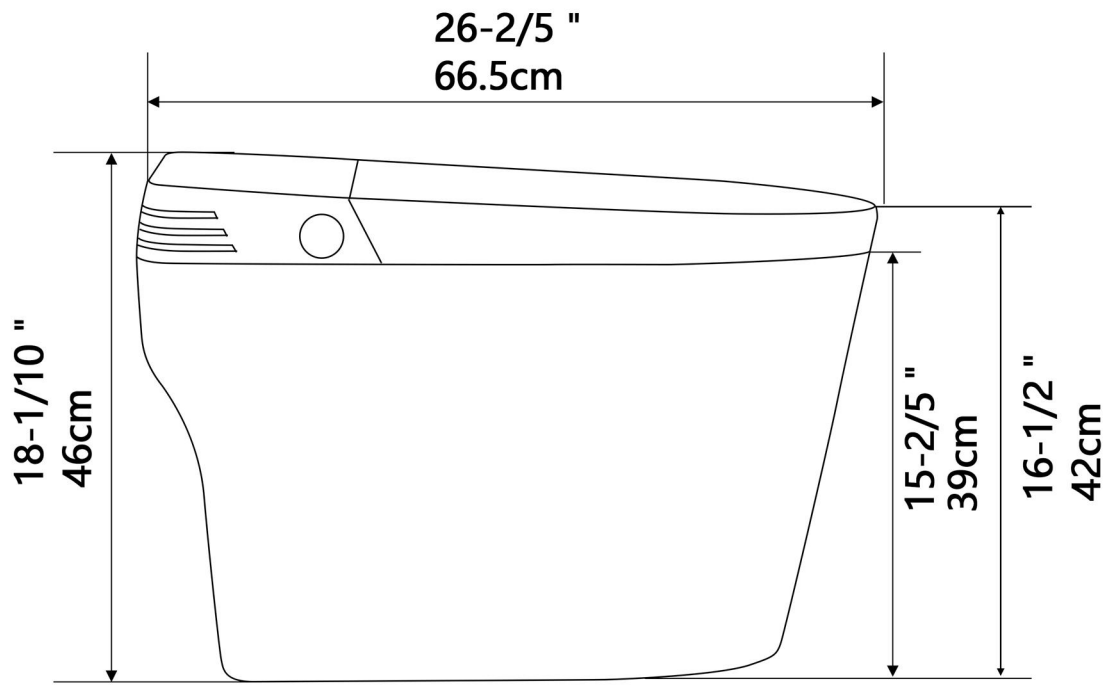


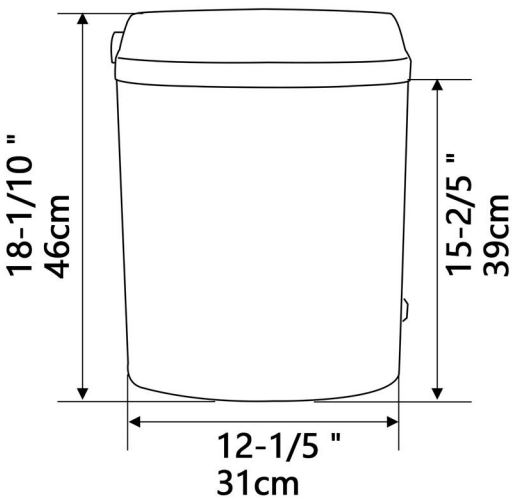


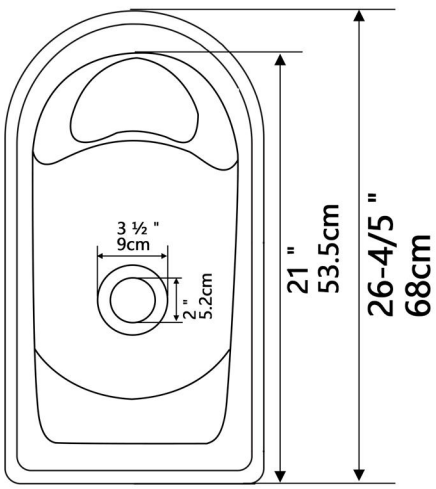


1.The product image is for reference only and may not accurately reflect the appearance of the actual product. We reserve the right to modify the appea rance of the product without prior notice.
2.In the event of any changes to the appearance of the product, the actual product shall prevail over the product image.

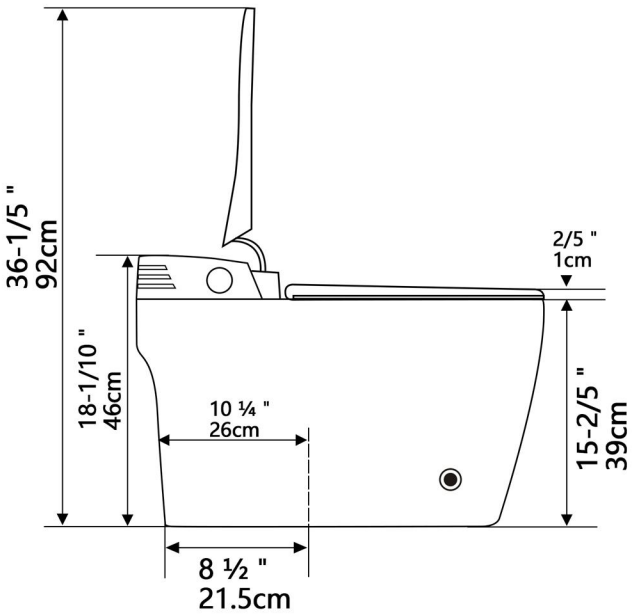

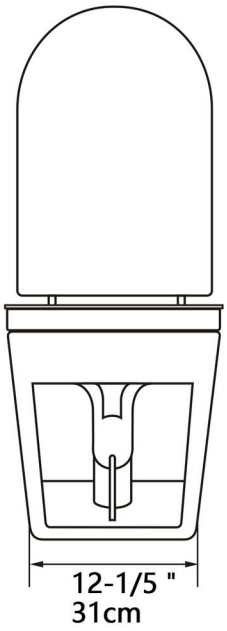

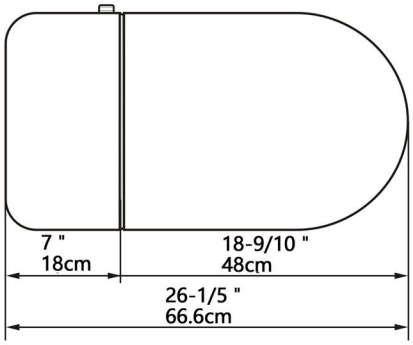


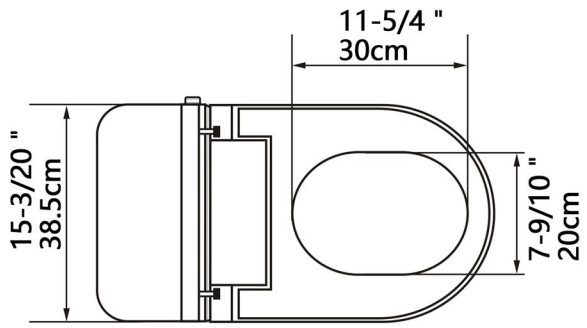



IMPORTANT INFORMATION

- Measurements are subject to a tolerance of +3/8" and may change without notice.
- Specifications and configurations are subject to change without notice.
- Please measure the toilet on-site before installation.
- Please note that the installer(s) must be certified, or the warranty will be voided.
- The measurements provided in this document supersede all others published prior to the publication date shown below.


Installation Option

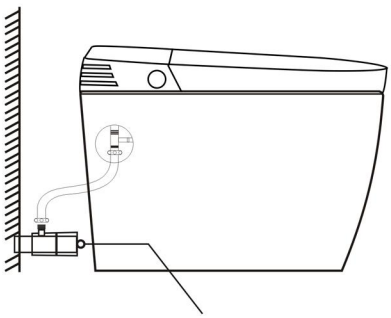


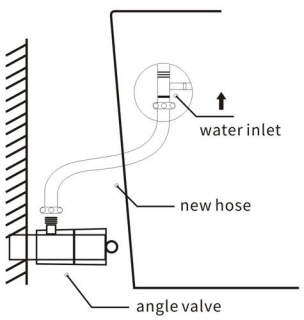

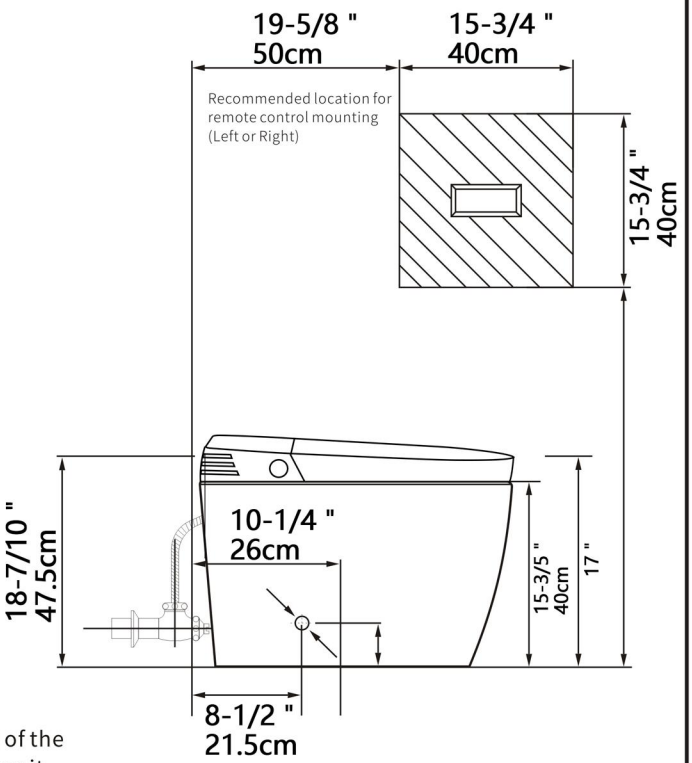


- Connect the water inlet and angle valve of the toilet with the matching hose and tighten it

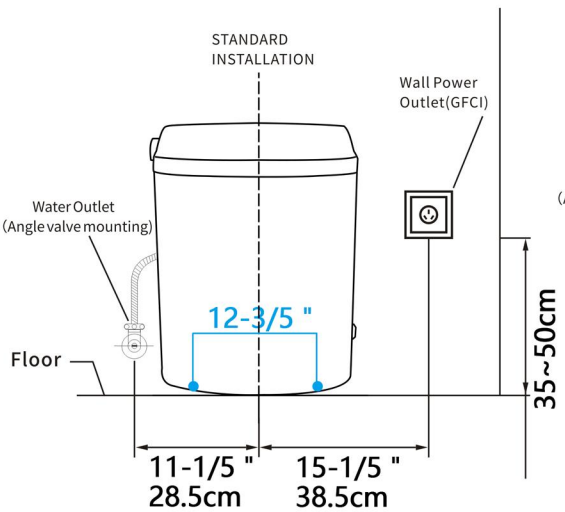

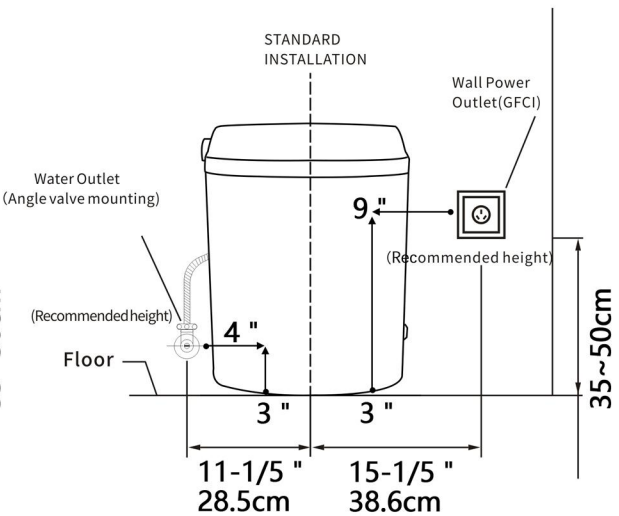


Overall sketch

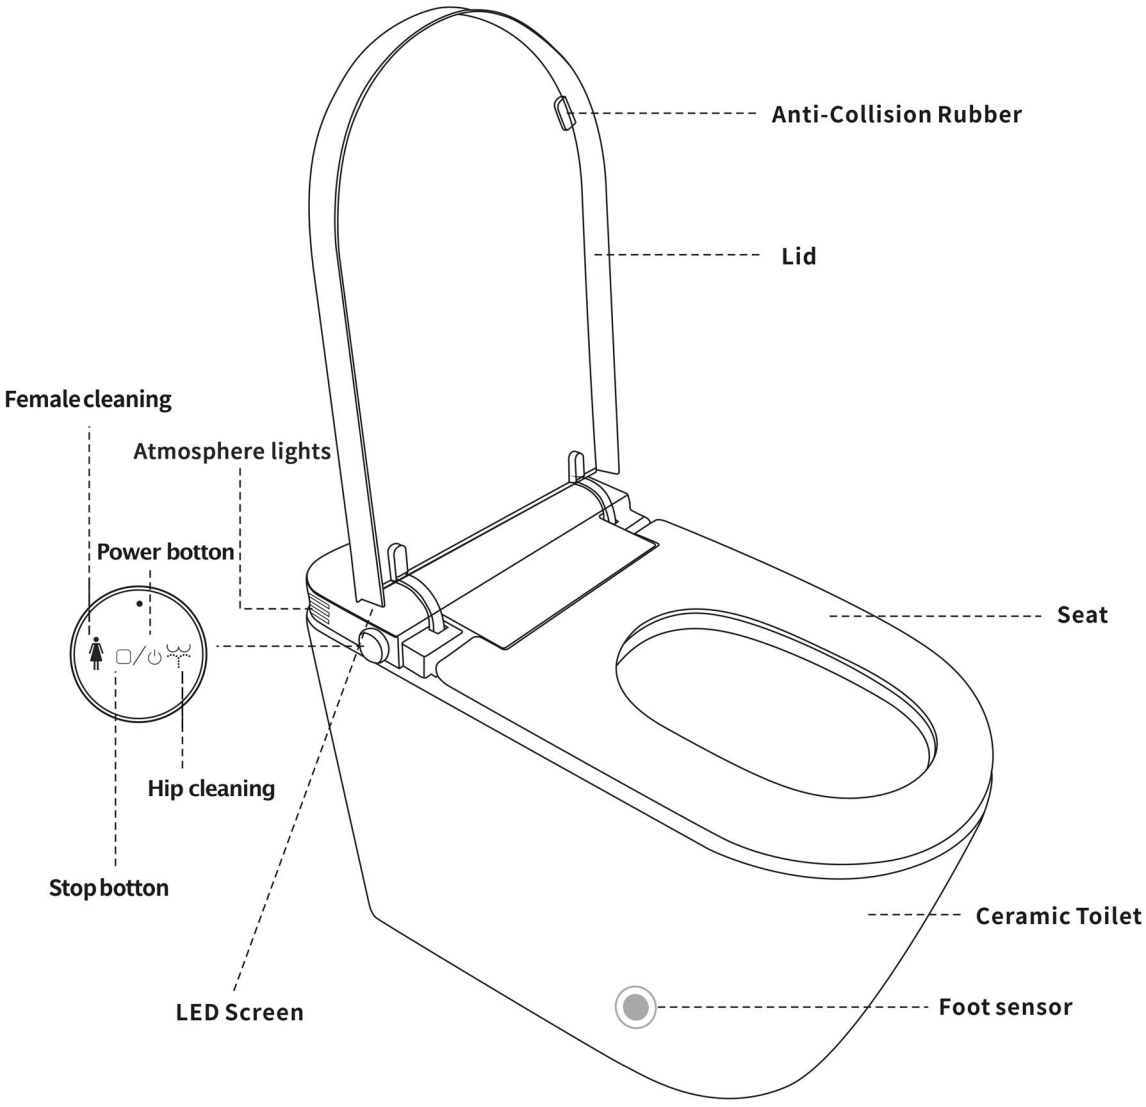

Before Installation

1.Turn on the angle valve and check the thread connection to ensure there is no leakage.

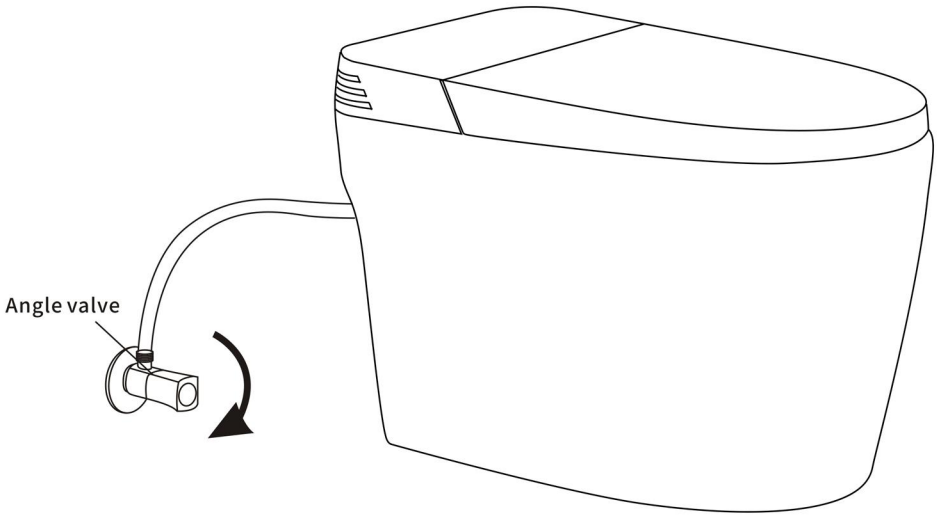

2.Power Connection


- Insert the power line leakage protection plug into the power socket, press the reset switch, and check that the plug indicator lights up, indicating that power is on.

Tips:

Press electric leakage test button prior to usage, the reset switch pops up indicating that the leakage protection function is normal.

Press the TEST button (then RESET button) every month to assure proper operation.

*Suitable for the product with a leakage protection plug.
*Please refer to the actual product manual for details.

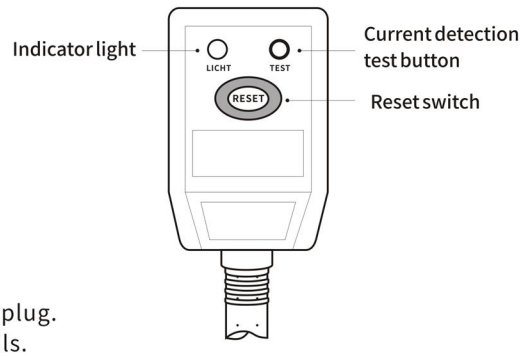


3.Self-inspection


1. The main unit buzzer rings first "click," and the power indicator (POWER) and energy-conservation indicator (ENERGY SAVER) flash. The power indicator lights on, and the energy-conservation indicator turns off to start self-inspection.
2. The main unit buzzer rings a second "click" to indicate the completion of self-inspection. The power indicator remains on, and the energy-conservation indicator remains off.
3. Start the function mode for normal usage.

Installation of ceramic toilet

1.Water supply angle valve installation

- Draw the centerline of the drain outlet on the floor,and install the angle valve at the appropriate position onthe wall according to the dimensions of the toilet. Aposition that is 10" off-center is preferred.

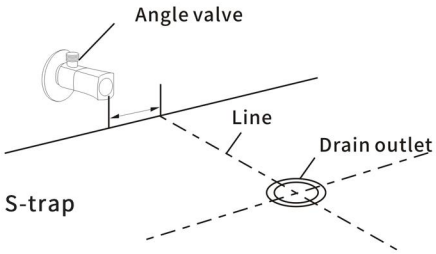


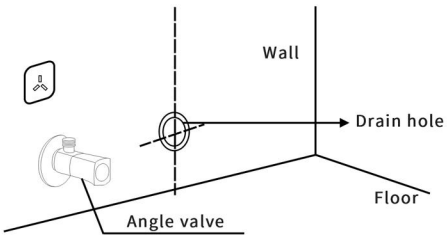


P-trap

2.Cardboard installation

- Align the cardboard with the centerline of thedrain outlet.
- Outline with a pencil or tape according to thecardboard. Please mark the position of flange bolts.
- Please mark the position of flange bolts.

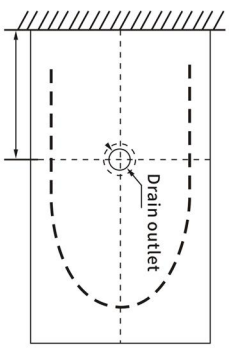


S-trap

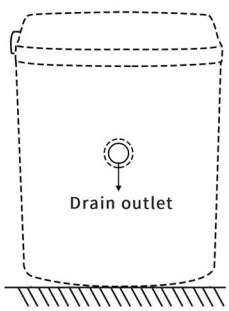

P-trap

3.Toilet Installation for S-trap 300/400mm


- Apply silicon sealant evenly on the top and bottom surface of the flange seal.Place the flange seal on the top of drain hole. Align the toilet bottom hole with the flange seal. Then lower the toilet down to the floor gently while keep it at horizontal level.

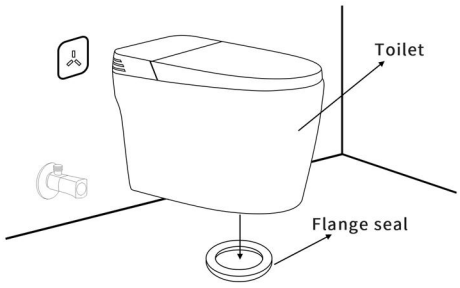

S-trap


Toilet Installation for P-trap 180mm

- Apply silicone sealant evenly to the top and bottom surfaces of the flange seals.Install flange seal on toilet hole. Apply one side with silicone sealant to the drain pipe,and attach the flange seals. The other side of the drain pipe is connected to the drain outlet on the wall and apply with silicon sealant.

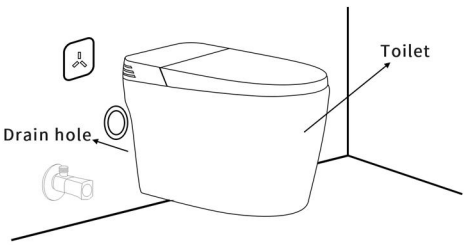


P-trap

4.Apply silicon sealant into the gap between the bottom of the toilet and the floor.

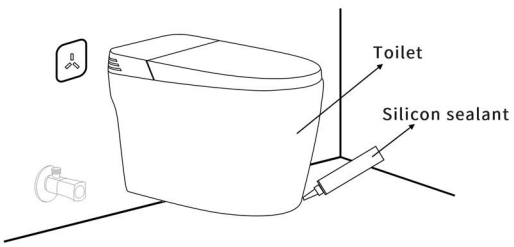

5.Silicone caulking application


- Apply Silicone caulking to the edge of toilet base, wipe away any excess.

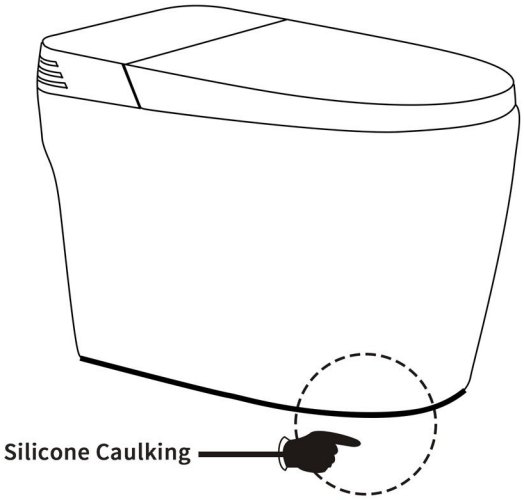


- Note:
  Please clean the drain outlet;
  Please make sure ceramic toilet outlet sits perfectly on drain outlet.

6.Installation of hose

- Connect water inlet and angle valve with new hose.

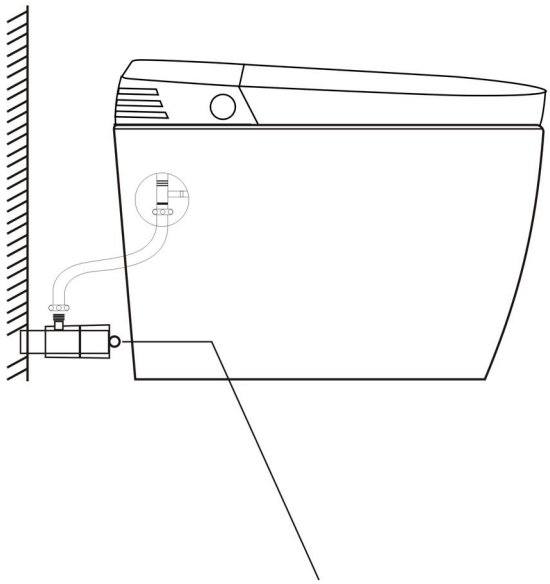

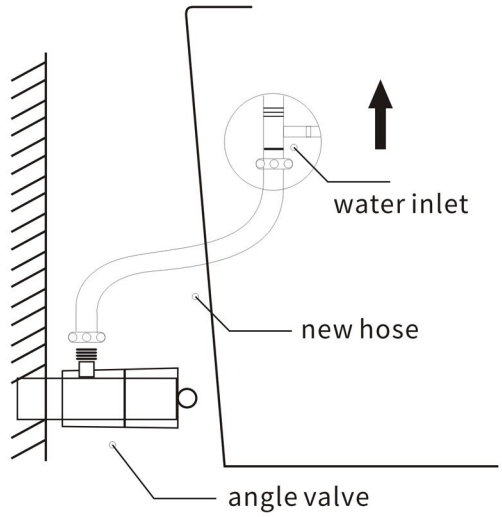


Daily maintenance

Main unit care and maintenace

1.Shut off power supply before maintenance.

2.Lift the seat upward, press down the button located on the right side of the main unit and pull out the seat. Wipe the stains with a soft damp cloth.

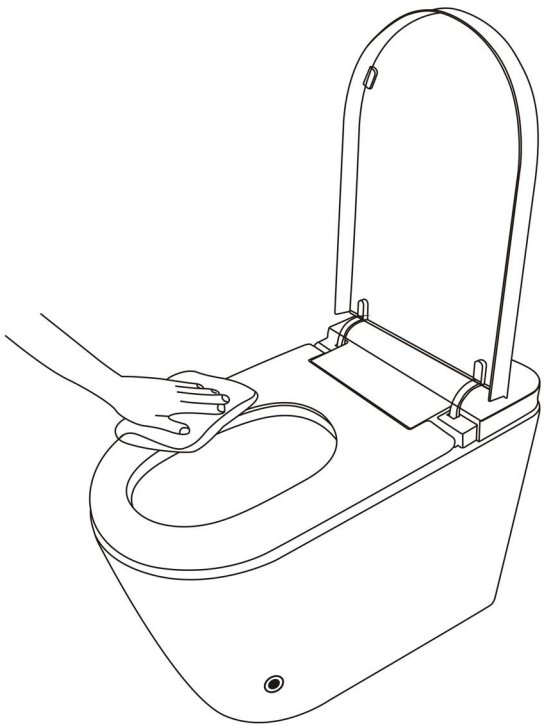


3.Safety self-inspection:
After cleaning, reconnect the toilet with the power supply.
Spray nozzle maintenance and care

4.Spray nozzle maintenance and care:


Spray nozzle maintenance and care

1.Nozzle self-cleaning: Press the "nozzle cleaning" button, and the nozzle will move forward and self-clean.

2.Spray nozzle disassembly:
When the wand moves forward, the nozzle can be disassembled for cleaning.

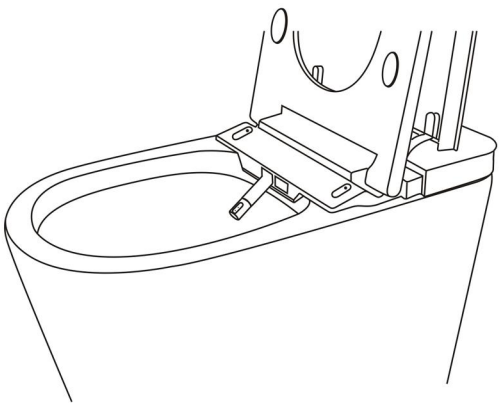

3.Use a soft cloth or soft brush to clean.
Do not pull or push the wand to avoid damage.

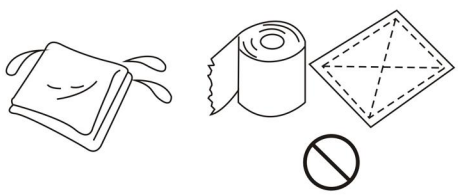


4.Nozzle assembly:
Reinstall the nozzle to the wand and press the "nozzle cleaning" button.
The nozzle will move back to the original position.

Emergency Troubleshooting

1. Power failure


- Manually press button of full/half flush to perform the toilet flushing.

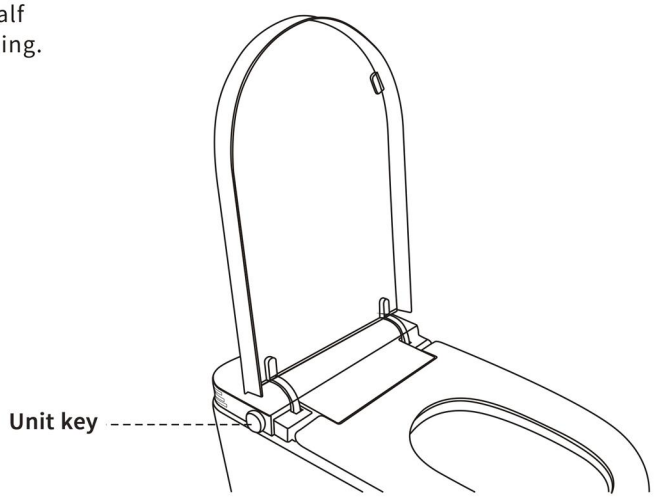

2.Water failure

- Pour approximately 8 liters of water into a barrel and flush the ceramic bowl.


Note: Be careful not to spill water from the bowl.

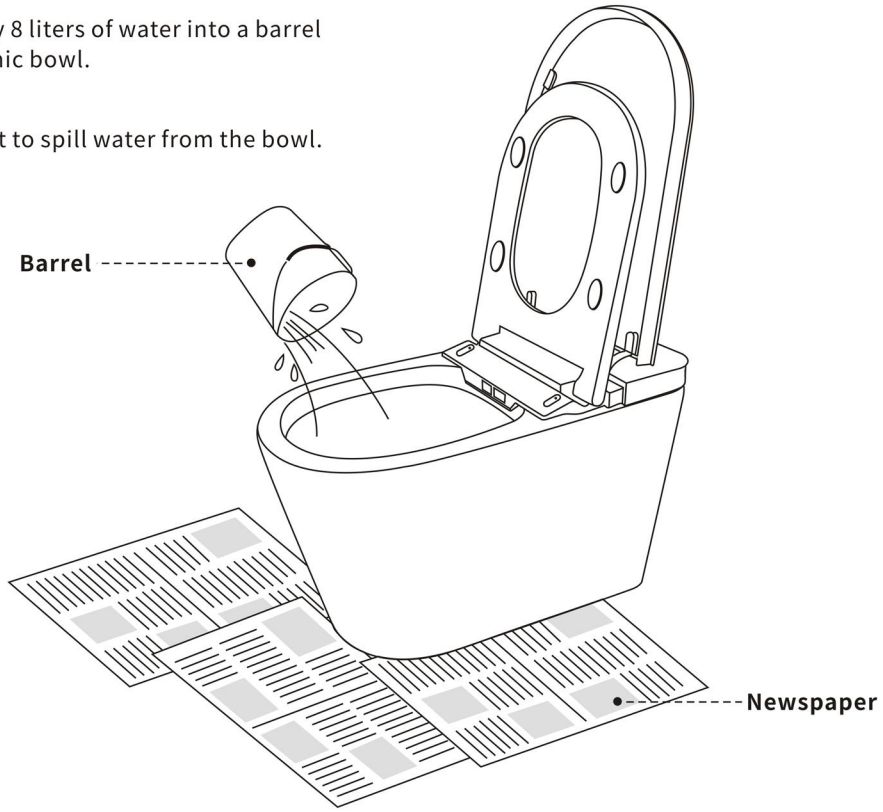

Failure of remote control

1.Operate the panels on bidet seat to perform.

2.Turn the seat upward open, press down the button located on the right side of main unit and pull out the seat.Wipe the stain with a soft damp cloth.

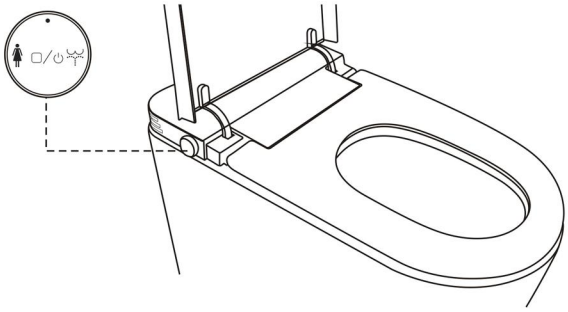

2.Battery replacement

- Press the “power” button on panel and electricity indicator will turn off
- Take remote control from hanger
- Remove the remote control from the hanger, open the battery cover, replace the battery, and put it back on the hanger.
- Press the “power” button again and electricity indicator will turn on.

Remarks：When replacing the battery, the automatic function and timing function will be cancelled and need to be reset.


When the product is left unused for a long time

- Especially during the winter season the water inside the tank should be drained to avoid freezing.

To discharge water

1.Turn off the water supply angle valve
2.Cut off the electricity
3.Discharge water

- Slightly press inward the discharging button to discharge water.

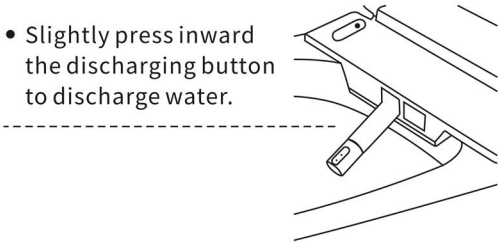

4.Handle the remaining water in bow

- It is suggested to put some antifreeze into water inside the bowl.


Note：Before water discharging, the power must be cut off!

Screen Sign



	• The sign keep flashing when “Electric Power” turned on. The sign witout flashing when “Electric Power” turned off.
	• The sign keep changing when adjusting the water pressure.
	• The sign keep changing when adjusting the drying temperature
	• The sign keep flashing when adjusting the water temperature.
	• The sign keep flashing when adjusting the seat temperature.
	• The sign keep flashing when "female cleaning/hip cleaning" function working .
	• The sign keep lighting when "drying" function working .
	• The sign keep lighting when "body leave toilet". The sign keep flashing when "body sit on the seat".
	• The sign flashing when toilet flushing.
ECO	• The sign lighting when ECO mold turn on . The sign goes off when ECO mold turn off.

Side Buttons

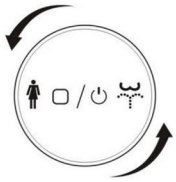

Female cleaning

Short swift “ ” one time start female cleaning.
Short swift “ ” two time female cleaning moving massage.
Short swift “ ” three time female cleaning in one position.

Hip cleaning

Short swift “ ” one time start hip cleaning.
Short swift “ ” two time hip cleaning moving massage.
Short swift “ ” three time female cleaning in one position.



Body leave the sensor area


Press side button one time “start flushing” / “STOP”
Press button last 5 seconds , toilet enter “standby mode” (turn off toilet) / restart the toilet.

Body touching sensor area

Press side button “start drying” .


Instructions for use

Overview of the remote control panel

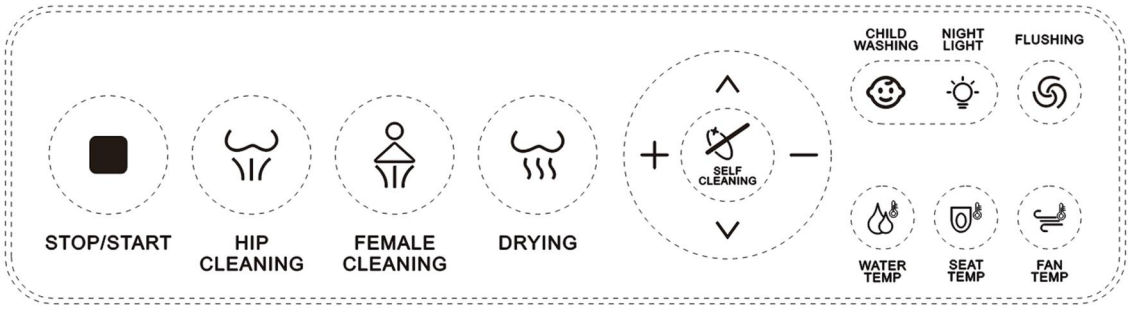

	Hip Cleaning	• Press " Hip cleaning" button, the water will come out to clean the hip portion of body. • Press one time,hip cleaning ,press second time hip massage,press third time nozzle clean in one position. • It will automatically stop after 90 seconds of cleaning. If press "stop/start button when using, the function will stop immediately.
	Female Cleaning	• Press "Female cleaning" button, the water will come out to clean the front portion of body. • Press one time,Female cleaning ,press second time female clean moving massage press third time nozzle clean in one position. • It will automatically stop after 90 seconds of cleaning. If press "stop/start" button when using,the function will stop immediately.
	Stop/Start	• "Stop/Start" can be turned on/off by long-press of this key Short press "STOP/START" one time stop function working .
	Drying	• Press "Drying" button start drying. Press "STOP/ START" button when using, the function will stop immediately.
	Child Washing	• Press"Child Washing" button,the water will come out to clean the body. Press one time "Children cleaning" press second time children cleaning moving massage, press third time nozzle clean in one position. It will automatically stop after 90 seconds of cleaning. If press "STOP/START " button when using, the function will stop immediately.
+	**Water Pressure**	• Press "+" increase the water pressure. • Water pressure at highest level will hear "Bee~Bee~" two sounds
−	**Water Pressure**	• Press "-" reduce the water pressure. • Water pressure at lowest level will hear "Bee~Bee~" two sounds
∧	**Nozzle Position**	• Press "∧" nozzle position move to upward position , 3 position option for user
∨	**Nozzle Position**	• Press "∨" nozzle position move to upward position , 3 position option for user

	Water Temp	• Press “Water Temp” adjust water temperature in Fahrenheit • Nozzle close: 00F, the indicator light turns off. Press one time : 88F ,the indicator light turns blue Press second time: 93F,the indicator light turns pink. Press thrid time: 99F,the indicator light turns red
	Seat Temp	• Press “Seat Temp” adjust seat temperature in Fahrenheit • Seat heating close :00F ,the indicator light turns off. Press one time : 93F ,the indicator light turns blue Press second time: 98F,the indicator light turns pink. Press thrid time: 104F,the indicator light turns red
	Fan Temp	• Press “Fan Temp” adjust drying wind temperature in Fahrenheit • Nozzle close :00F ,the indicator light turns off. Press one time : 104F ,the indicator light turns blue Press second time: 113F,the indicator light turns pink. Press thrid time: 122F,the indicator light turns red
	Flushing	• Press ”Flushing” button, start flushing the toilet.
	Night Light	• Short press “Night light ” button ,turn on the night light , press once againt turn off the night light. Long press “Night light” button , turn on the “ECO” mode, long press againt turn off the “ECO” mode.
	Self-Cleaning	• Press ”Self-Cleaning” nozzle comes out with water to clean the nozzle .

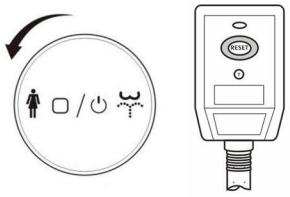

Remote Control connect to the smart cover operation:

1.Connect plug into outlet , press “RECET” button to rework the smart toilet.
2.Keep swift the side button toward the female cleaning last 3 seconds , when hear “Bee~ ” on sound
3.Press the any button on the controller, when hear sound “Bee~” , connect successful.

Troubleshooting Guide

Problem	Cause
Turn off/on body sensor flushing	1.Keep Press bottom “STOP/START” 3 seconds the smart toiler enter power-off mode 2.Short press remote control “FEMALE CLEANING” within 3 seconds 3.After hearing the sound -- One “beep” sensor flushing Off. Two “beeps” sensor flushing On. Keep press the “STOP/START” button 3seconds again to save the setting.
No flushing	1.Checking water supply hose if buckling ? Solution：If yes, solve the buckling 2.Checking angle vale if it is turn off ? Solution：If yes, turn on the angle vale. 3.Checking water supply is cut off ? Solution：If yes, connect water supply and wait for the water 4.Checking if power outage ? Solution: If yes, connect the "power outage flushing battery". If no,checking the plug in if connect well in the outlet
Poor flushing	1.Checking water supply hose if buckling ? Solution：If yes, solve the buckling 2.Checking angle vale if it is turn off ? Solution：If yes, turn on the angle vale. 3.Checking angle vale fliter is dirty and cause block ? Solution：If yes, clean the fliter. 4.Checking if the inlet house supply is folded ? Solution: If yes, adjust the inlet house well connet with water.
The cleaning water not hot	1.Checking if the water temperature is setted ? Solution：If no, rest the water temperature. 2.Checking the heating accessories is not working? Attention：Please let the professional operator to check for it. Solution：If yes, contract after servise to replace it .
The seat temperature not hot	1.Checking if the seat temperature is setted ? Solution：If no, rest the seat temperature. 2.Checking the smart toilet is in “ECO Mod” or "standby mode"? Solution：If yes, shift the function mode as the guid and wait for 3 mintues . 3.Checking the heating accessories is not working? Attention：Please let the professional operator to check for it. Solution：If yes, contract after servise to replace it .
NO wind out	1.Checking the smart toilet is in “ECO Mod” or "standby mode"? Solution：If yes, shift the function mode as the guid and wait for 3 mintues . 3.Checking if body touching the sensor area ? Solution：If no, keep touching sensor to working the function againt .
Spray wand cannot retracted/ cannot stretch out	1.Checking if get stuck by impurities? Solution：If yes, clear away the impurities or pull the nozzle. 2.Checking if body touching the sensor area ? Solution：If no, keep touching sensor to working the function againt .
Controller cannot work	1.Checking if reverse the battery? Solution：If no, reverse the battery. 2.Checking if controler is connect with the toilet ? Solution：If no, reconnet the controler with toilet as guid .
Caution	If the problem cannot be solved using the above methods, please turn off the power and contact the service provider for maintenance.
	If the leakage circuit breaker trips frequently,it means that the product has an electricity leakage,so please turn off the power and contact the service provider for maintenance