
ASSEMBLY INSTRUCTION
INSTRUCTIONS DE MONTAGE

Nova-S30/Nova-S36

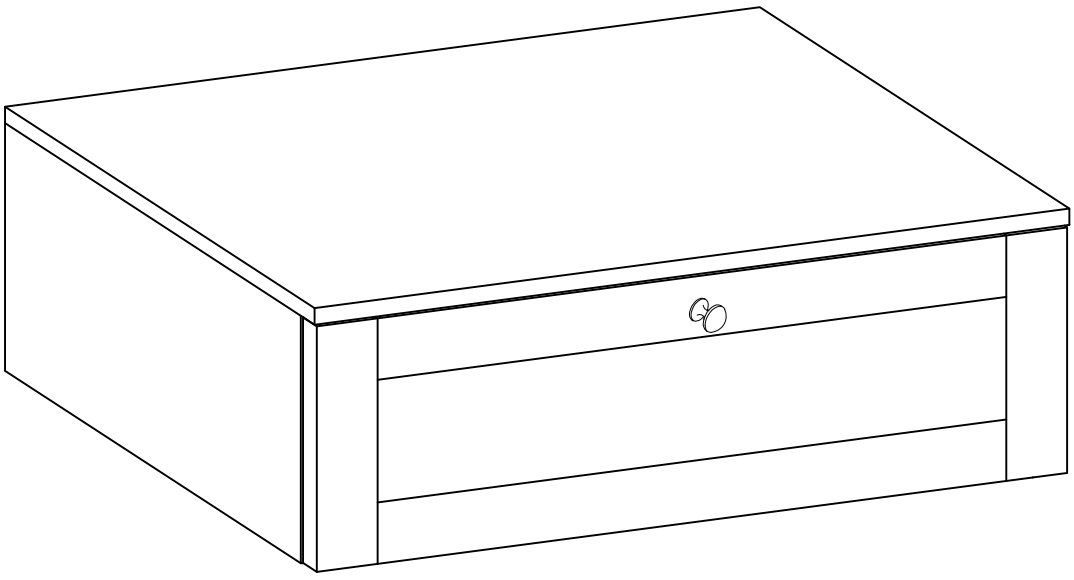


Before Installation

Important-Please read these instructions fully before starting assembly


Thank you for purchasing this quality product.Be sure to check all packing materials carefully for small parts,which may have come loose inside the carton during shipment.Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below.Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person;this will make the assembly easier,and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area,small parts could choke if swallowed.·Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Cam Lock Assembly Instructions

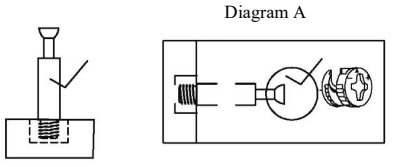


Insert Cam Bolt into hole as shown in diagram A.

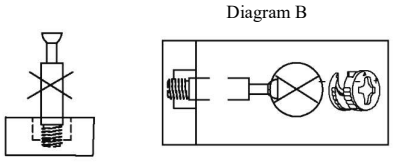


Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.

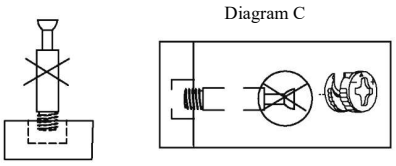


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C,as this will cause the Cam Lock to be too loose,and not interlock properly.




Connect the panels together.

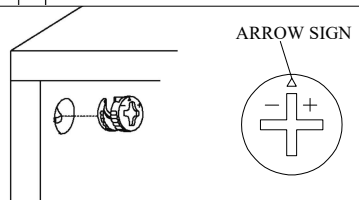








Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

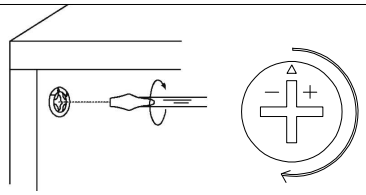








To tighten the Cam Lock,turn it clockwise on half a turn with a flat screwdriver.
*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.

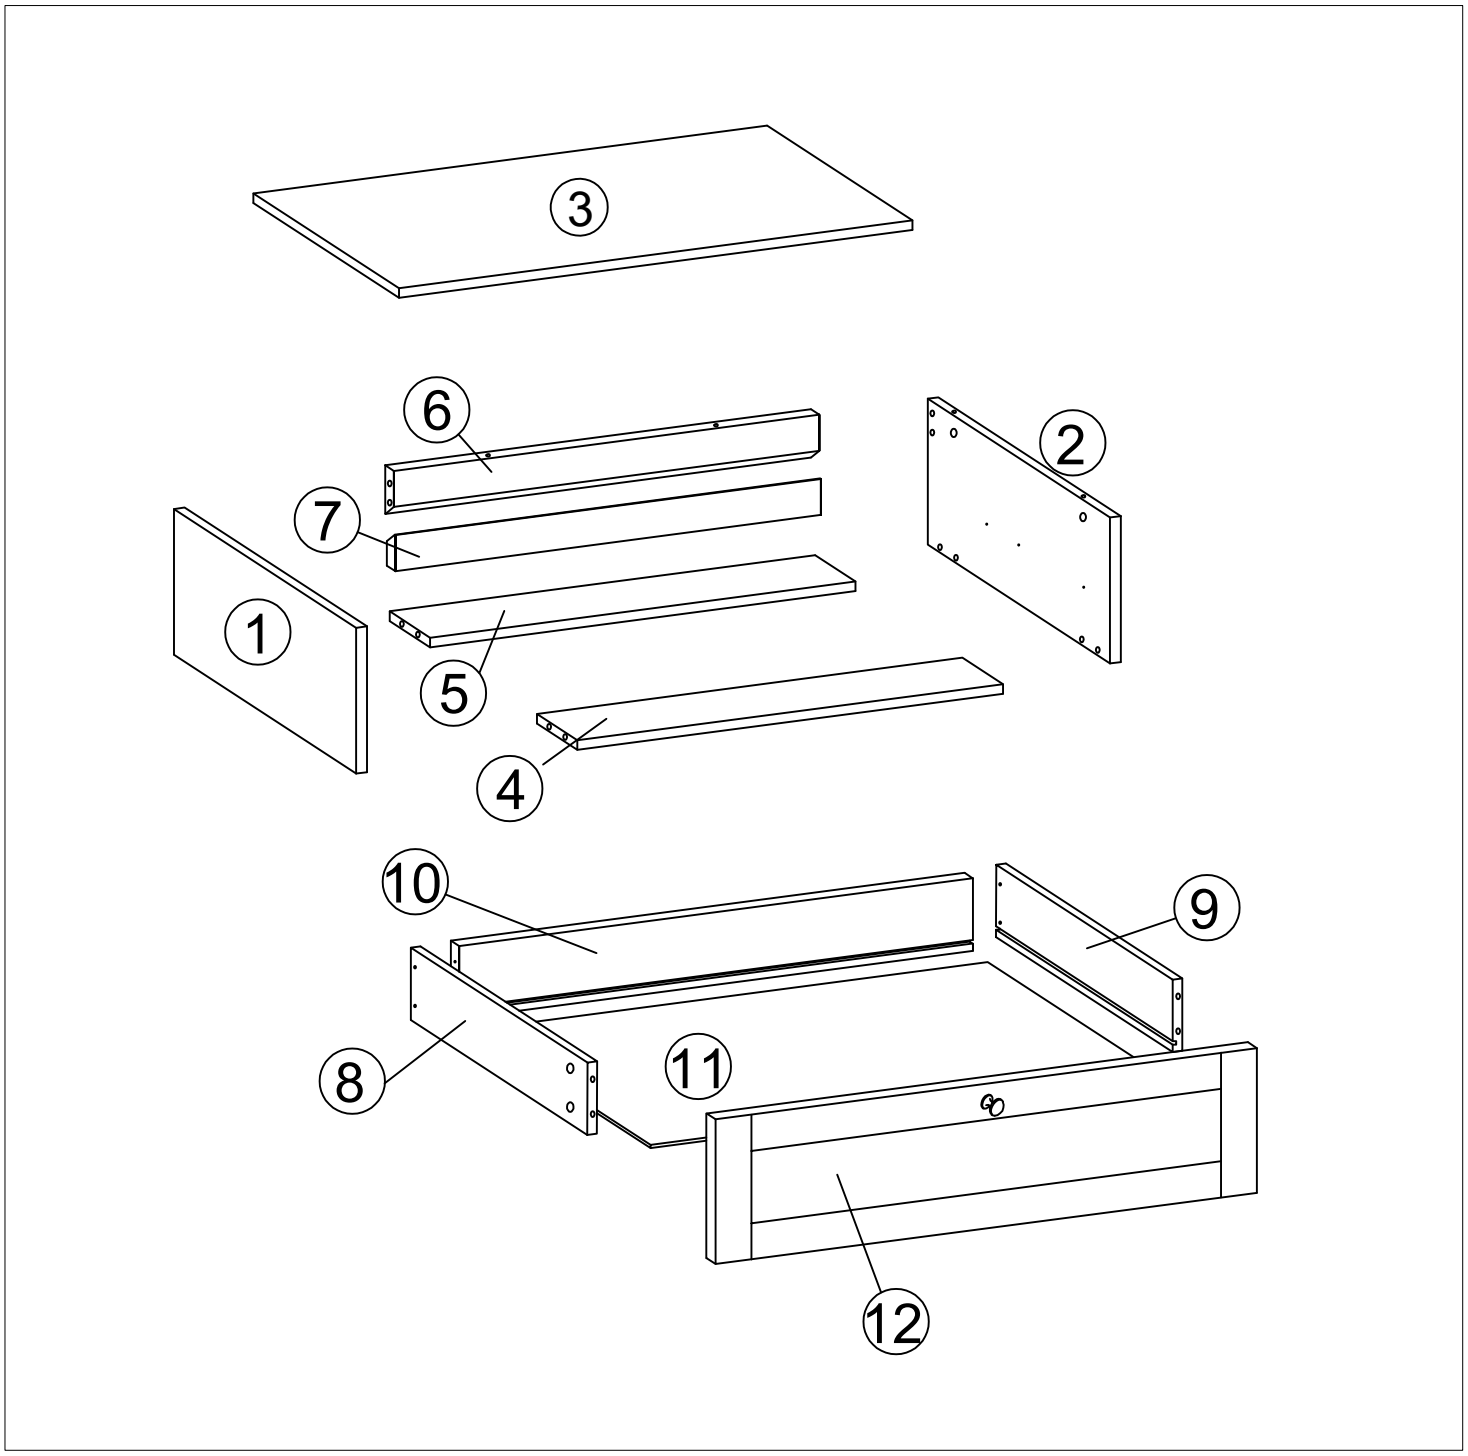


HARDWARE LIST

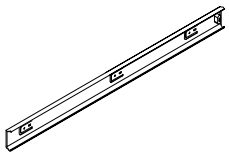
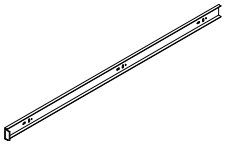
 Φ6x35mm	 Φ15x11.5mm	 M4x16mm	 M4x40mm		
A x 20+1	B x 20+1	C x 28+1	D x 4	E x 2	F x 1
 M4x20mm	 Φ8x40mm	 M4x60mm			
G x 1	H x 4	I x 4	a x 2	b x 2	

PARTS LIST

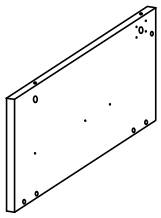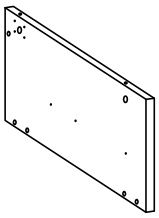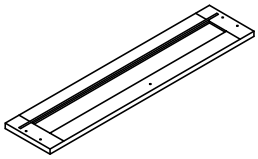				
① x 1	② x 1	③ x 1	④ x 1	⑤ x 1
				
⑥ x 1	⑦ x 1	⑧ x 1	⑨ x 1	⑩ x 1
				
⑪ x 1	⑫ x 1			

Step 1

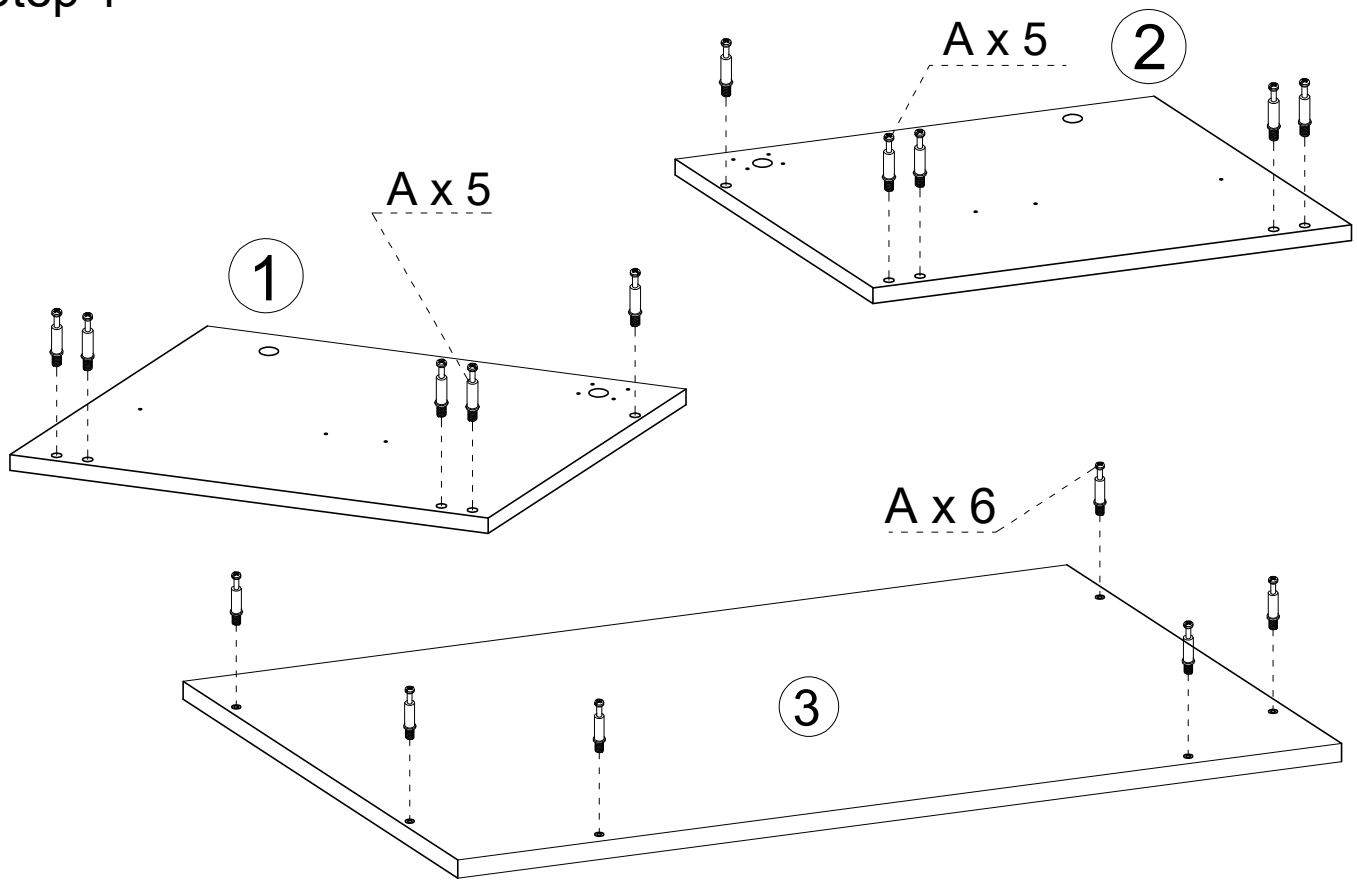

 Φ6x35mm			
A x 16	① x 1	② x 1	③ x 1


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.


Las diapositivas deben separarse antes del montaje.
Después de la separación,déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.
Après la séparation,mettez de cõté jusqu'au moment de l'assemblage.


STEP 1 : Extend Slide
Extender la diapositiva

Pay attention when connecting !
The sliding module must be at the front end.

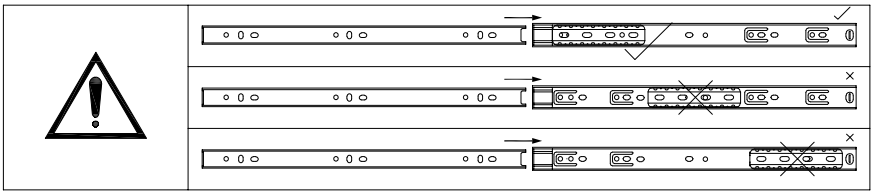

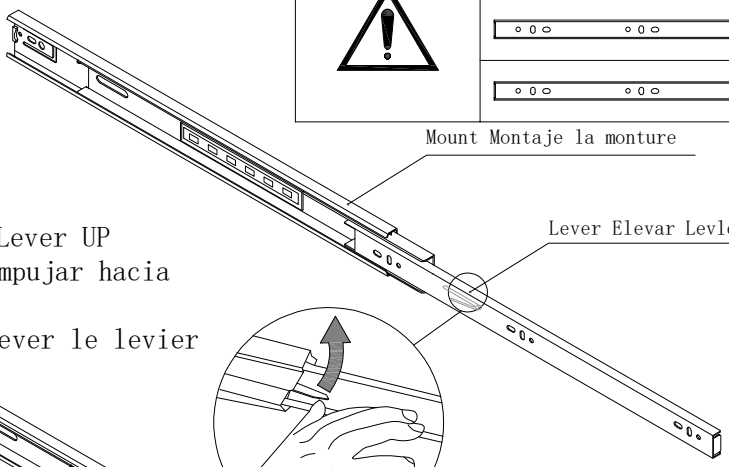


STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

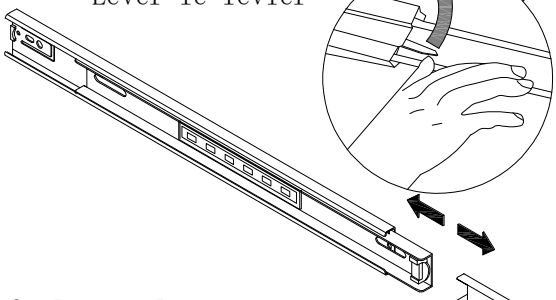



Push lever for the left of drawer ,
press the lever for the right of drawer.


STEP 3: Remove Runner
Quitar el corredor
Enever le coureur

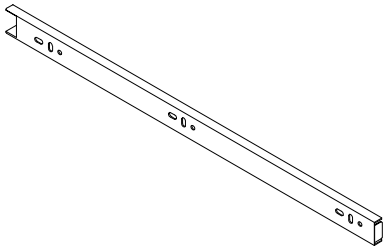


Step 2

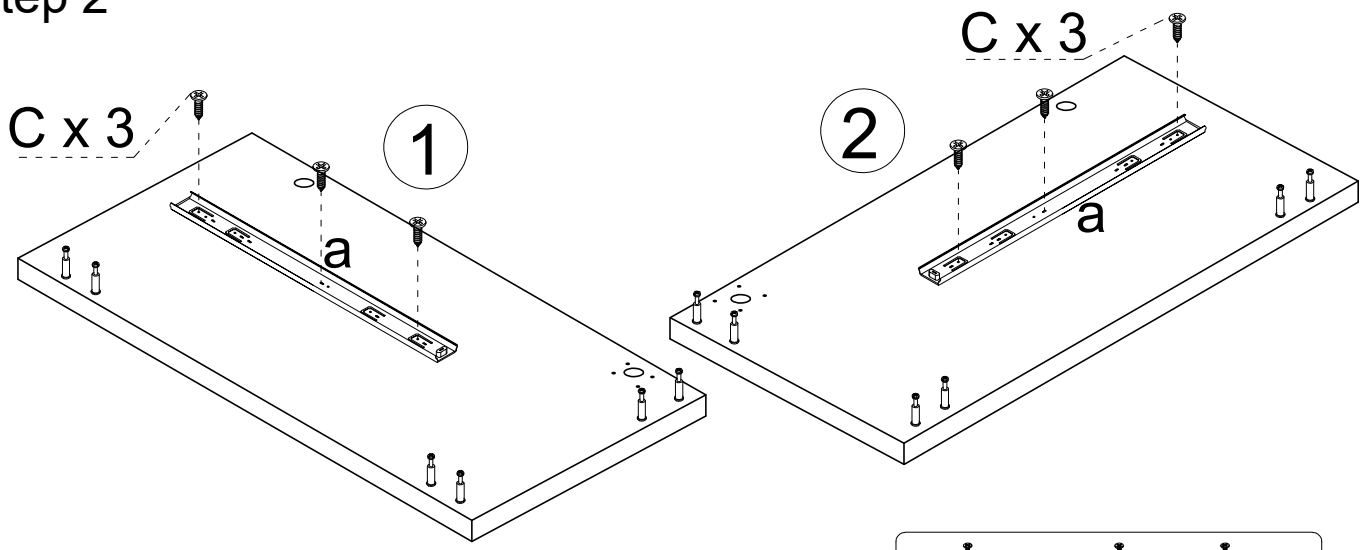


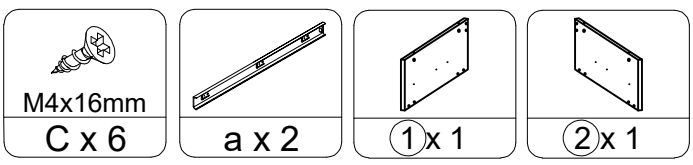


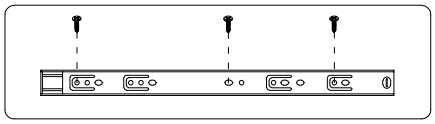


Step 3

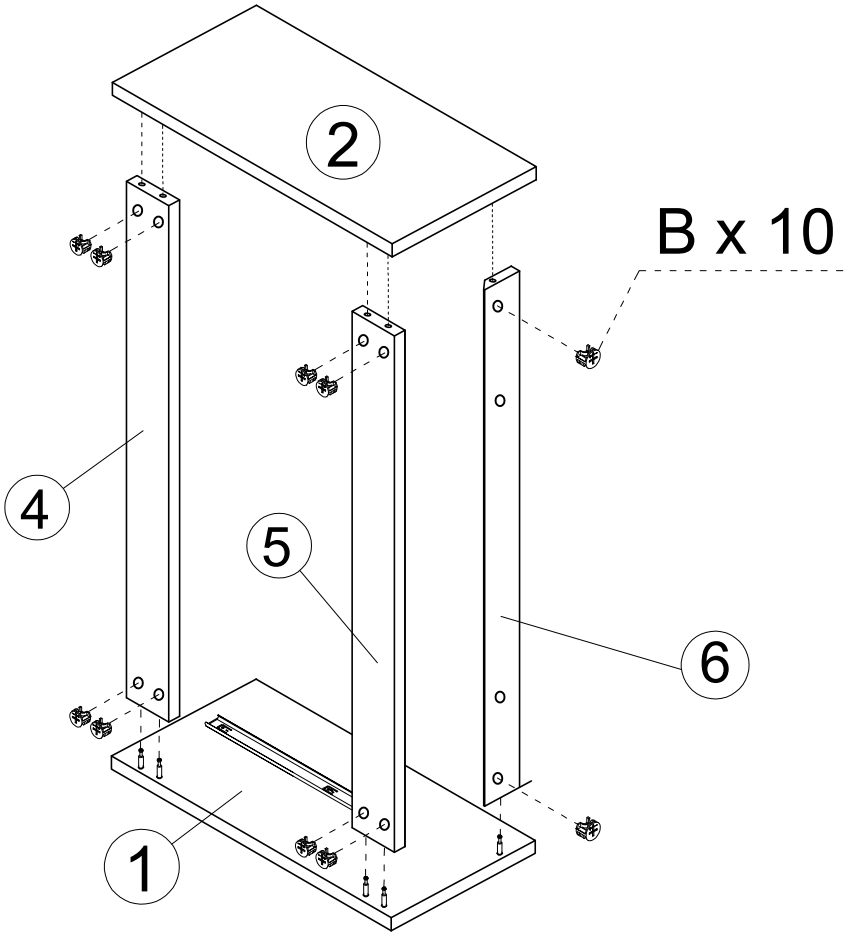

2
B x 10
4
5
6
1

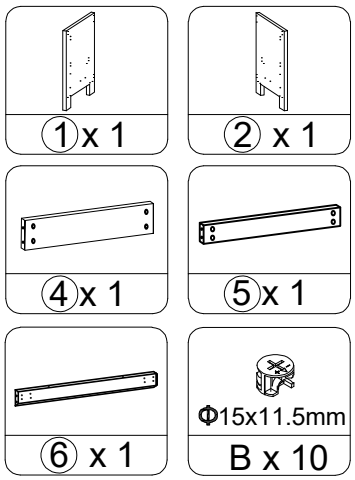
1 x 1
2 x 1
4 x 1
5 x 1
6 x 1
Φ15x11.5mm
B x 10

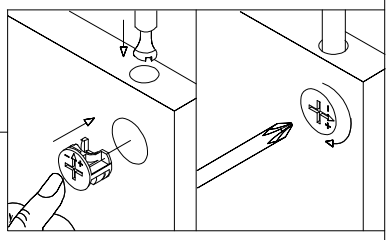



Step 4

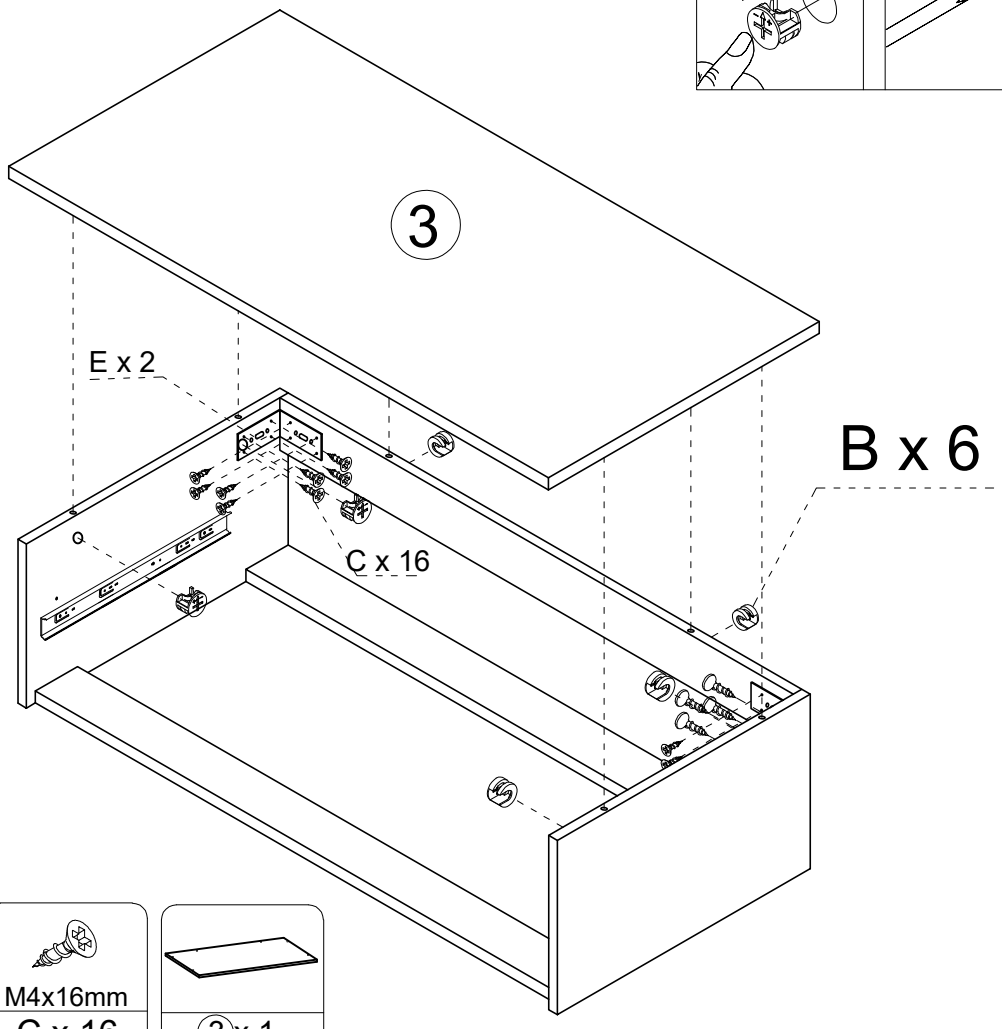
3
E x 2
B x 6
C x 16

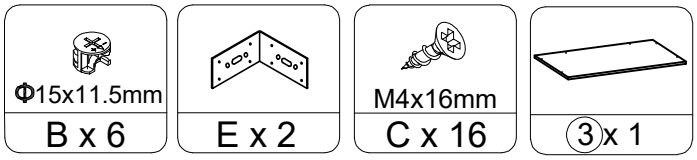
Φ15x11.5mm
B x 6
E x 2
M4x16mm
C x 16
3 x 1


Step 5

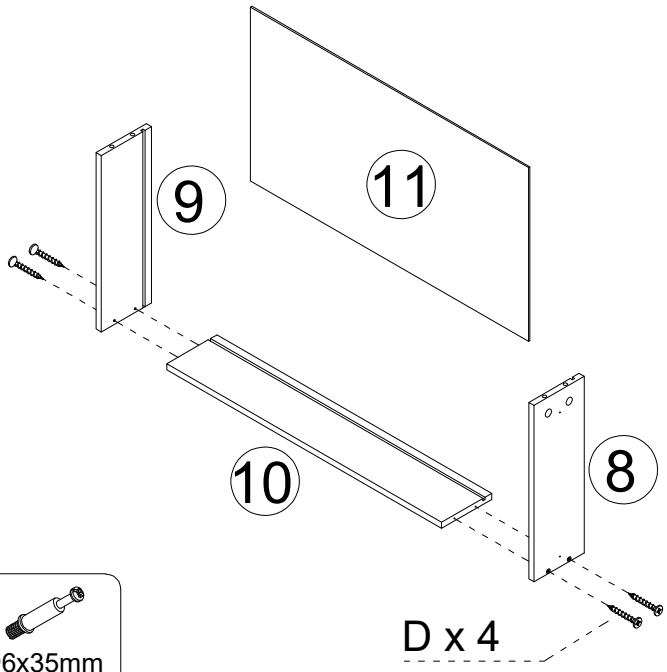


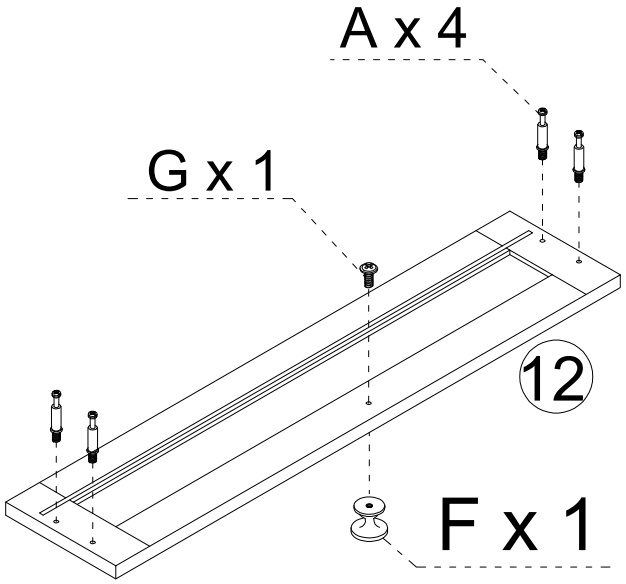


Φ6x35mm	M4x40mm		M4x20mm					
A x 4	D x 4	F x 1	G x 1	8 x 1	9 x 1	10 x 1	11 x 1	12 x 1

Step 6

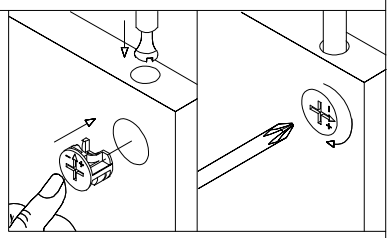


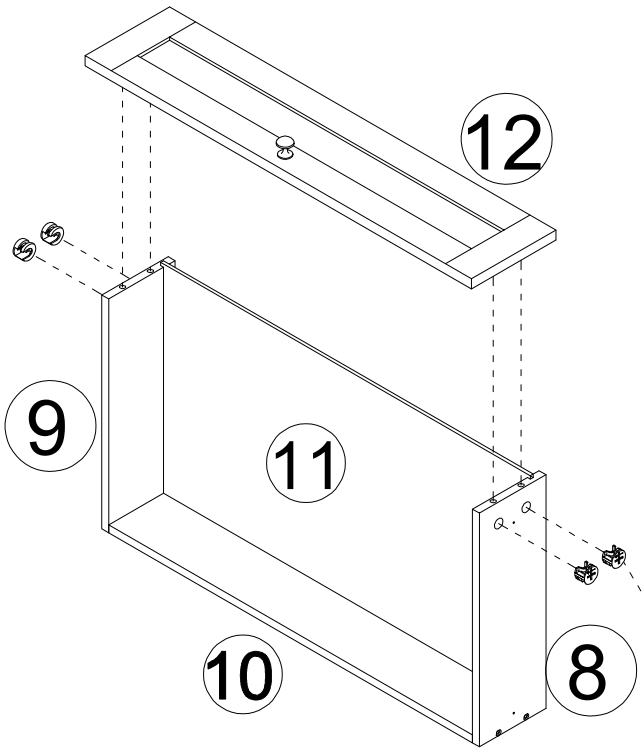

Φ15x11.5mm	M4x16mm		
B x 4	C x 6	b x 2	12 x 1

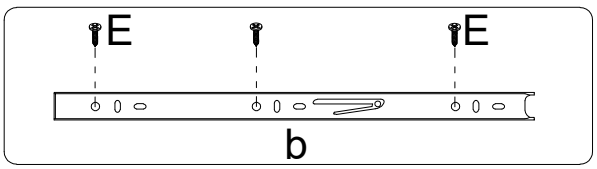

Step 7

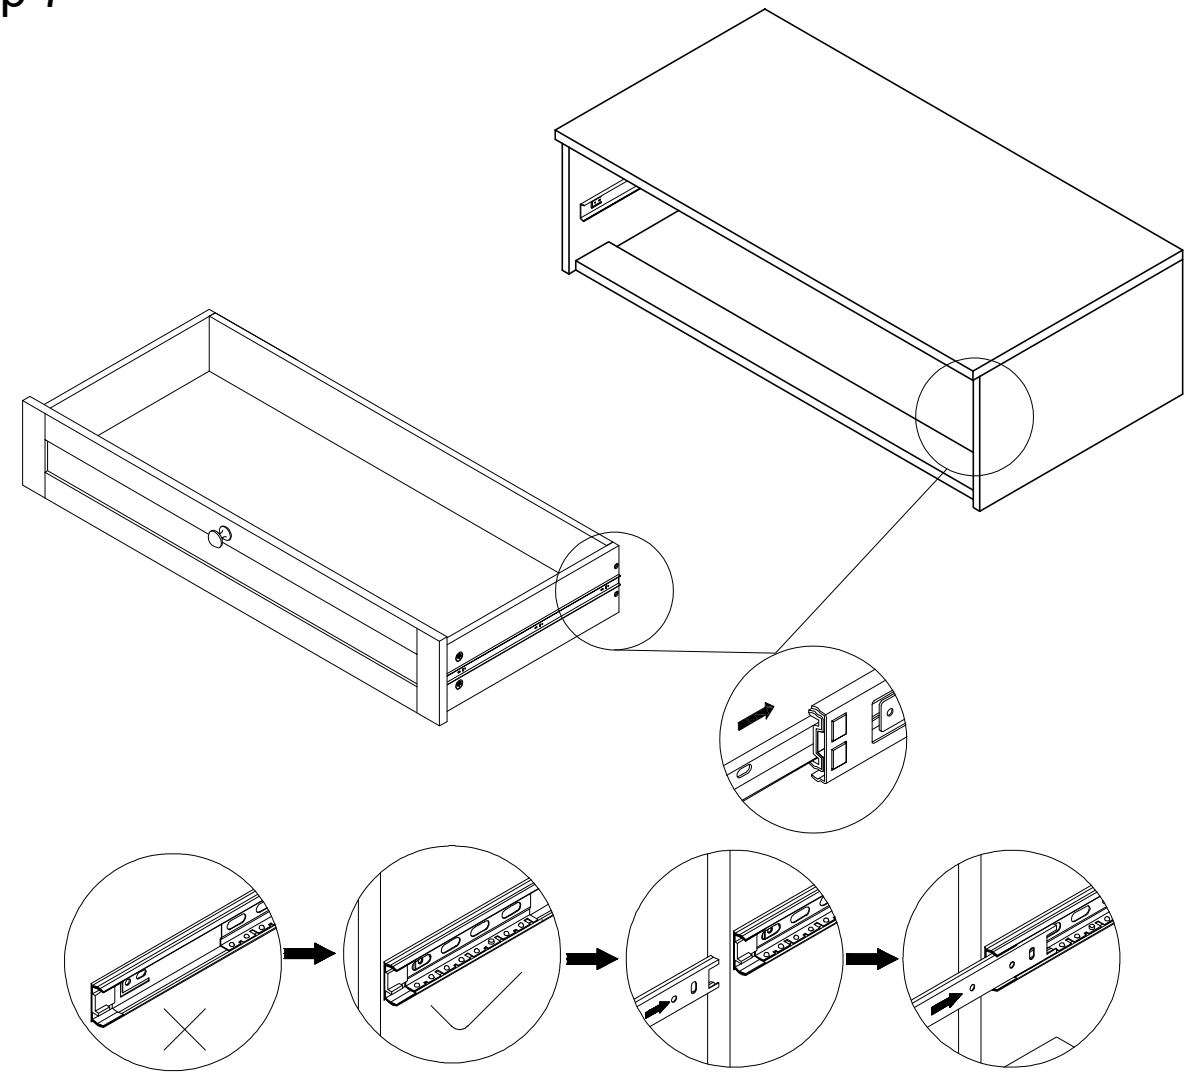

Step 8

