
BALI LOW CABINET WITH DRAWER

ASSEMBLY INSTRUCTIONS

SKU 7012AY - Black
SKU 7013AY - Riviera
SKU 7022AY - White

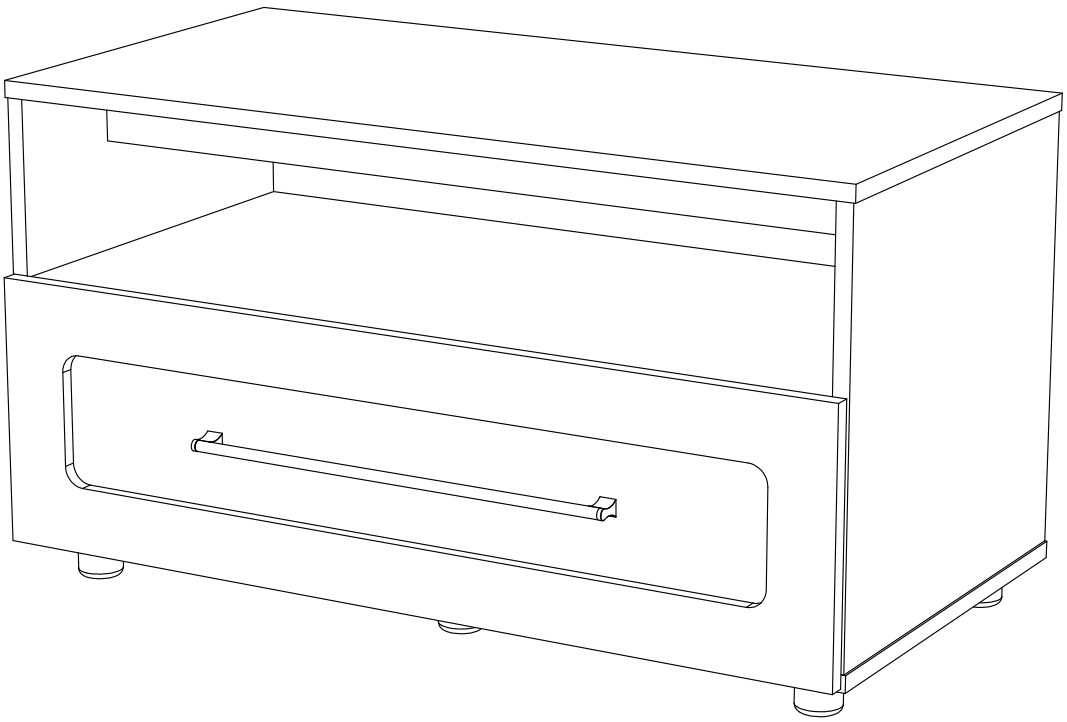

Seconique USA
seconique-us.com

SB SOLID WOOD FURNITURE

ARTELY®


IMPORTANT
PLEASE READ BEFORE YOU CONTINUE FURTHER
FOR DOMESTIC USE ONLY
CARE AND MAITENANCE

- After unpacking this product please keep the original packaging in case it needs to be returned for any reason.
- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not drag or push items across your furniture as this may cause the surface to scratch.
- Do not place this product next to radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is Wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use soft cotton or micro fibre cloth and do not use detergents of any kind.
- Do not place on a wet or damp floor as staining may occur to your floor.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.

---

how to contact us:

More details how to assemble your product at:seconique-us.com then follows:



info@seconiqueus.com



seconique-us.com

---

seconique-us.com

YouTube









seconique-us.com

seconique US

@seconiqueus

CERTIFICATION

FURNITURE MADE IN BRAZIL

Your product is made from responsibly managed forests, verified recycled sources, and controlled wood!




JERRY A. SOUZA
DIRECTOR


Seconique Brasil
SB Solid Wood Furniture Group

SB SOLID WOOD FURNITURE GROUP | Seconique USA | ARTELY®

www.seconique-us.com
email: feedback@seconique-us.com


Create thousands of unique looks with this versatile range! Designed to complement every part of your home—living room, entrance hall, office, library, laundry, and beyond. Discover your perfect combination today!

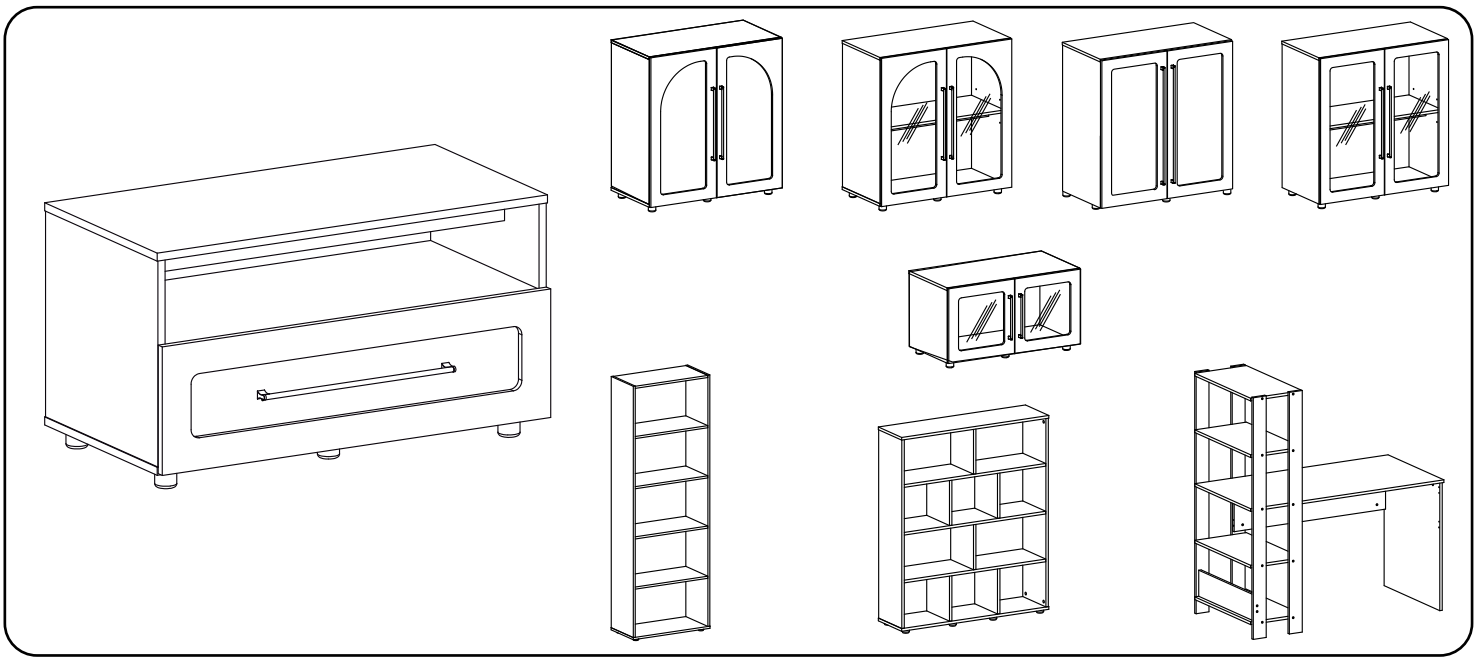


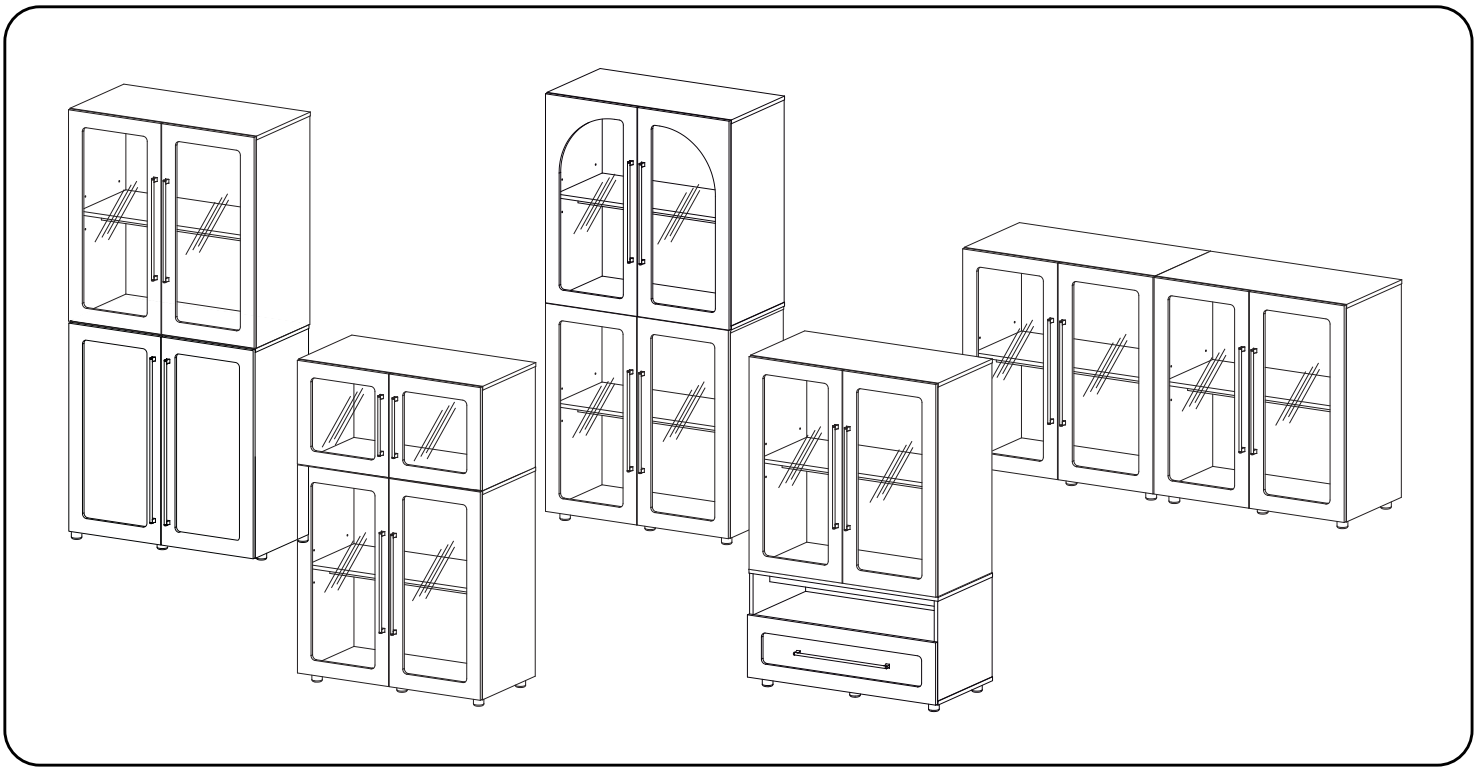

SCAN QR CODE

TOOLS REQUIRED

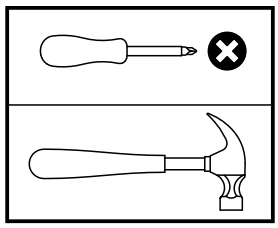

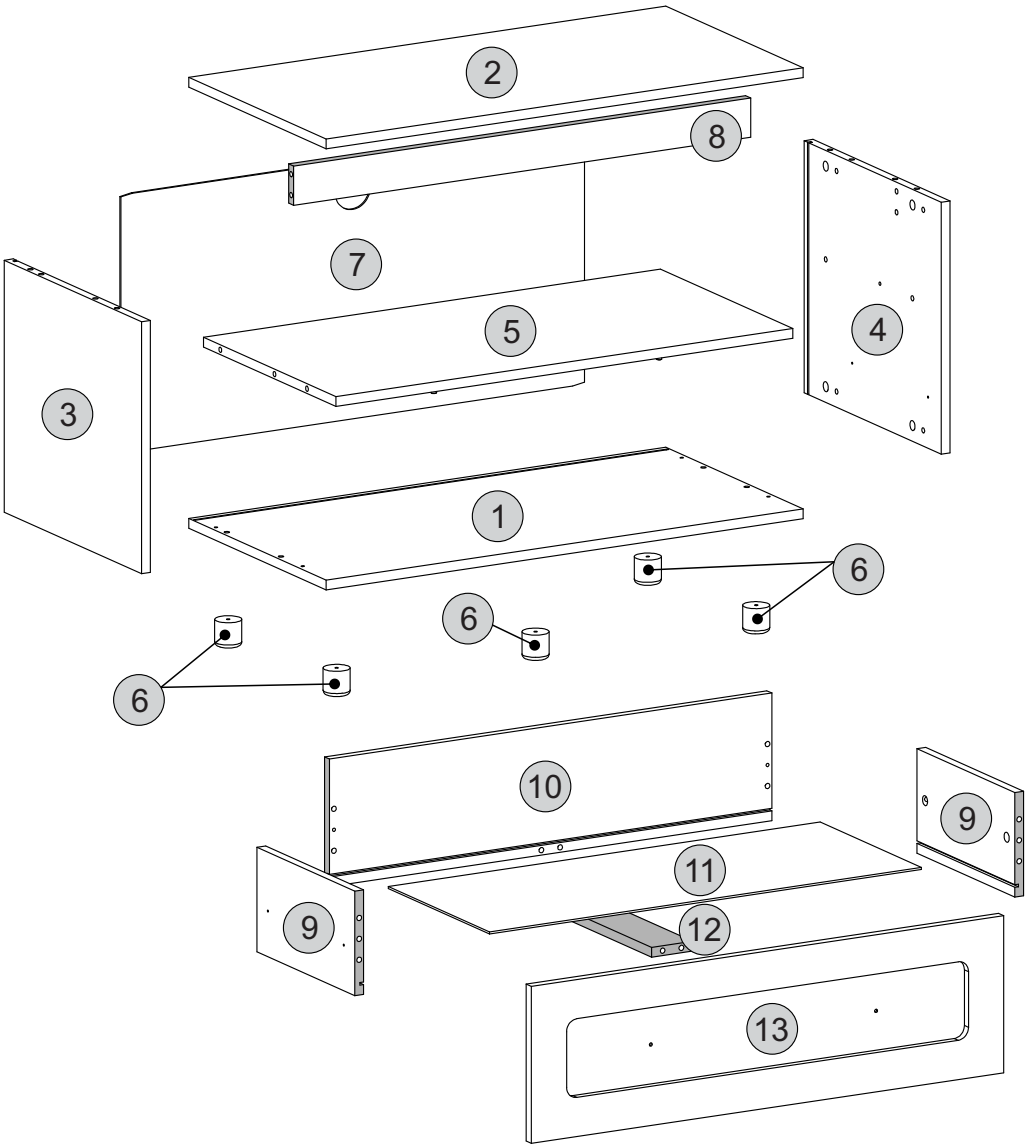











Back Crossbeam

PARTS LIST

Please Note:
The below parts have all been stamped with the part number to help identify them during assembly.


Part Number	Part Description	Quantity	Carton
1	Base Panel	1	1/1
2	Top Panel	1	1/1
3	Left Side Panel	1	1/1
4	Right Side Panel	1	1/1
5	Shelf Panel	1	1/1
6	Foot	5	1/1
7	Back Panel	1	1/1
8	Crosspiece Panel	1	1/1
9	Drawer Side	2	1/1
10	Drawer Back Panel	1	1/1
11	Drawer Bottom	1	1/1
12	Drawer Crosspiece	1	1/1
13	Drawer Front	1	1/1


Hardware List


Part	Size	Name	Quantity
A 	8x30mm	Wooden dowel	30
B 	Ø7x30mm	Cam Bolt	14
C 	Ø15x10mm	Cam Lock	14
D 	384mm	Handle	1
E 	Ø3x16mm	Screw	4
F 	Ø4x14mm	Screw	10
G 	Ø4x20mm	Screw	5
H 	Ø5x40mm	Screw	5
I 	300mm	Slide	2
J 	Ø 19mm	Sticker	22
K 	14.7x30mm	Support	4
L 	1/4x5/8	Washer	2
M 	20x200mm	Wall Anchor	1

The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.


TIPS FOR FITTINGS CAM-LOCKS



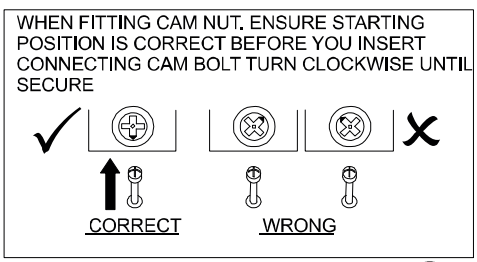

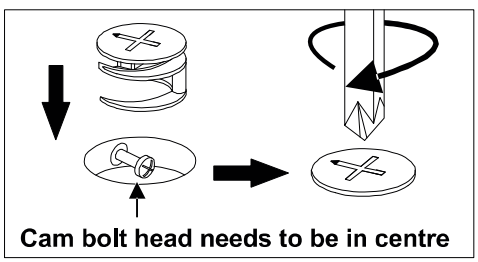

CAMBOLT
Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)

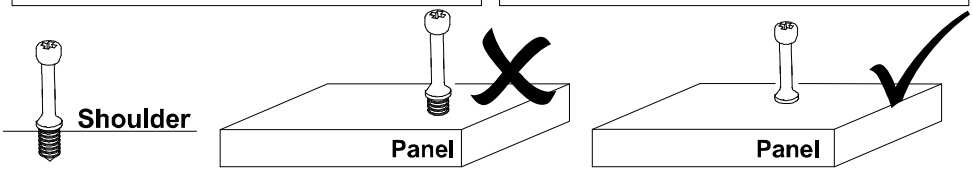


STEP 1


PARTS REQUIRED


1 - BASE PANEL	x1


HARDWARE REQUIRED

B		04

TOOLS REQUIRED



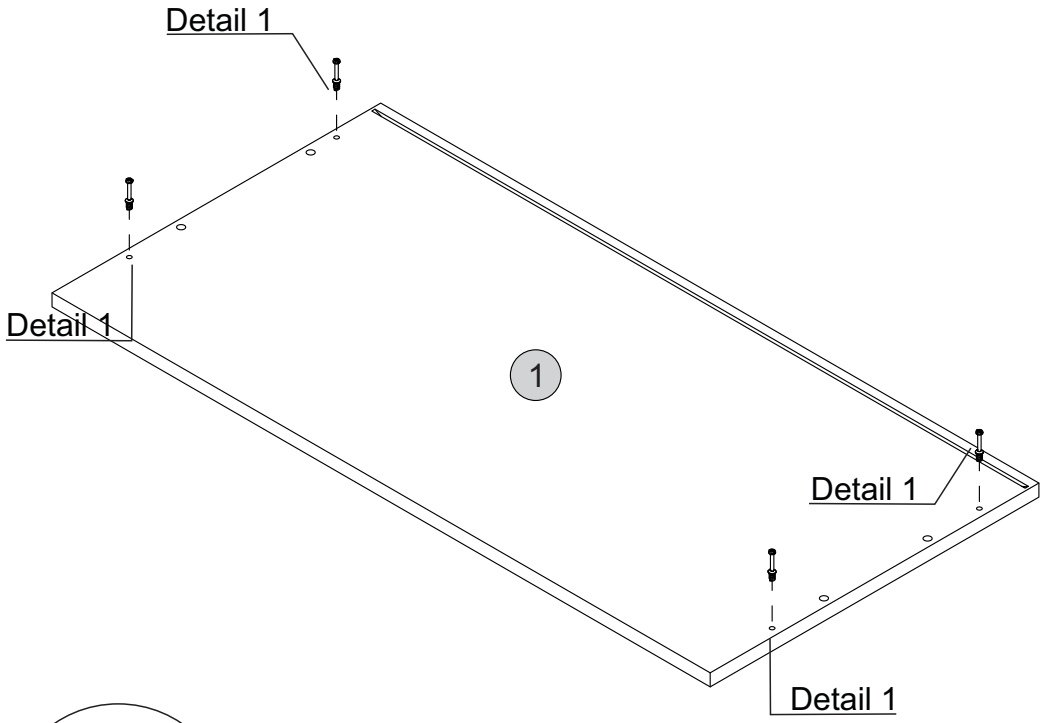

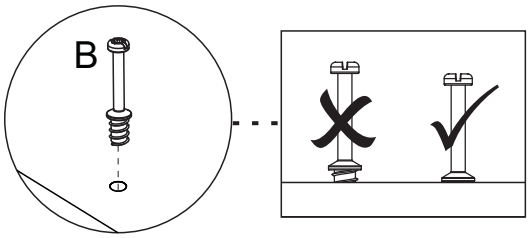


Detail 1

STEP 2


PARTS REQUIRED


2 - TOP PANEL	x1


HARDWARE REQUIRED

B		04

TOOLS REQUIRED



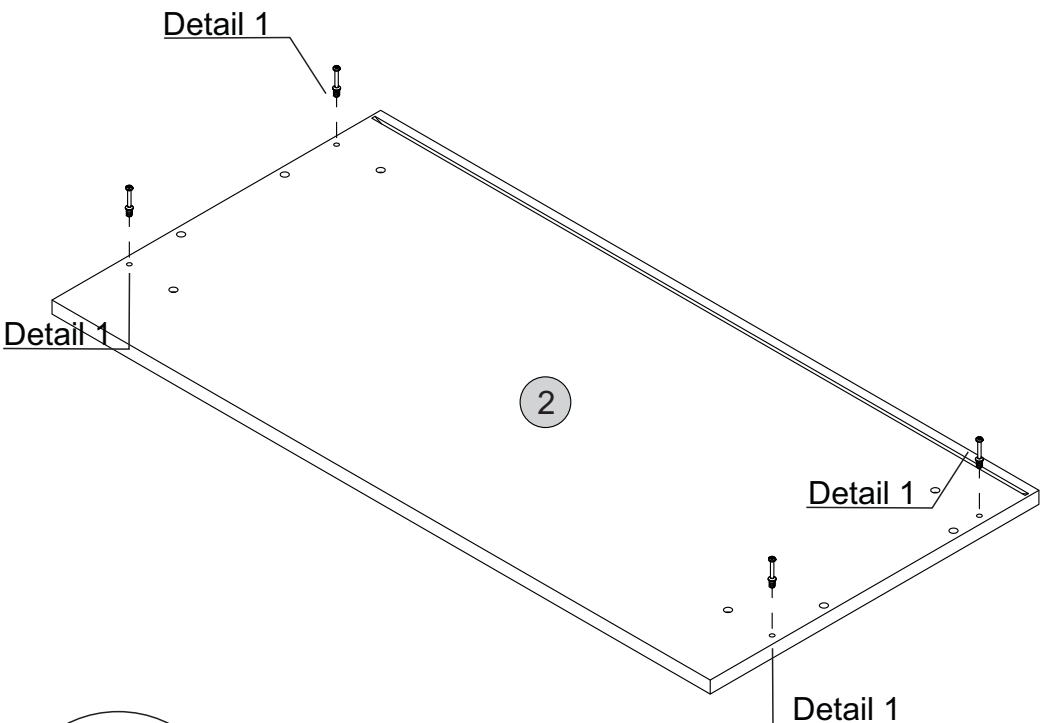

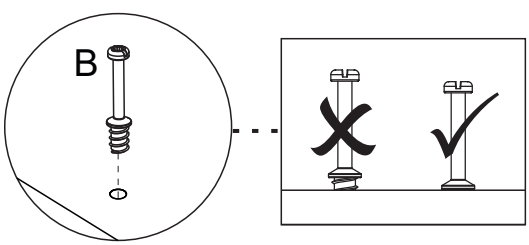

Detail 1

STEP 3


PARTS REQUIRED


3 - LEFT SIDE PANEL	x1
4 - RIGHT SIDE PANEL	x1

HARDWARE REQUIRED

A		08
B		02

TOOLS REQUIRED

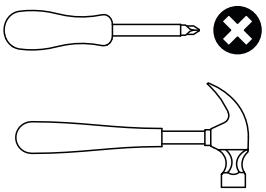

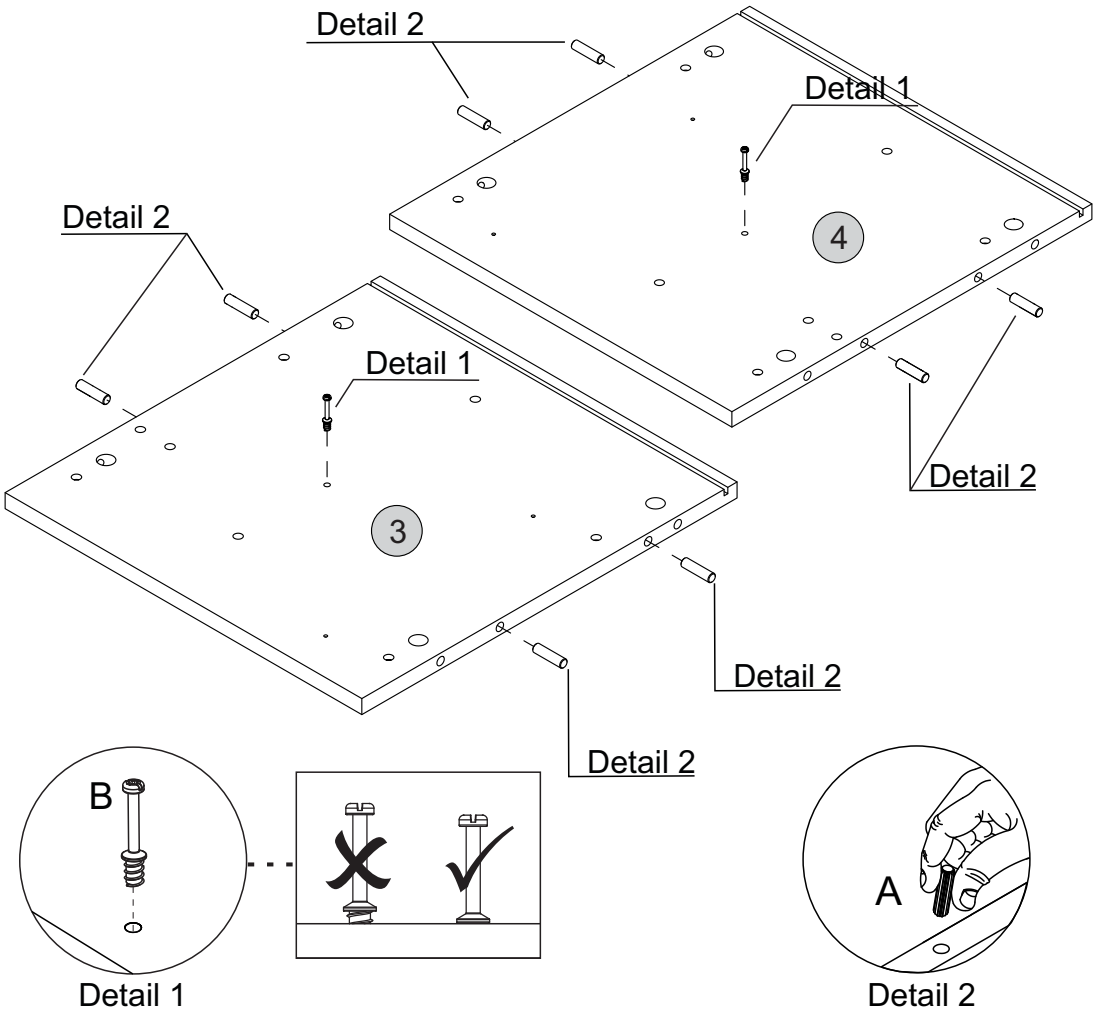

STEP 4


PARTS REQUIRED


3 - LEFT SIDE PANEL	x1
4 - RIGHT SIDE PANEL	x1

HARDWARE REQUIRED

F		04
I		02

TOOLS REQUIRED

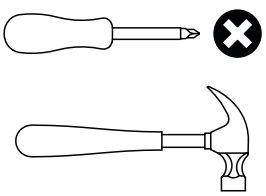

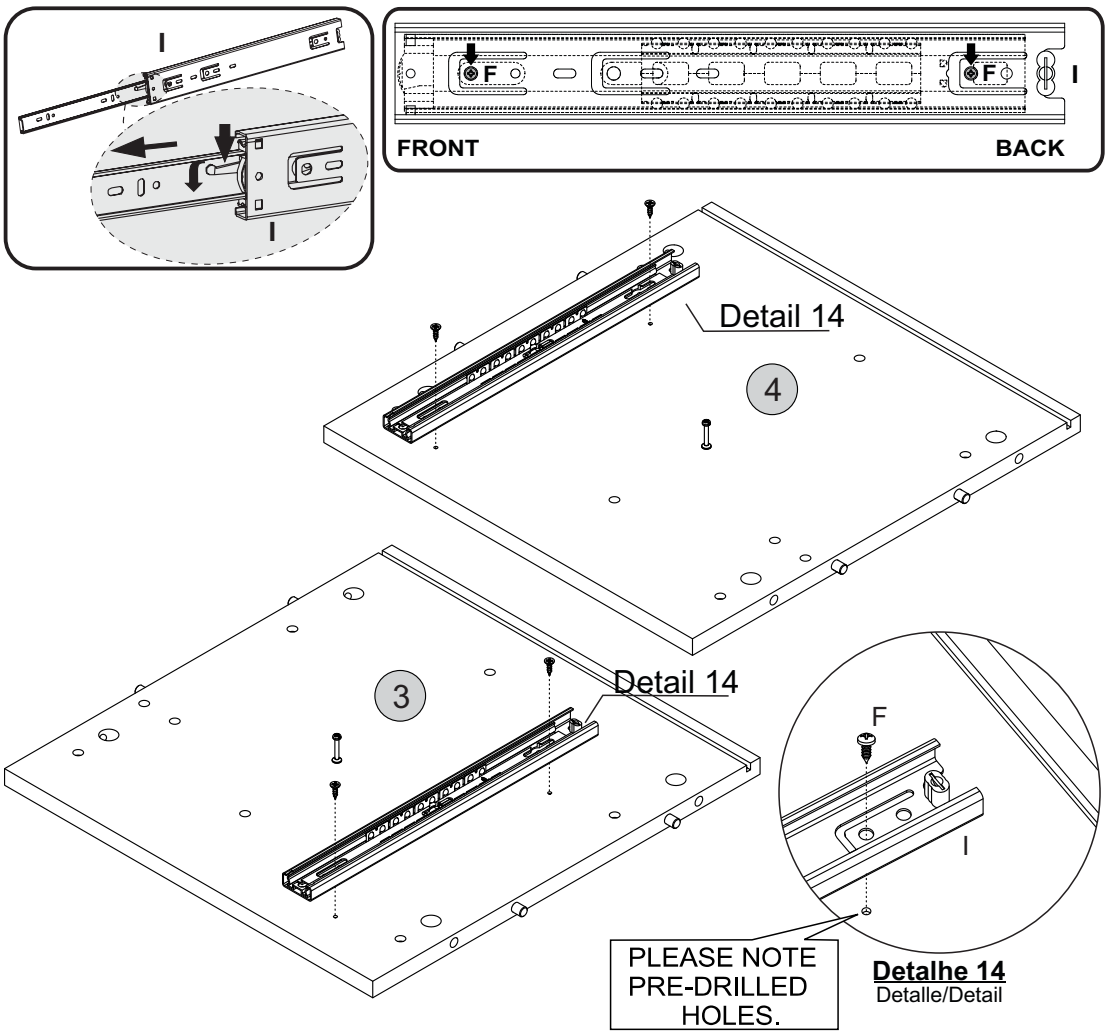

STEP 5


PARTS REQUIRED


5 - SHELF PANEL	x1
8 - CROSSPIECE PANEL	x1

HARDWARE REQUIRED

A		08

TOOLS REQUIRED



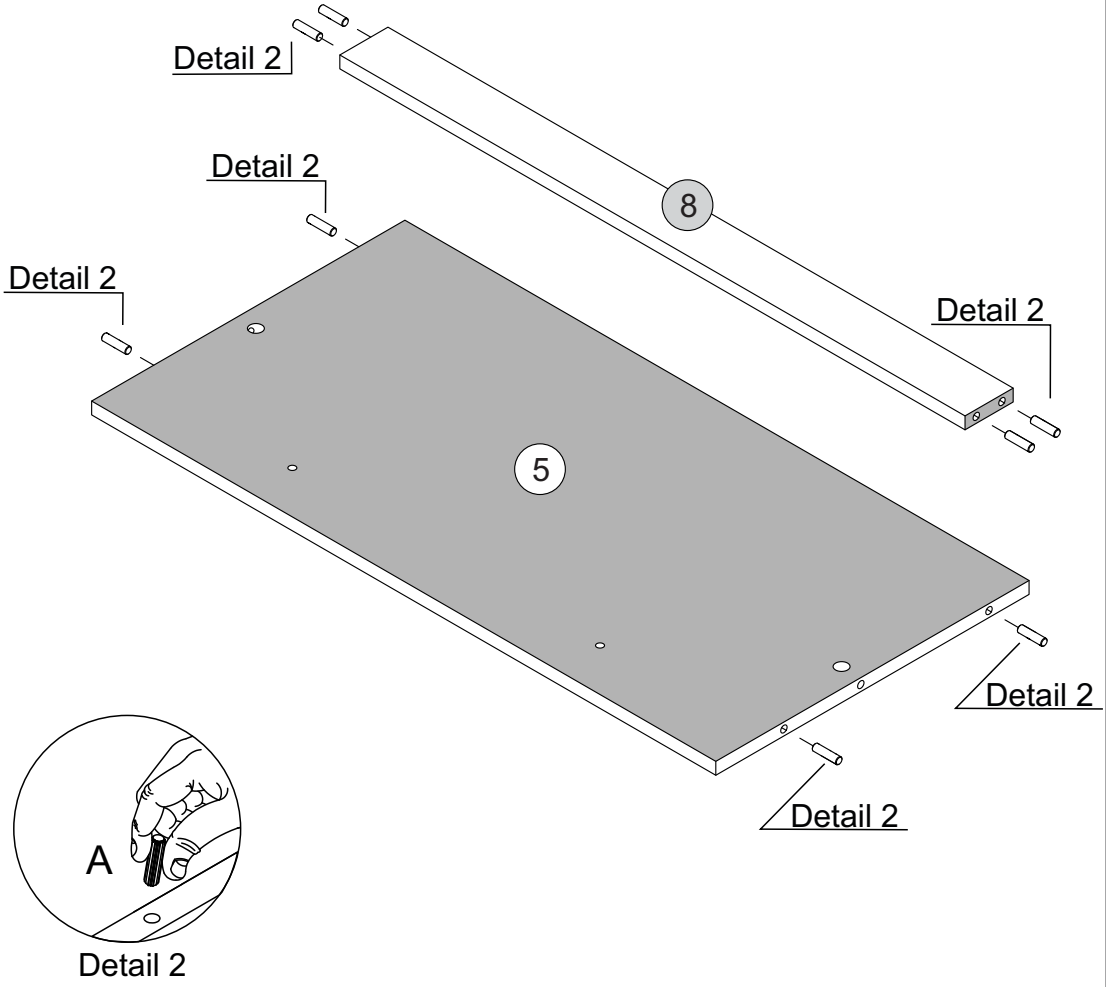


STEP 6


PARTS REQUIRED


4 - RIGHT PANEL	x1
5 - SHELF PANEL	x1

HARDWARE REQUIRED

C		01

TOOLS REQUIRED




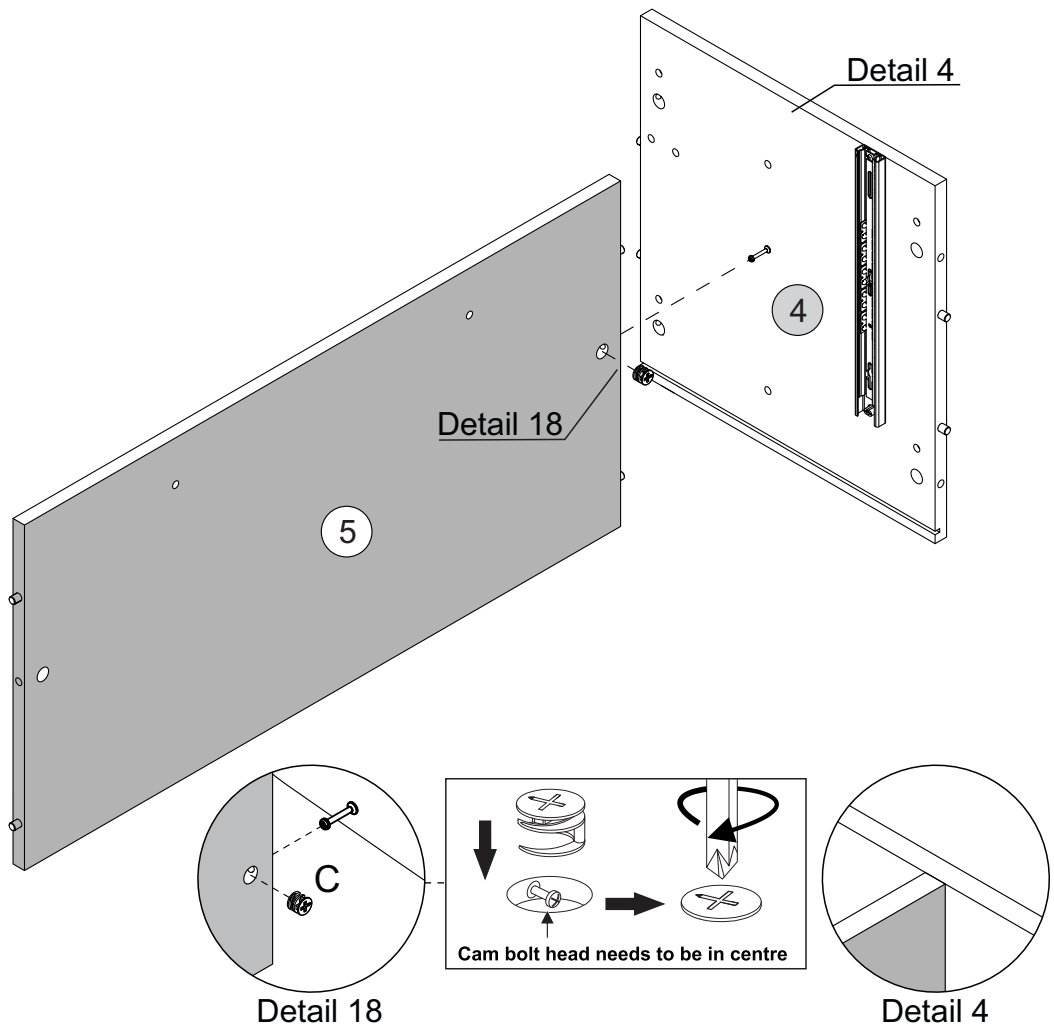

STEP 7

PARTS REQUIRED


3 - LEFT PANEL	x1
8 - CROSSPIECE PANEL	x1

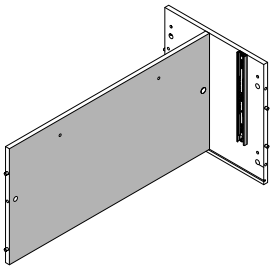



HARDWARE REQUIRED

C	⊕ ▯	01


TOOLS REQUIRED




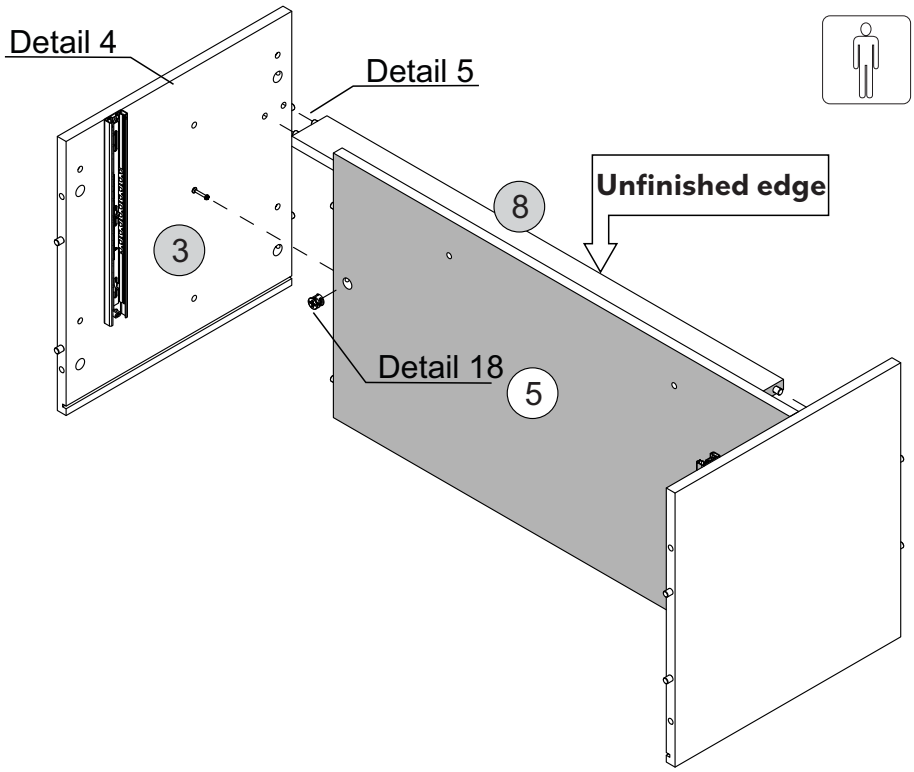

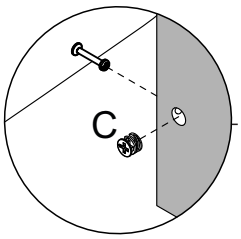


Detail 18

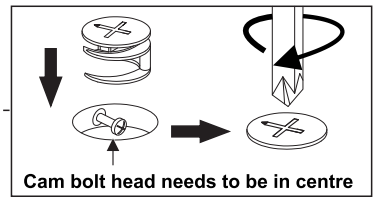

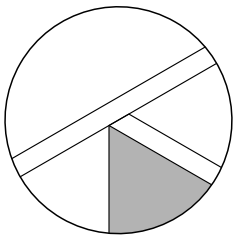

Detail 4

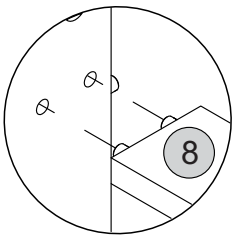


Detail 5

STEP 8

PARTS REQUIRED


2 - TOP PANEL	x1

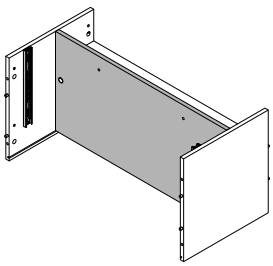



HARDWARE REQUIRED

C	⊕ ▯	04
J	Stiker	04


TOOLS REQUIRED



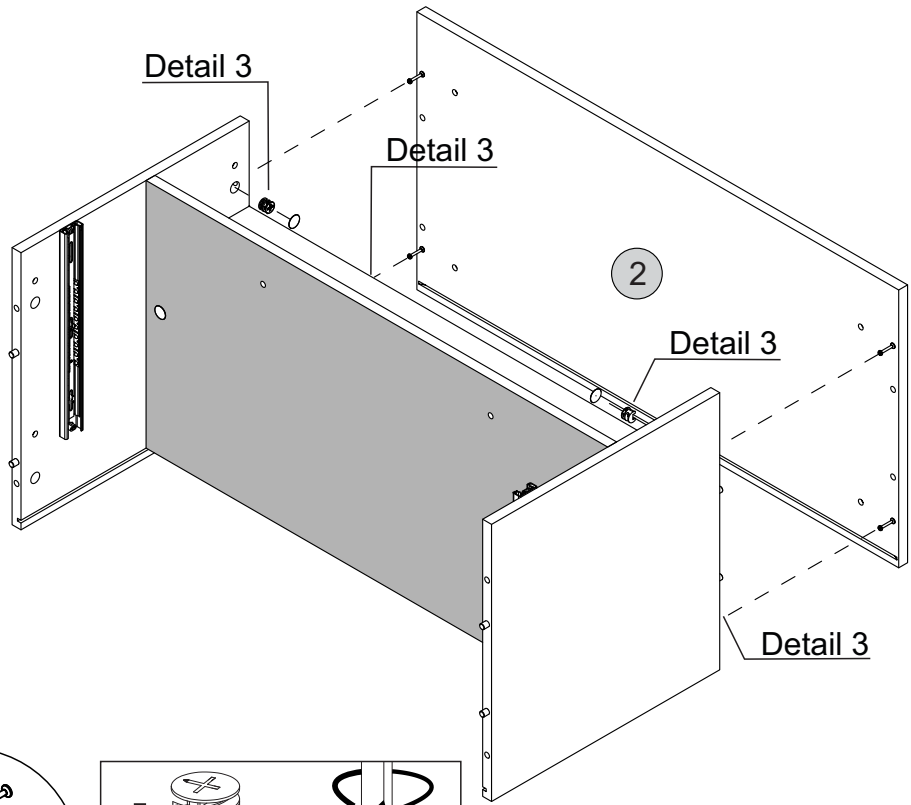

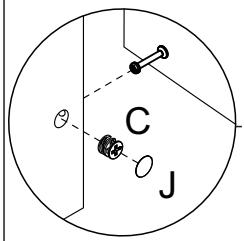


Detail 3

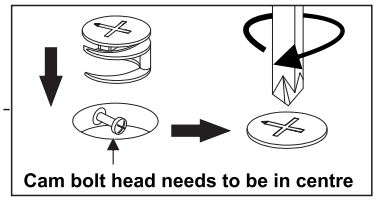

STEP 9


PARTS REQUIRED

7 - BACK PANEL	x1

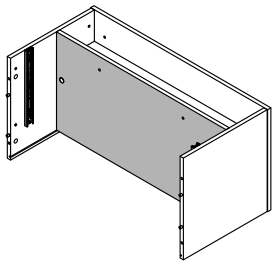

HARDWARE REQUIRED


TOOLS REQUIRED

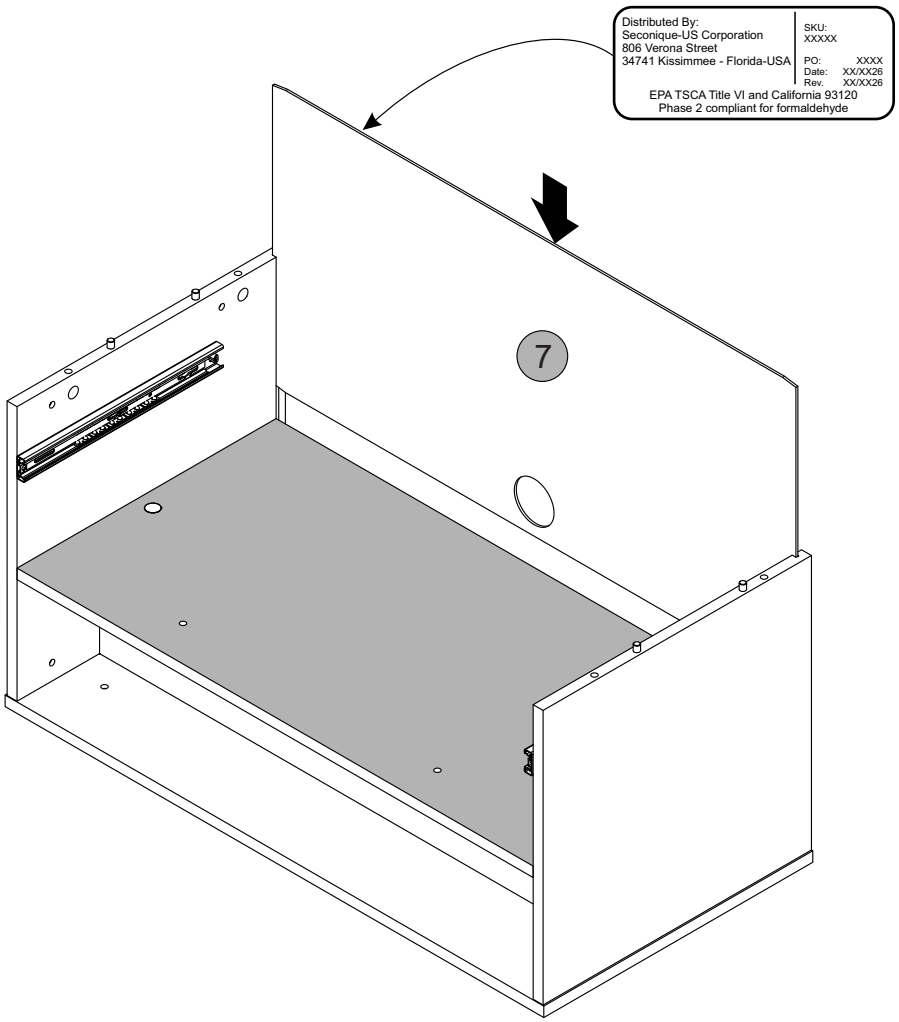

STEP 10

PARTS REQUIRED


1 - BASE PANEL	x1

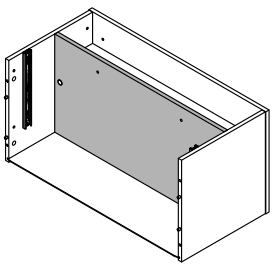



HARDWARE REQUIRED

C	⊕	▯	04
J	⬭	Stiker	04


TOOLS REQUIRED



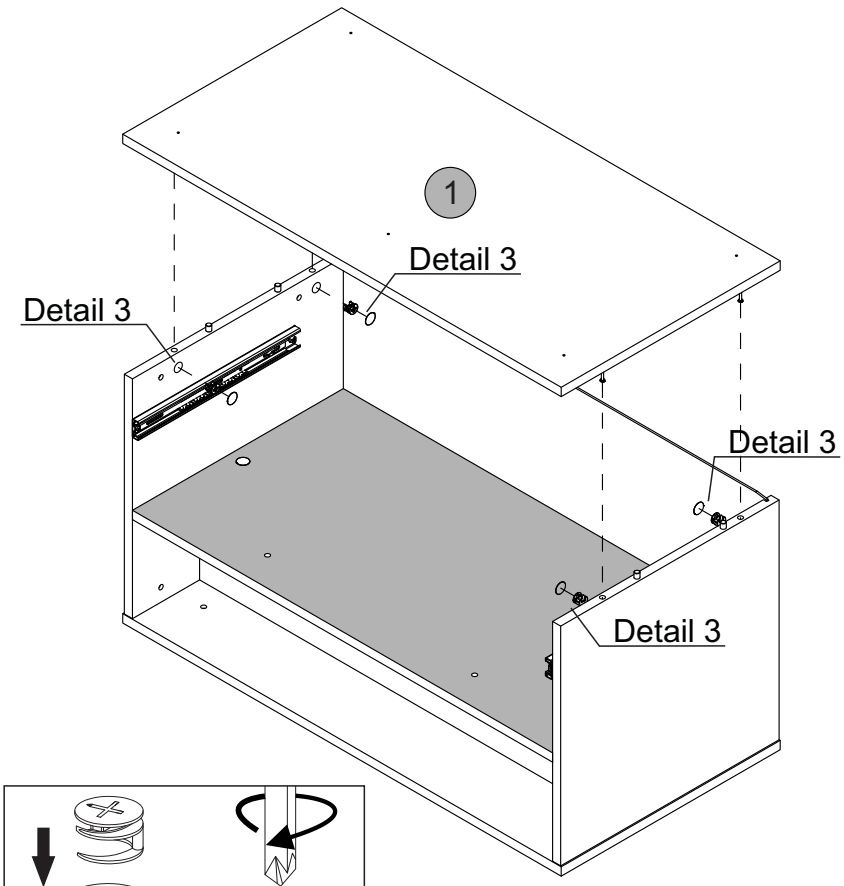

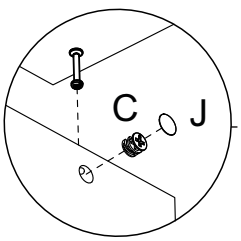


Detail 3

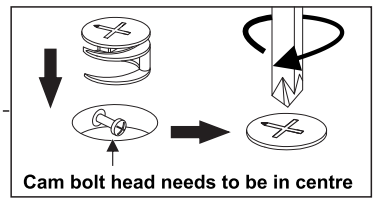


STEP 11


PARTS REQUIRED

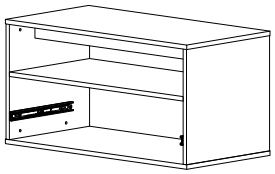



HARDWARE REQUIRED


E		04
K		04

TOOLS REQUIRED




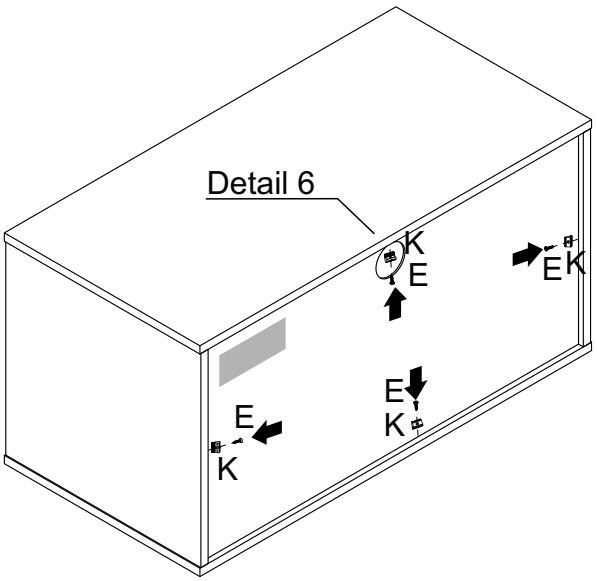

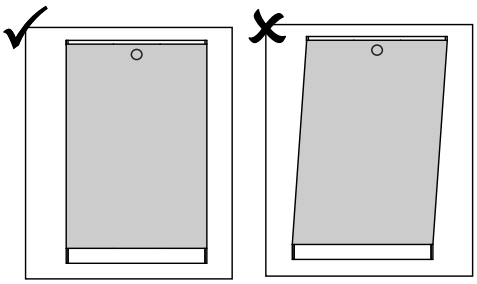

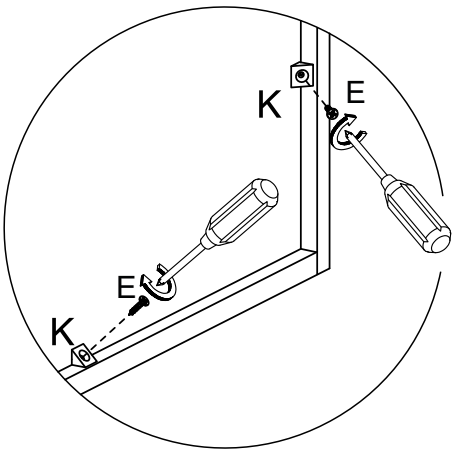

Detail 6

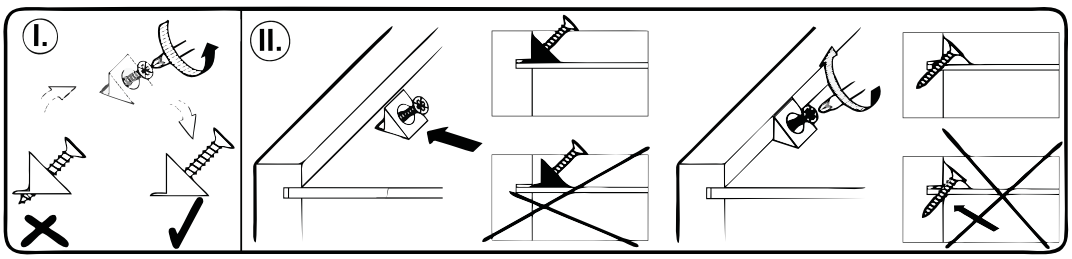


STEP 12


PARTS REQUIRED


9 - DRAWER SIDE	x2
10 - DRAWER BACK PANEL	x1
12 - DRAWER CROSSPIECE	x1
13 - DRAWER FRONT	x1


HARDWARE REQUIRED


A		12
B		04

TOOLS REQUIRED



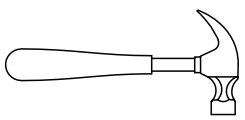

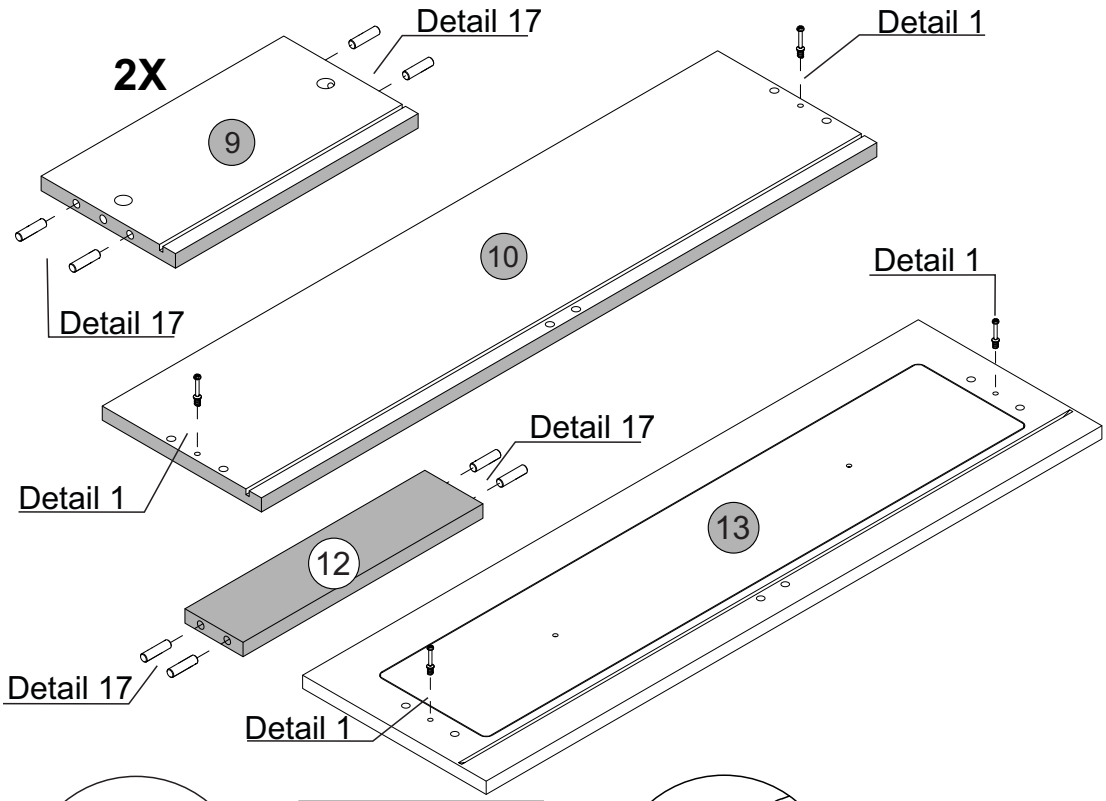

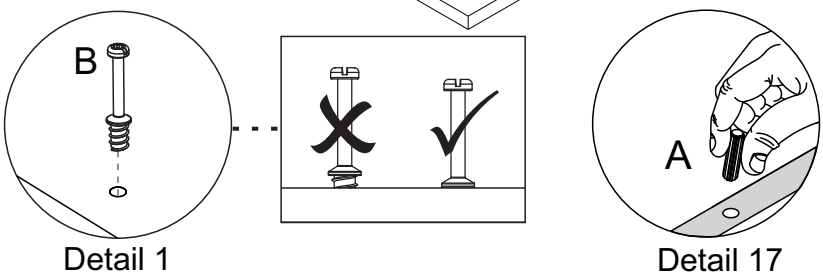

Detail 1

Detail 17

STEP 13


PARTS REQUIRED

9 - DRAWER SIDE	x2
10 - DRAWER BACK PANEL	x1
11 - DRAWER BOTTOM	x1
12 - DRAWER CROSSPIECE	x1


HARDWARE REQUIRED

C		02
J	Stiker	02


TOOLS REQUIRED




STEP A

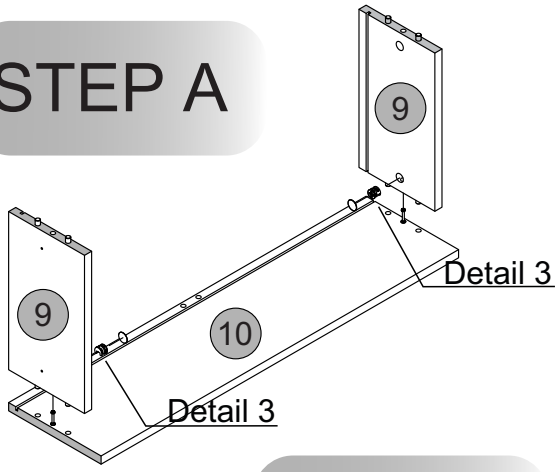

STEP B

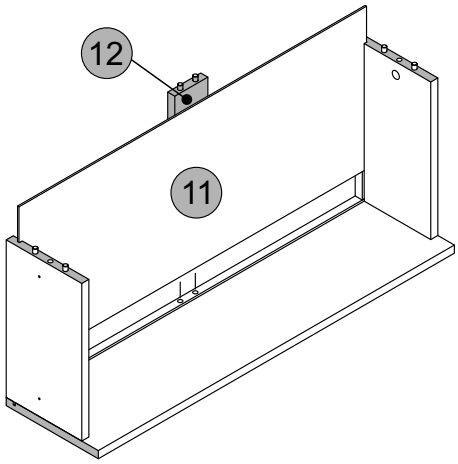

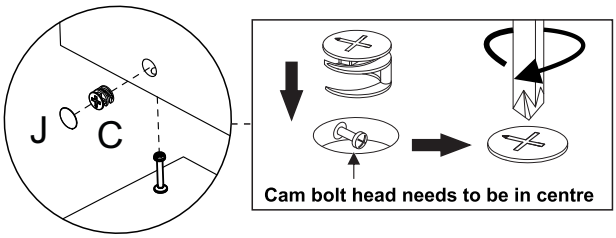


Detail 3

STEP 14

PARTS REQUIRED


13 - DRAWER FRONT	x1

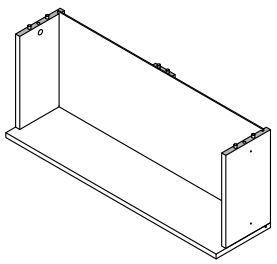



HARDWARE REQUIRED

C		02
J		02

TOOLS REQUIRED



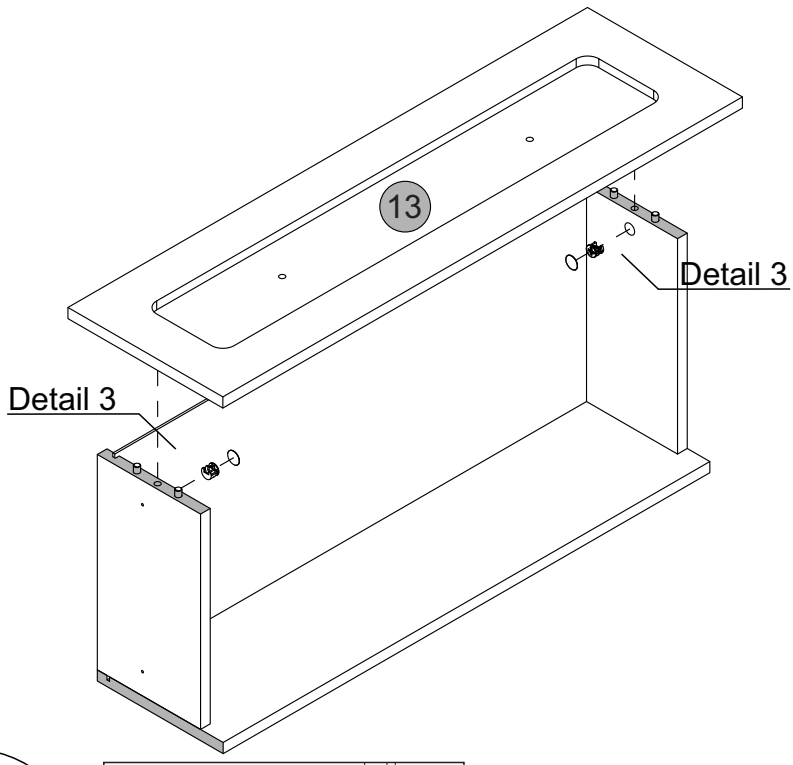


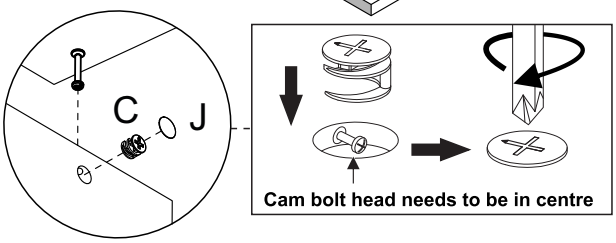

Detail 3

STEP 15


PARTS REQUIRED

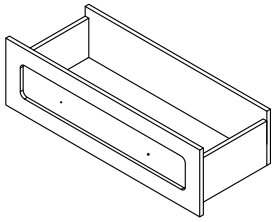


HARDWARE REQUIRED


D		01
F		02

TOOLS REQUIRED




If the handle is disassembled, assemble the parts as shown below

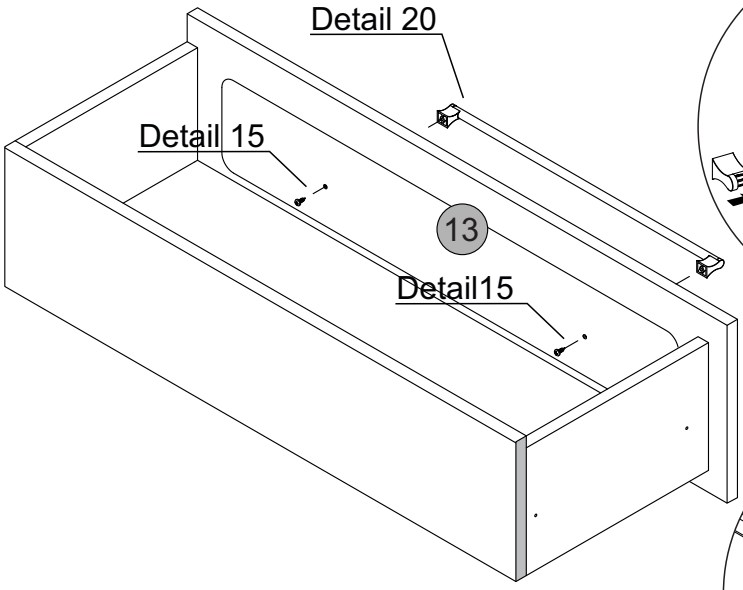

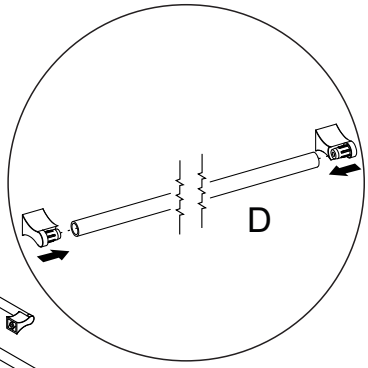


Detail 20

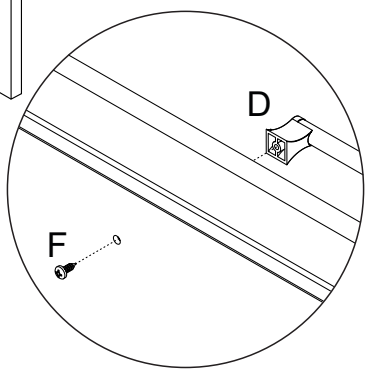


Detail 15

STEP 16


PARTS REQUIRED

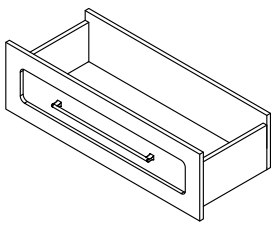


HARDWARE REQUIRED


F		04
I		02

TOOLS REQUIRED




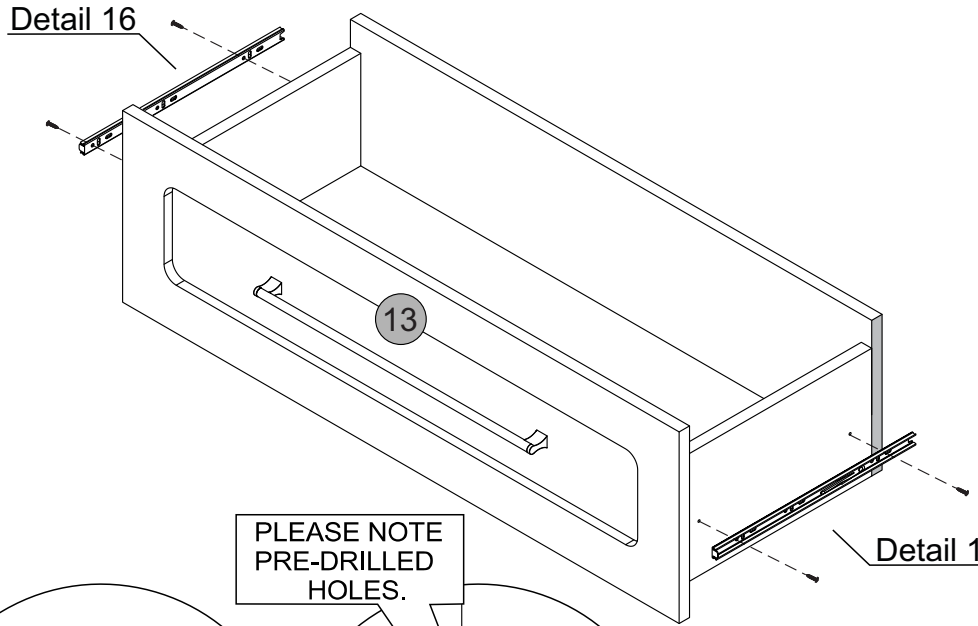

PLEASE NOTE PRE-DRILLED HOLES.

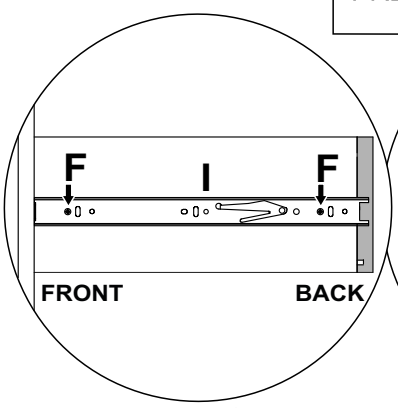

Detail 16

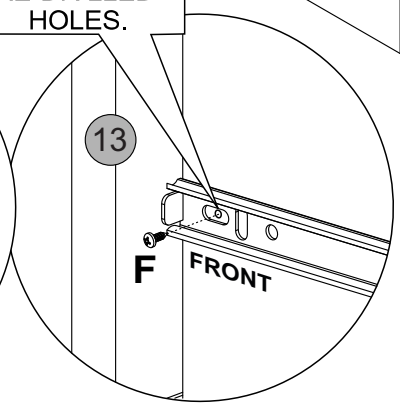


STEP 17


If you are not using your new cabinet on top of other Modular Bali Cabinet, you can attach Feet (6) using Screw (H) and a Phillips screwdriver.

PARTS REQUIRED


6 - FOOT	x5

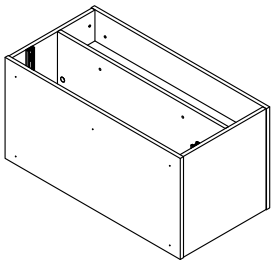


HARDWARE REQUIRED

H		05


TOOLS REQUIRED



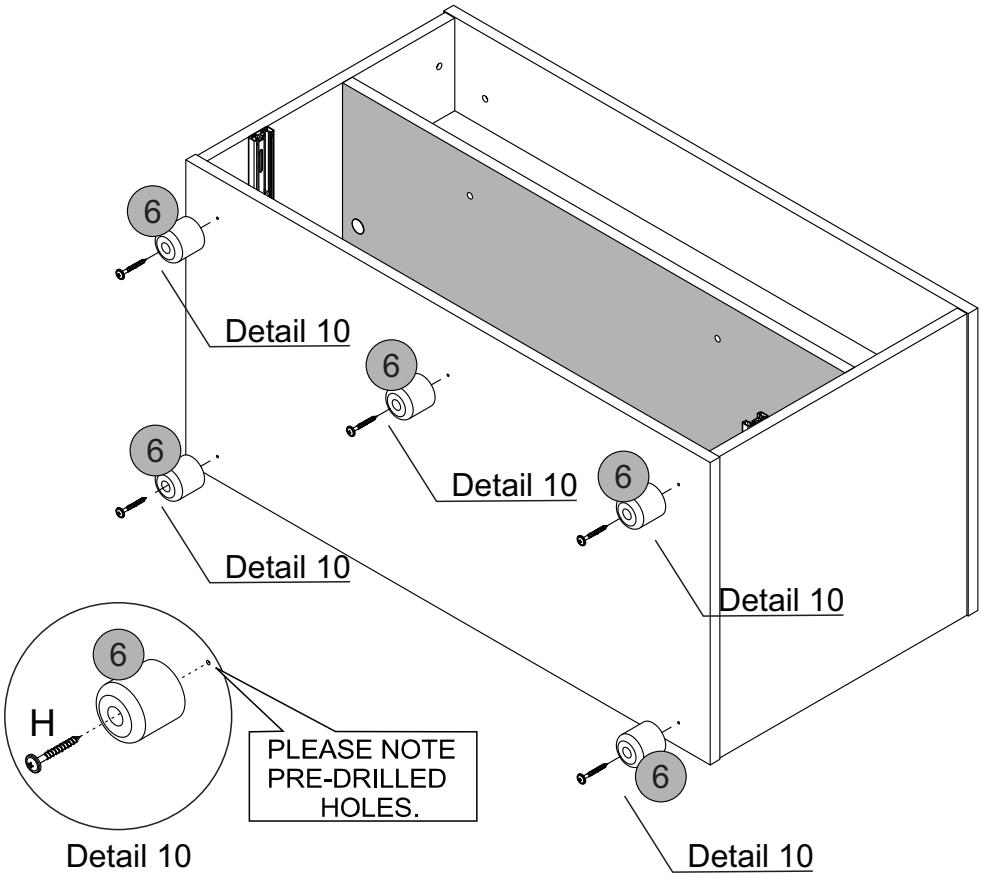


Modular Assembly Options

STEP 18

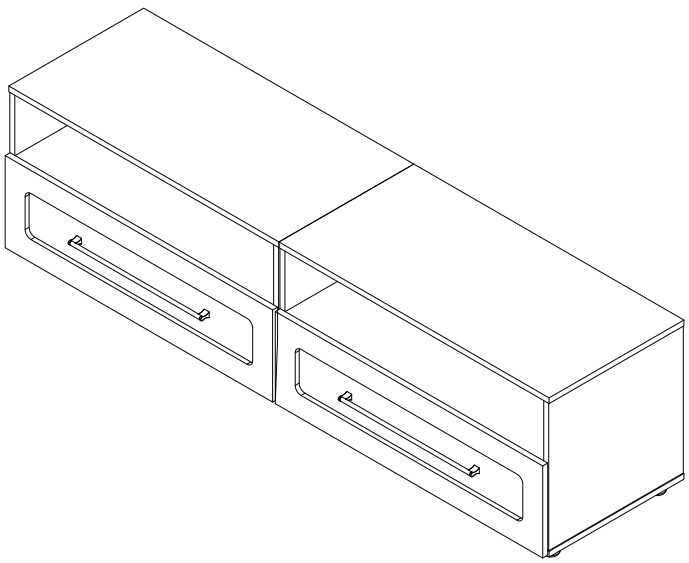


STEP 19

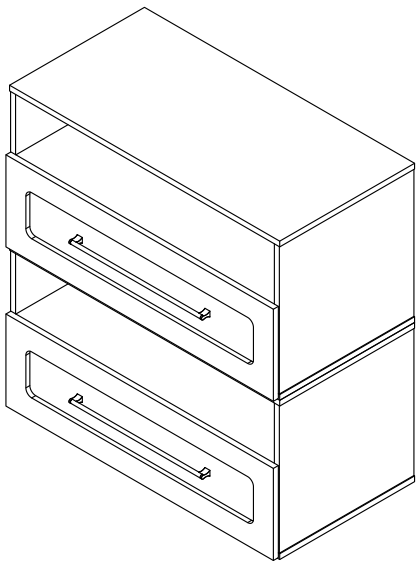

STEP 18


PARTS REQUIRED

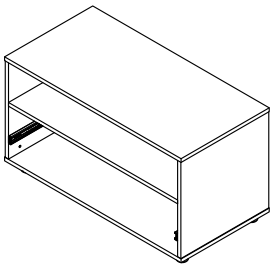

HARDWARE REQUIRED


G		04

TOOLS REQUIRED



If attaching cabinets side by side, use Screws (G) and a Phillips screwdriver to join them through the side panels. The holes are predrilled.


Modular Assembly Option

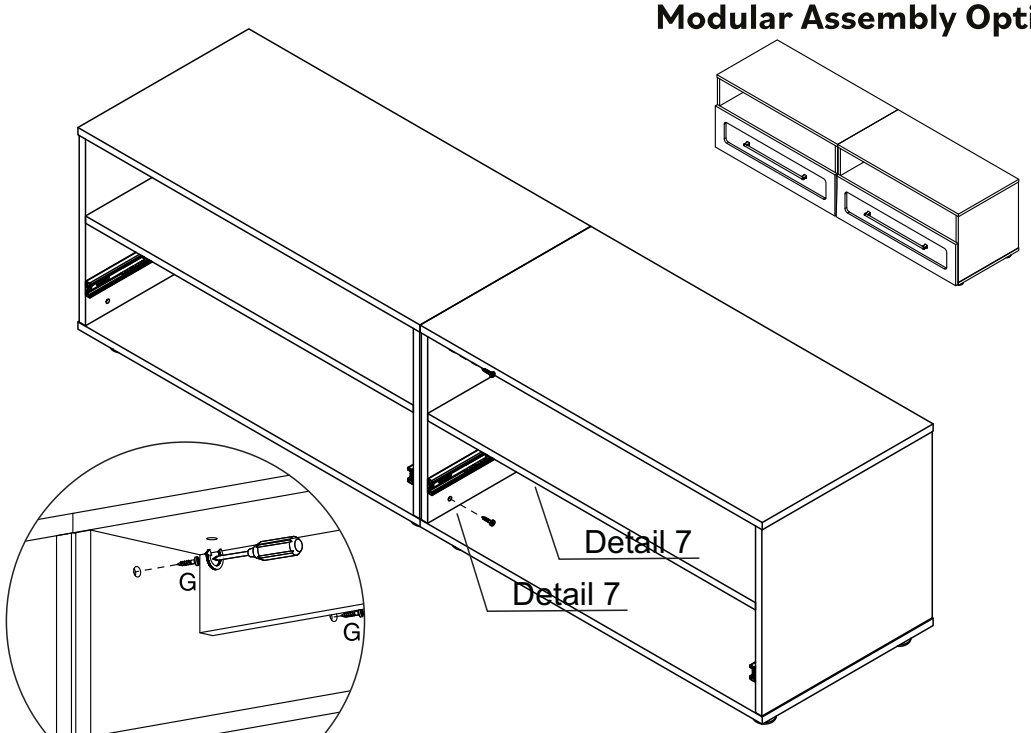

Detail 7

STEP 19


PARTS REQUIRED

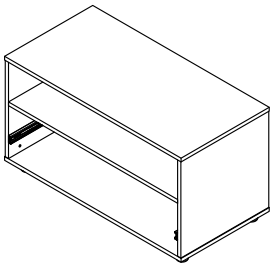

HARDWARE REQUIRED


G		04


TOOLS REQUIRED




If assembling your cabinets on top of each other, use Screws (G) and a Phillips screwdriver to join them through the top and bottom panels. The holes are predrilled.

Modular Assembly Option

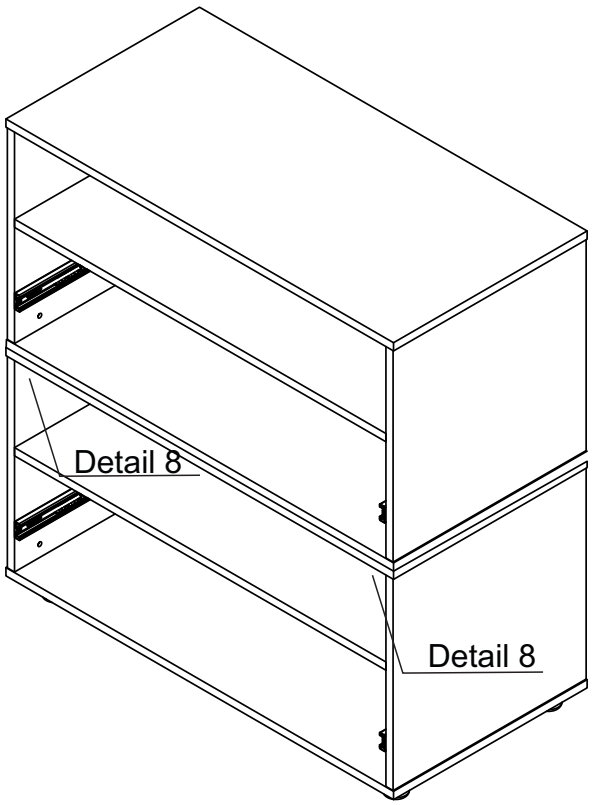

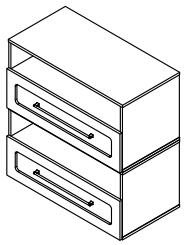


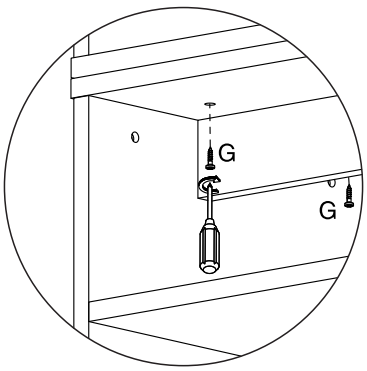

Detail 8

STEP 20


PARTS REQUIRED

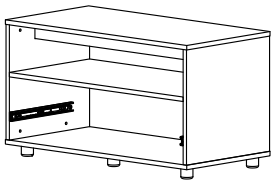


HARDWARE REQUIRED

J		08

TOOLS REQUIRED

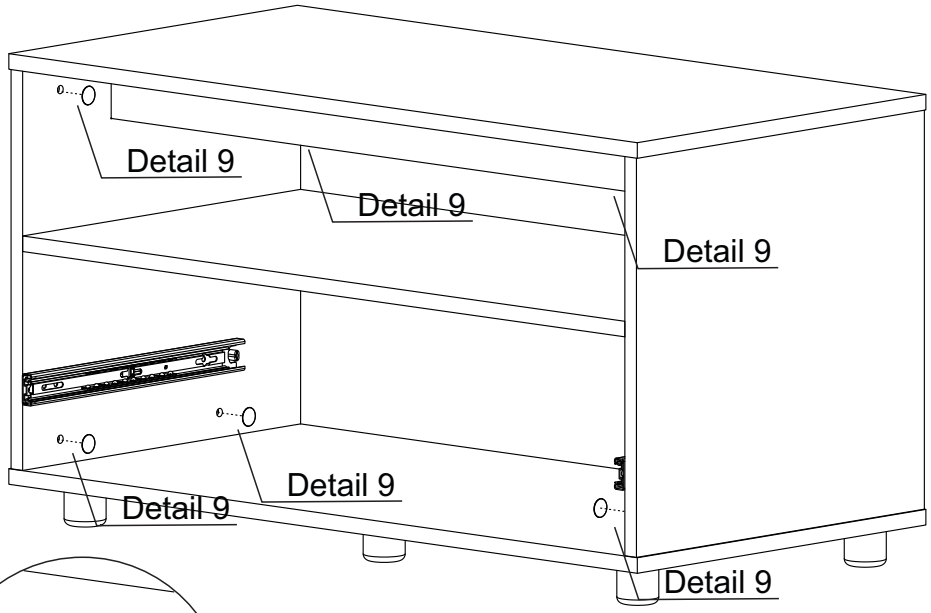


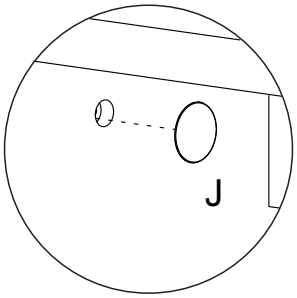


Detail 9

STEP 21

PARTS REQUIRED

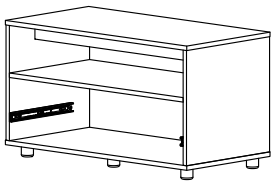



HARDWARE REQUIRED

A		02


TOOLS REQUIRED

Align the slides to fit them together

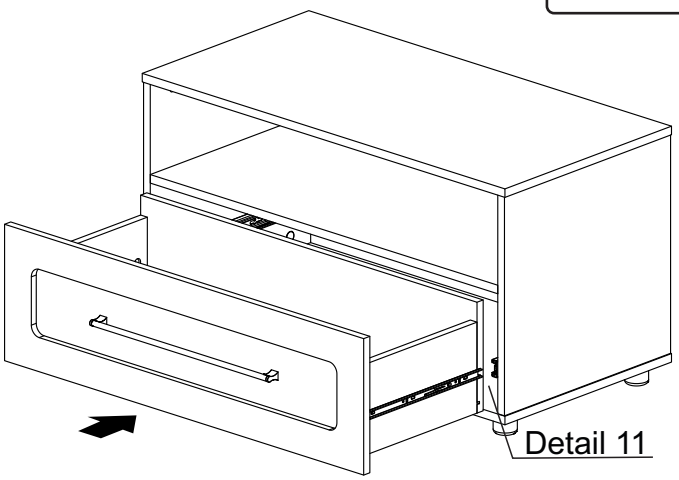


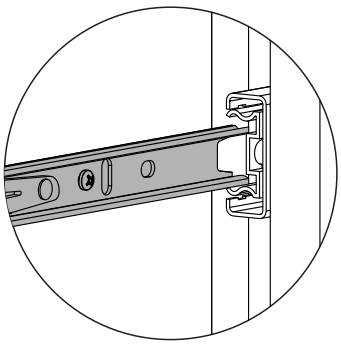

Detail 11

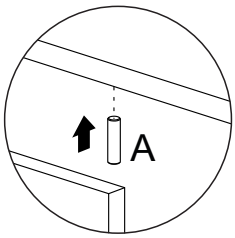


Detail 12

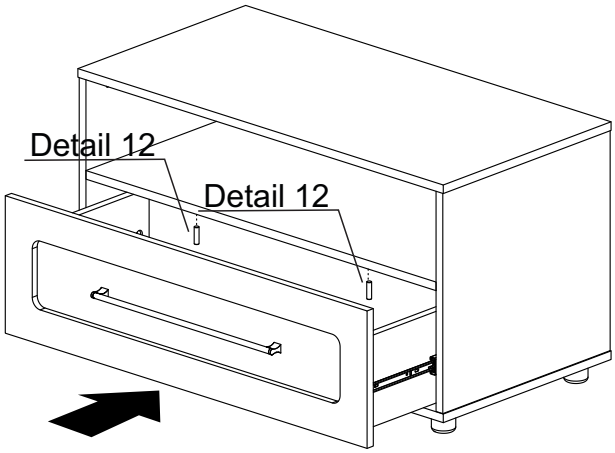

STEP 22


PARTS REQUIRED

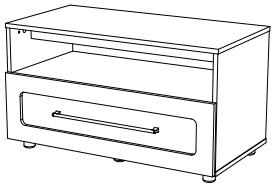


HARDWARE REQUIRED

TOOLS REQUIRED


If you remove the drawer, remember to remove the dowels as shown in the drawing and unlock the slide.

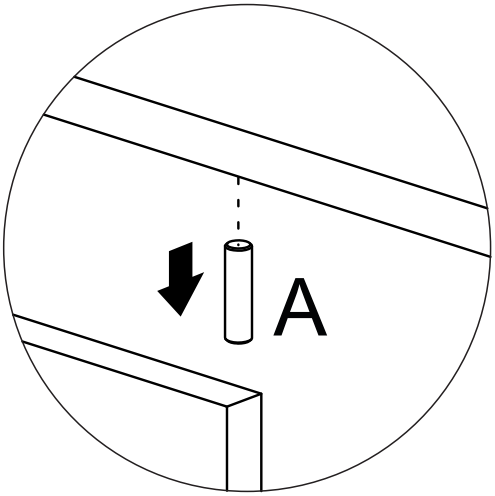


Detail 17

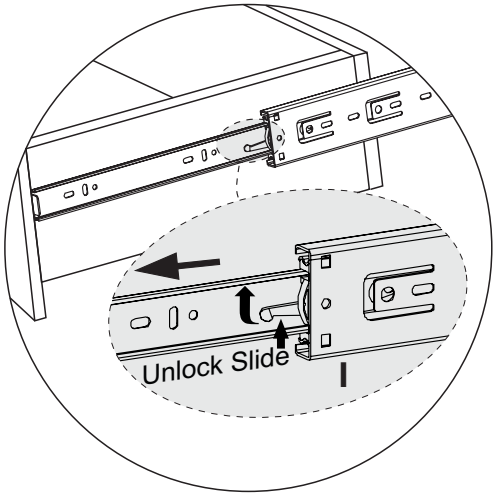

Detail 18

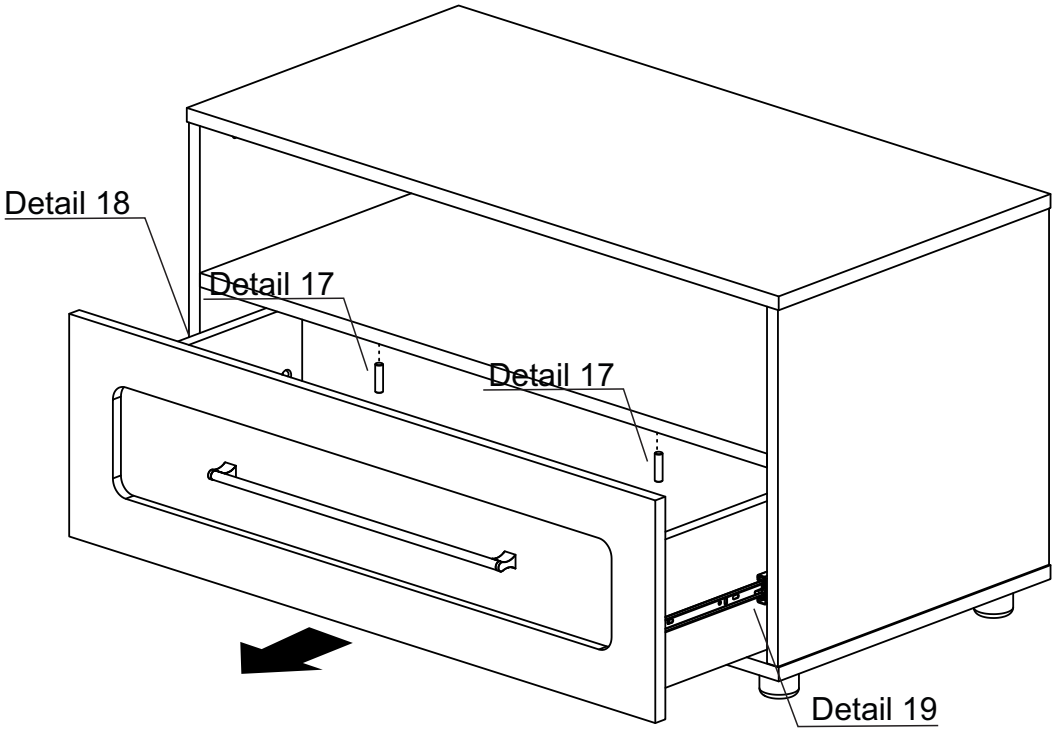


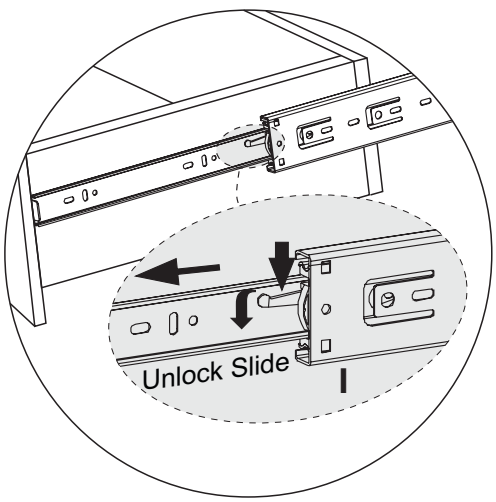

Detail 19


STEP 23


PARTS REQUIRED

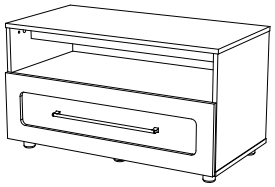

HARDWARE REQUIRED

TOOLS REQUIRED

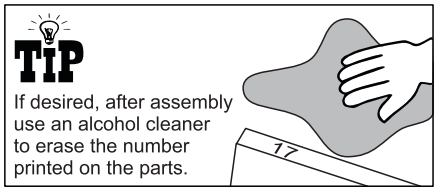


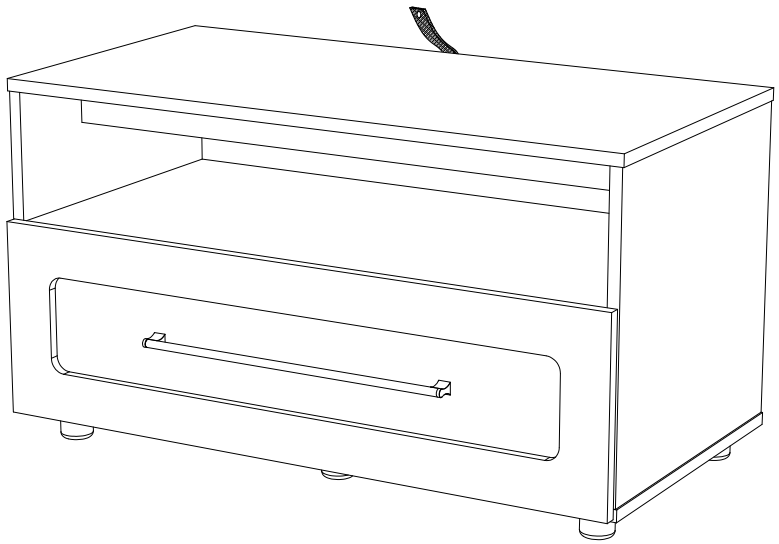



WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.
Please make sure you use fixings suitable for the walls in your home.

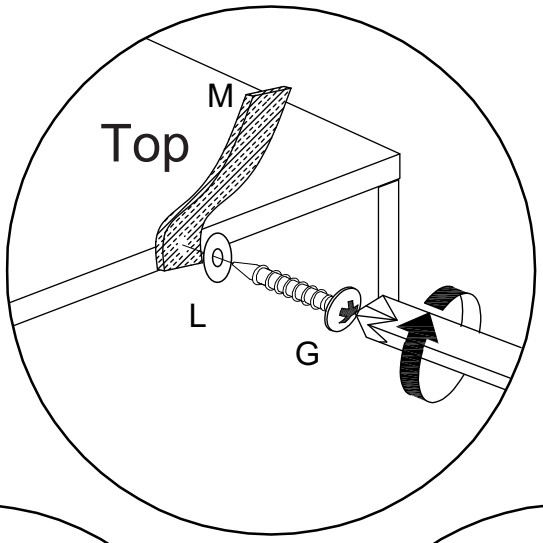

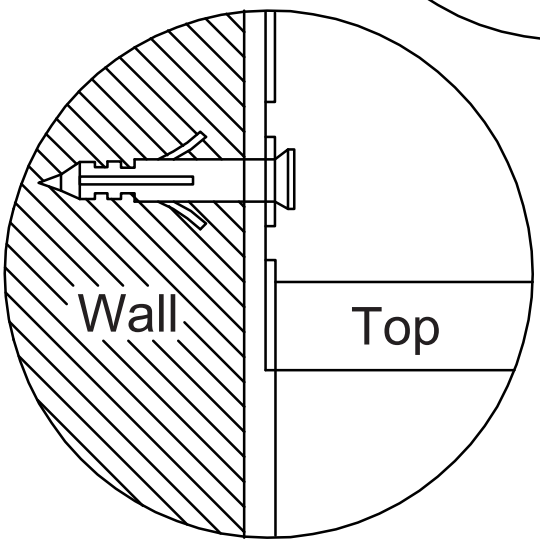

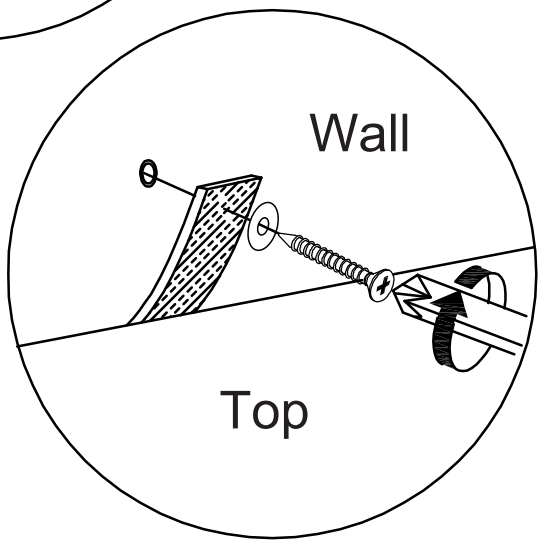

L	M	G
Washer (2x)	Strap (1x)	Pan Head Screw Ø4 x 20mm (1x)

